

ASSEMBLY INSTRUCTIONS

CHECK THAT ALL OF THE FOLLOWING PARTS ARE INCLUDED:

• 1 x Acrylic Header



• 4 x Screw



• 16 x Hook



• 1 x Wire Panel



• 4 x Toggle Drywall Anchor



• 1 x Acrylic Shelf



• 1 x Rivet




ASSEMBLY STEPS

1

Hang the wire panel from the center hole as shown in the below image. Allow gravity to level the display or use a level. Use the toggle anchor when mounting the wire panel to drywall.

TOGGLE DRYWALL ANCHOR


Drill a hole using a 1/4" drill bit.

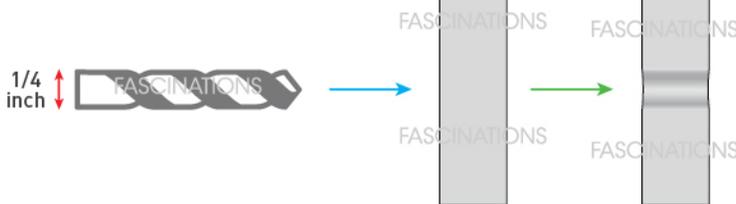



Push the toggle anchor through the hole.



Use a hammer to make the toggle anchor flush with the wall.

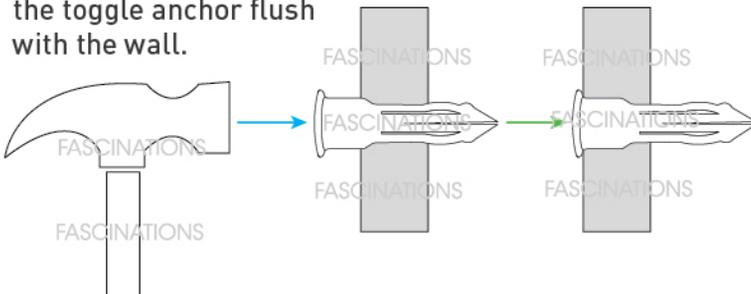


Use the rivet to ensure the toggle anchor expands on the backside of the wall before inserting the screw.

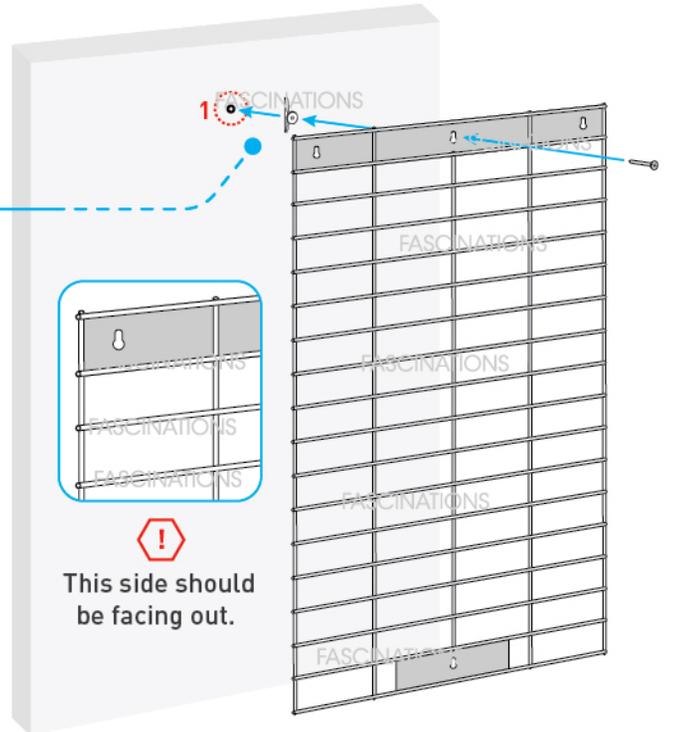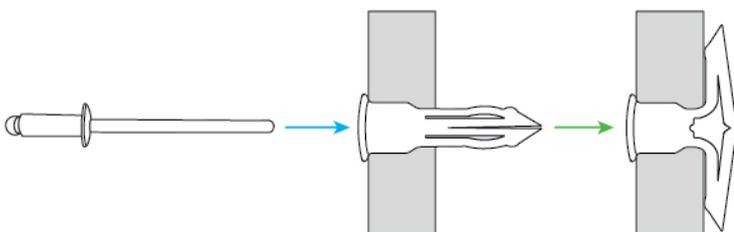


2


Once level, mark and drill the other holes as shown in the below image. Use the toggle anchor when mounting the wire panel to drywall.

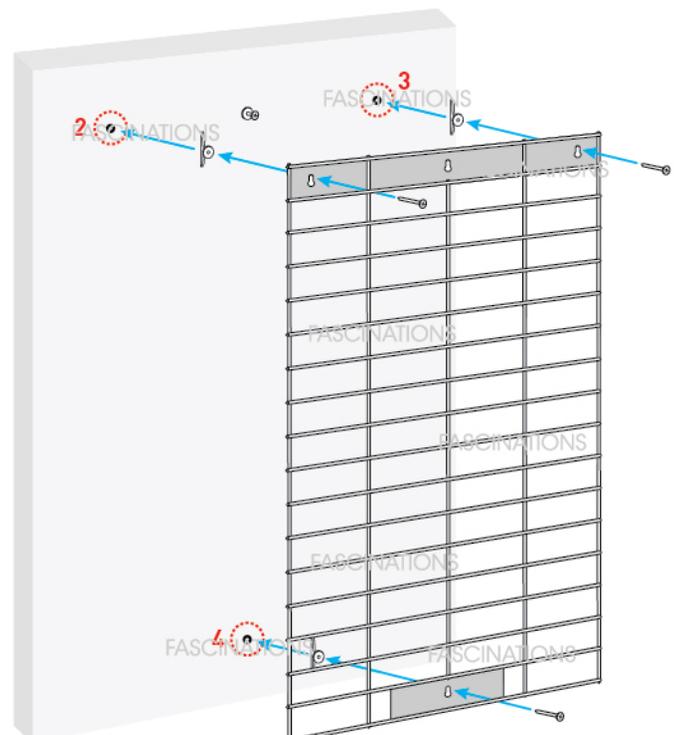

3 Place the hooks on the wire panel as shown in the illustration below.

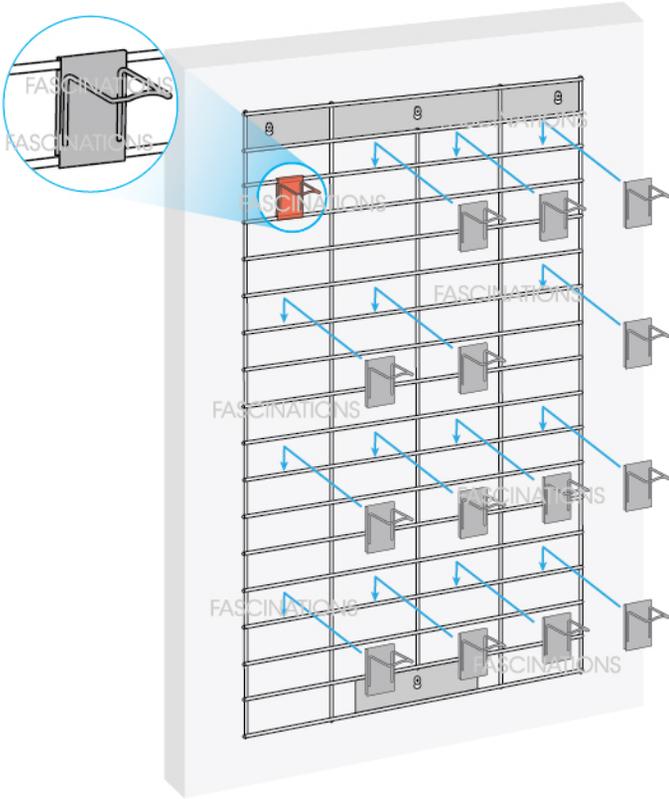


4 Place the acrylic shelf on the wire panel as shown in the illustration below.

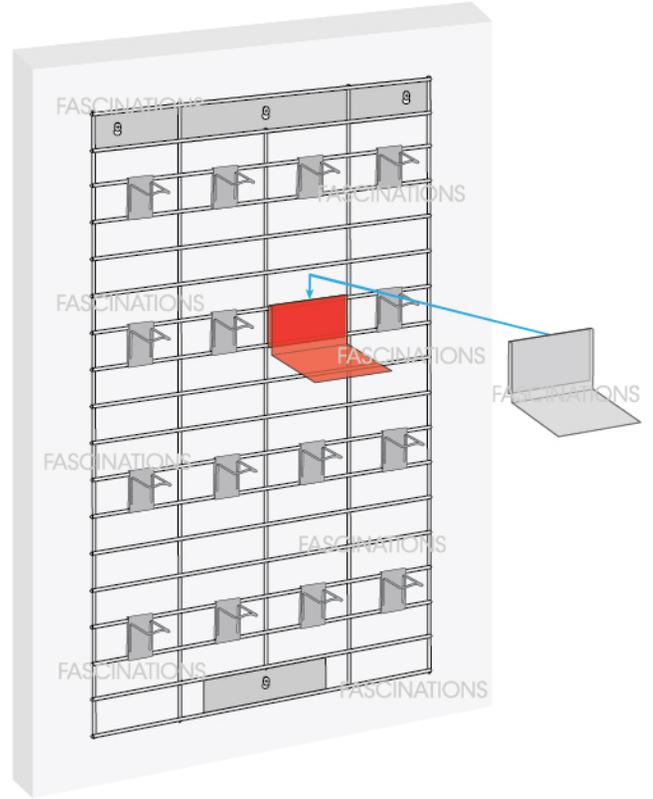

5 Place the acrylic header at the top of the wire panel as shown in the illustration below by sliding the tab on the back of the header between the wire and flat metal.



FINISHED!

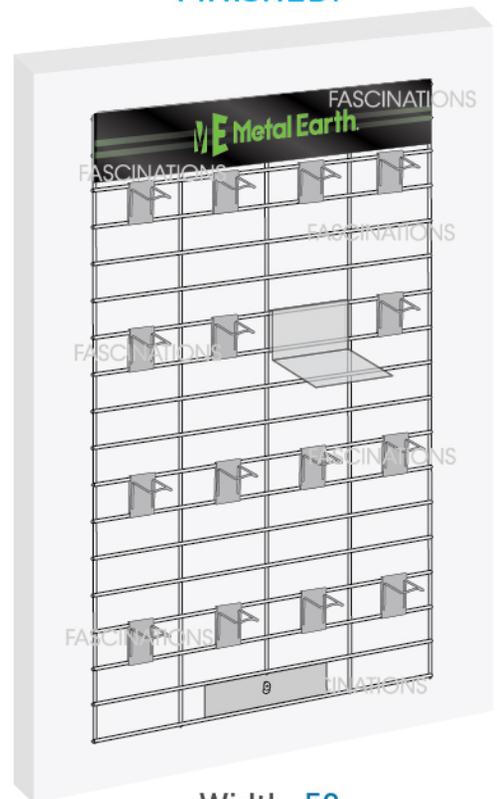

Width: 50 cm
Height: 81 cm

If you have any problems assembling this display or there are missing parts, please give us a call so we can help: **206-870-3000** (8-4 PST). You can also email us at: support@fascinations.com

© Fascinations, Inc. All rights reserved.

