


METAL SHEETS

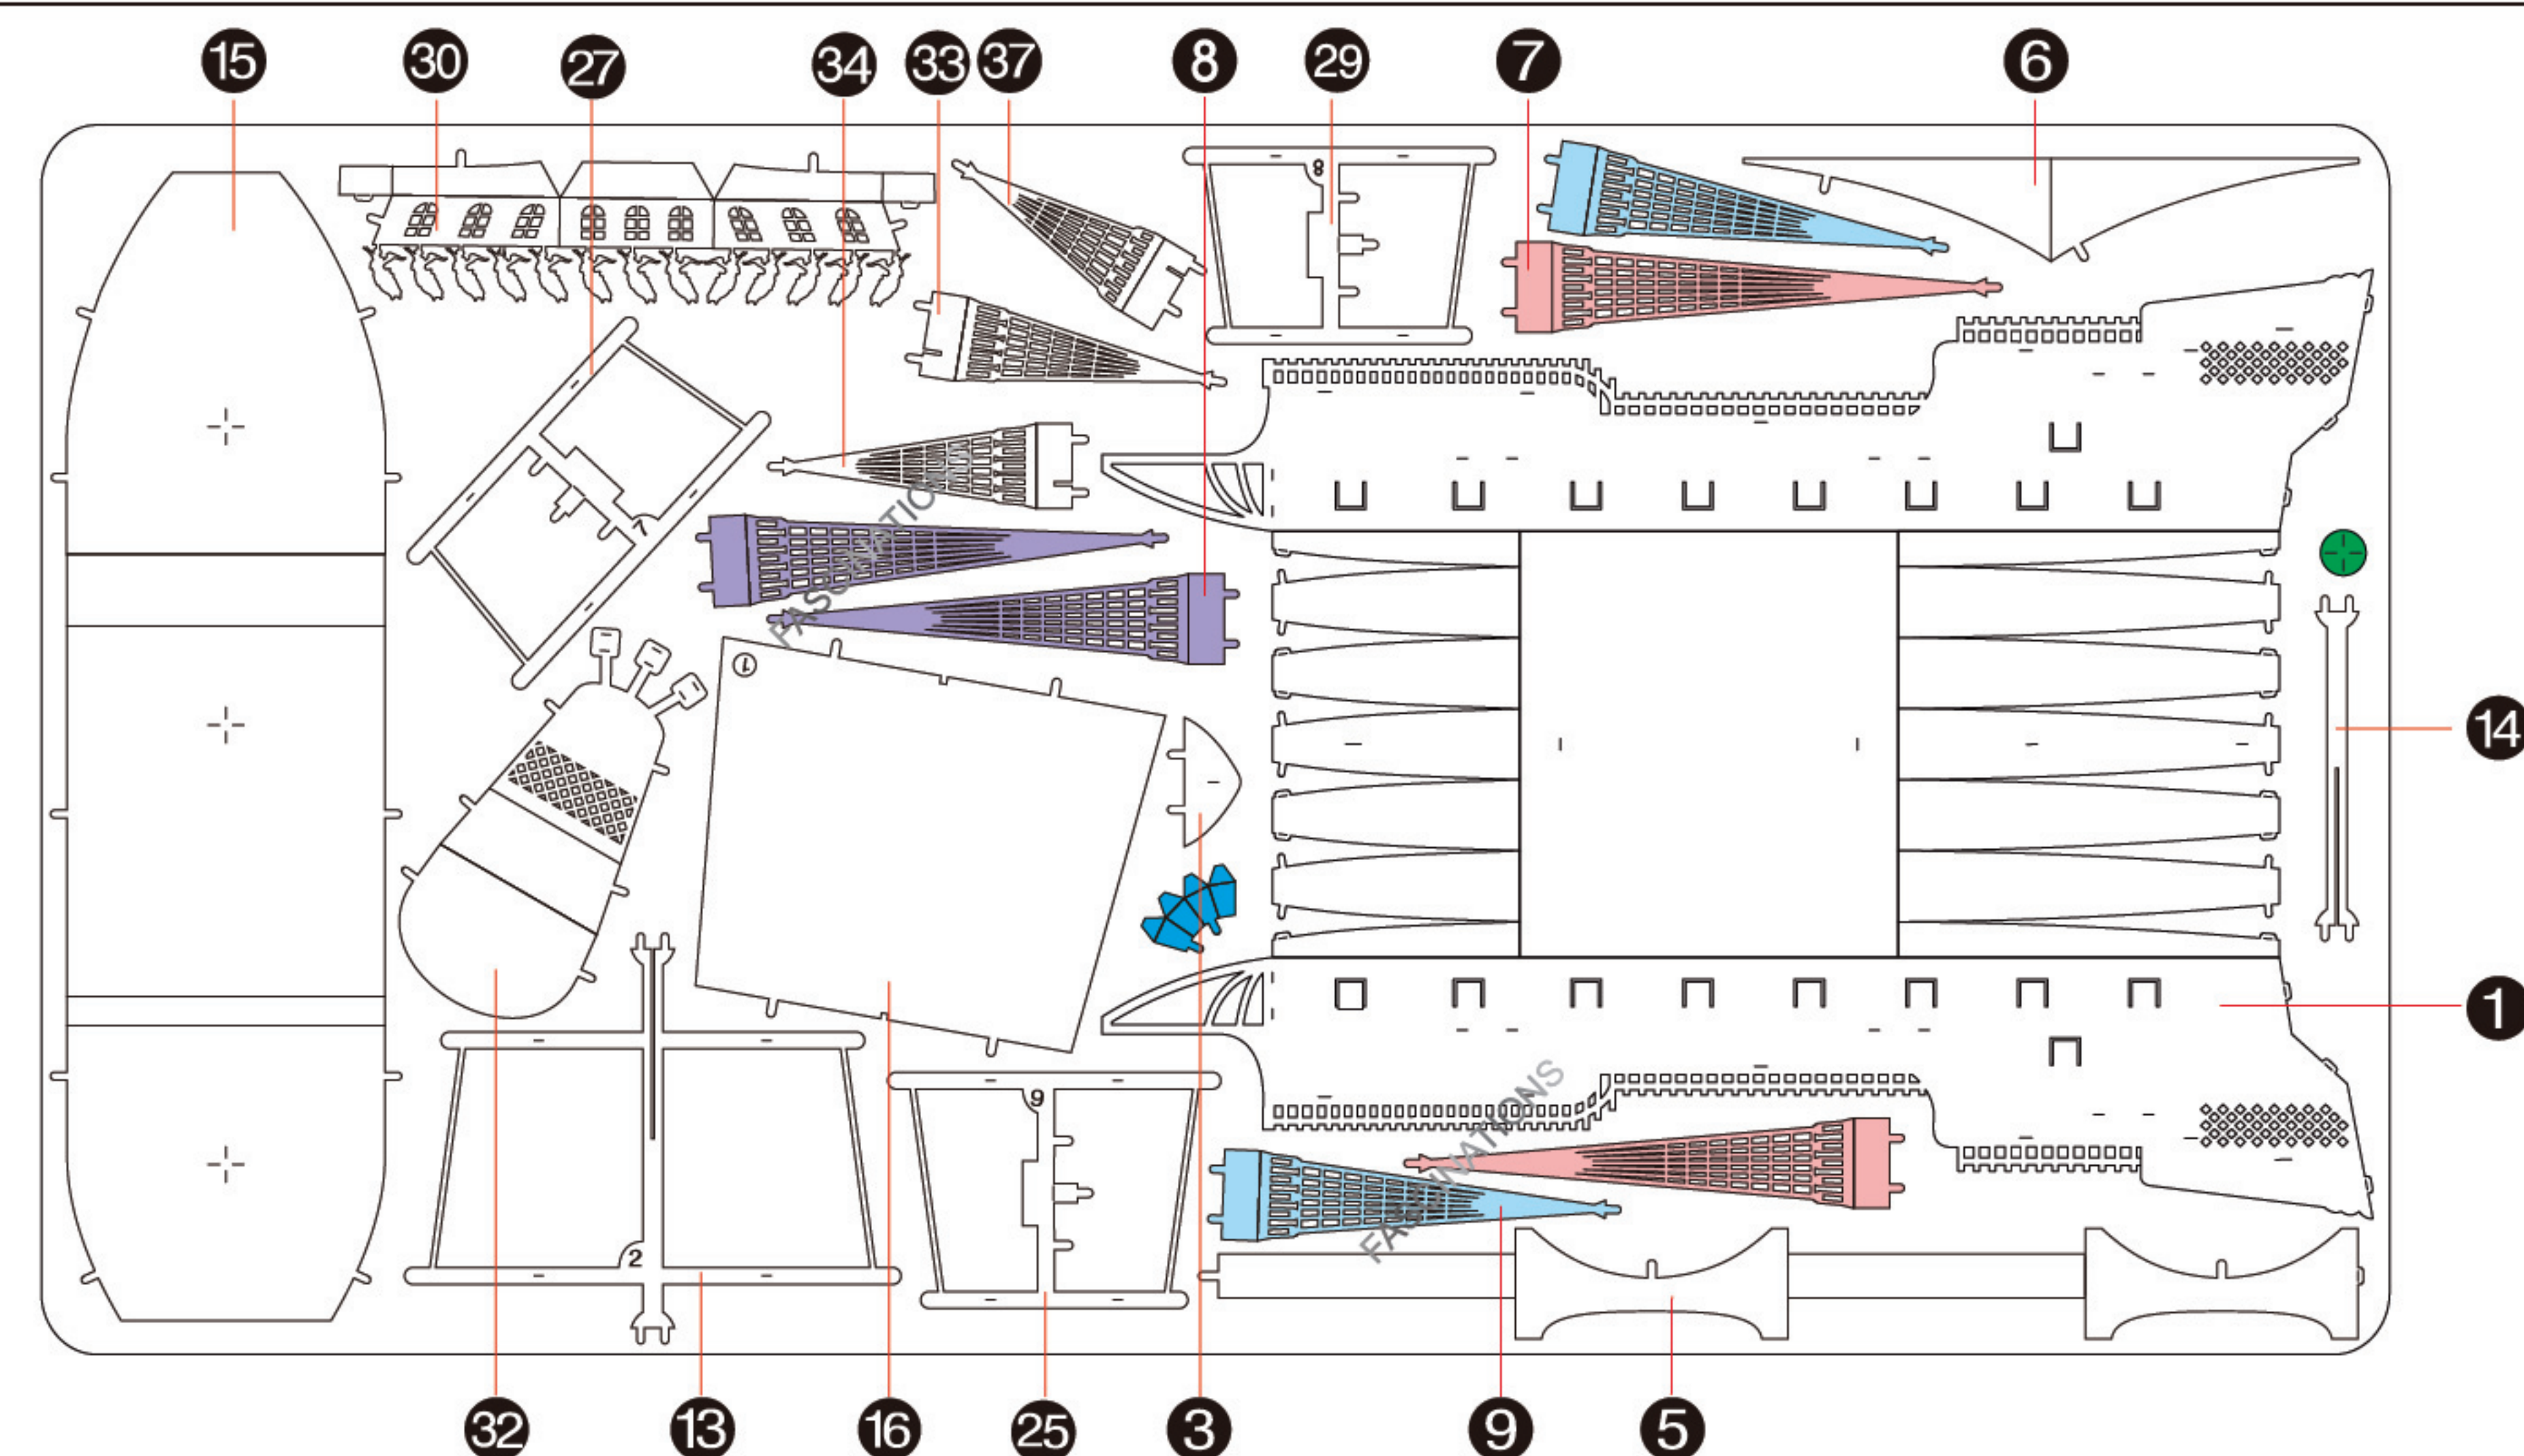


In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed




Go to www.meteearth.com/360/icx016 to see the zoomable PDF version of this instruction sheet

ICX016

Black Pearl

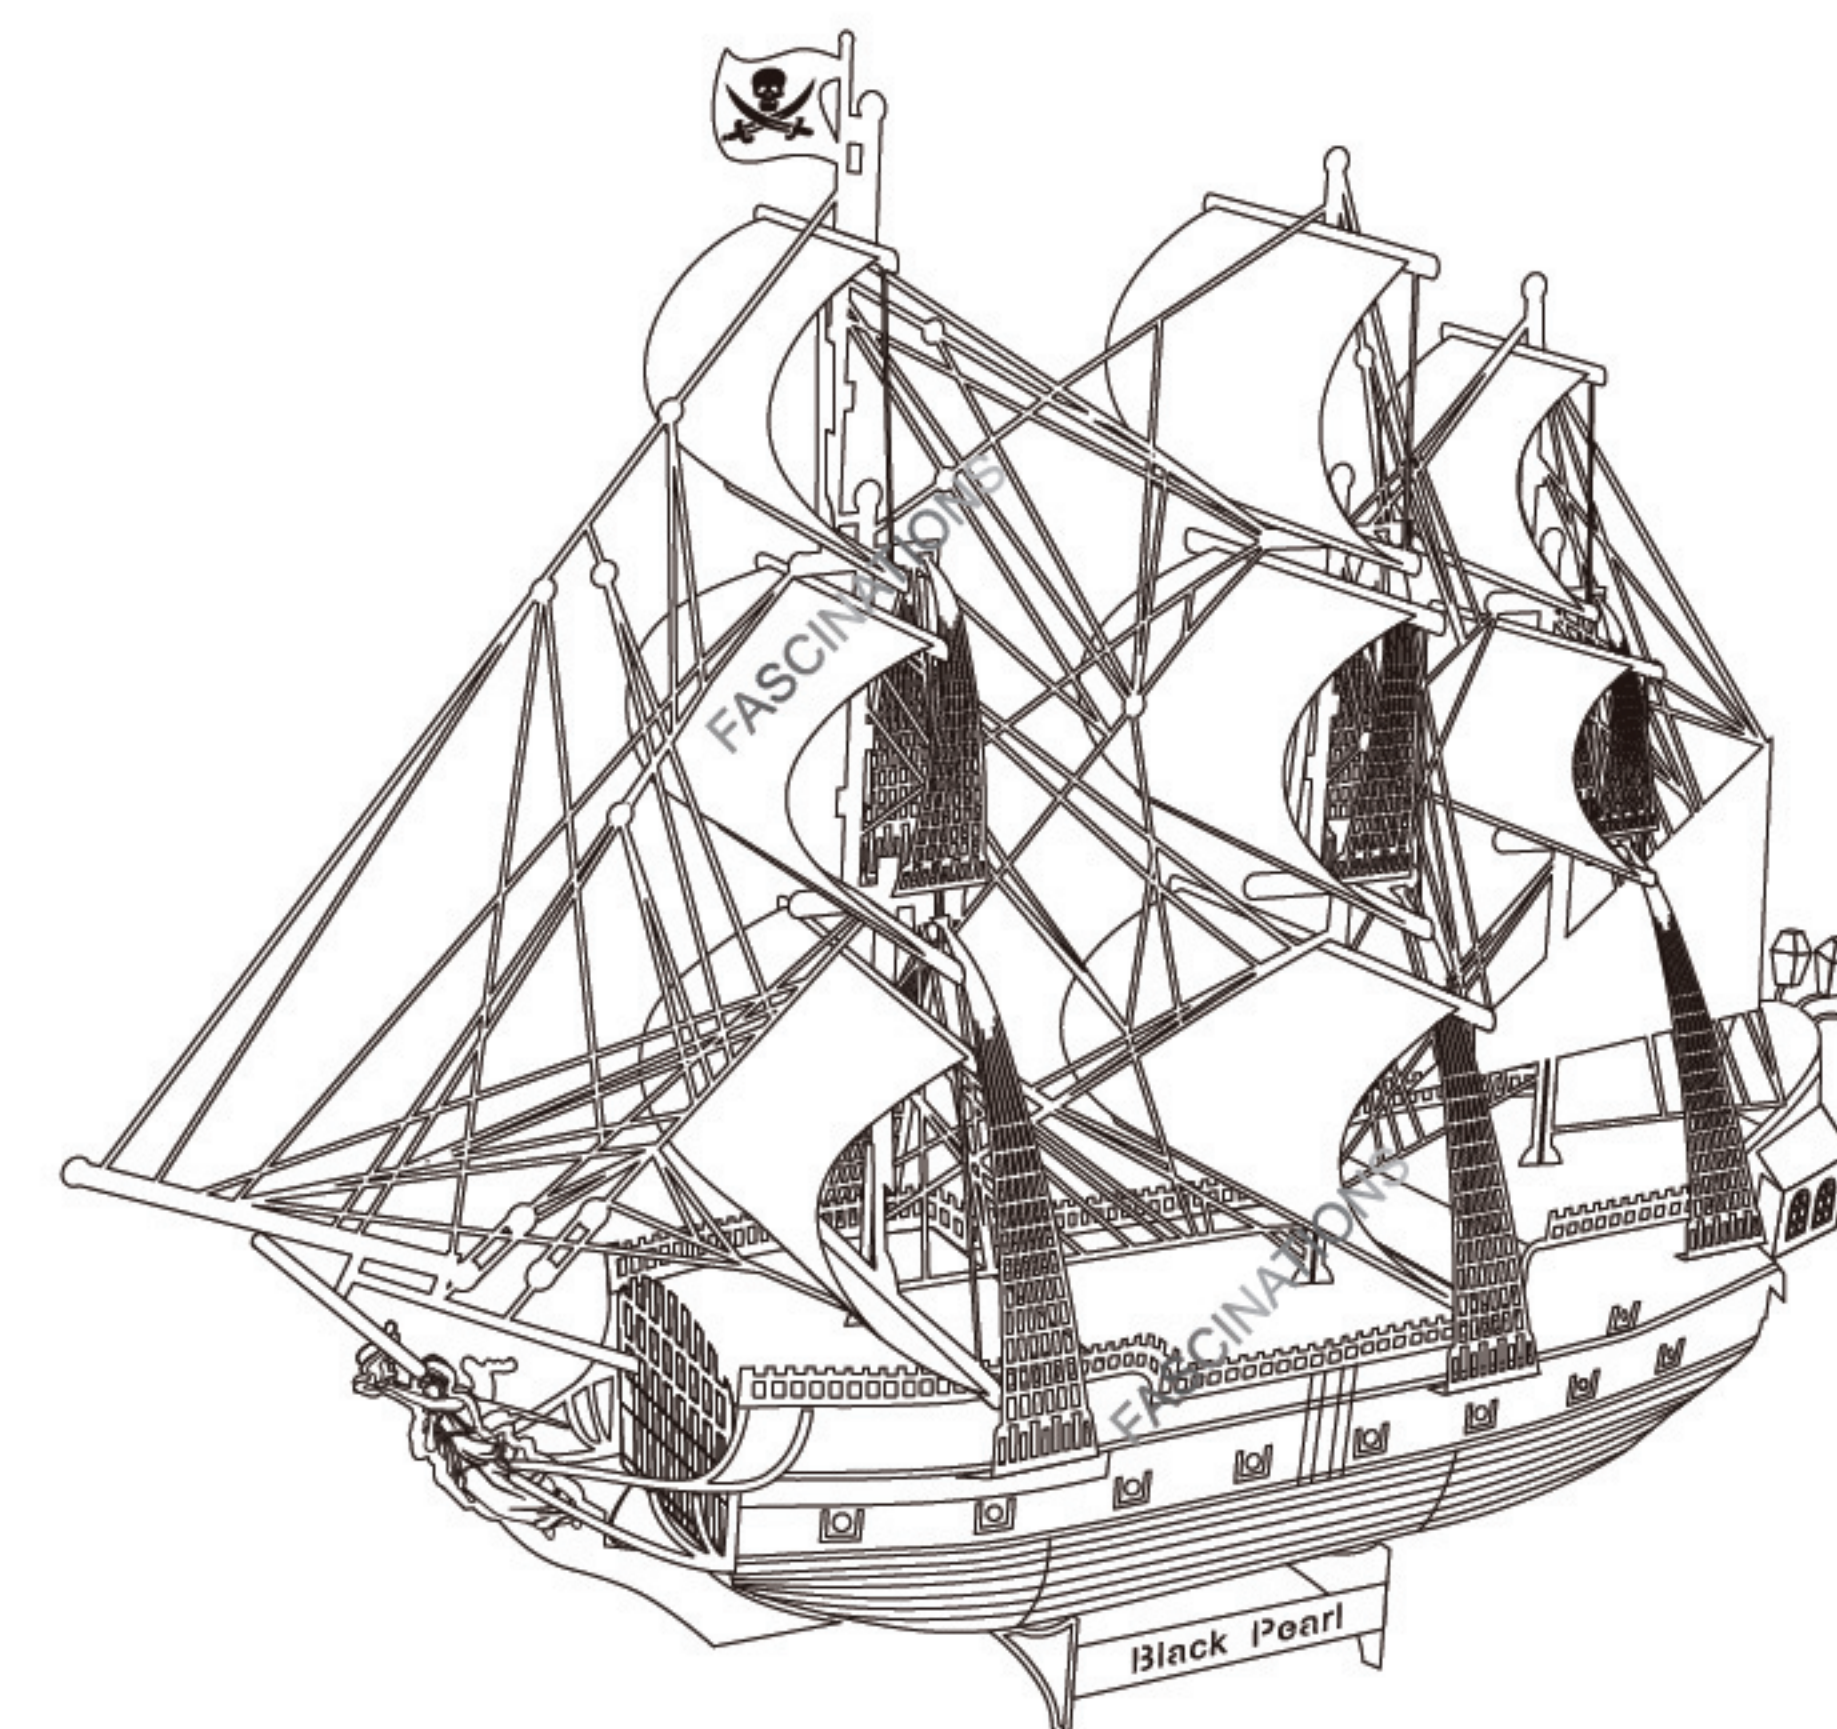

TO CREATE THE BEST CONNECTIONS

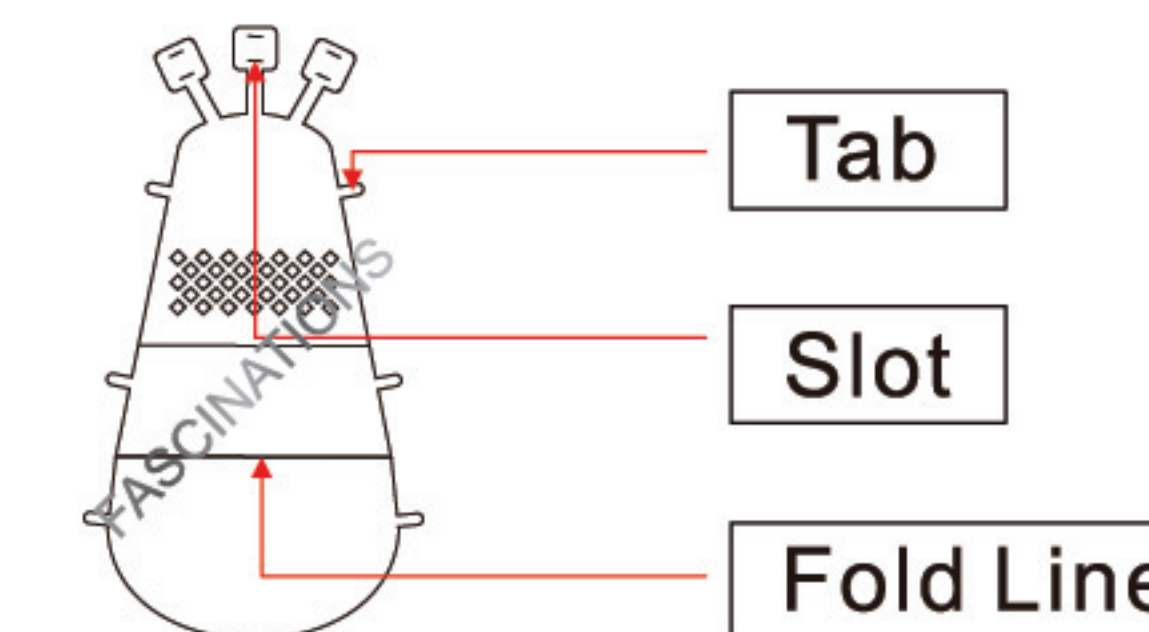

Legends:


- E** Engraved side
- NE** Non-engraved side
- Attention point
- Insert tab and bend 90 degrees
- Insert tab and twist 90 degrees

Assembly tip:



If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish

Recommended tools:

-Wire cutters: helpful for taking parts from the metal sheets.

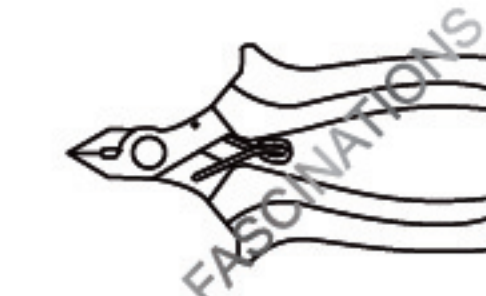


-Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.



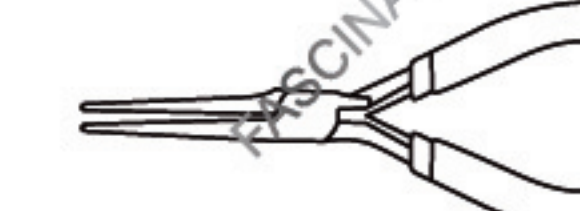



ASSEMBLY STEPS



Step 1

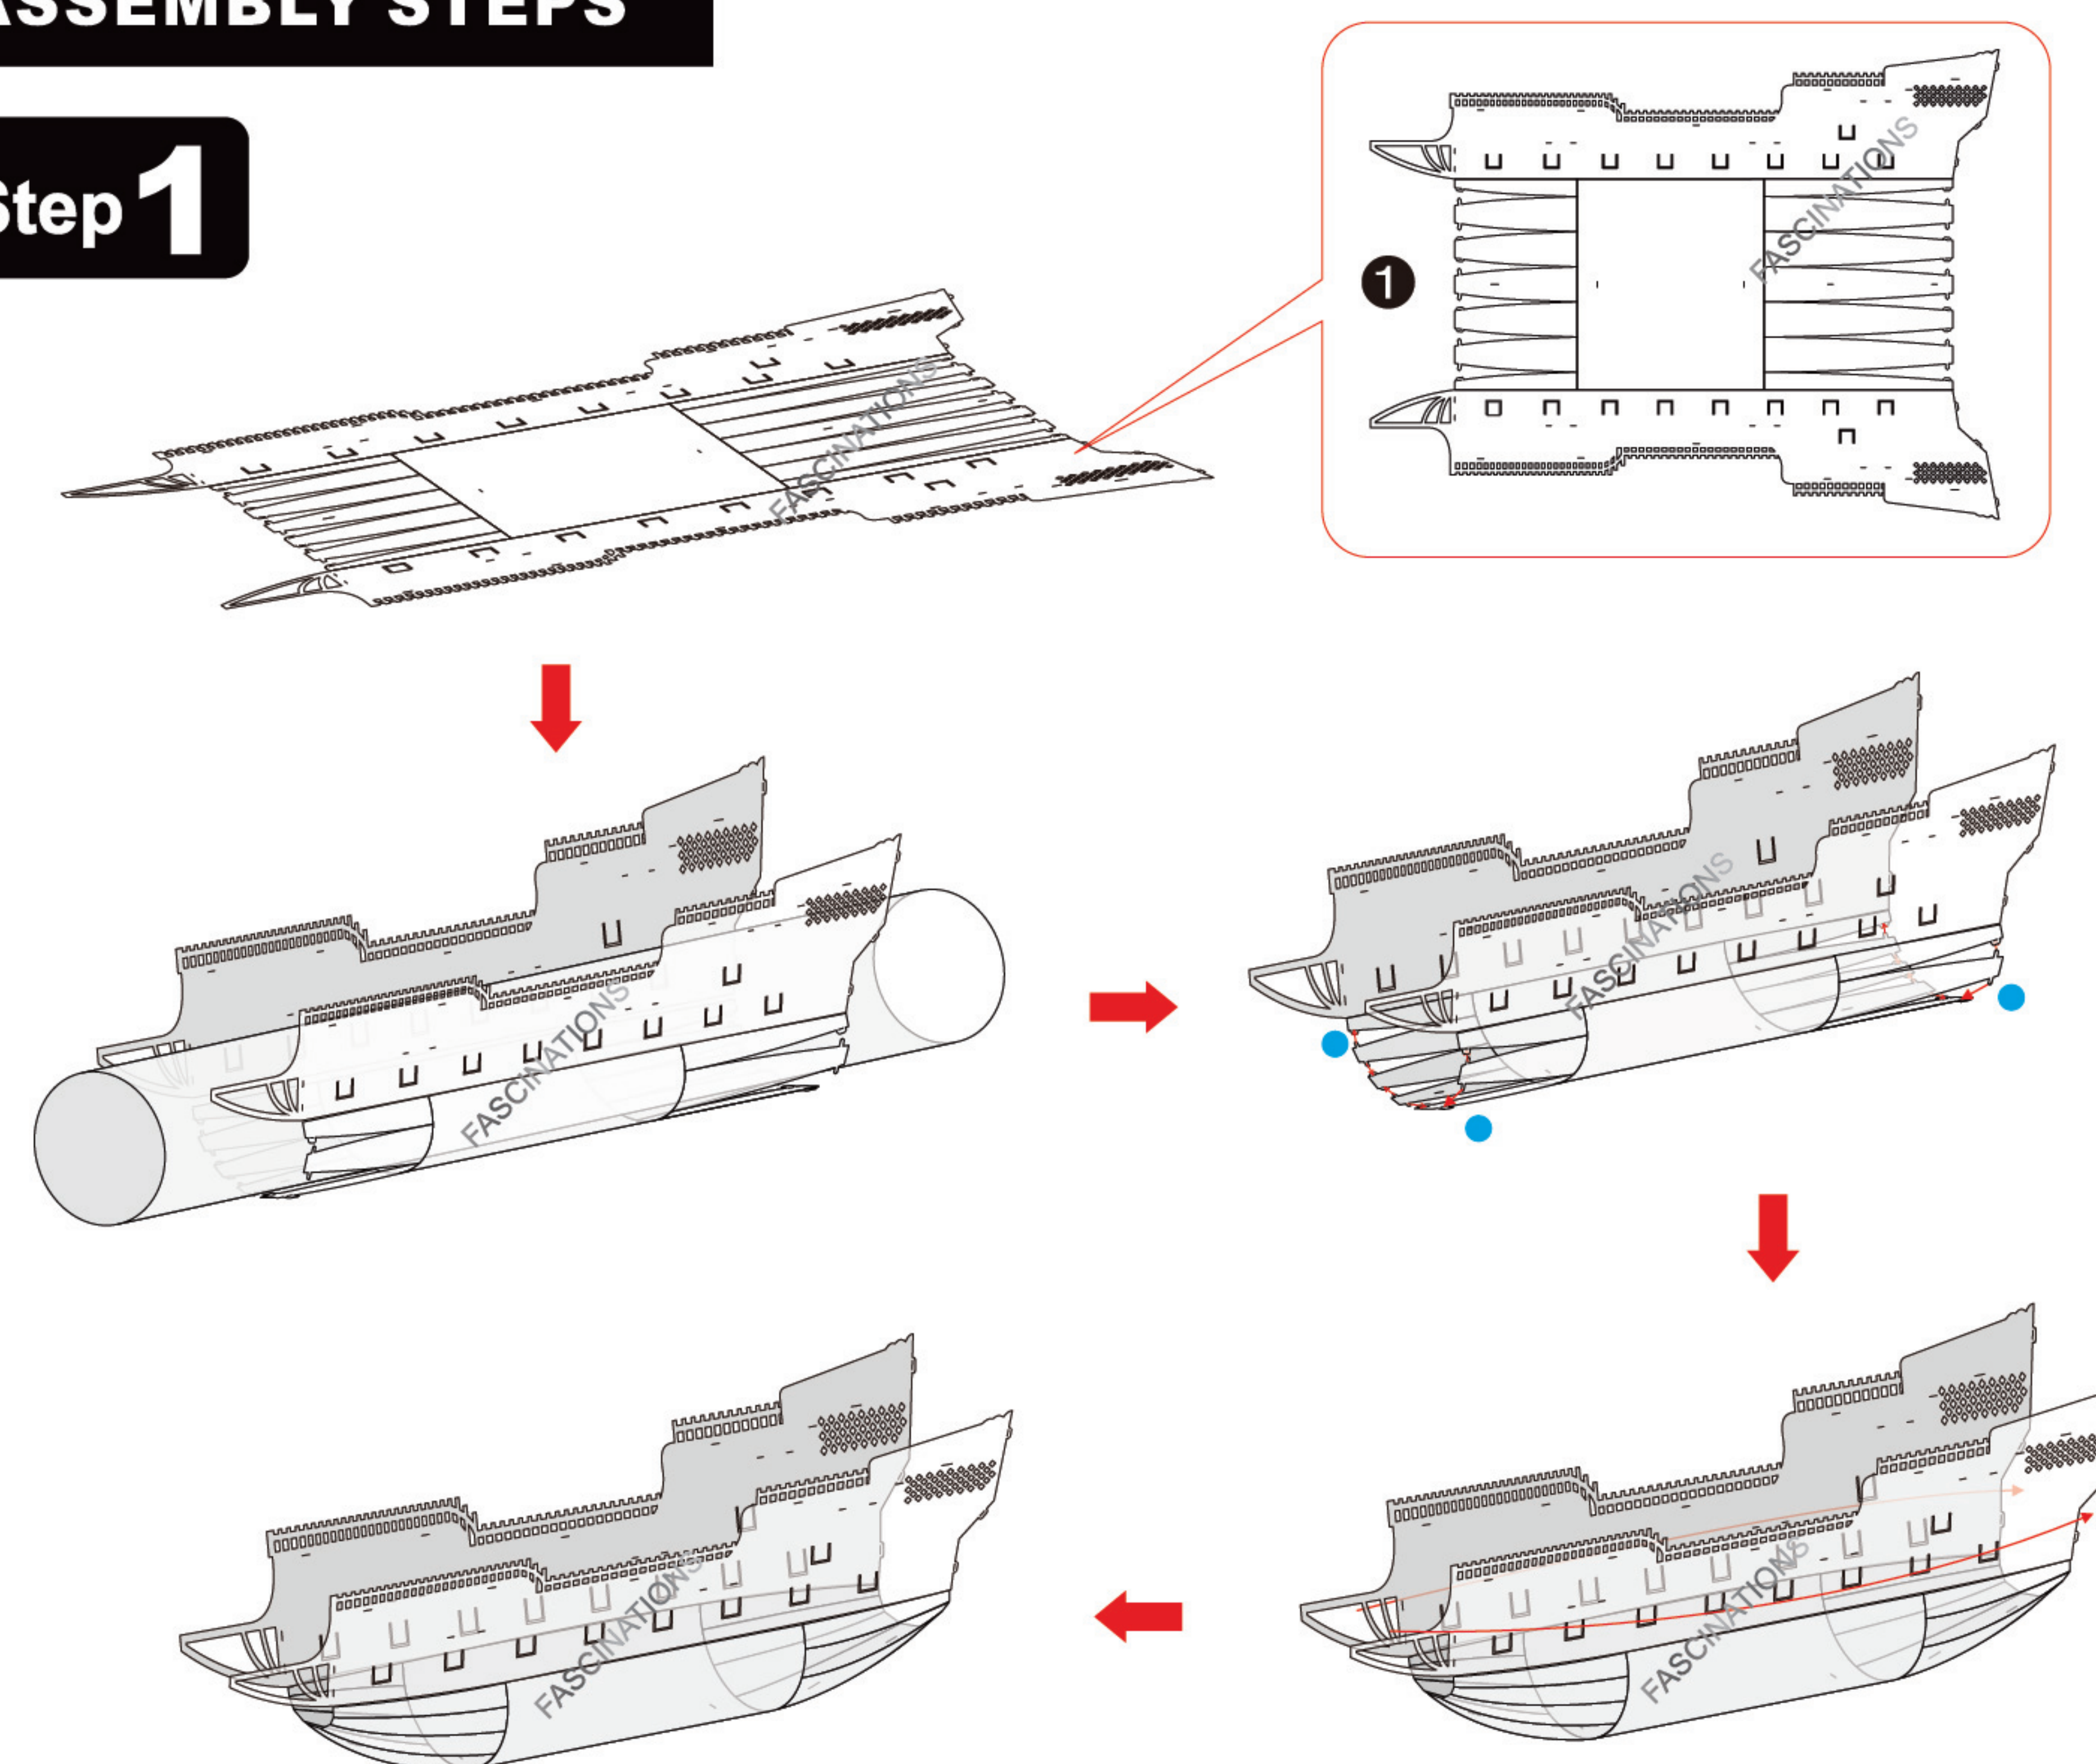


Step 2

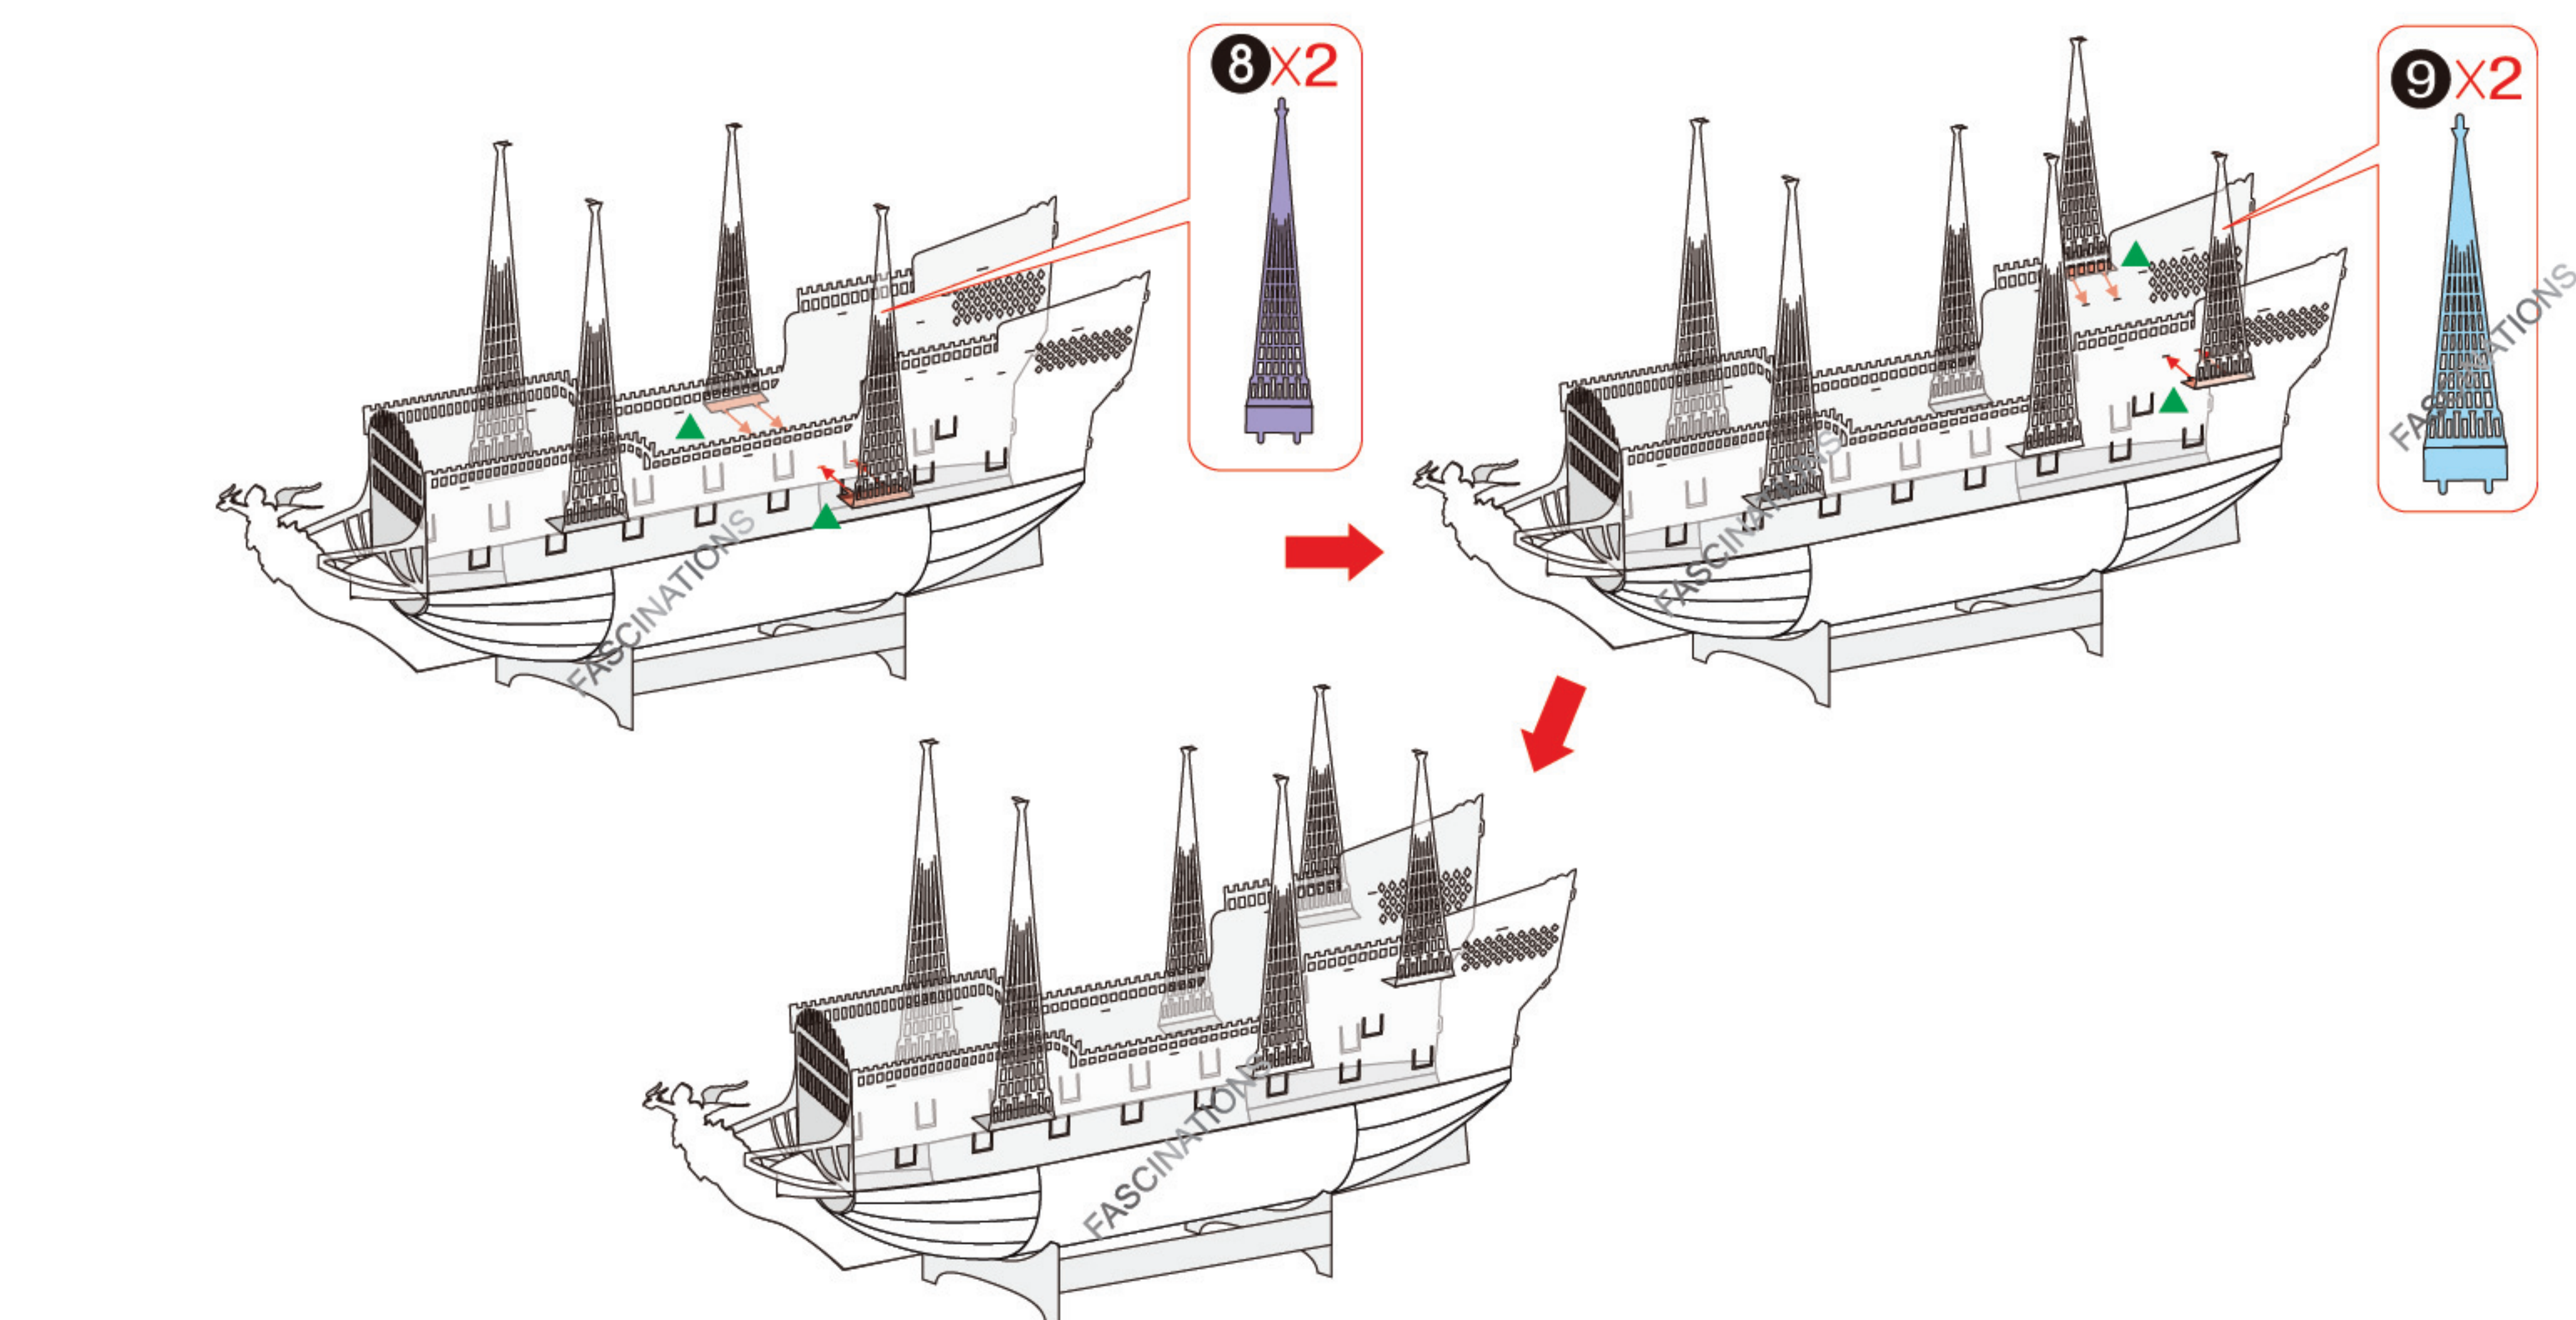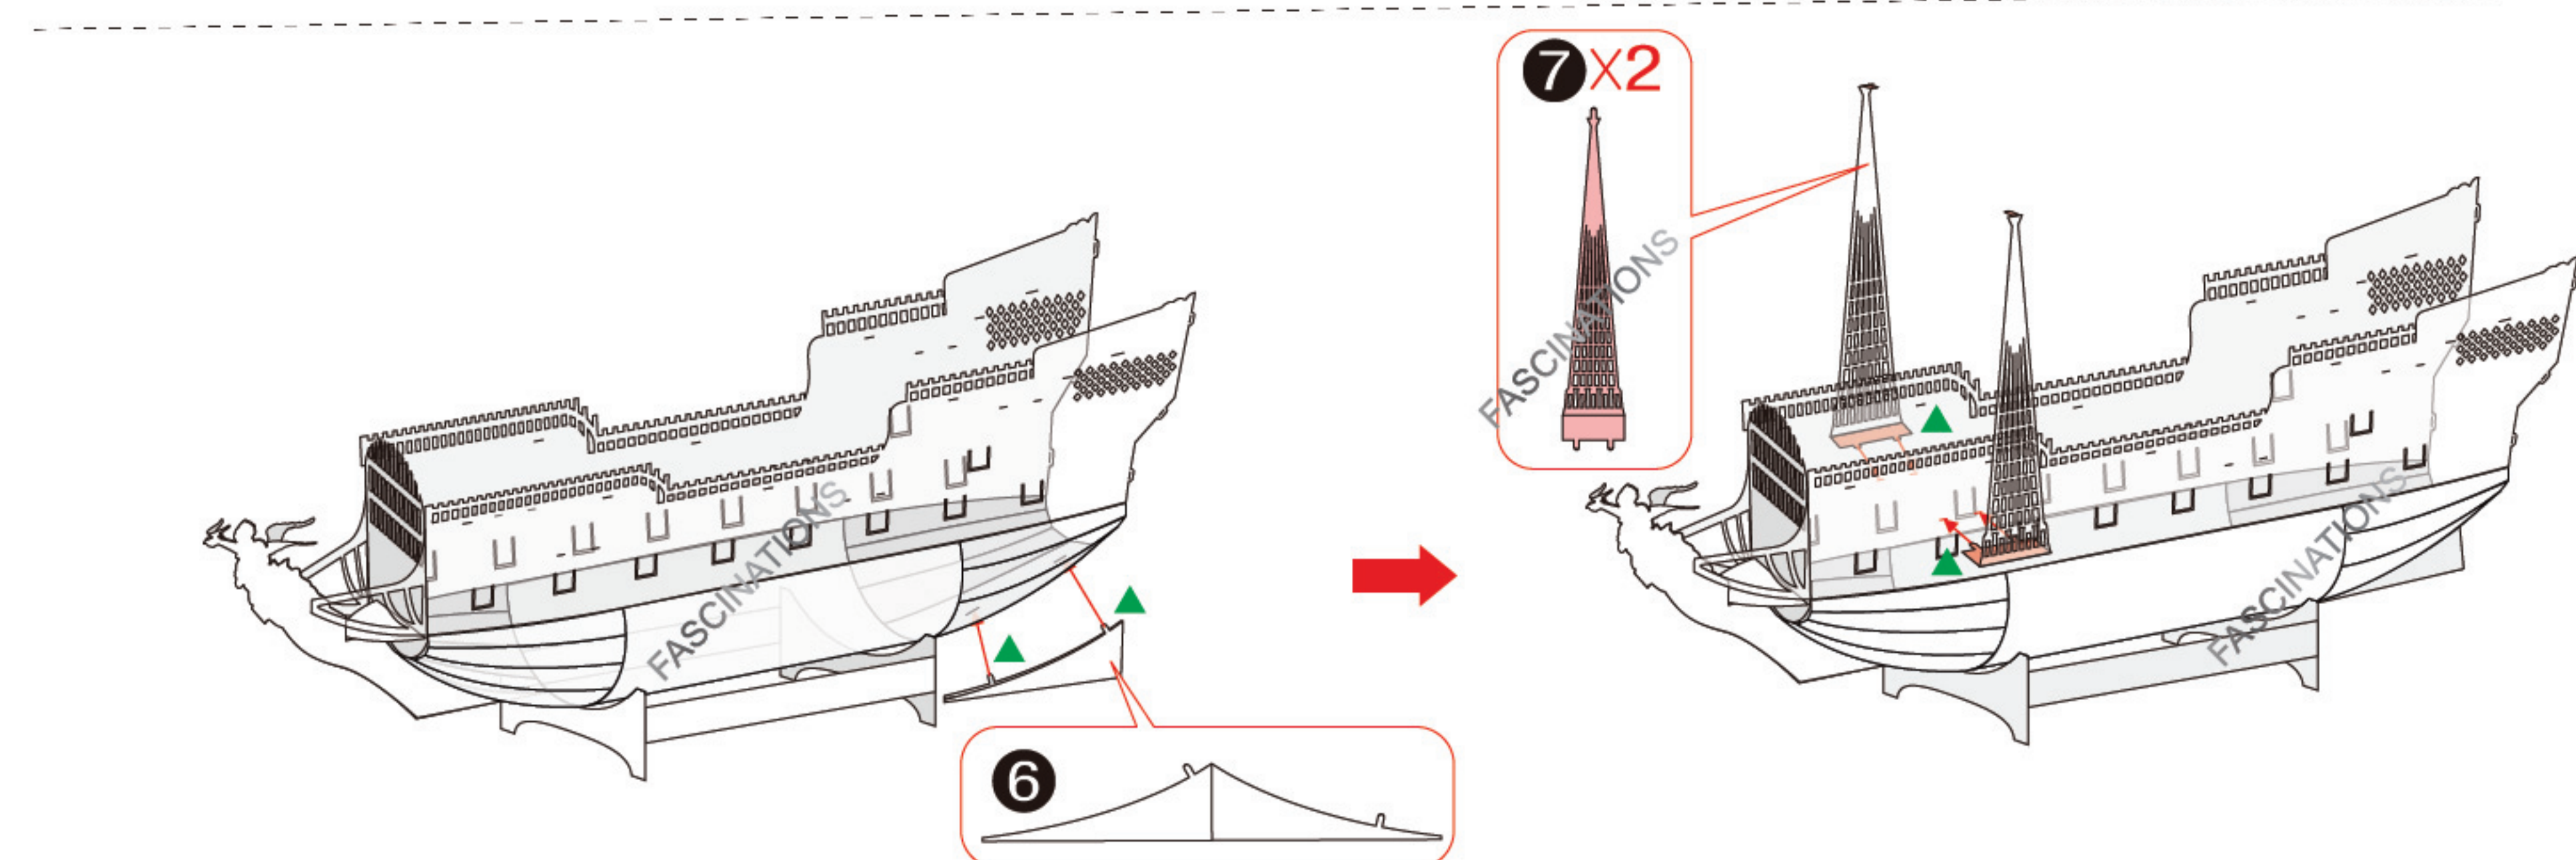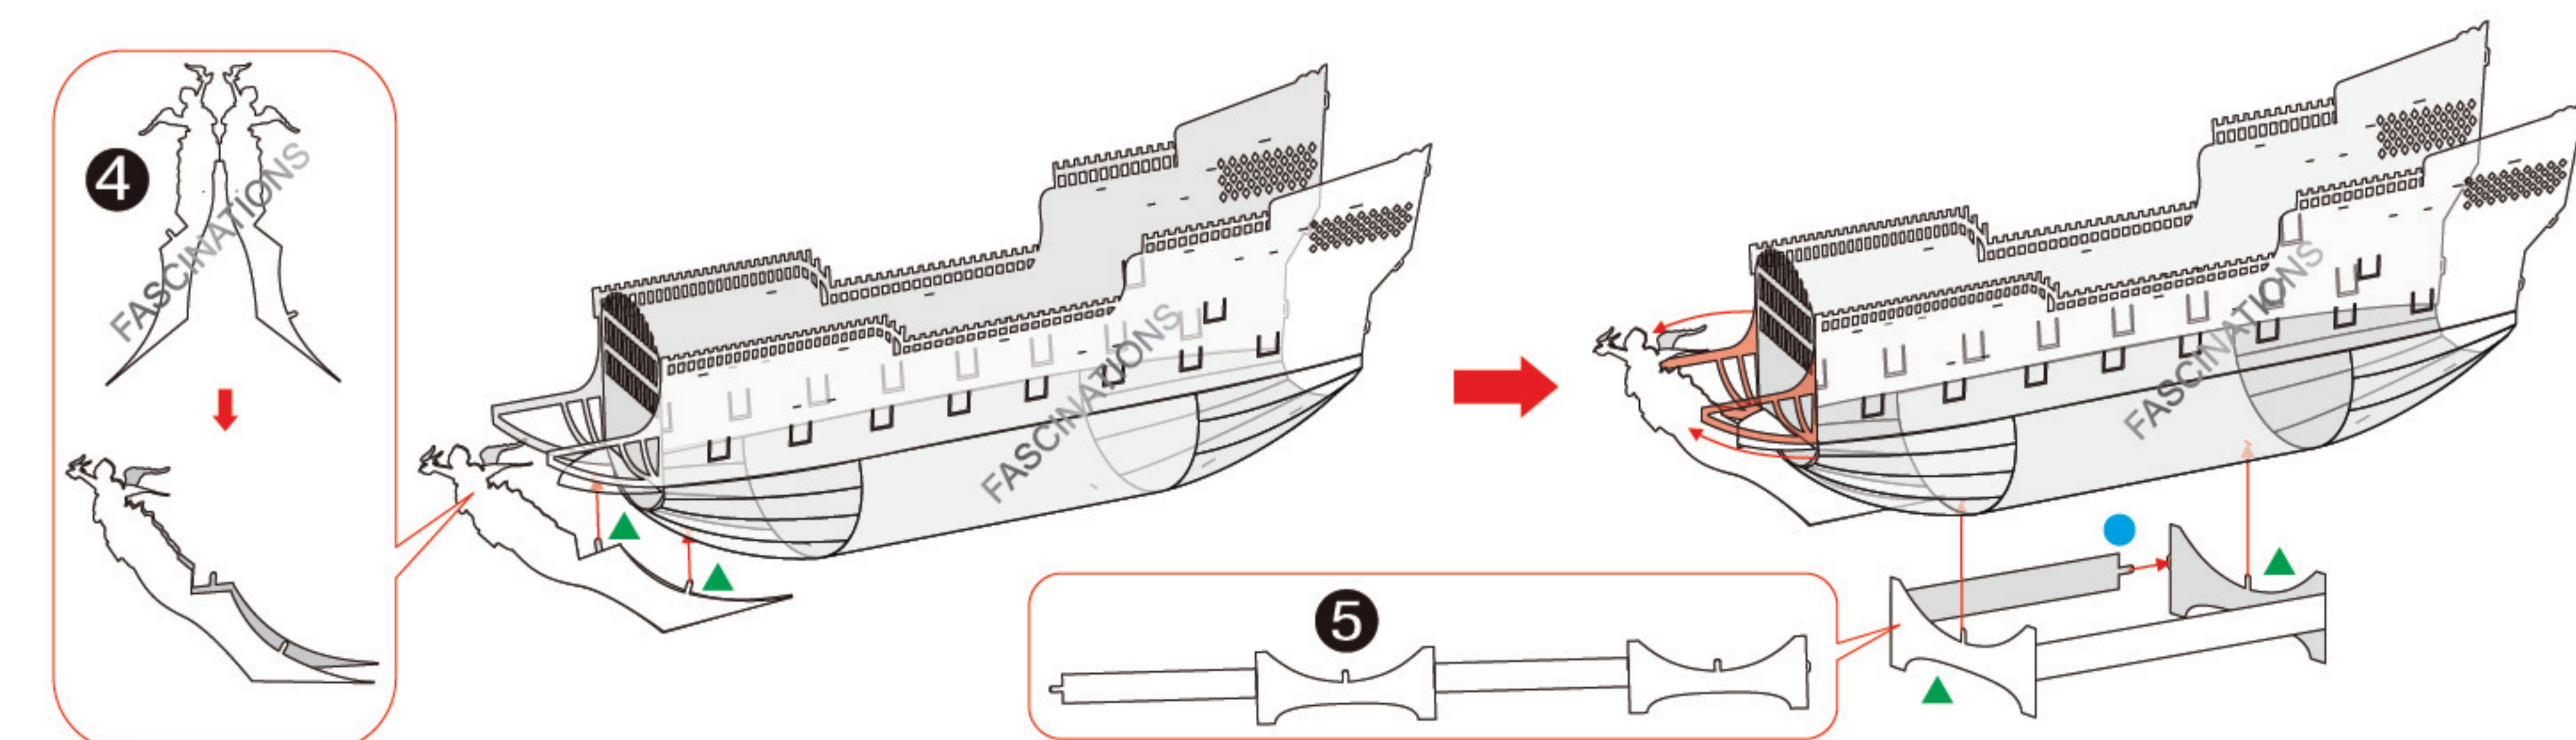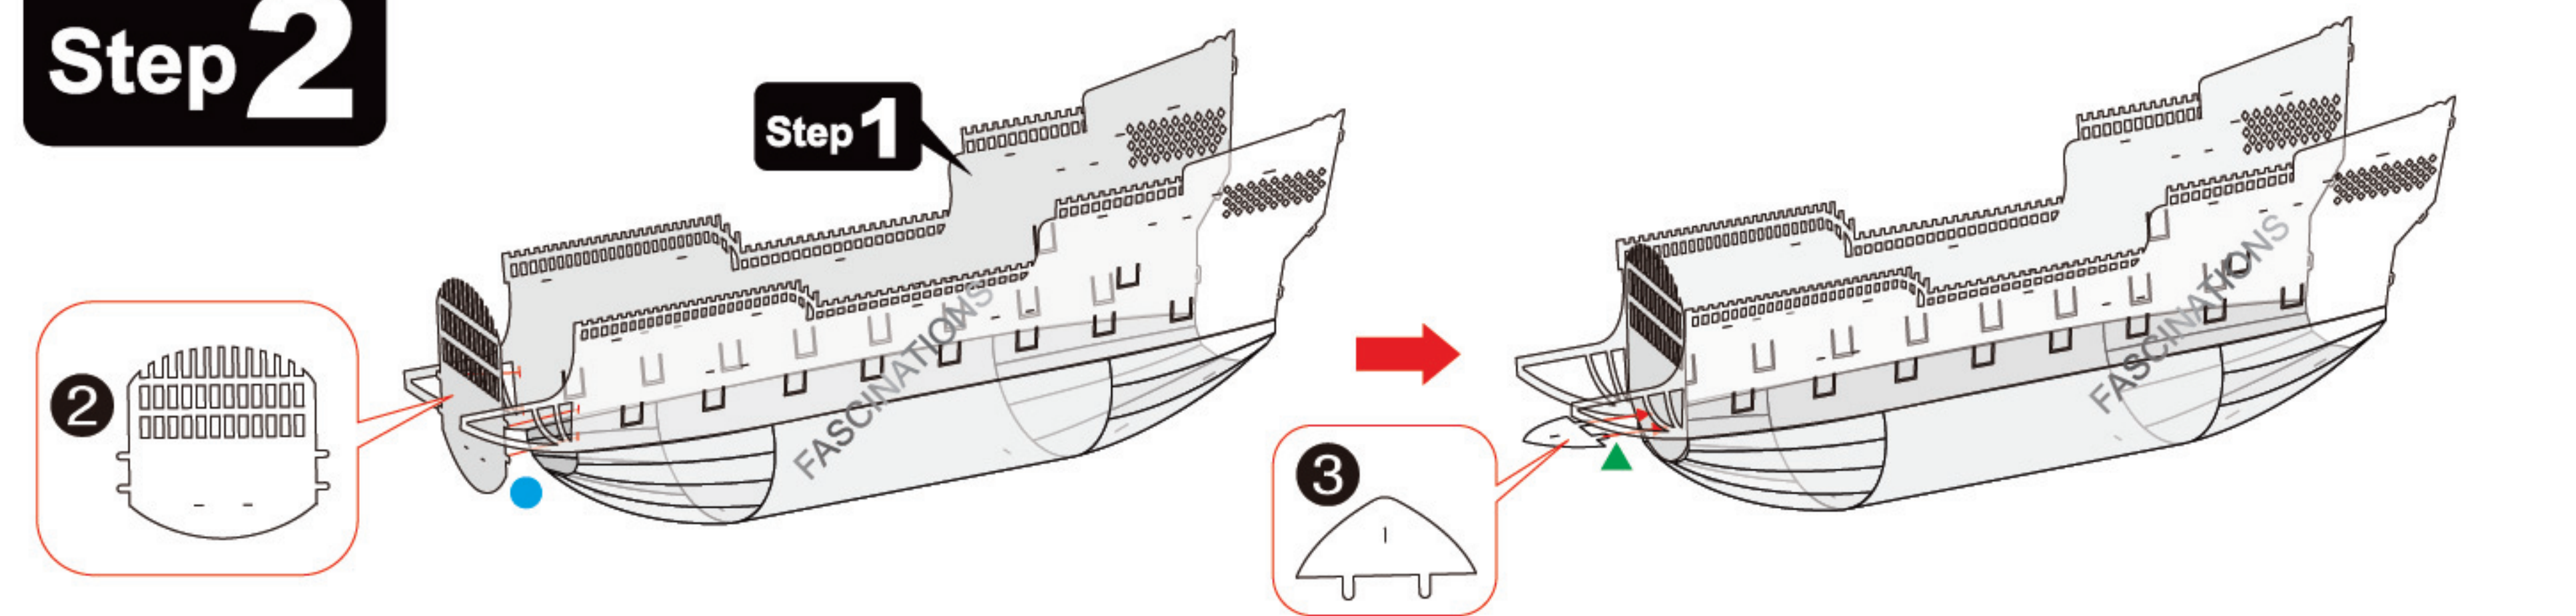


Step 3

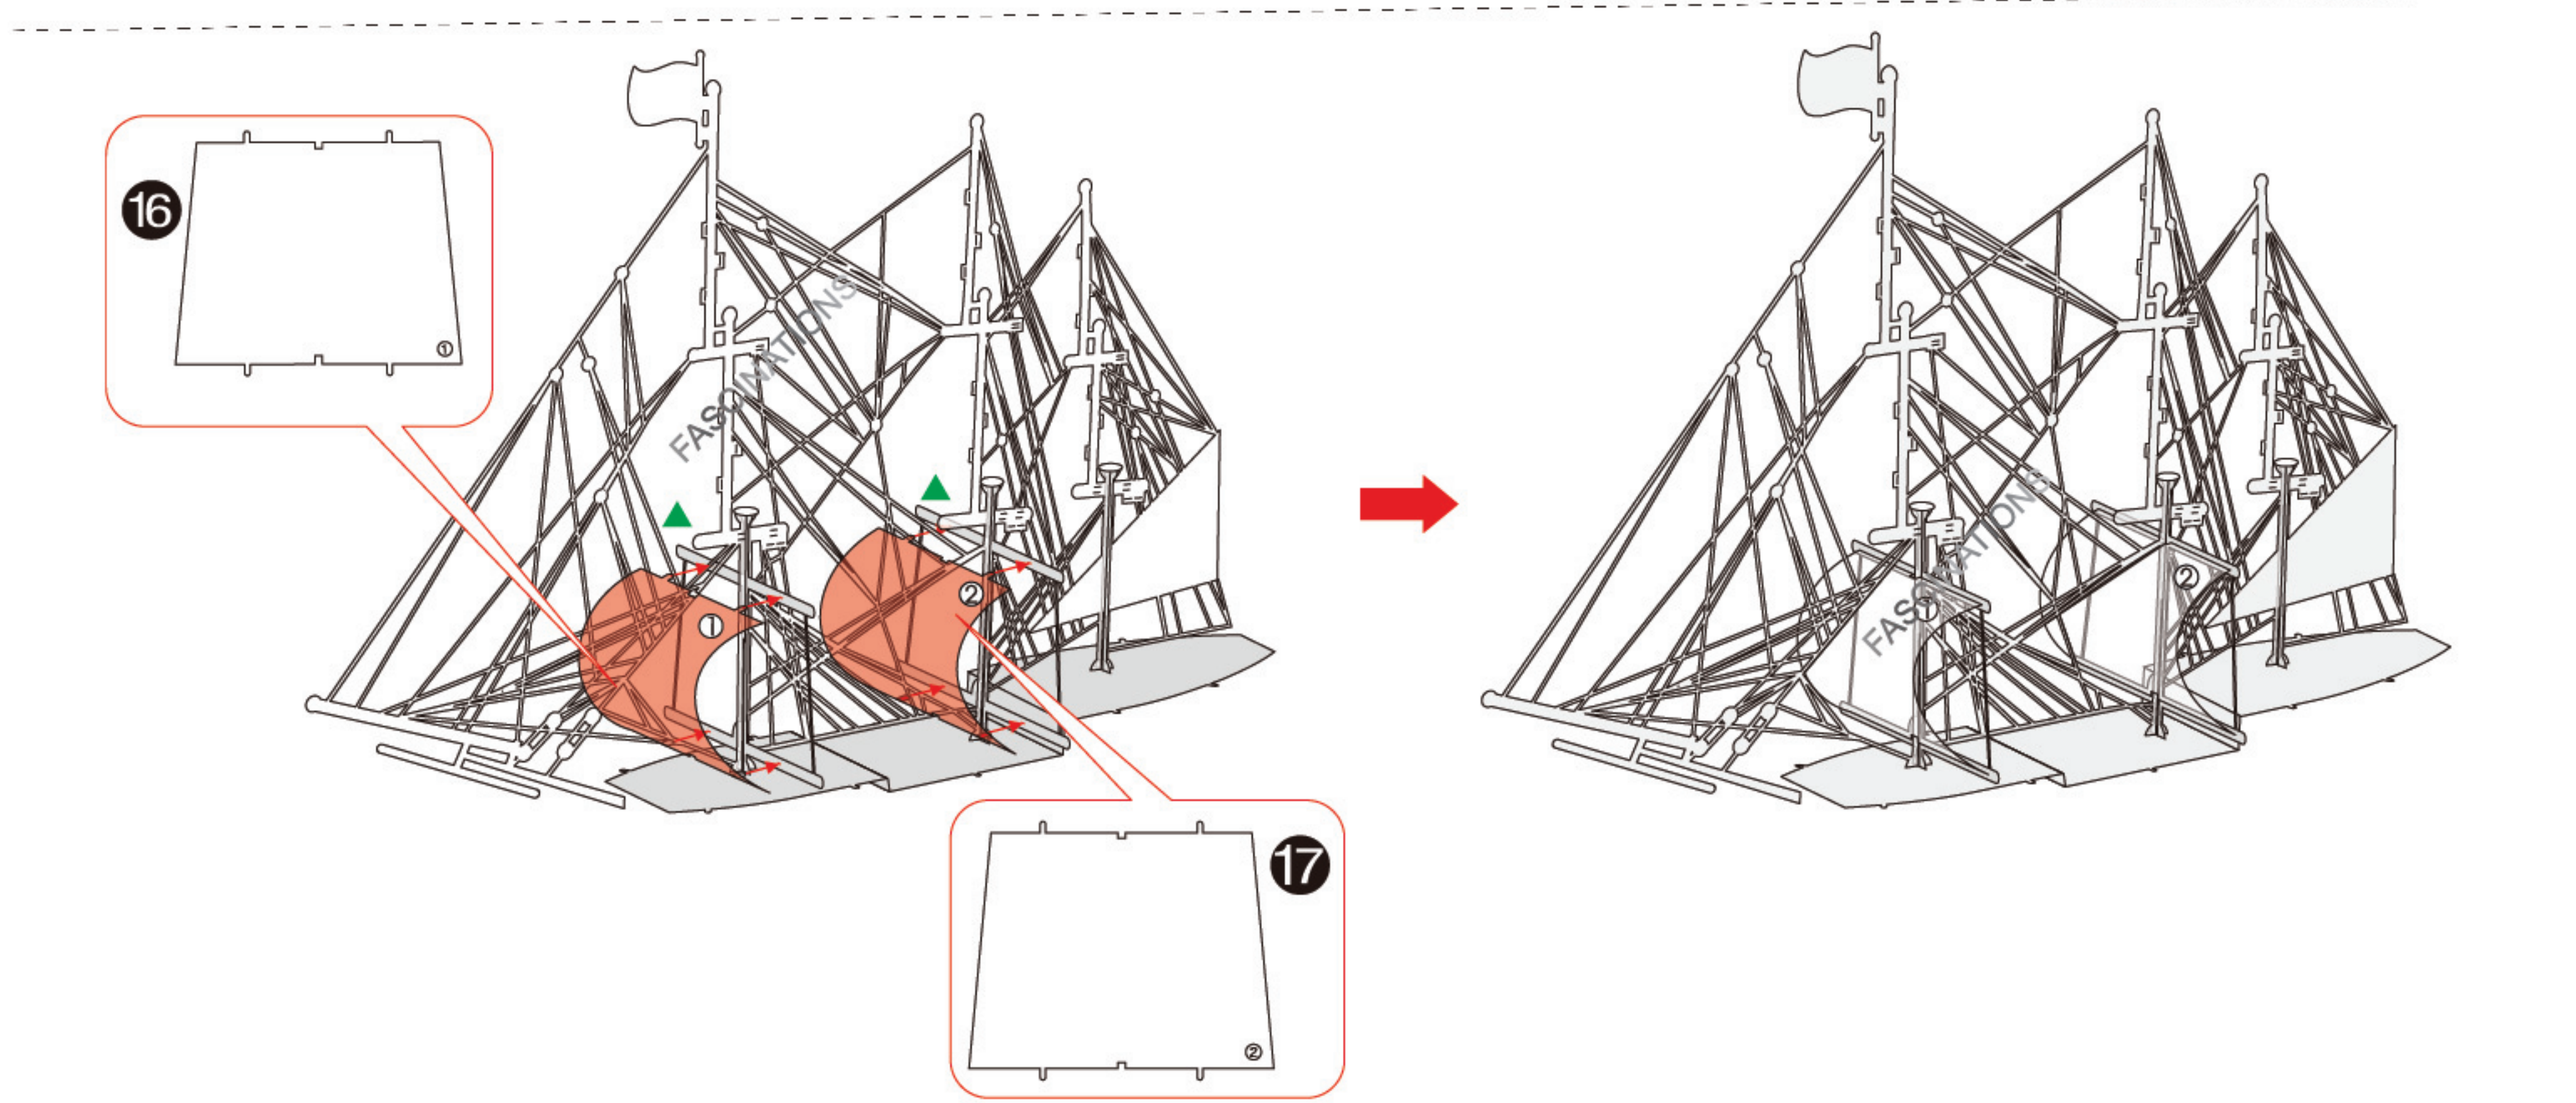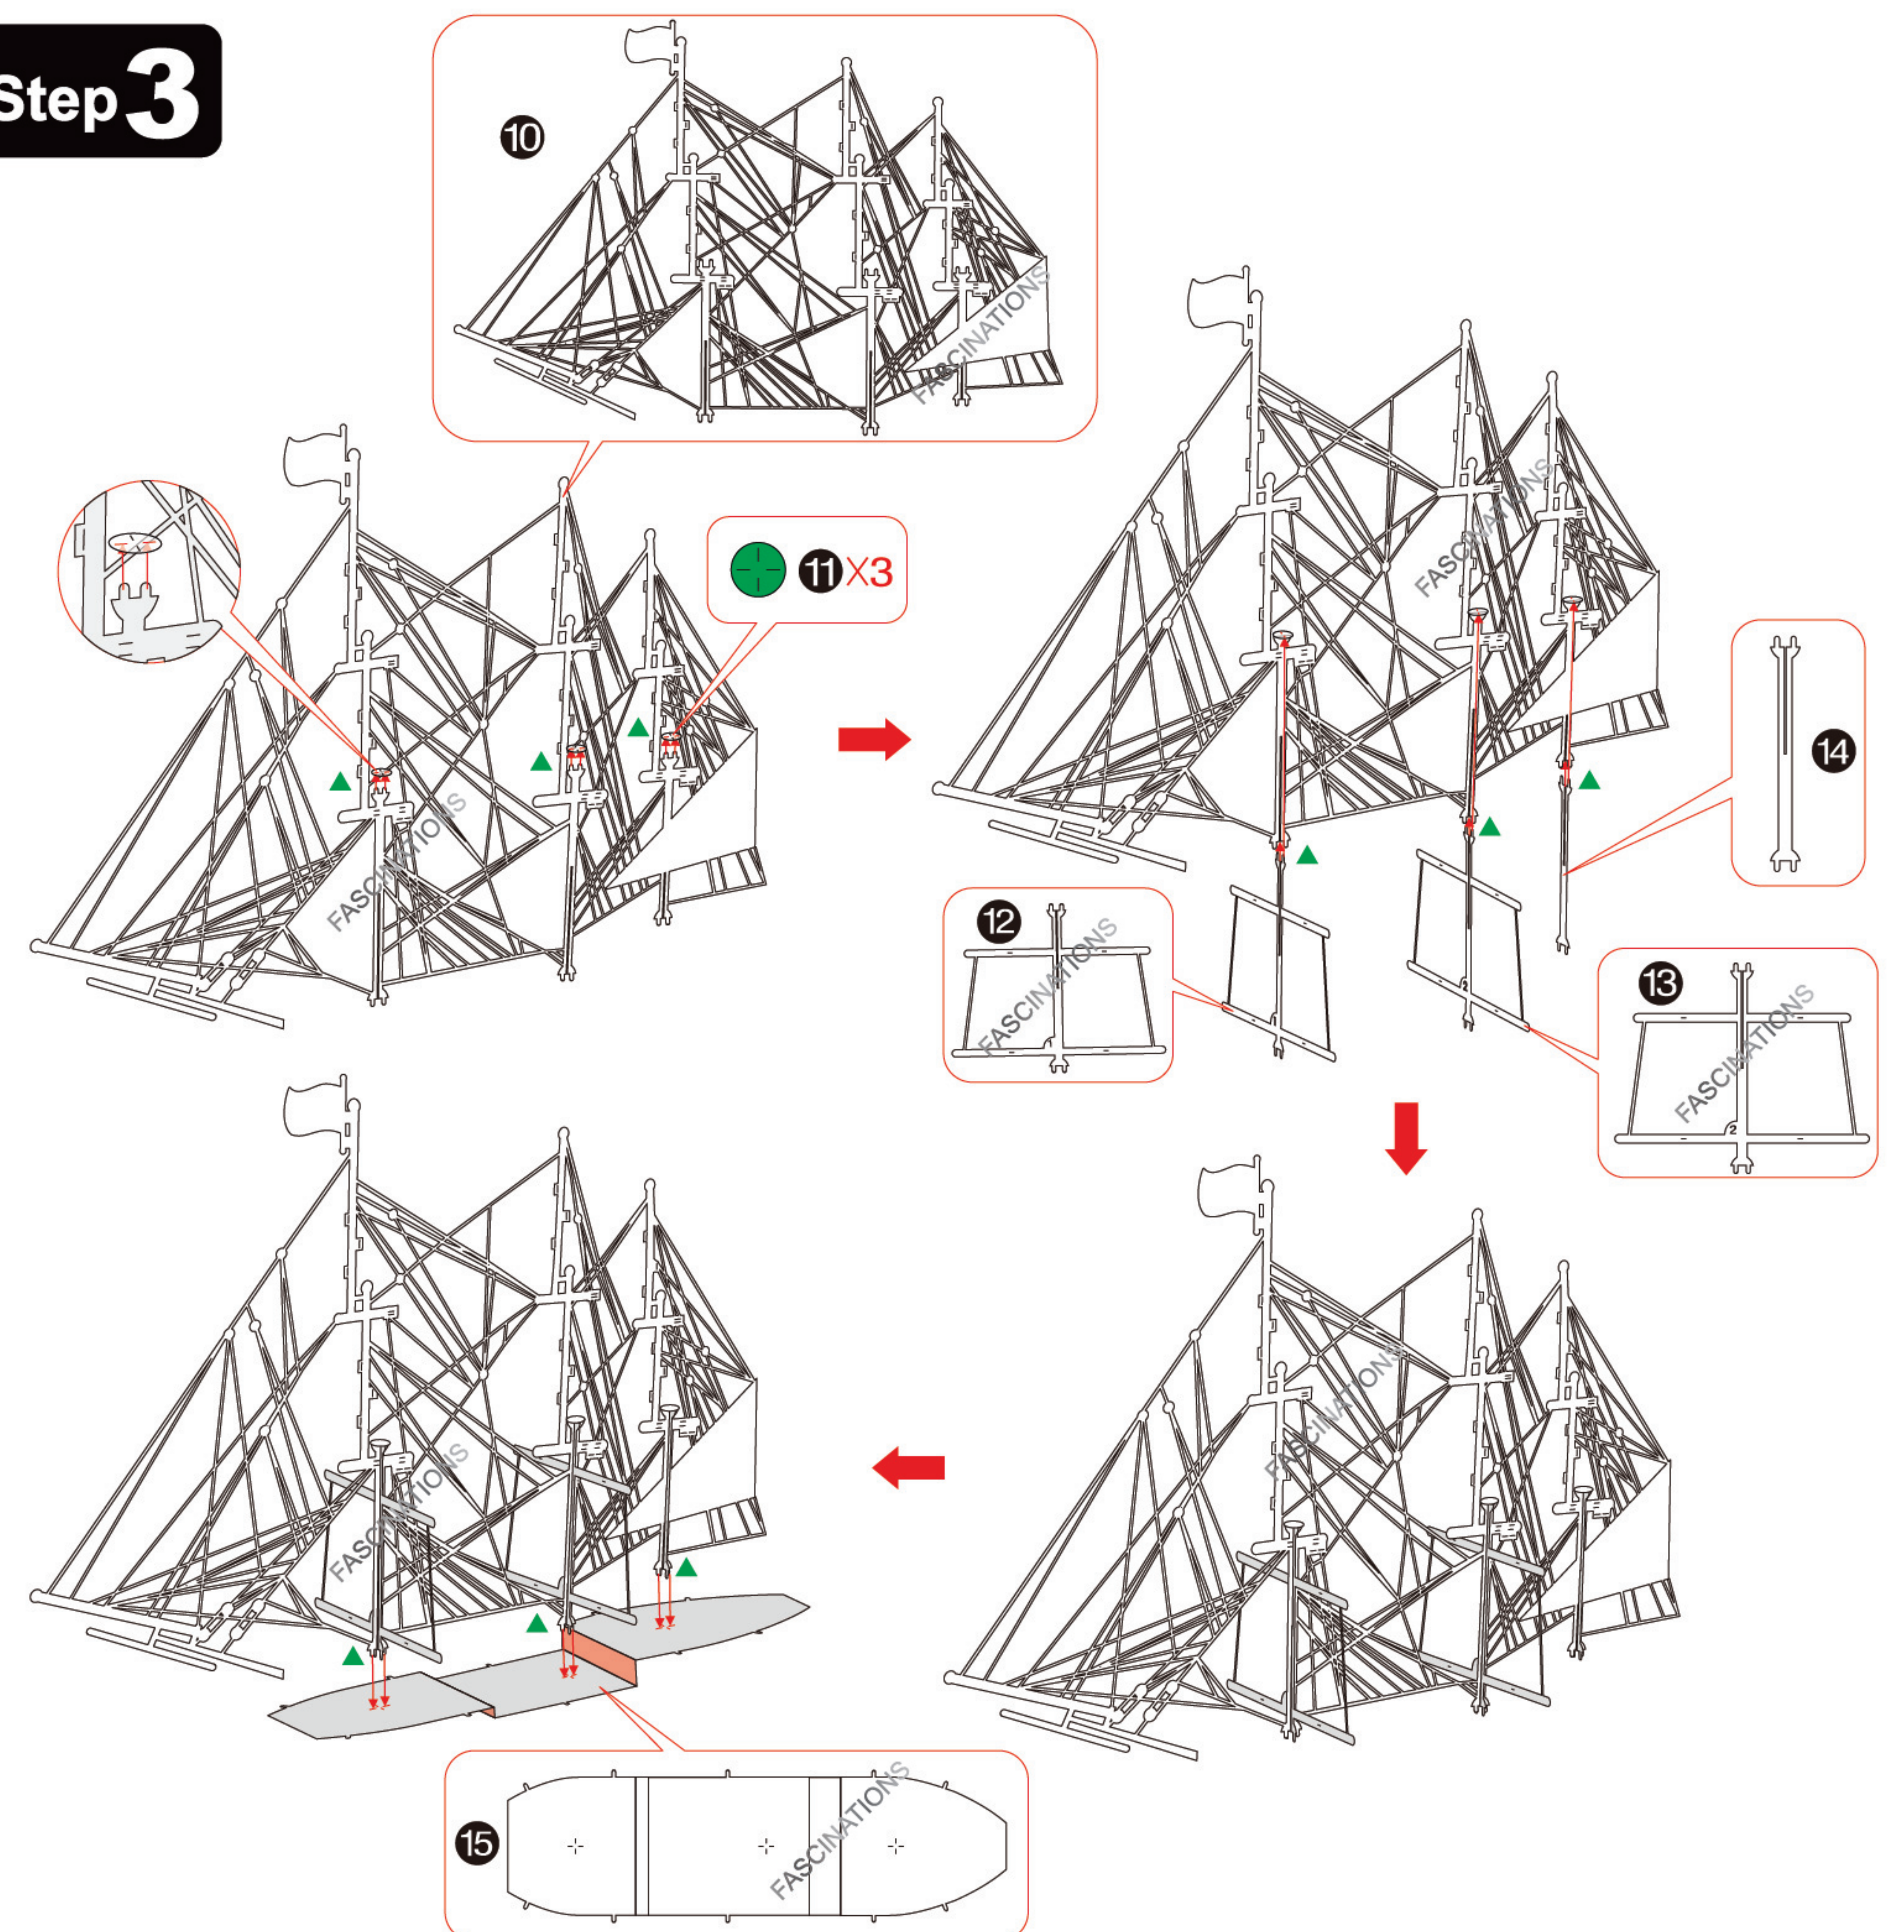


Step 4

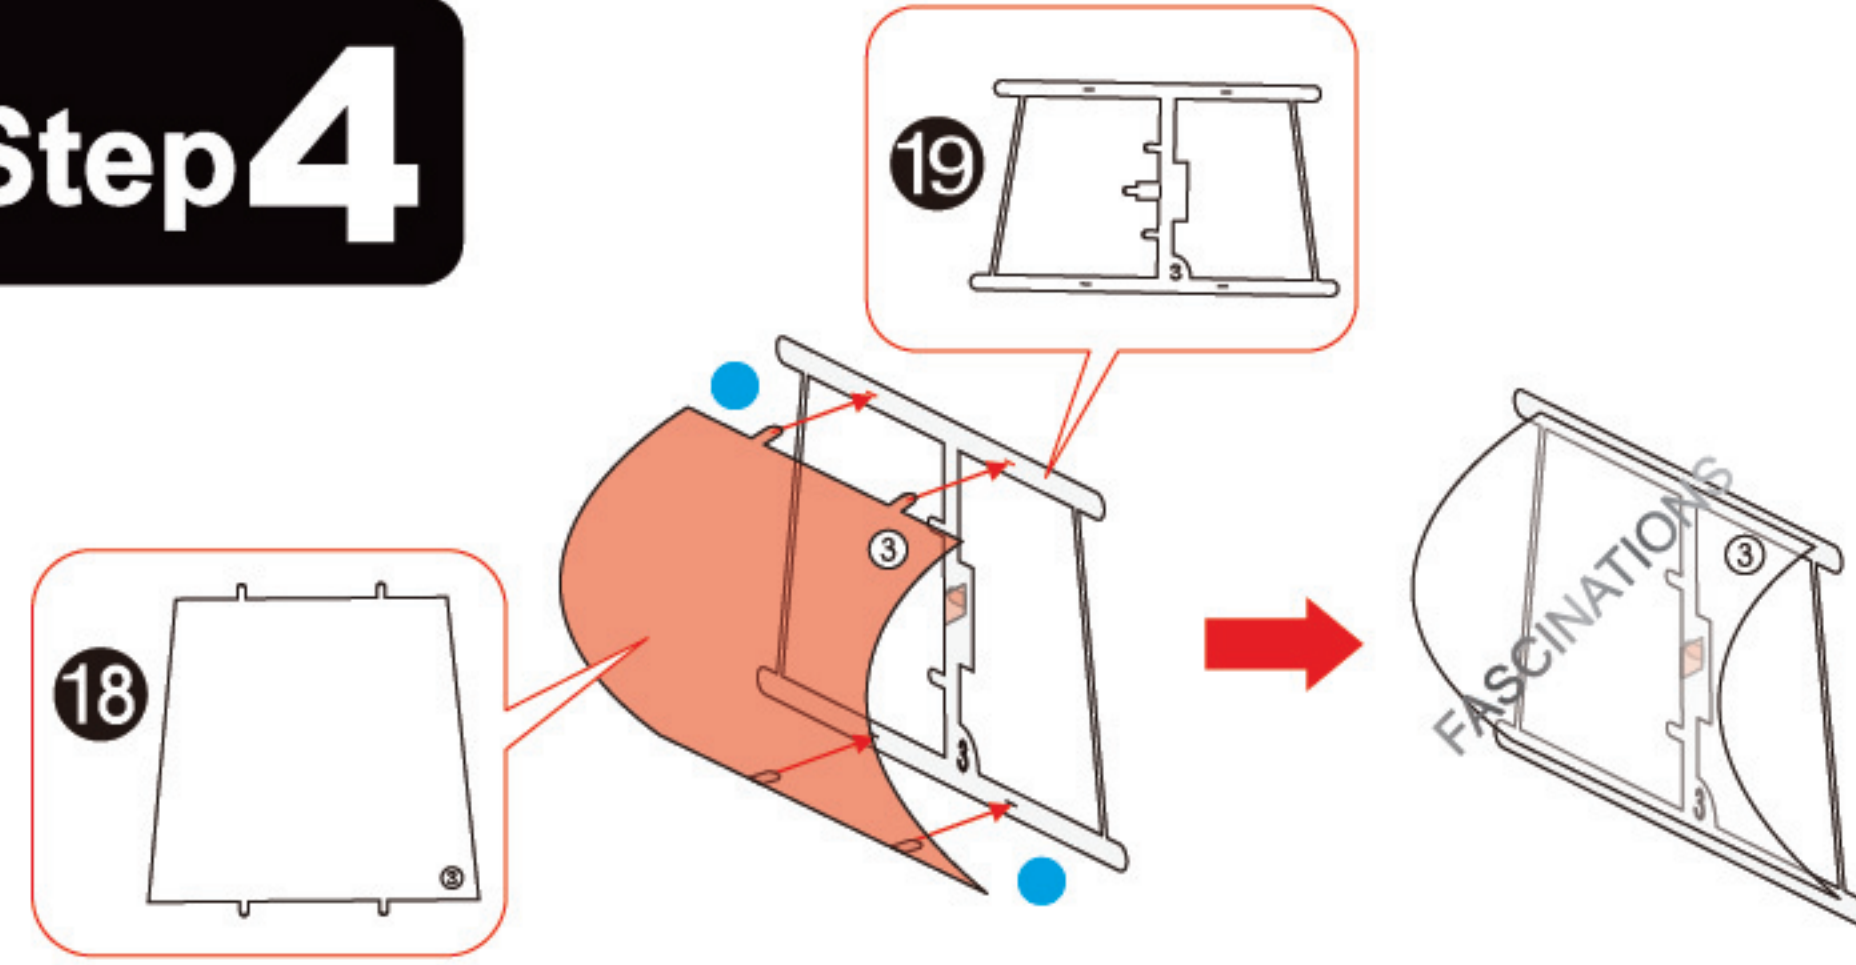


Step 5

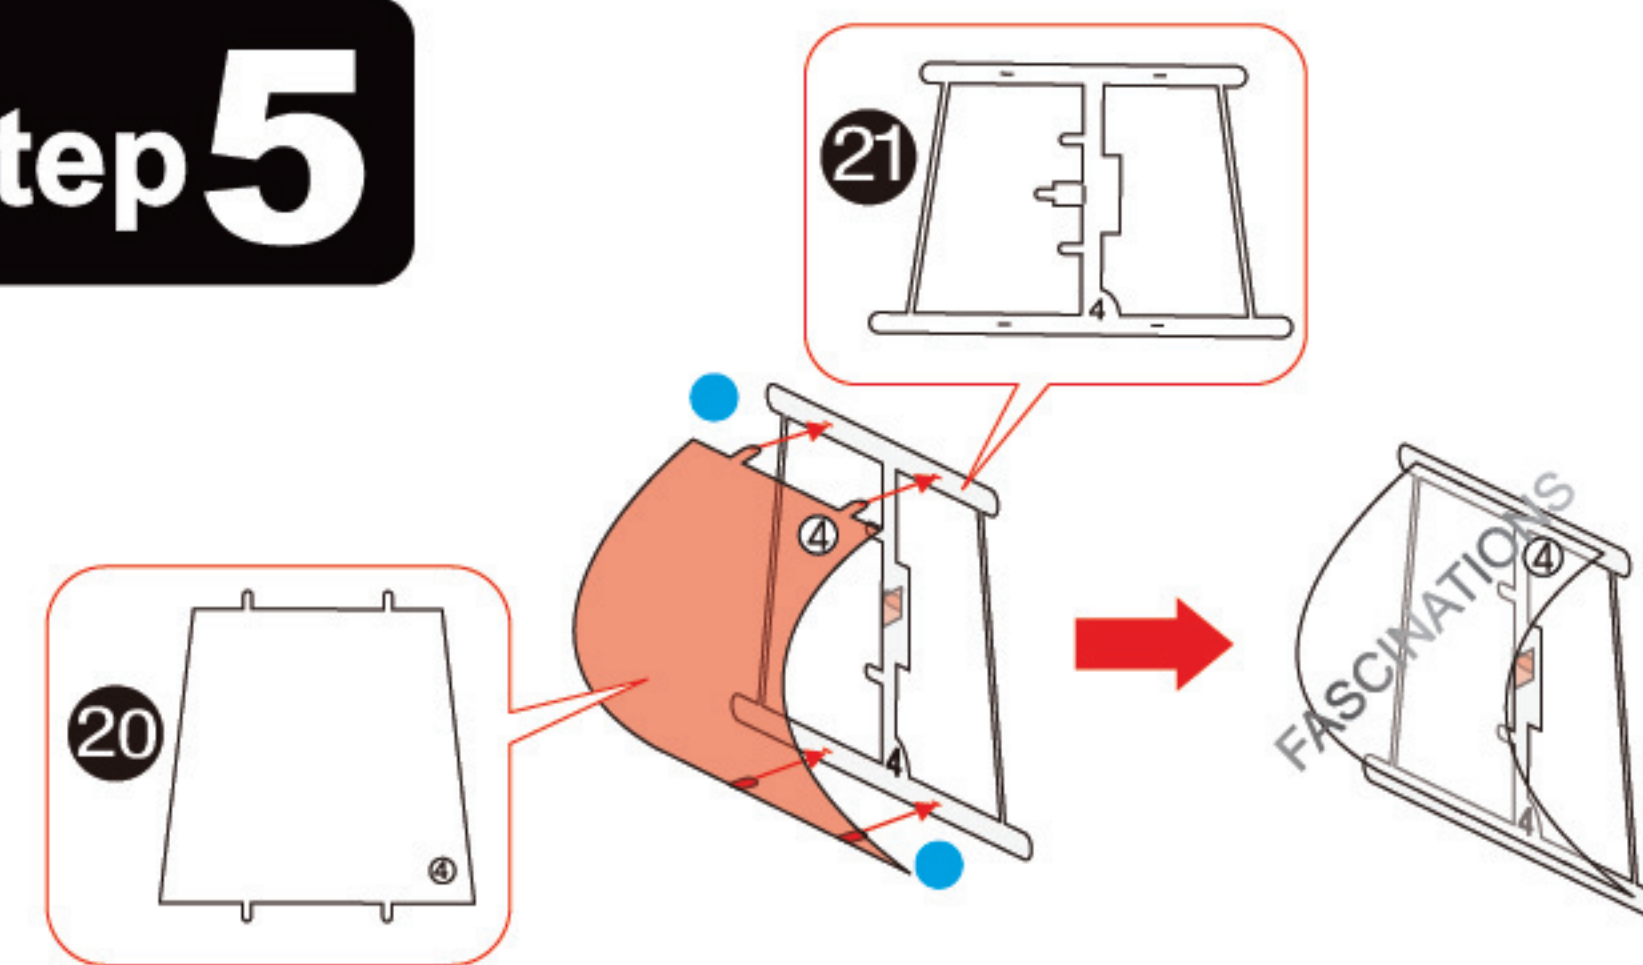


Step 6

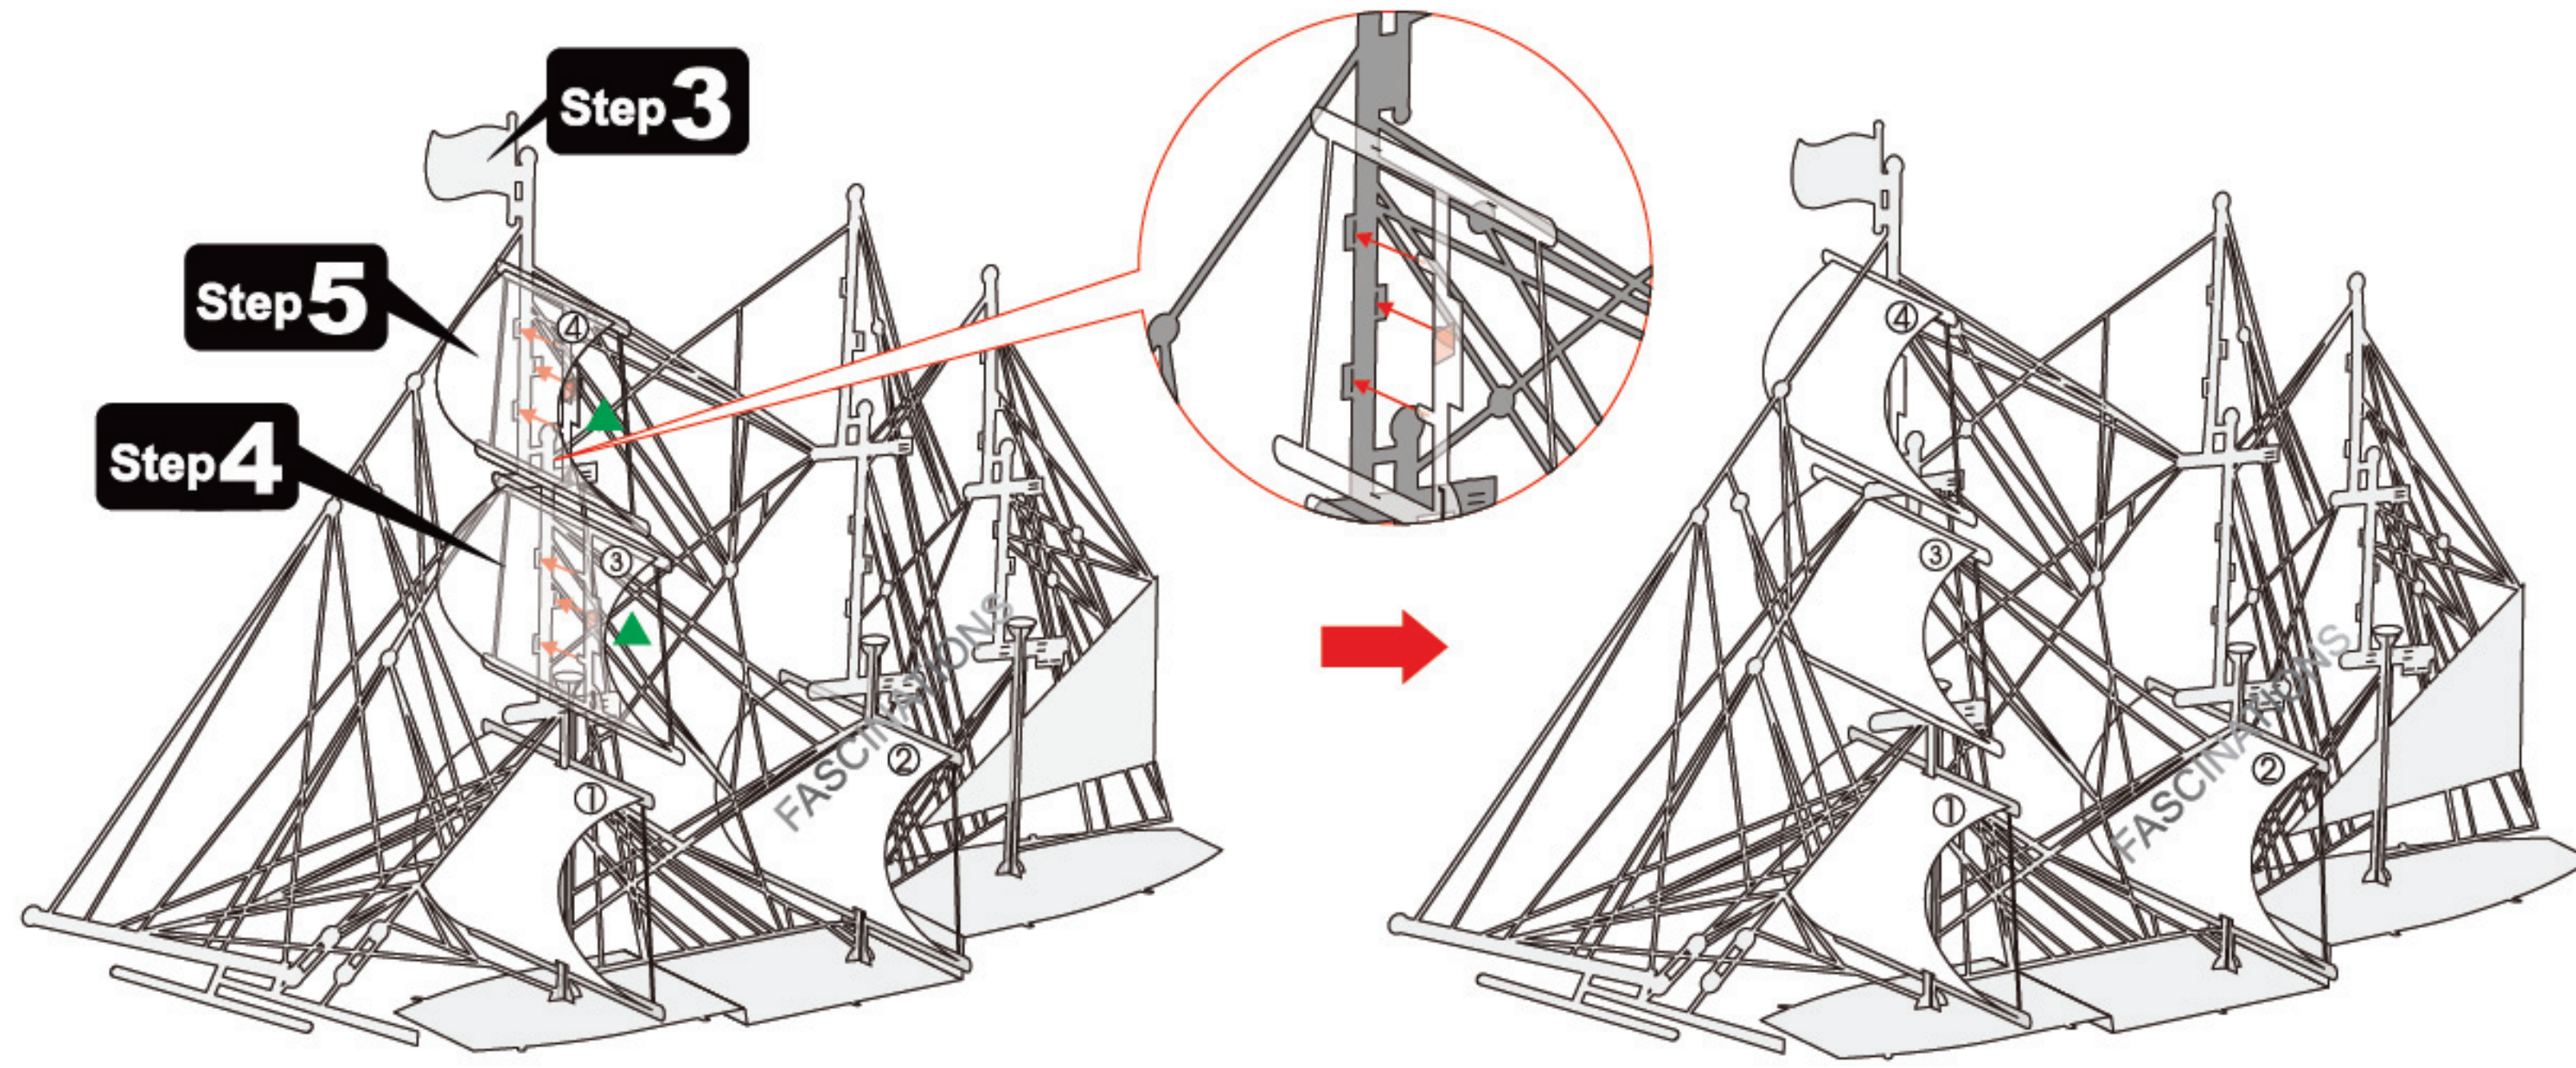


Step 7

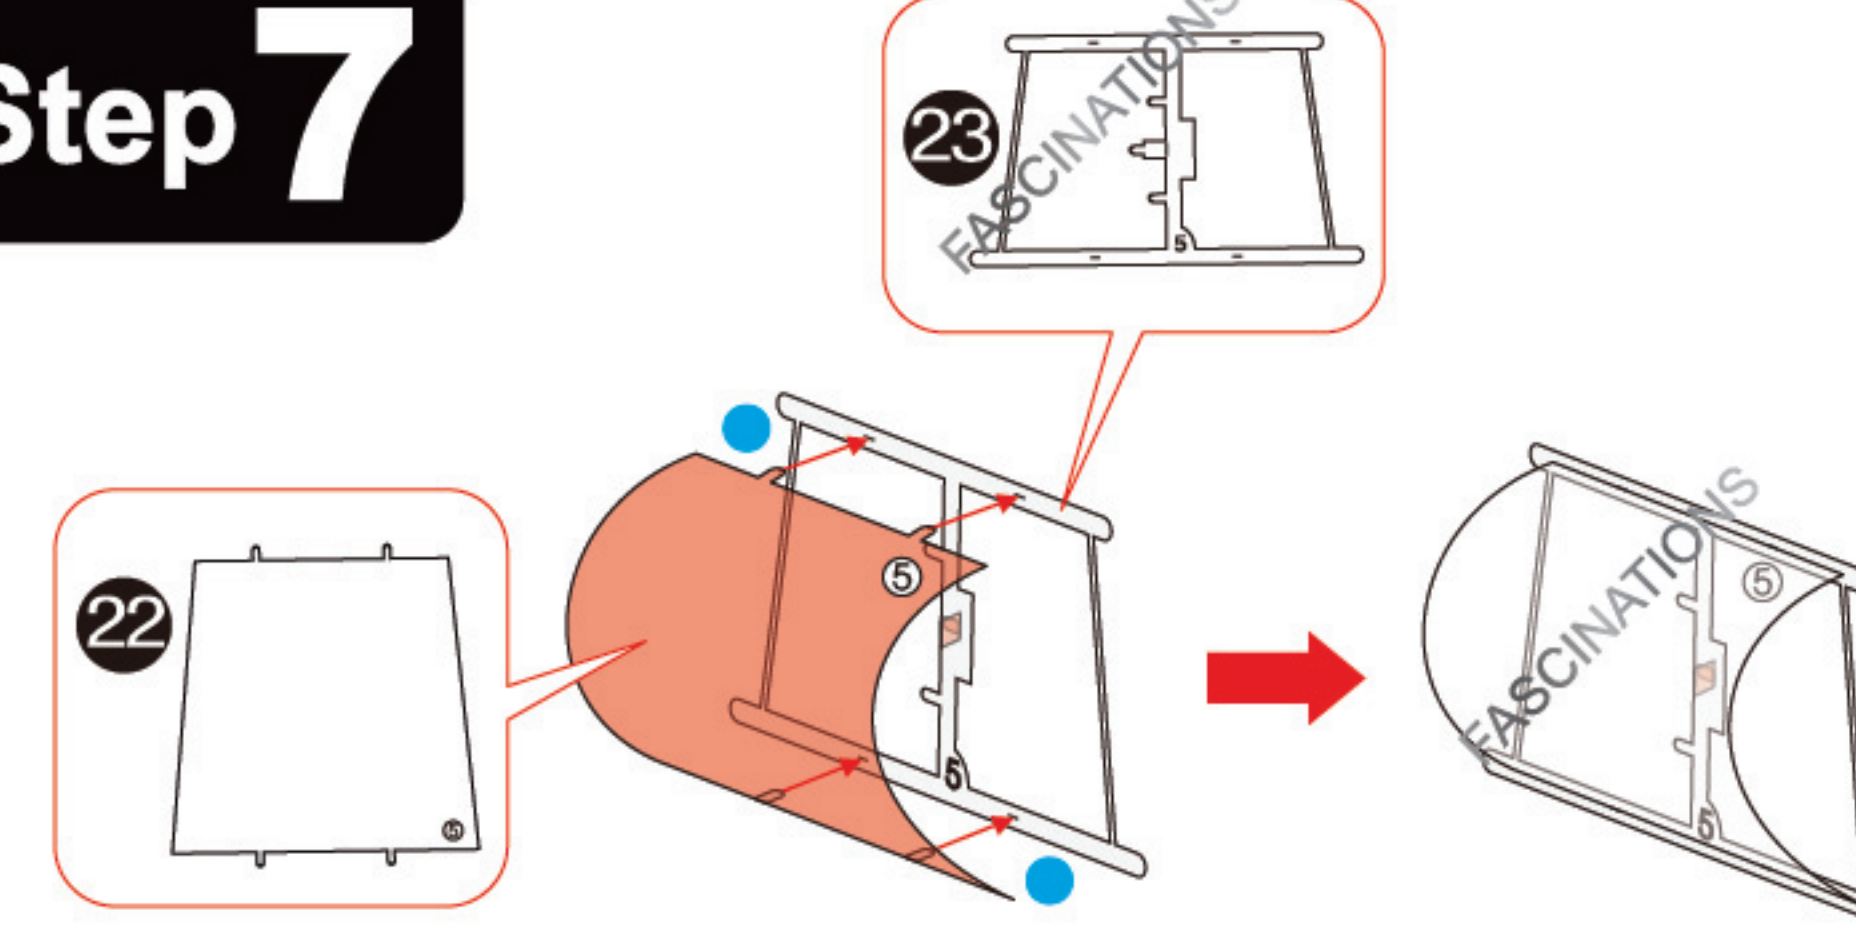


Step 8

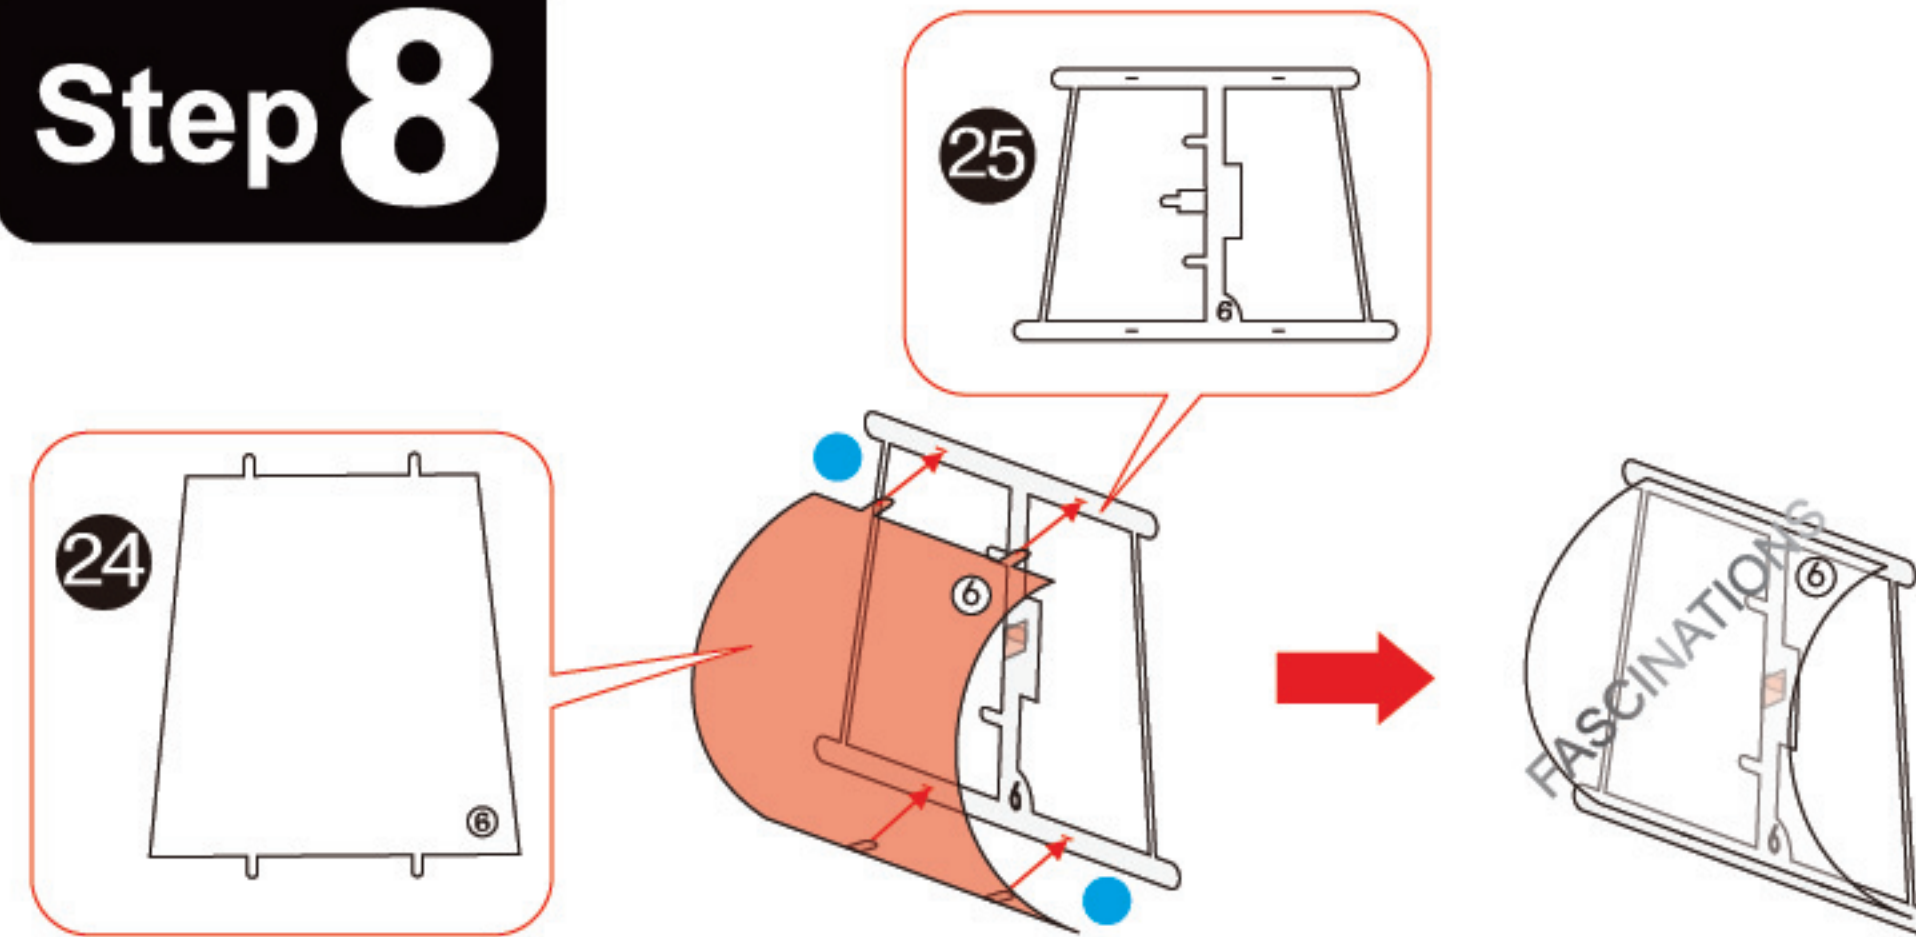


Step 9

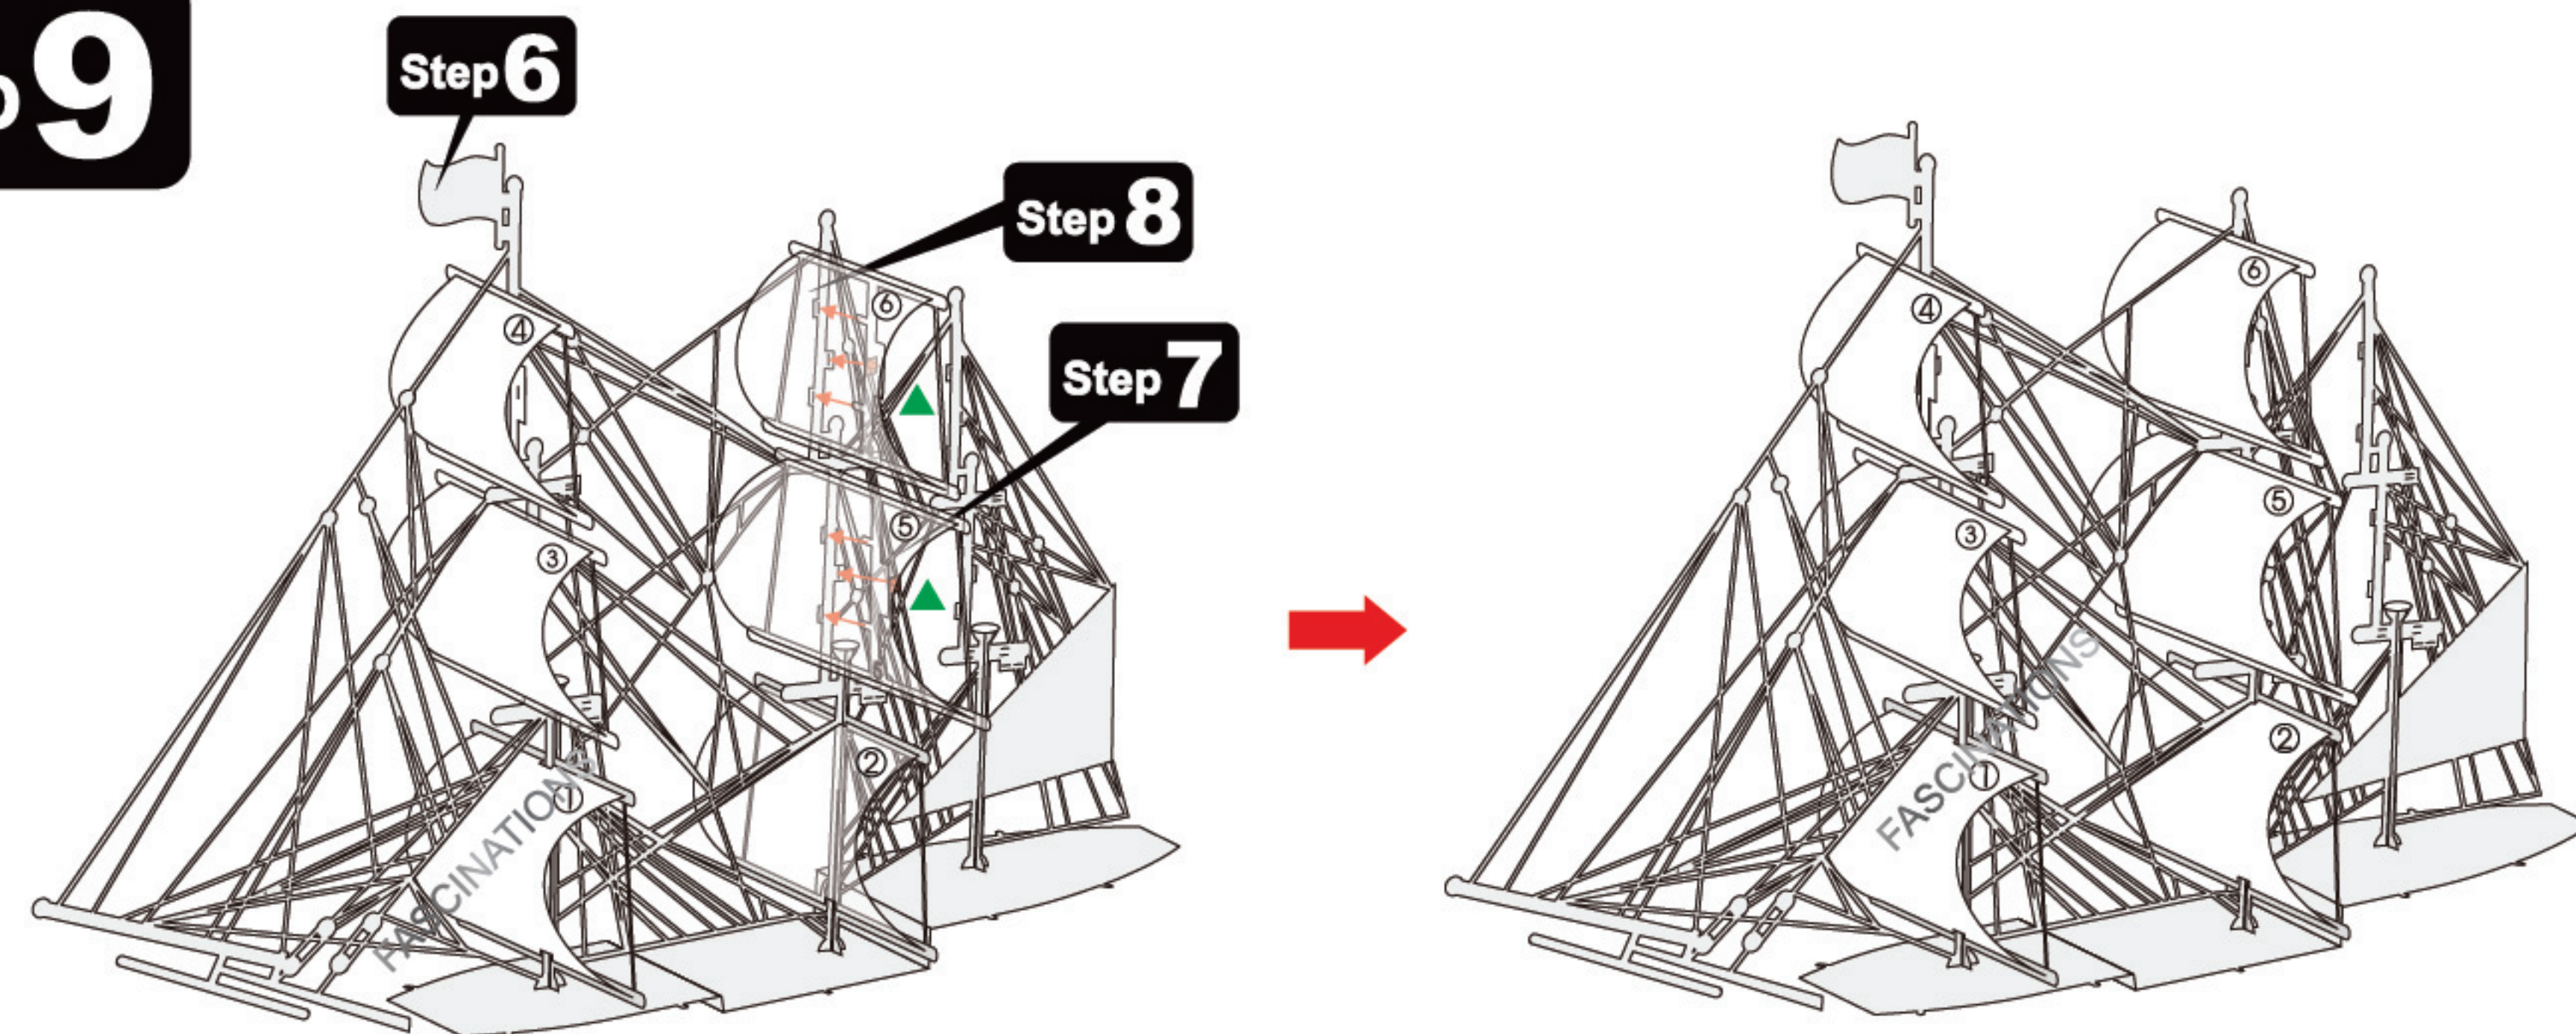


Step 10

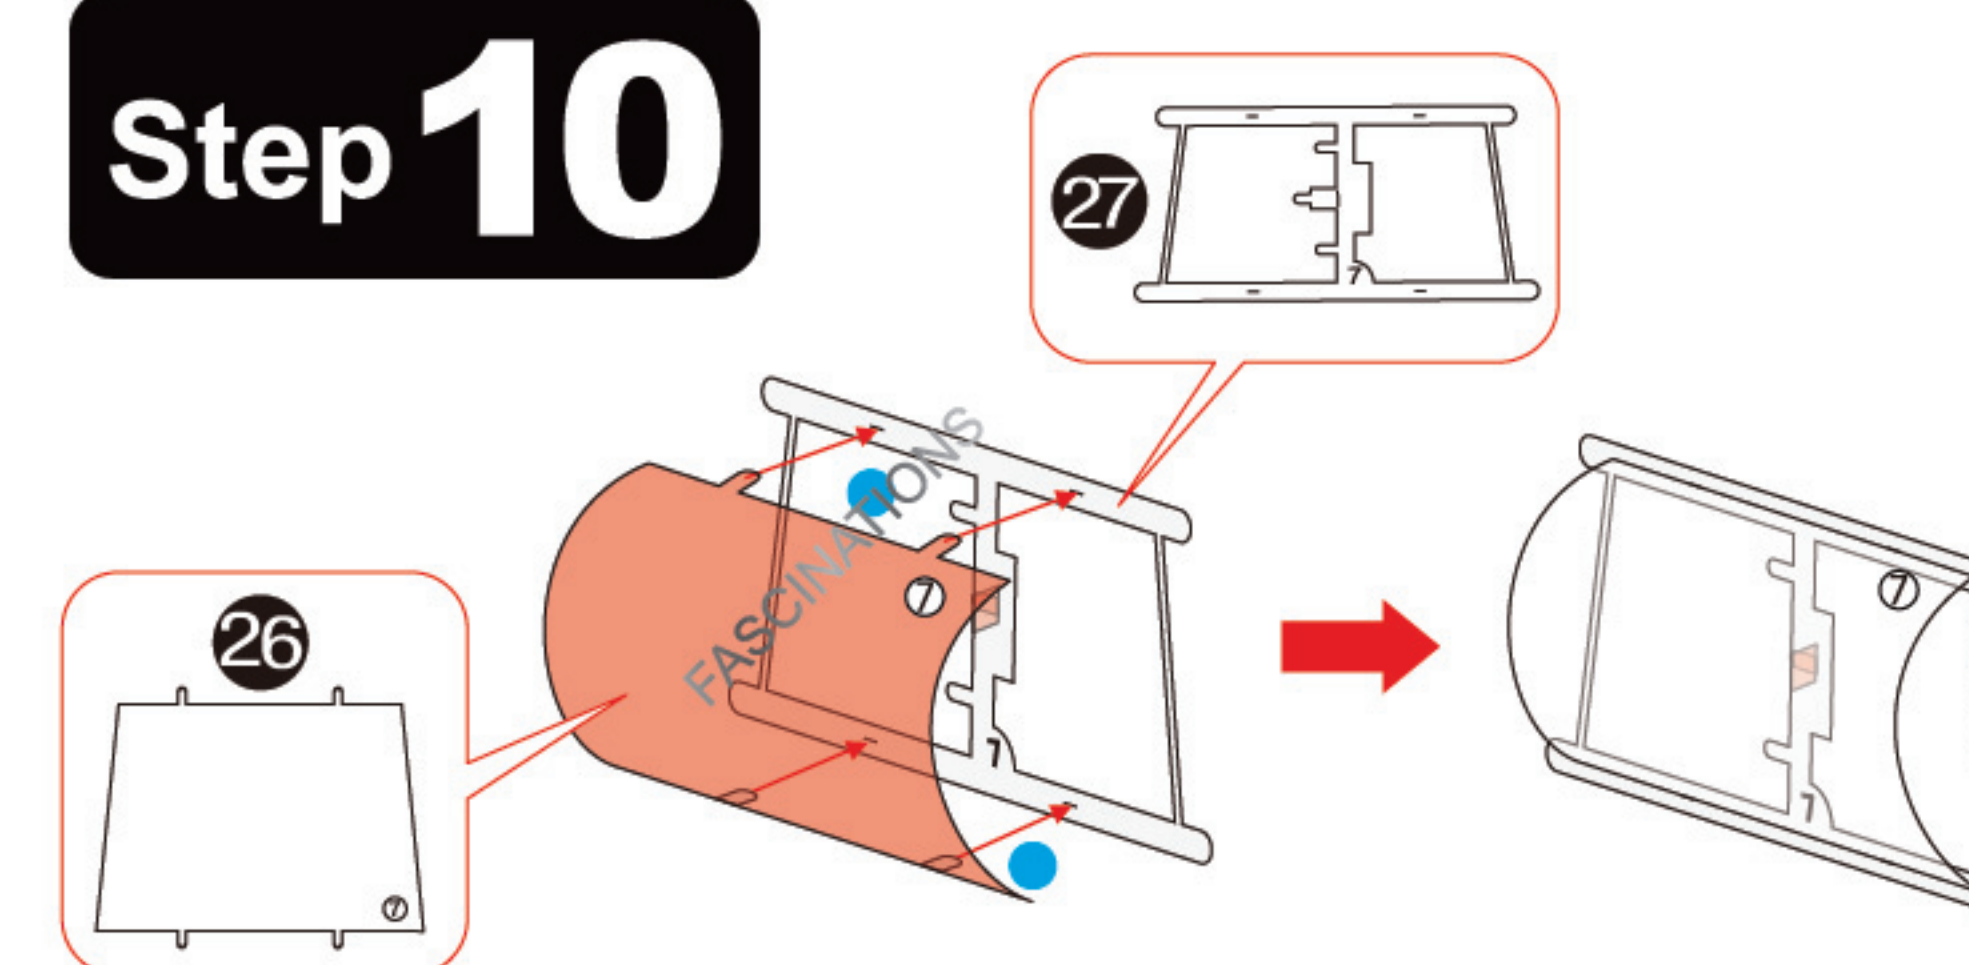


Step 11

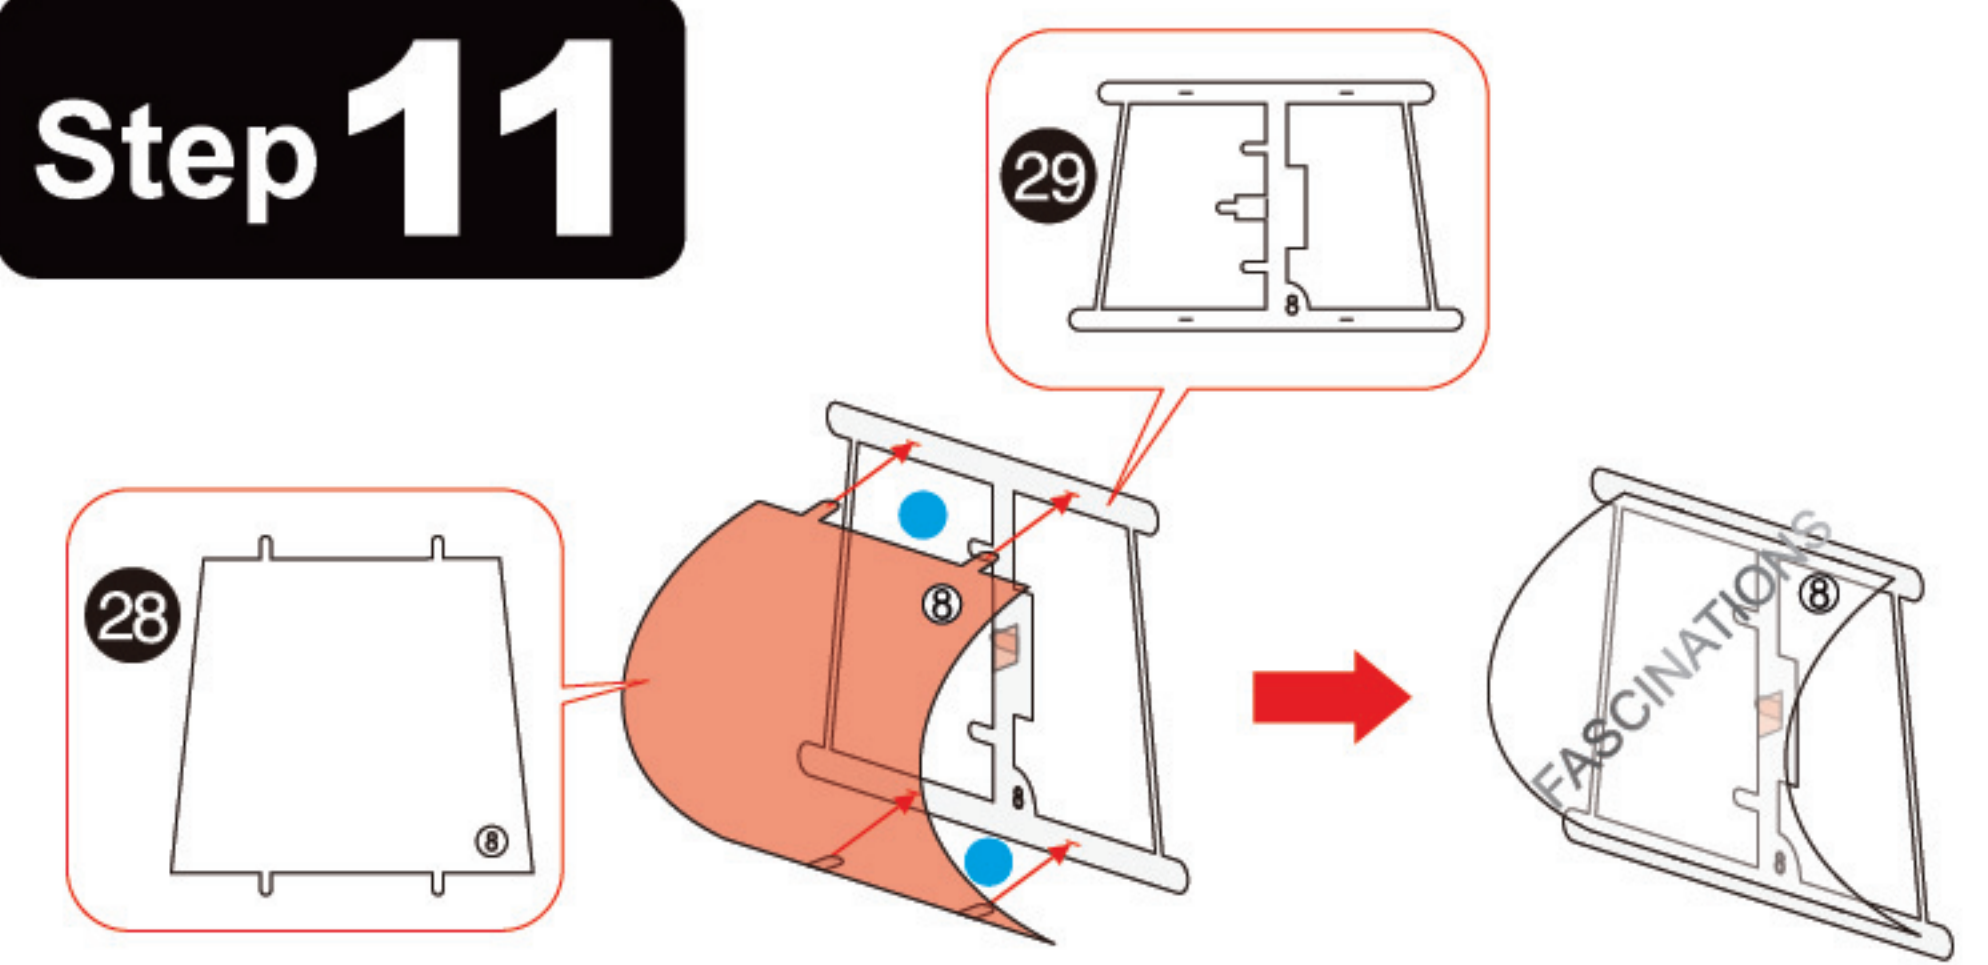


Step 12

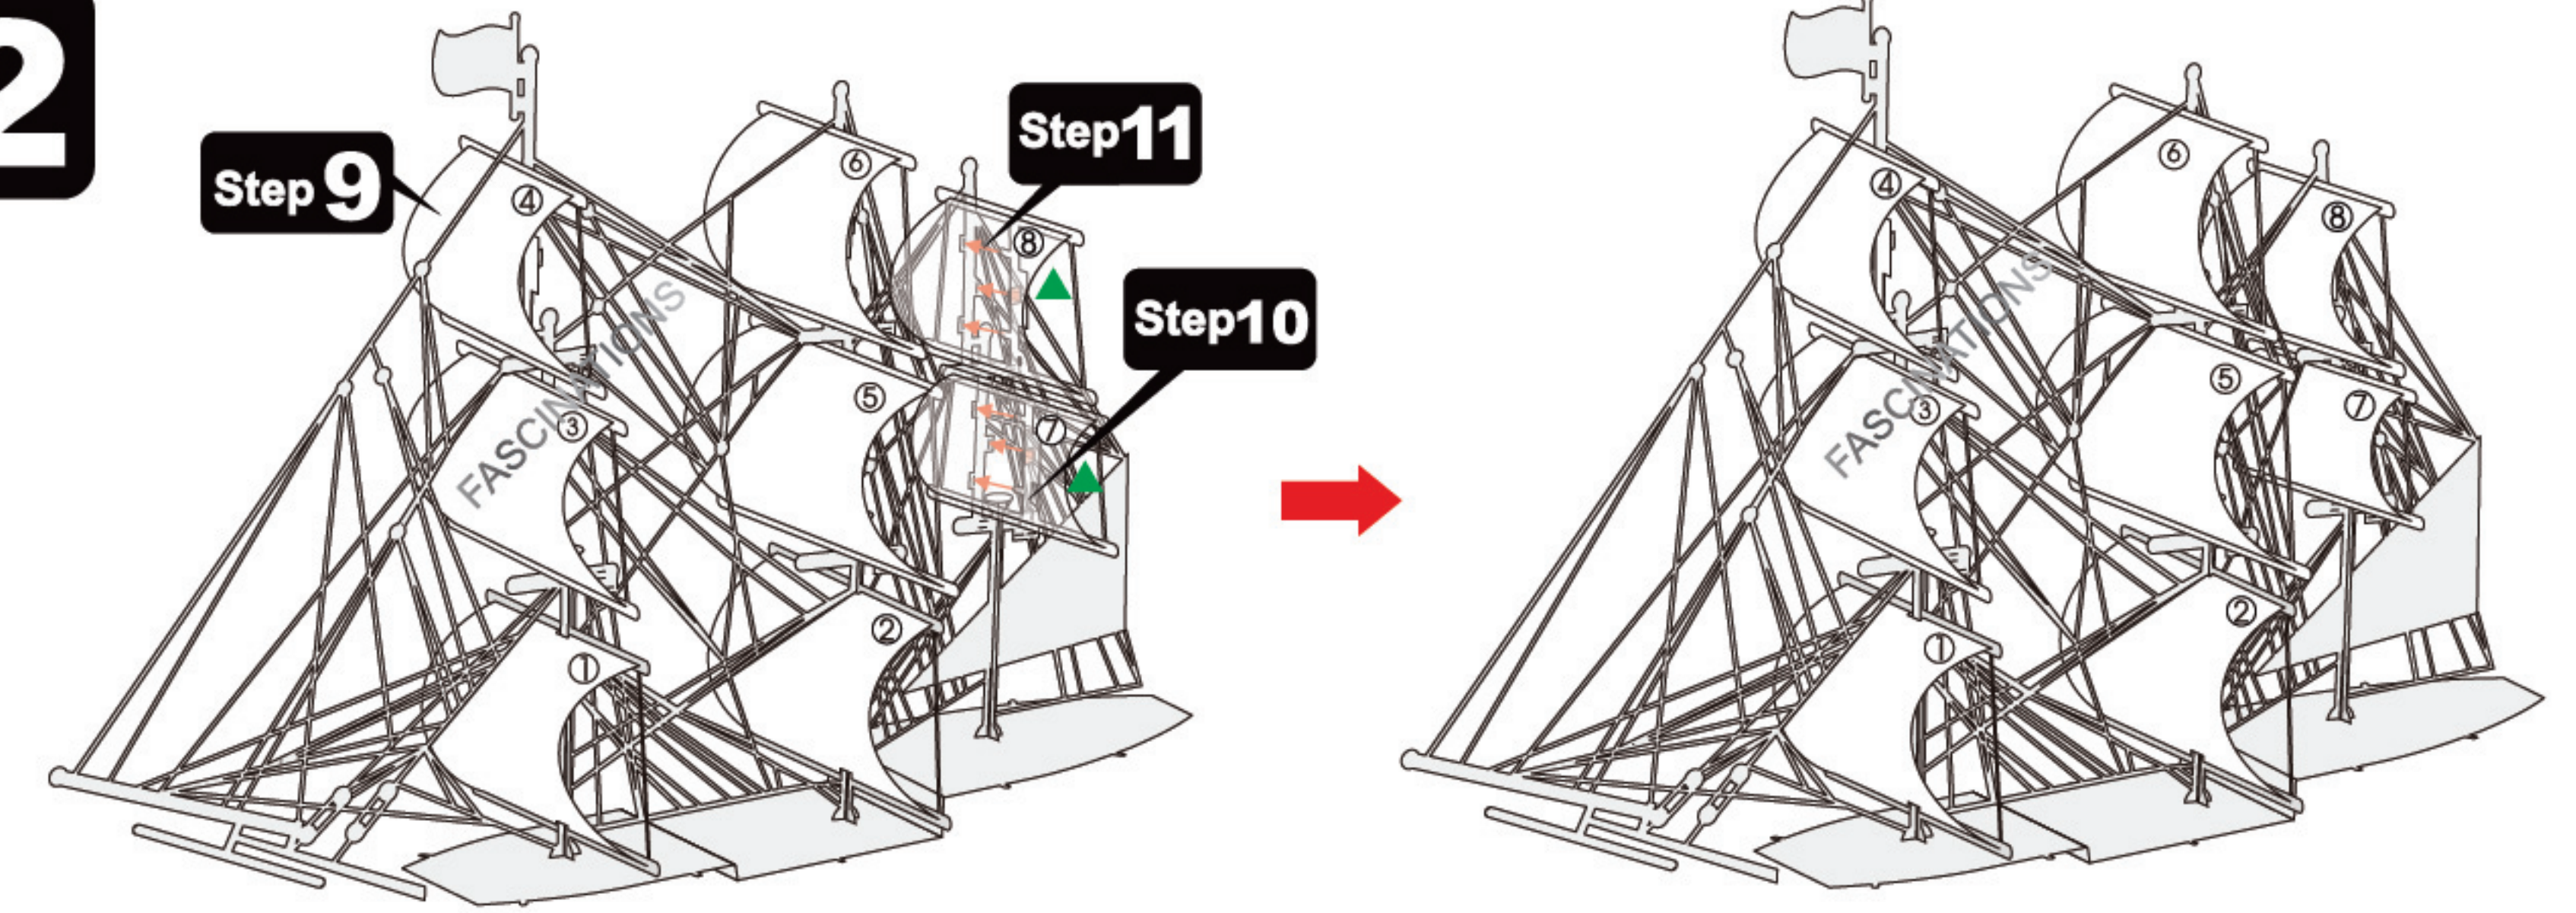


Step 13

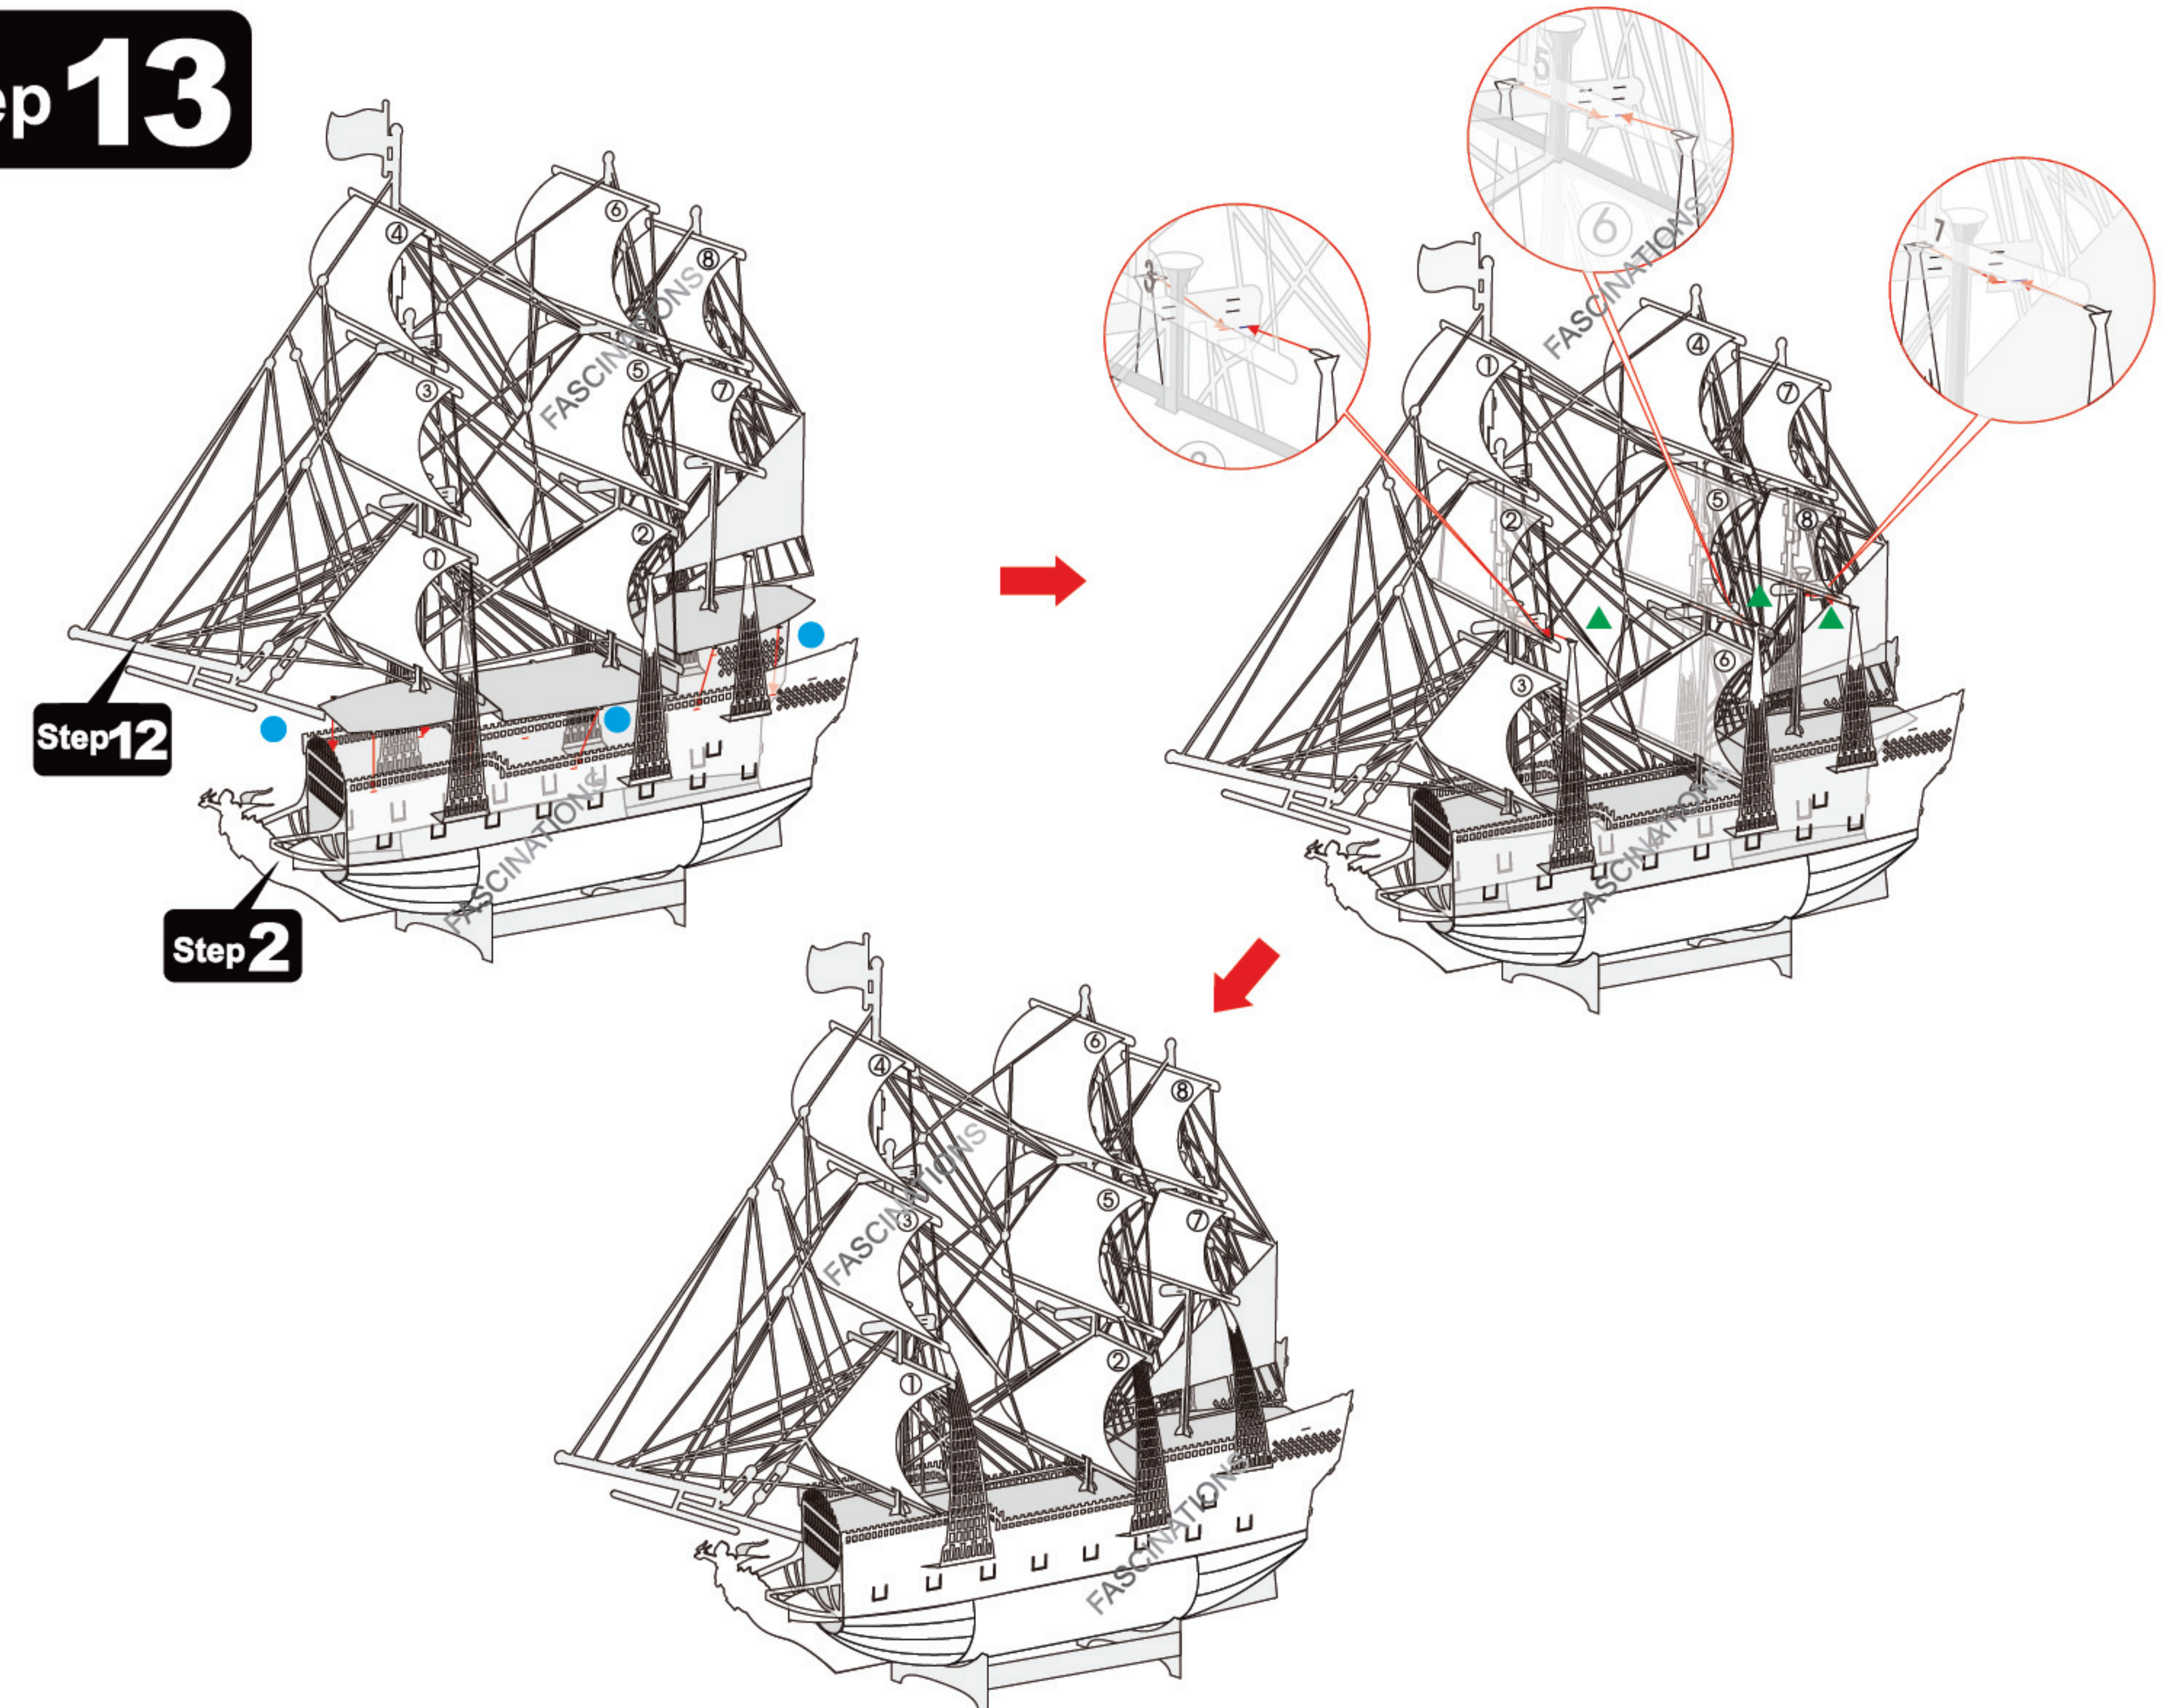



Step 14

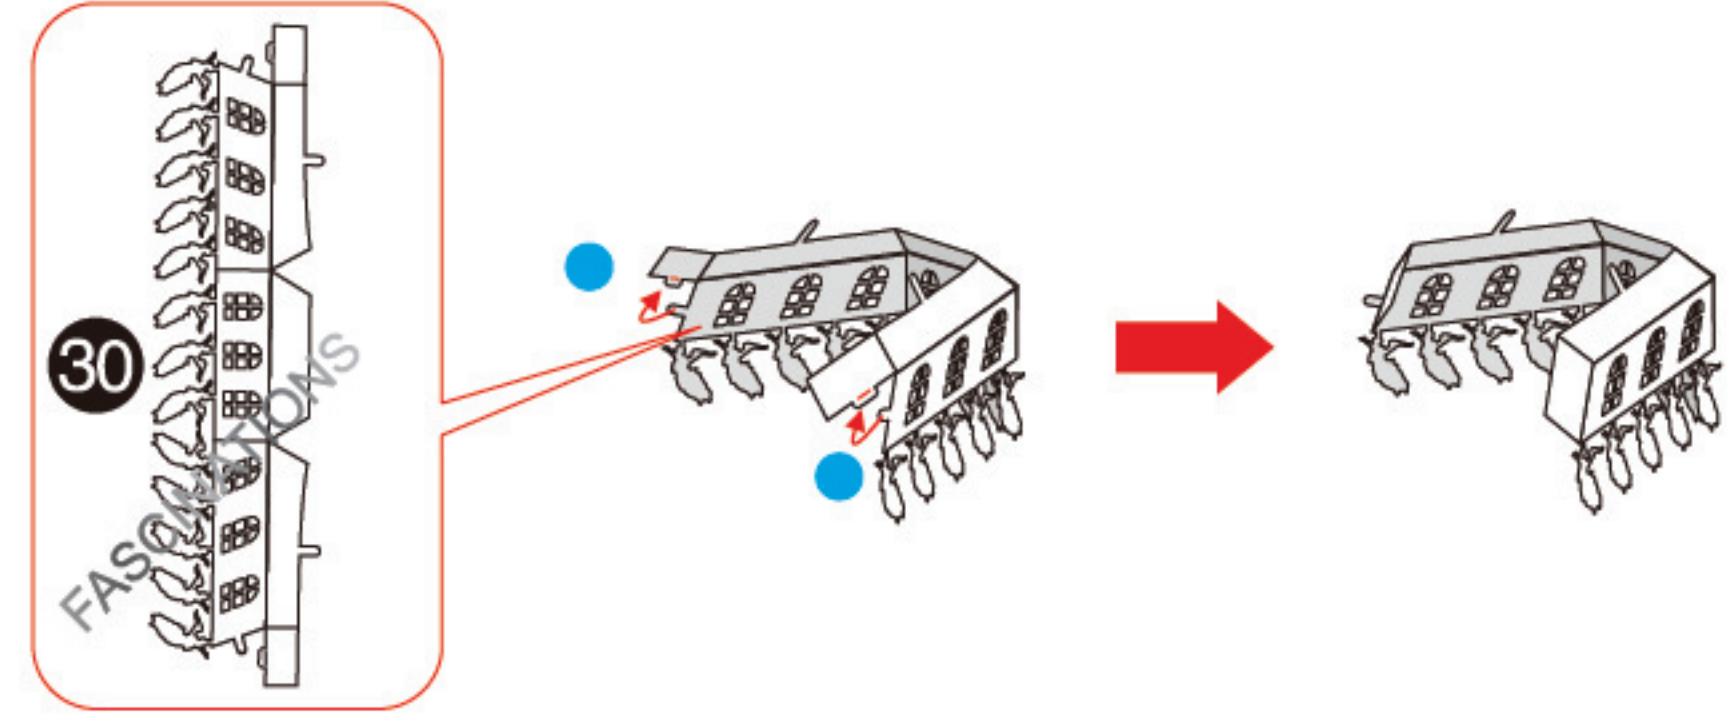

Step 15

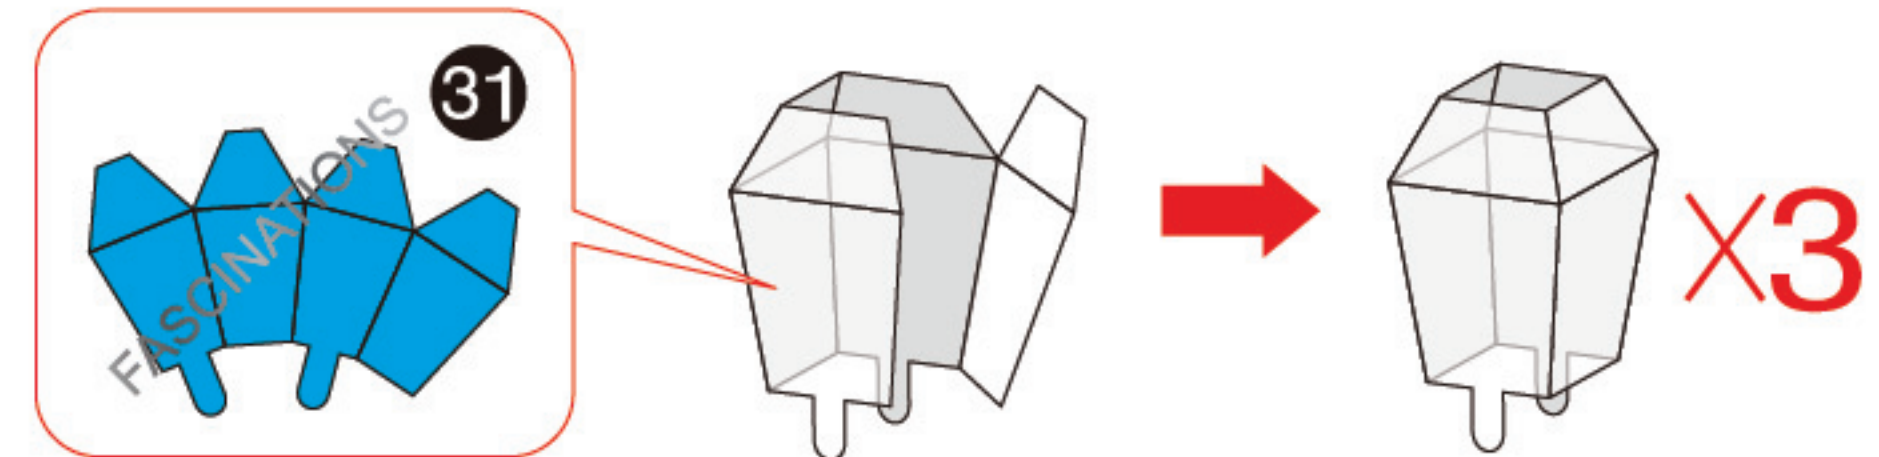

Step 16

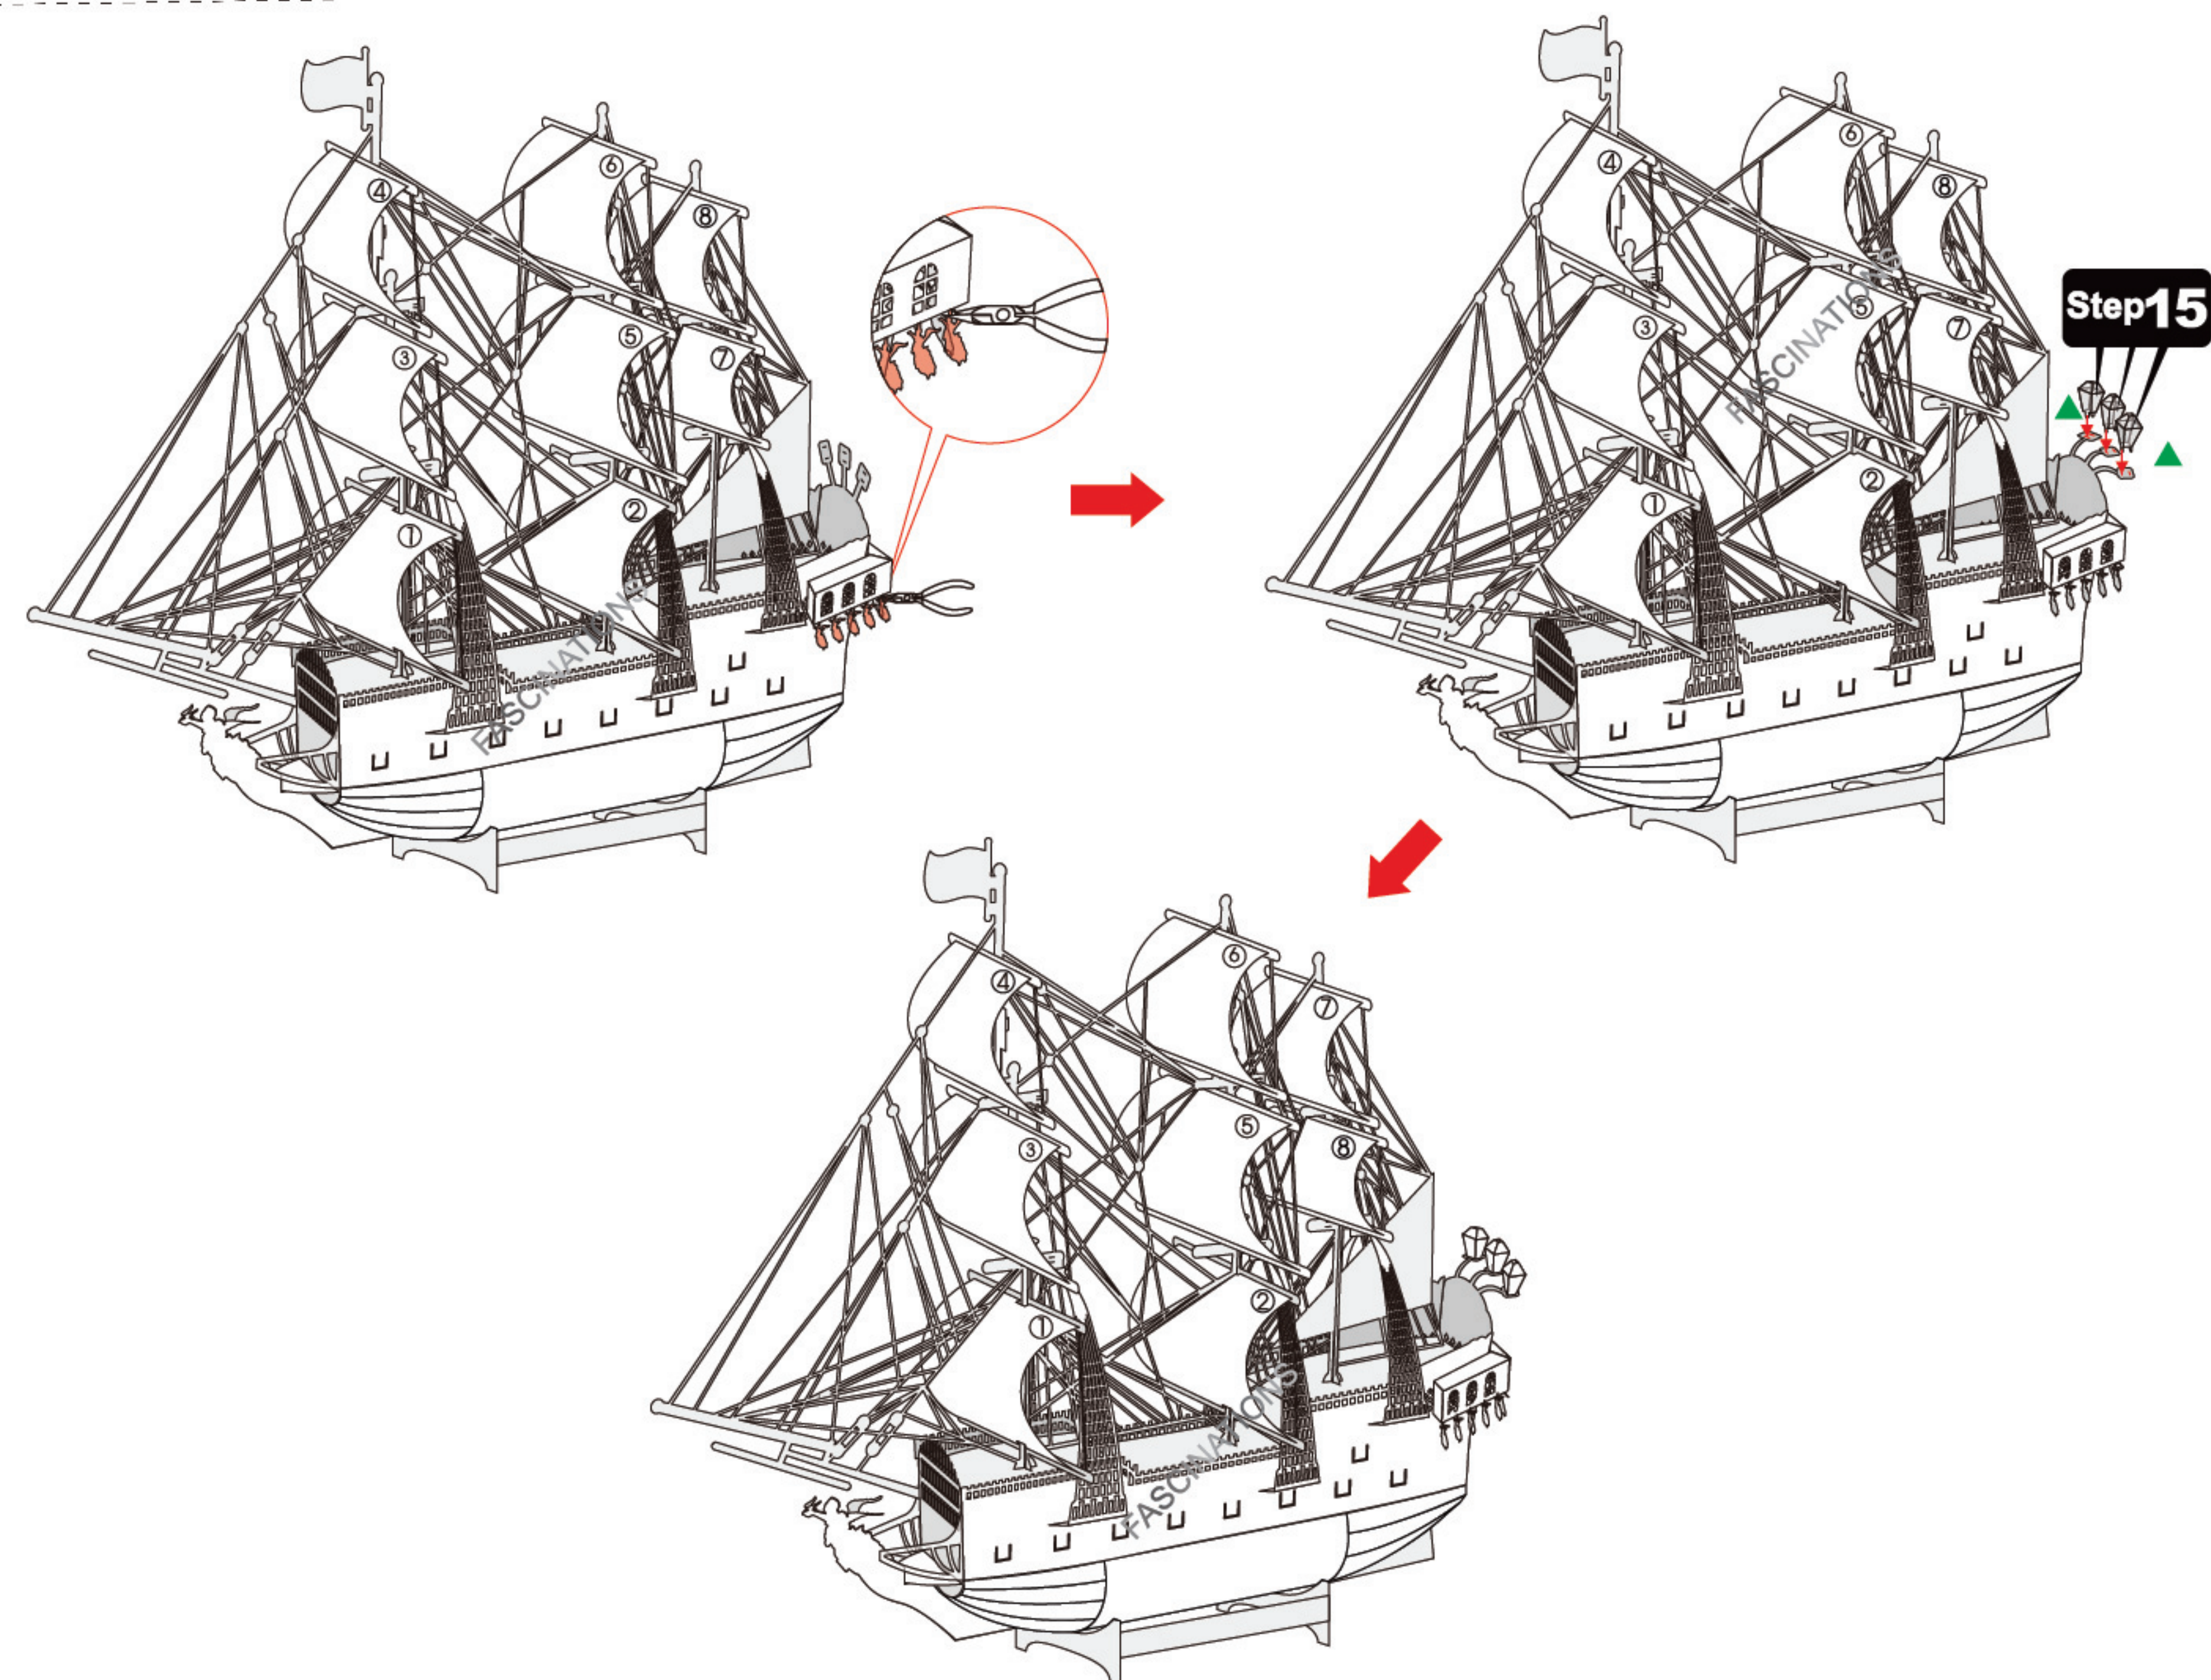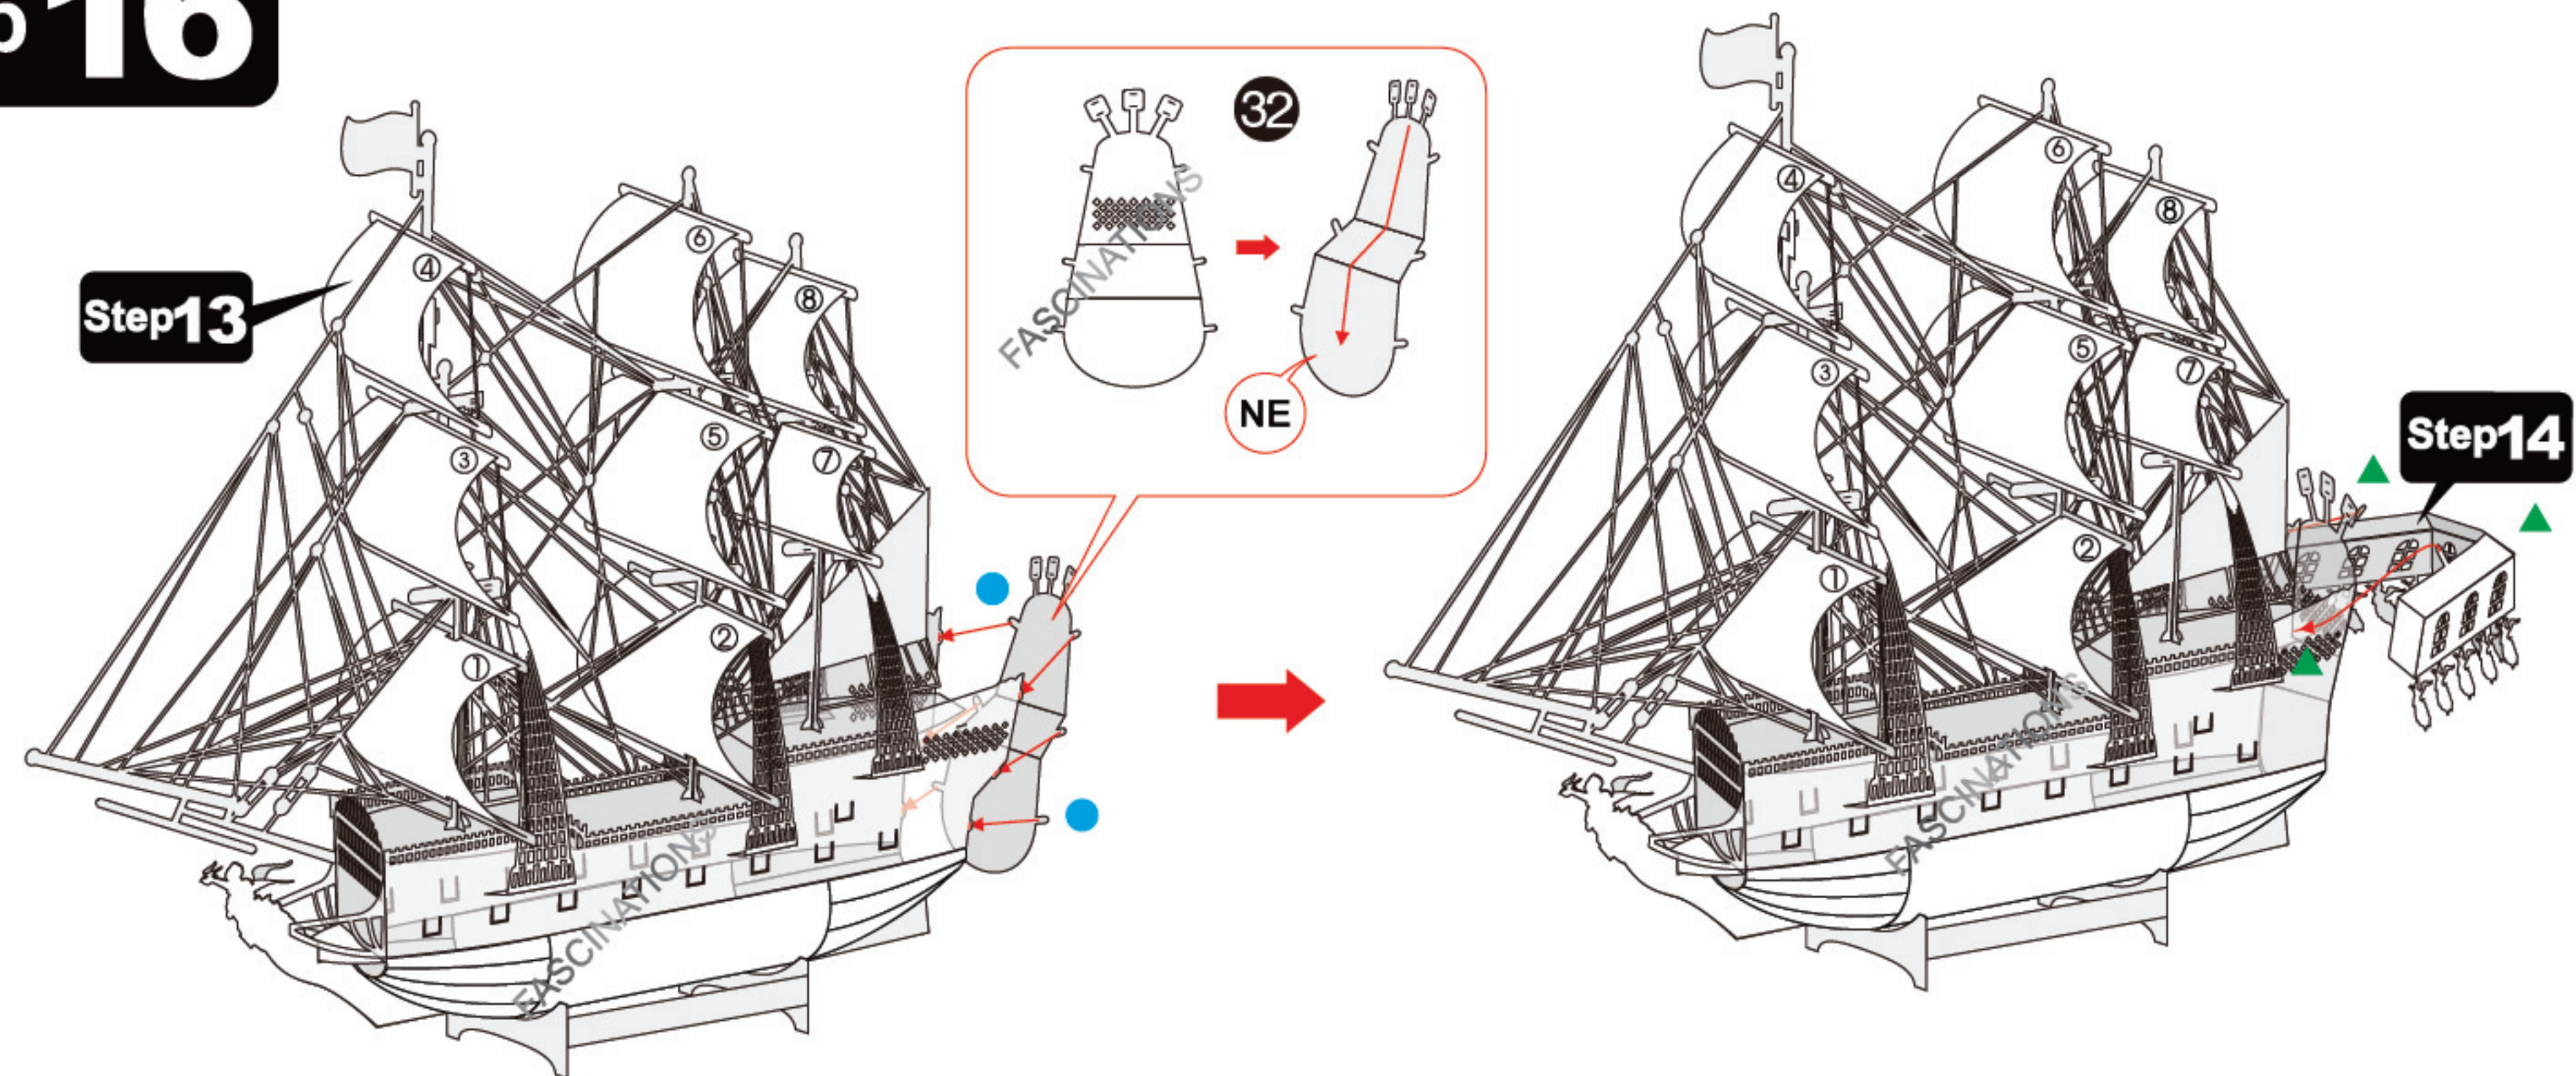

Step 17

