



METAL SHEETS

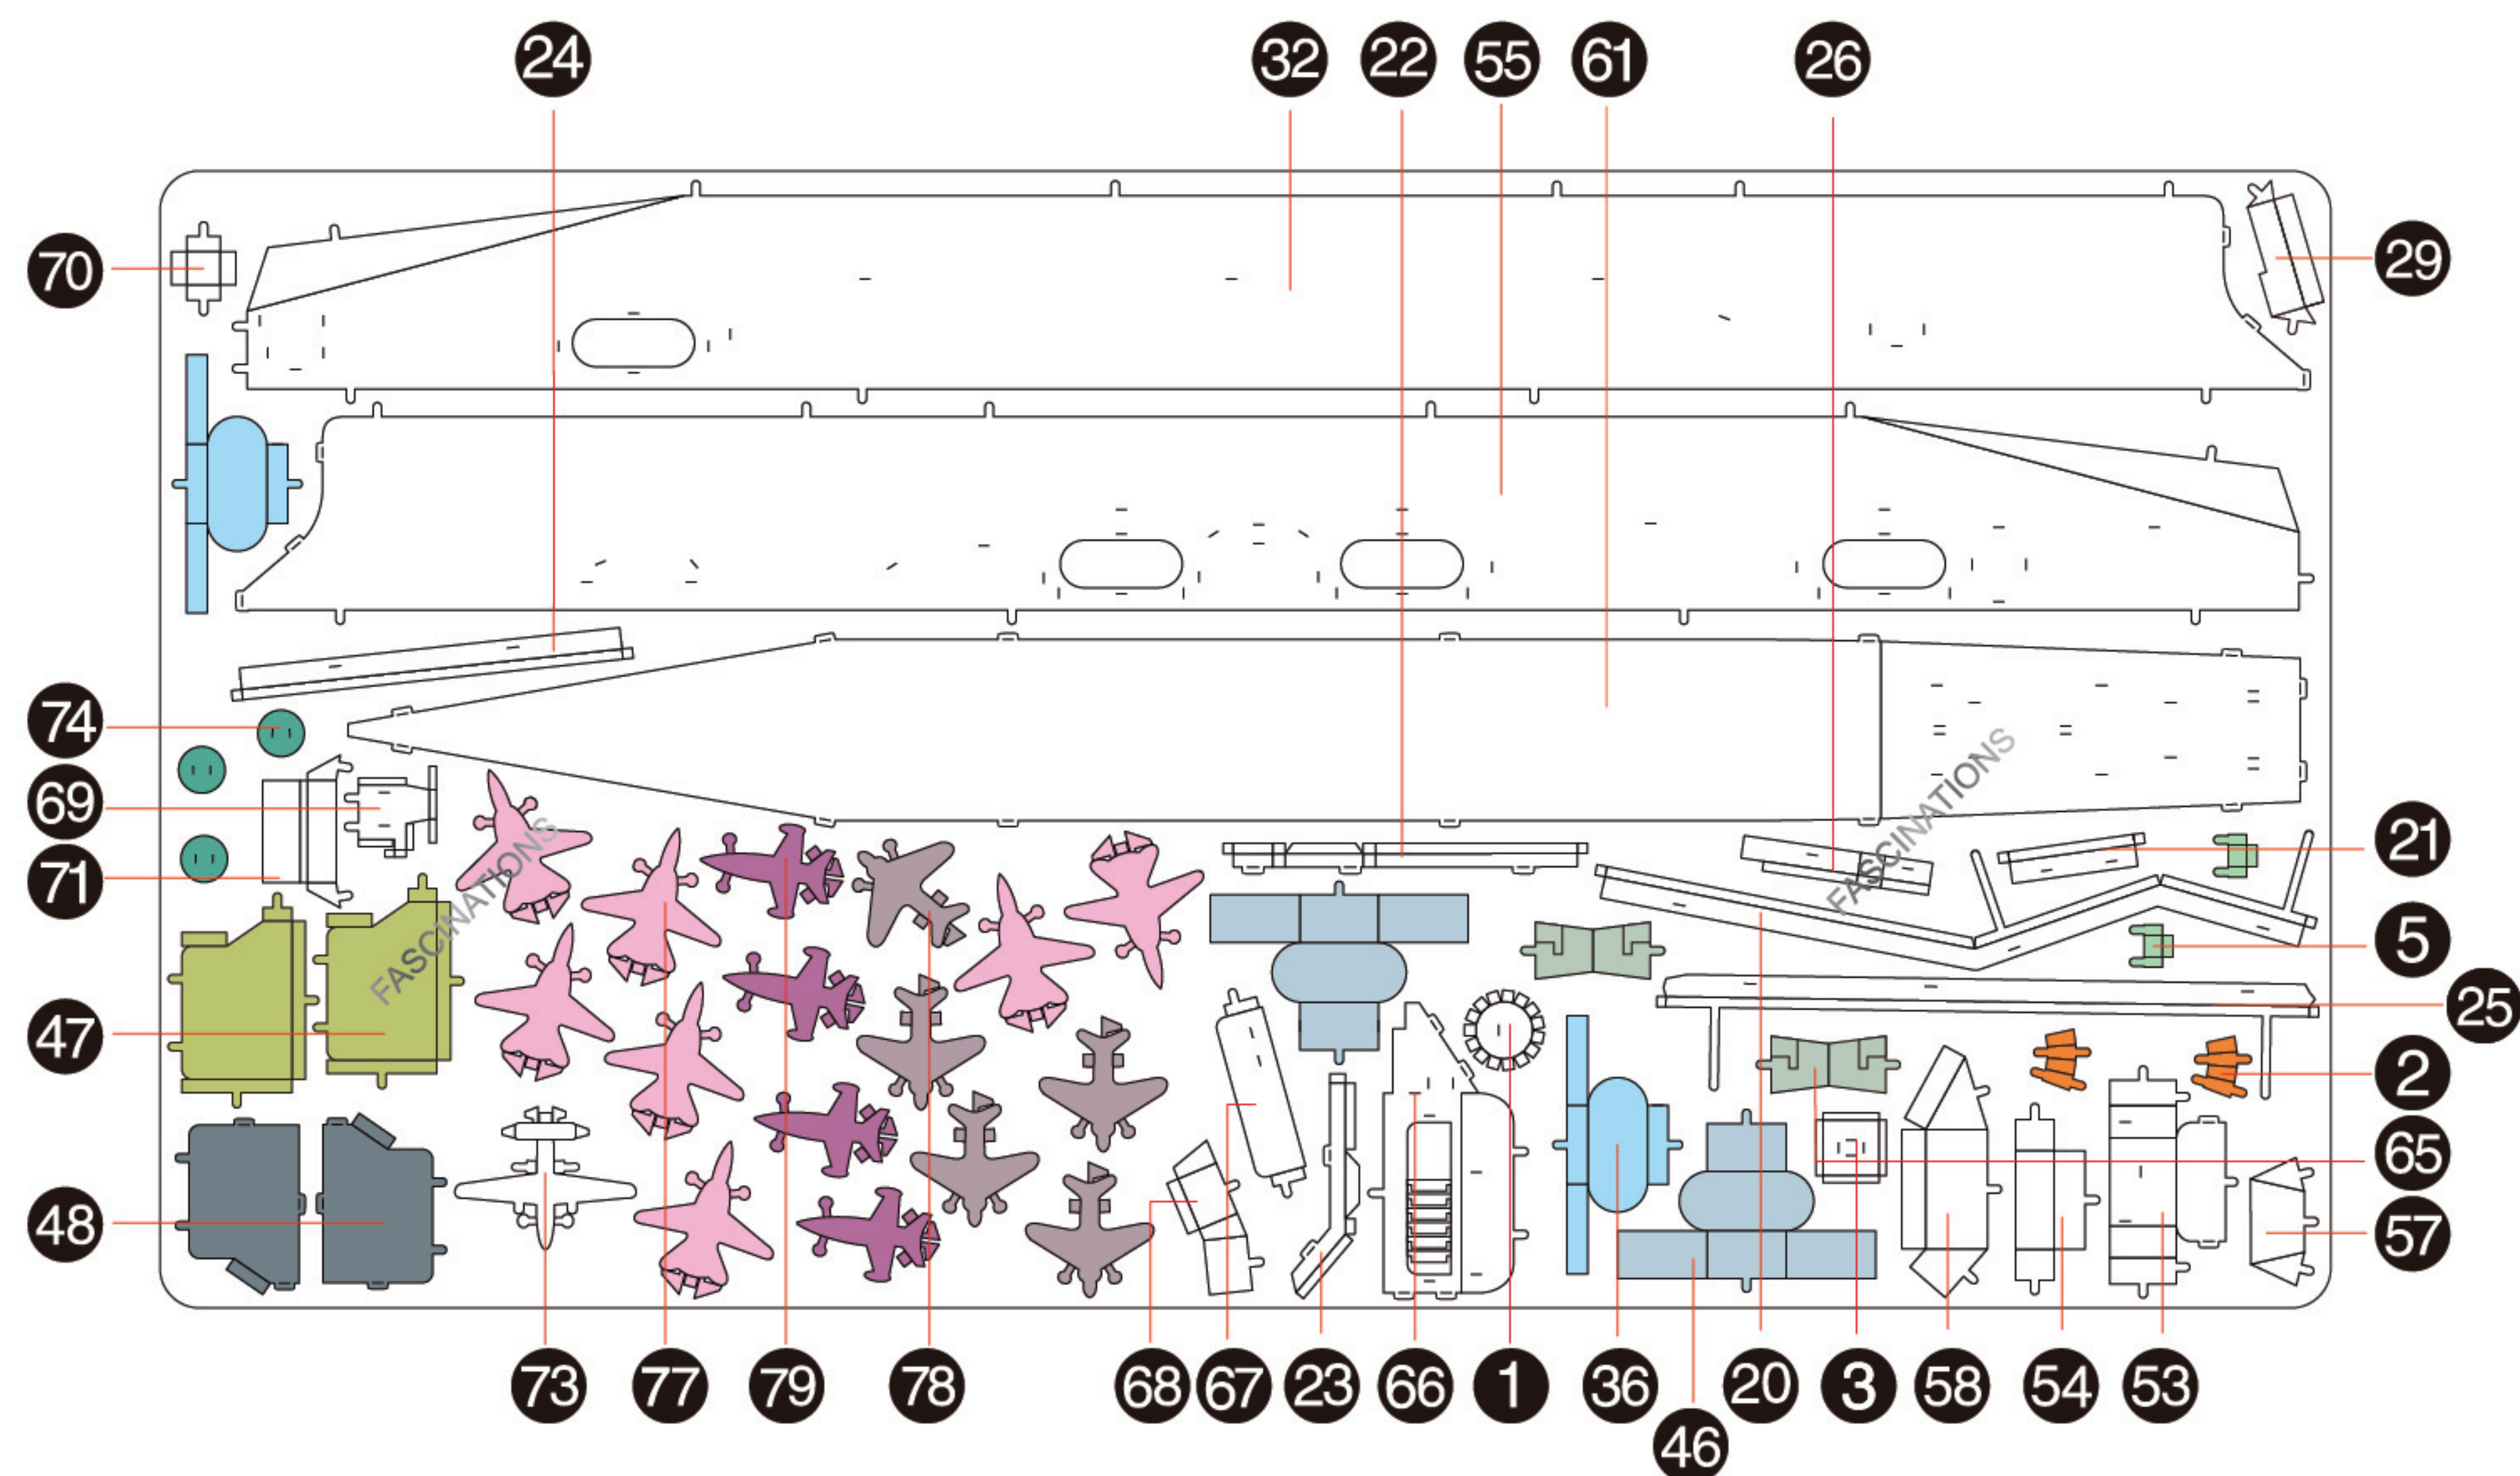

In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed

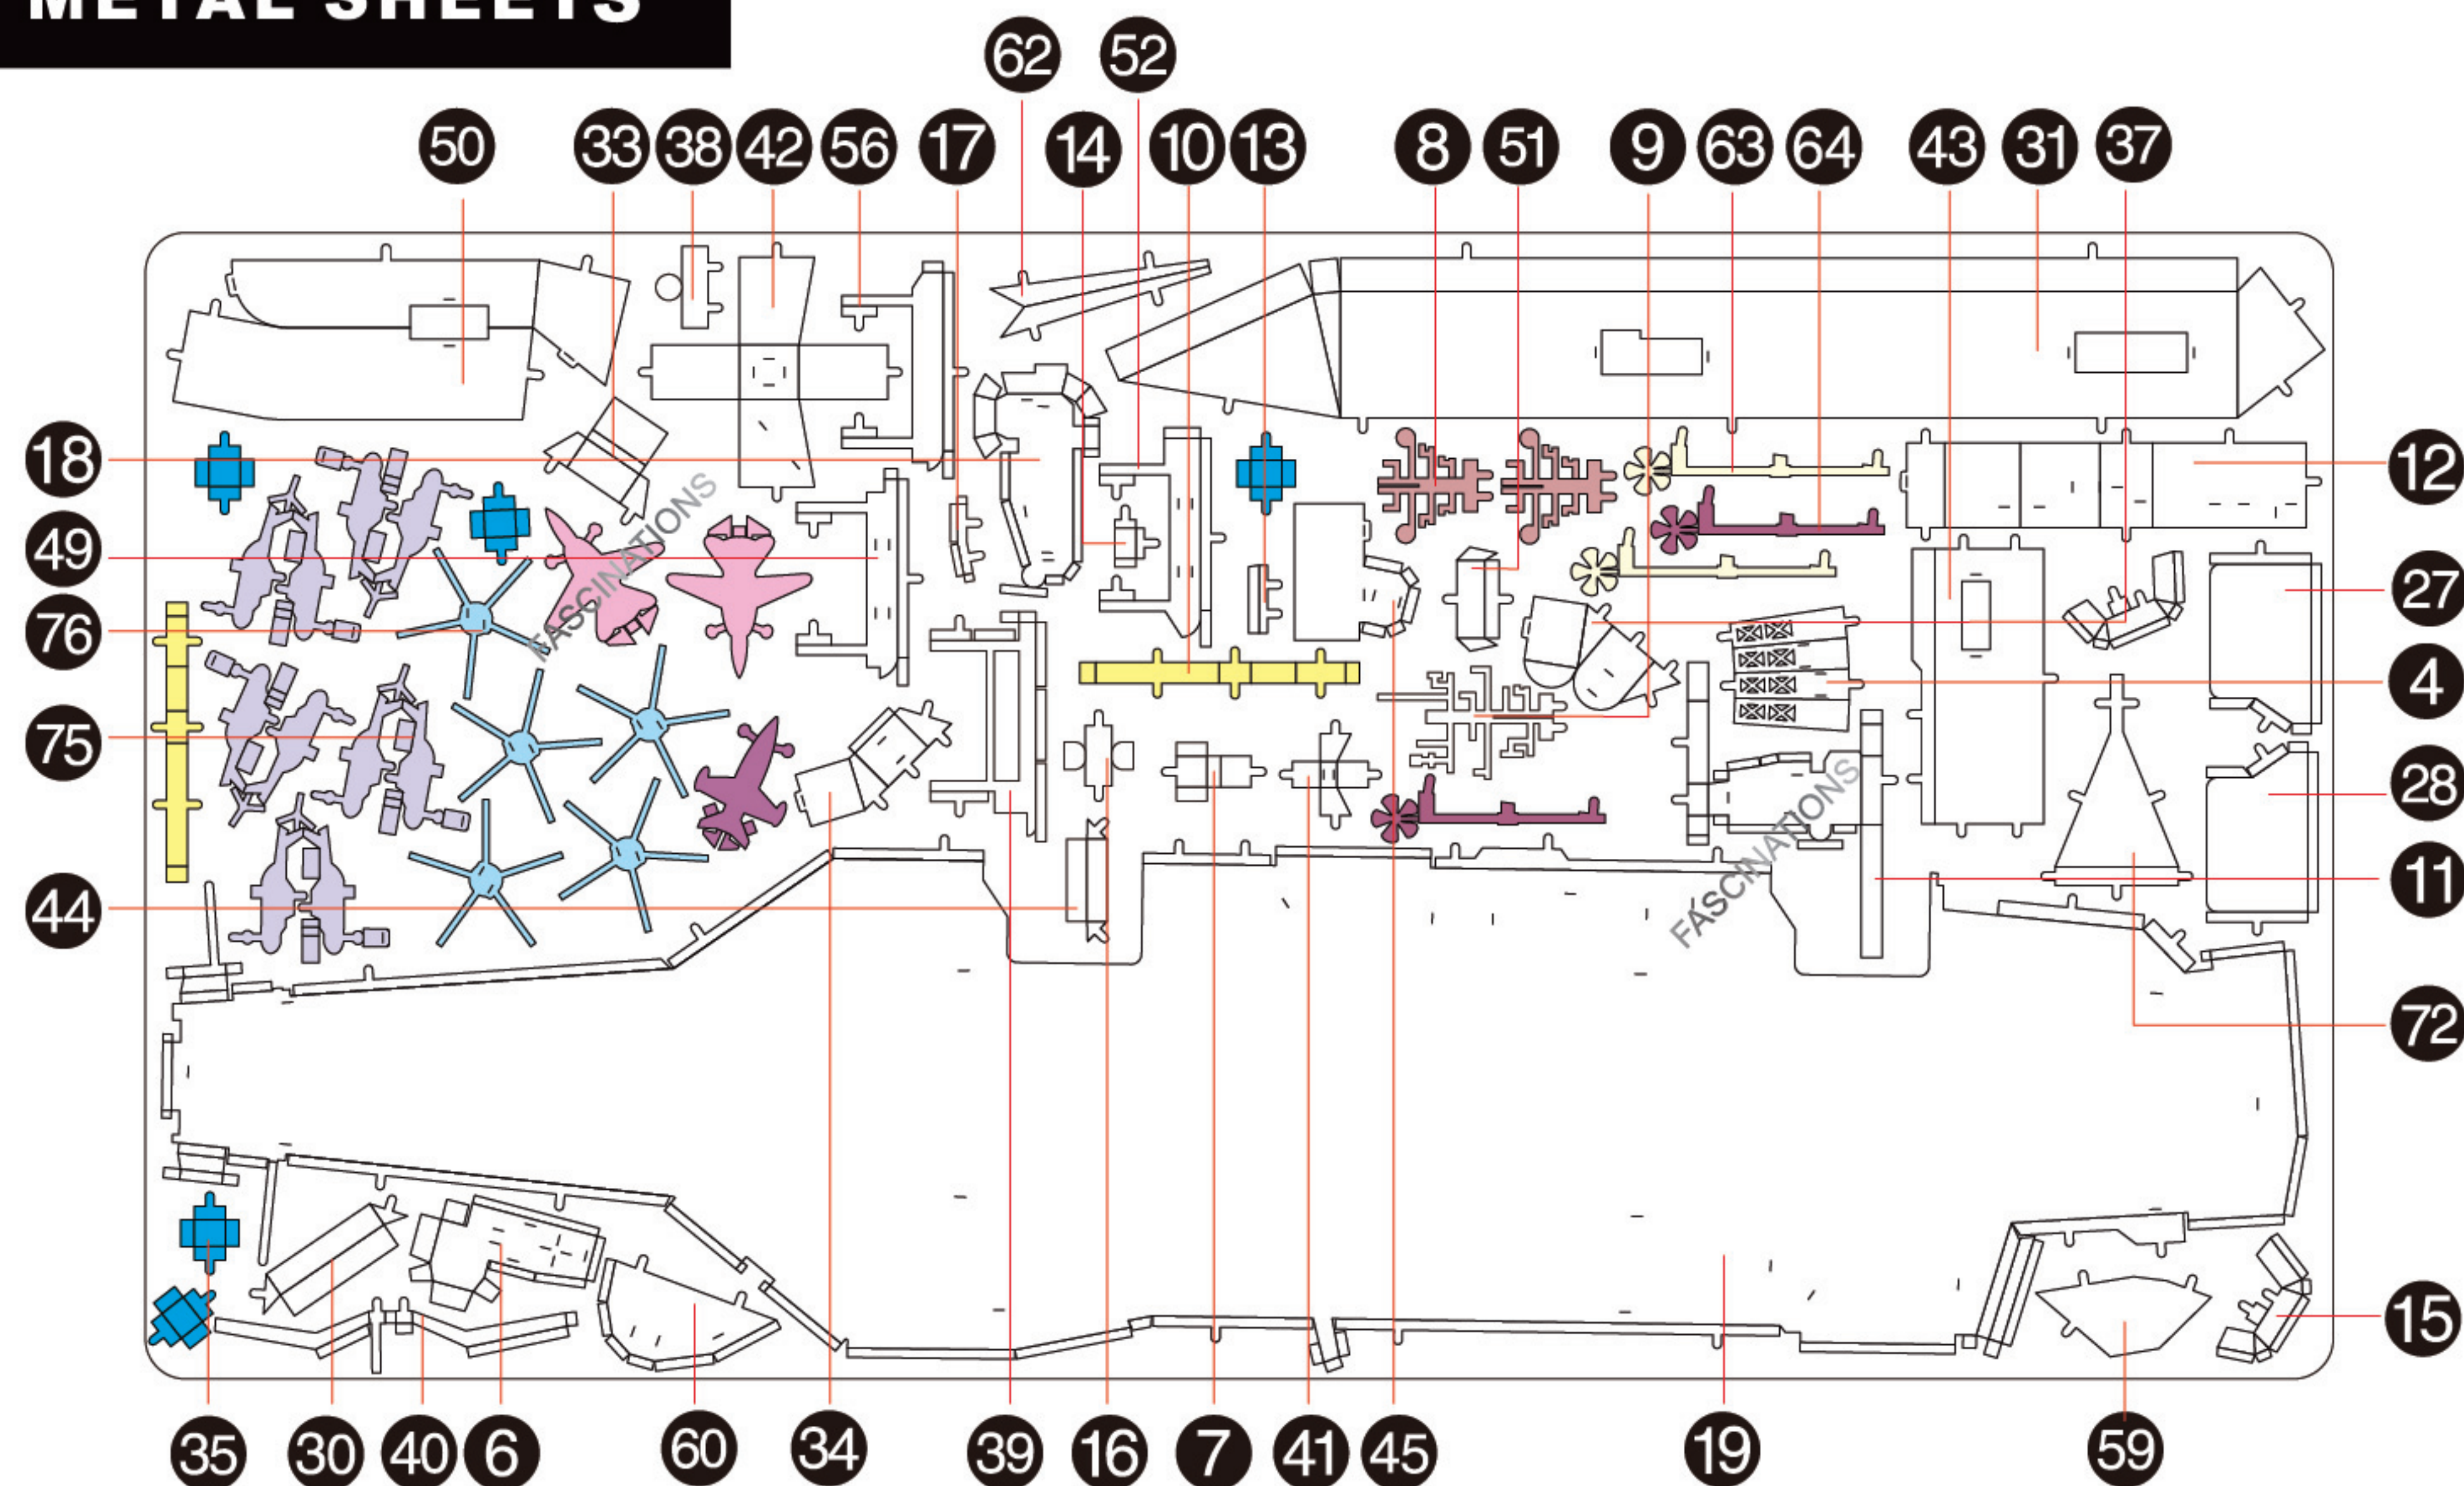


Go to www.metalearth.com/360/icx022 to see the zoomable PDF version of this instruction sheet


ICX022



USS Theodore Roosevelt Carrier

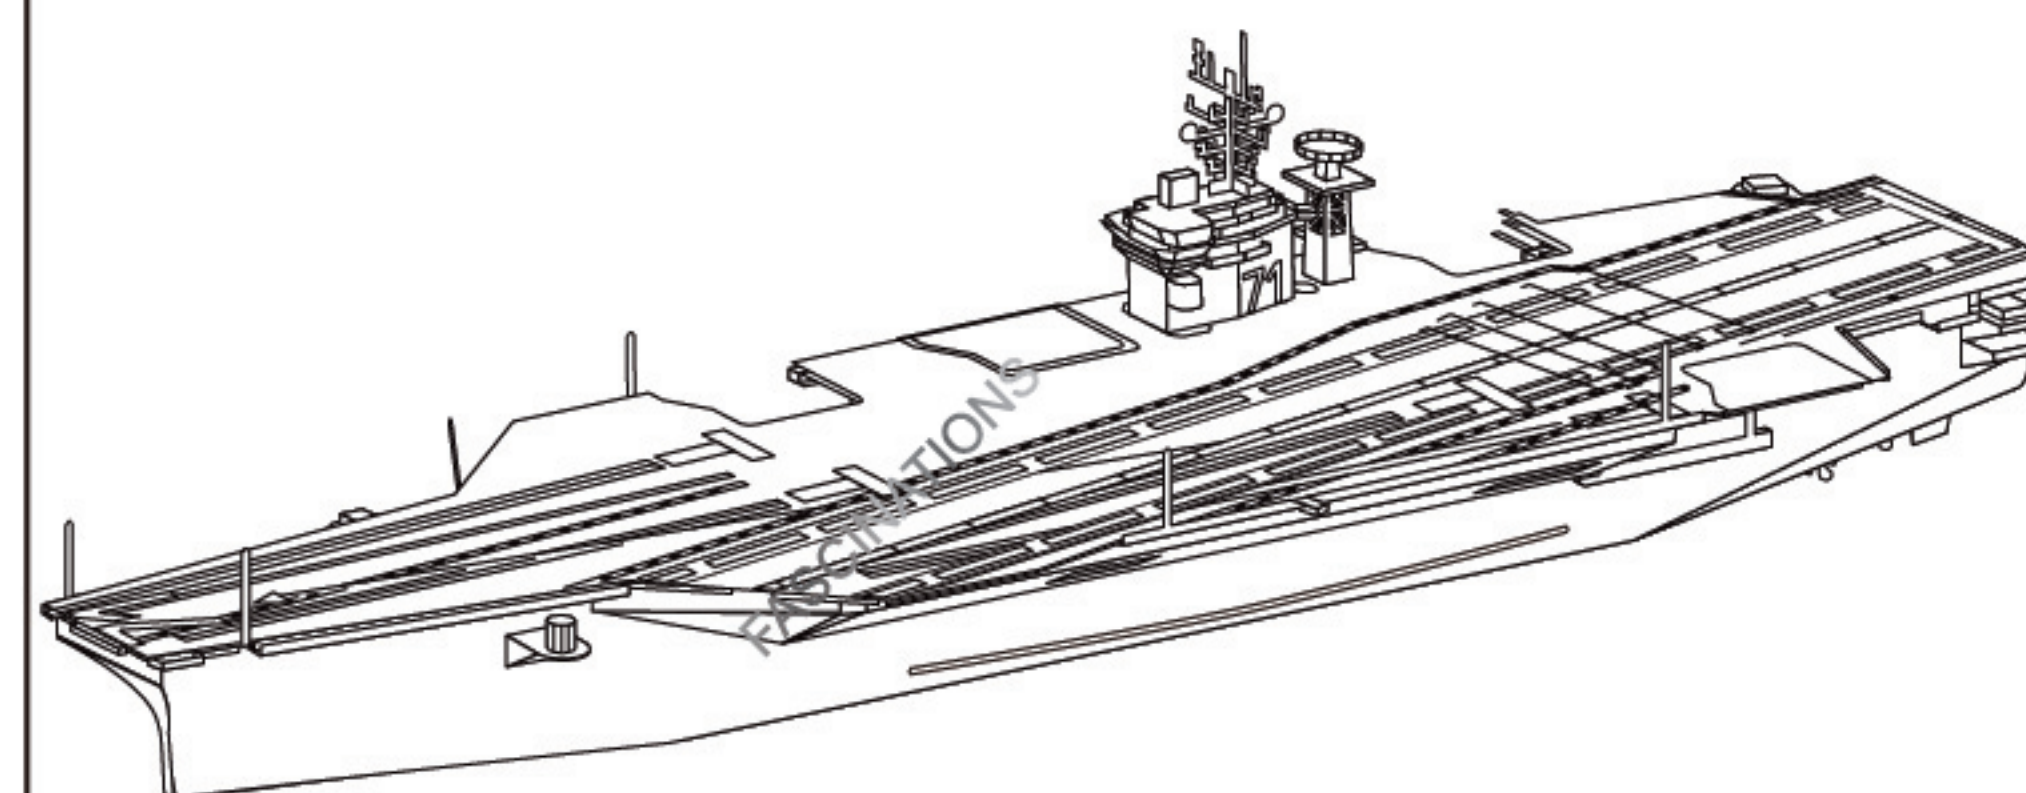

TO CREATE THE BEST CONNECTIONS

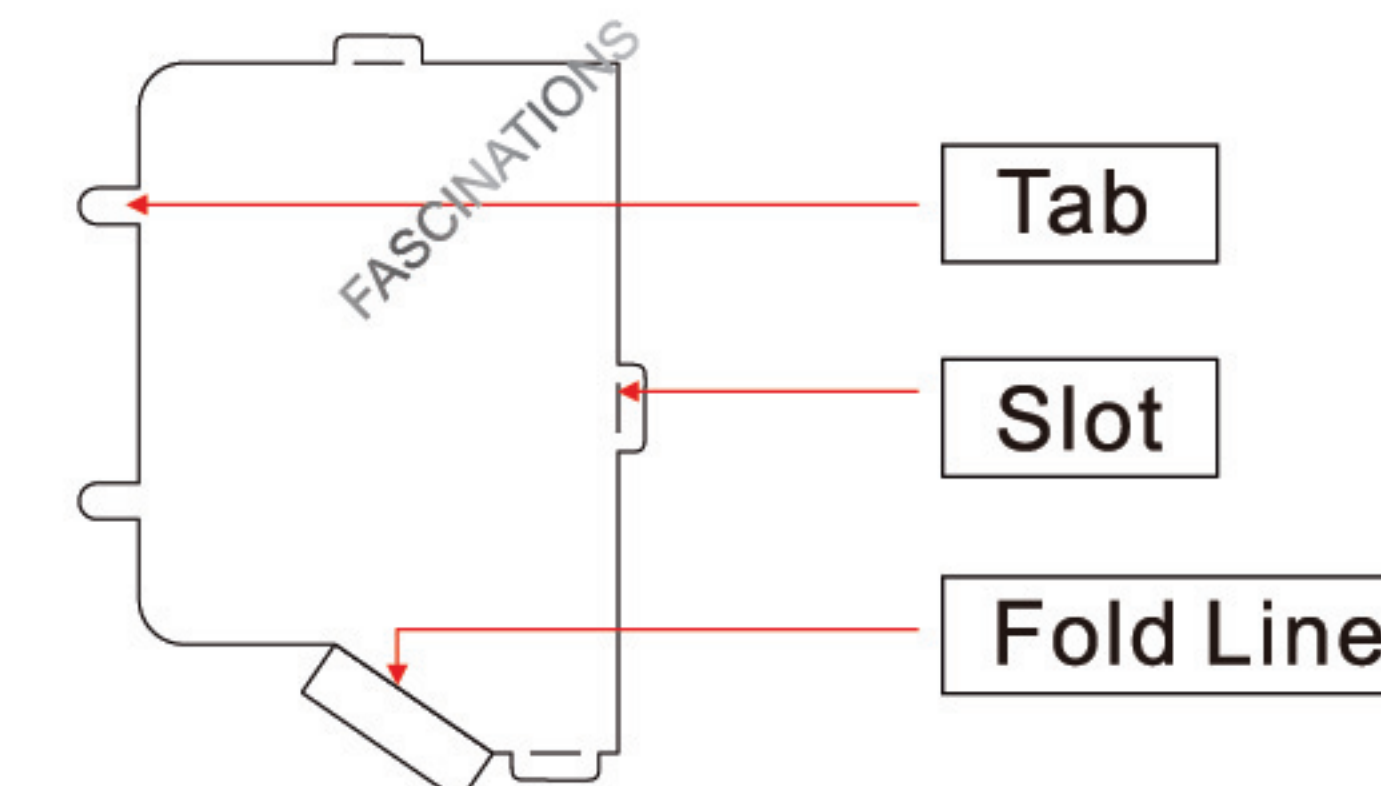

Legends:

- Engraved side
- Non-engraved side
- Attention point
- Insert tab and bend 90 degrees
- Insert tab and twist 90 degrees

Assembly tip:


If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish

Recommended tools:

-Wire cutters: helpful for taking parts from the metal sheets.




-Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.

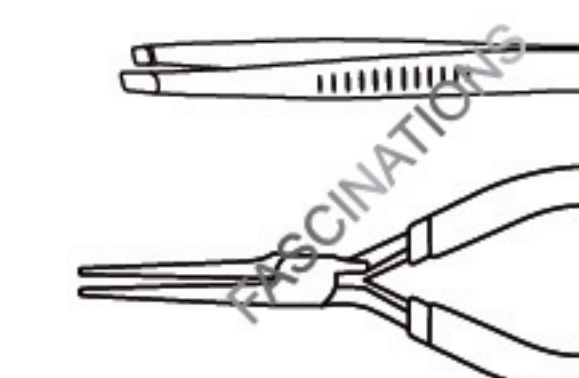


ASSEMBLY STEPS


Step 1

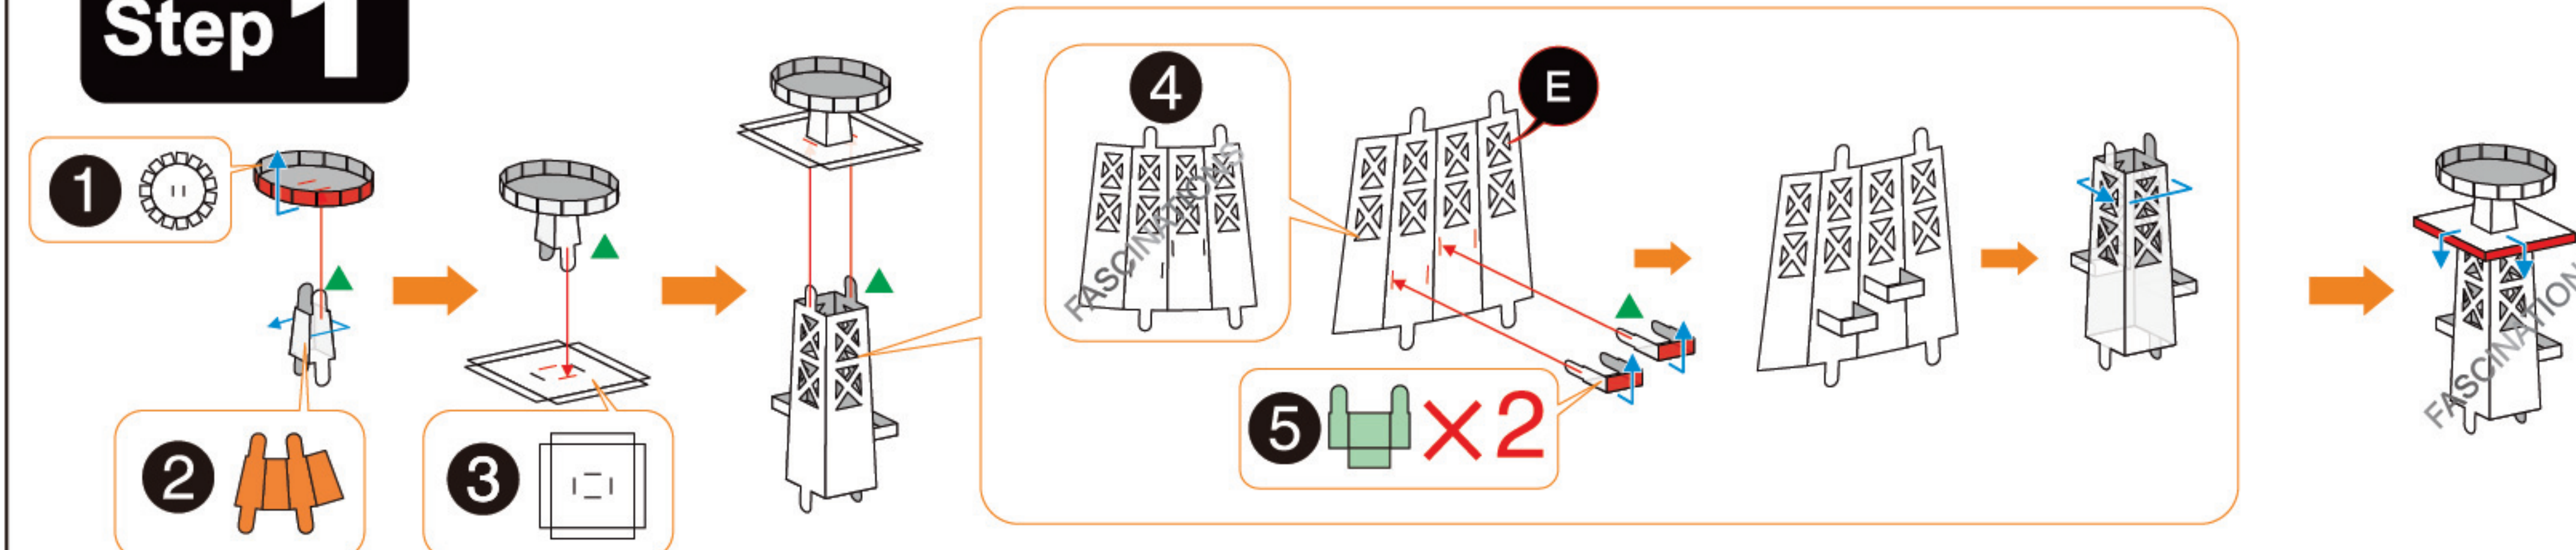


Step 2

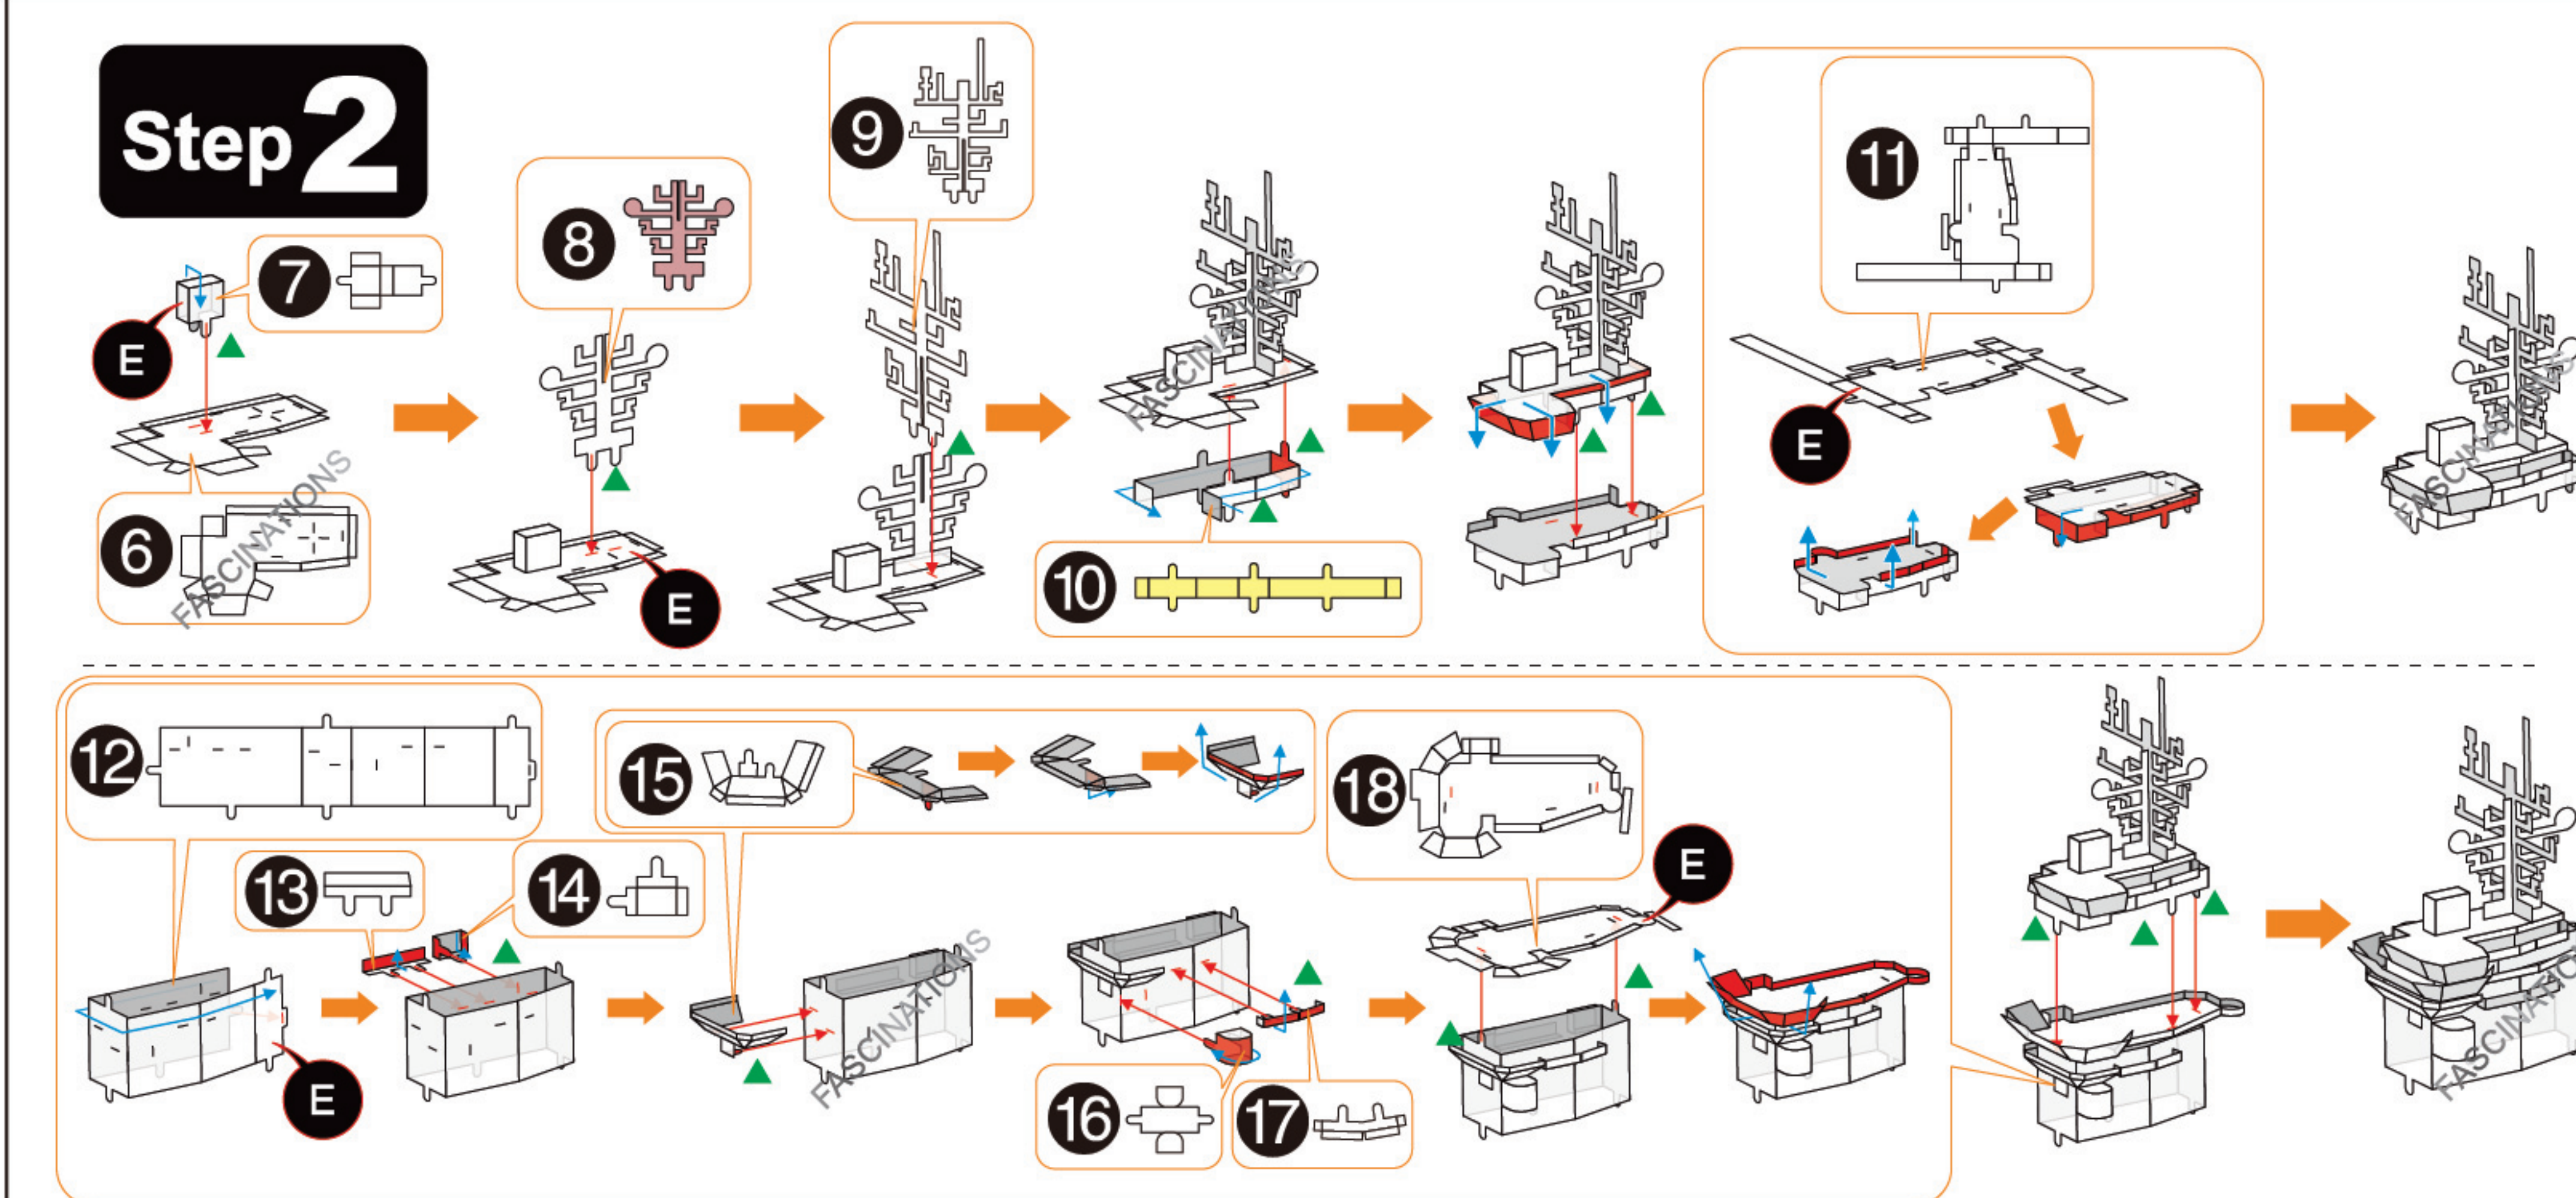


Step 3

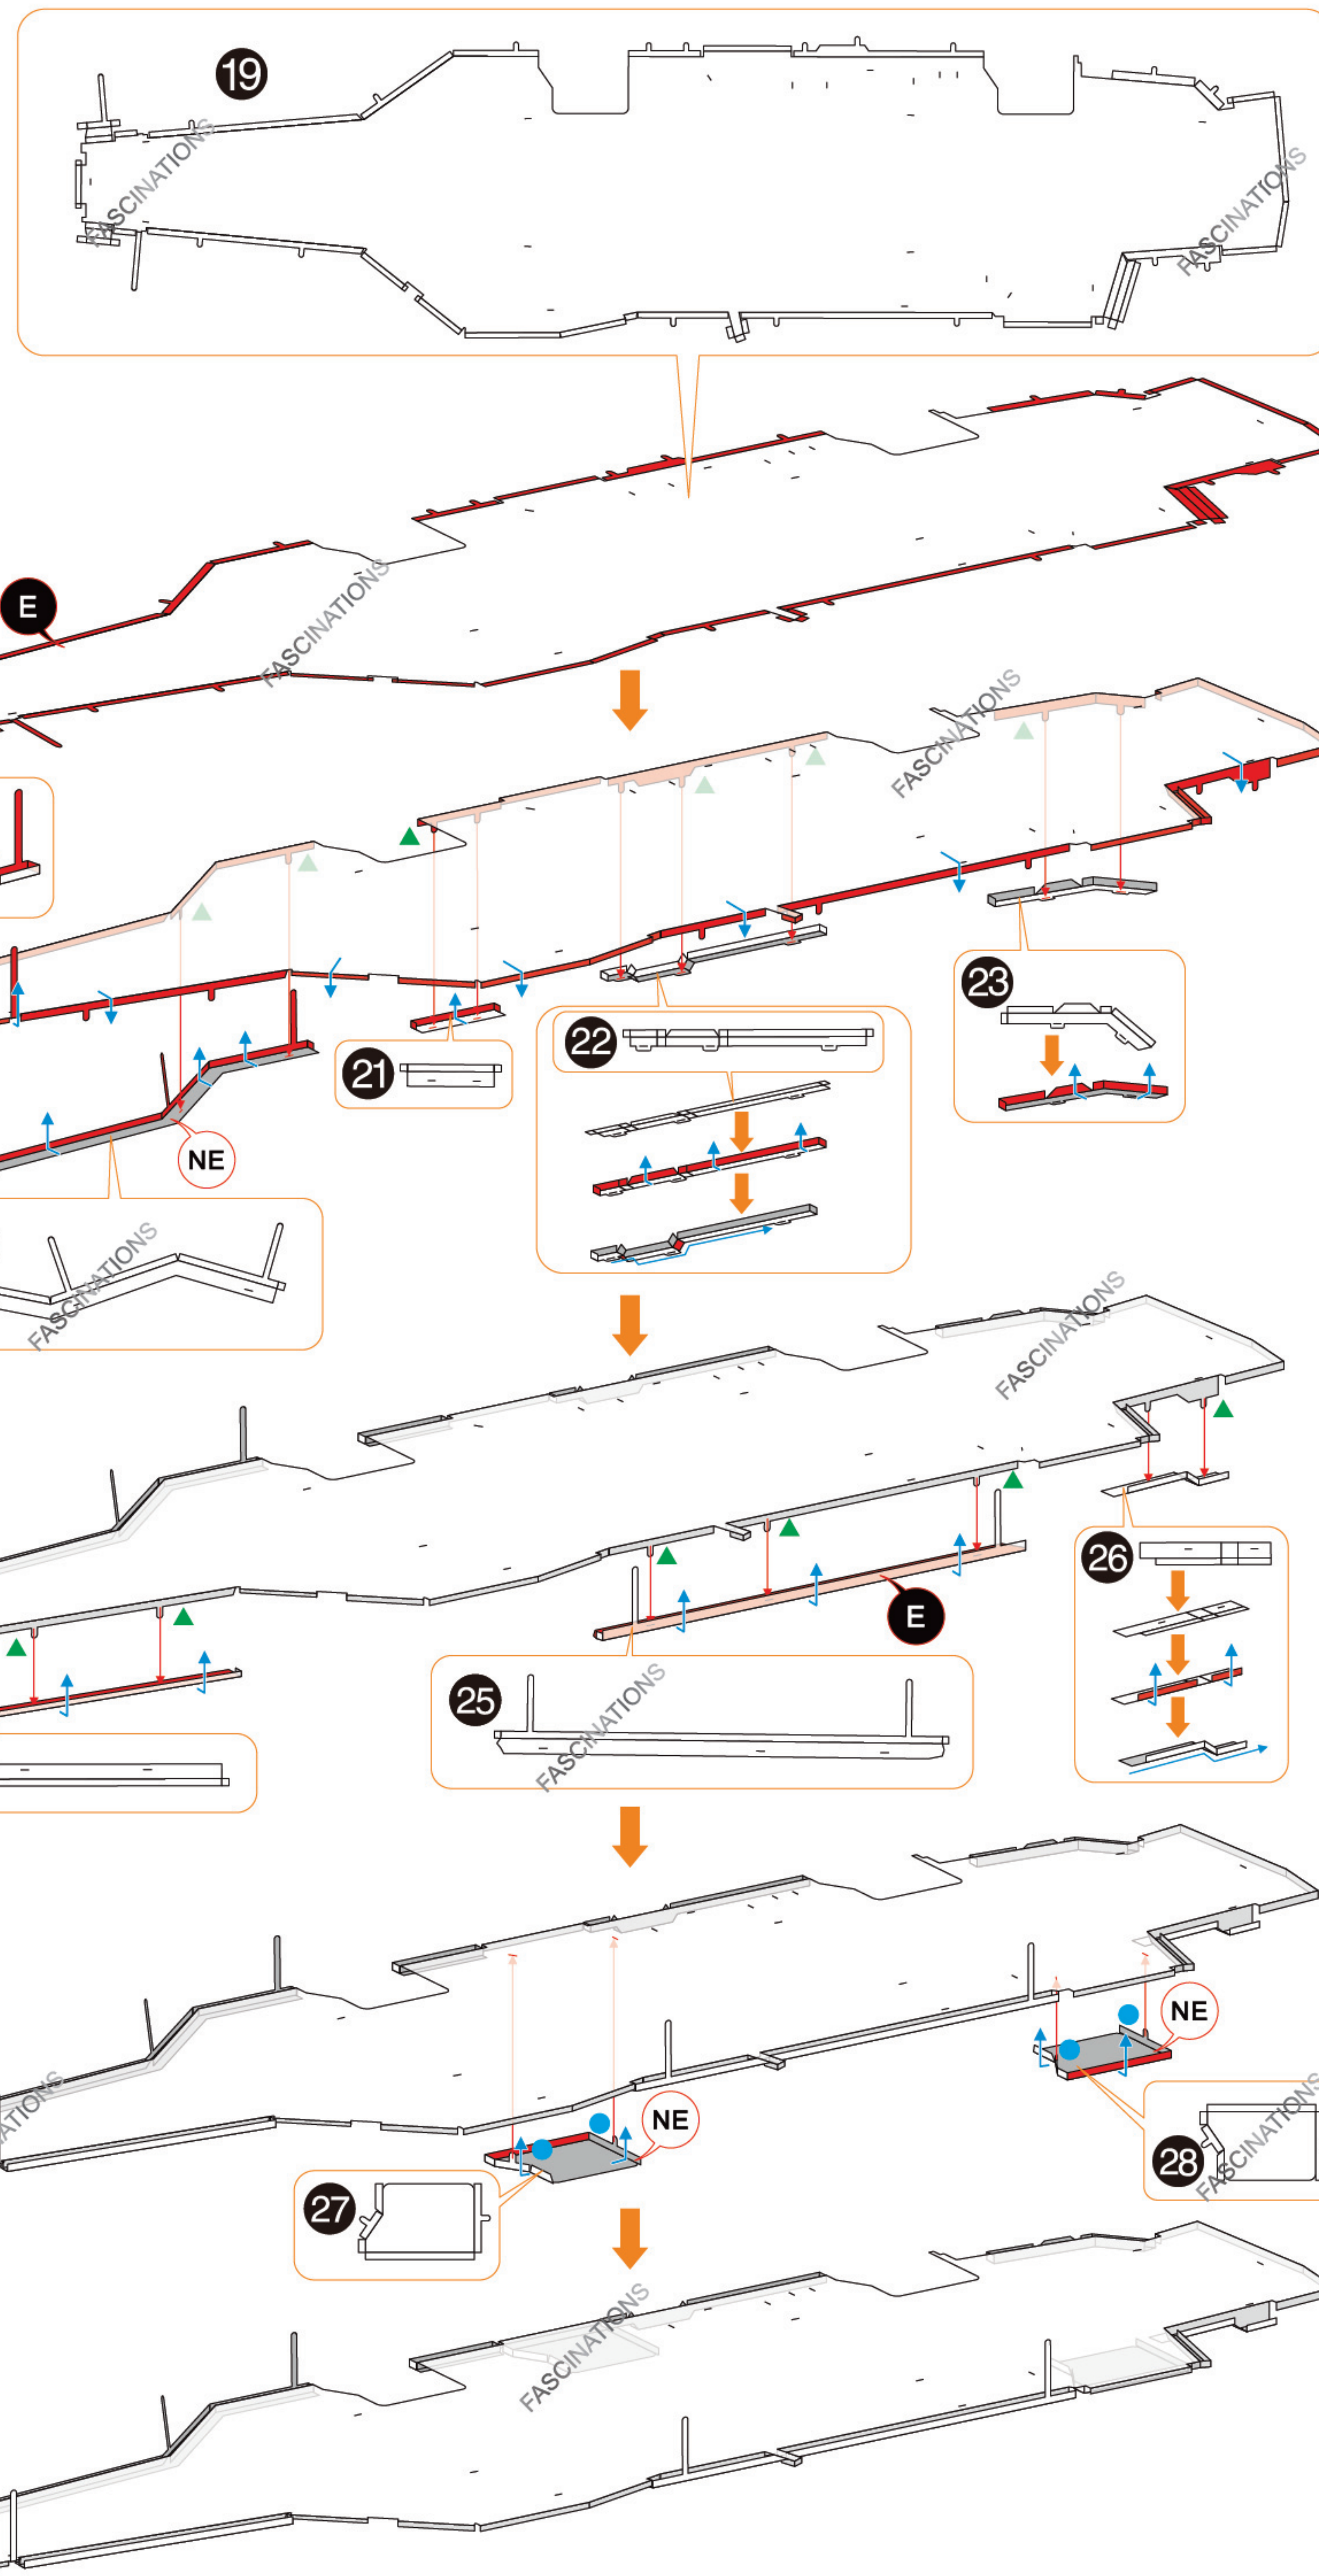


Step 4









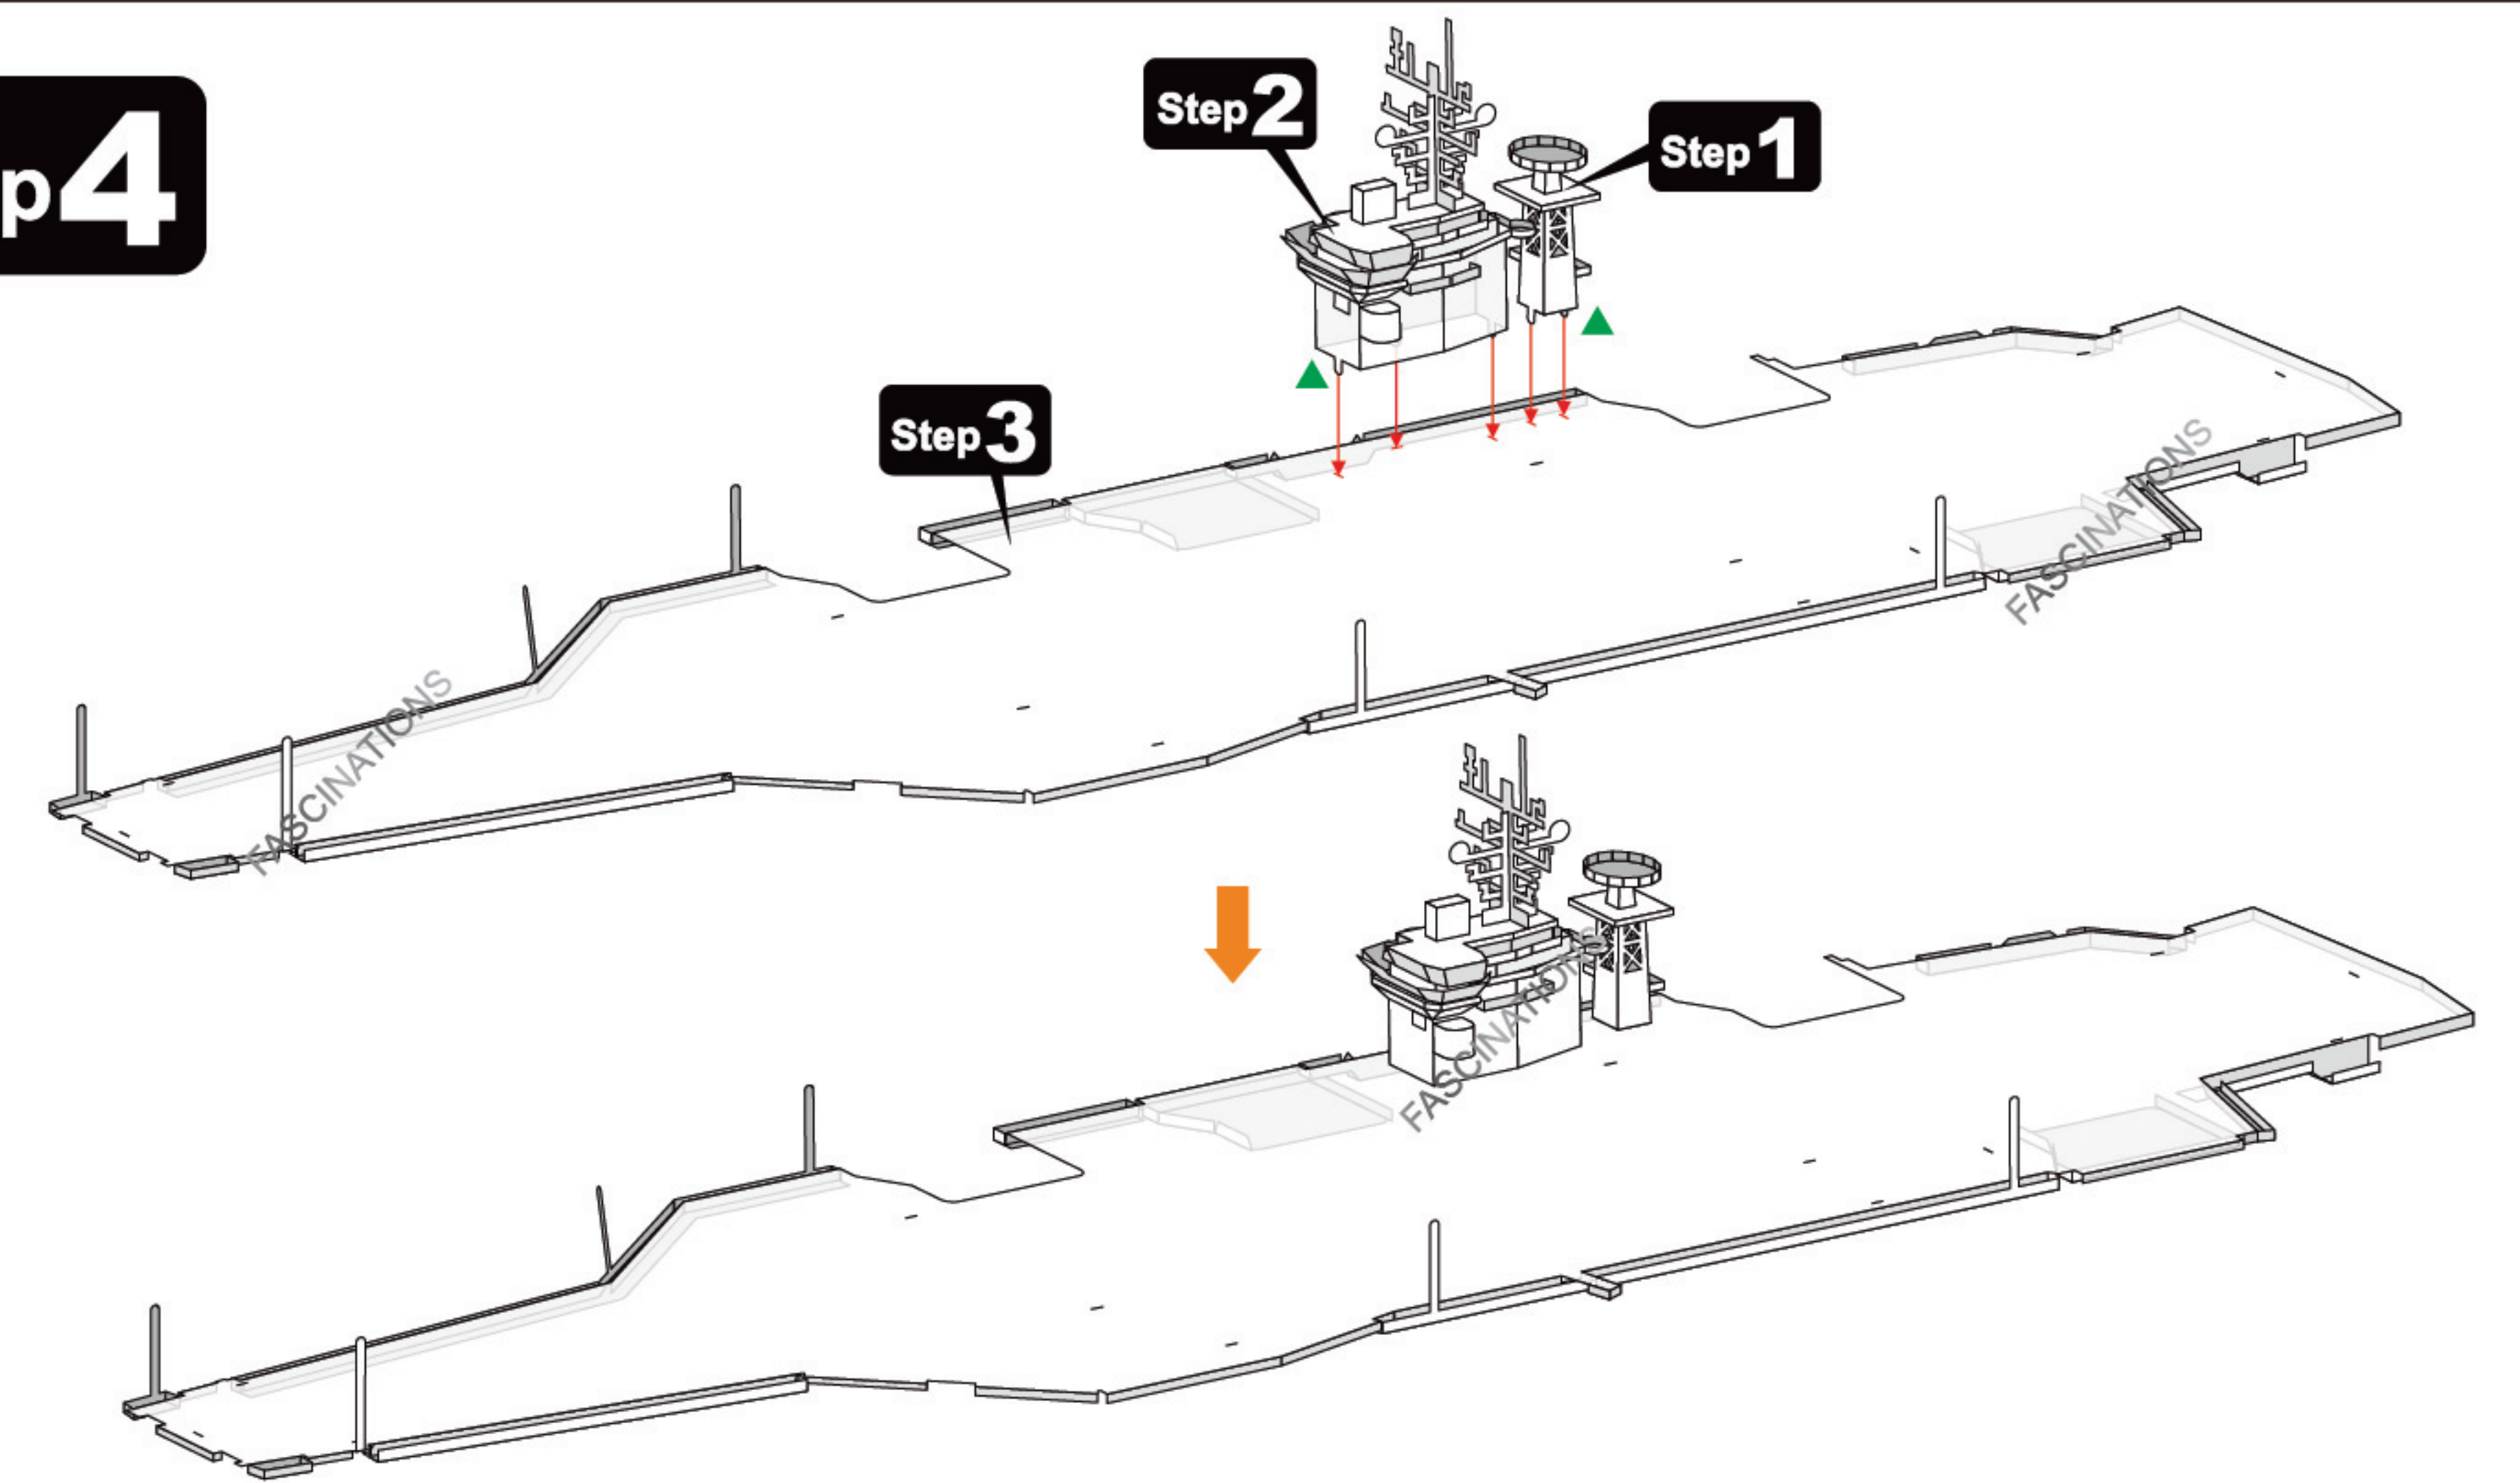


Step 5

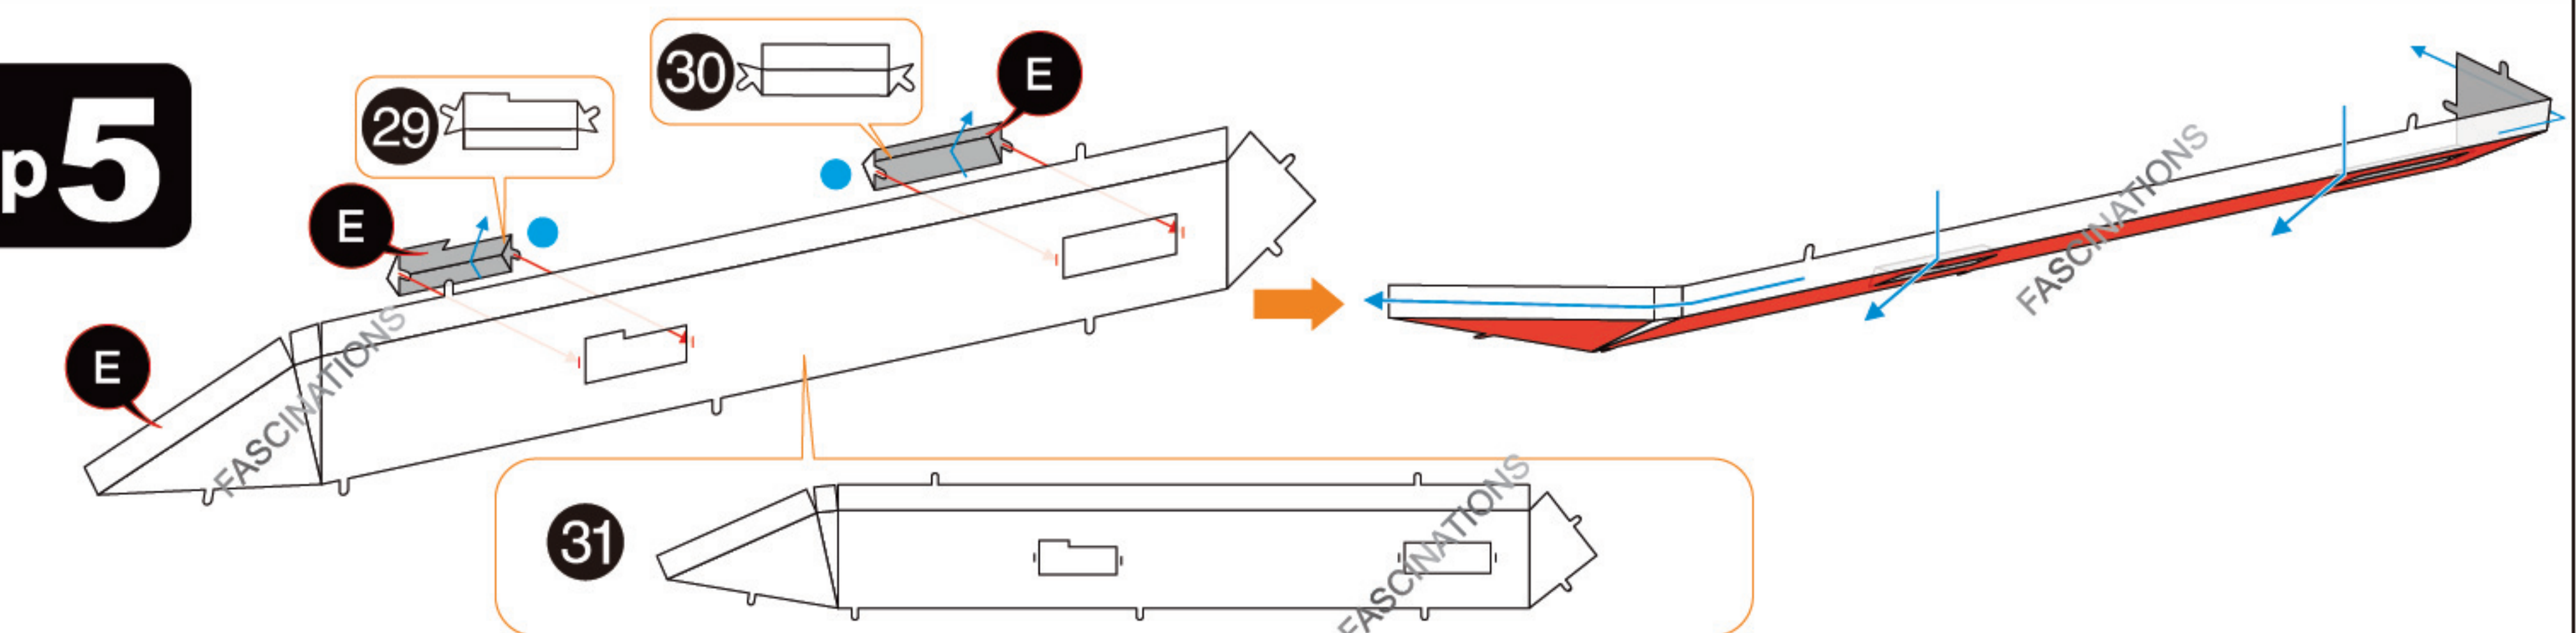


Step 6

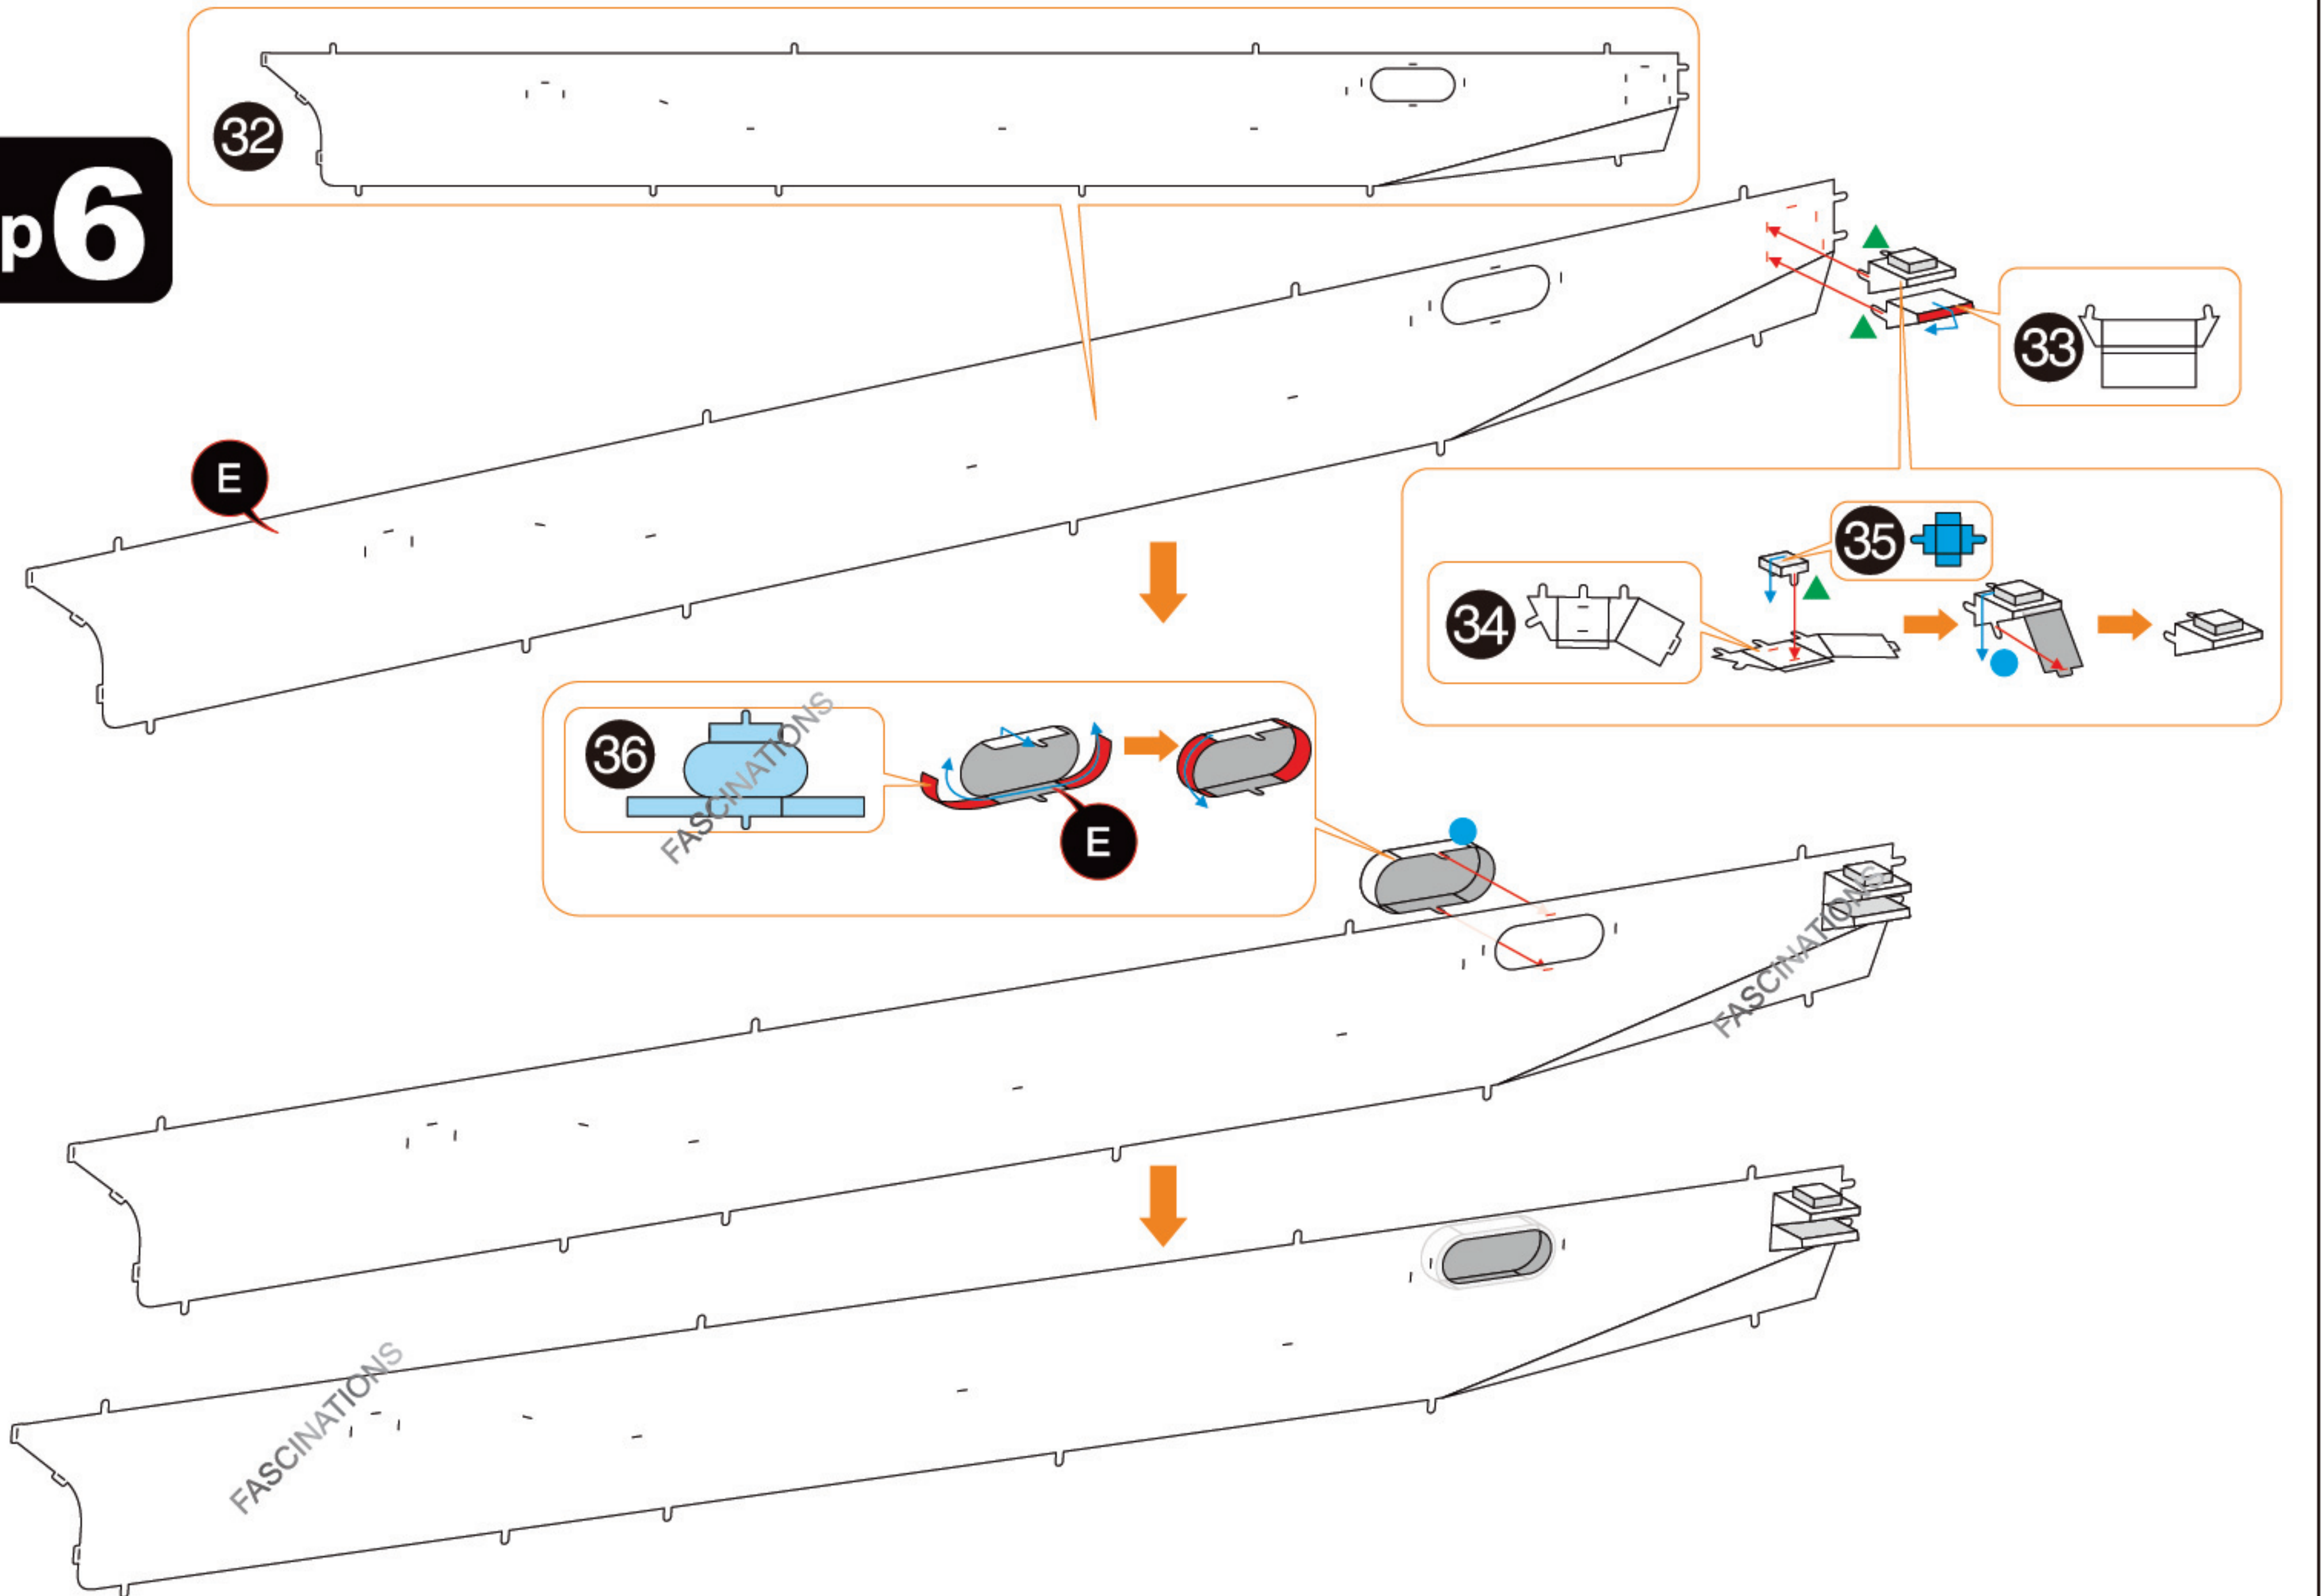


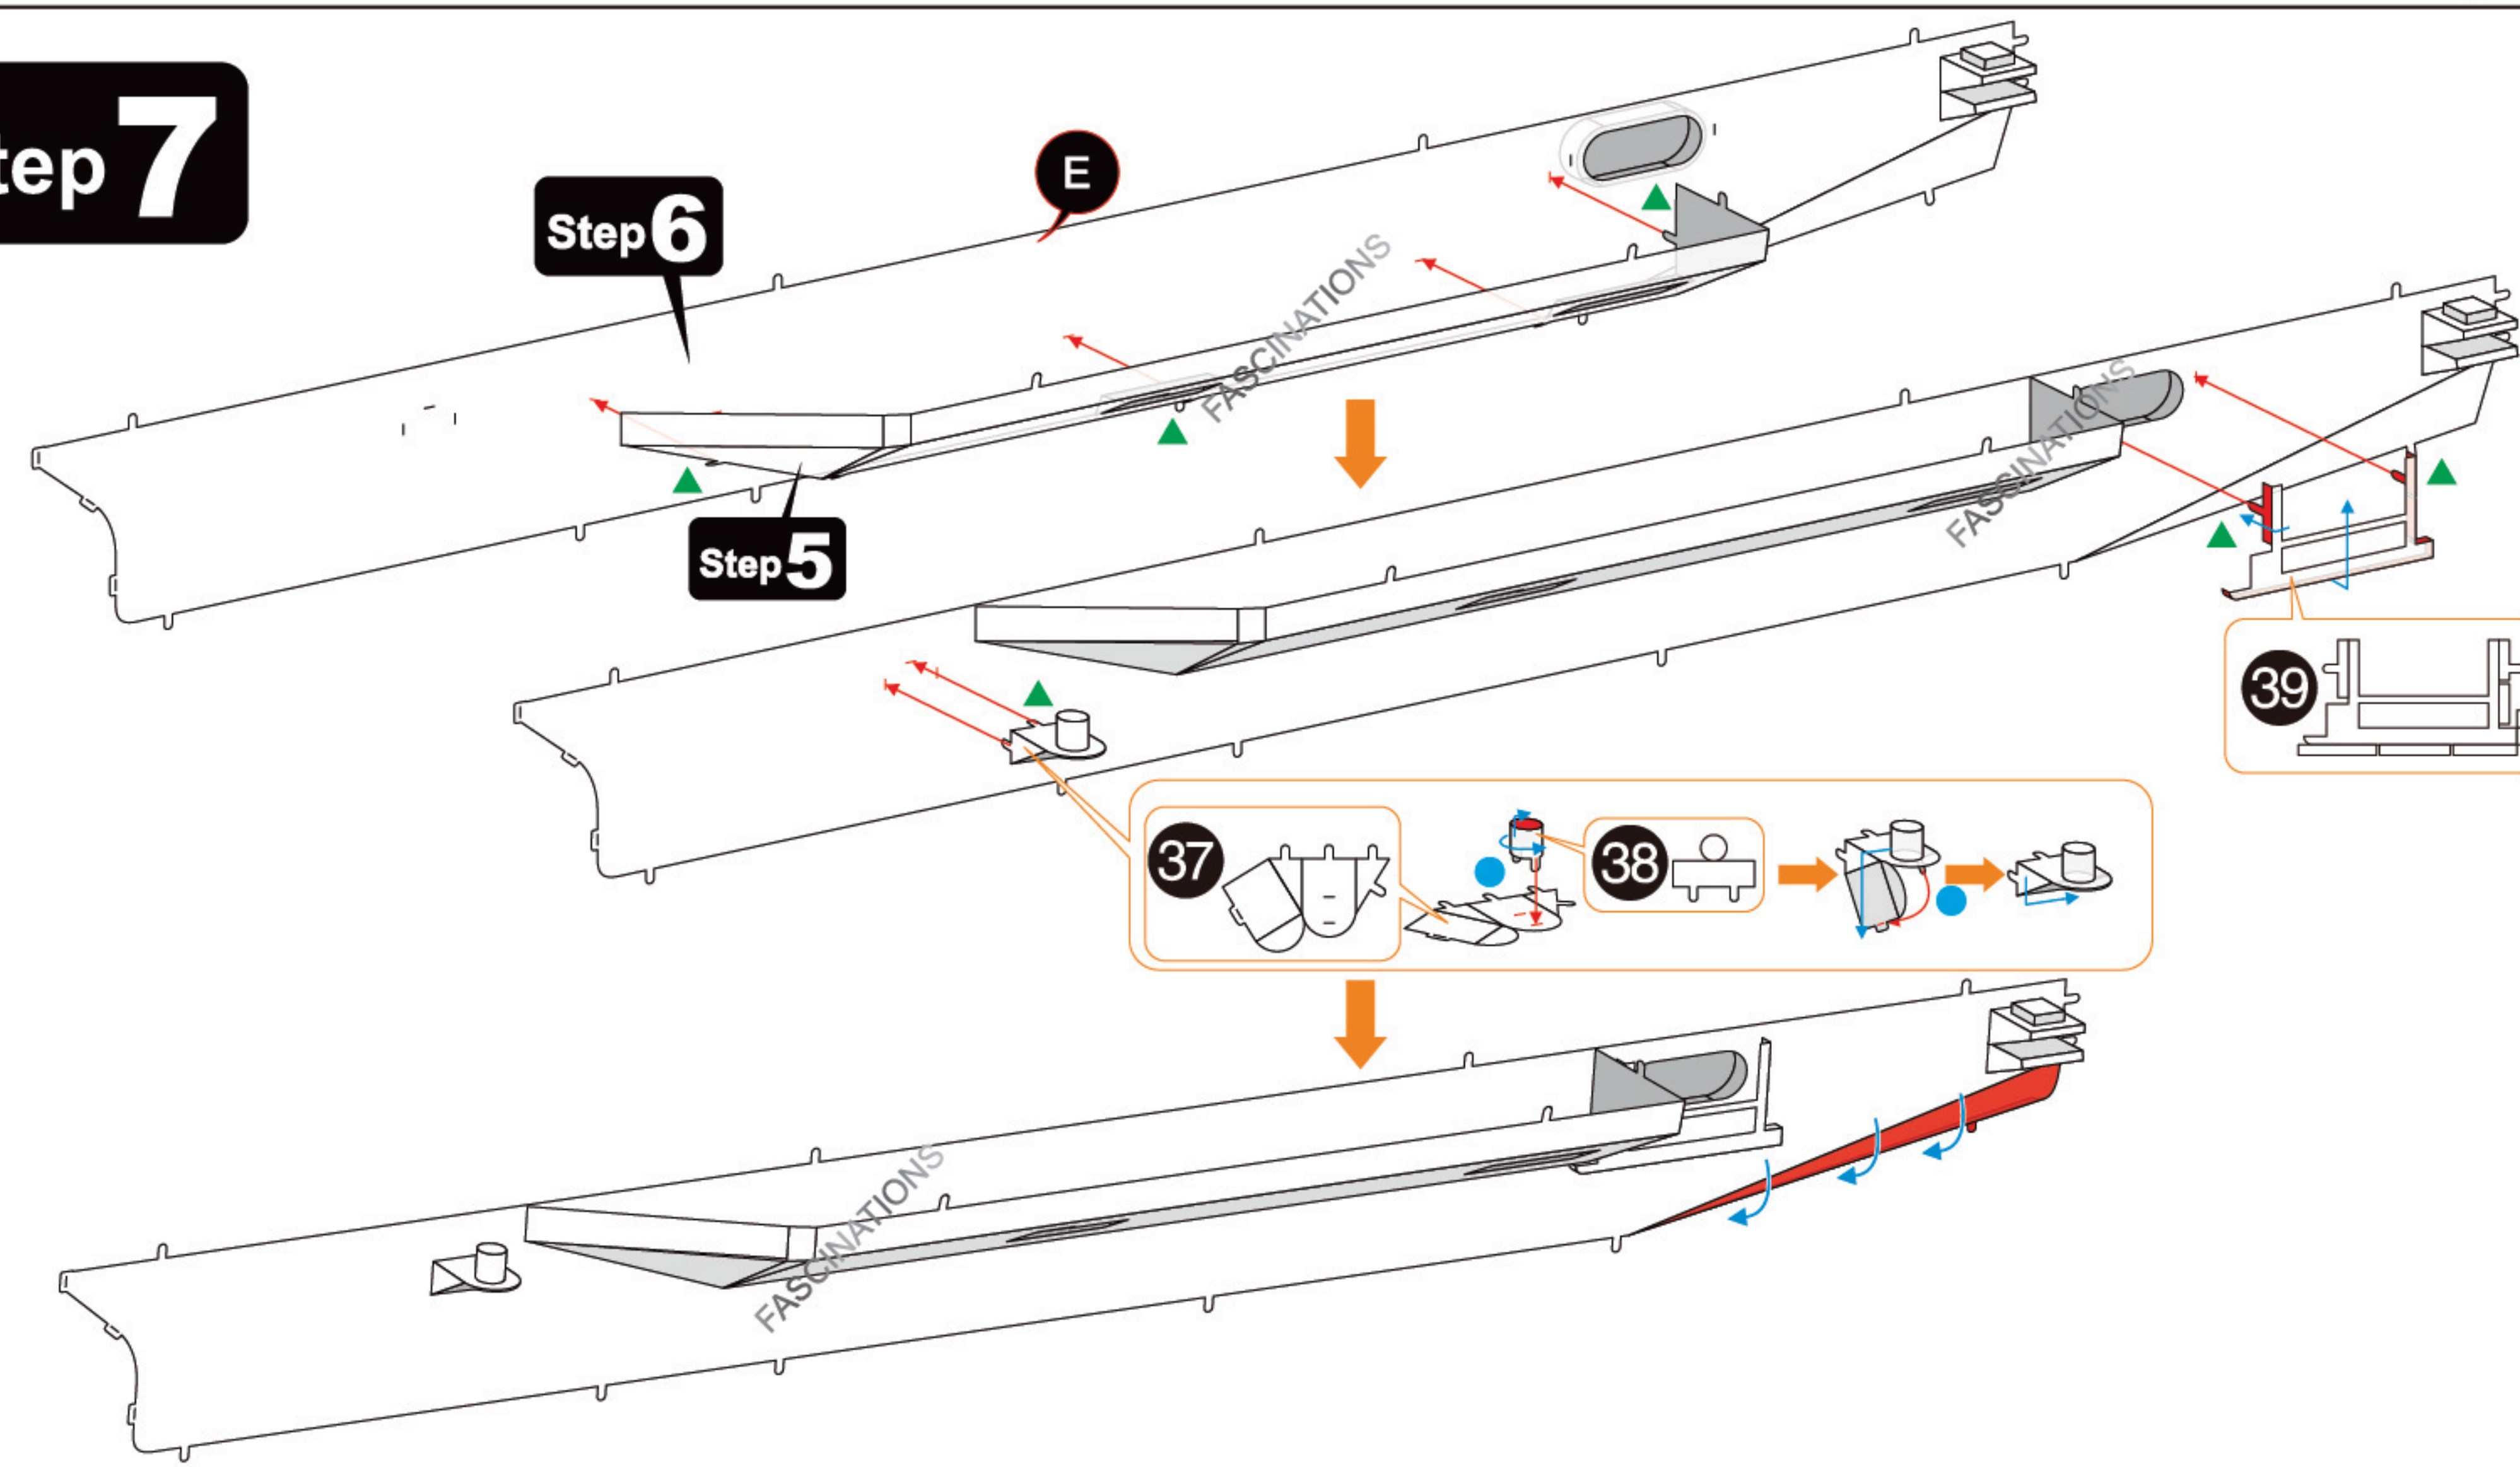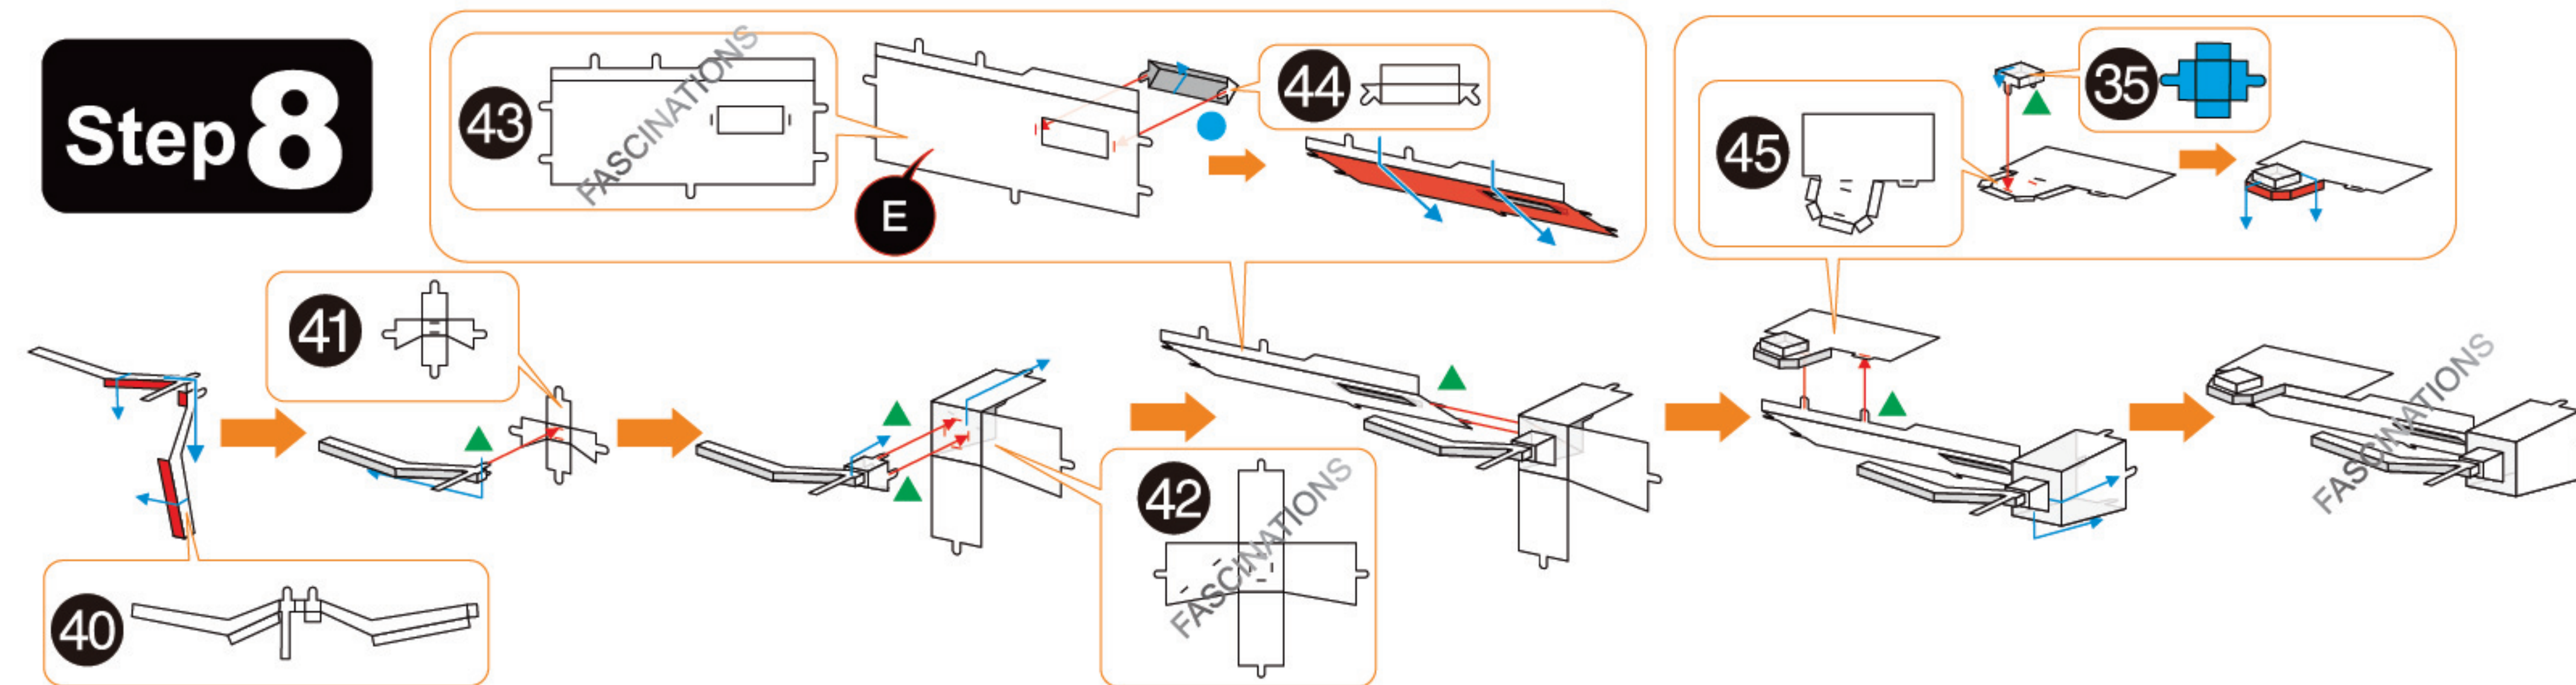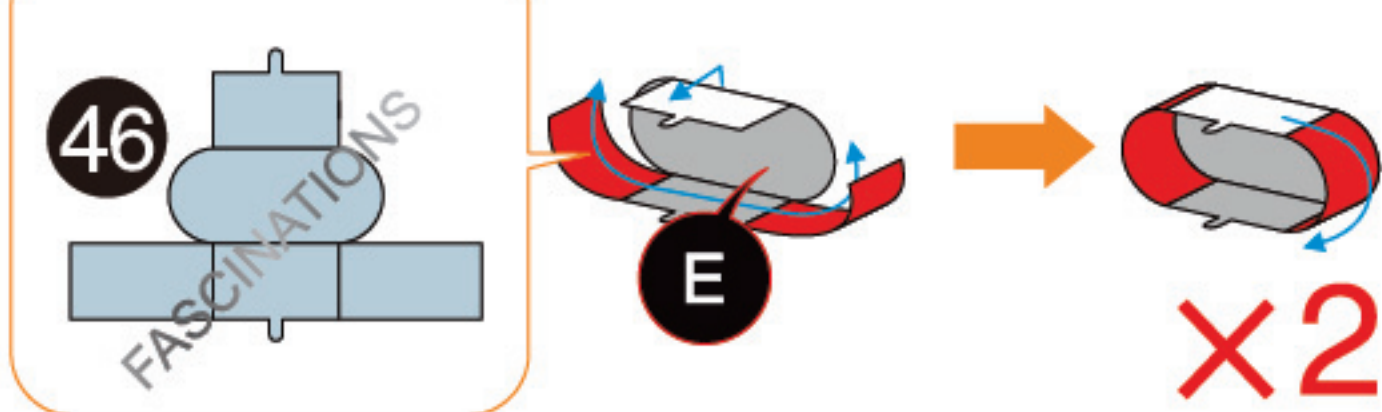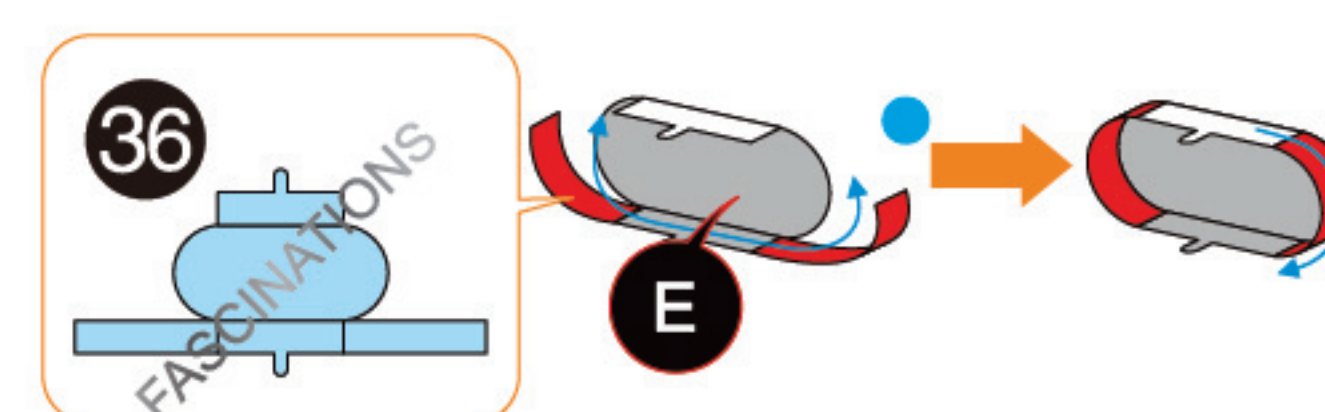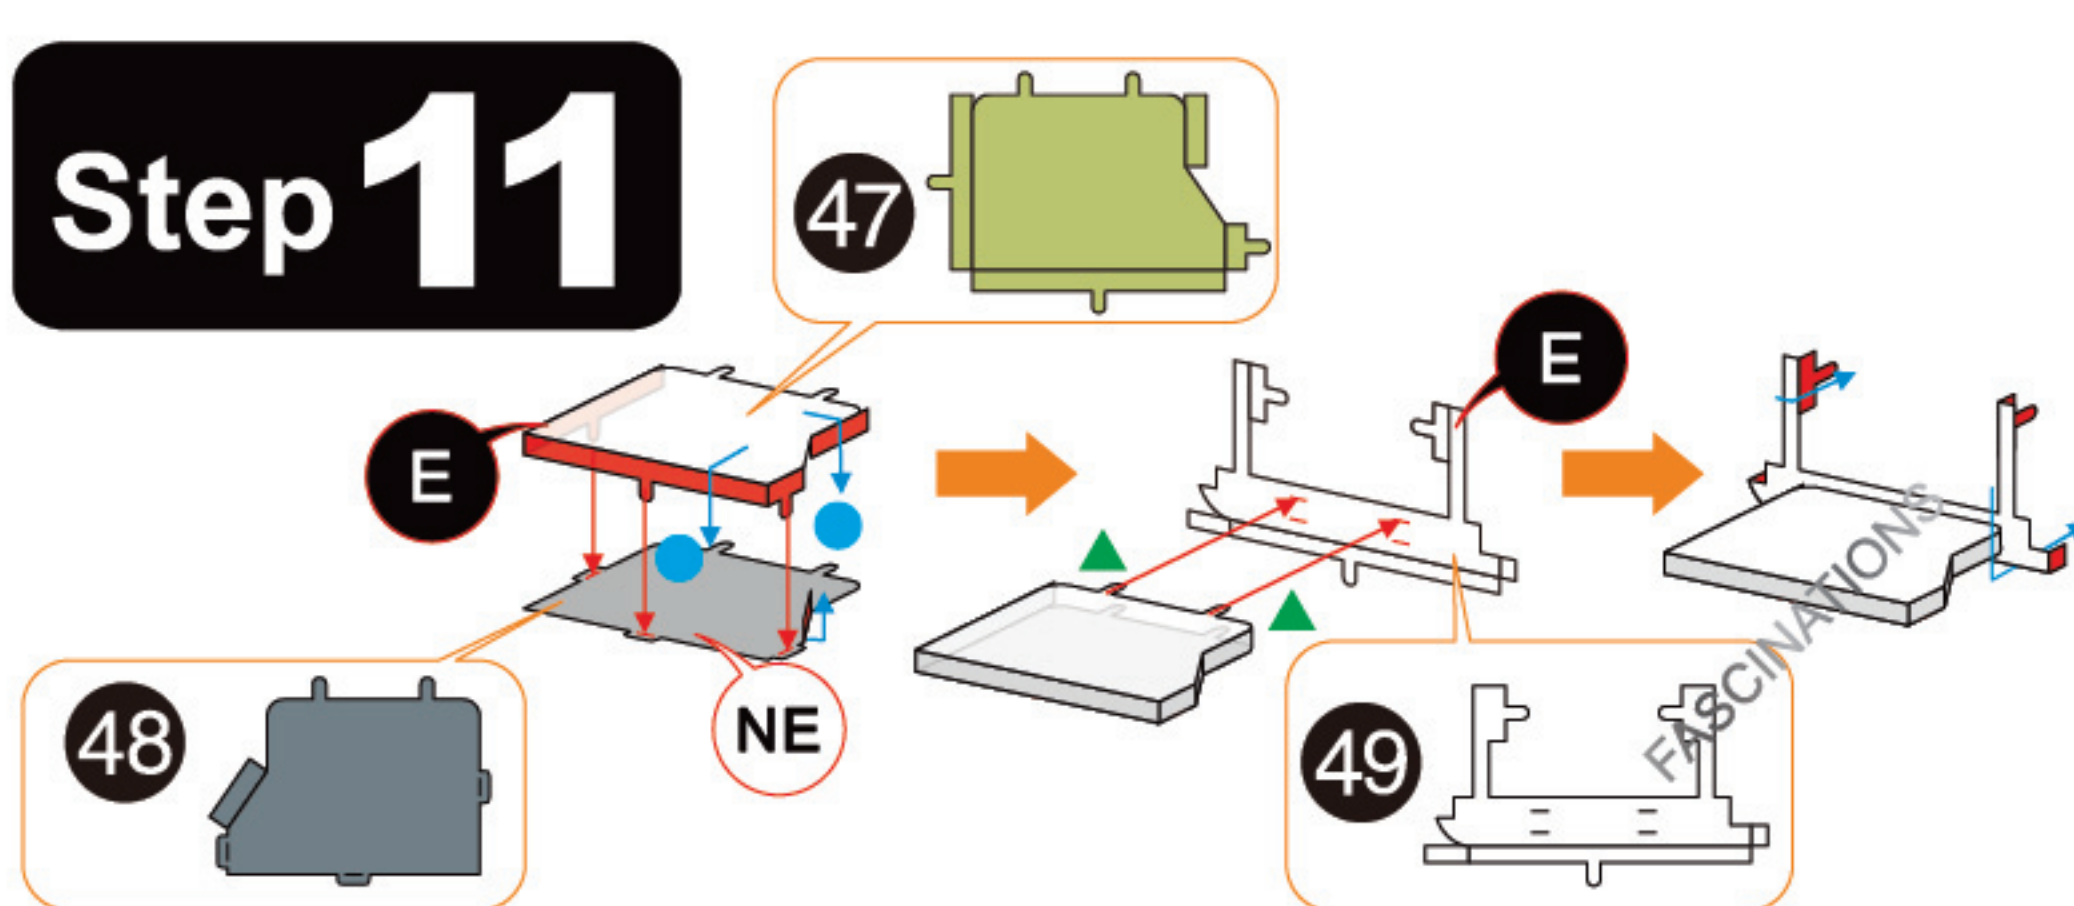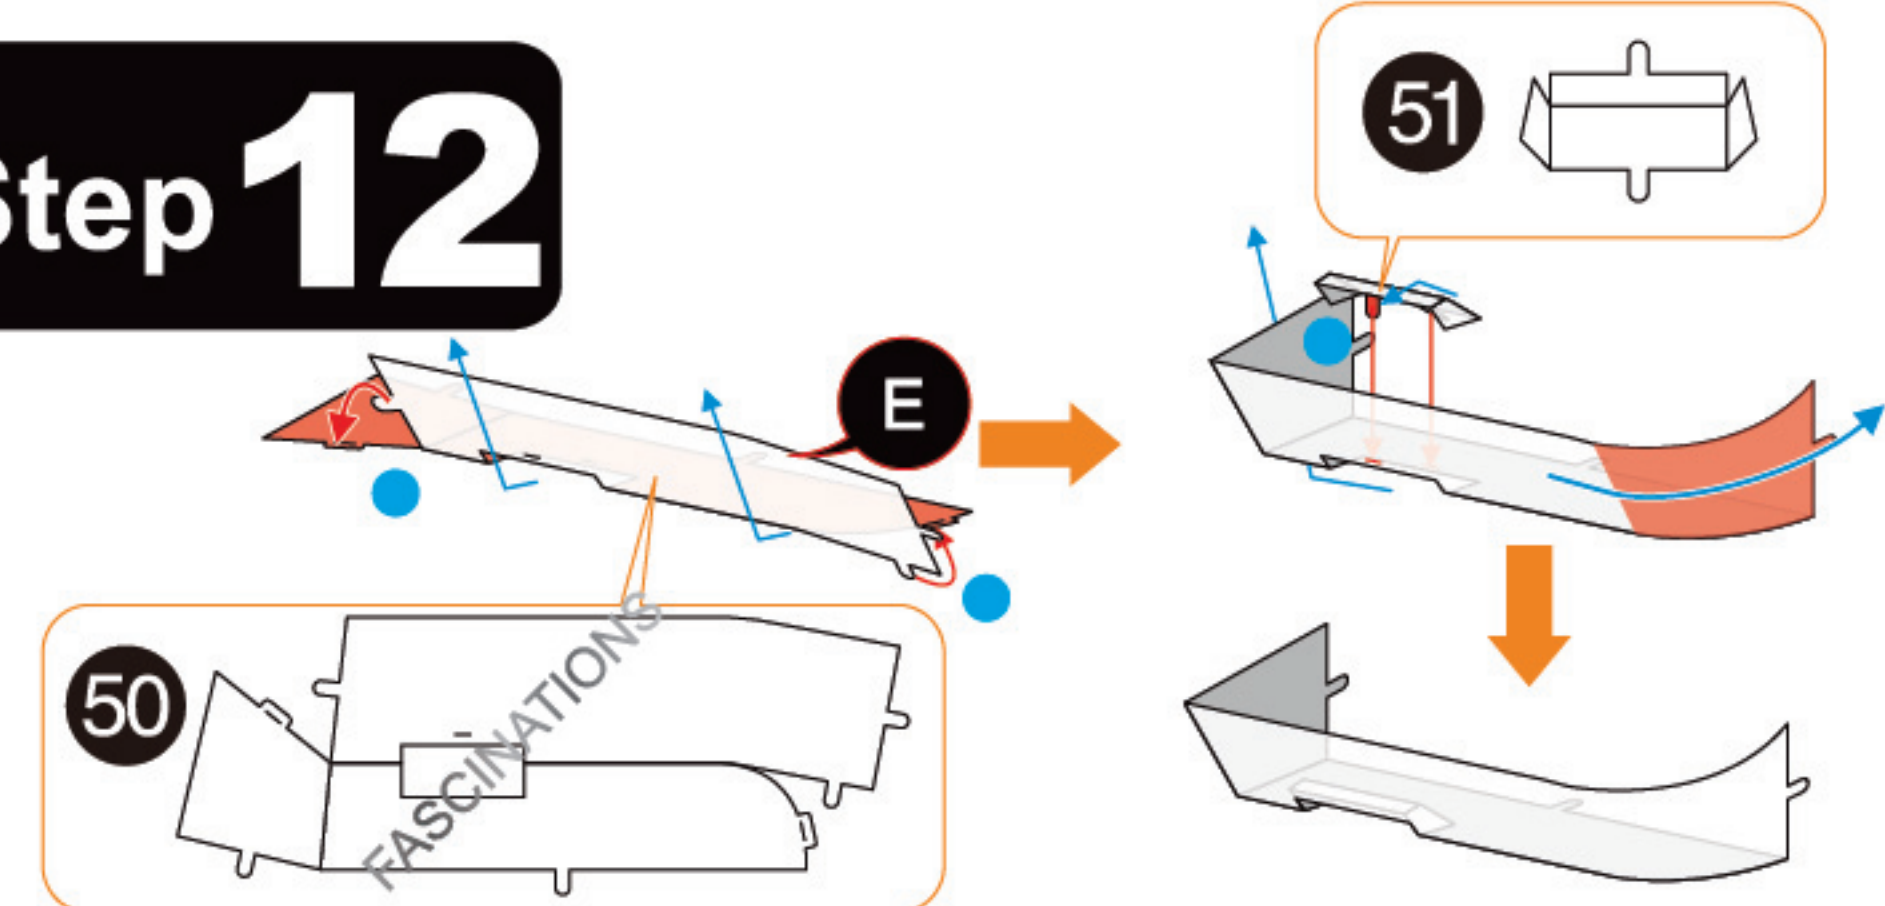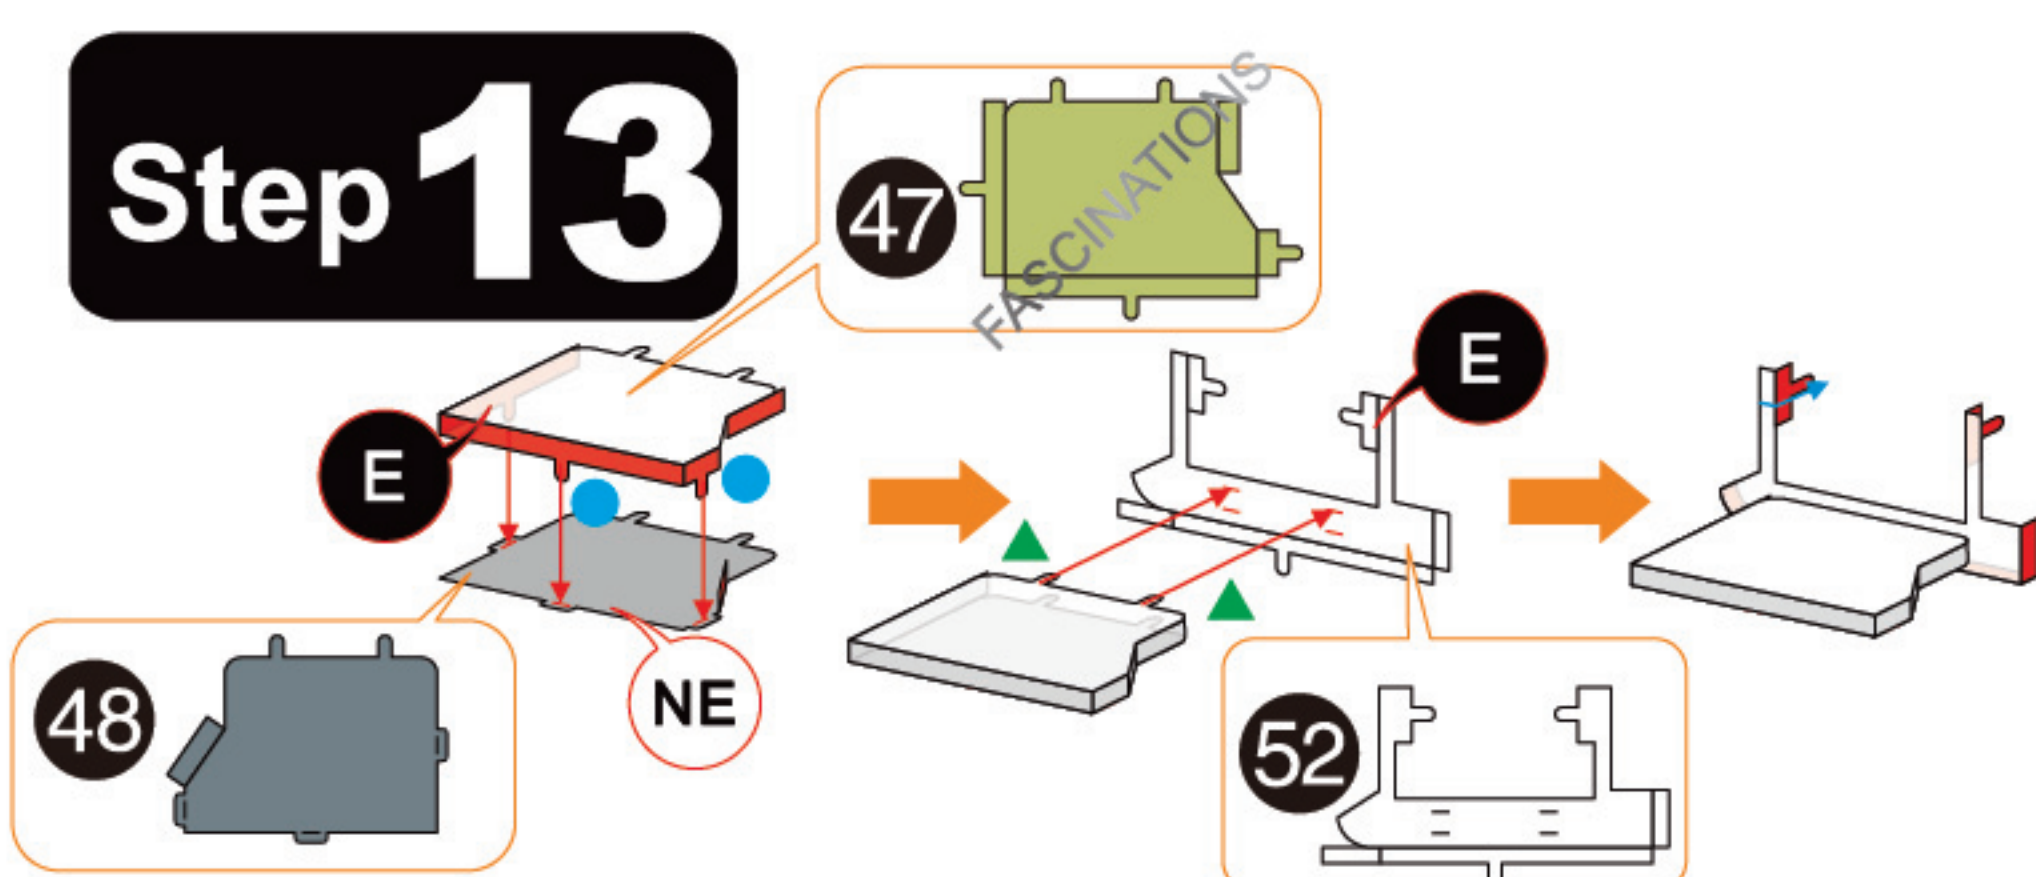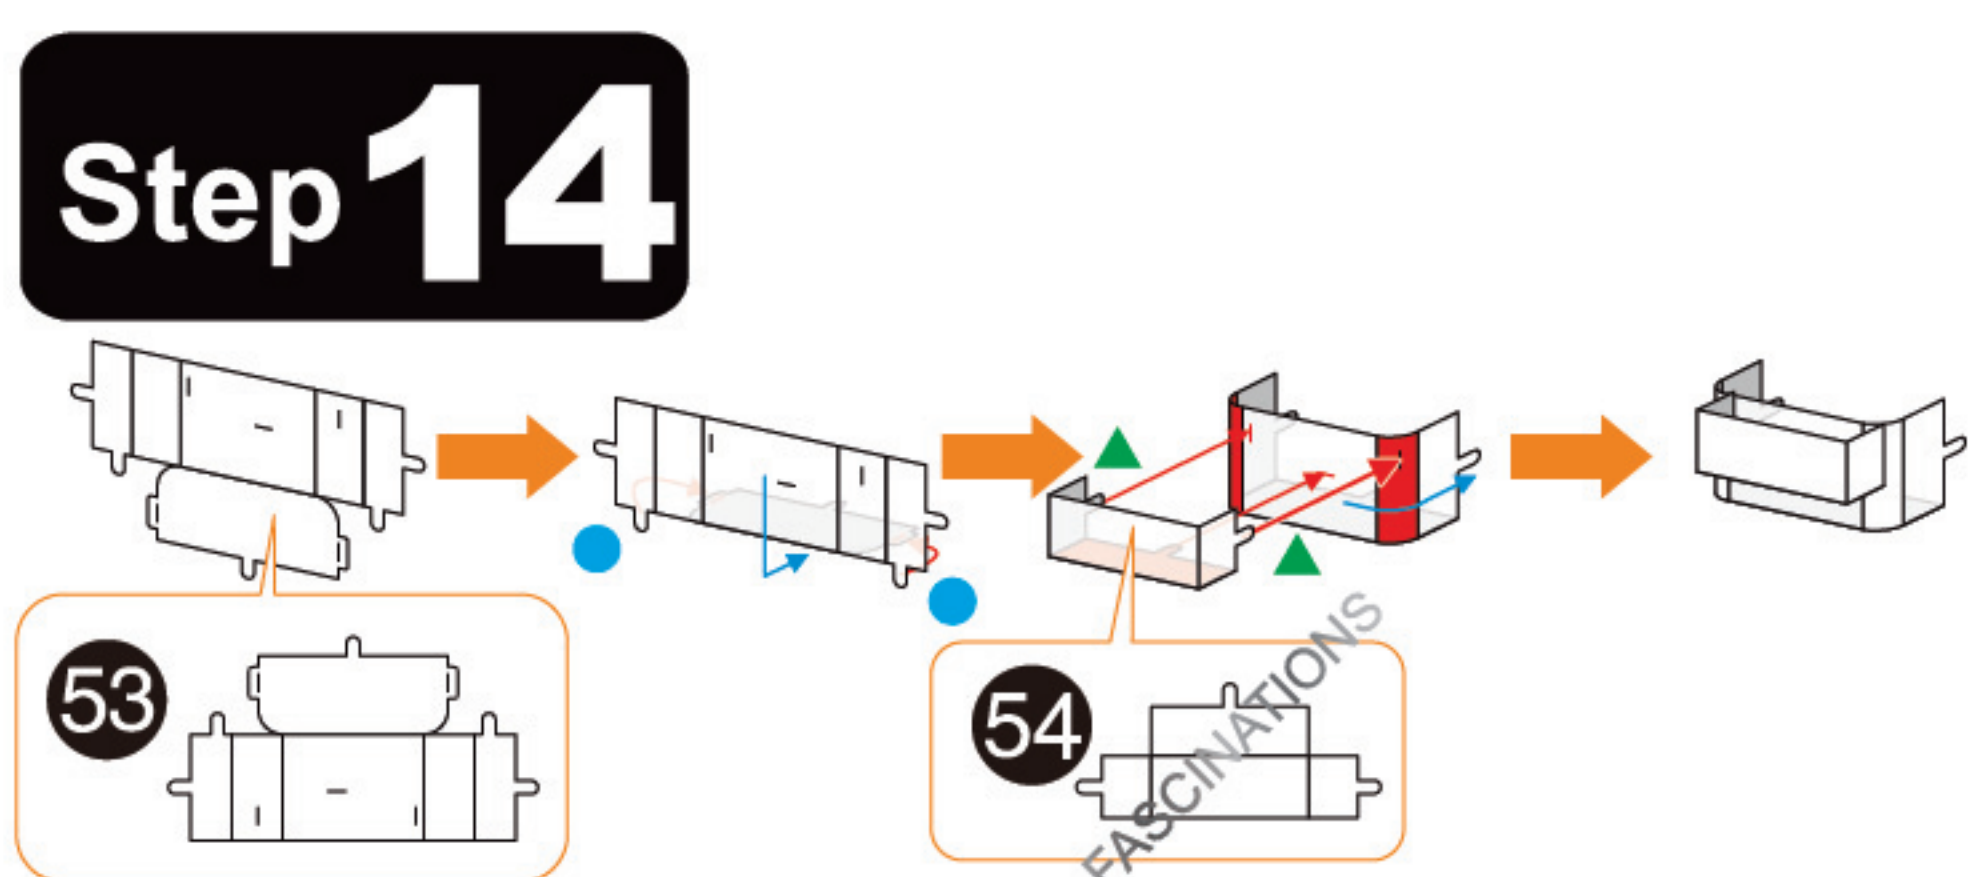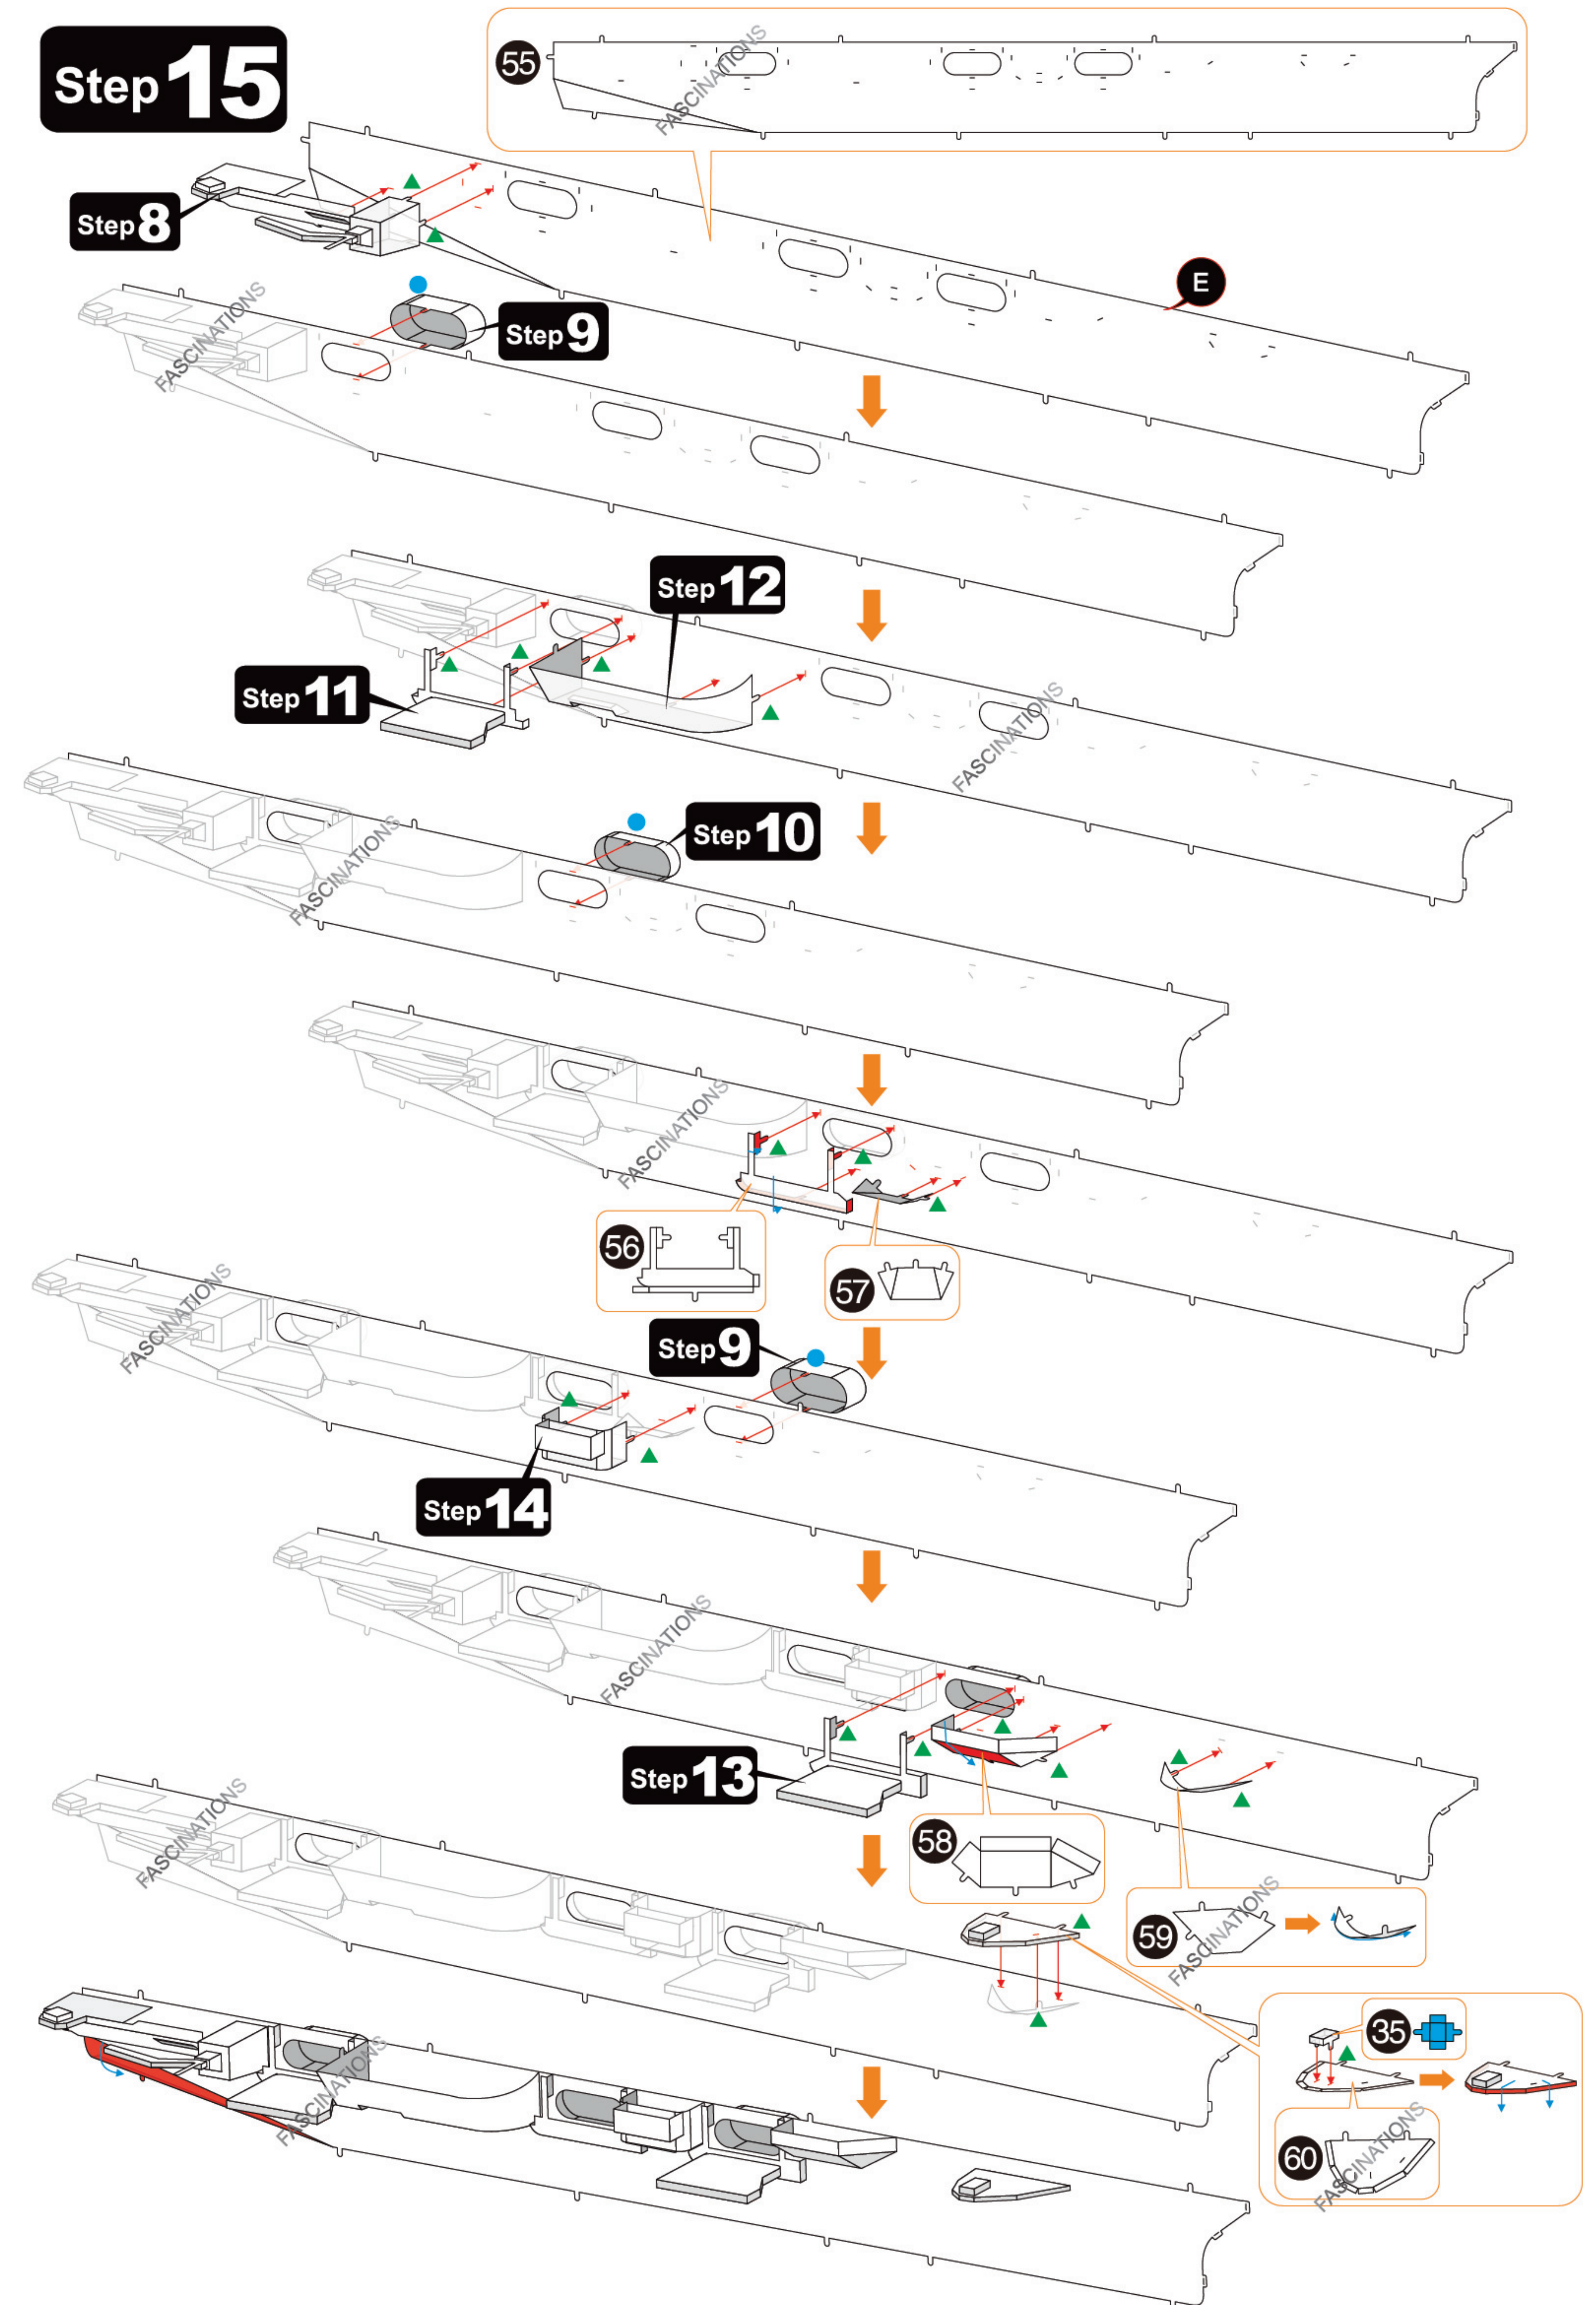Step 7**Step 8****Step 9****Step 10****Step 11****Step 12****Step 13****Step 14****Step 15**


Step 16

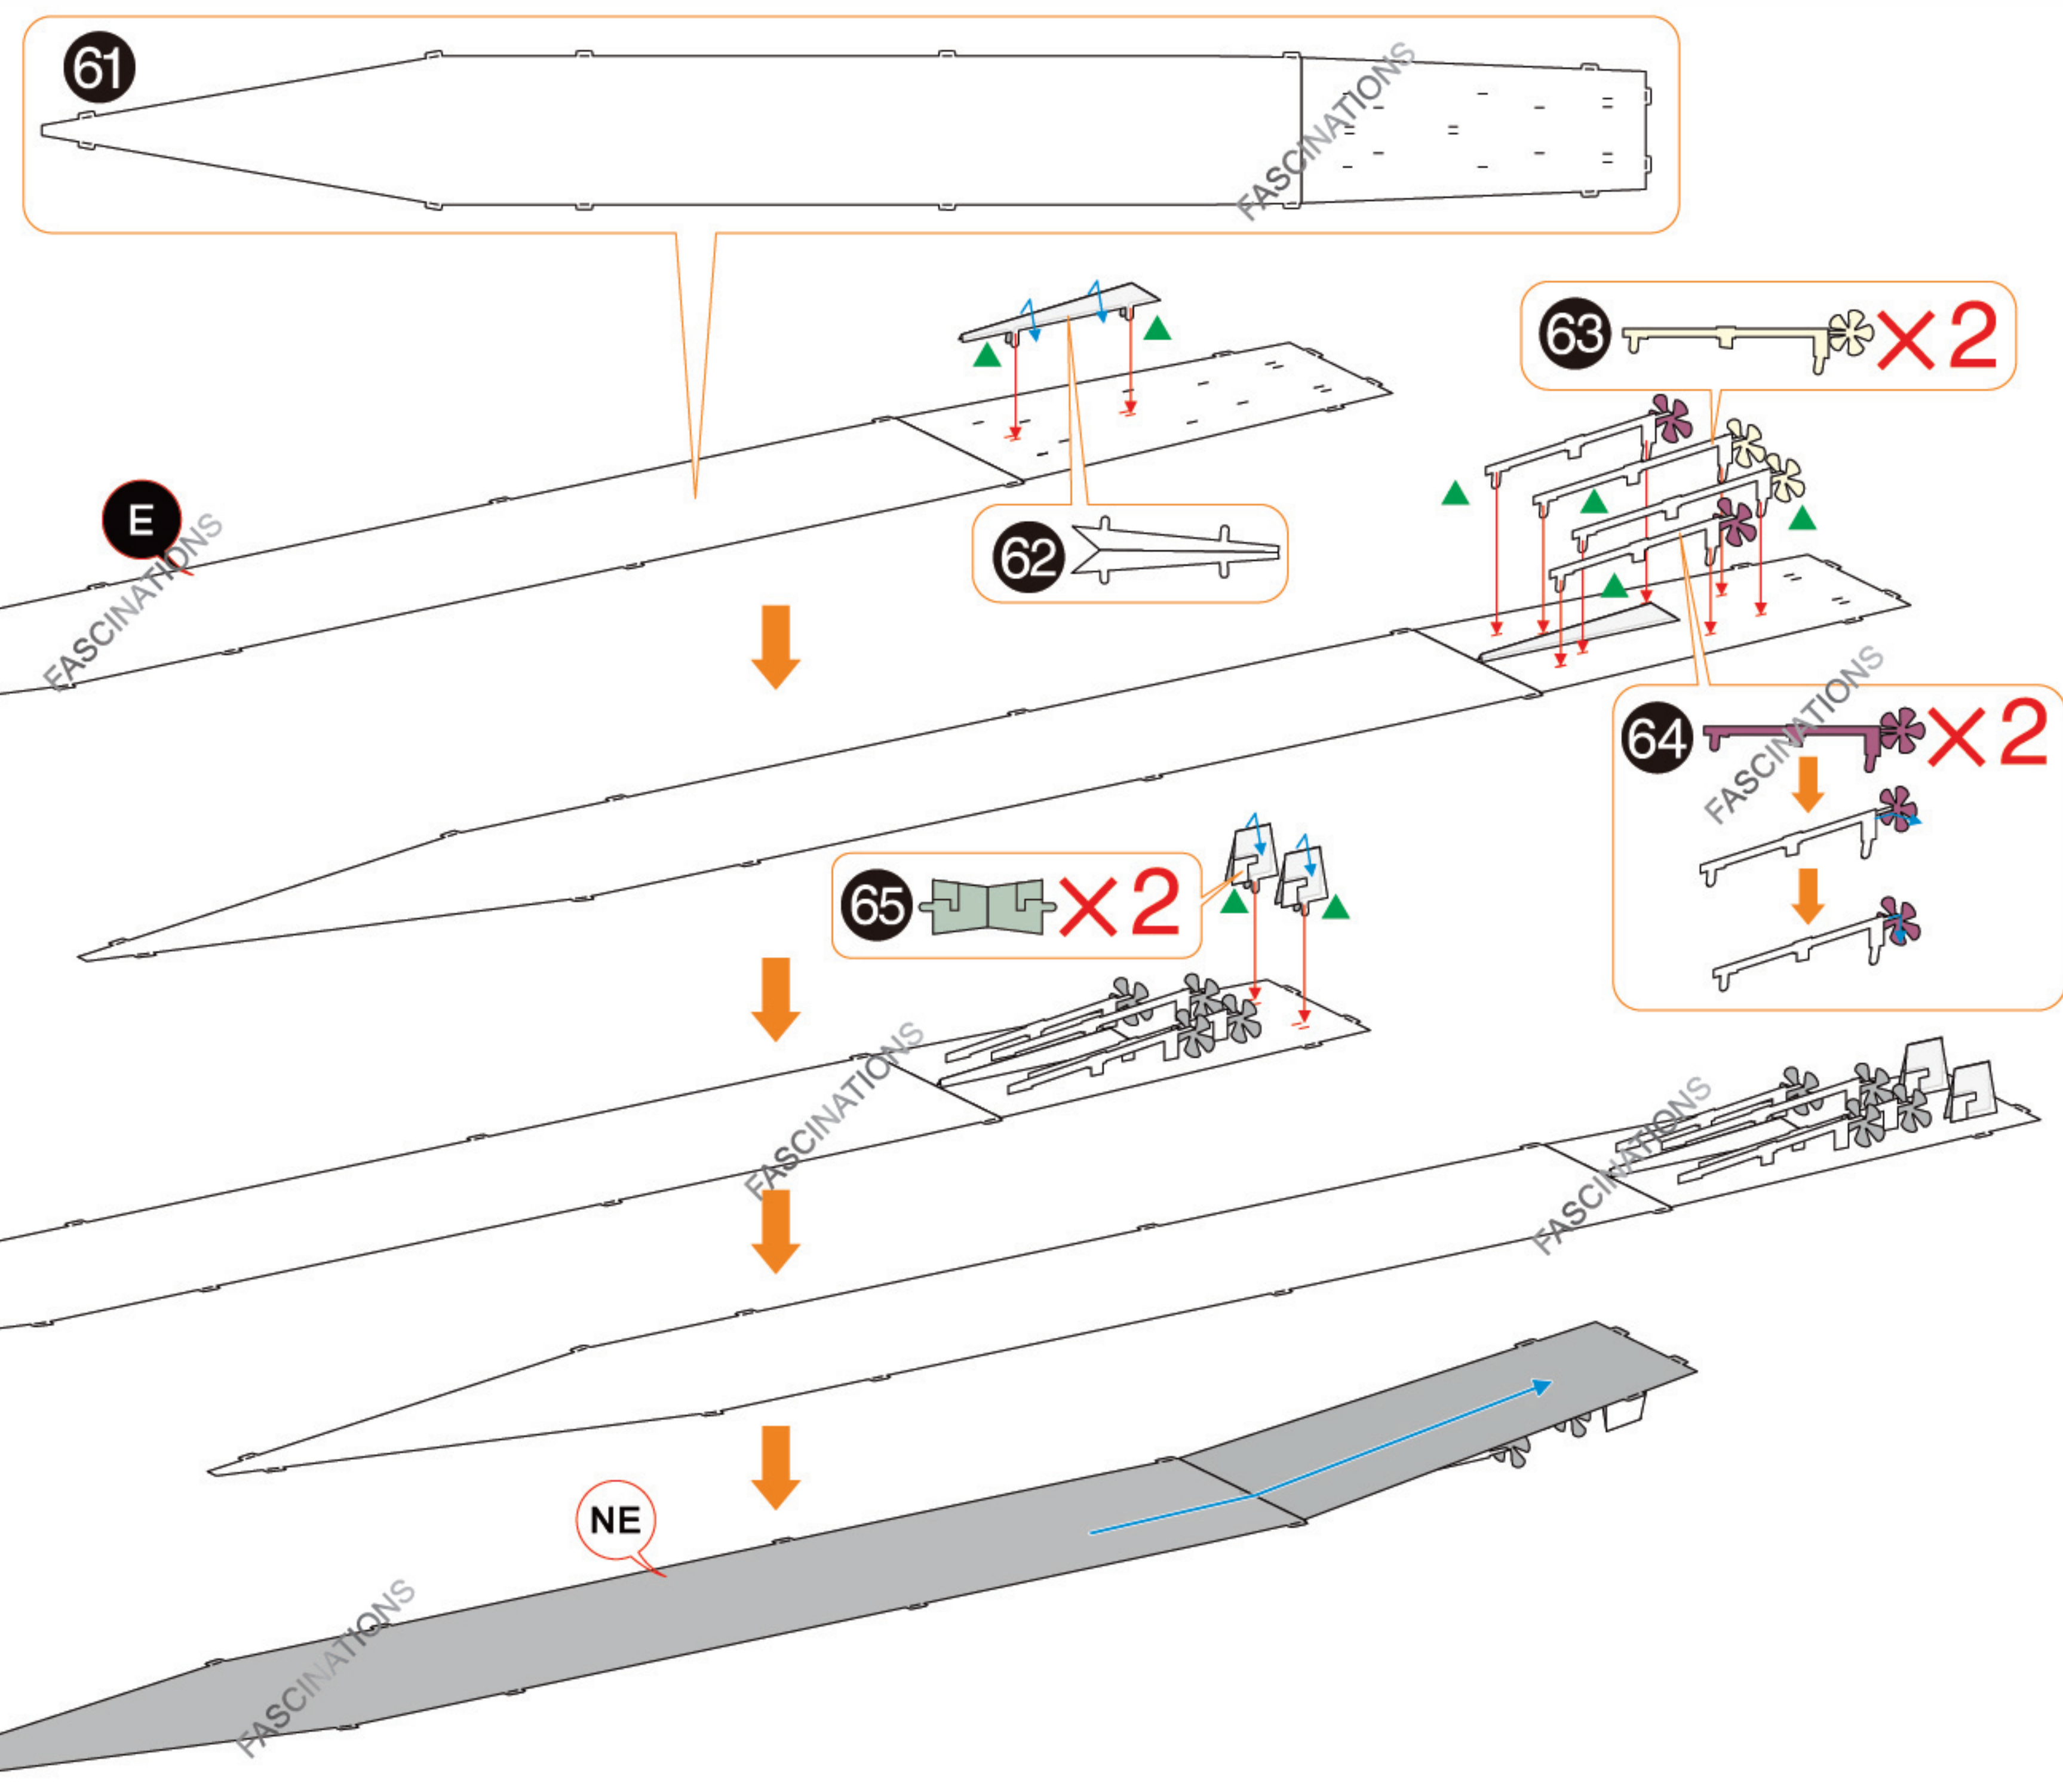

Step 17

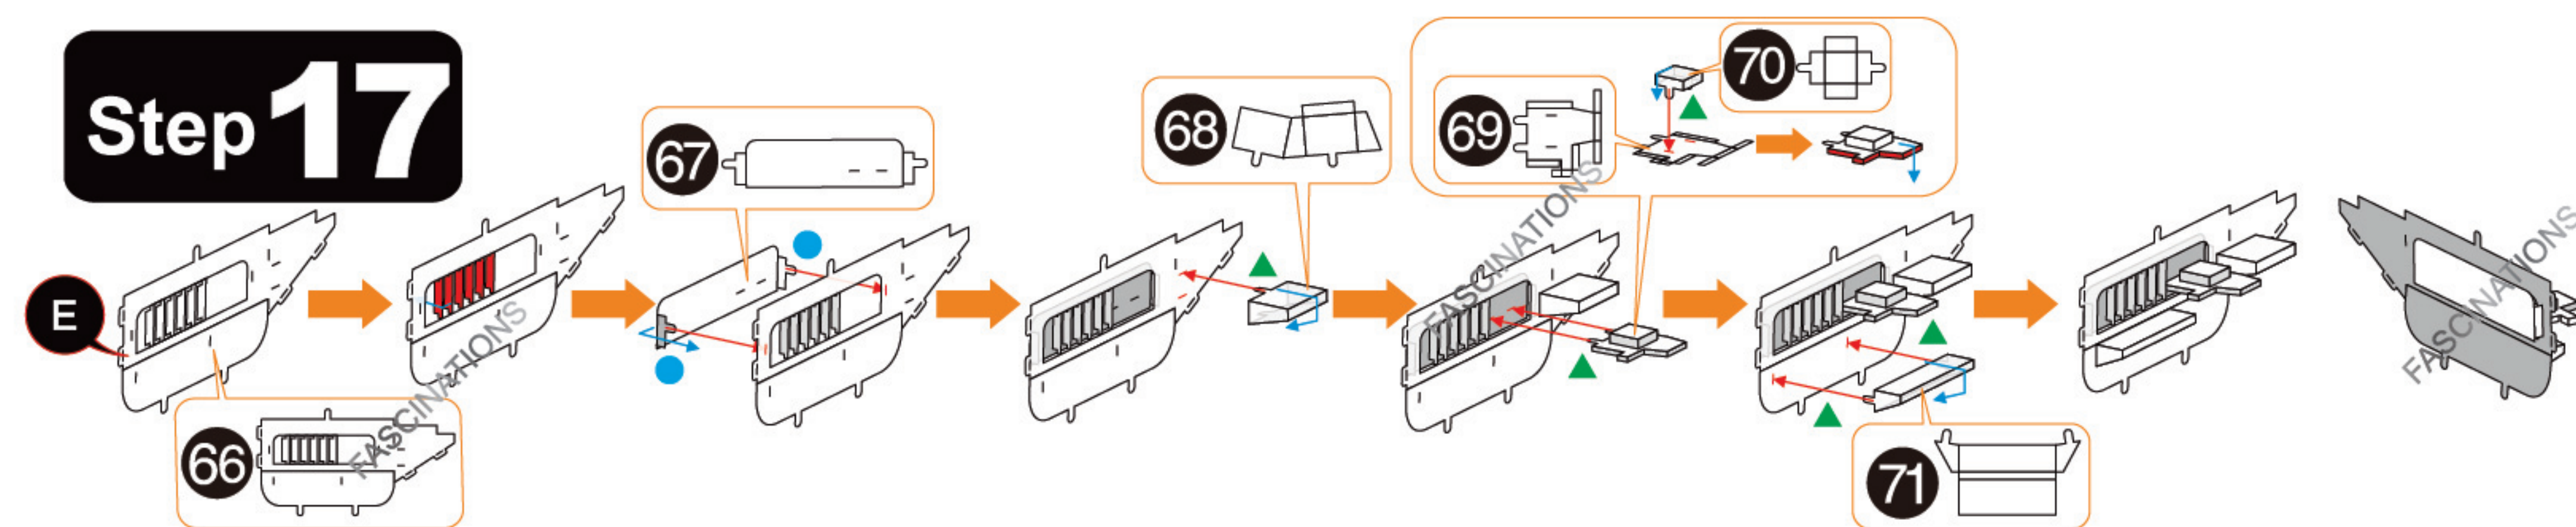


Step 18

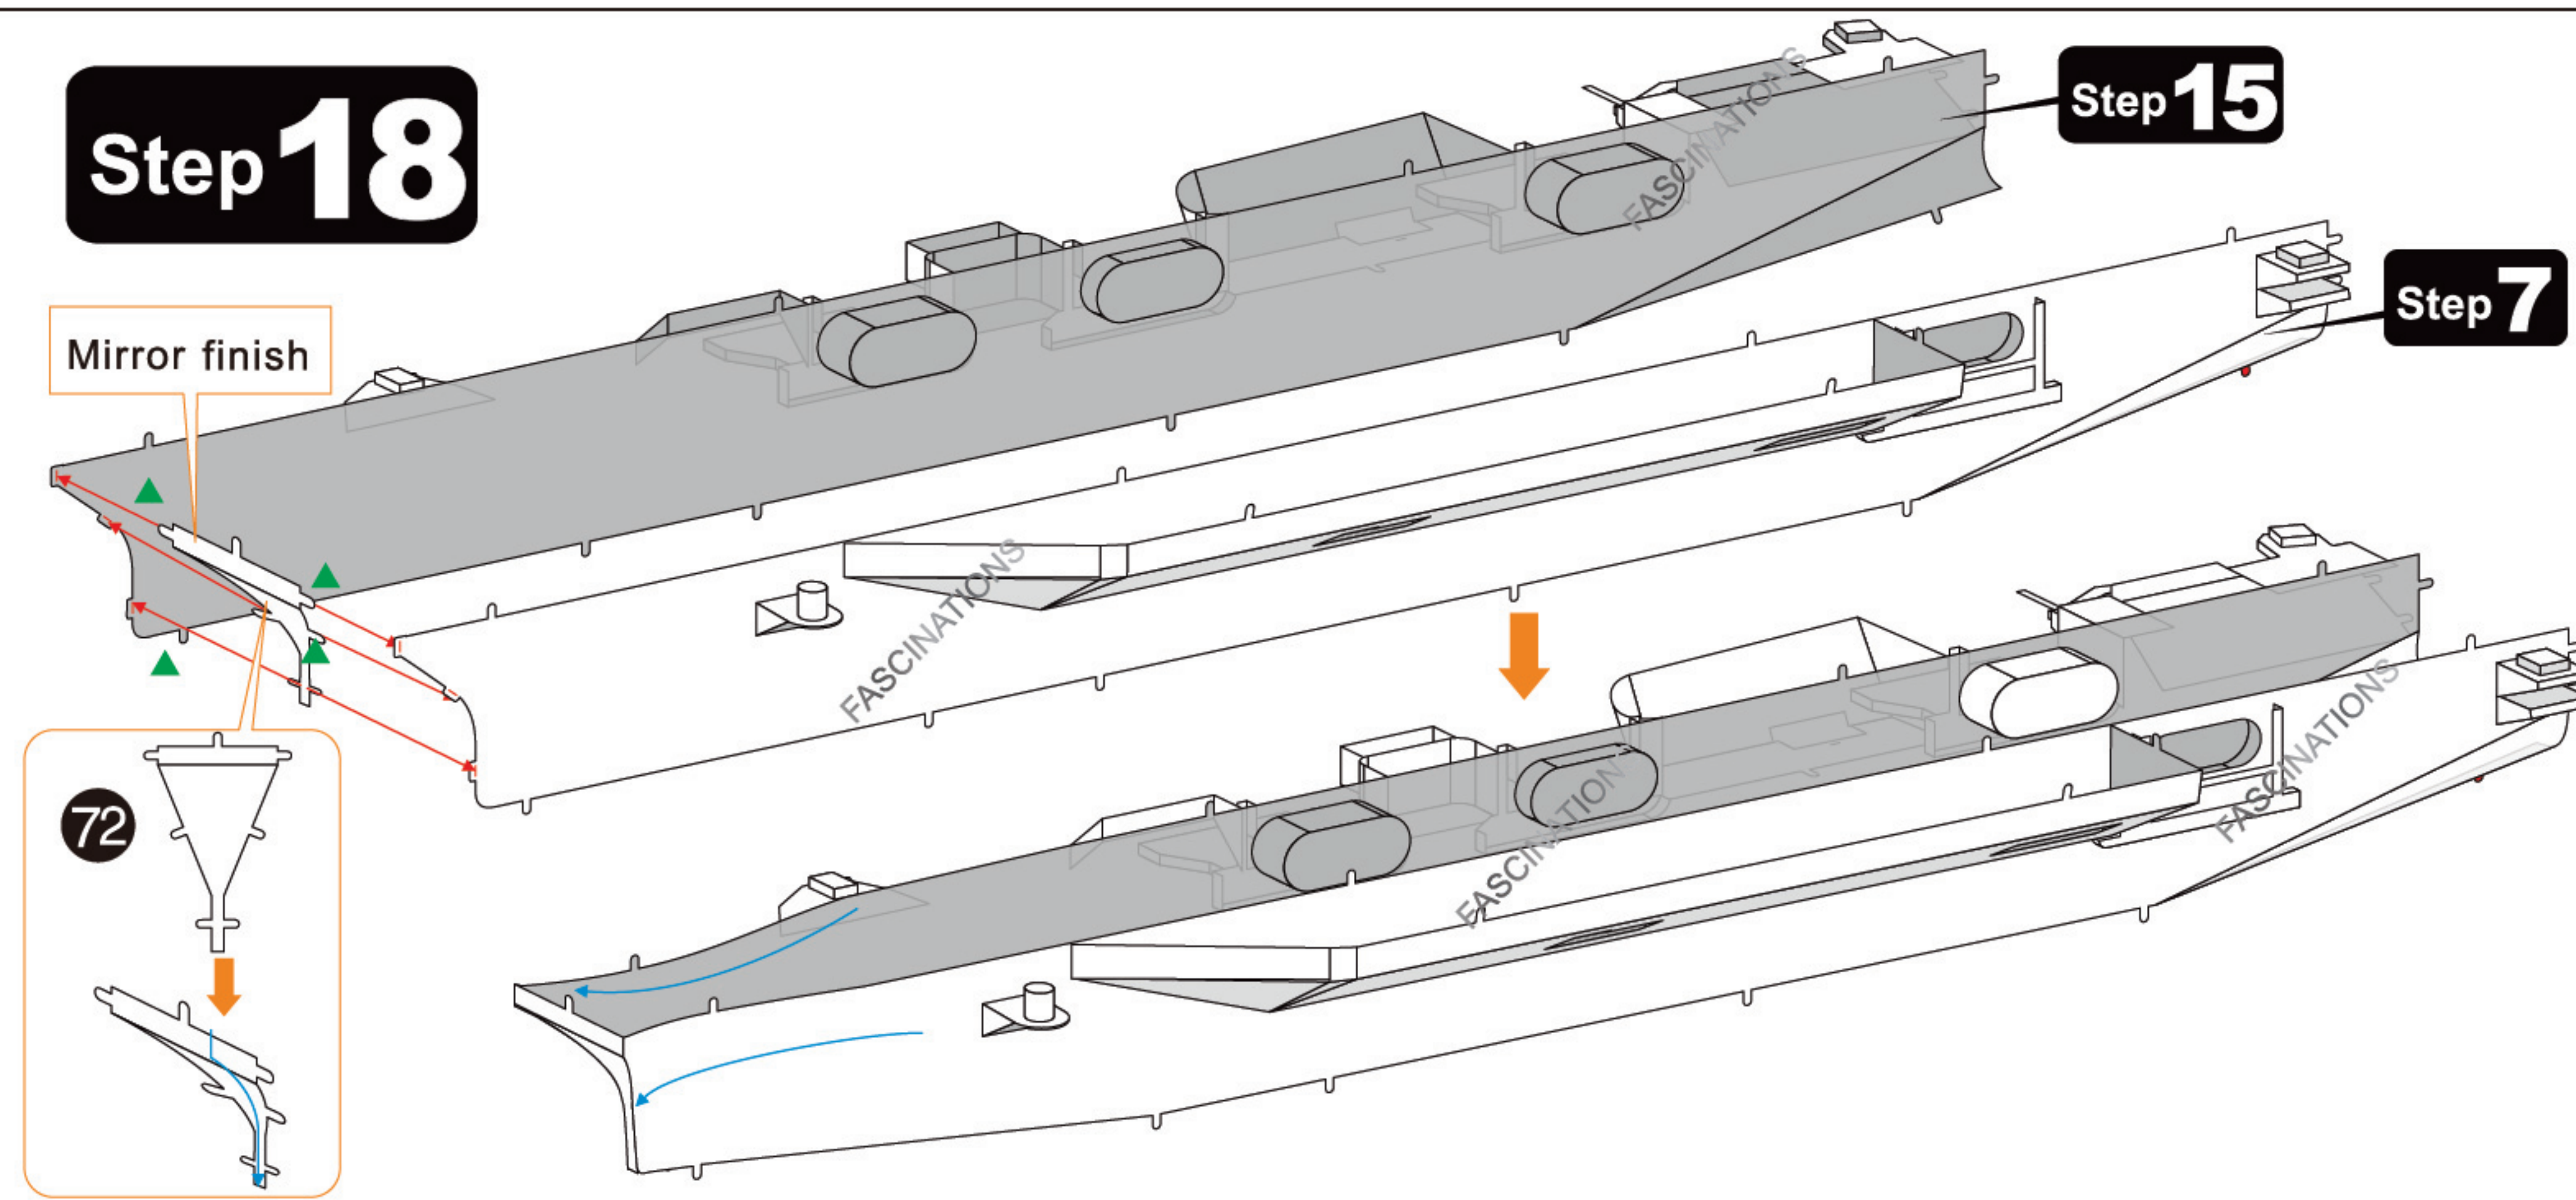

Step 15

Step 7

Step 19

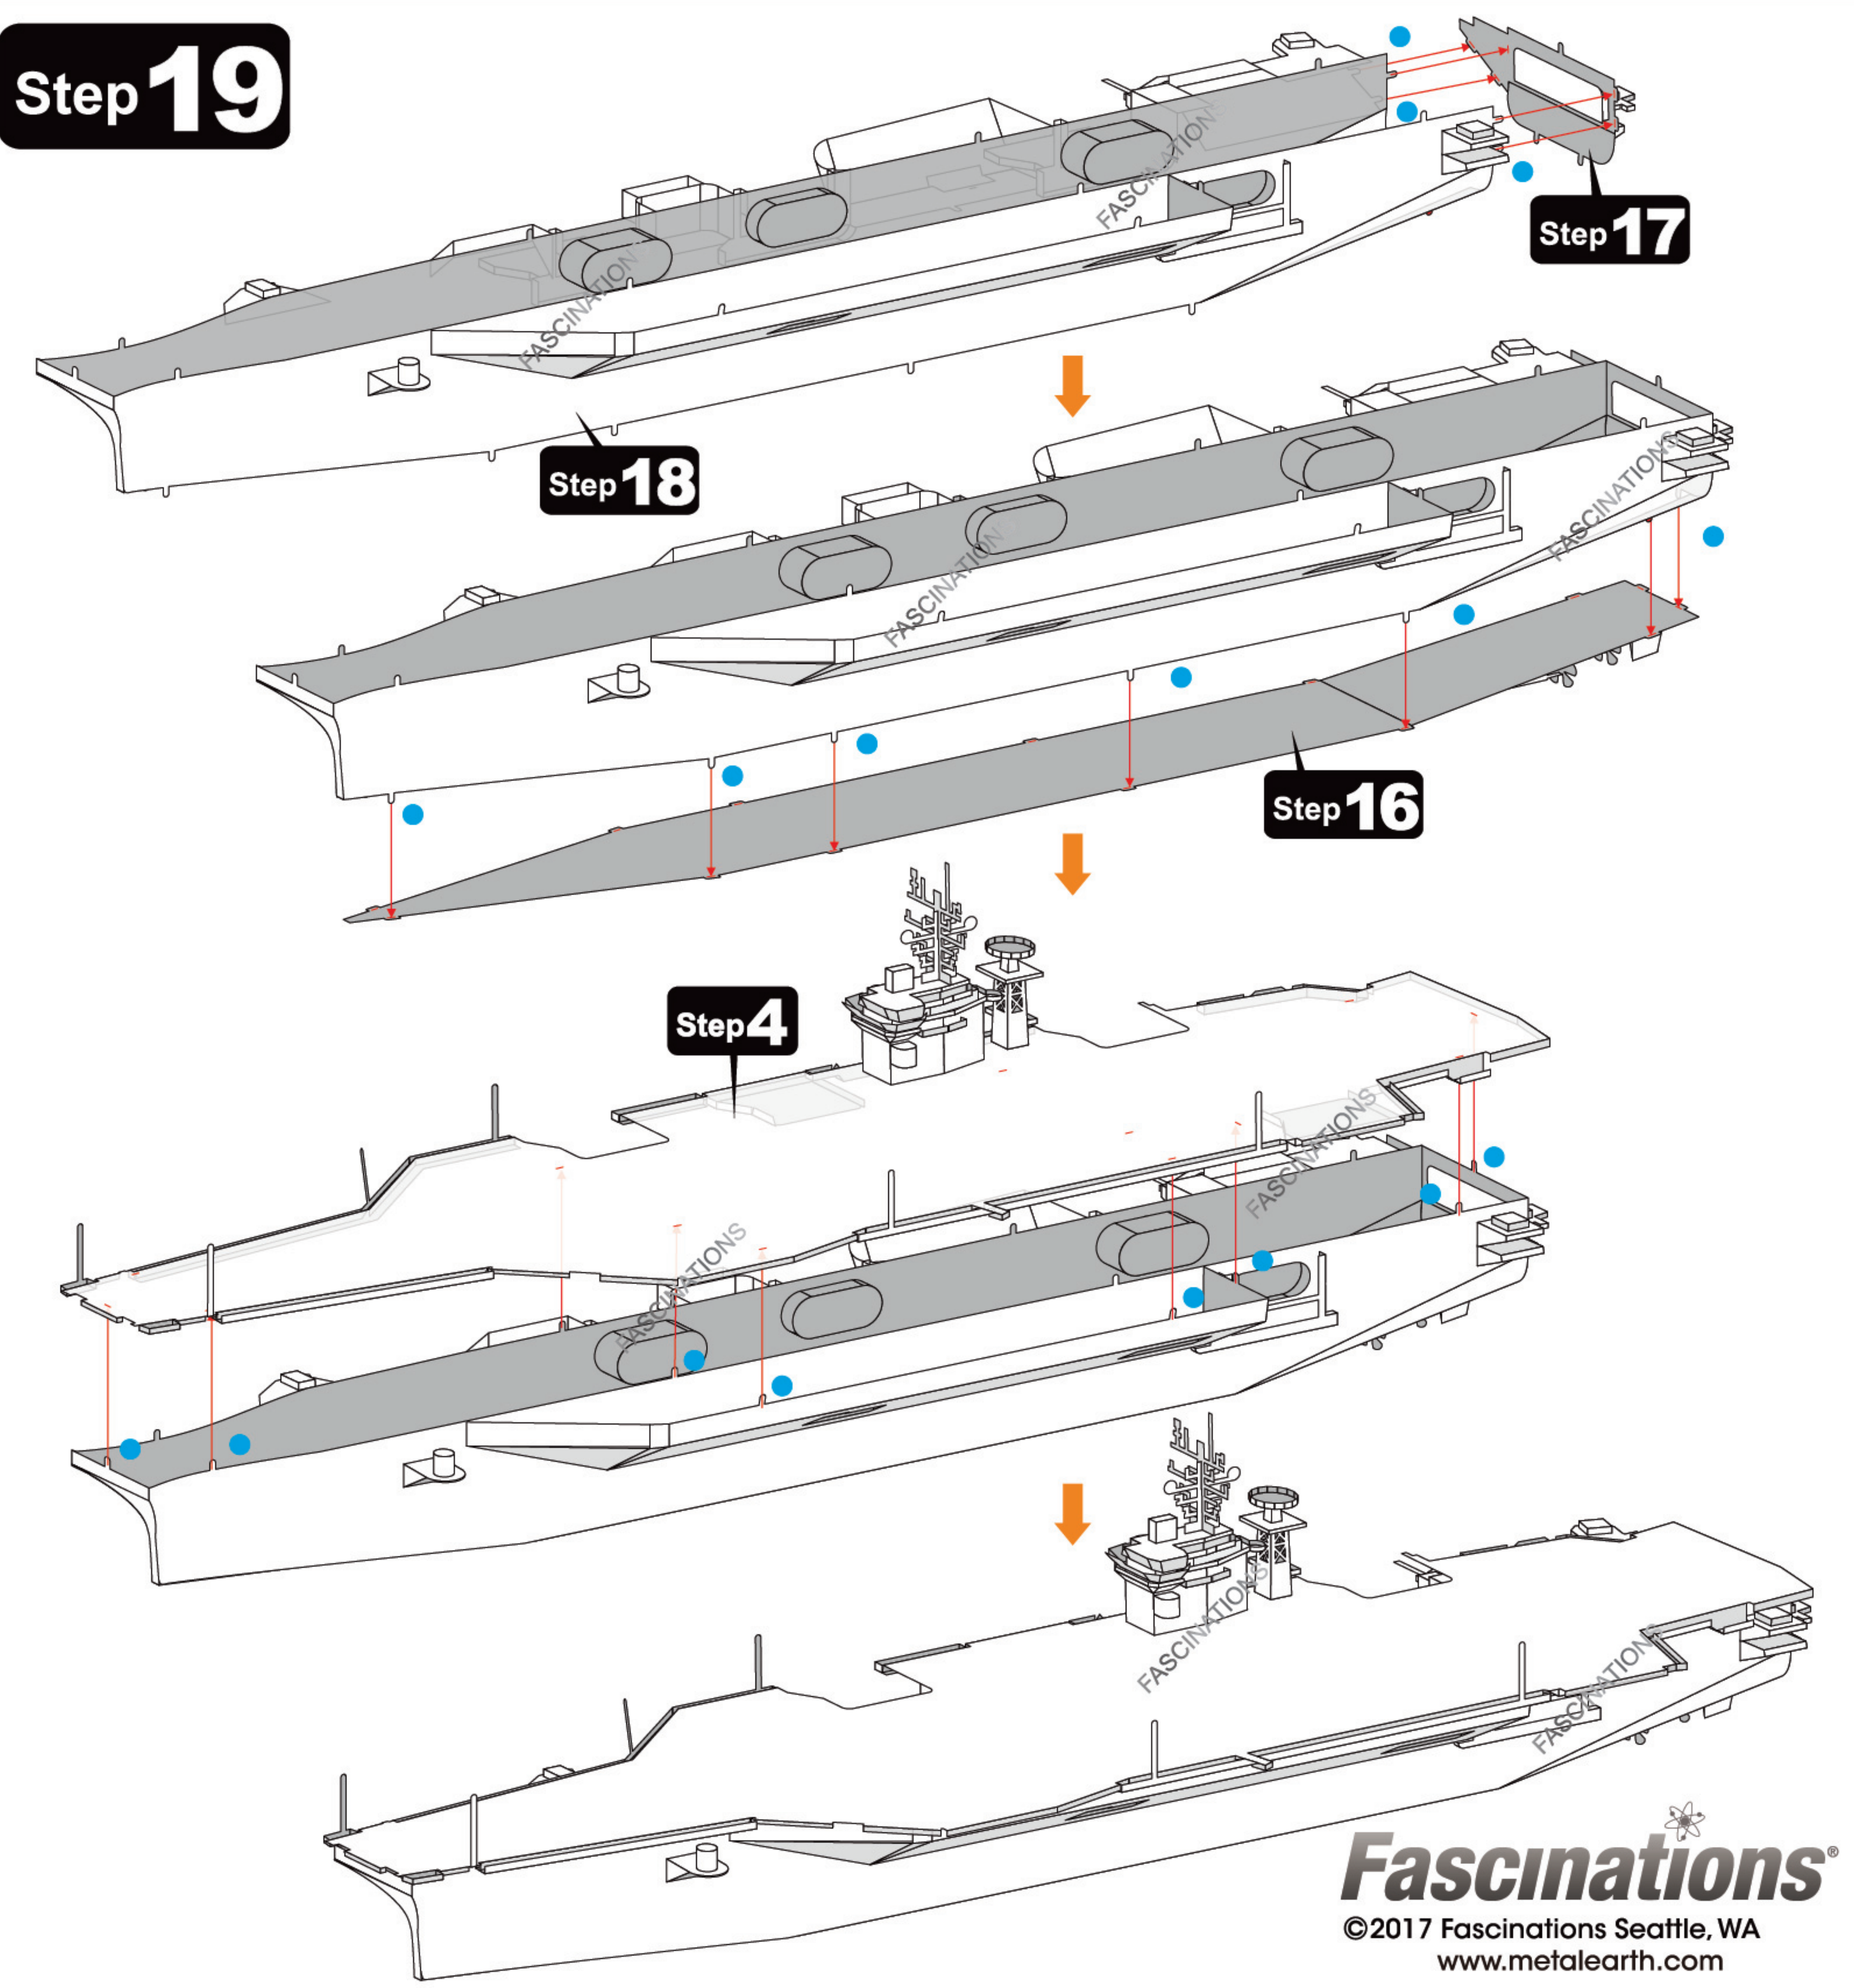

Fascinations
©2017 Fascinations Seattle, WA
www.metalearth.com

