


BB-8™

Item No. MMS271





It is highly recommended that you visit www.metalearth.com/360/mms271 to see the completed model before assembling your own

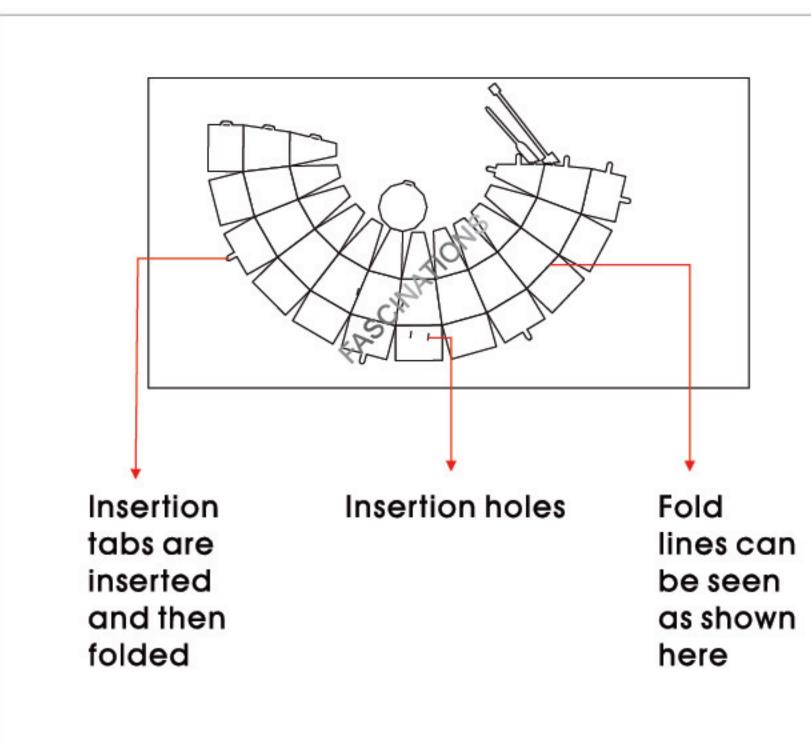



Engraved side



Non-engraved side







Insert tab and bend 90 degrees




Insert tab and twist 90 degrees

Assembly tip:


If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish

Recommended tools:


Wire cutters: helpful for taking parts from the metal sheets.

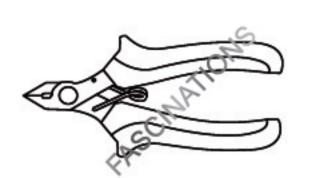


-Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.

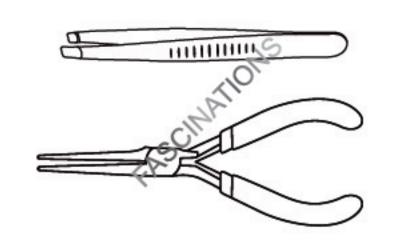

Metal sheets

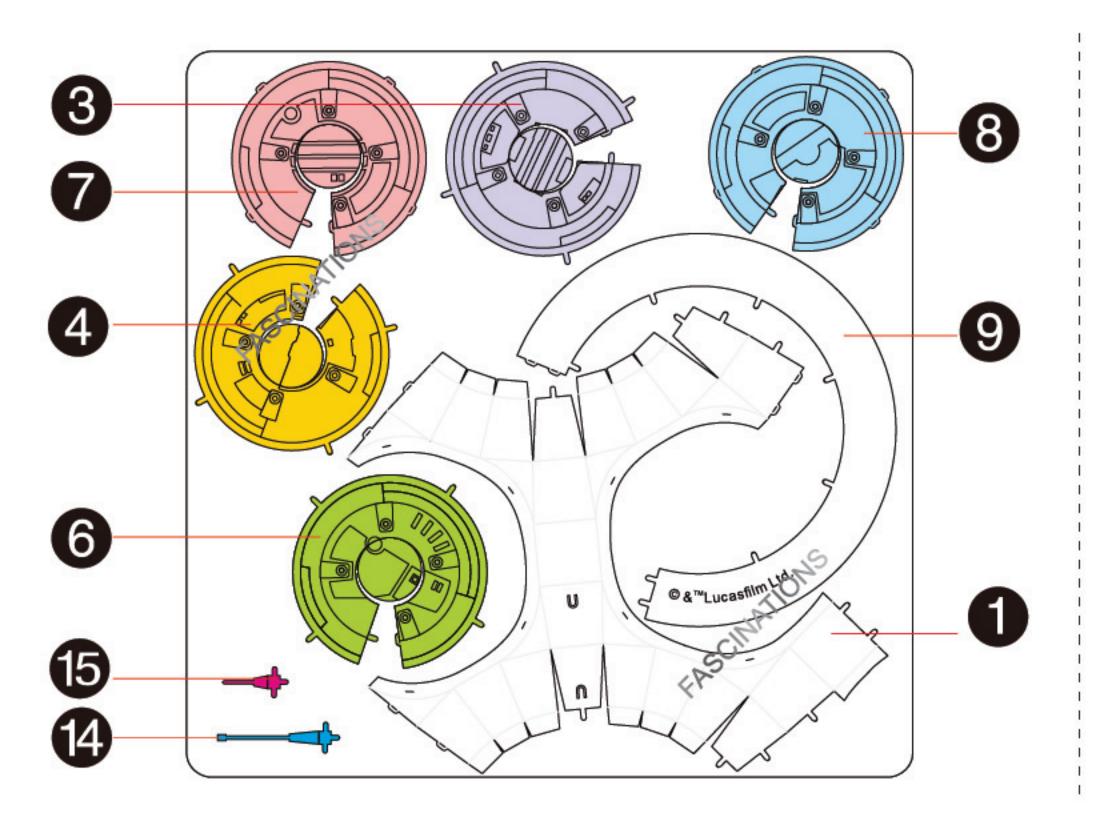

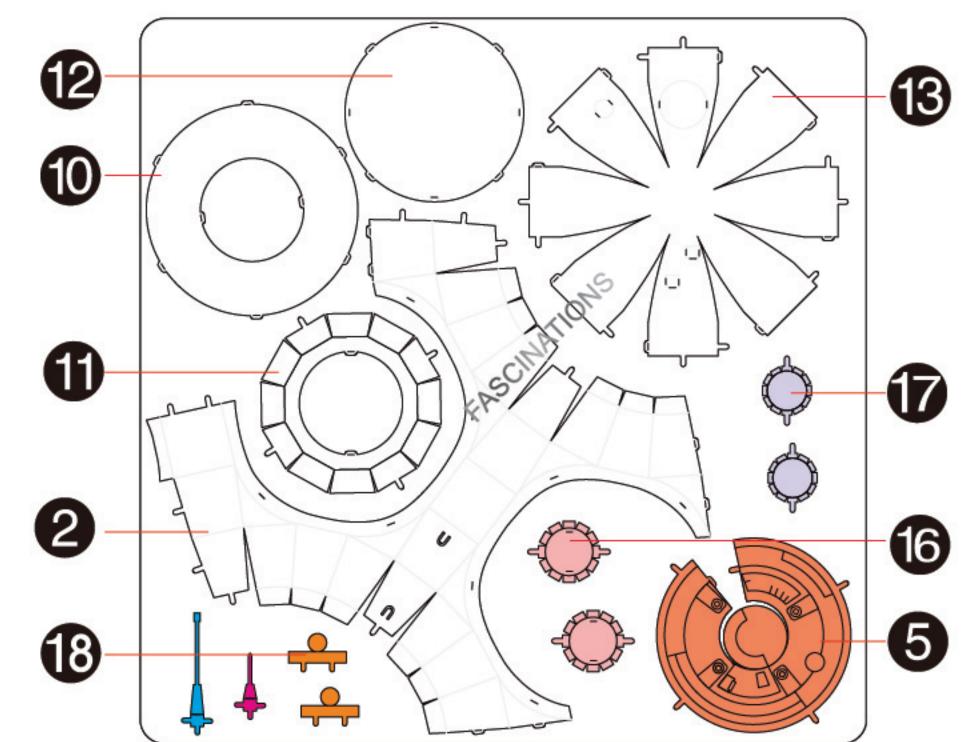



In order to avoid possible injury from sharp edges, please carefully discard the metal sheet after parts have been removed

Assembly Flow Chart

