
Meta

3D METAL MODEL KITS

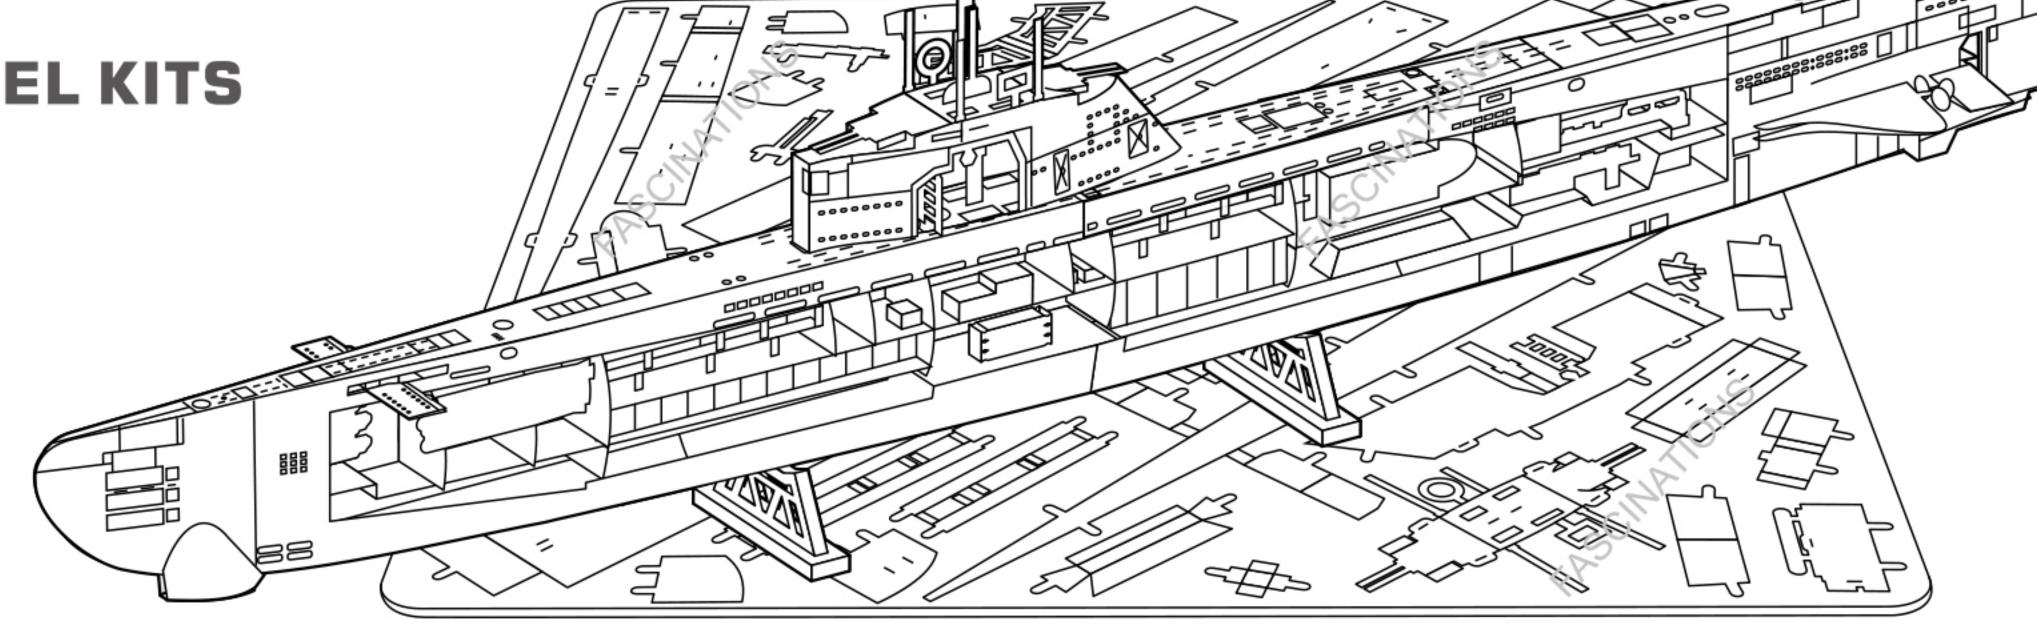


German U-Boat Item No. MMS121





It is highly recommended that you visit www.metalearth.com/360/mms121 to see the completed model before assembling your own

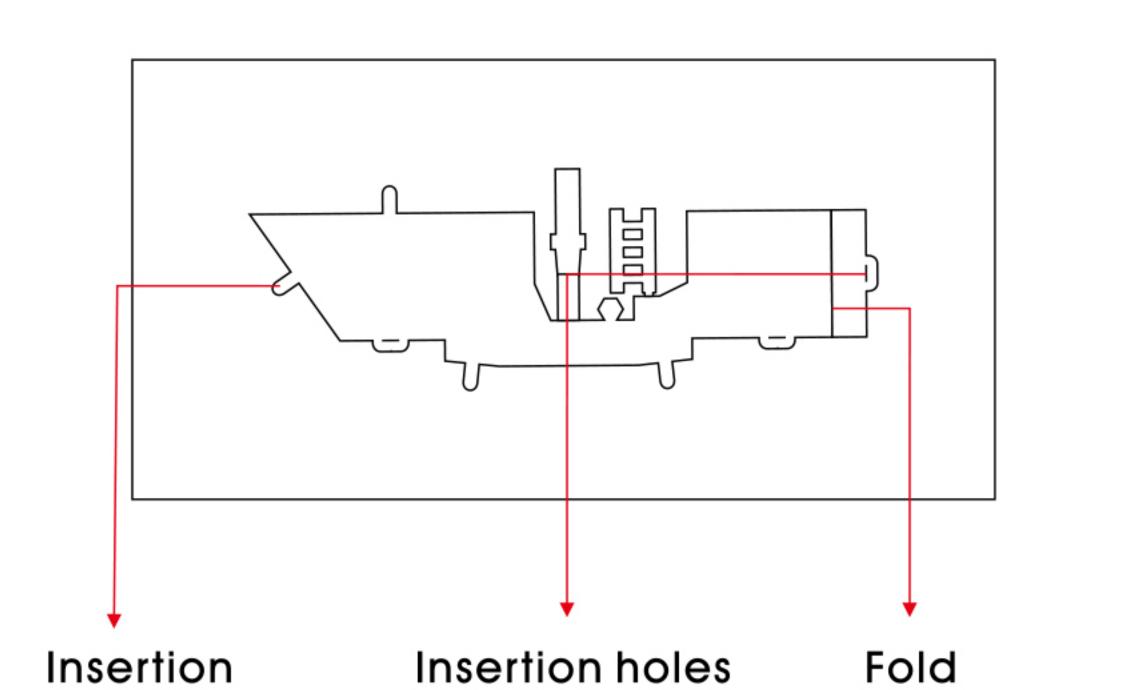

tabs are

inserted


and then

folded

Insertion holes Fold lines can be seen as shown here



Non-engraved side

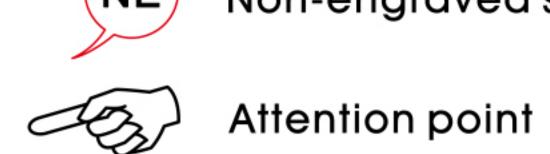



Insert tab and bend 90 degrees



Insert tab and twist 90 degrees




Assembly tip:


If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish


Recommended tools:


-Wire cutters: helpful for taking parts from the metal sheets.

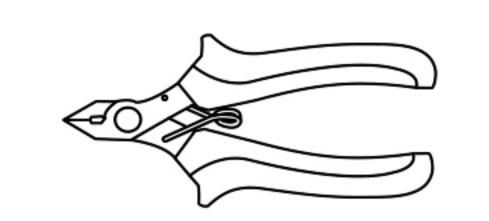

-Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.

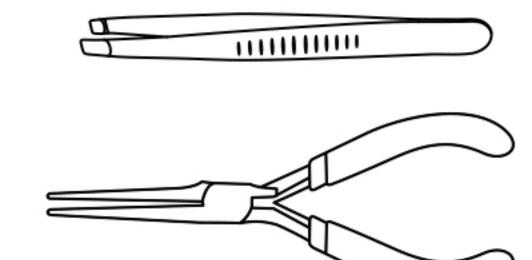

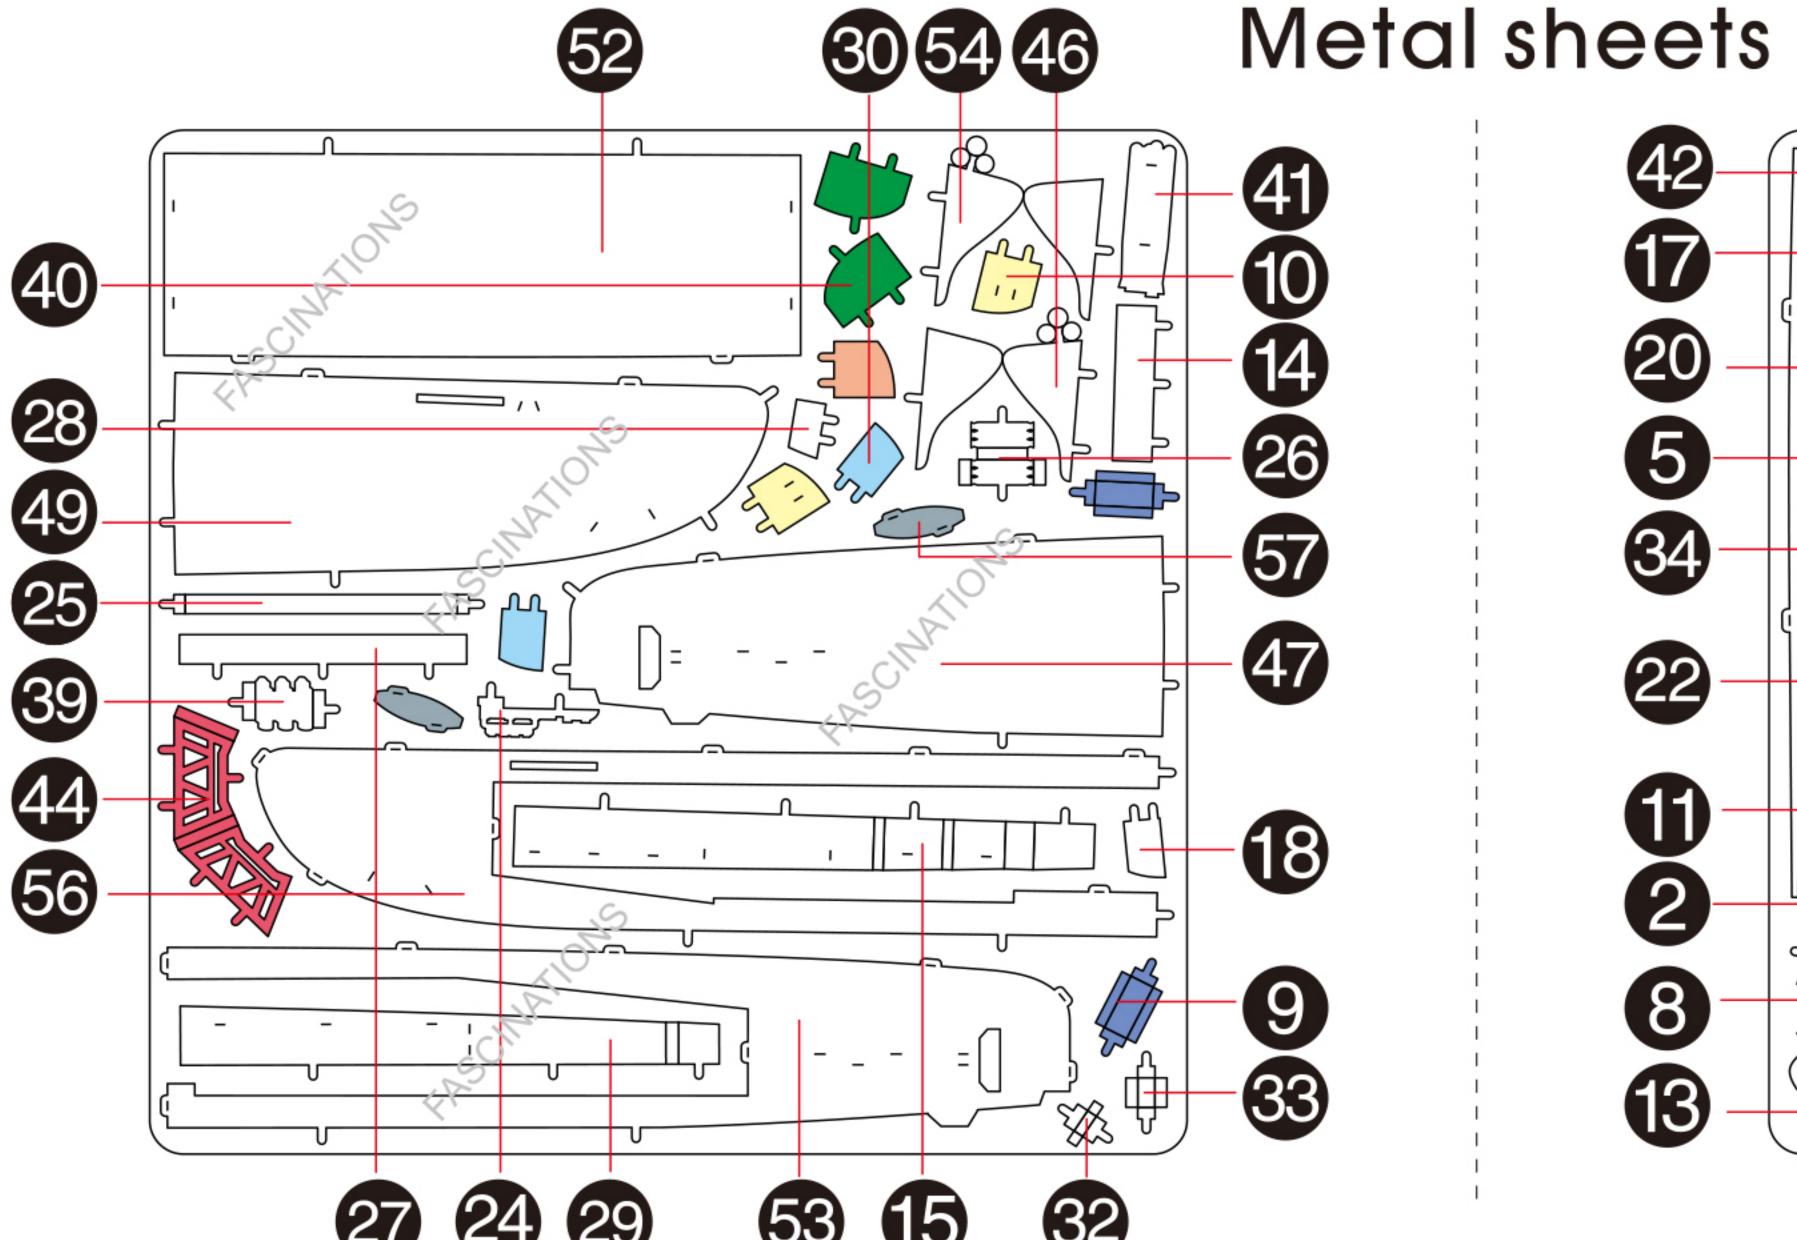

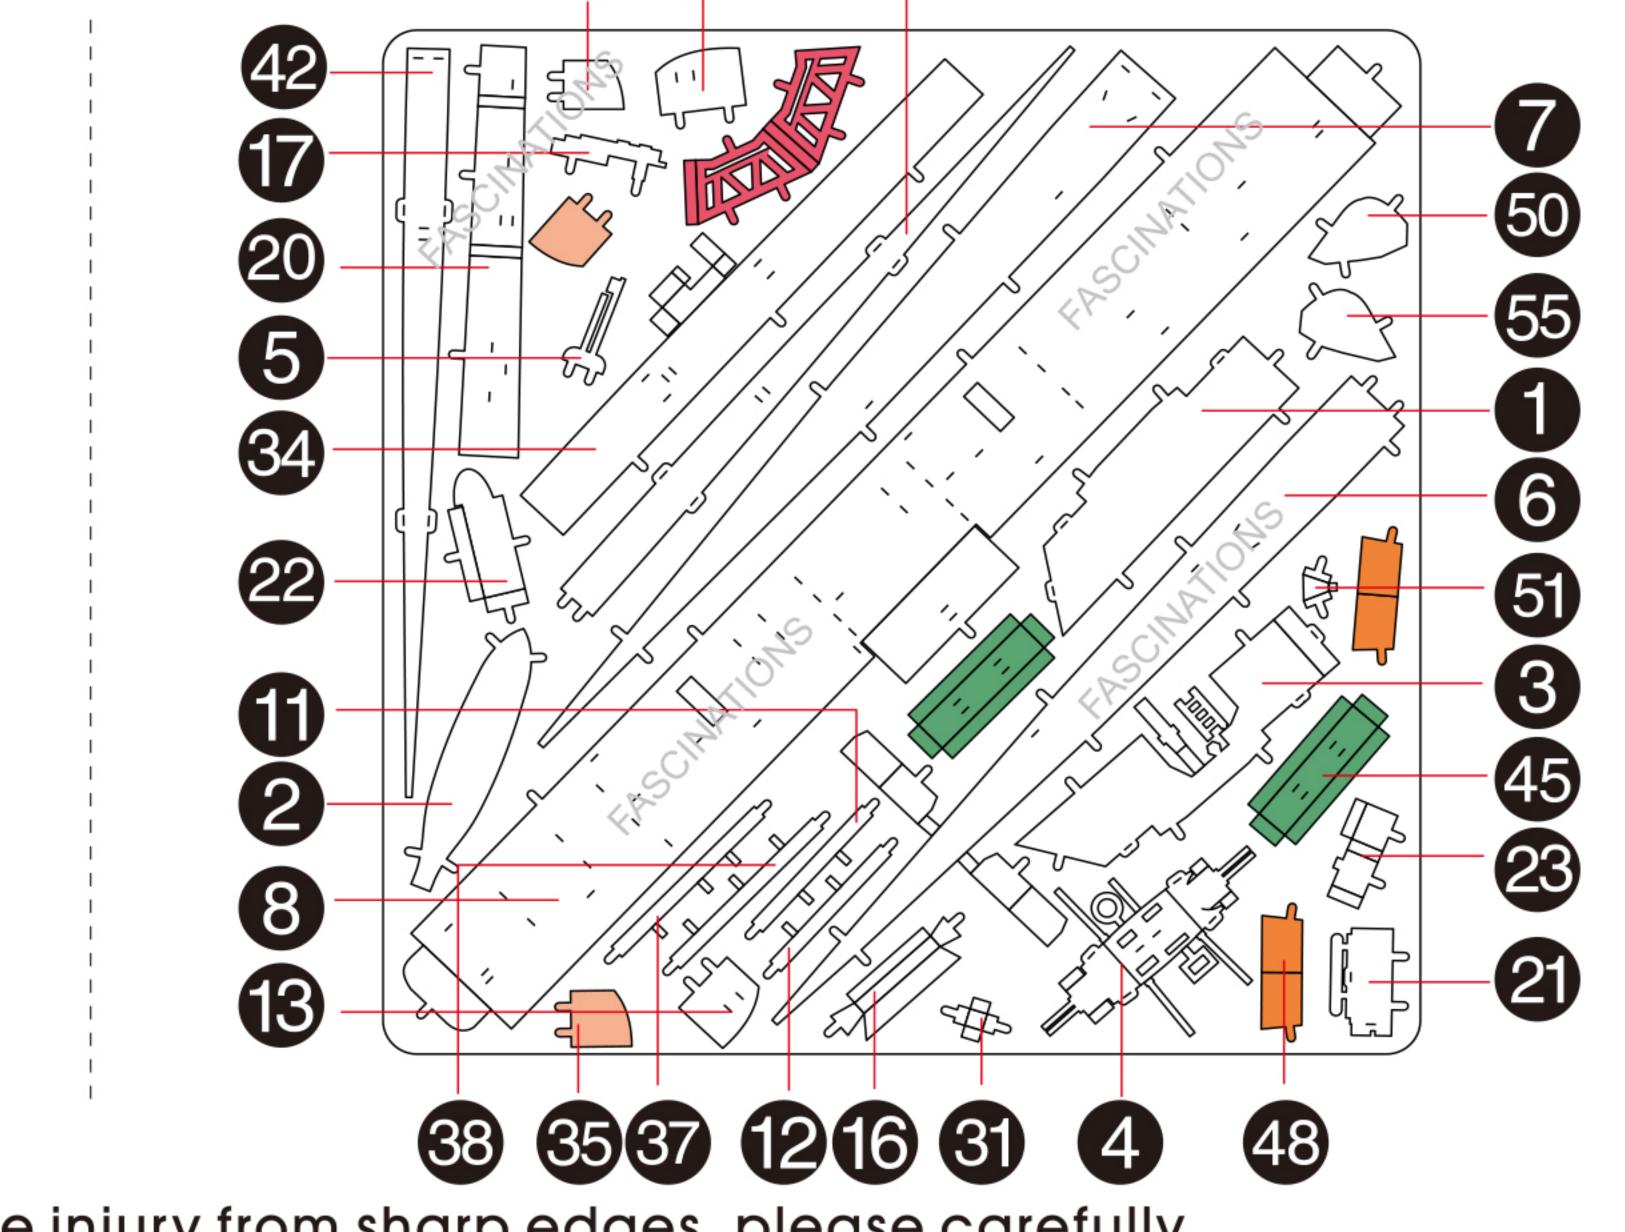



In order to avoid possible injury from sharp edges, please carefully discard the metal sheet after parts have been removed

Assembly Flow Chart

