




HAN'S SPEEDER™ Item No.MMS413







It is highly recommended that you visit www.metalearth.com/360/mms 413 to see the completed model before assembling your own

Metal sheets

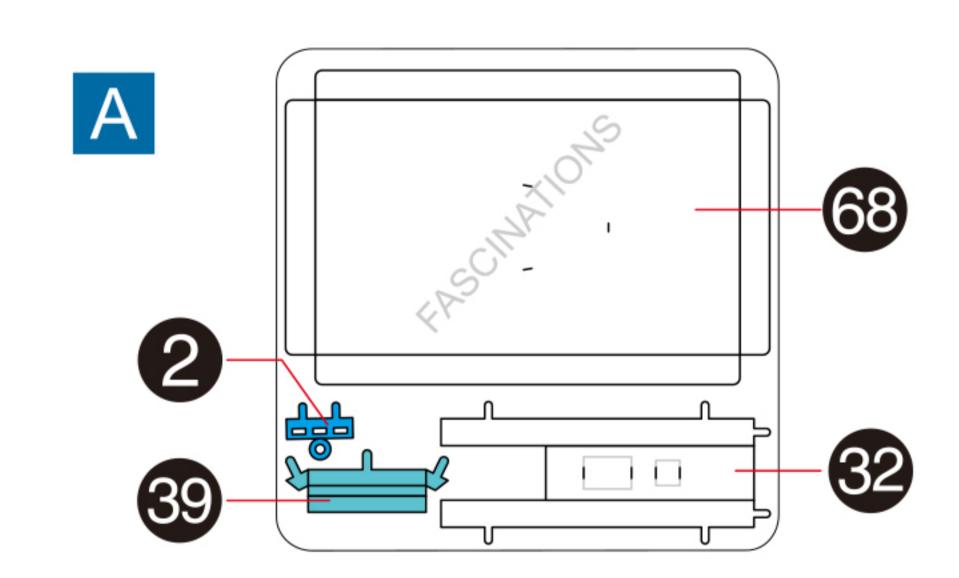

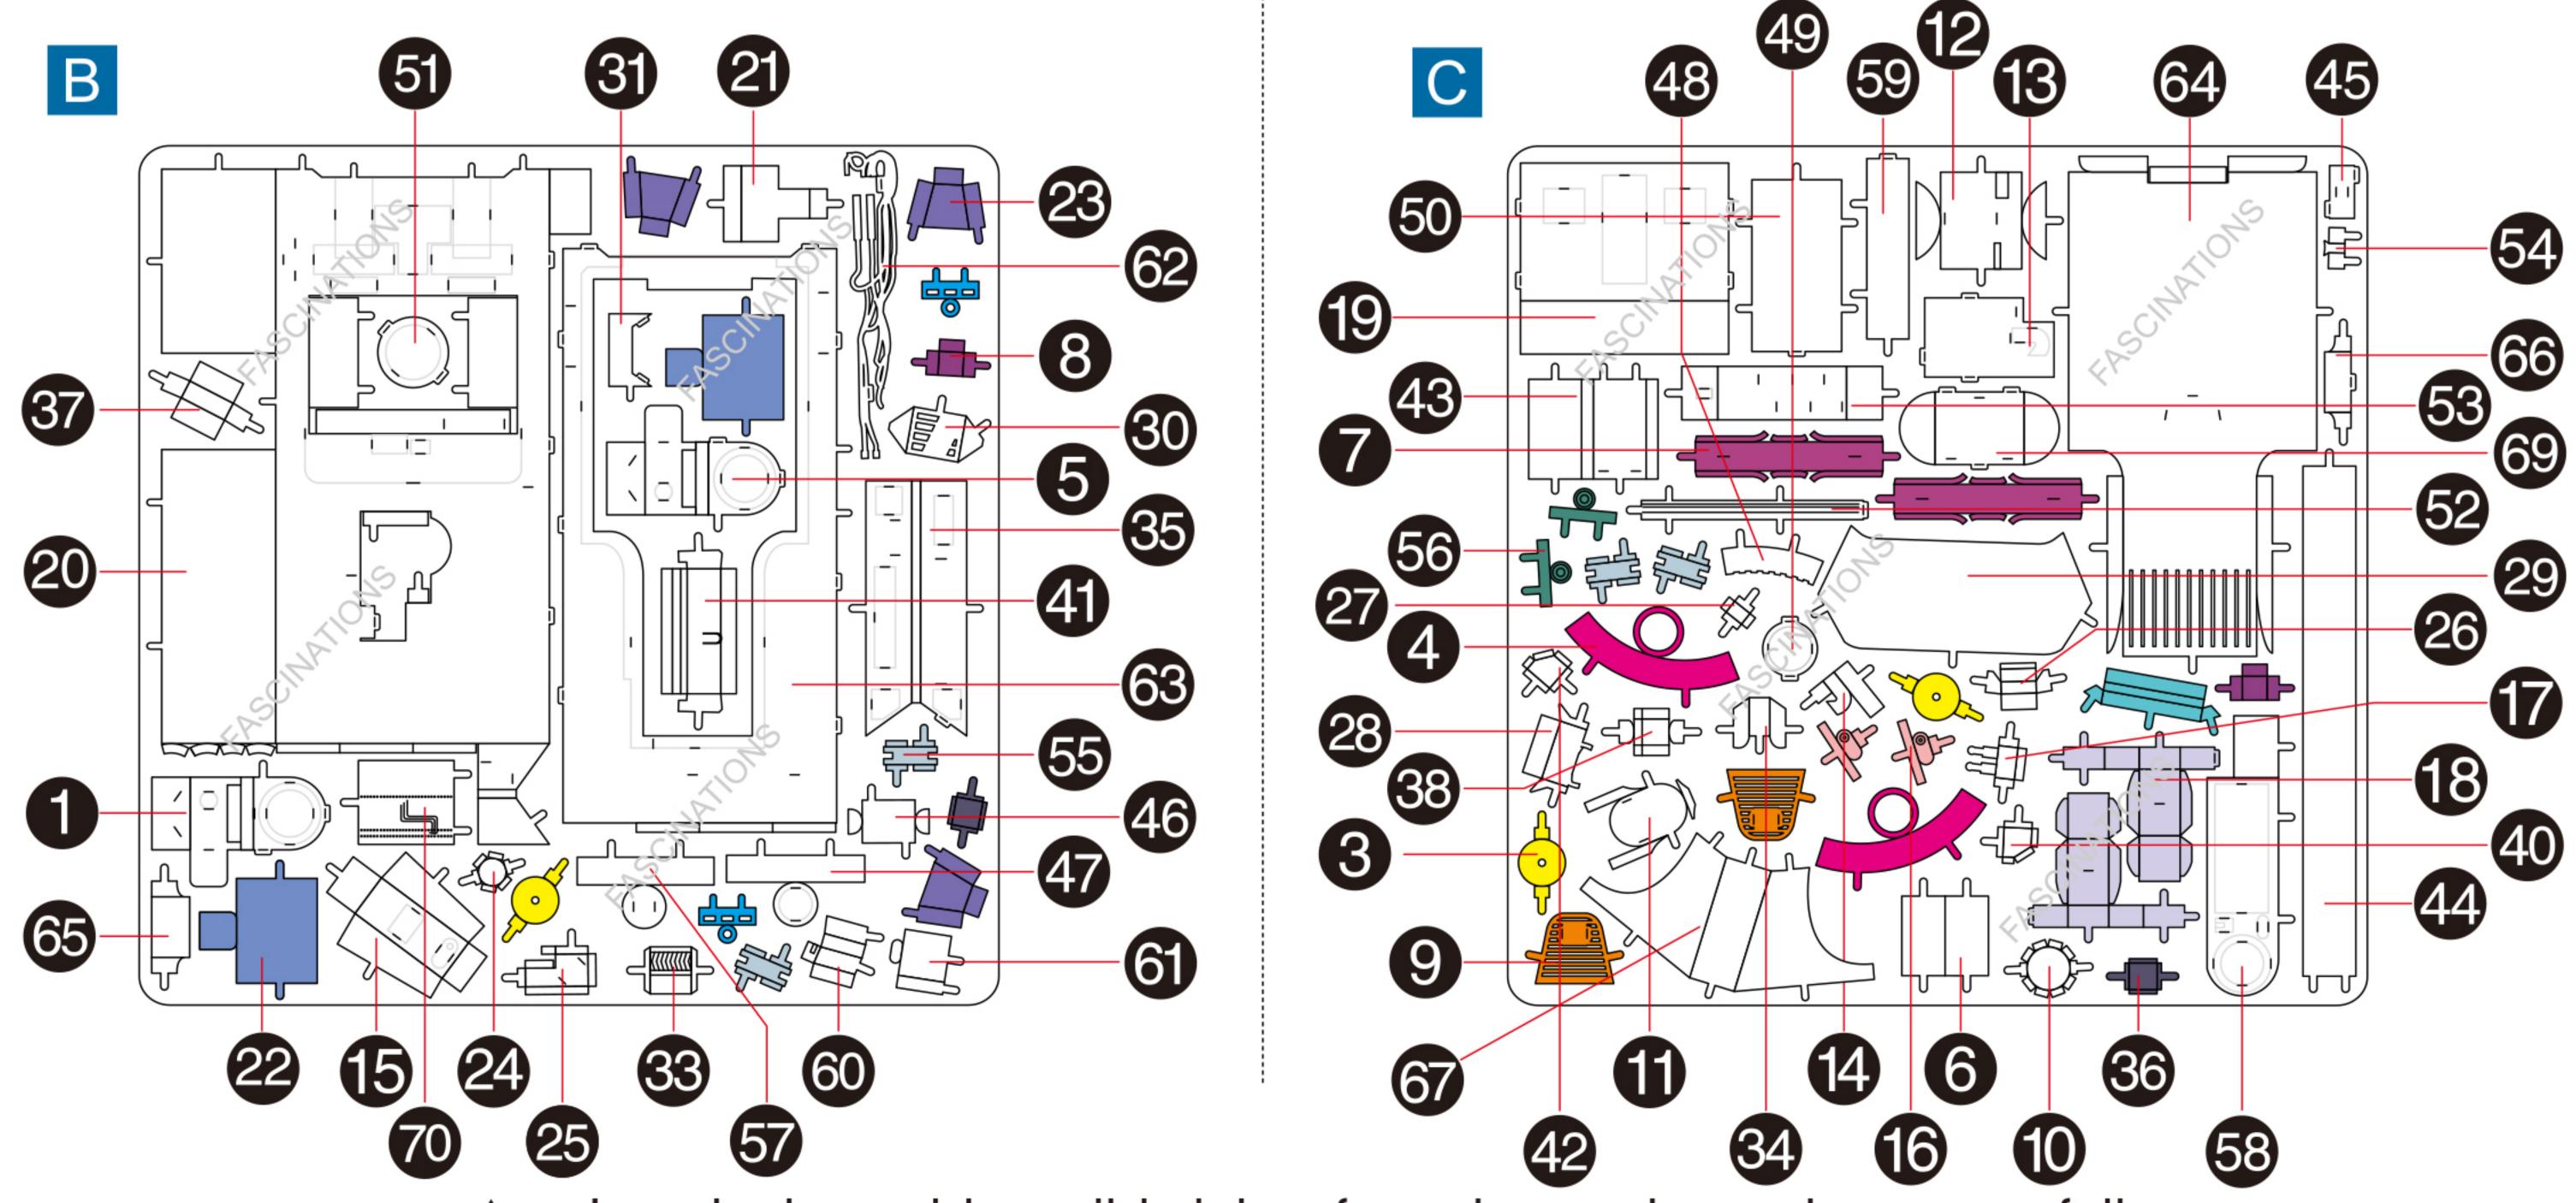


In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed

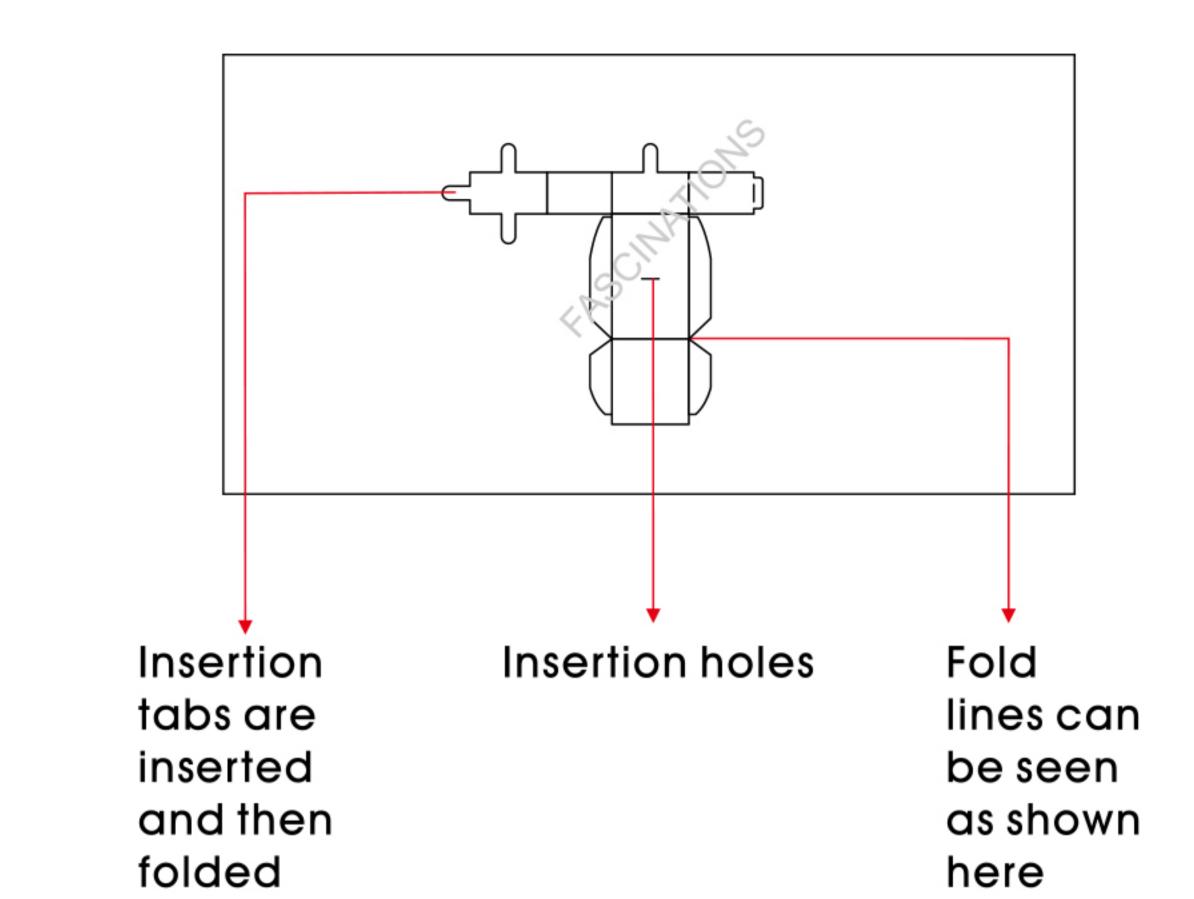

Legends:





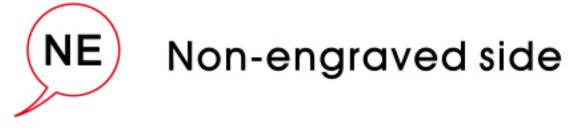

Attention point



Insert tab and bend 90 degrees




Insert tab and twist 90 degrees

Assembly tip:


If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish

Recommended tools:

-Wire cutters: helpful for taking parts from the metal sheets.

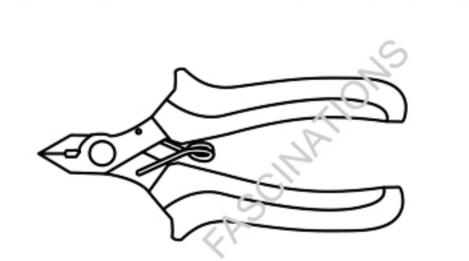

-Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.

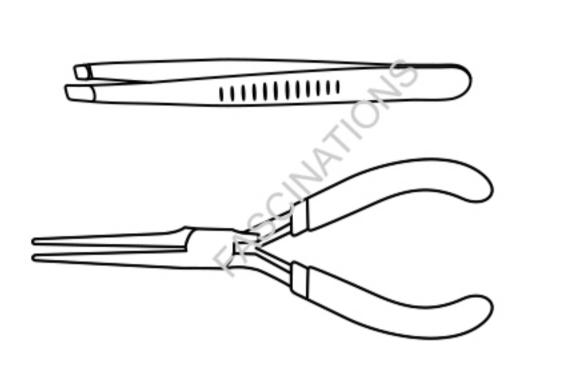

Assembly Flow Chart

