



ICX112

Peacock

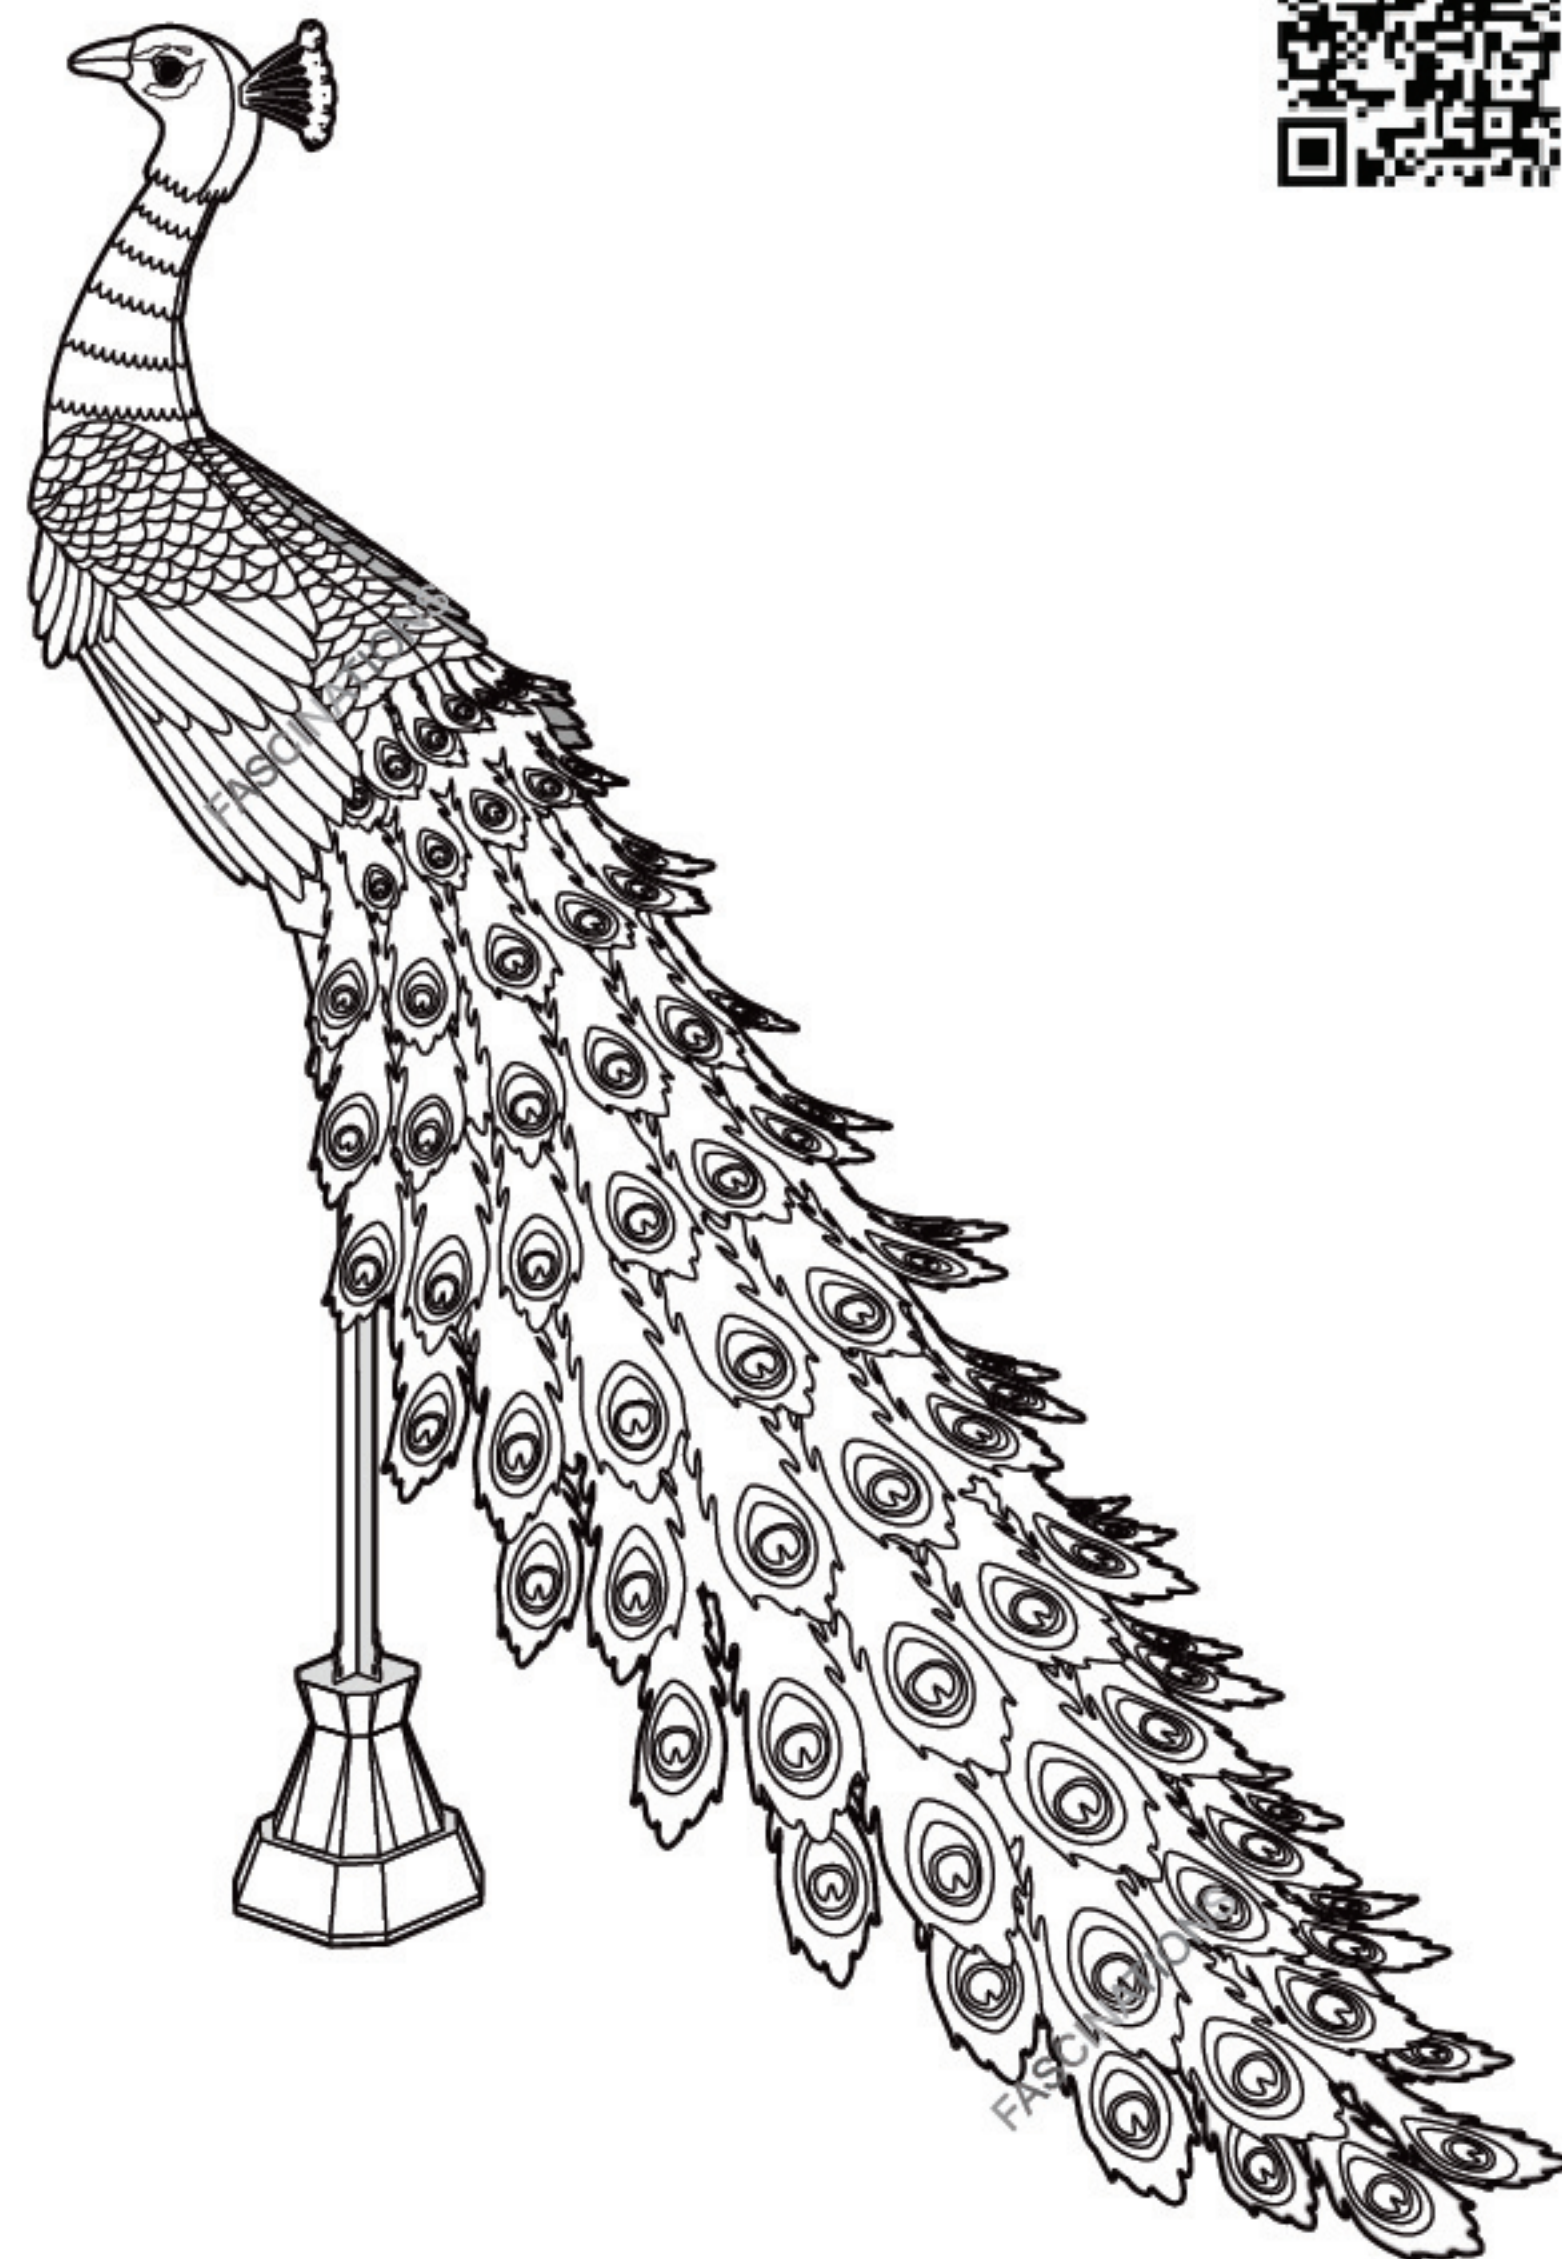

TO CREATE THE BEST CONNECTIONS

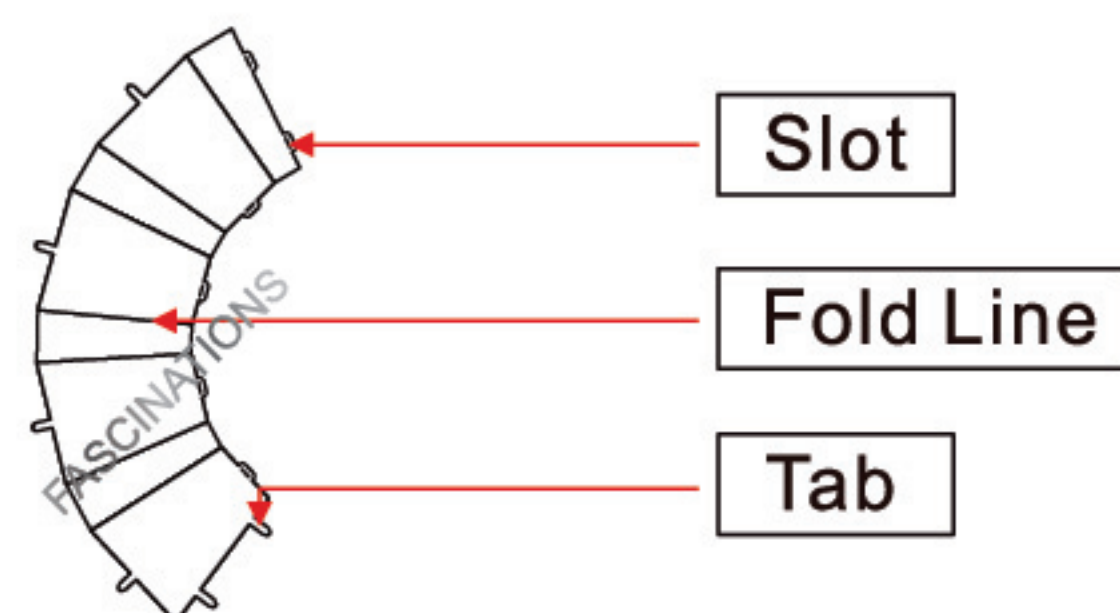

Legends:

- E** Engraved side
olor side
- NE** Non-engraved side
Non-color side

Attention point

Insert tab and bend 90 degrees

Insert tab and twist 90 degrees

Assembly tip:


If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish

Recommended tools:

-Wire cutters: helpful for taking parts from the metal sheets.



-Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.

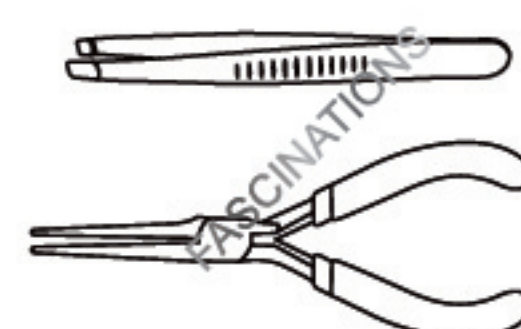


METAL SHEET



Foam sticker


D

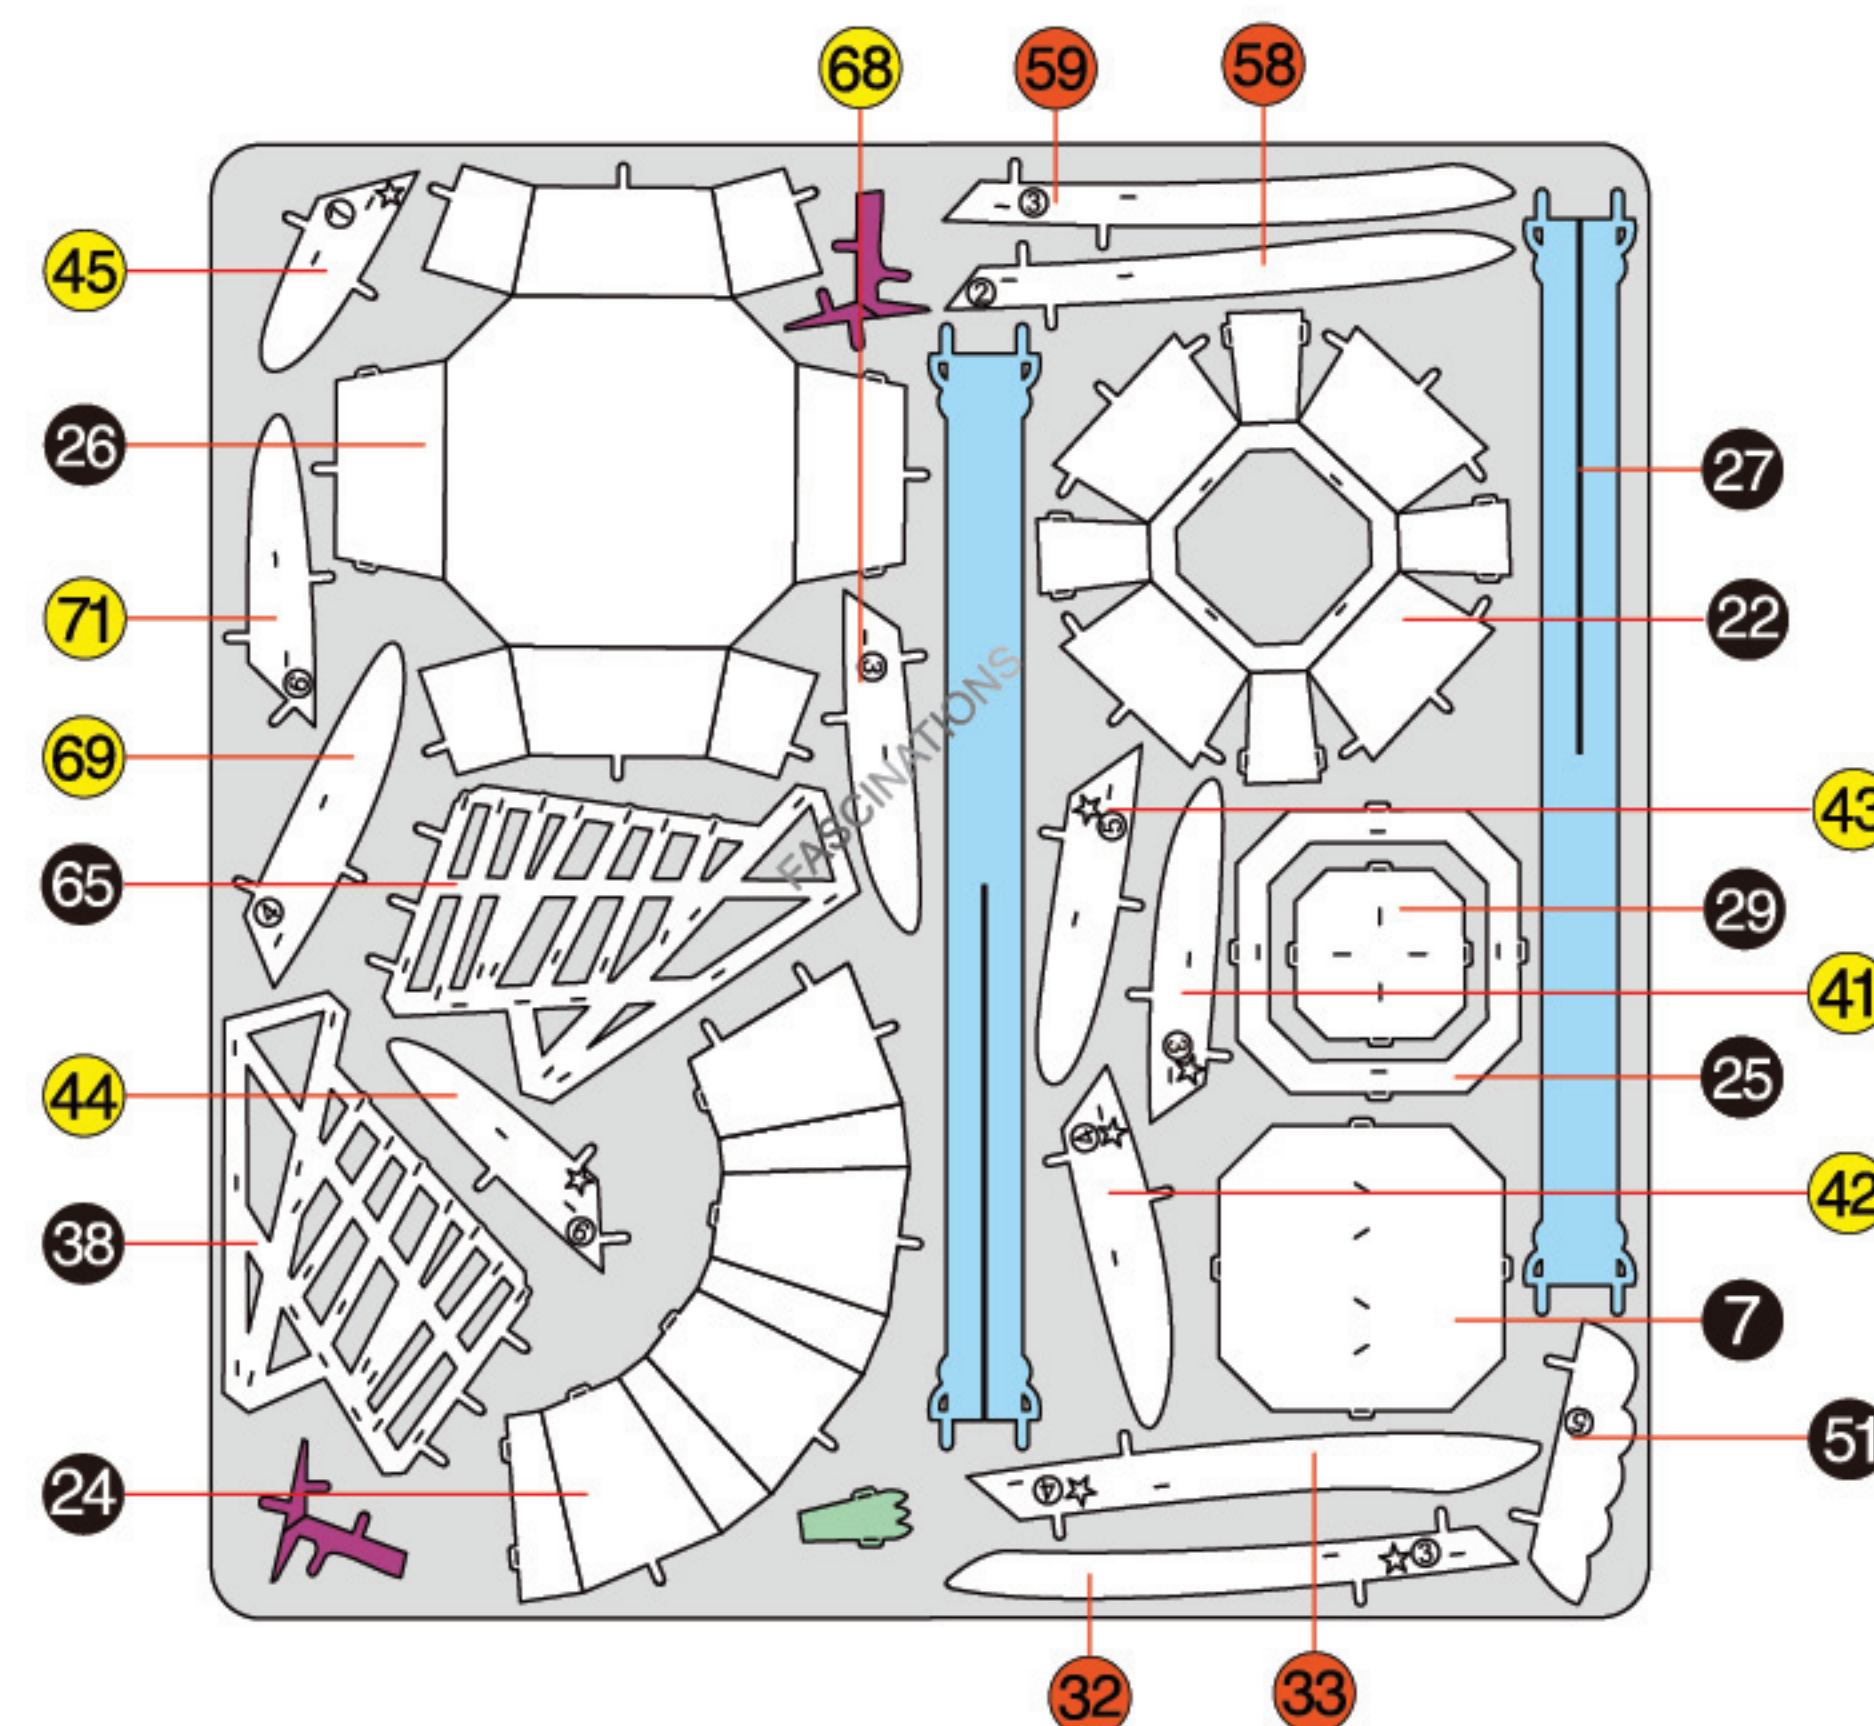


In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed.

METAL SHEETS


A

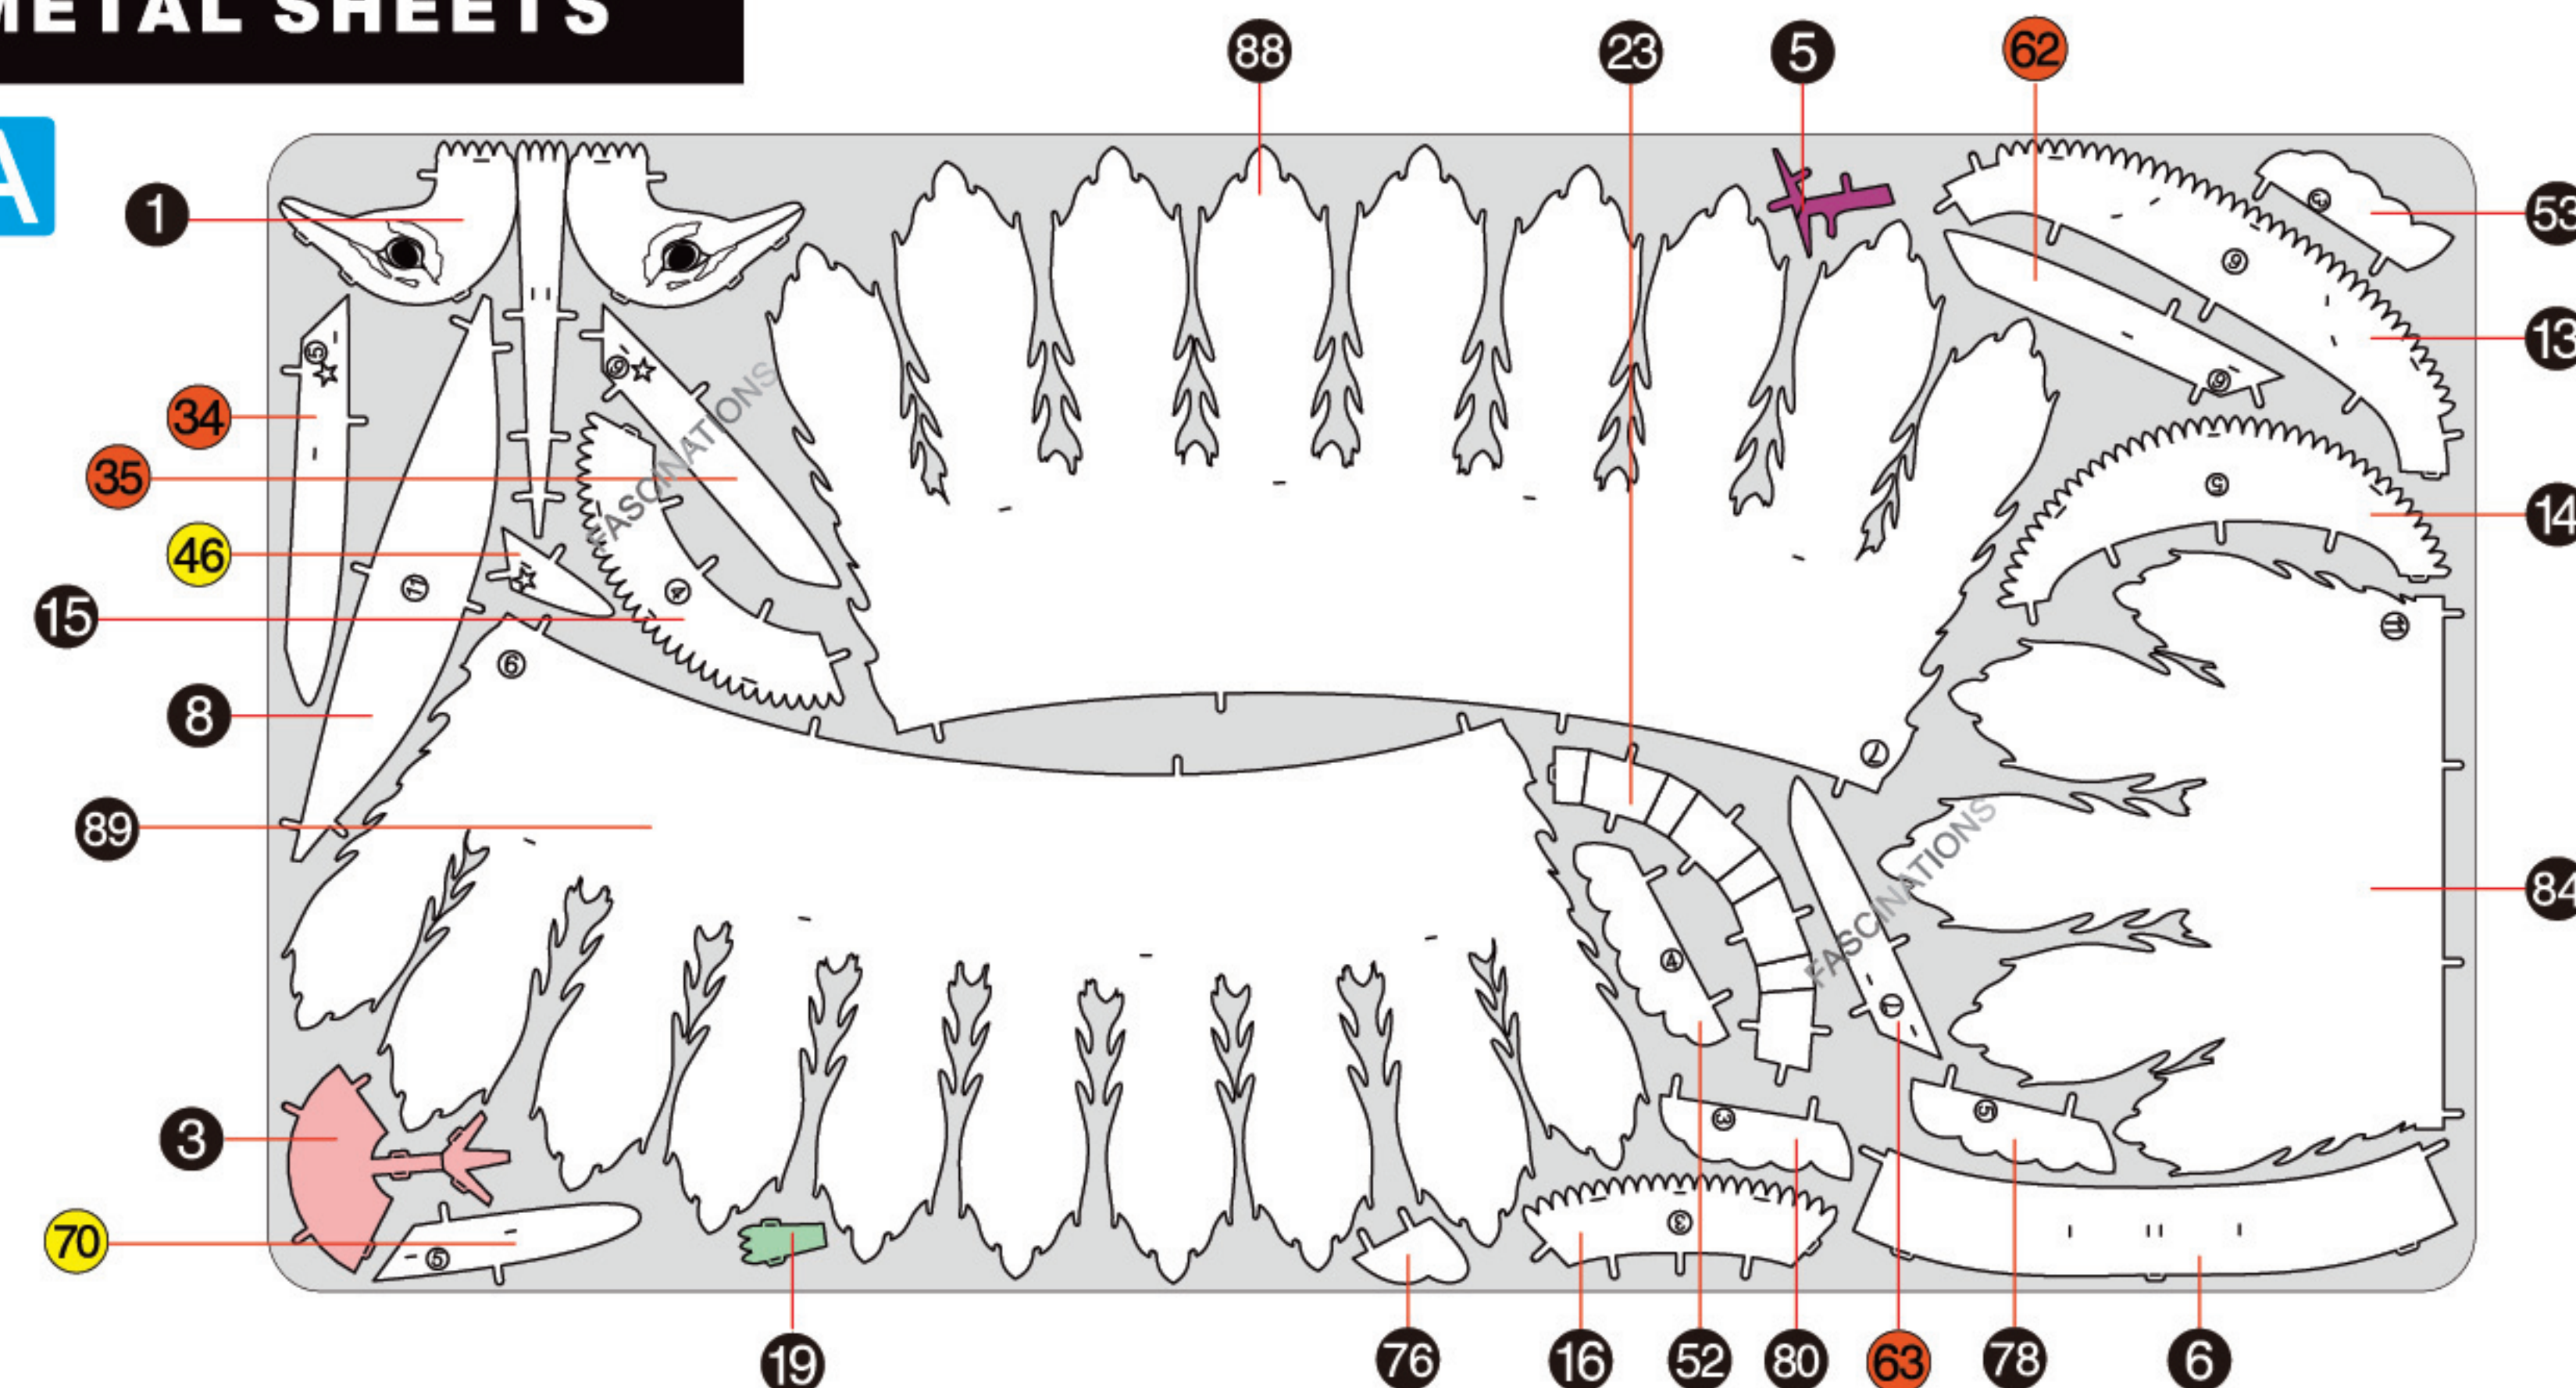

B

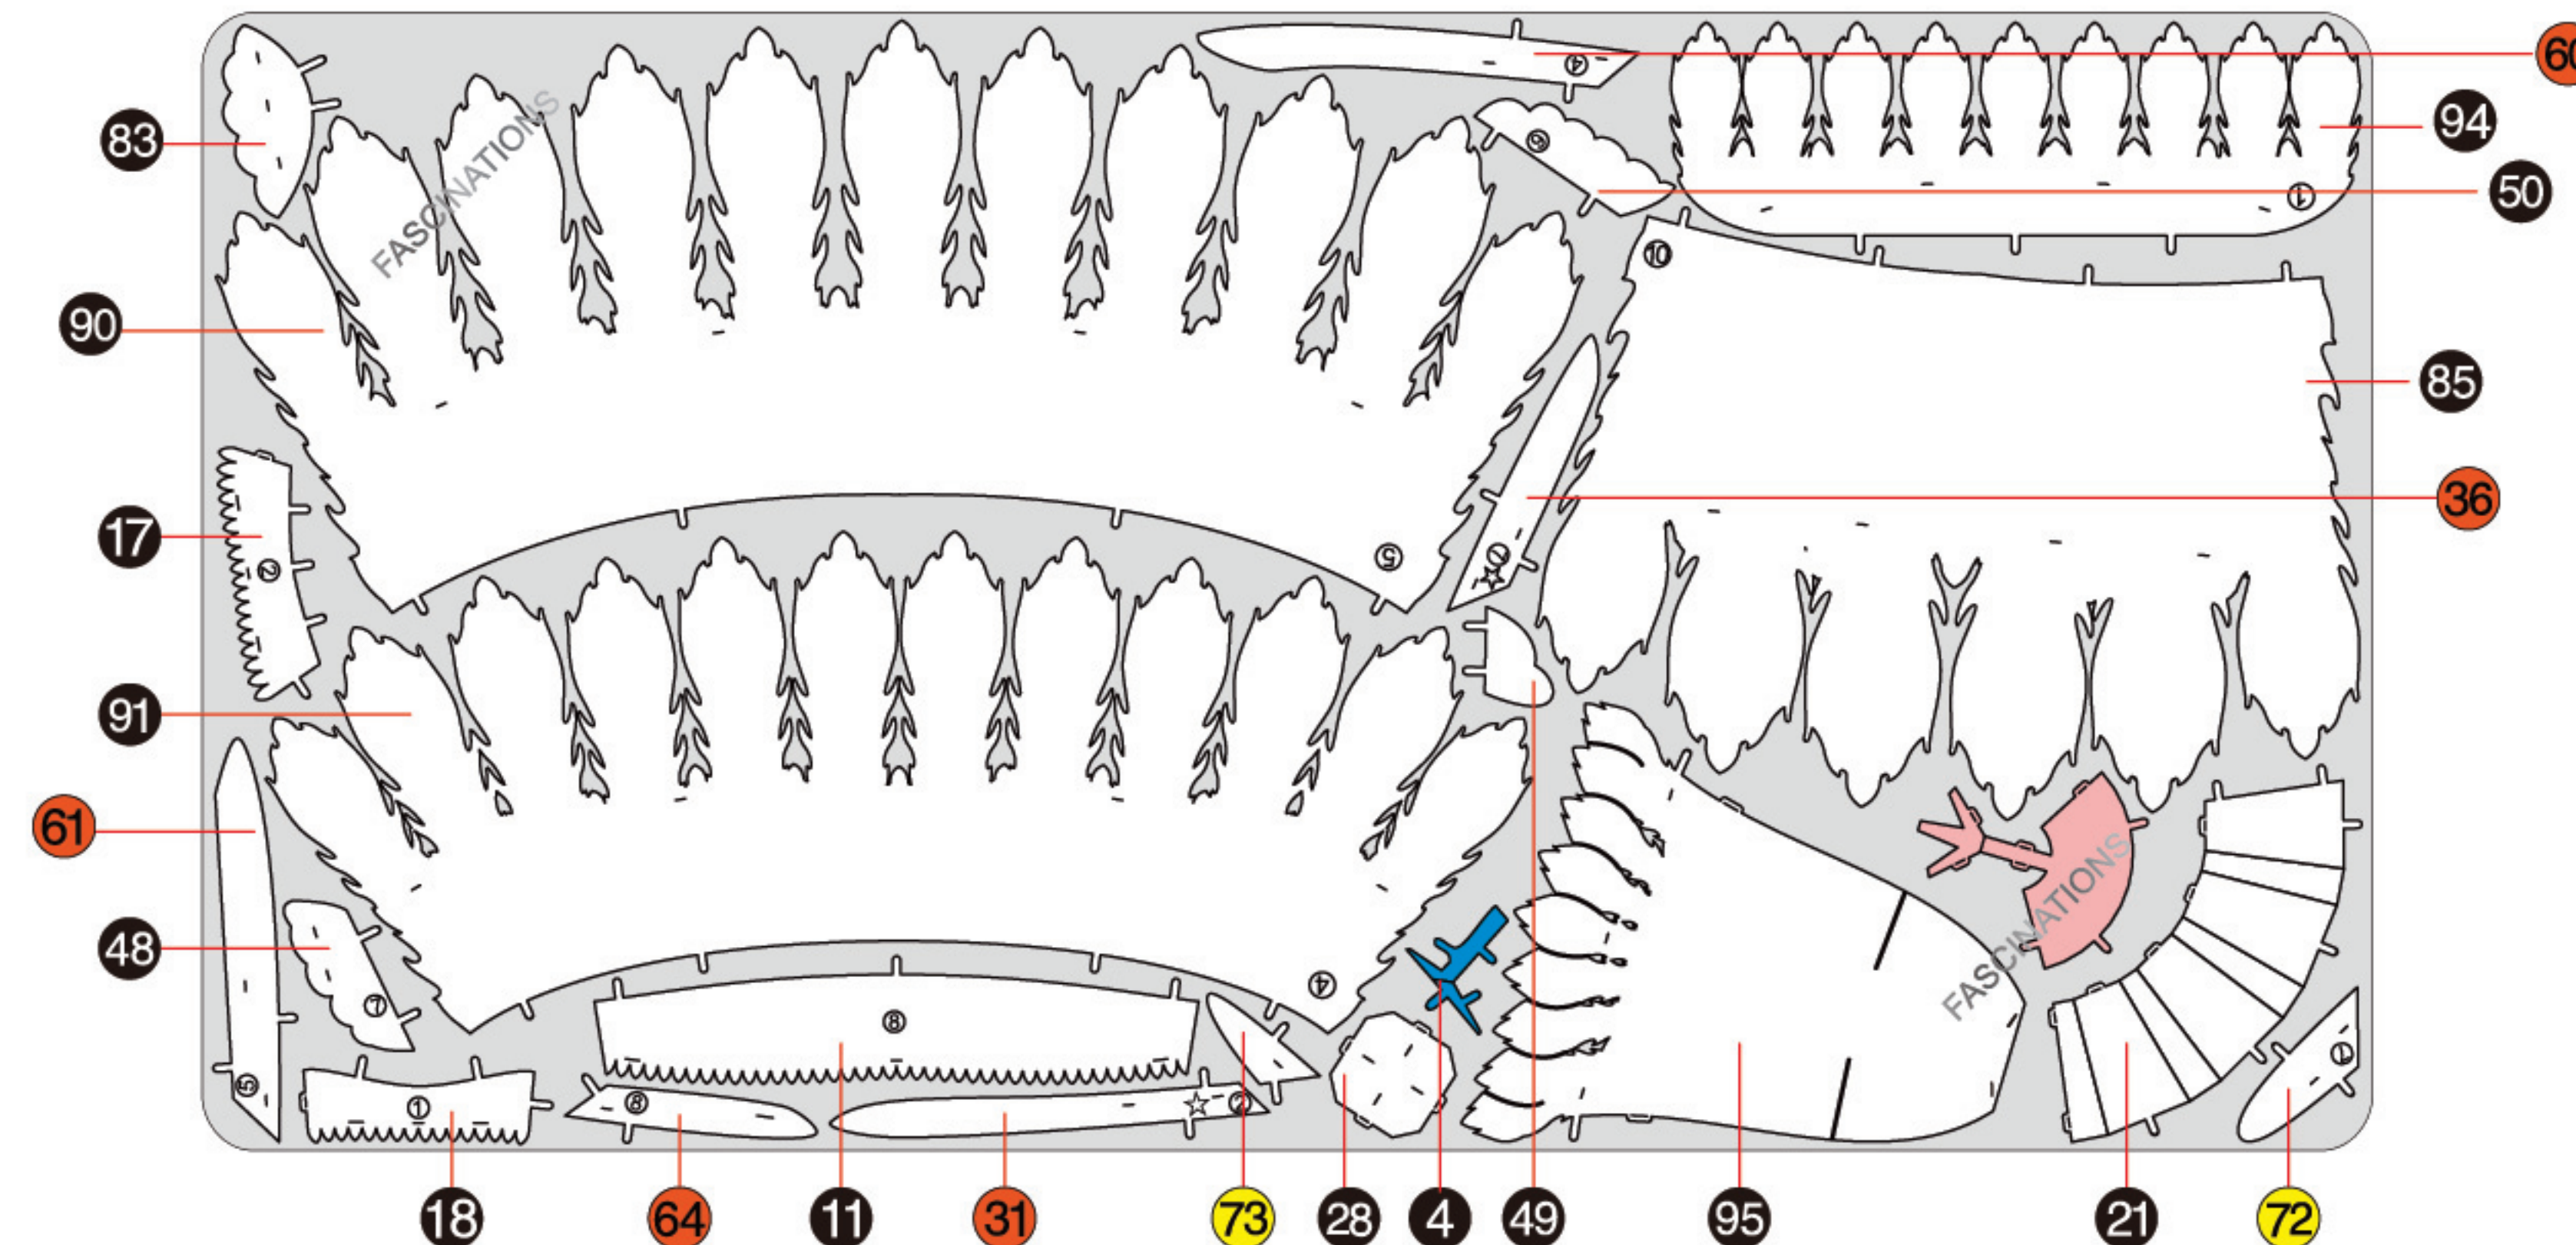


C

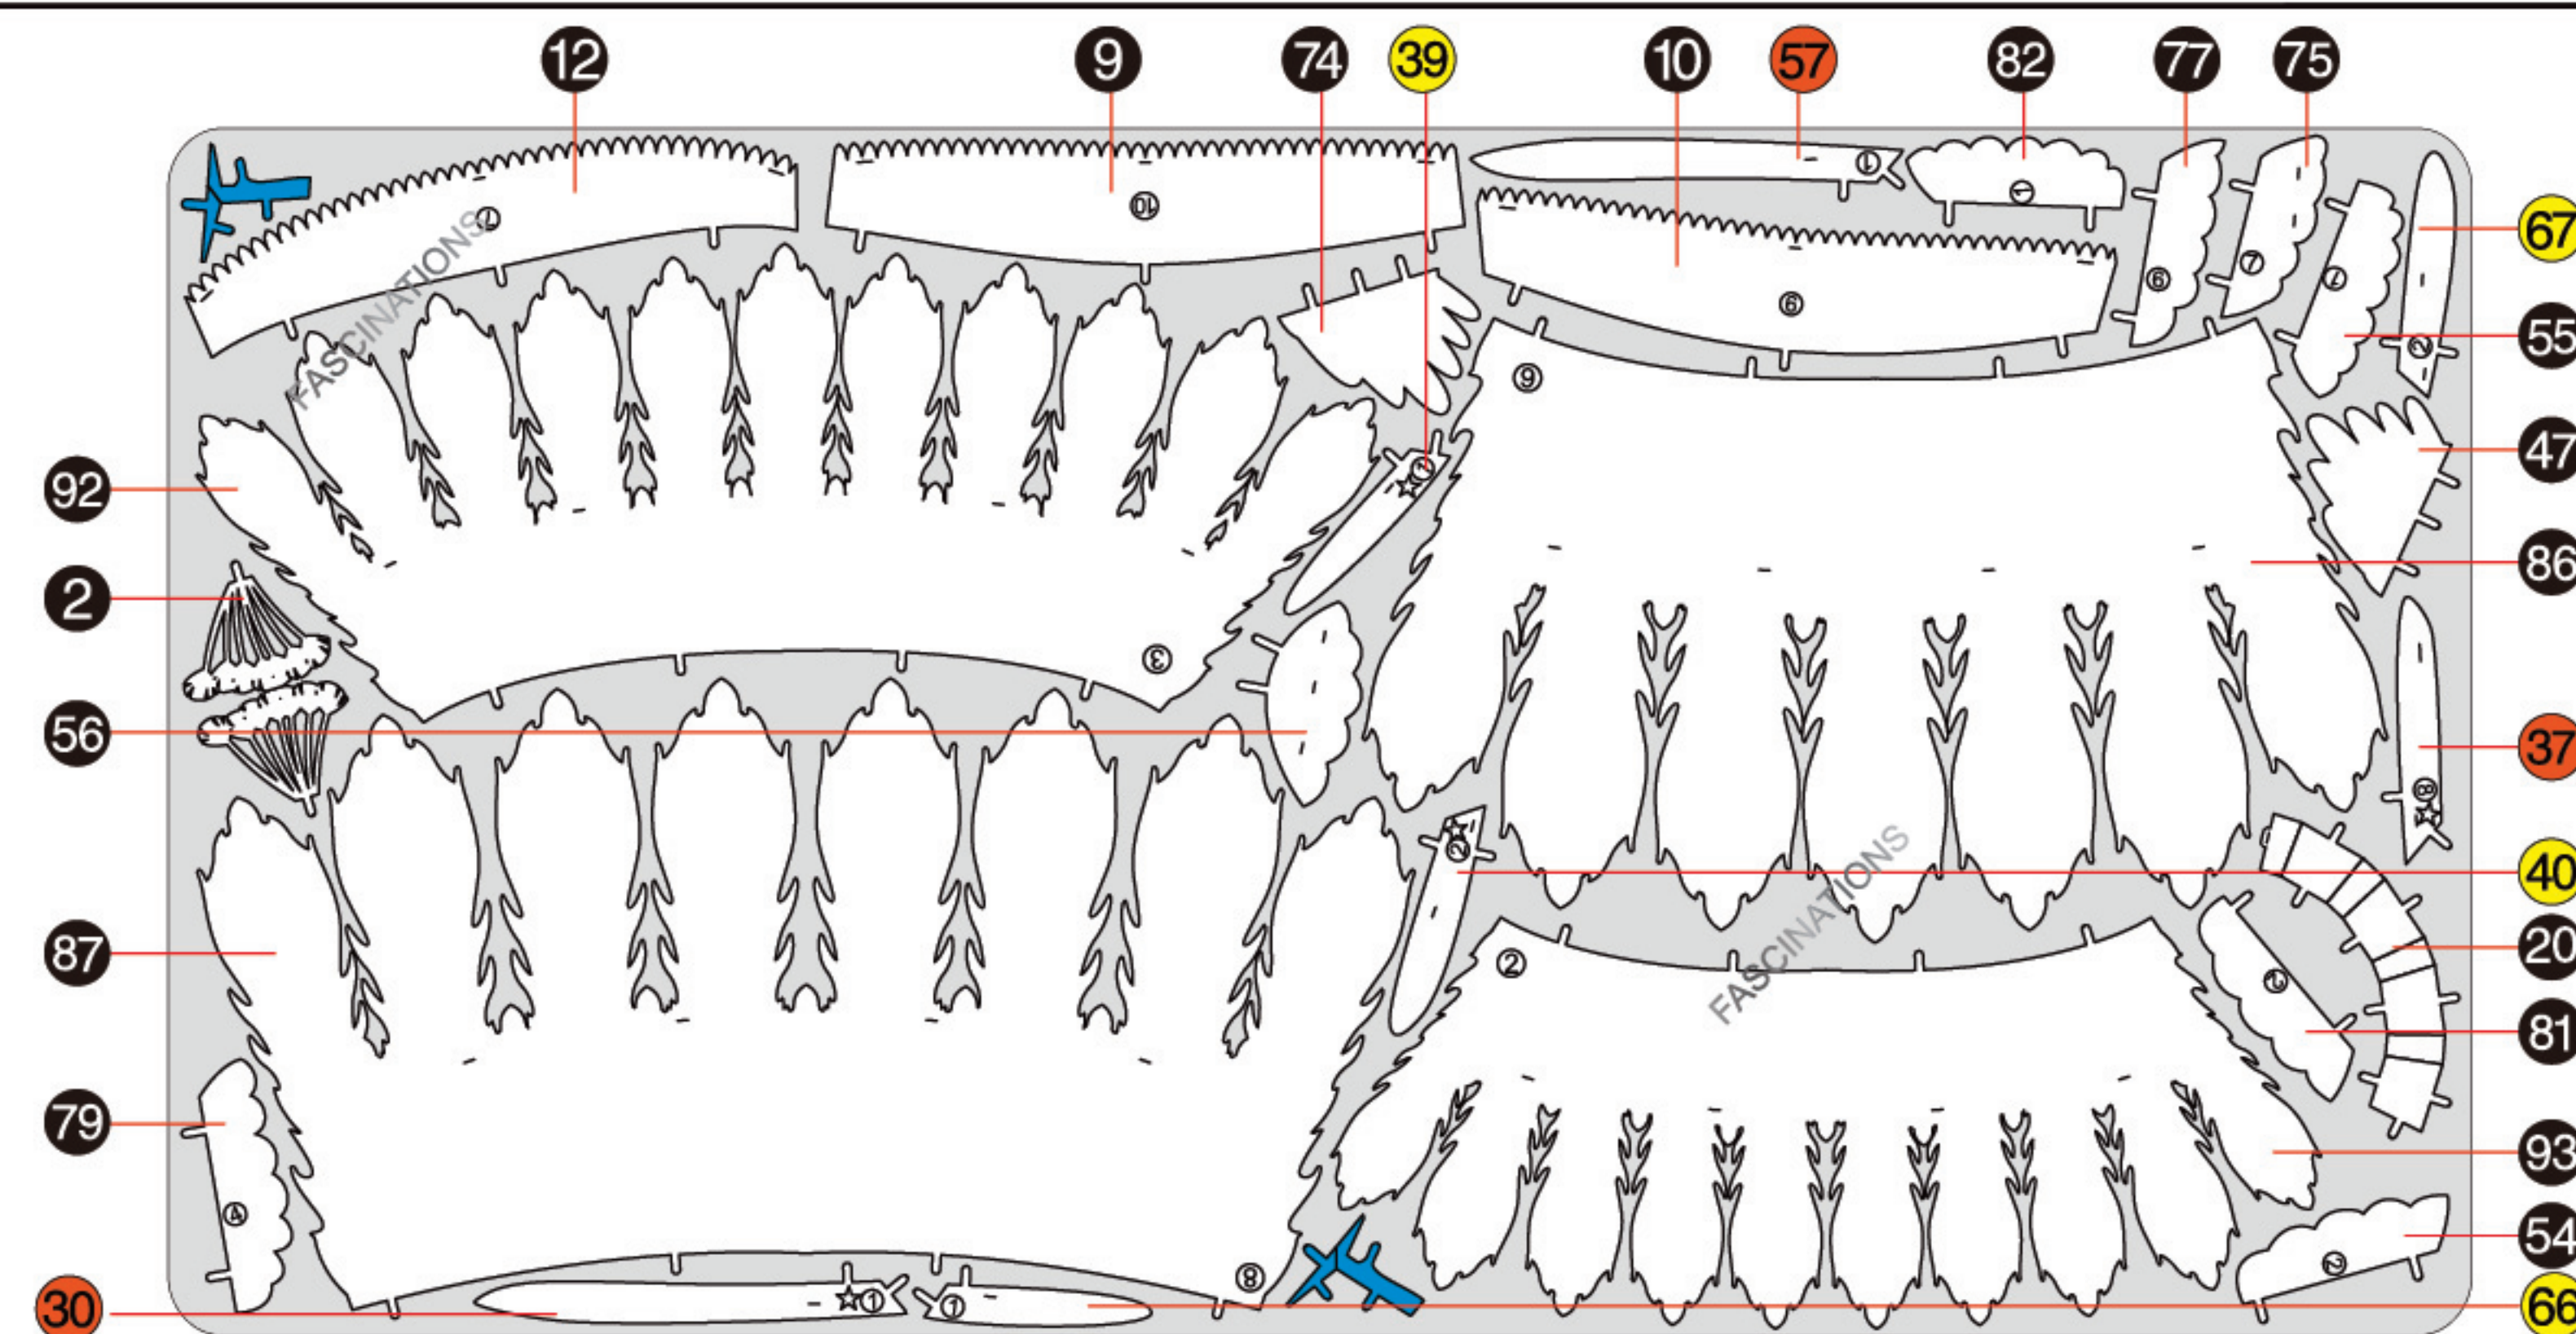


ASSEMBLY STEPS


Step 1

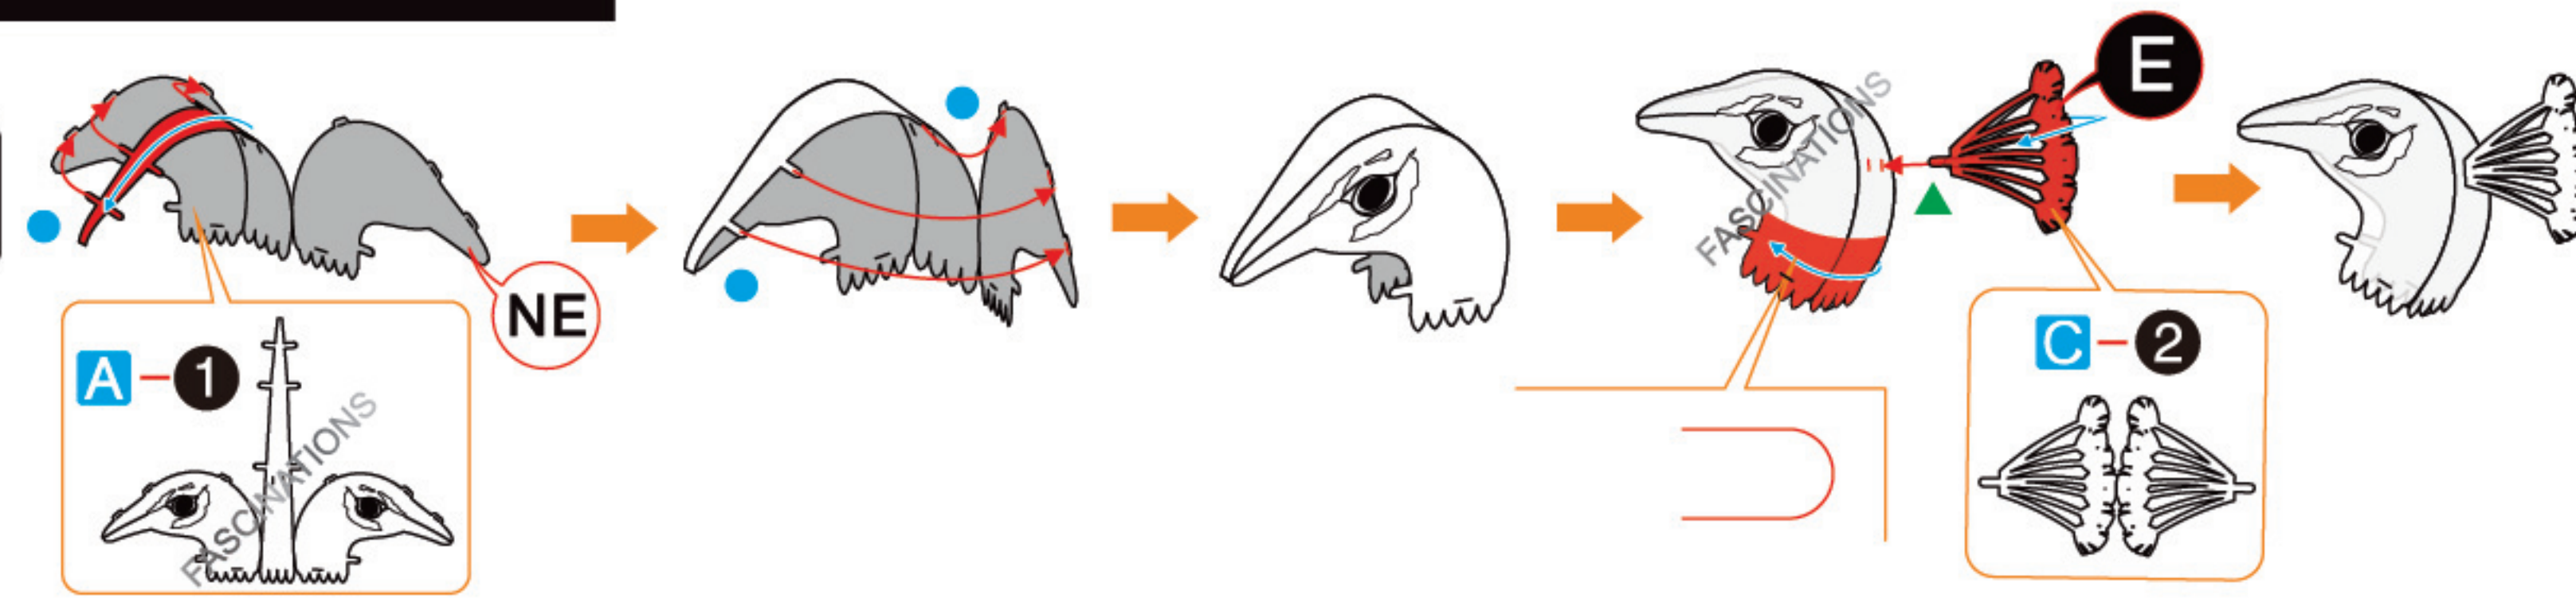


Step 2

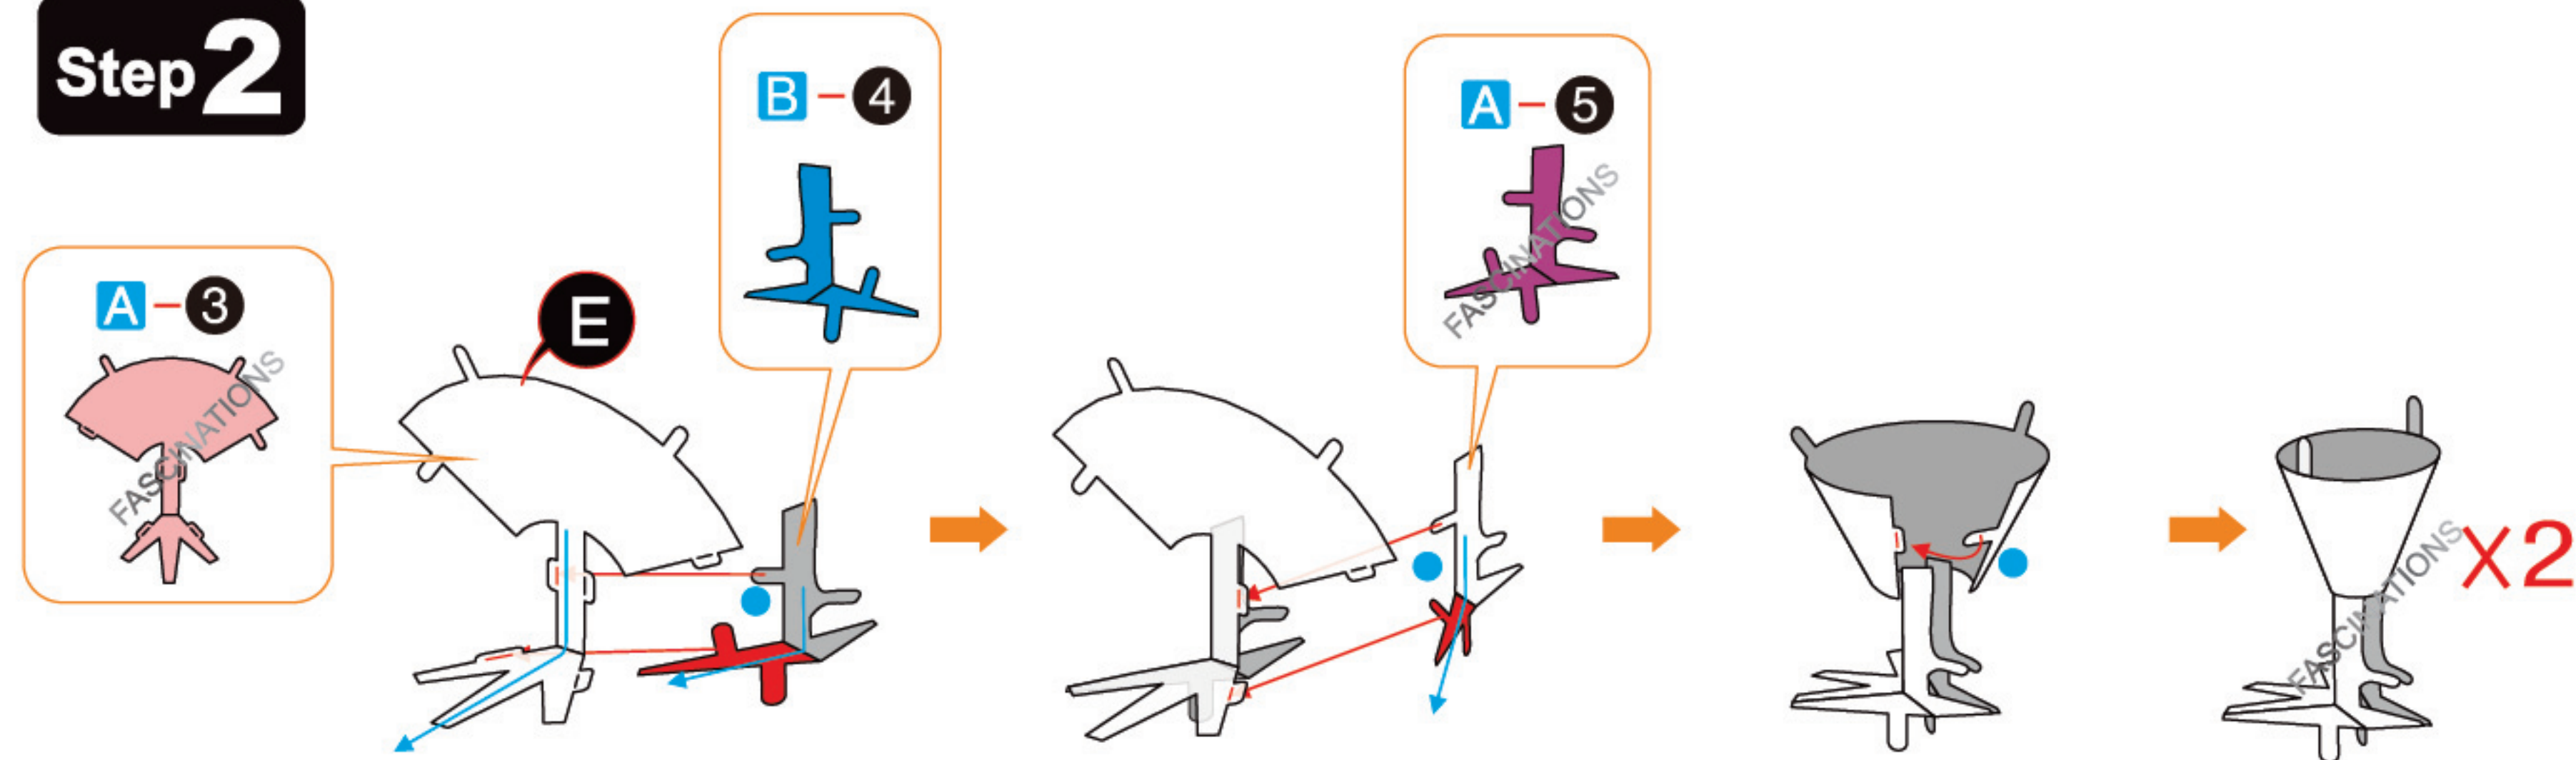



Step 3

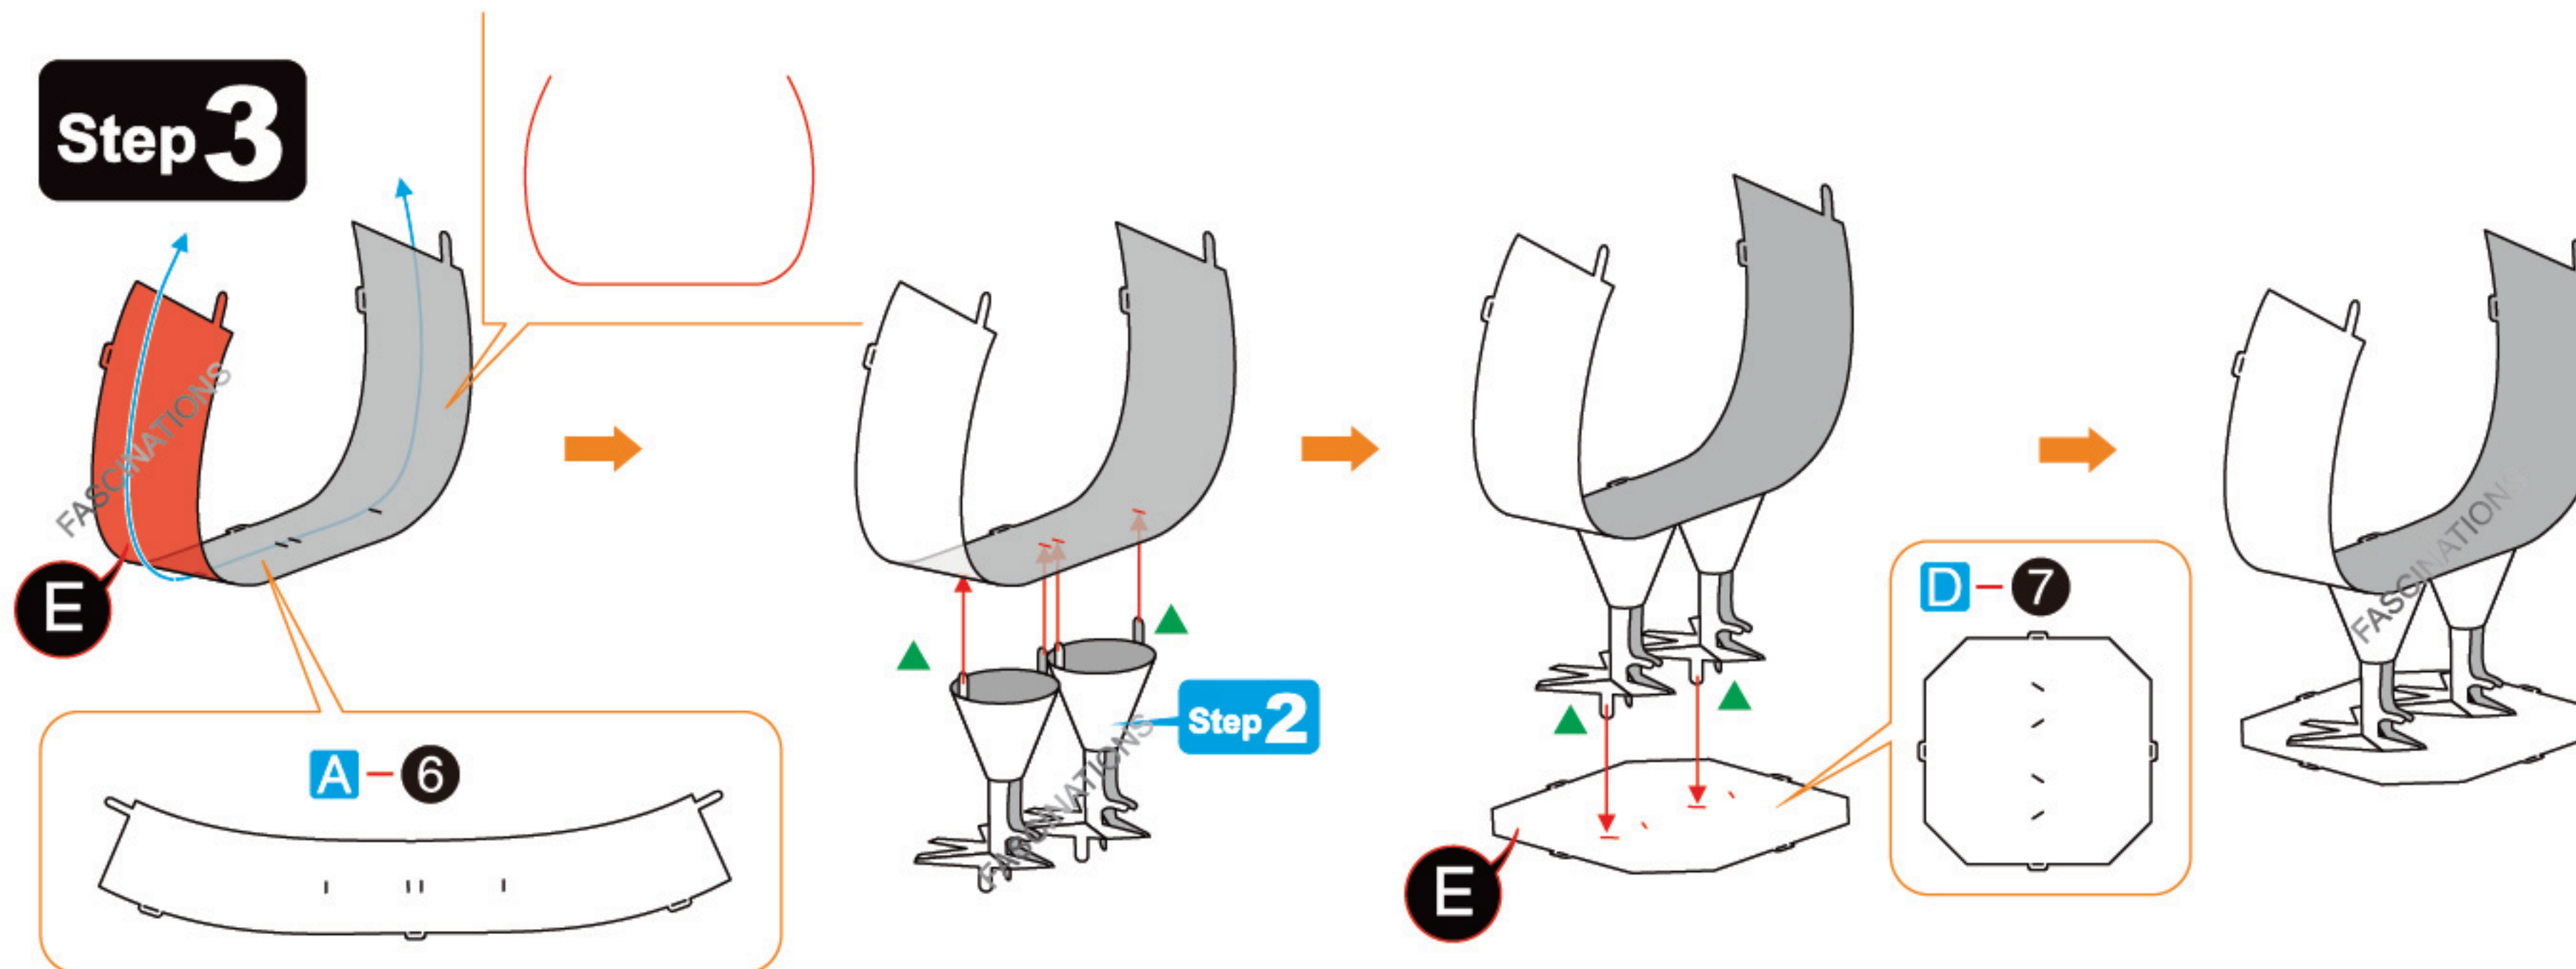


Step 4

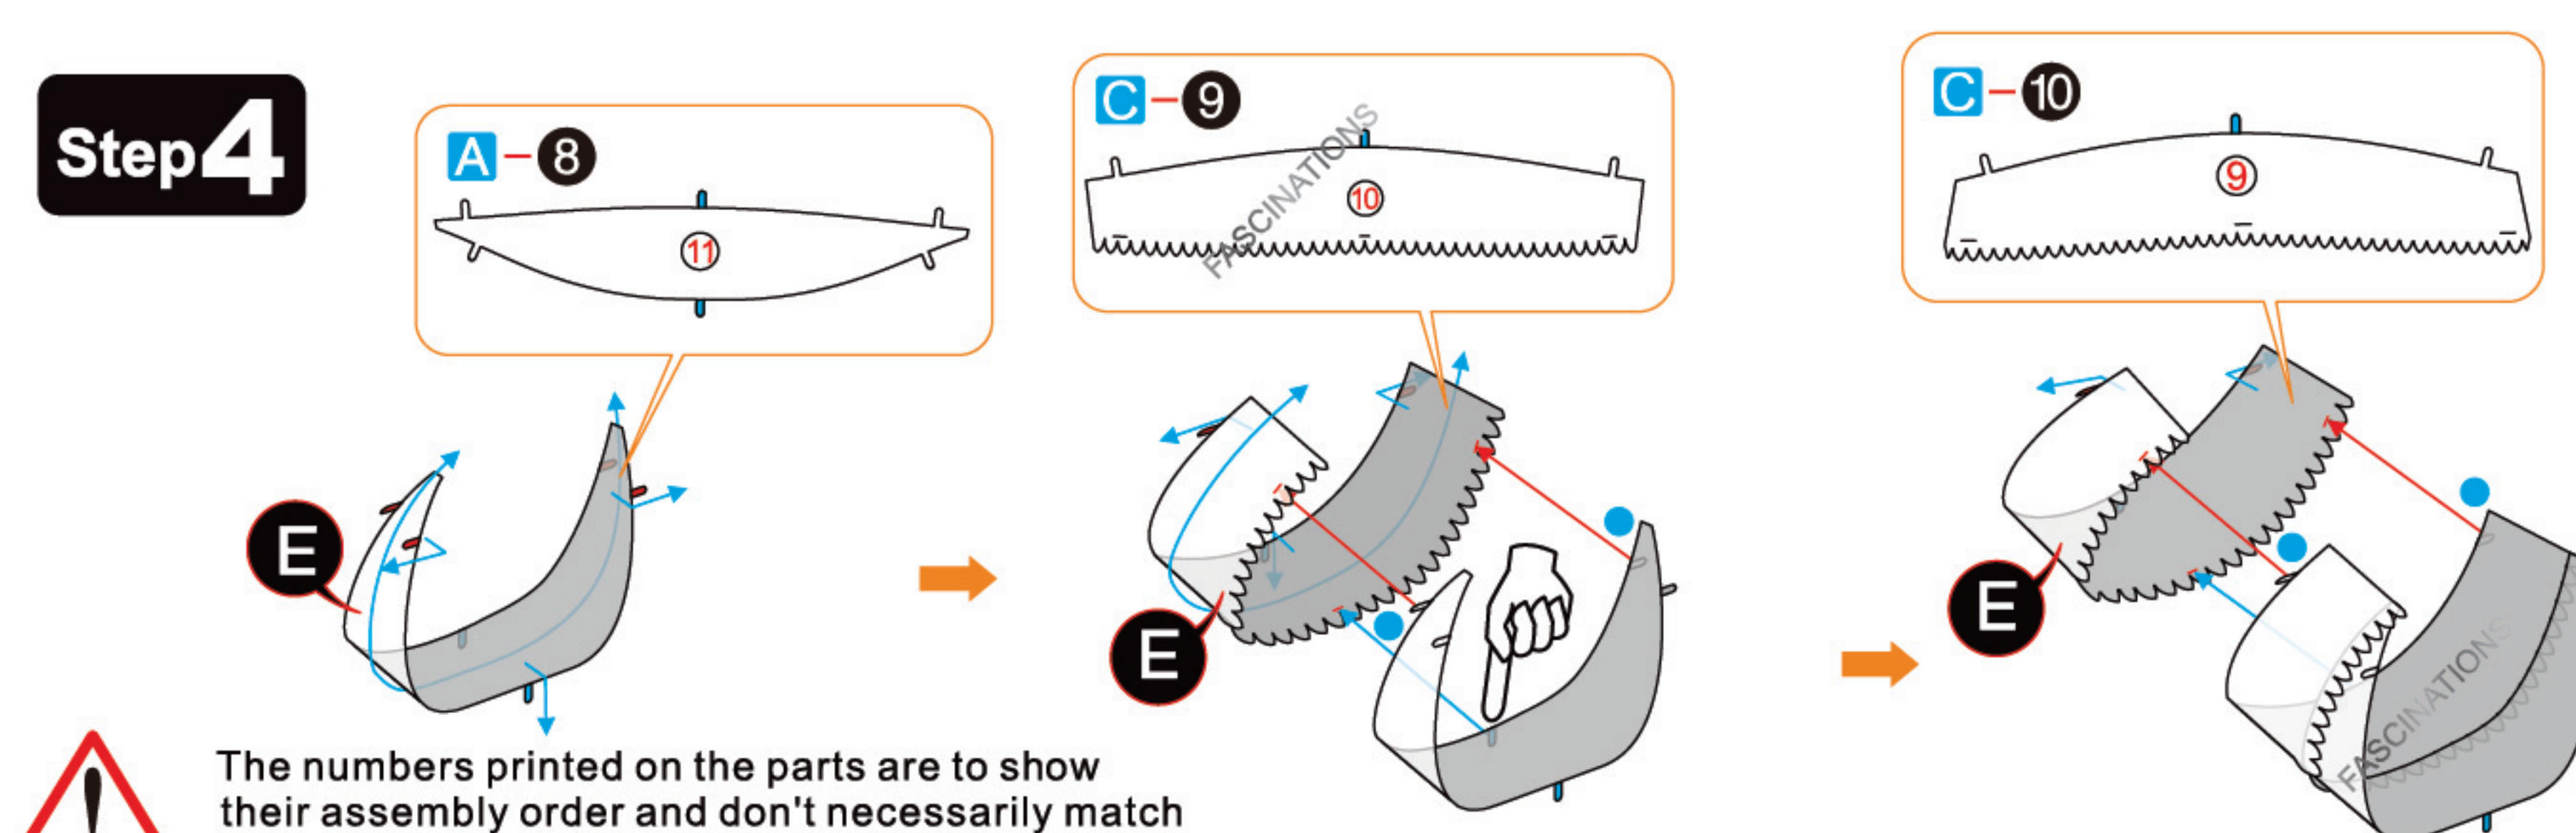



Step 5

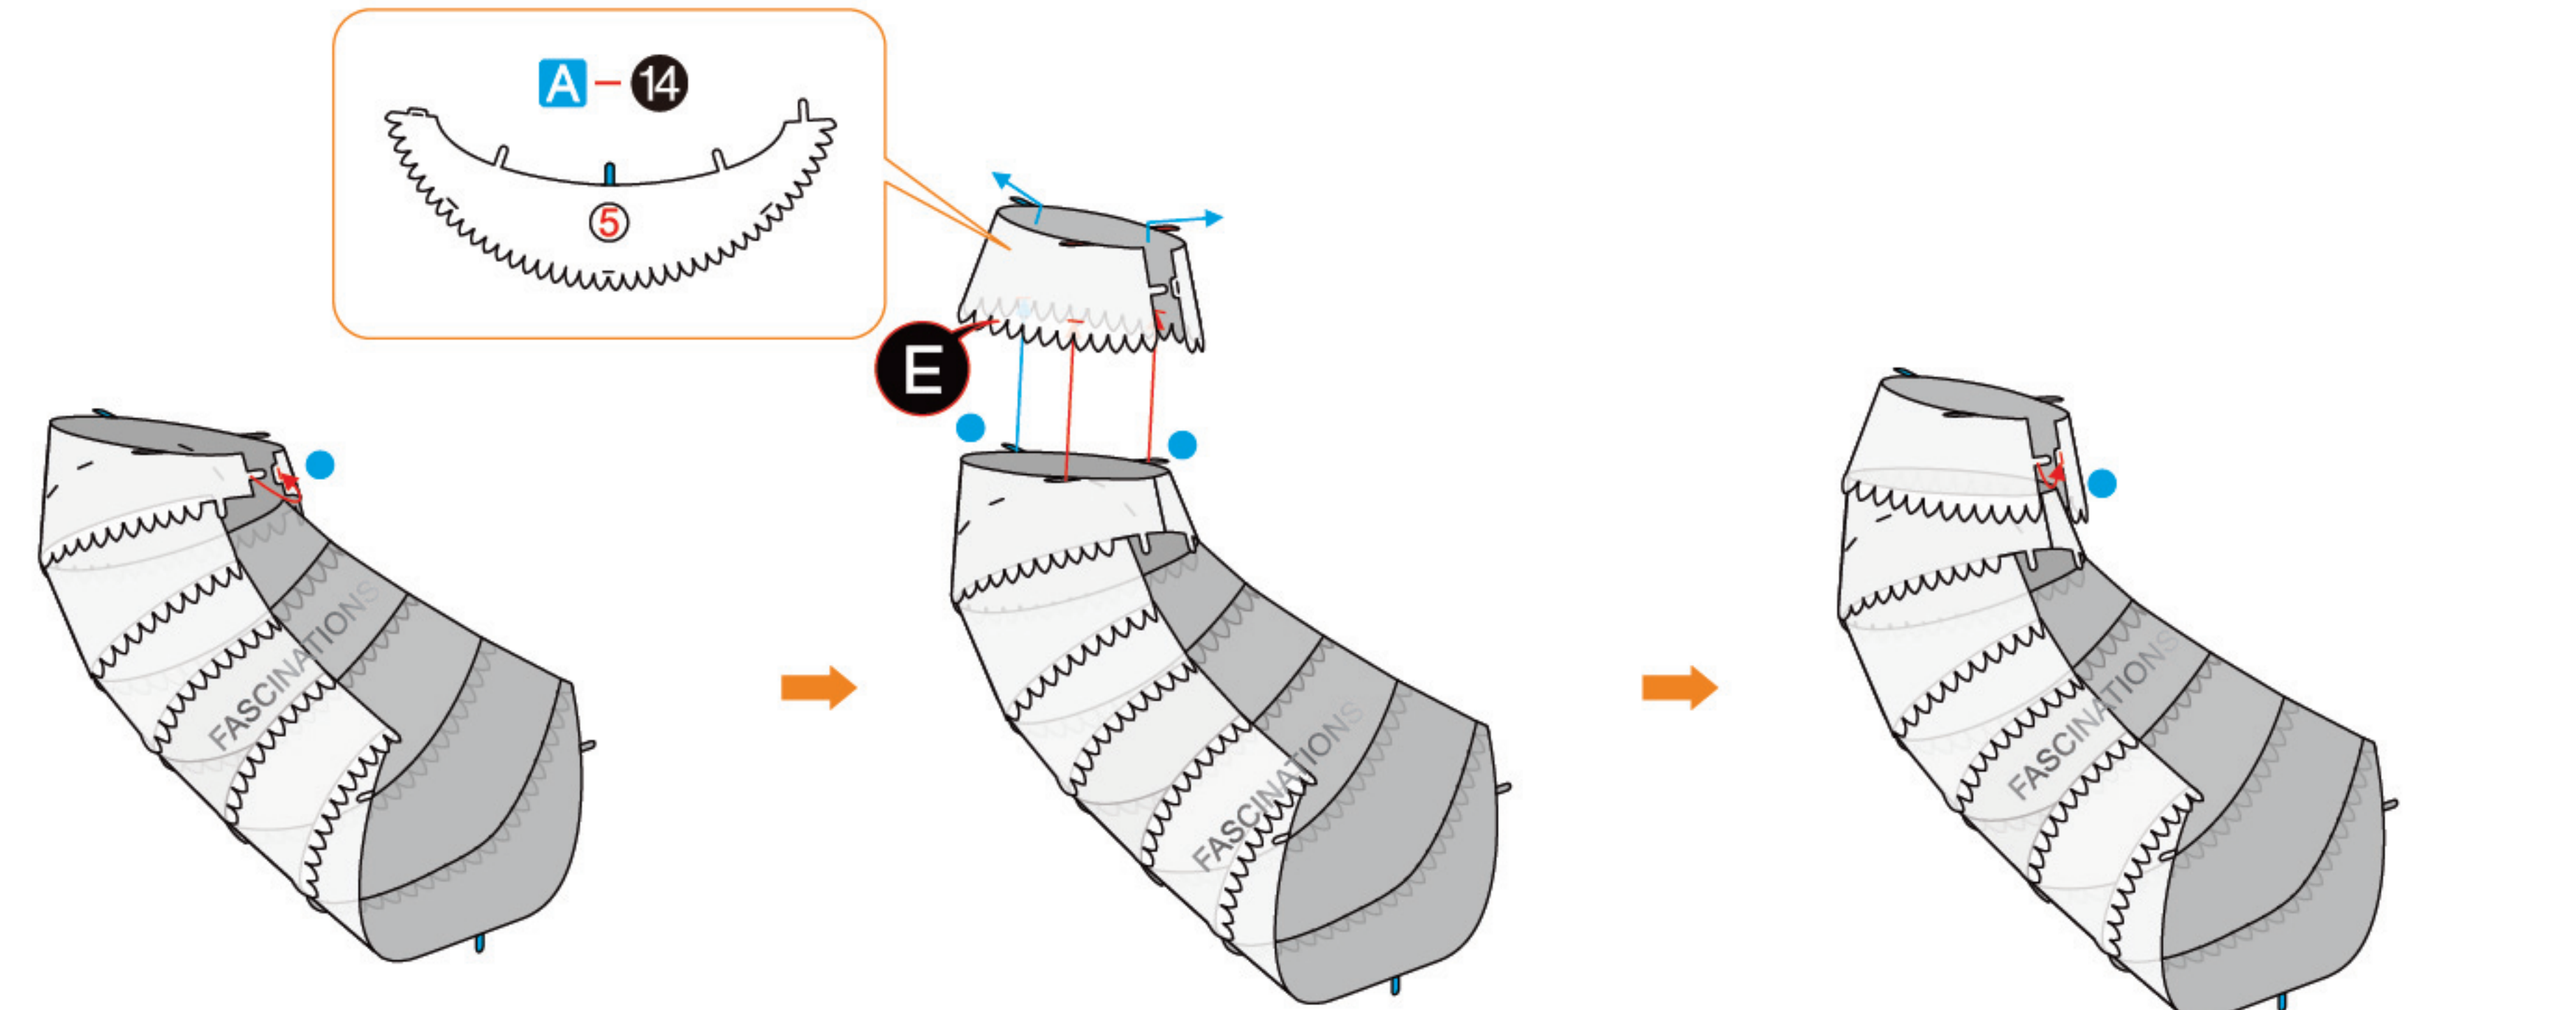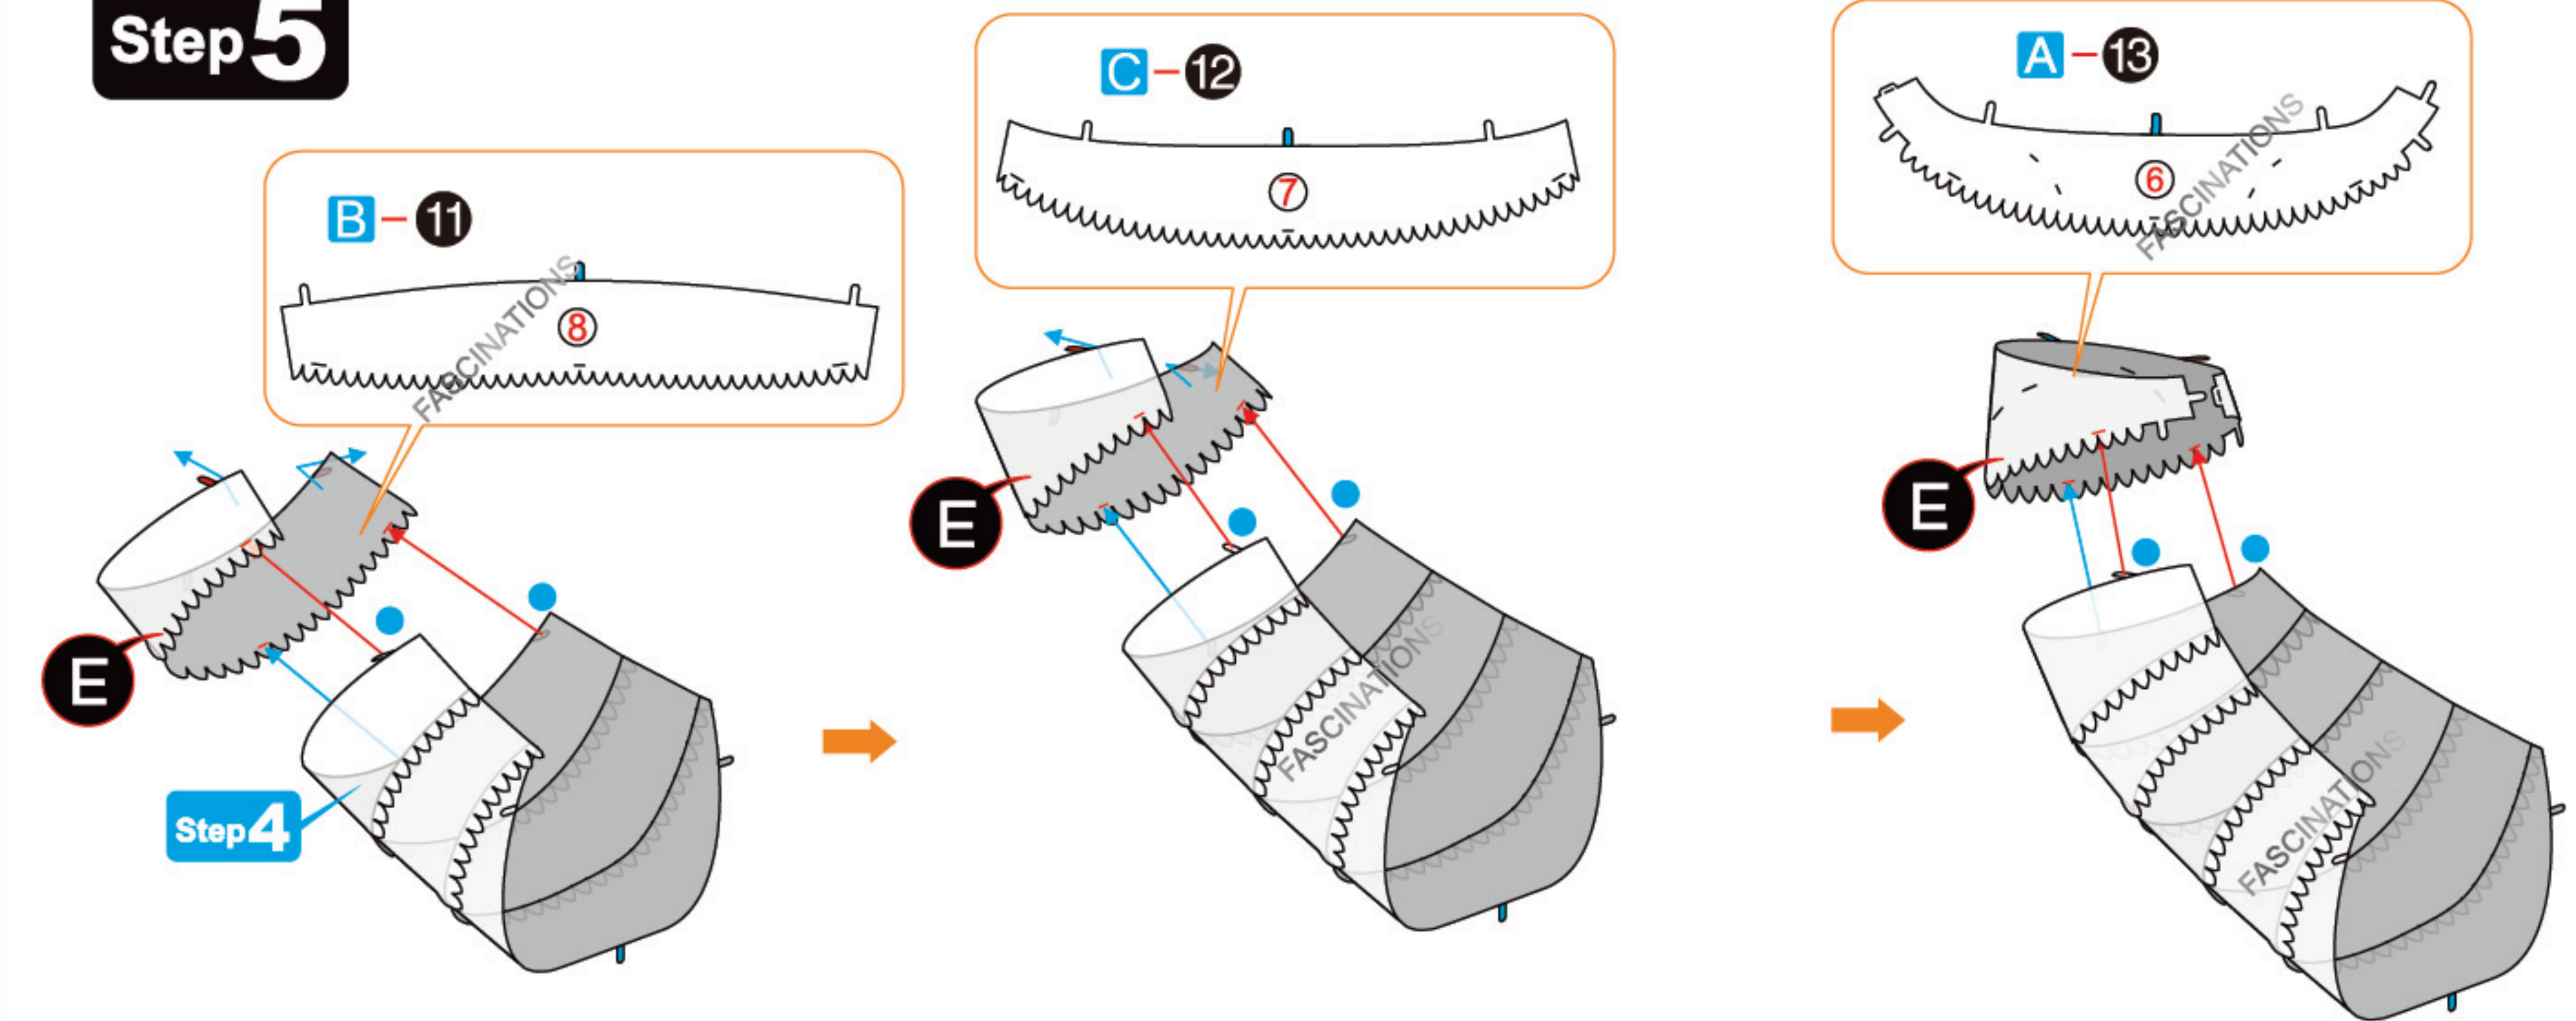


Step 6

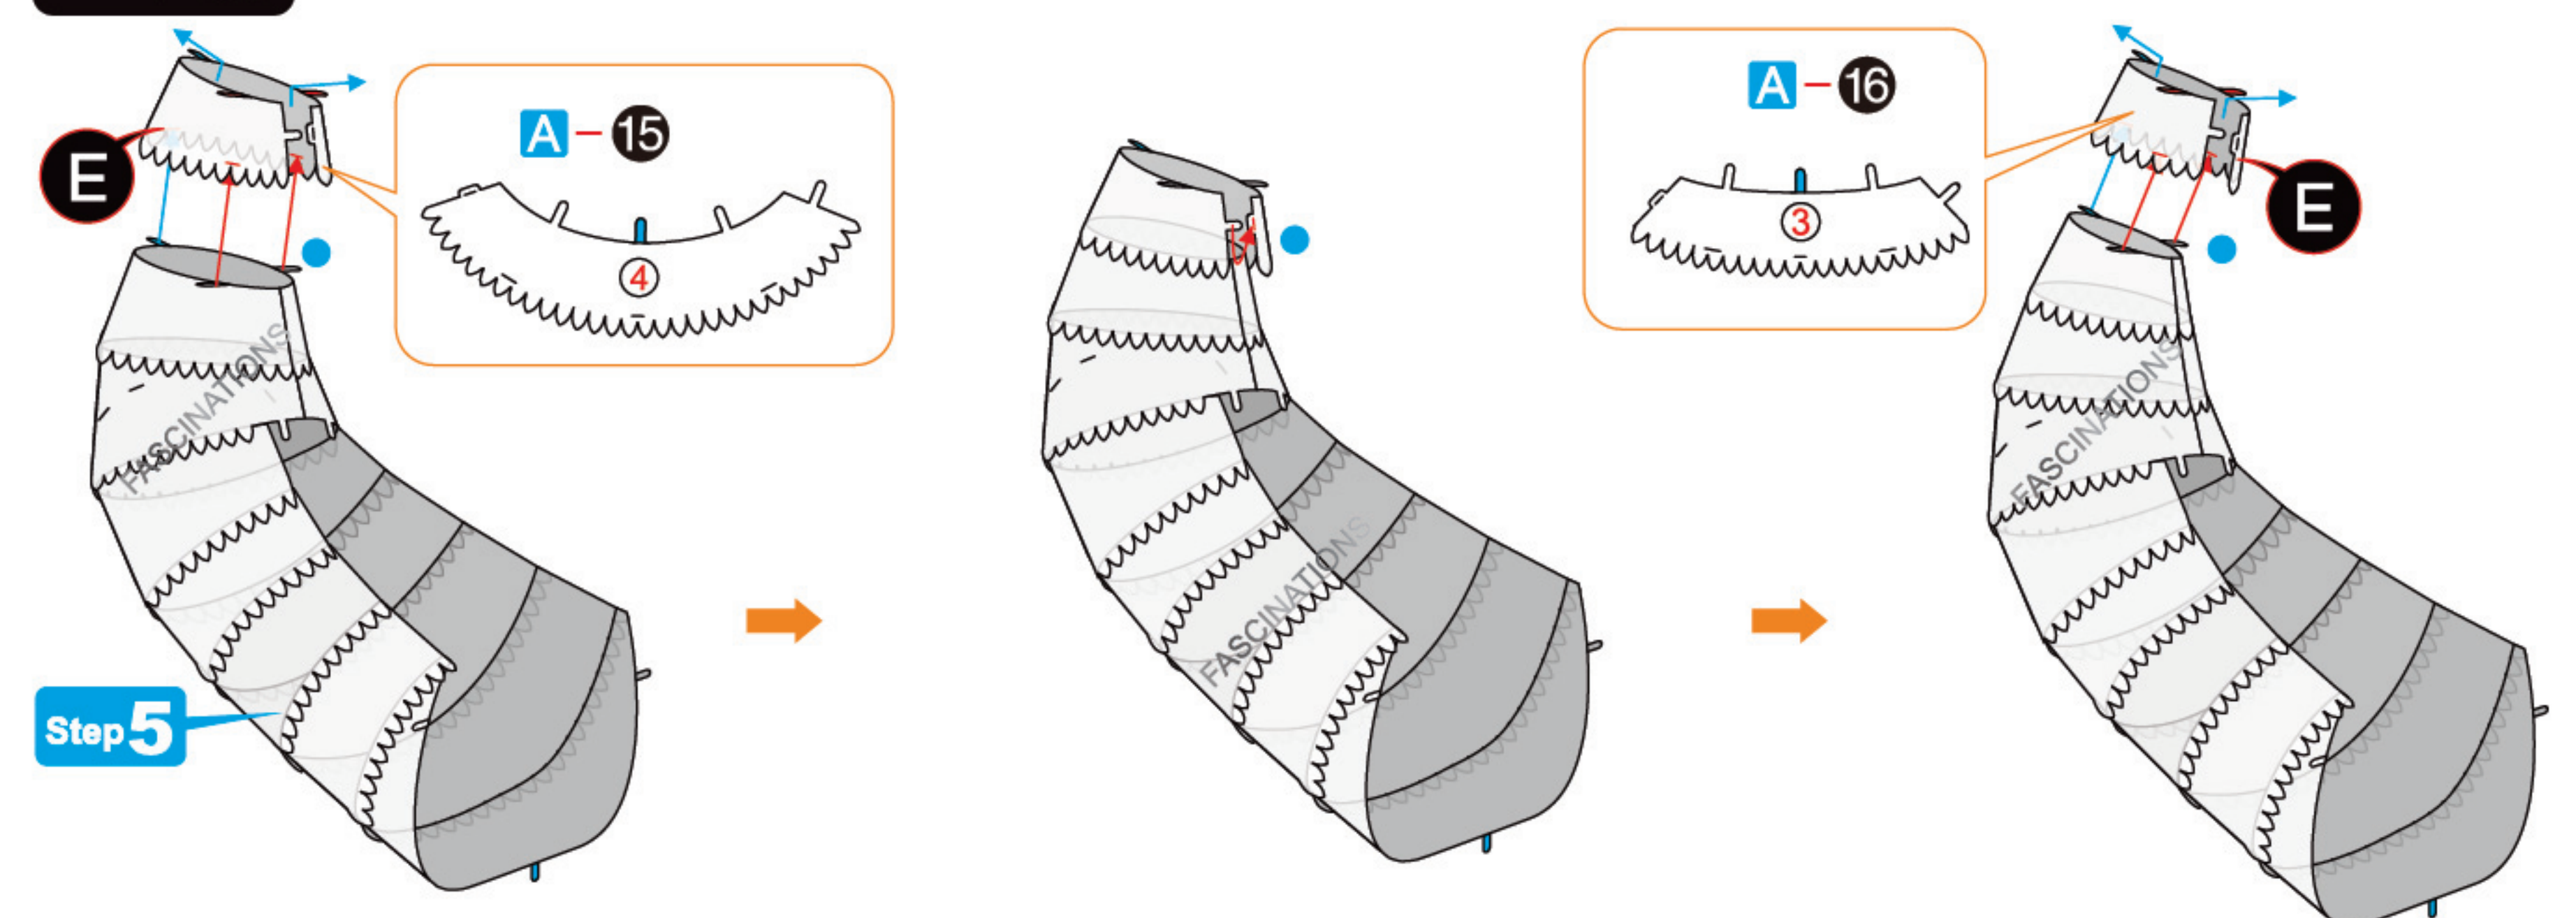



Step 7

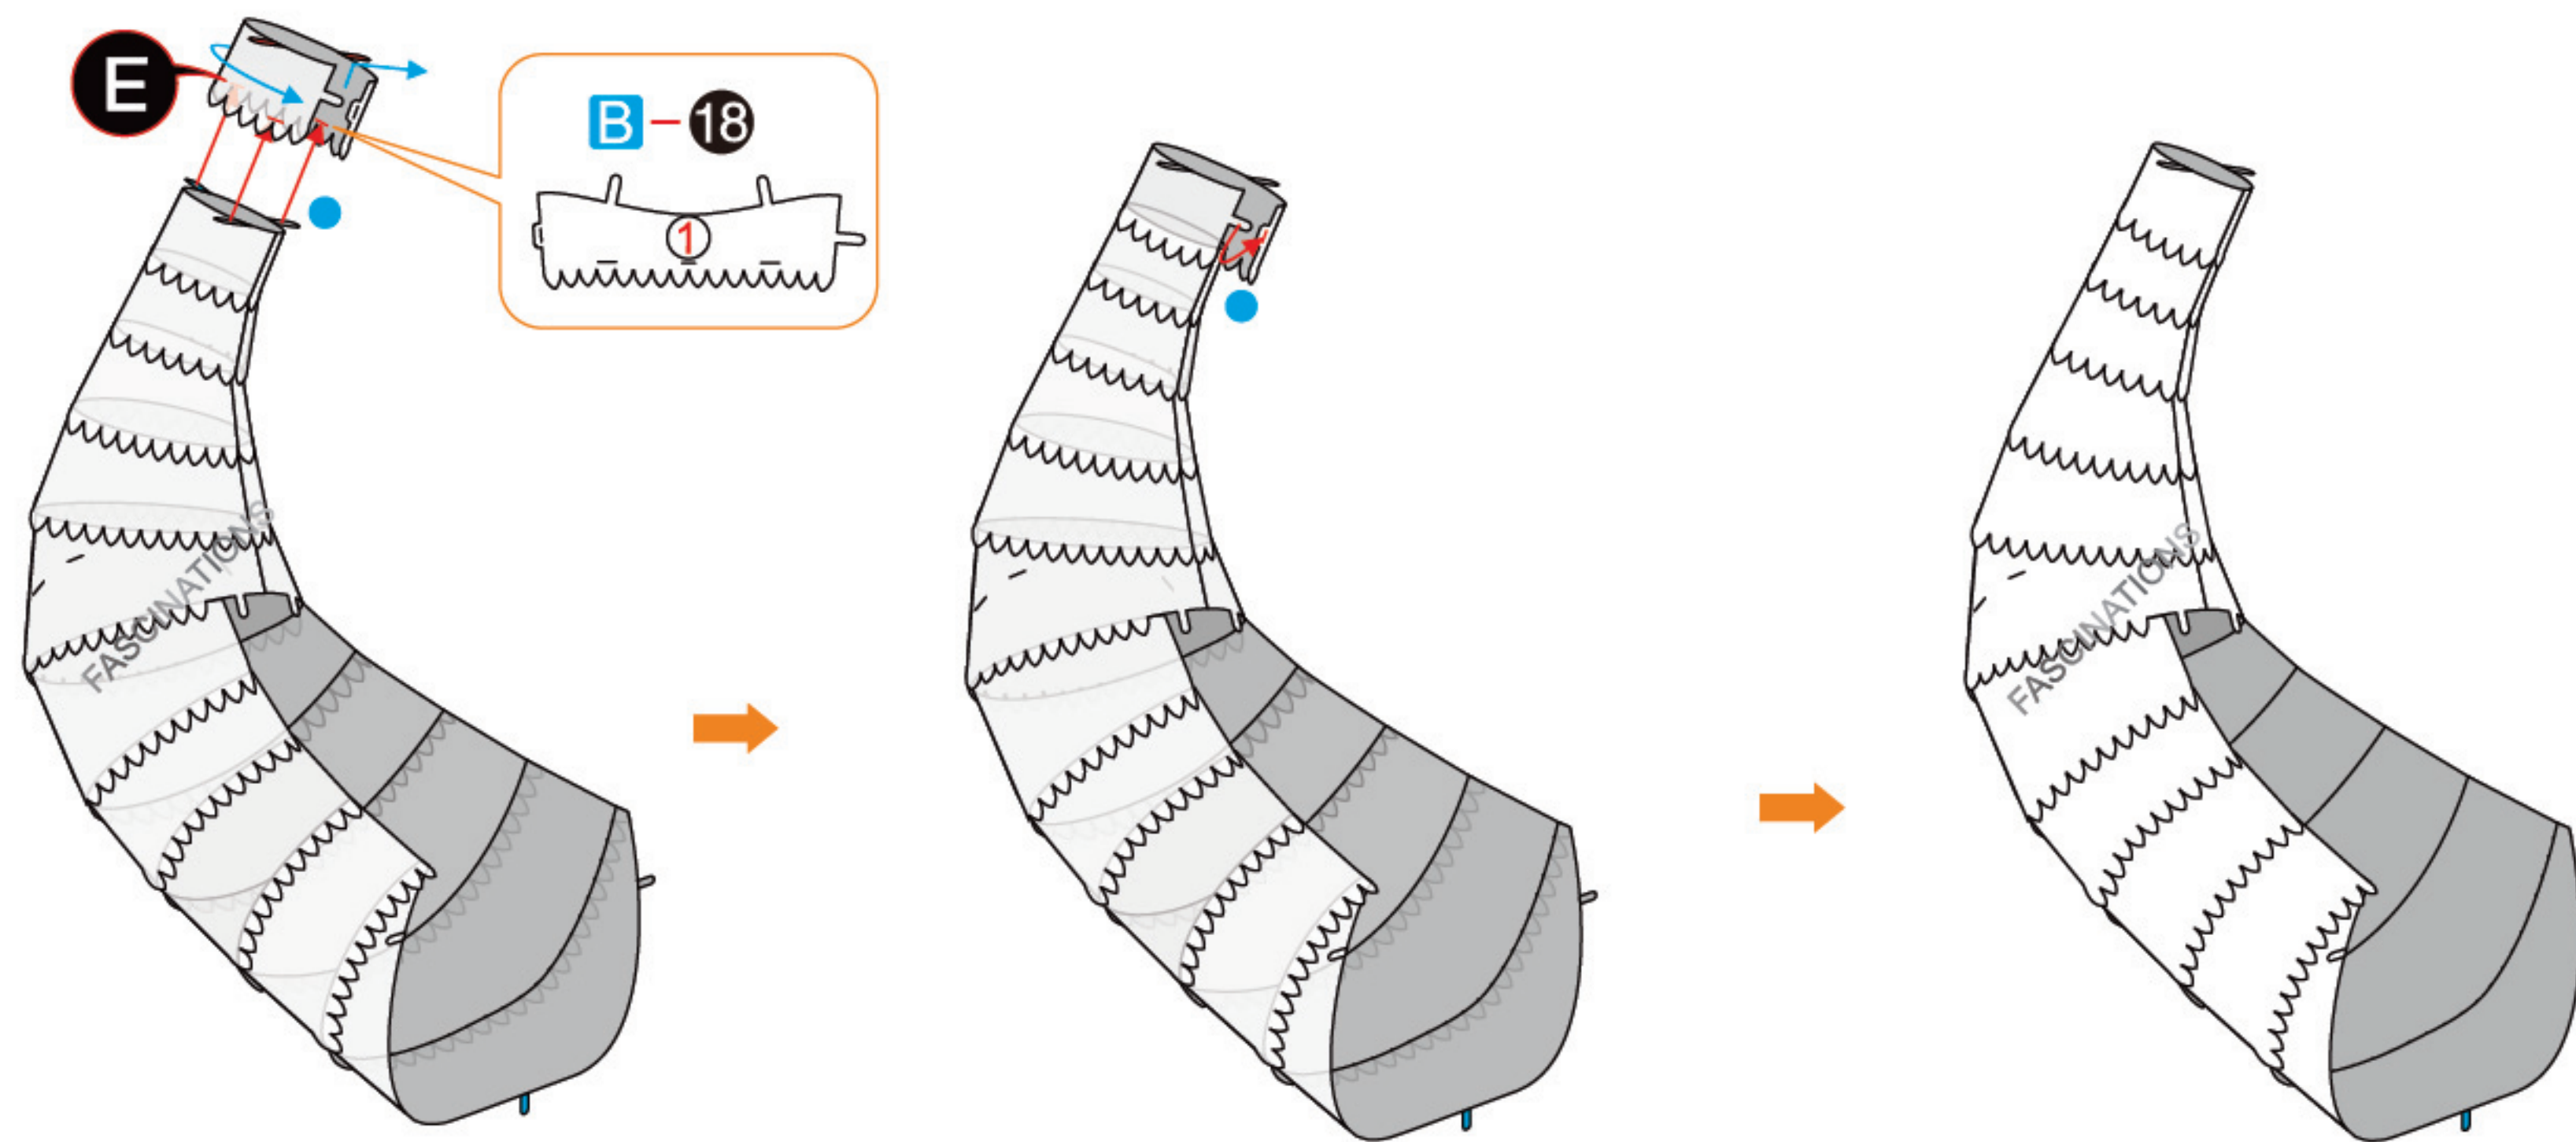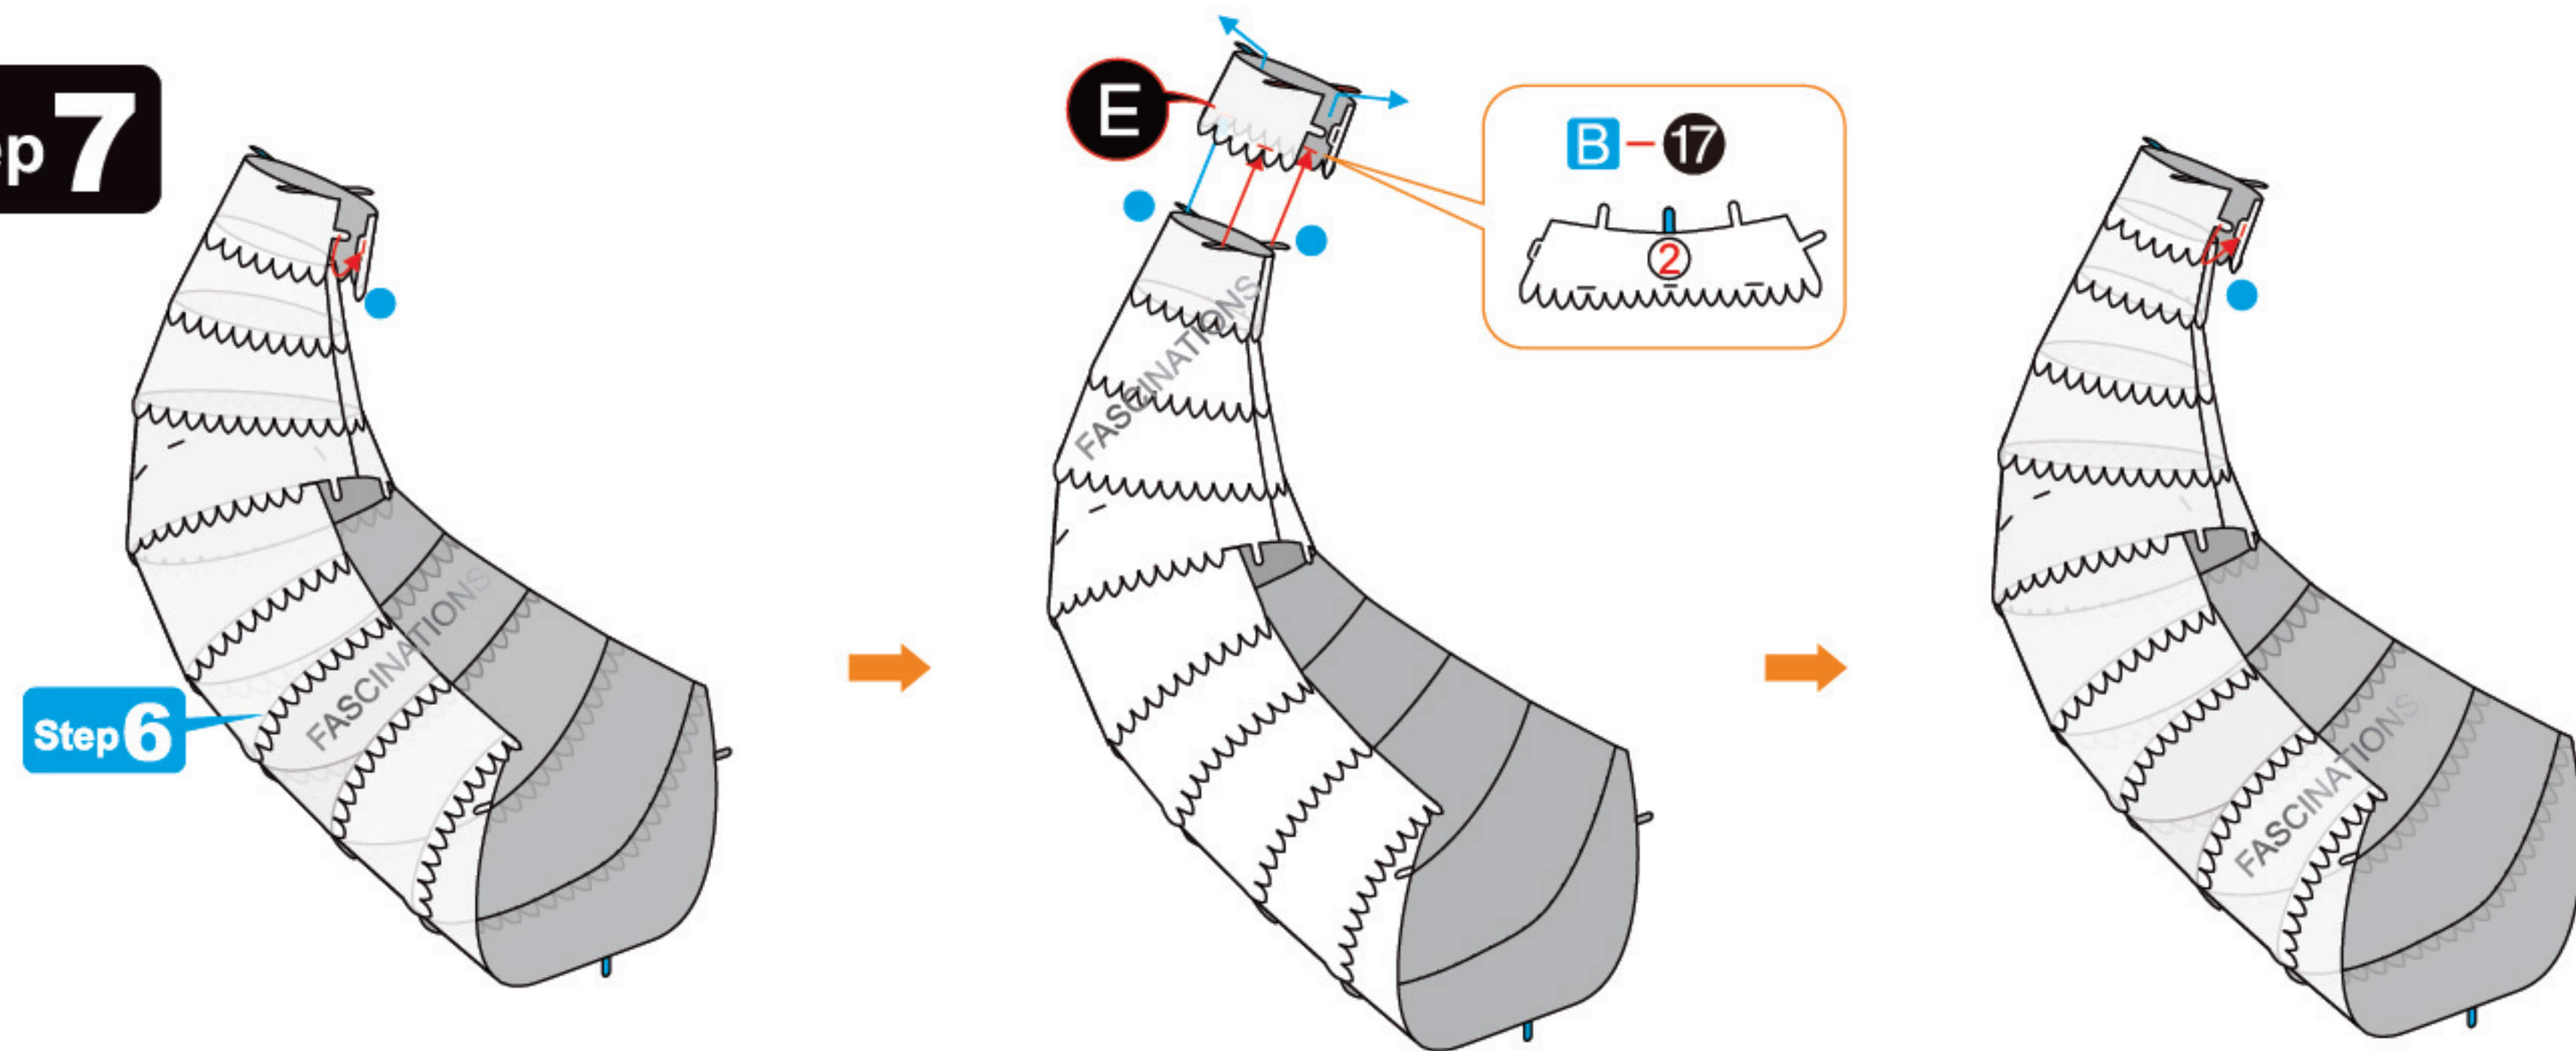



Step 8

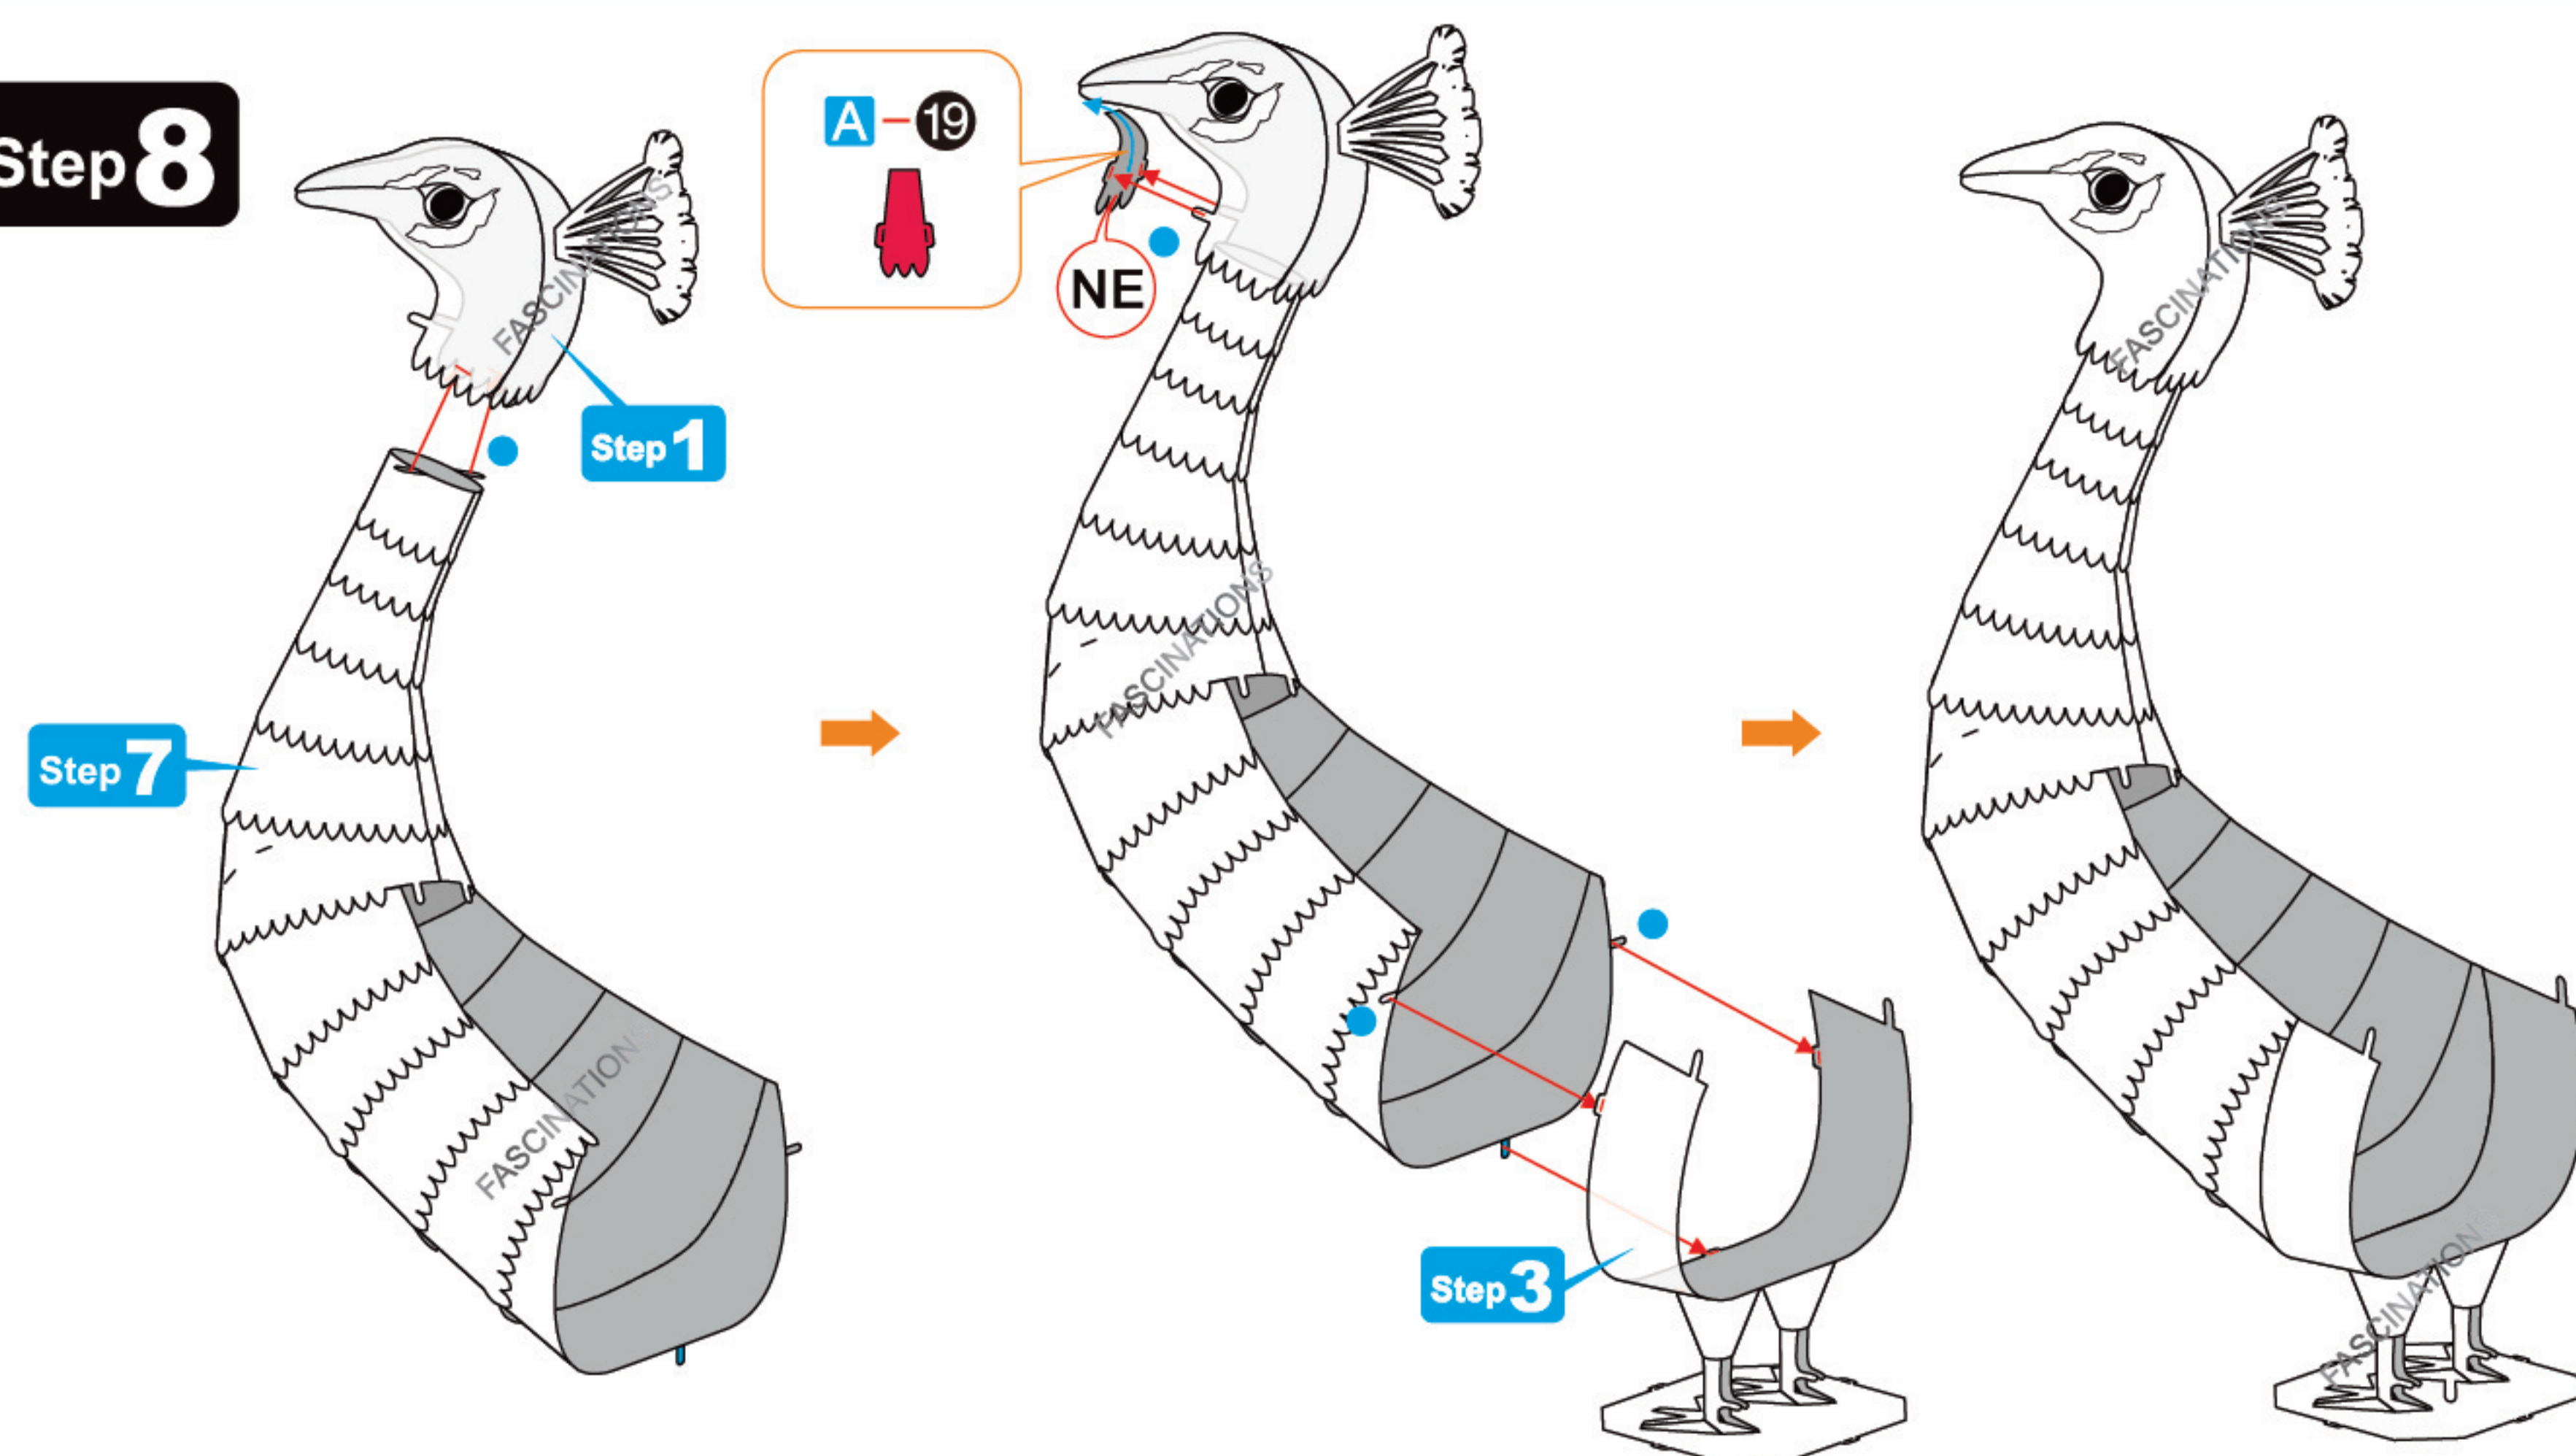


Step 9

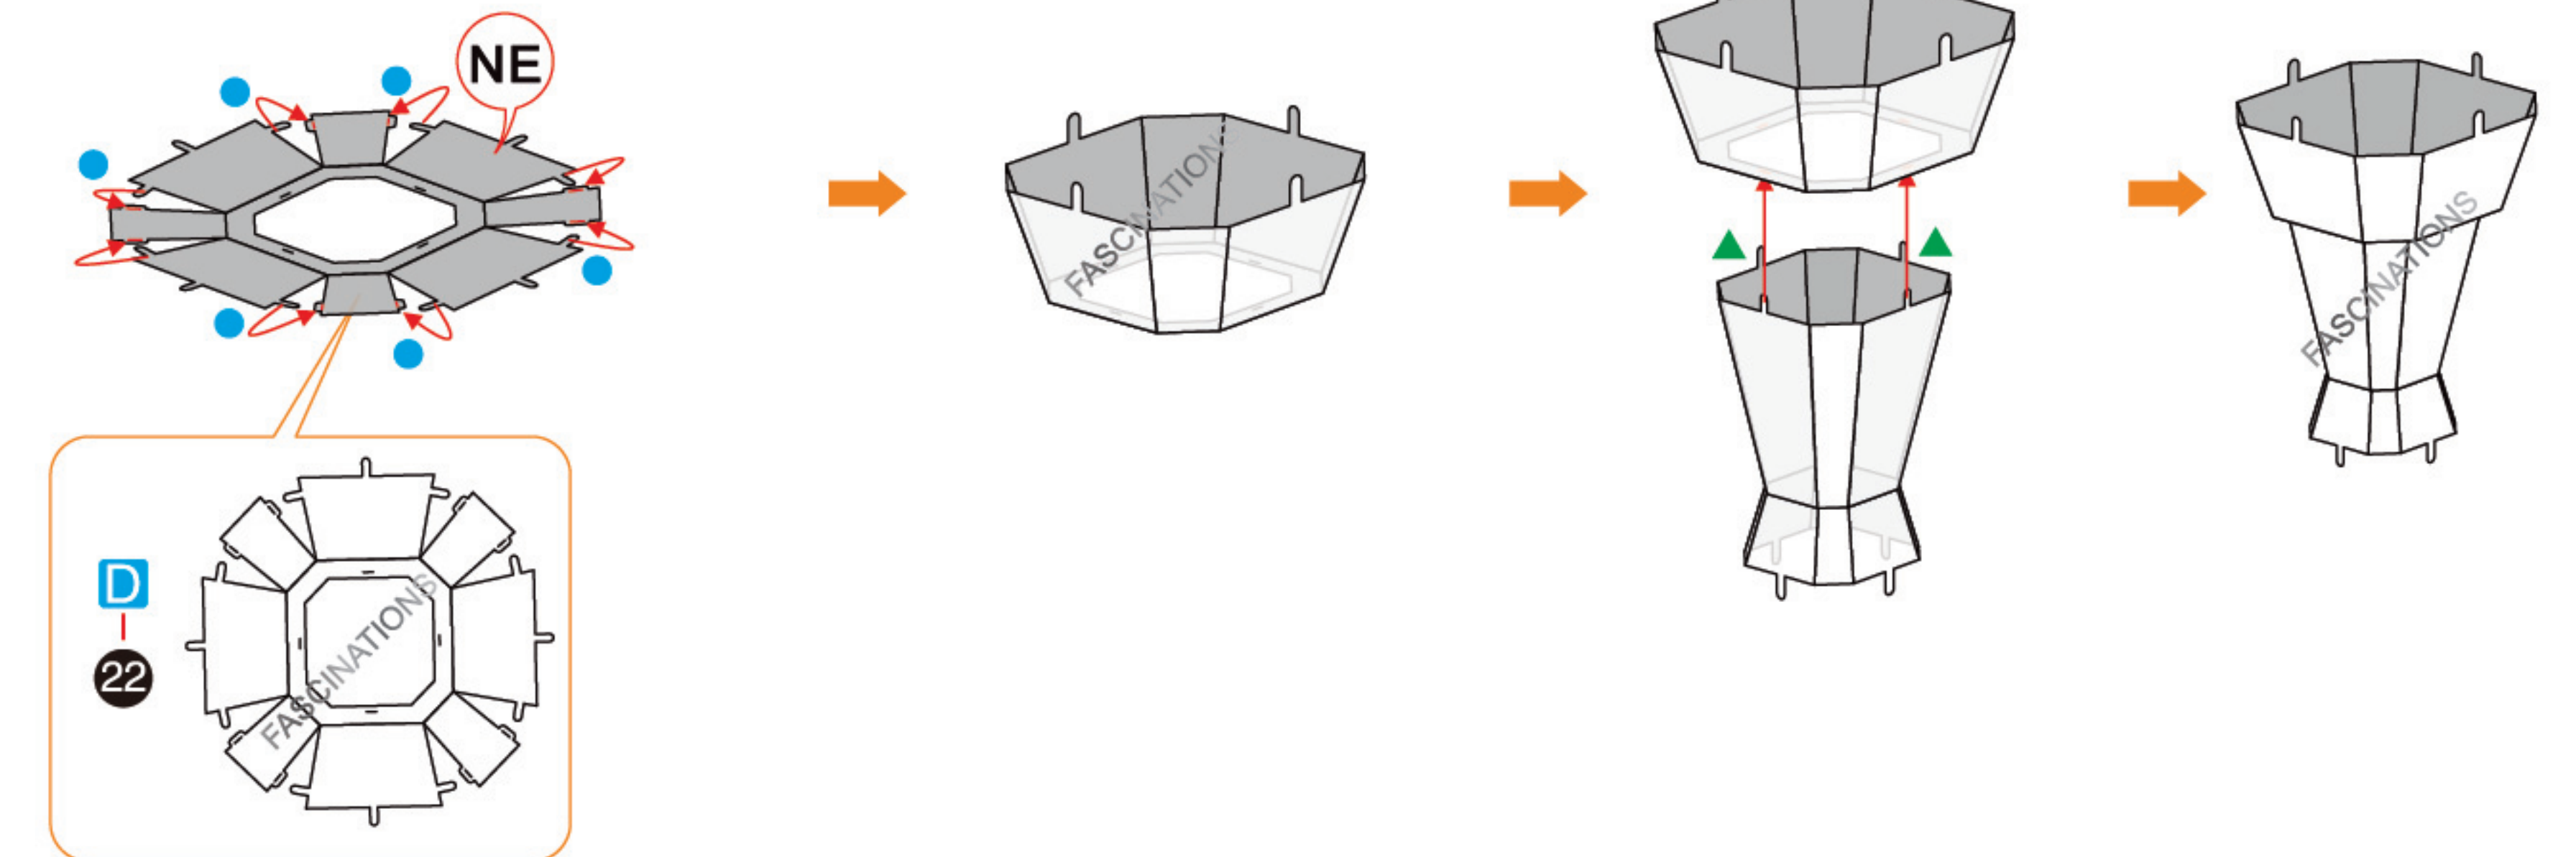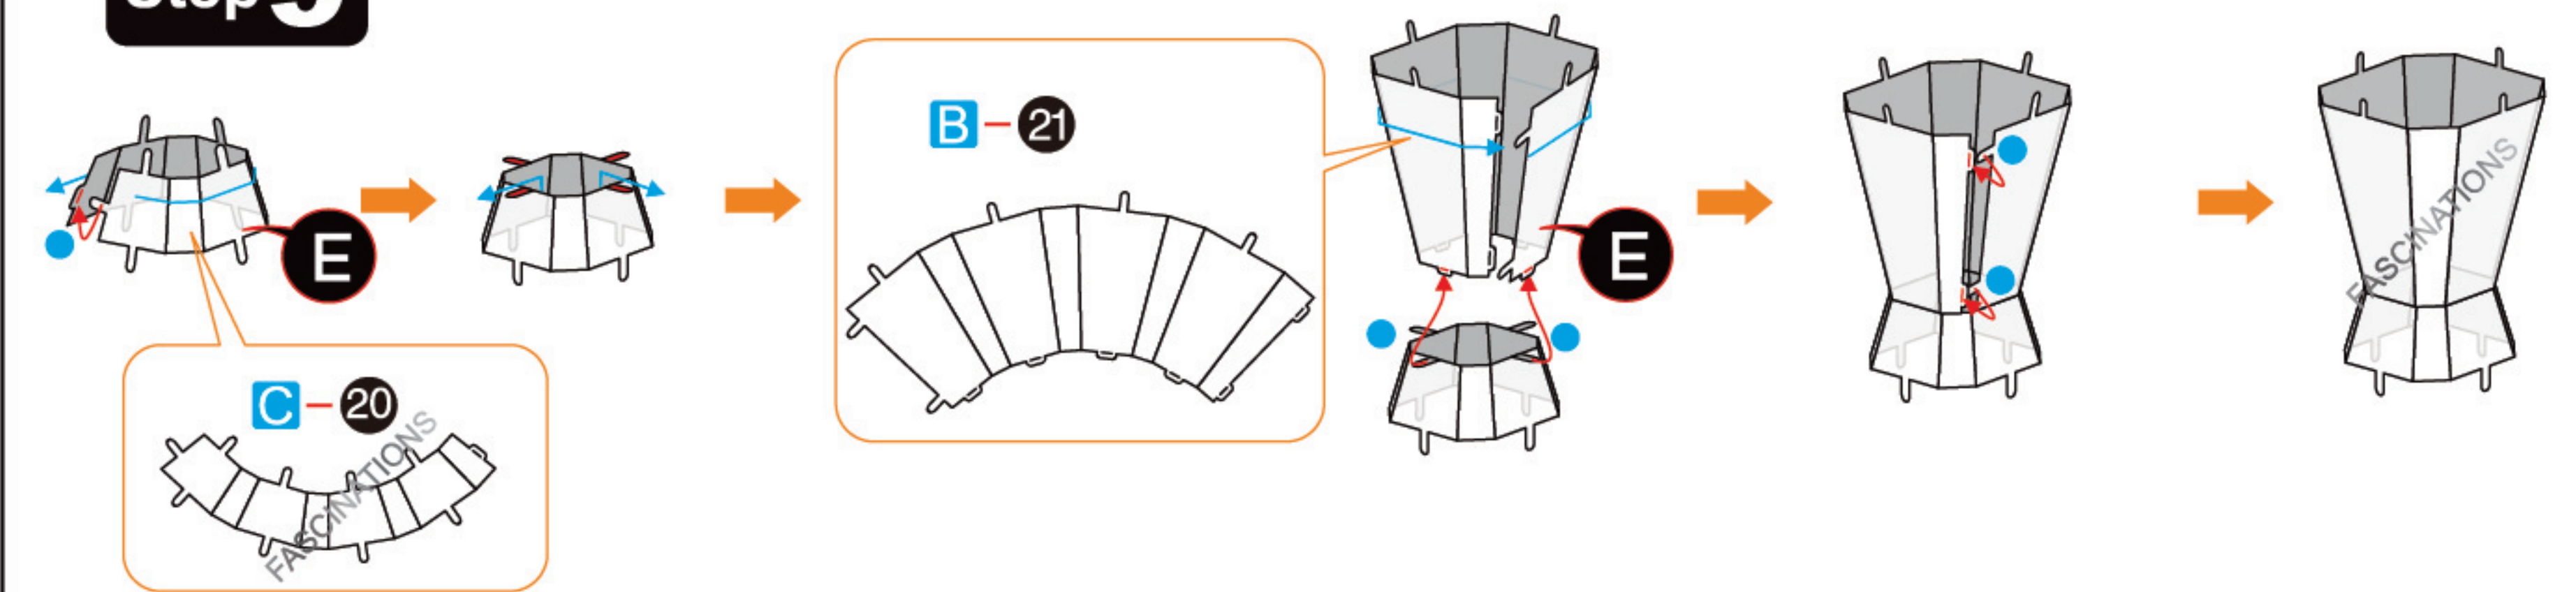


Step 10

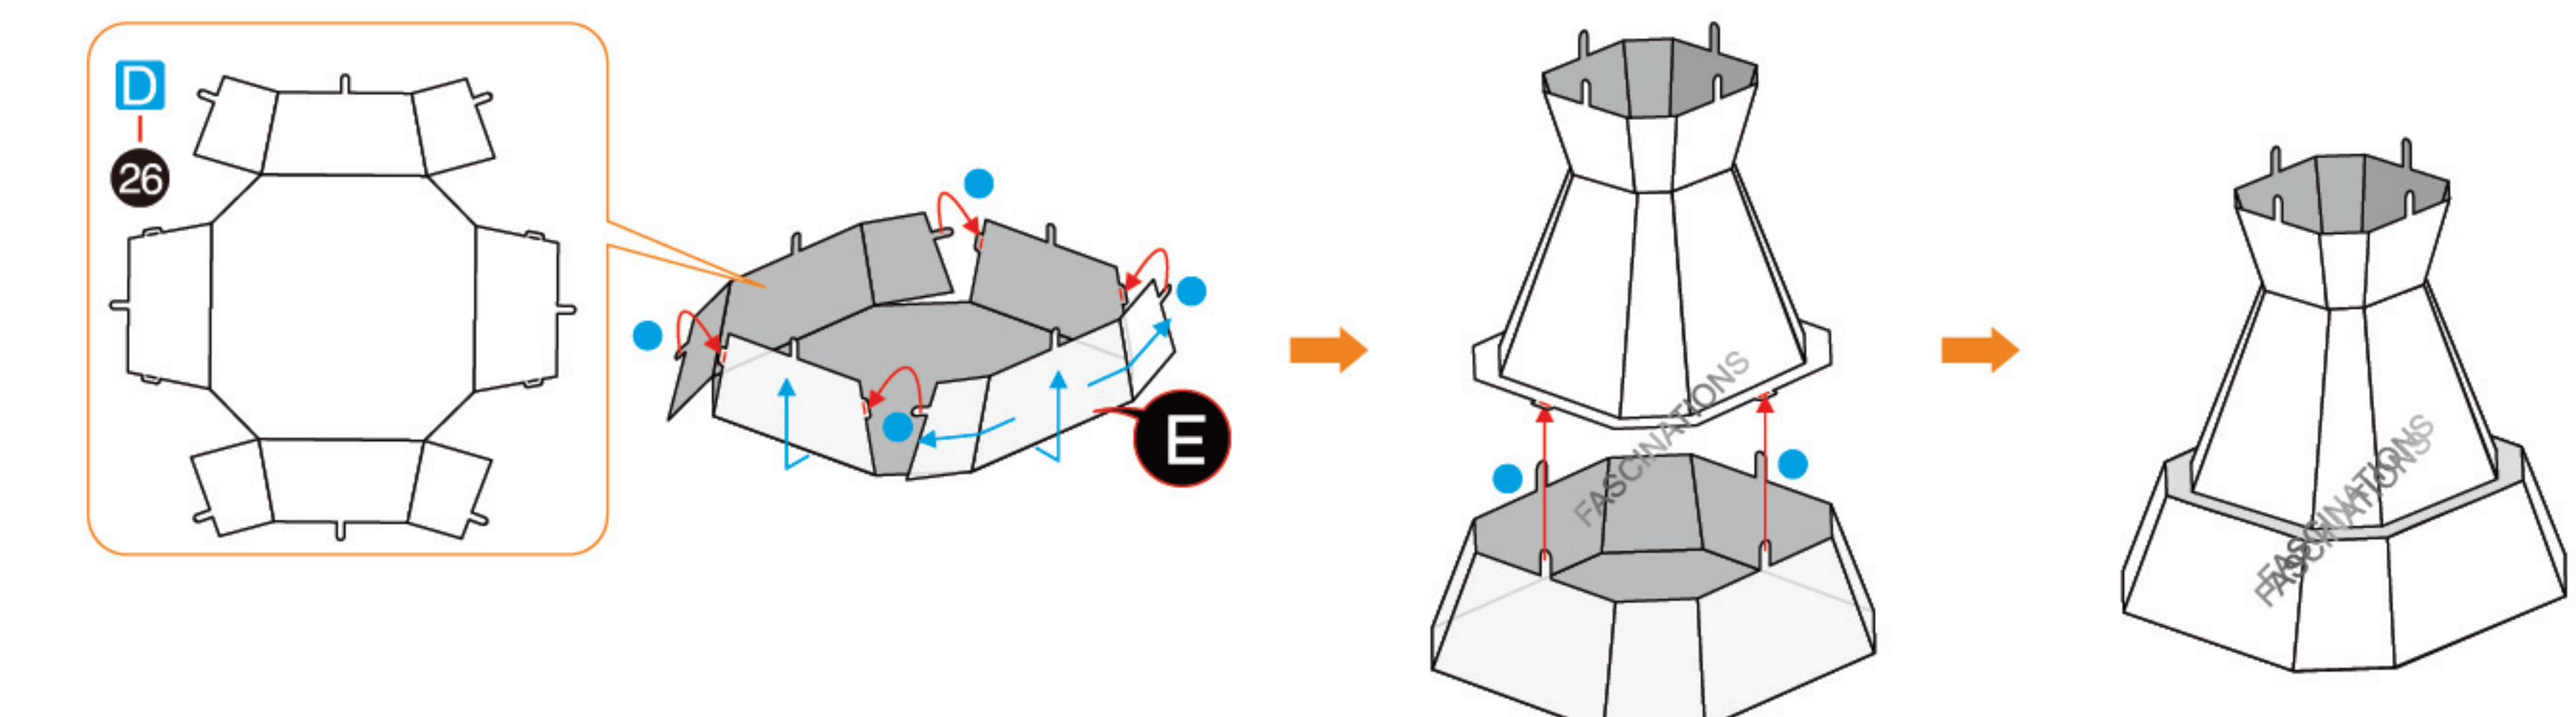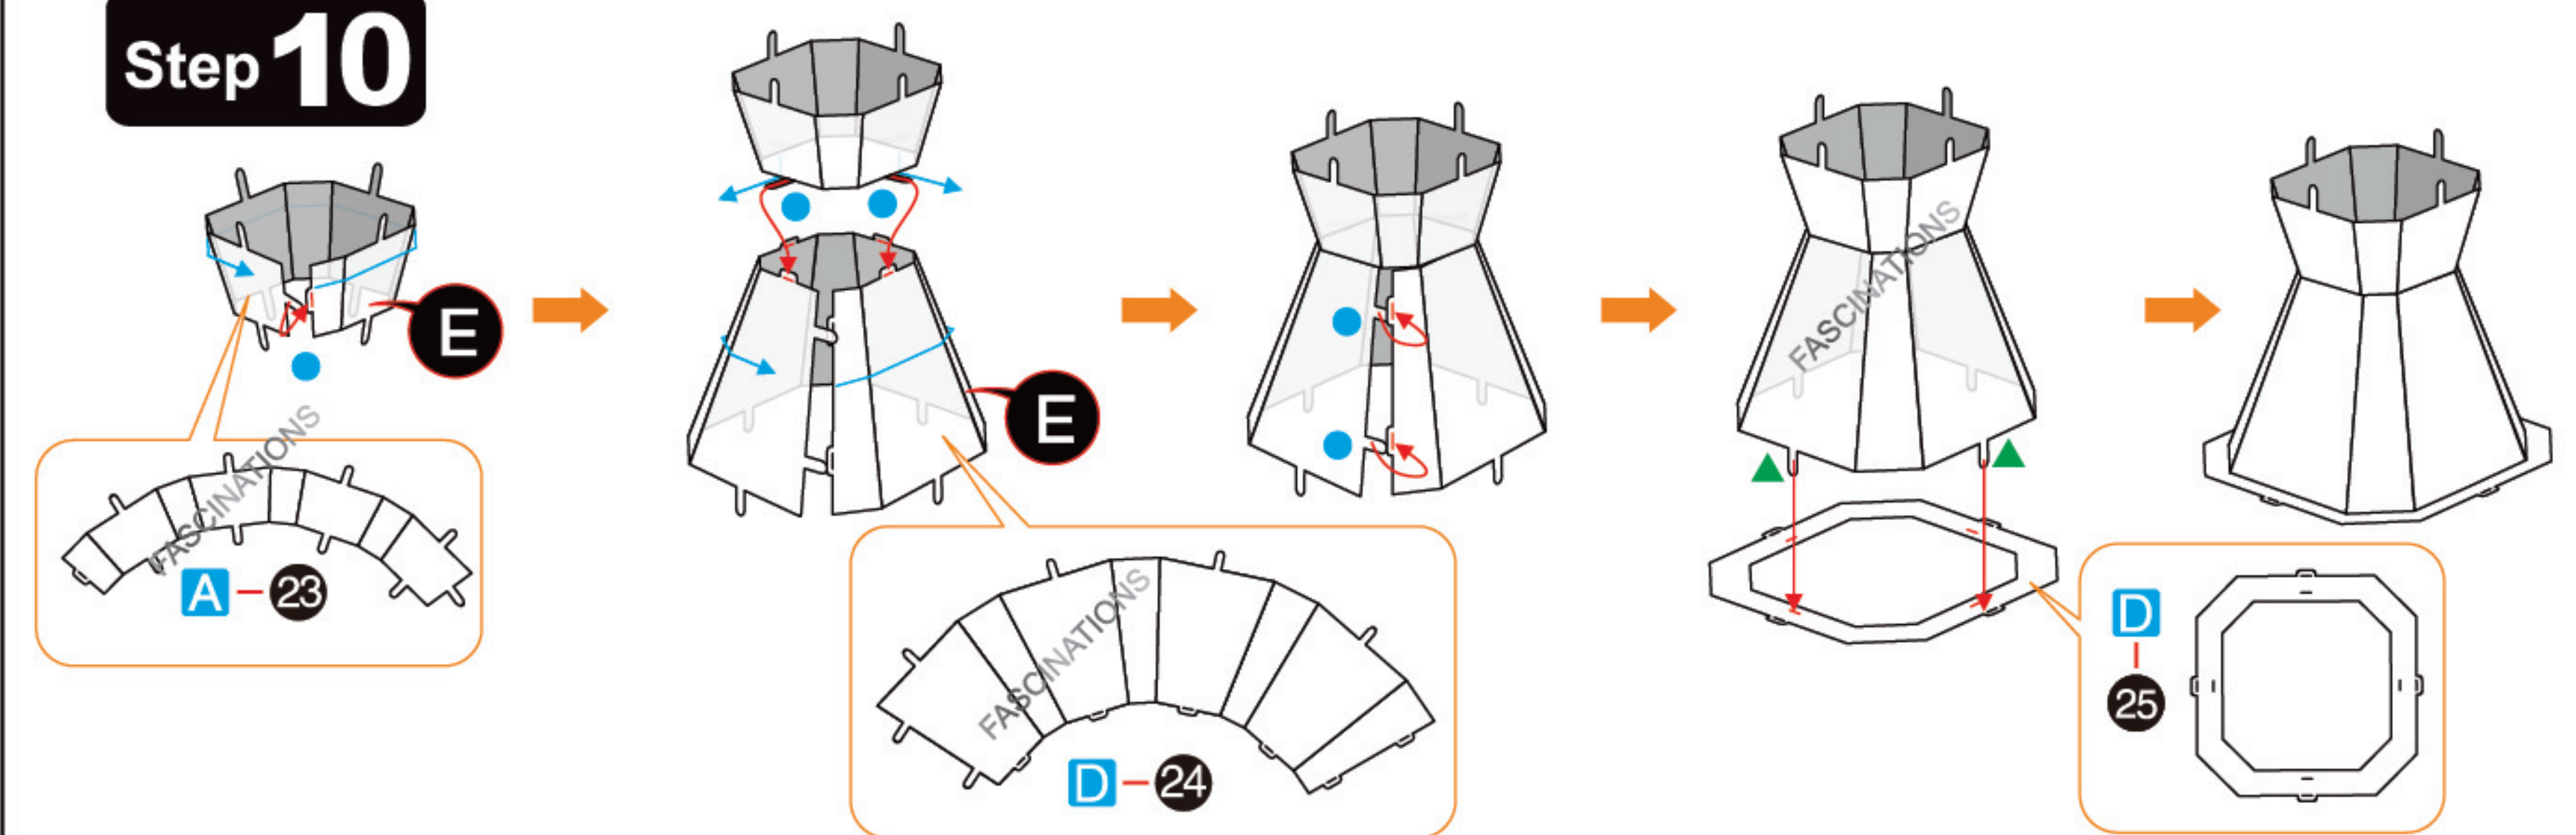


Step 11

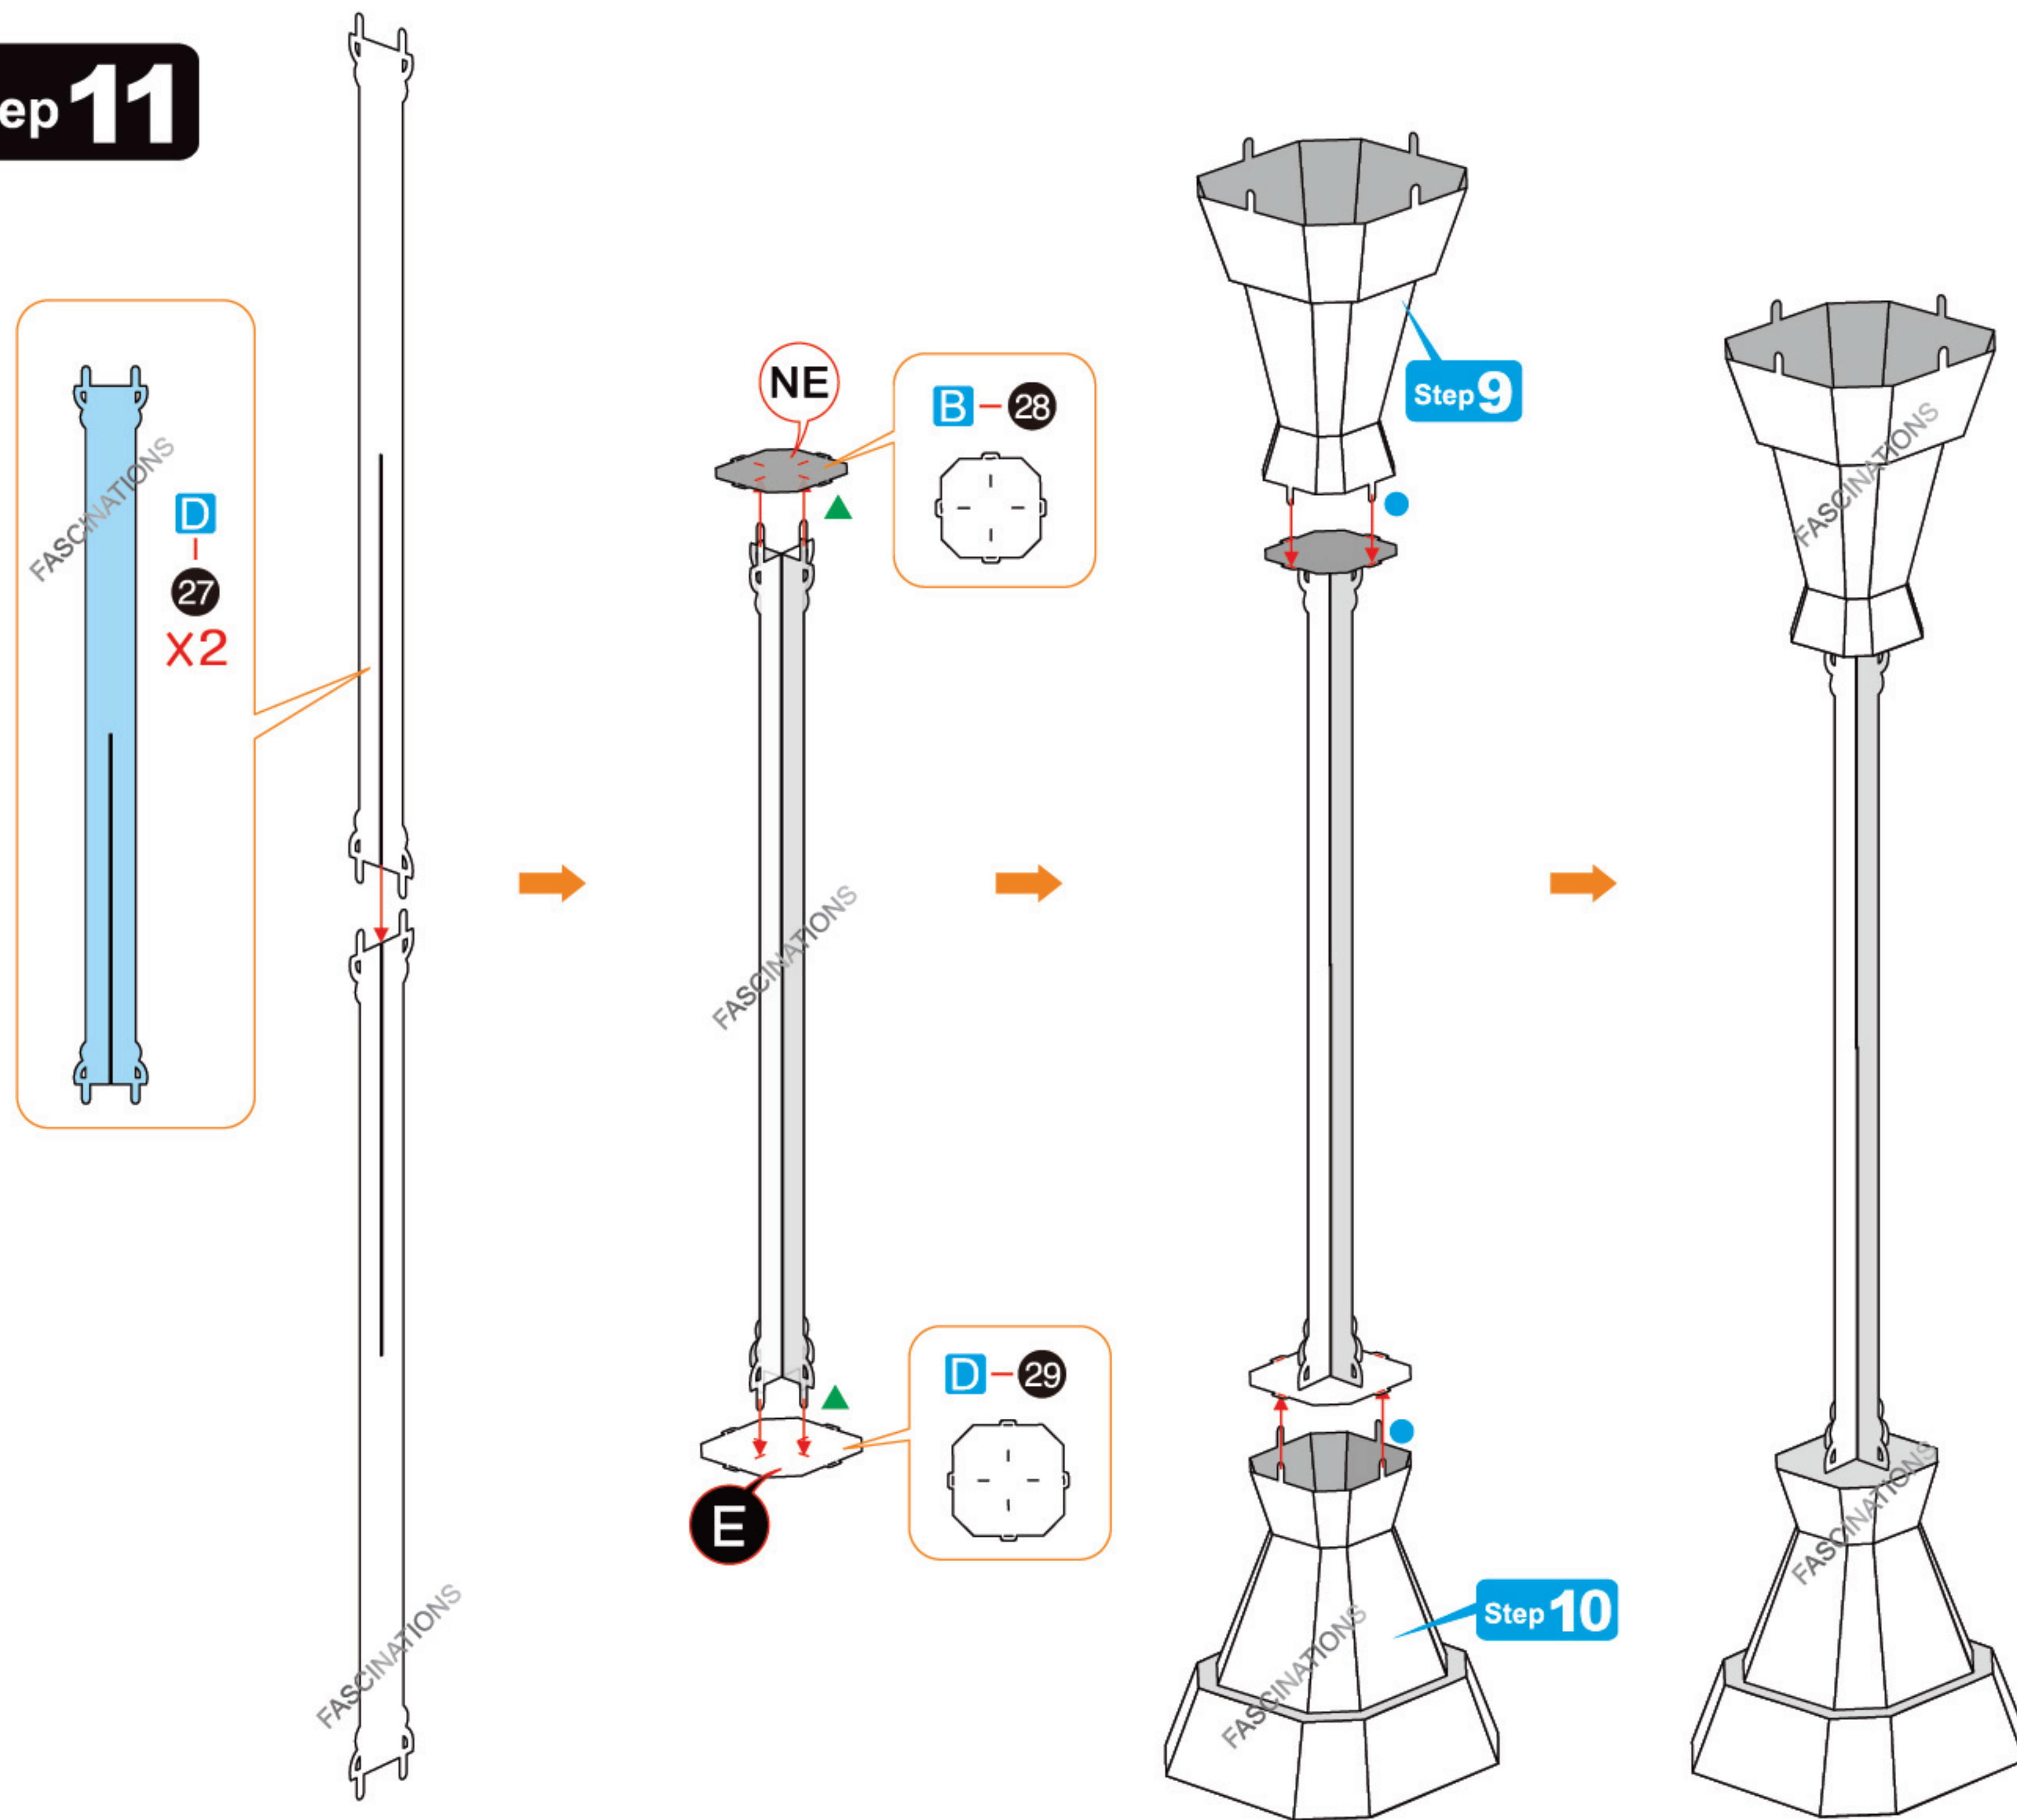


Step 12








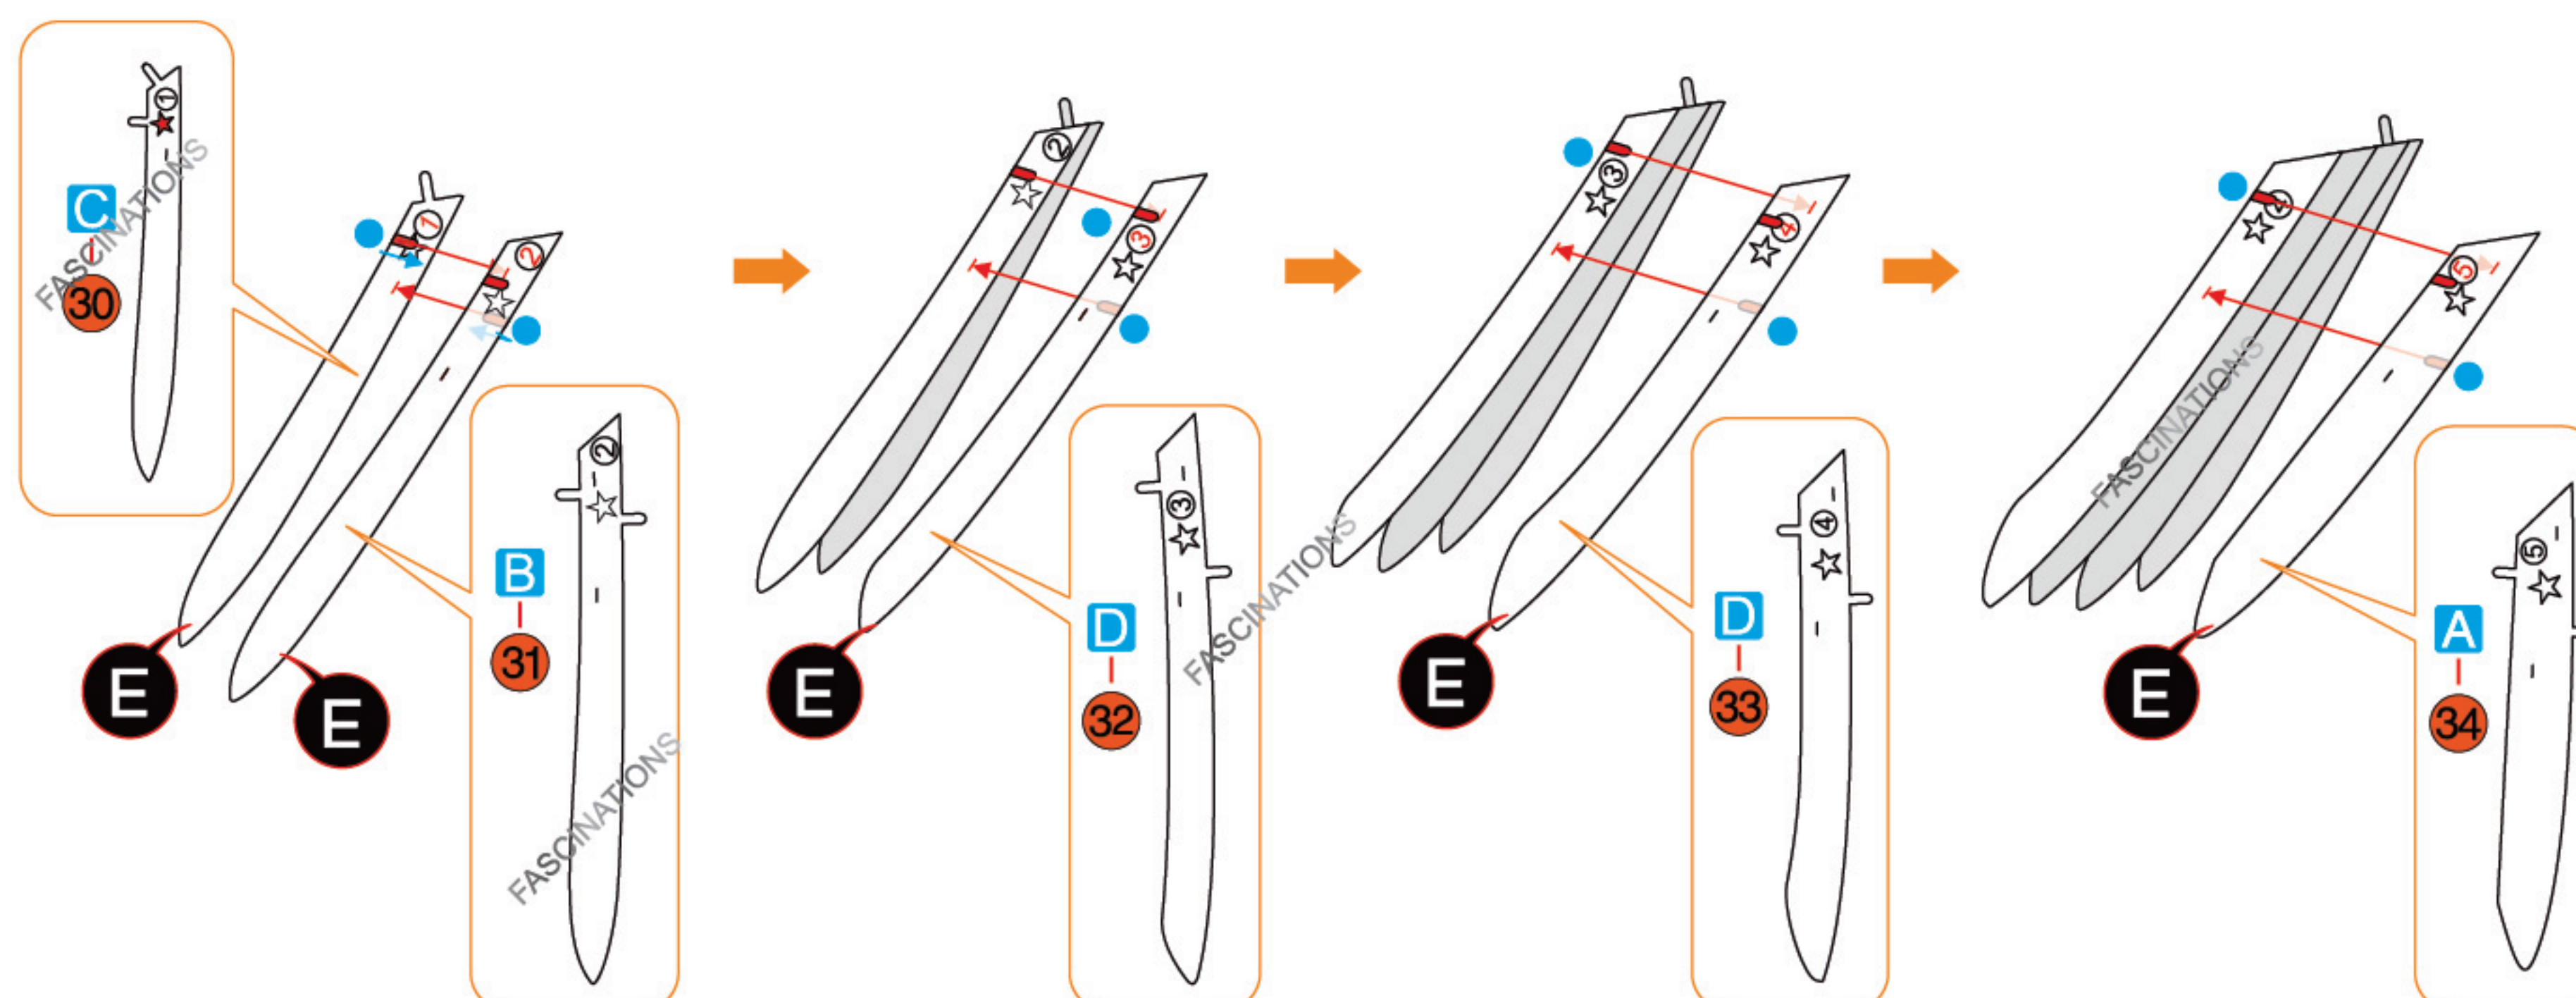


Step 13

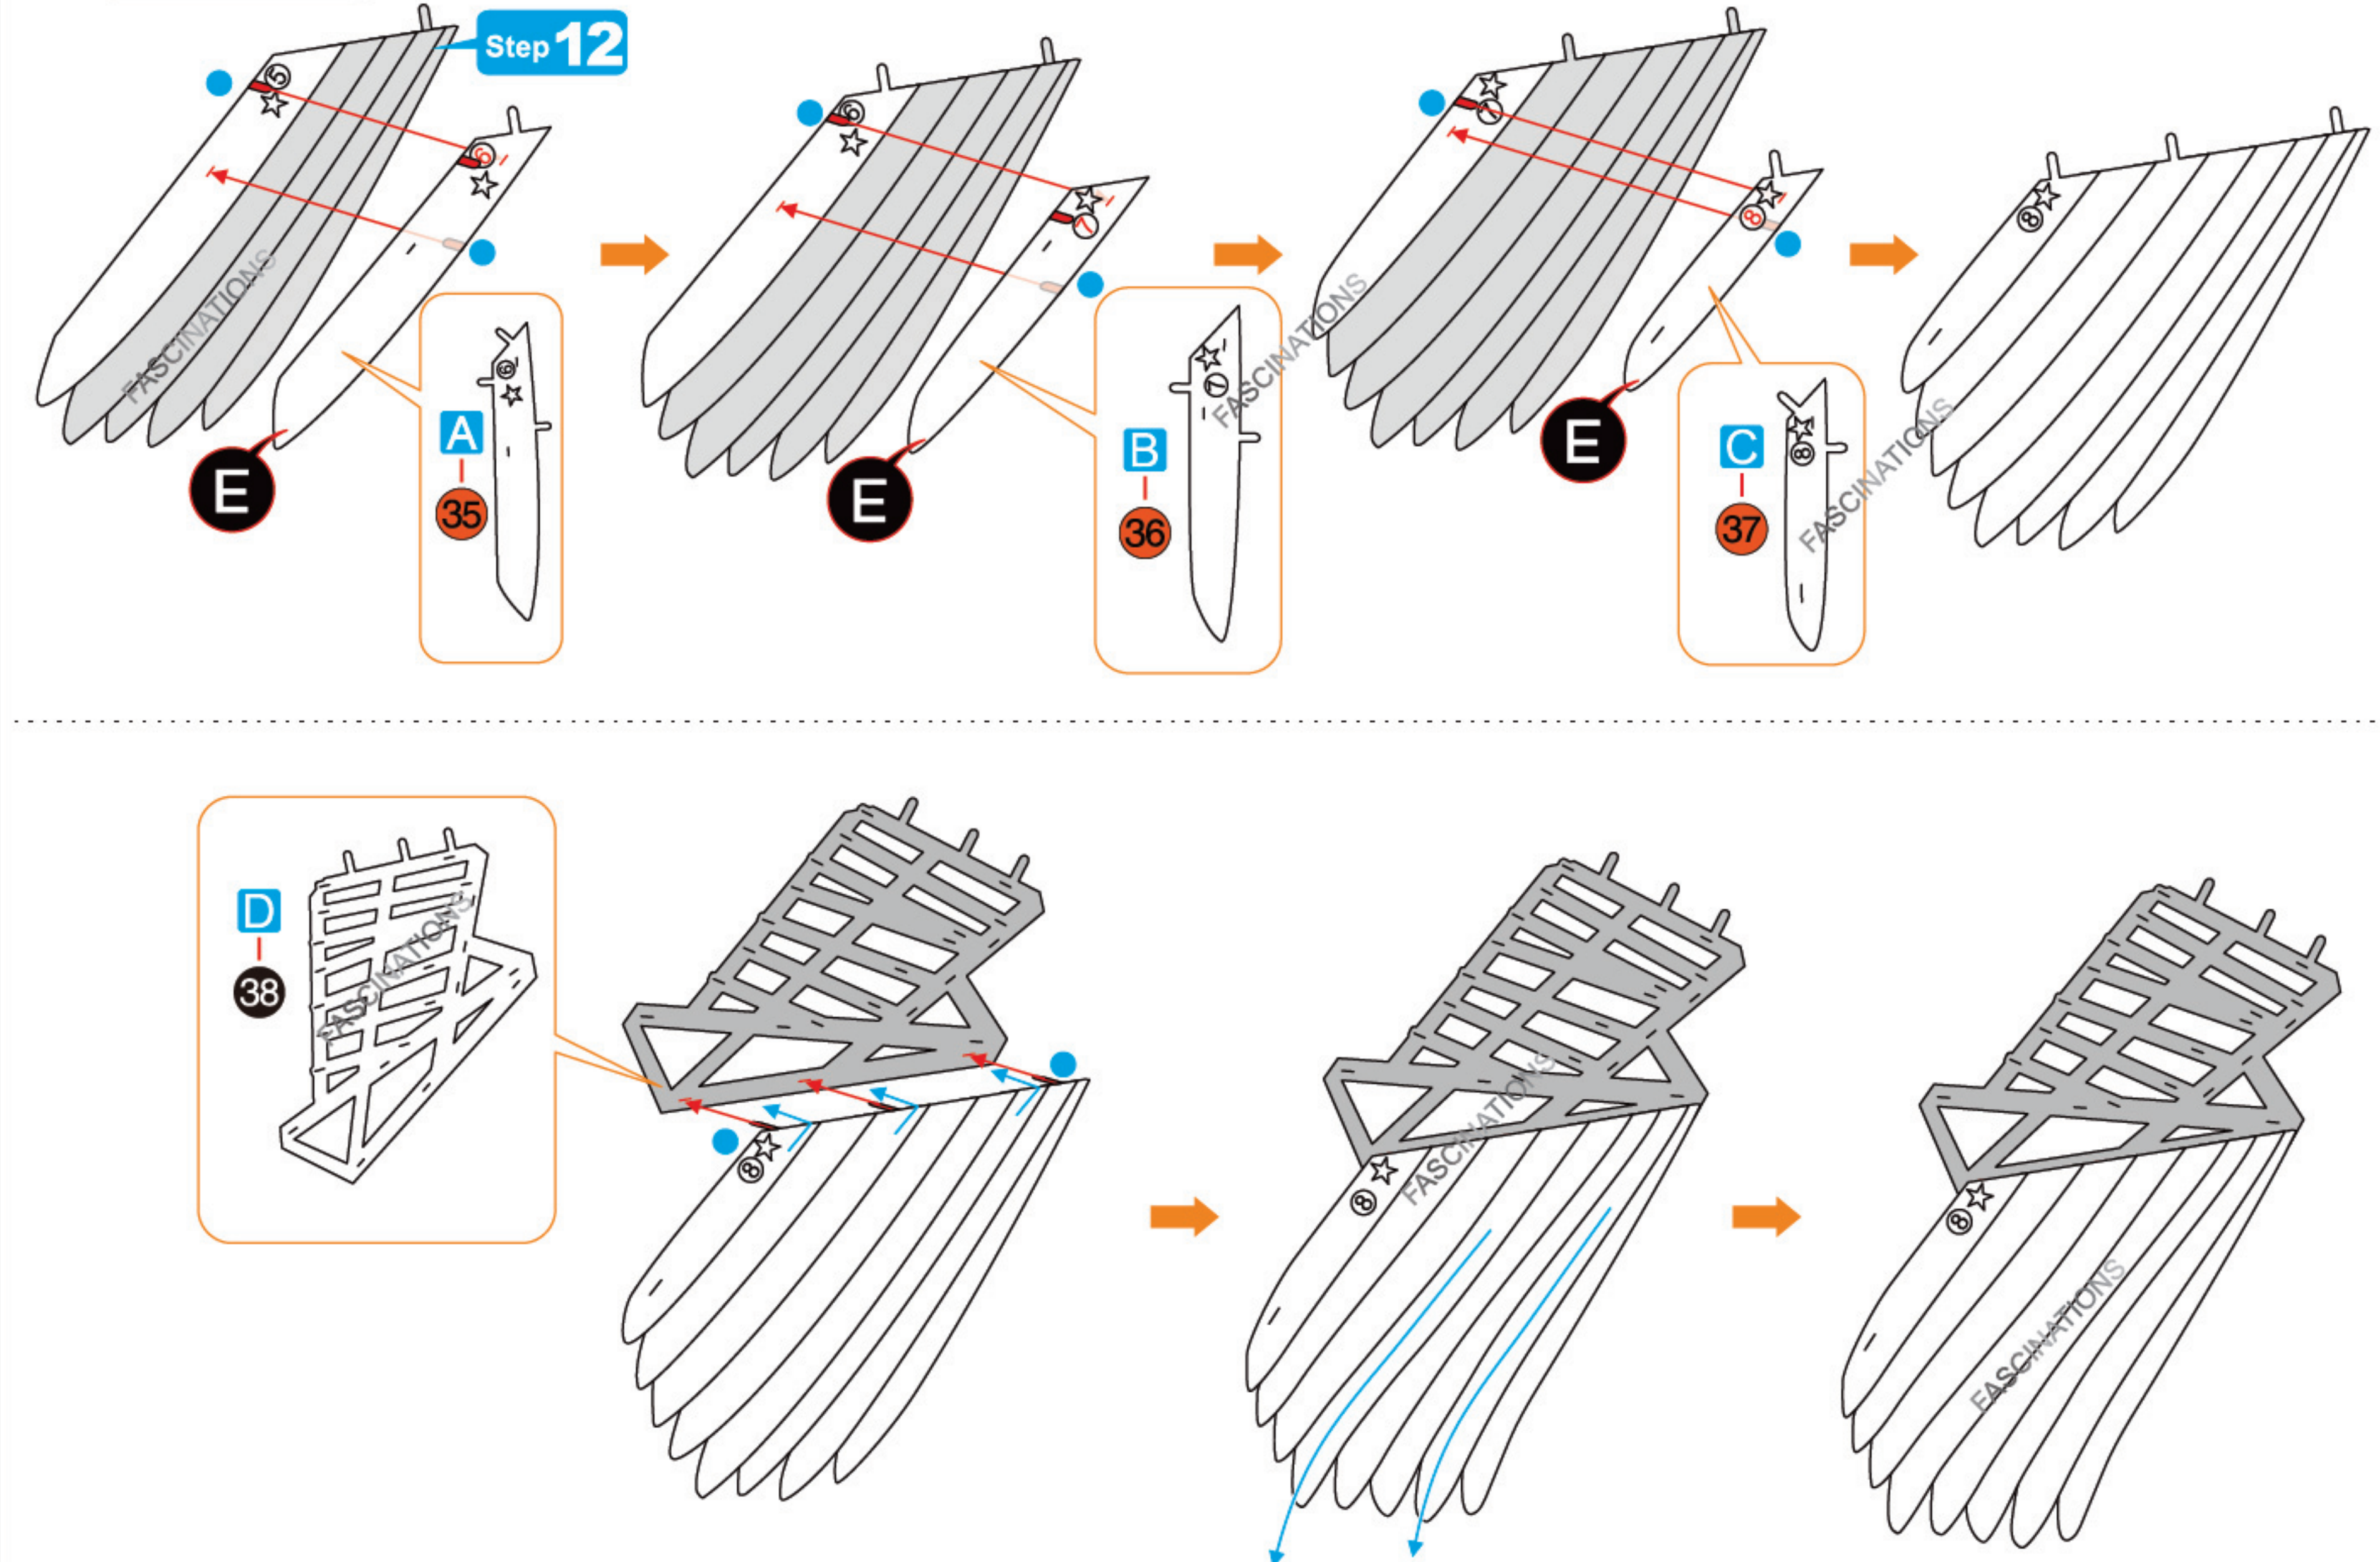


Step 14



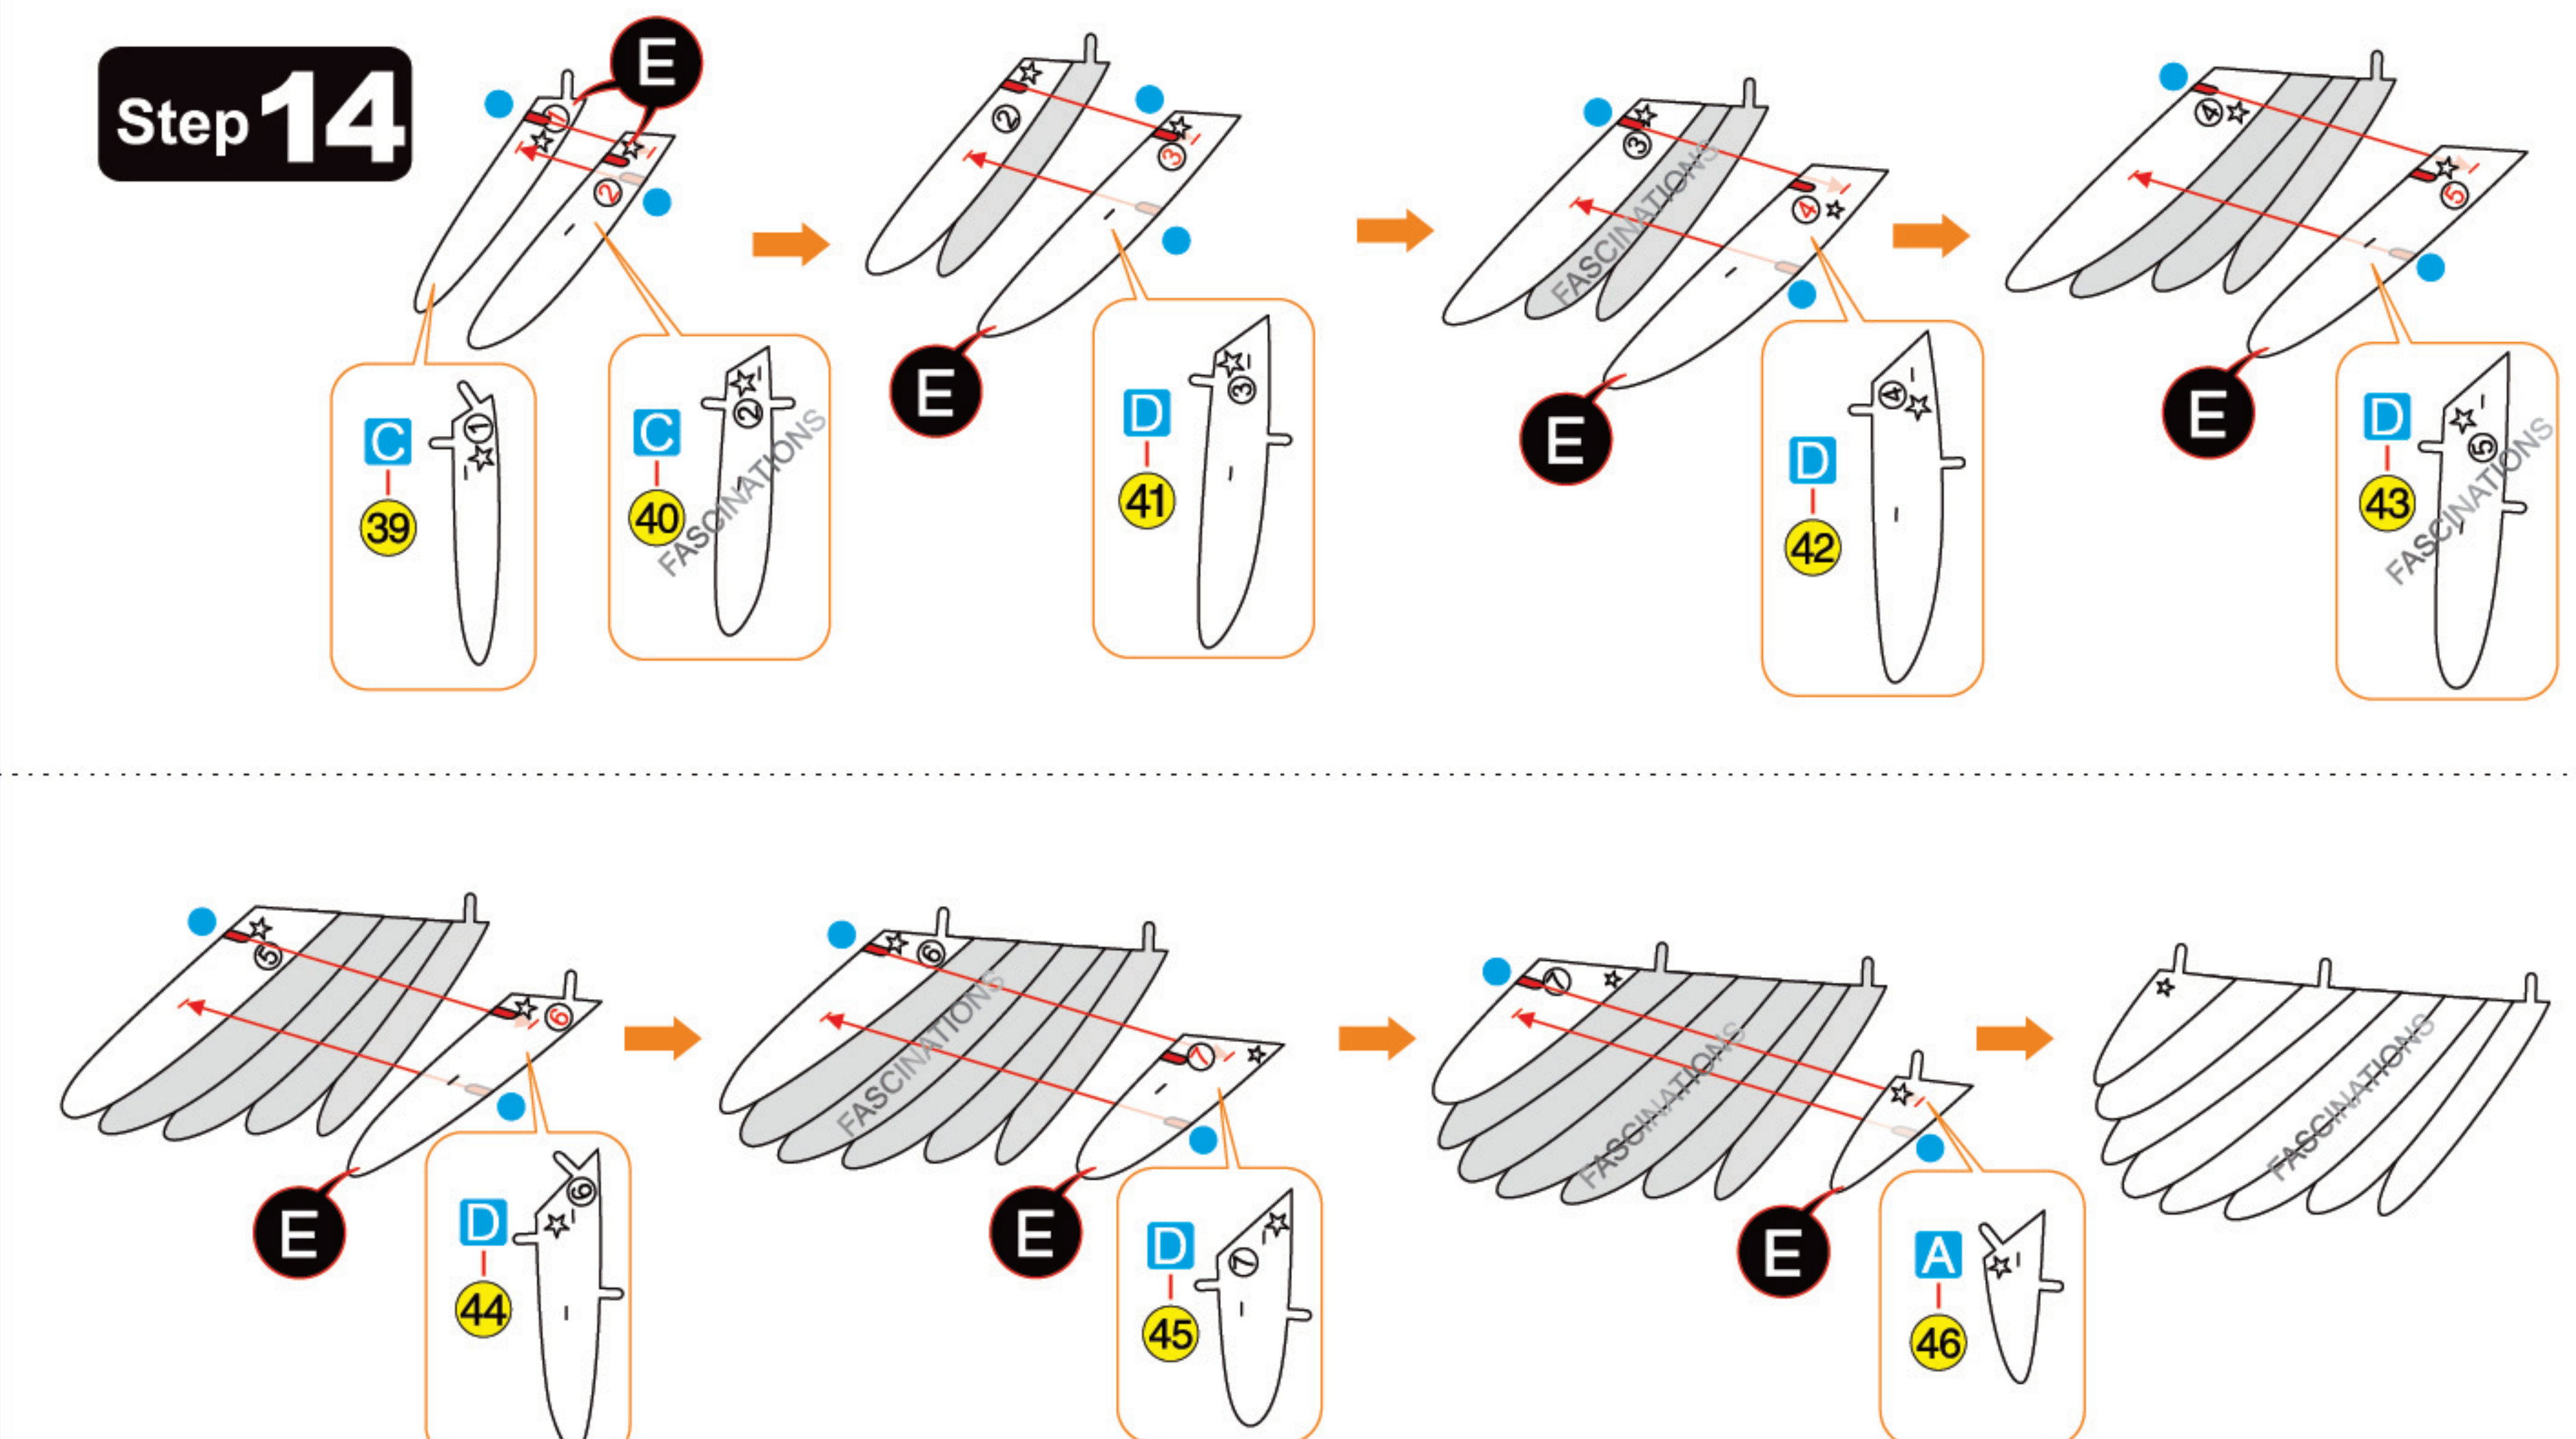


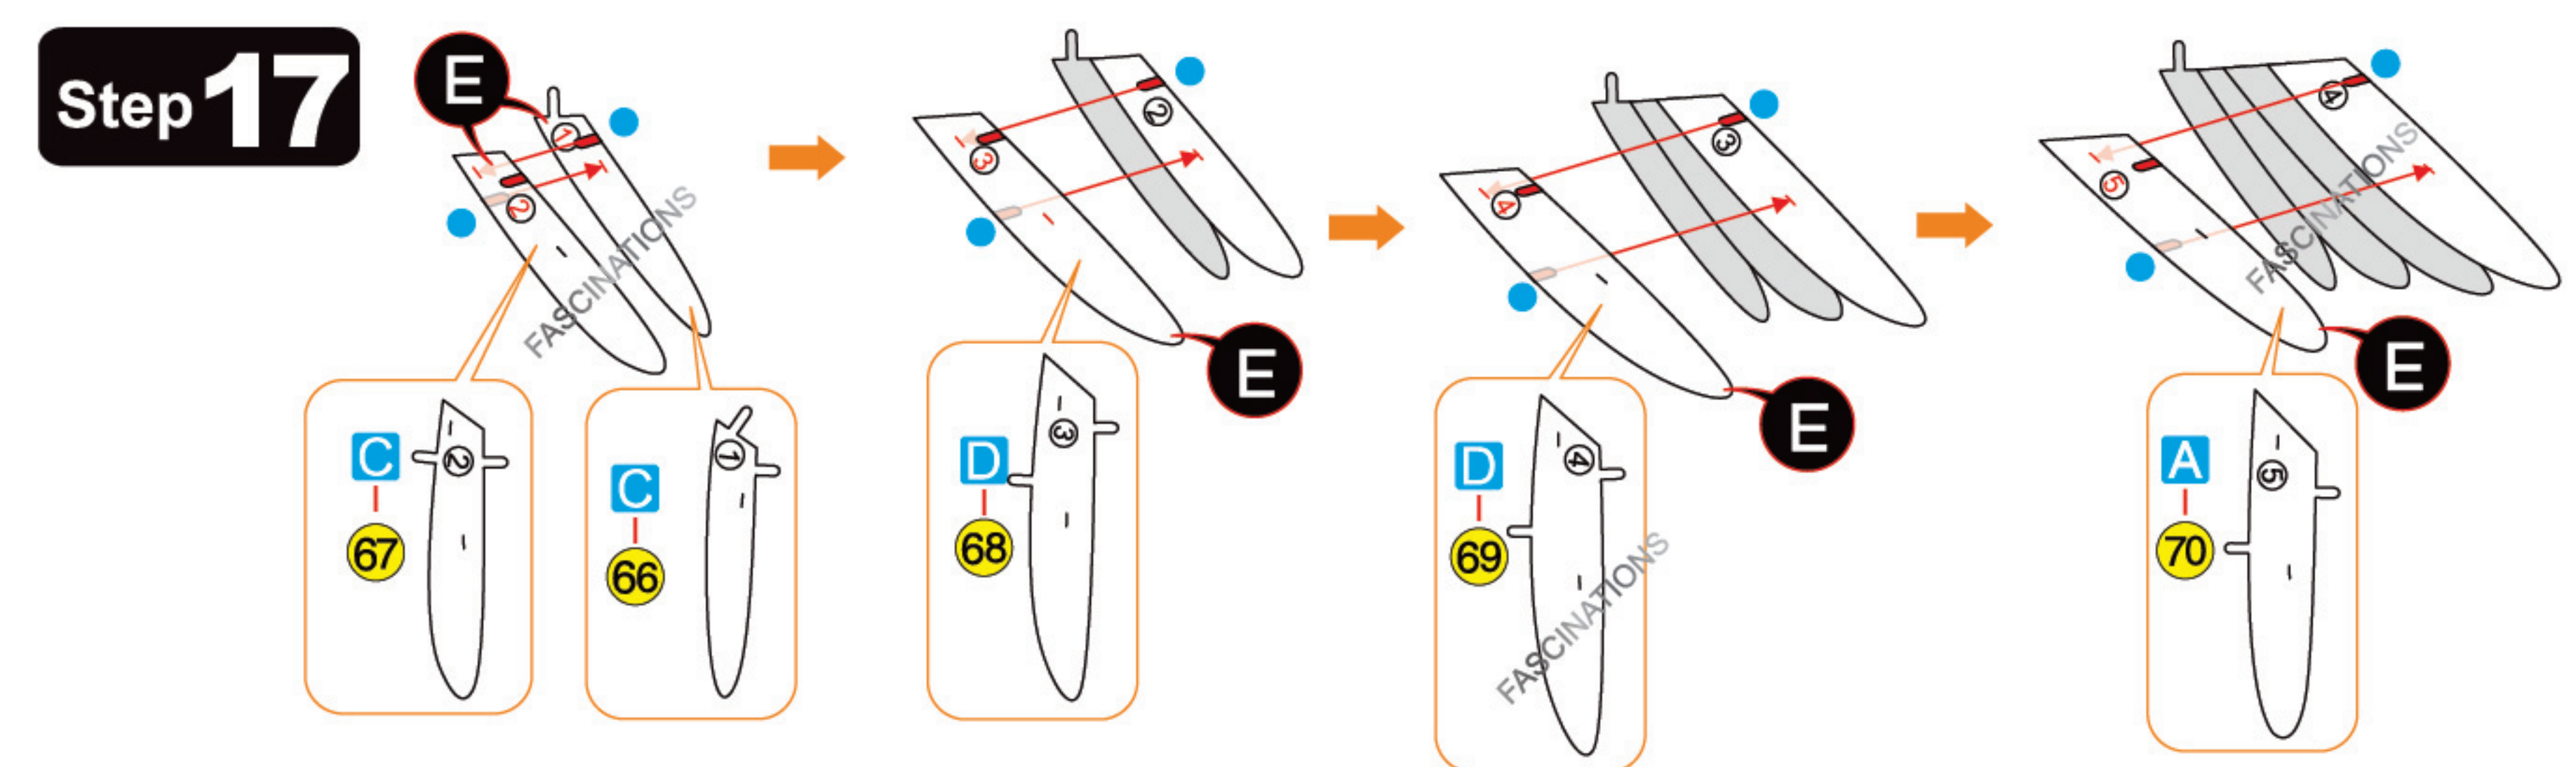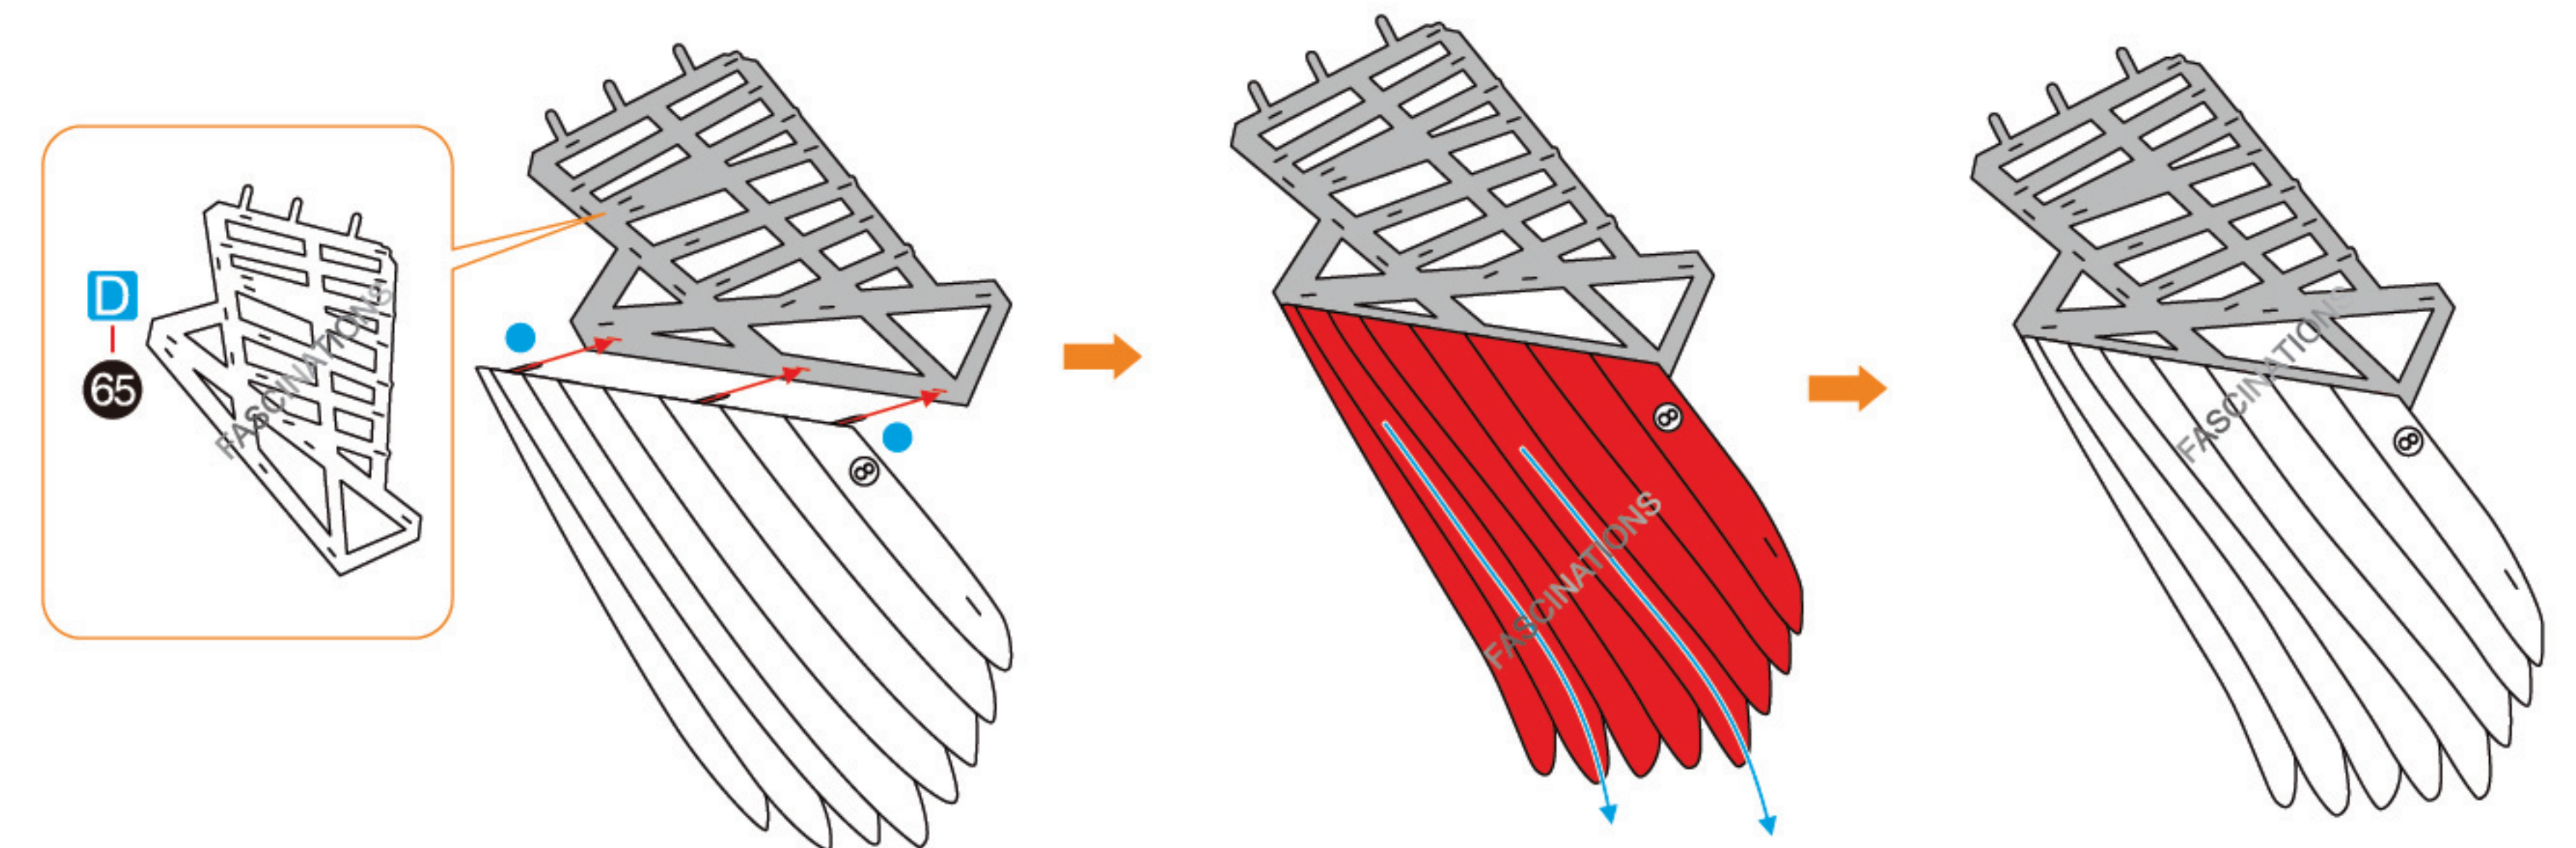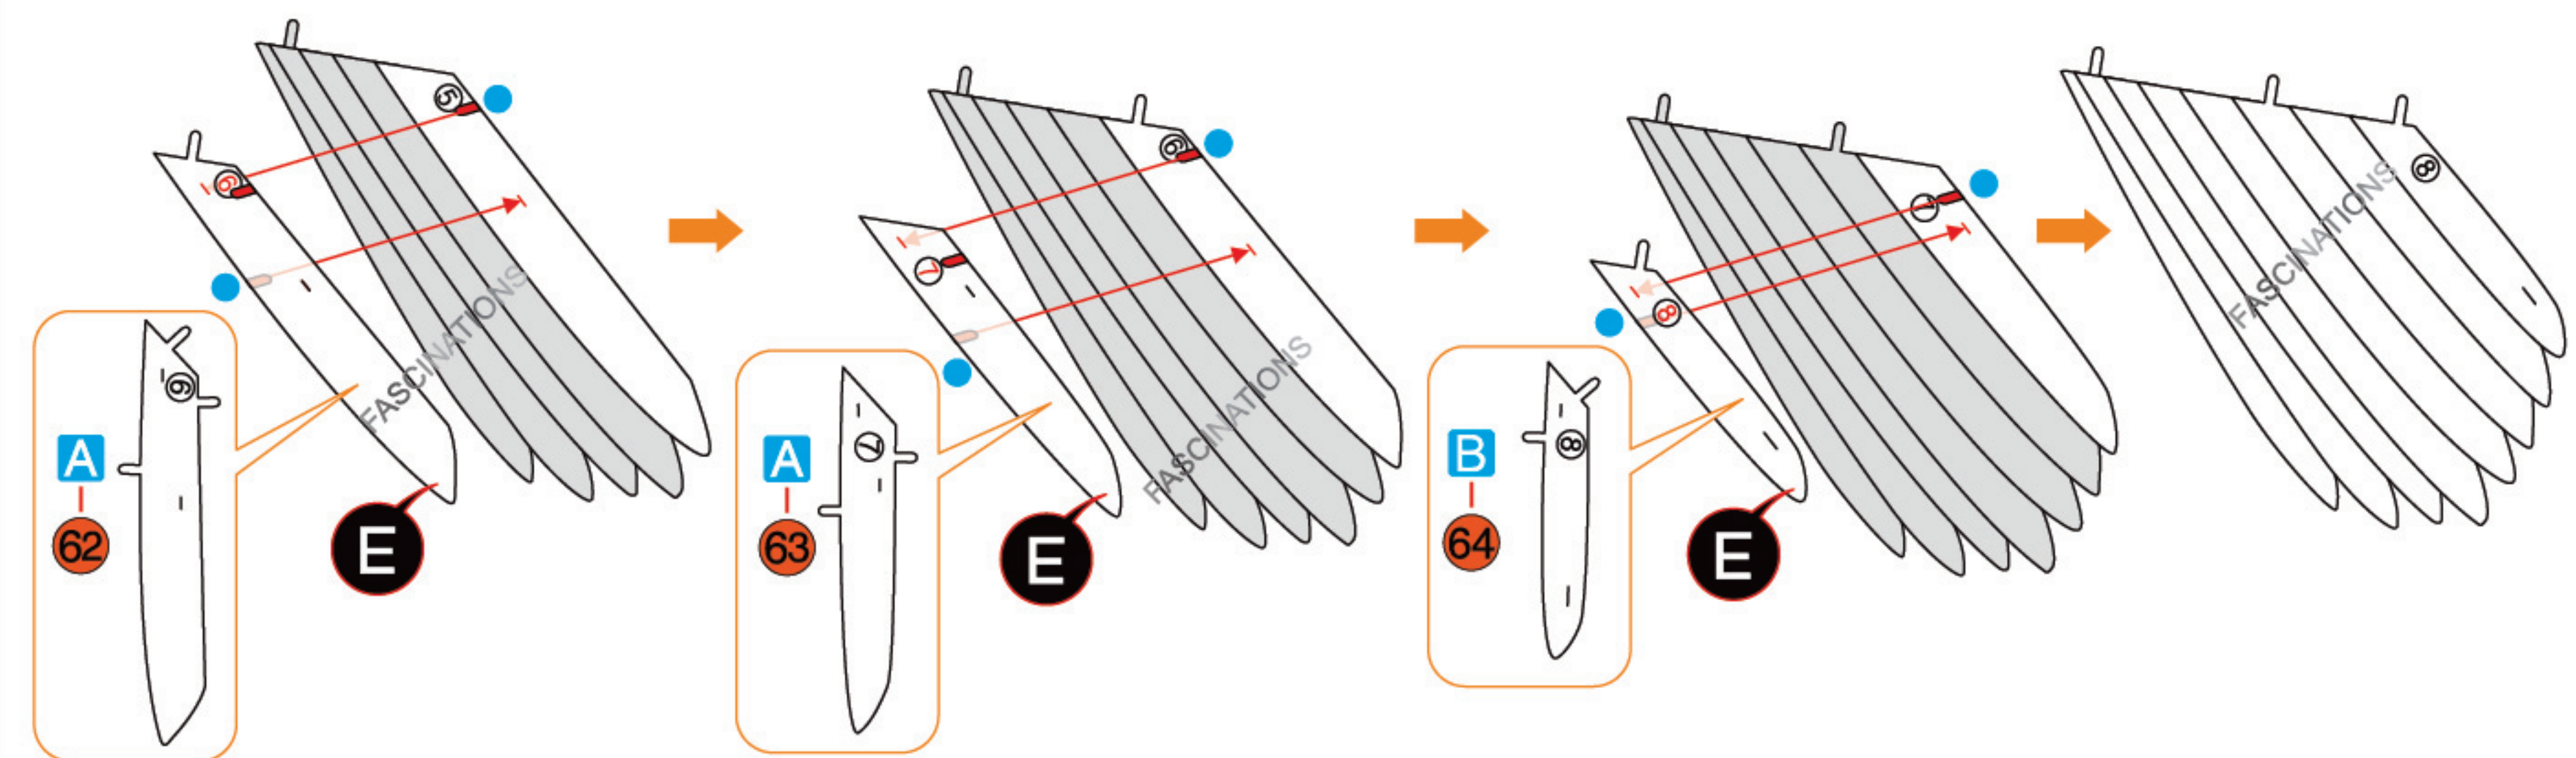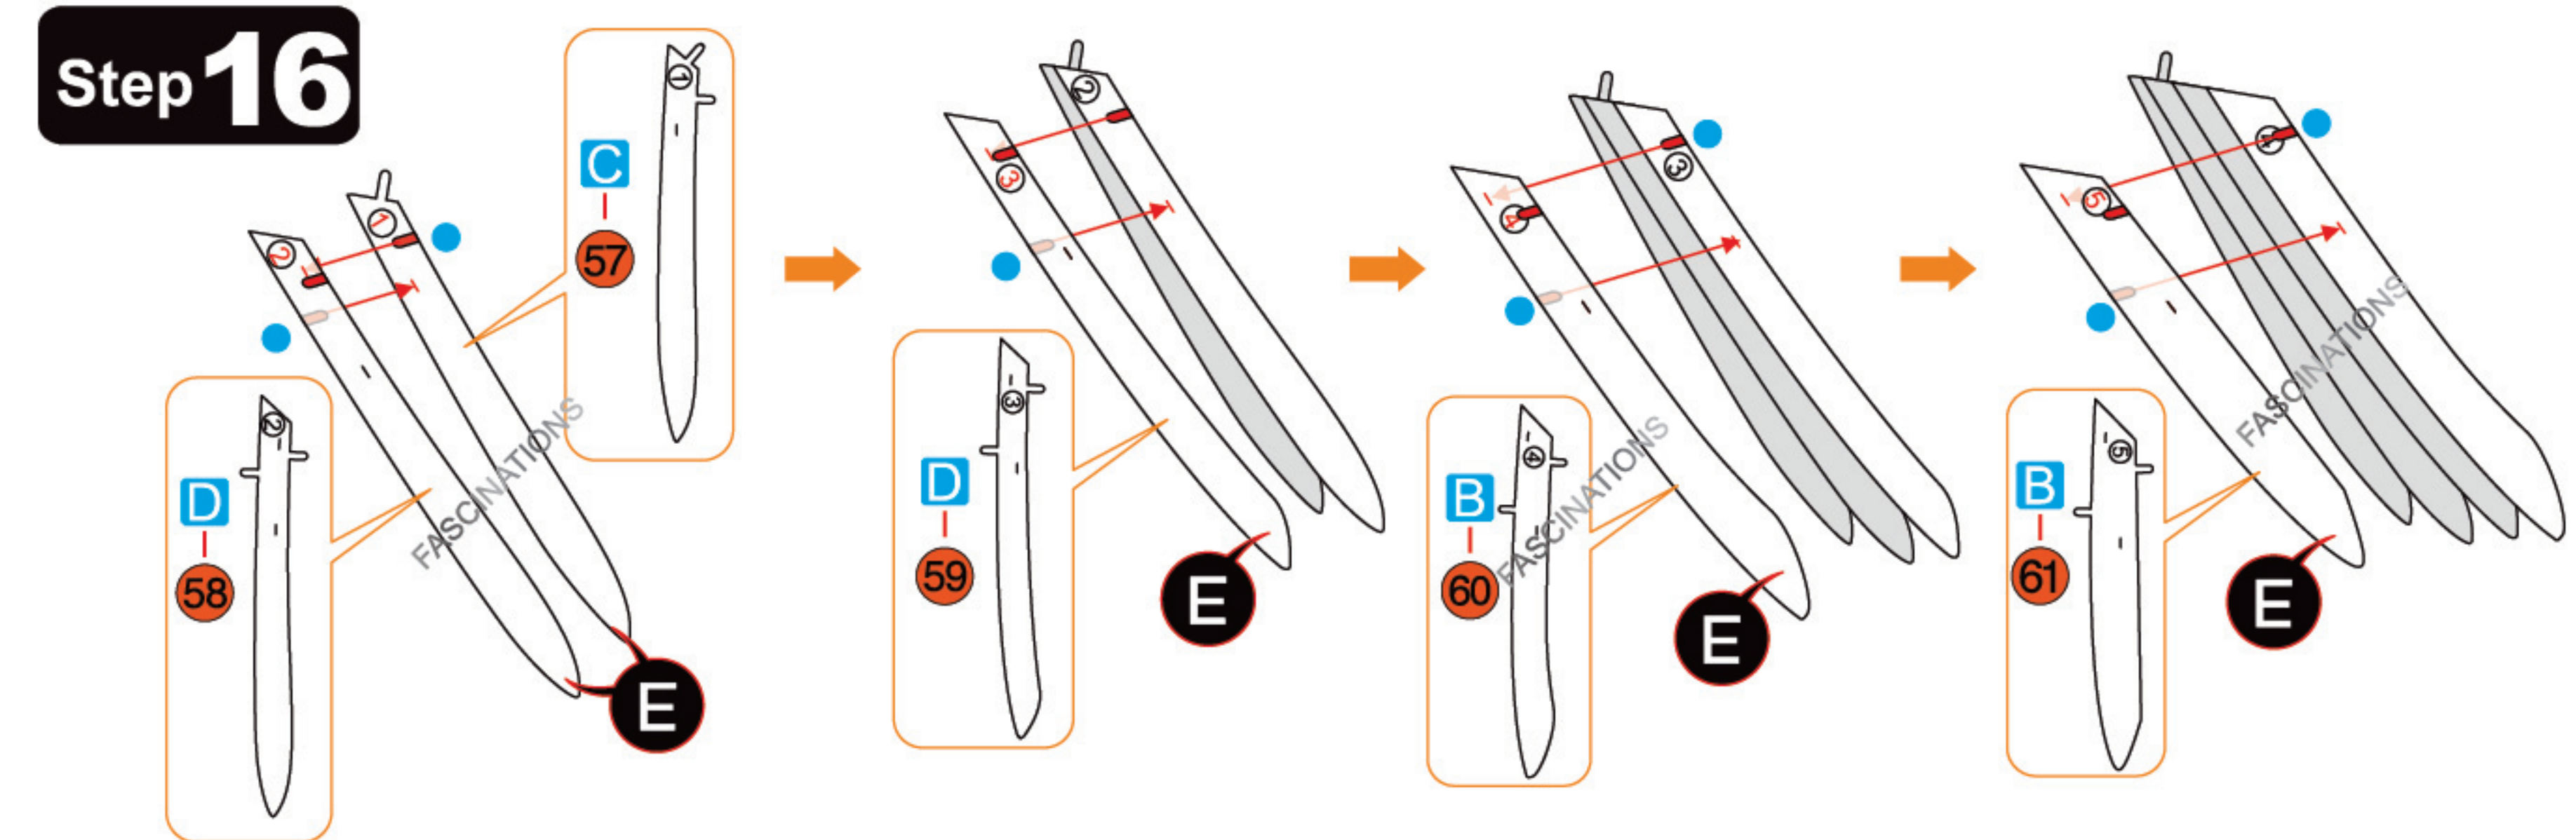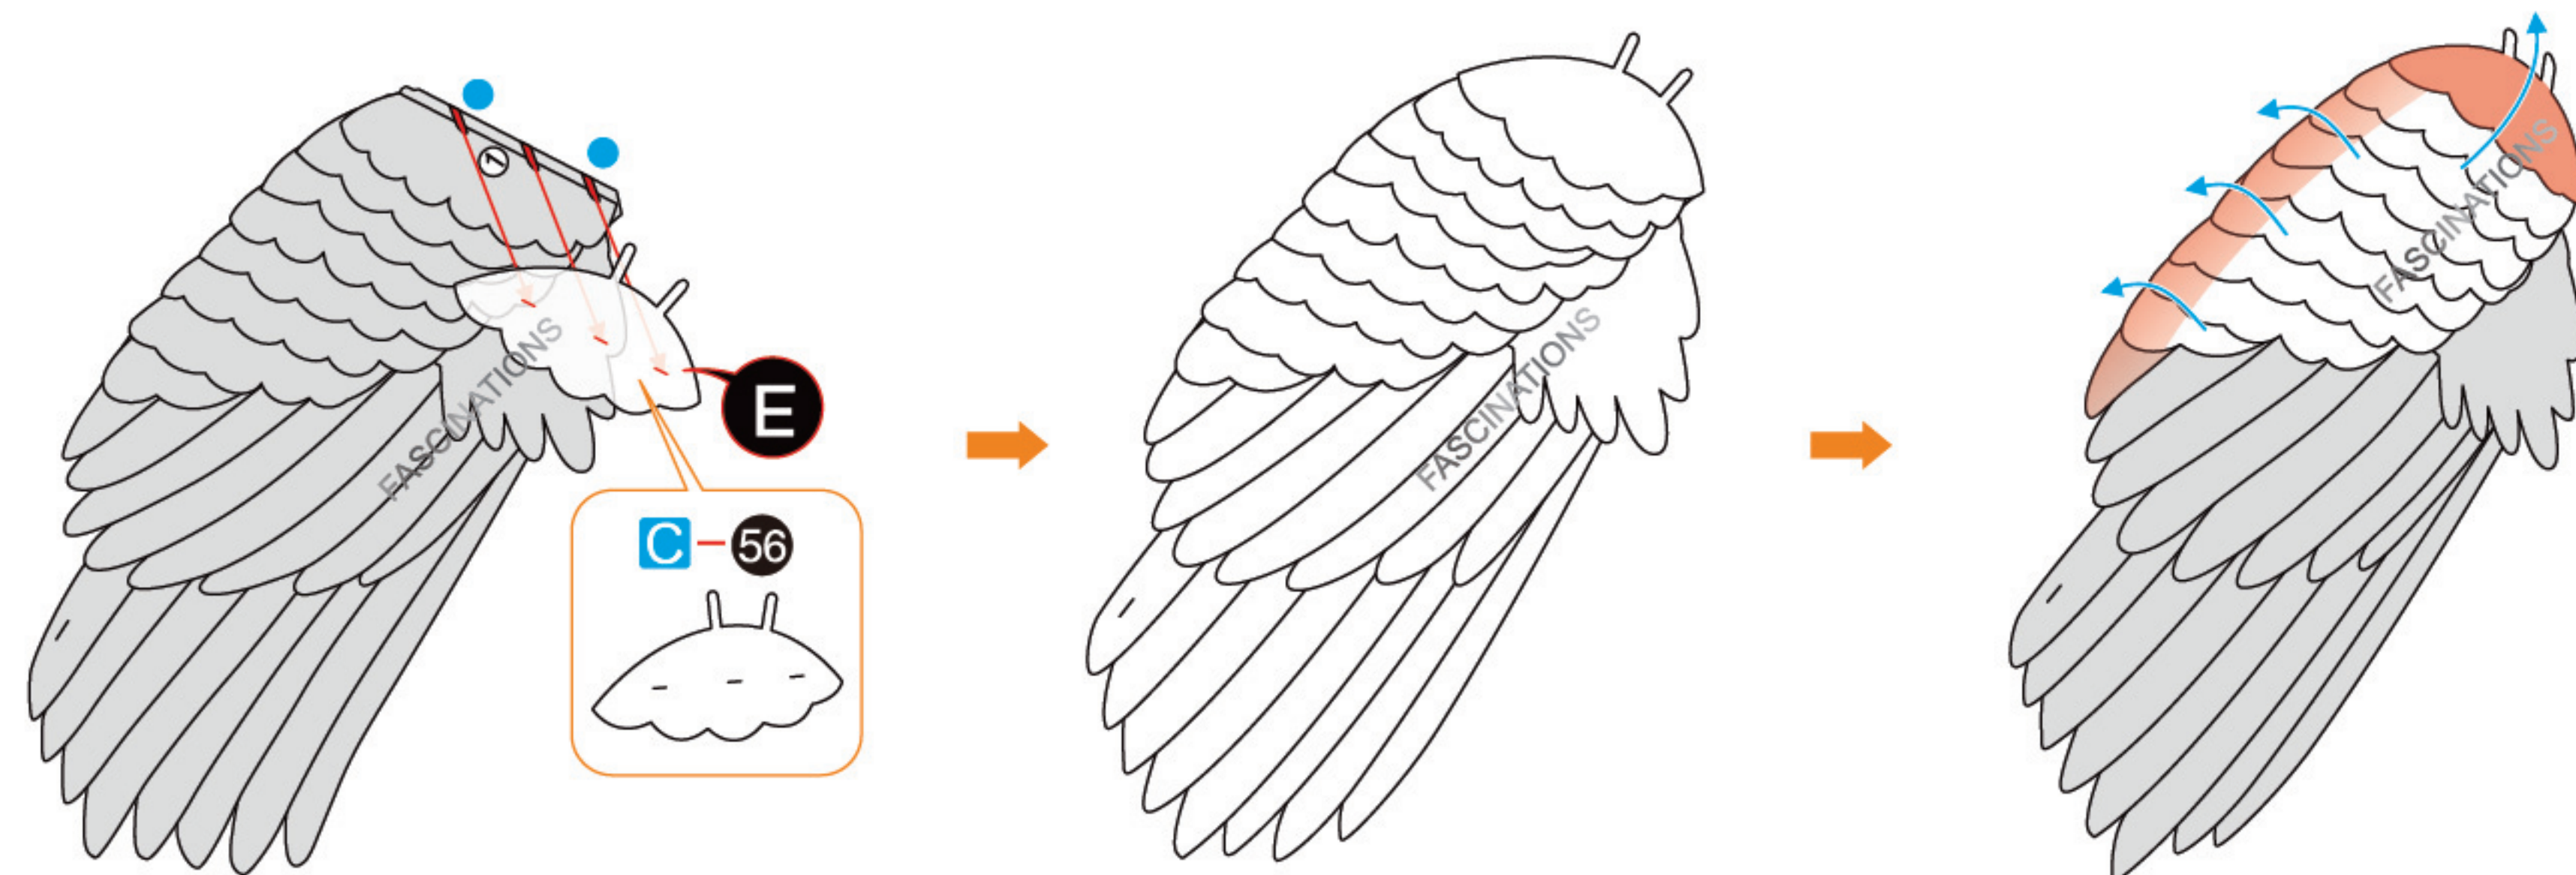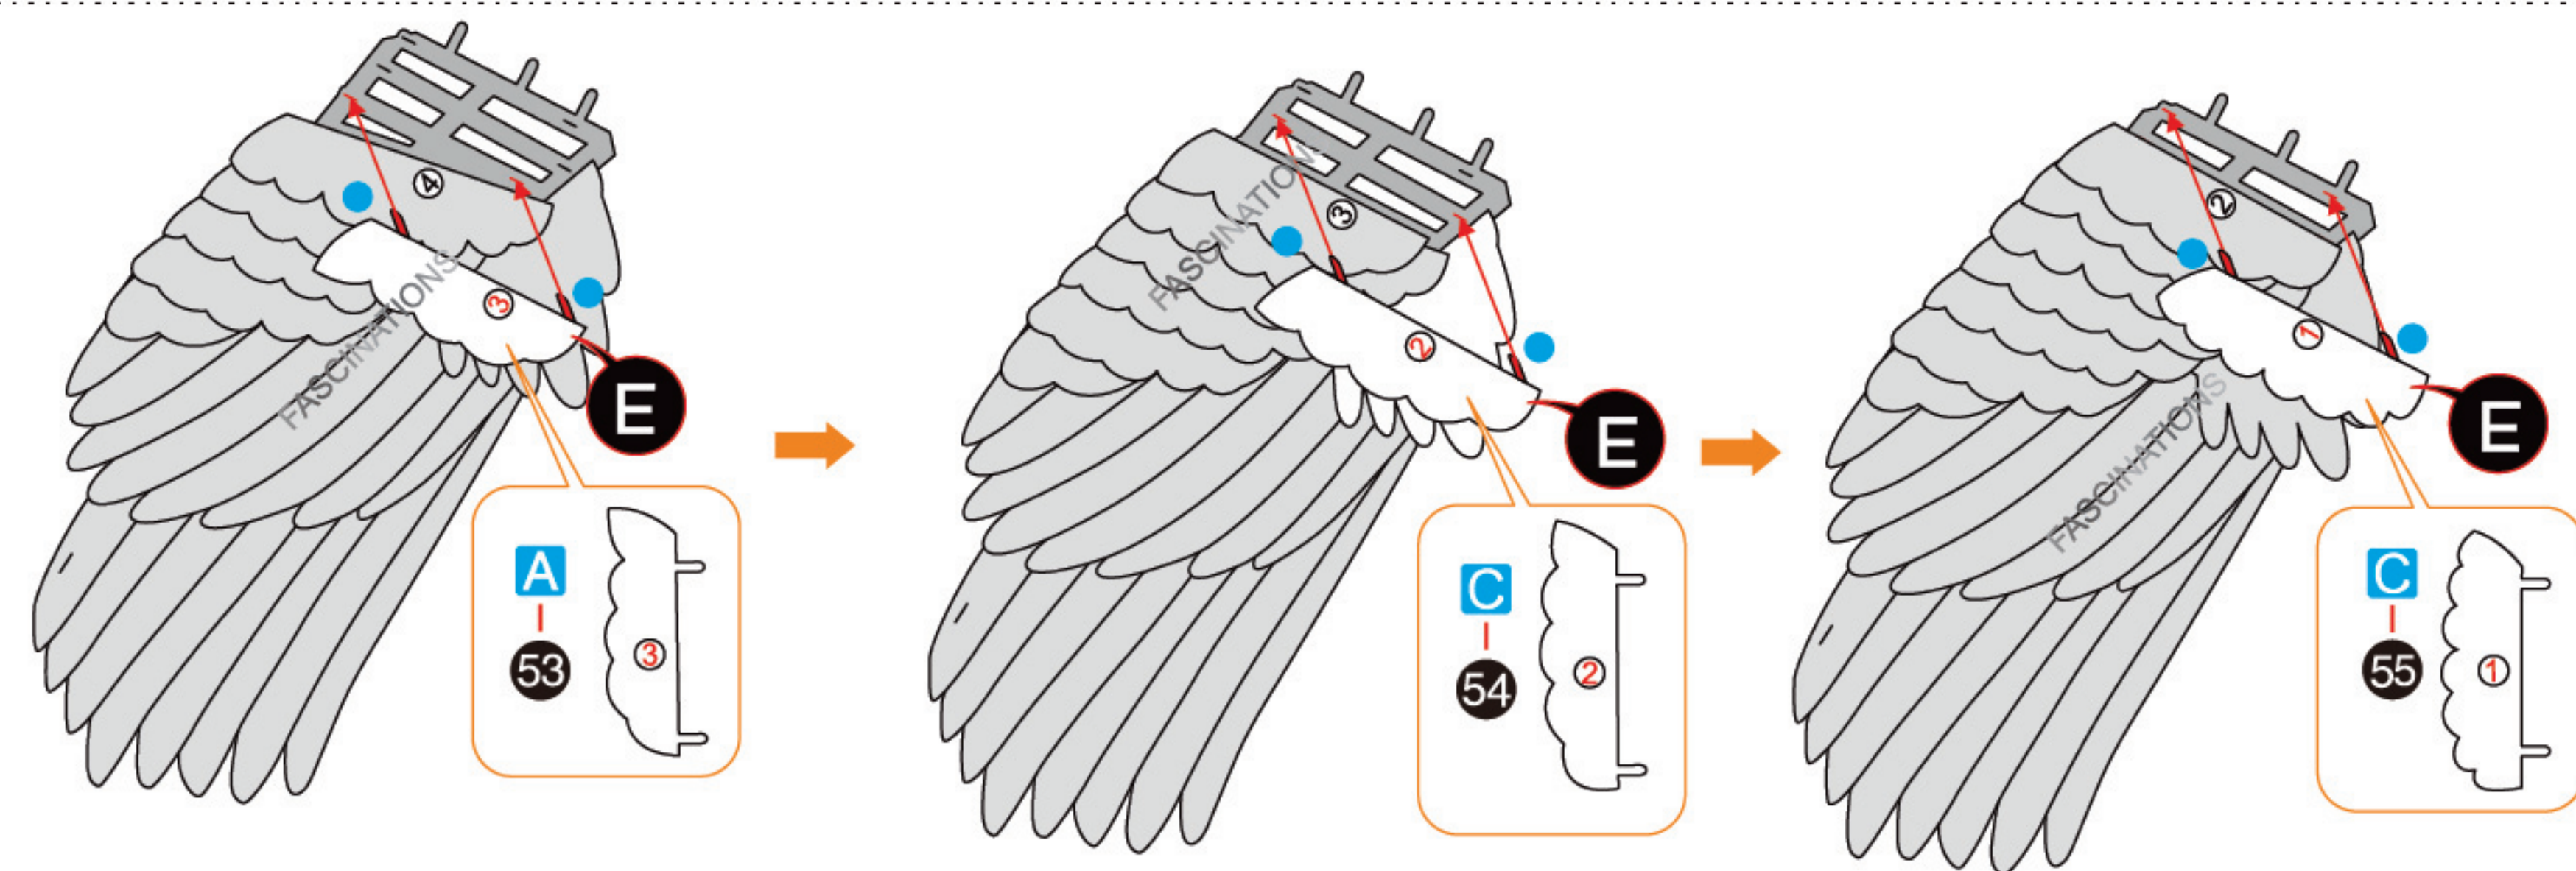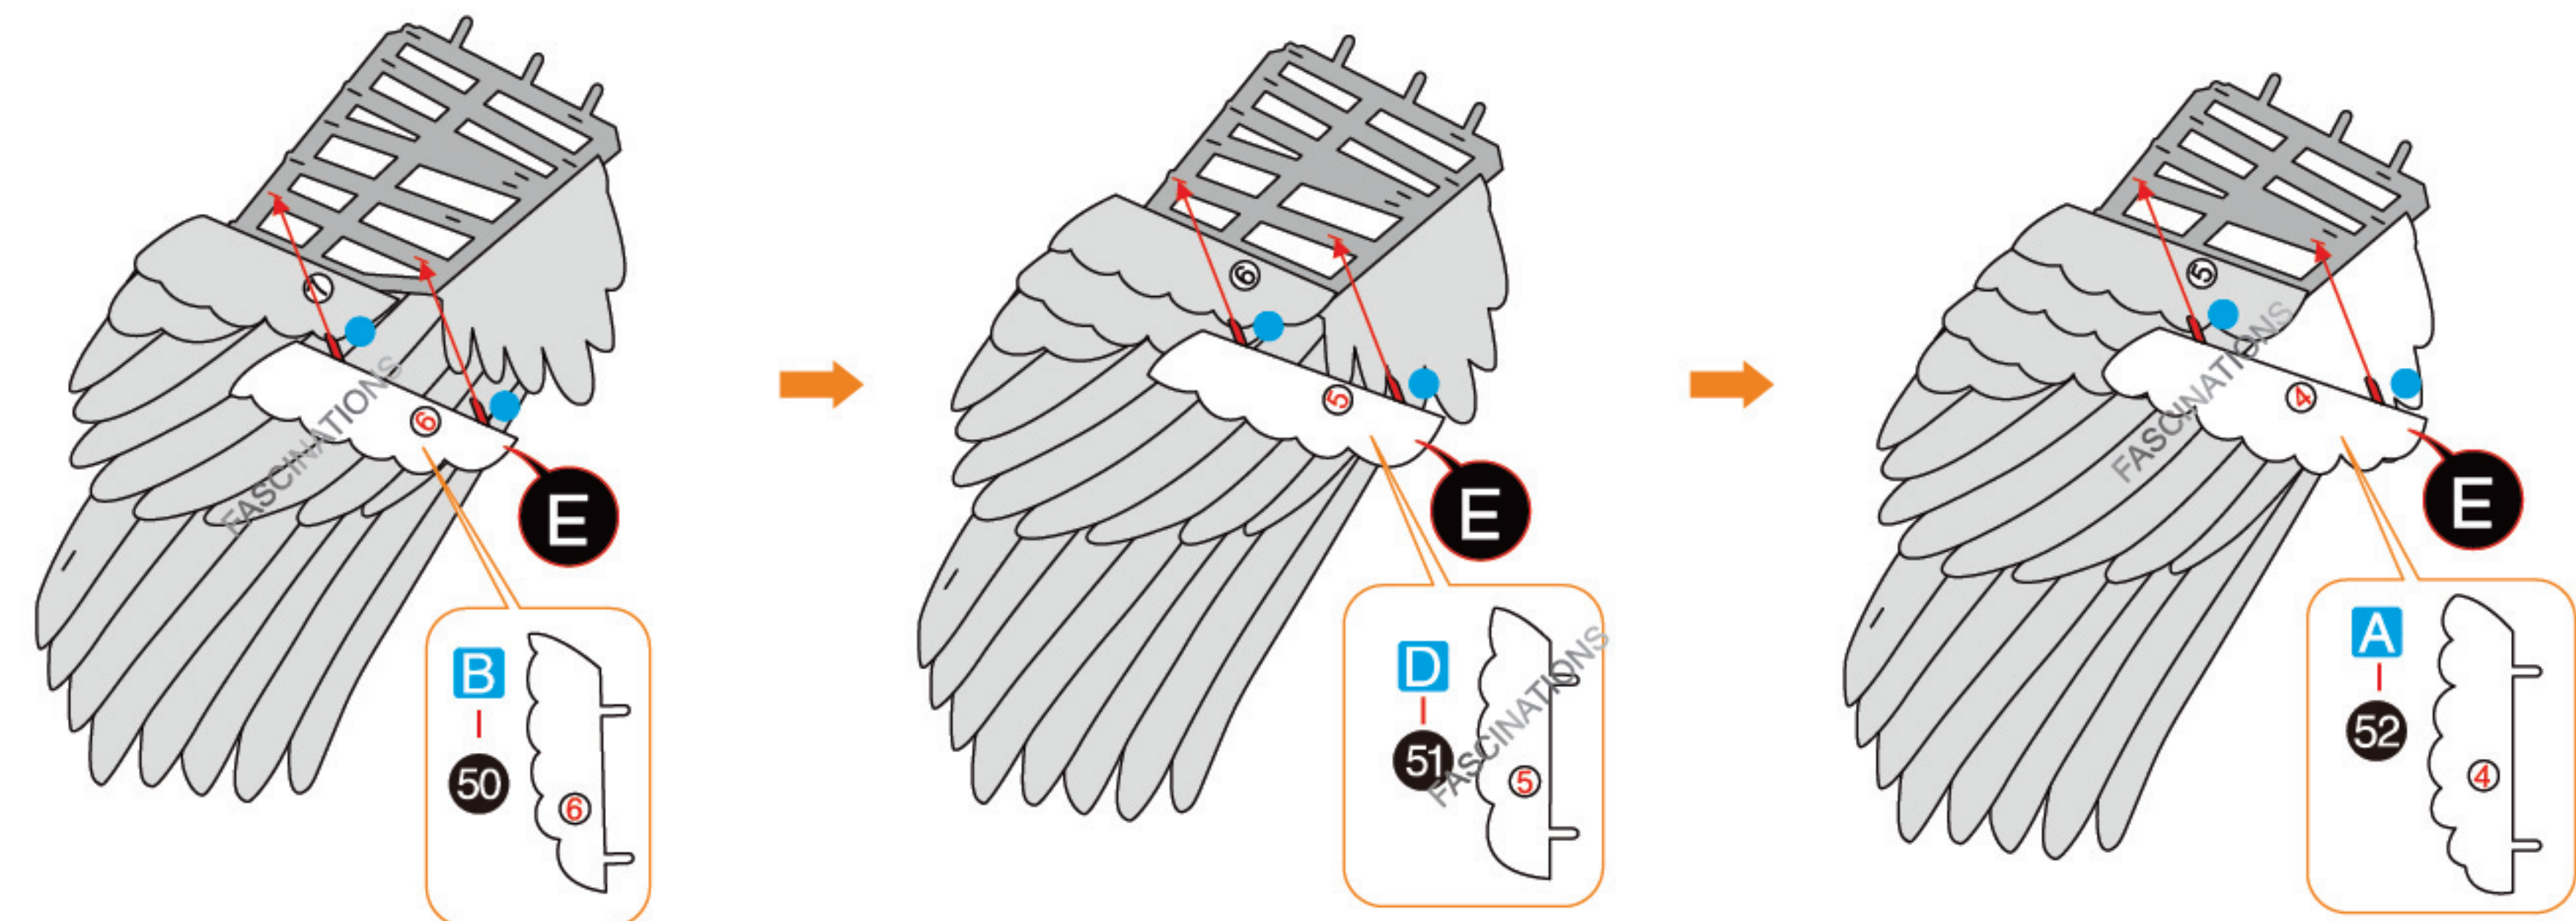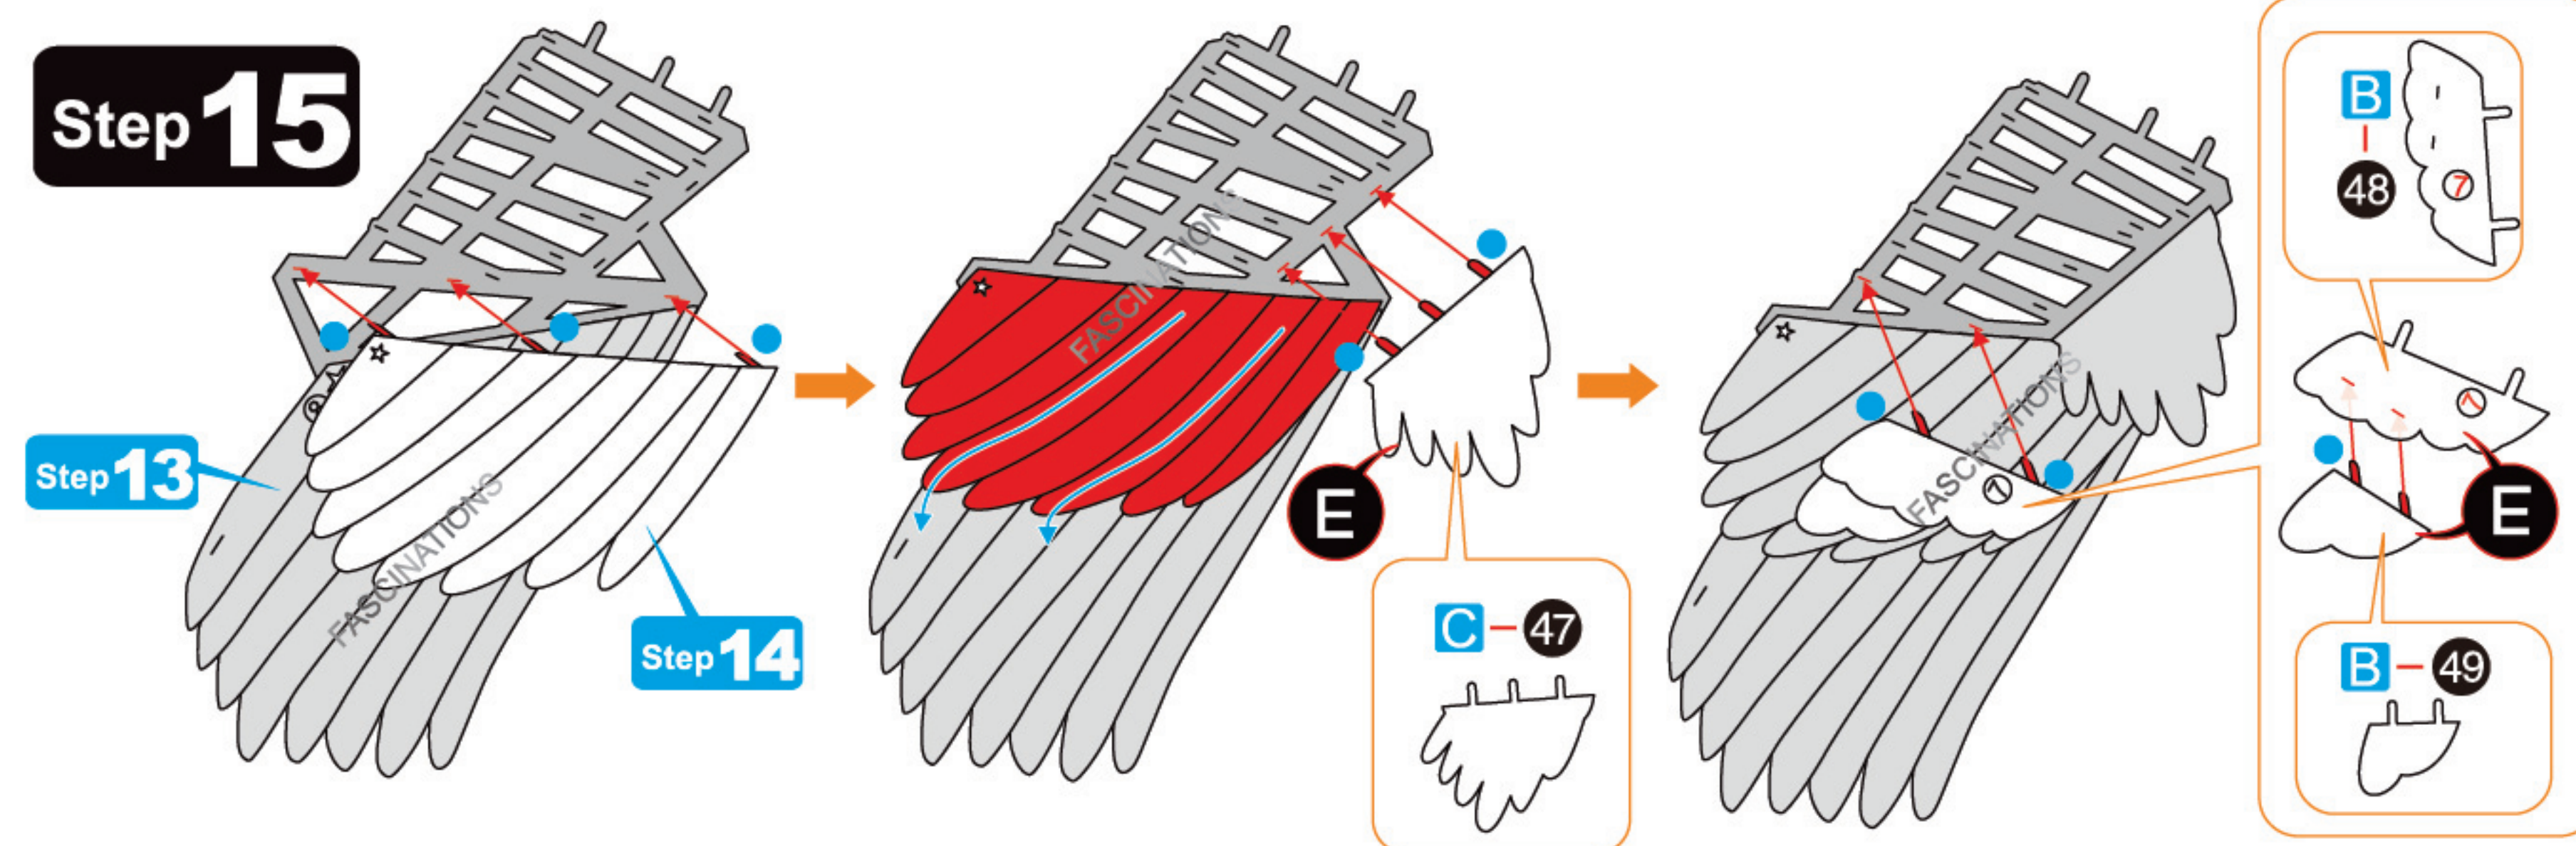


Step 18

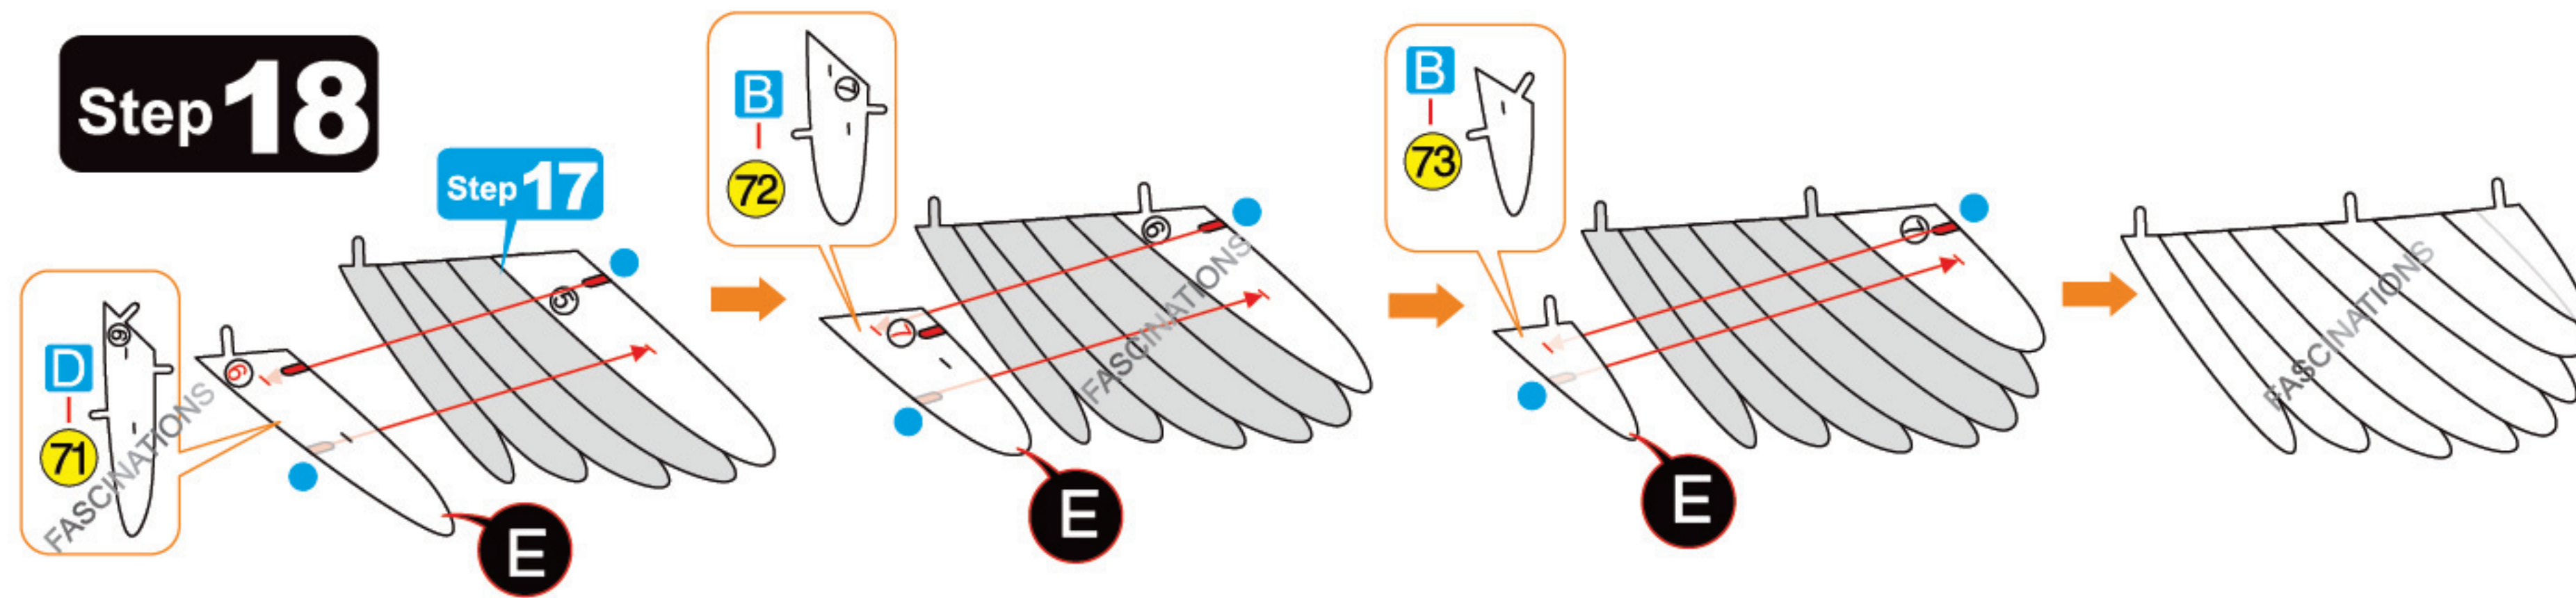


Step 19

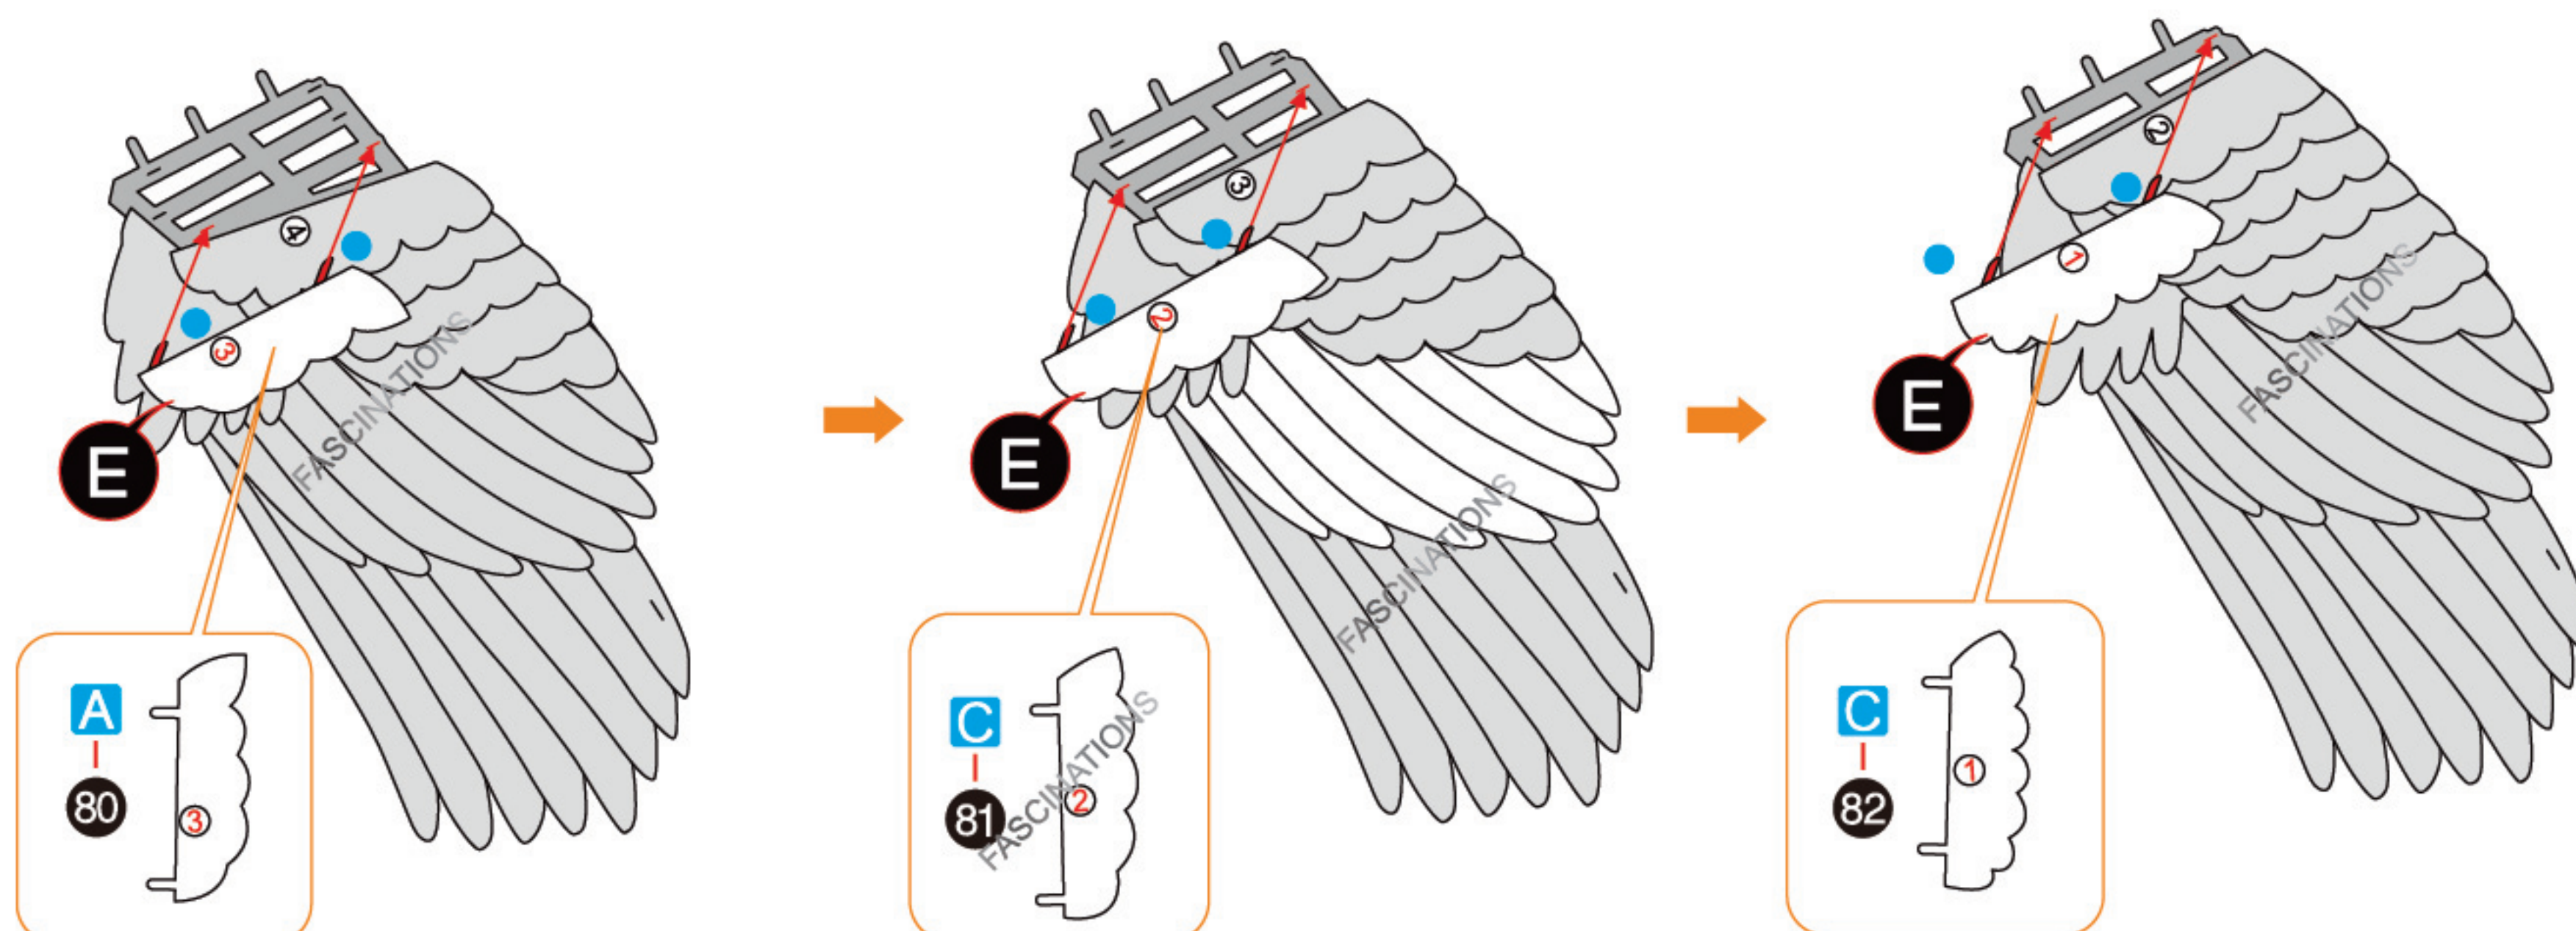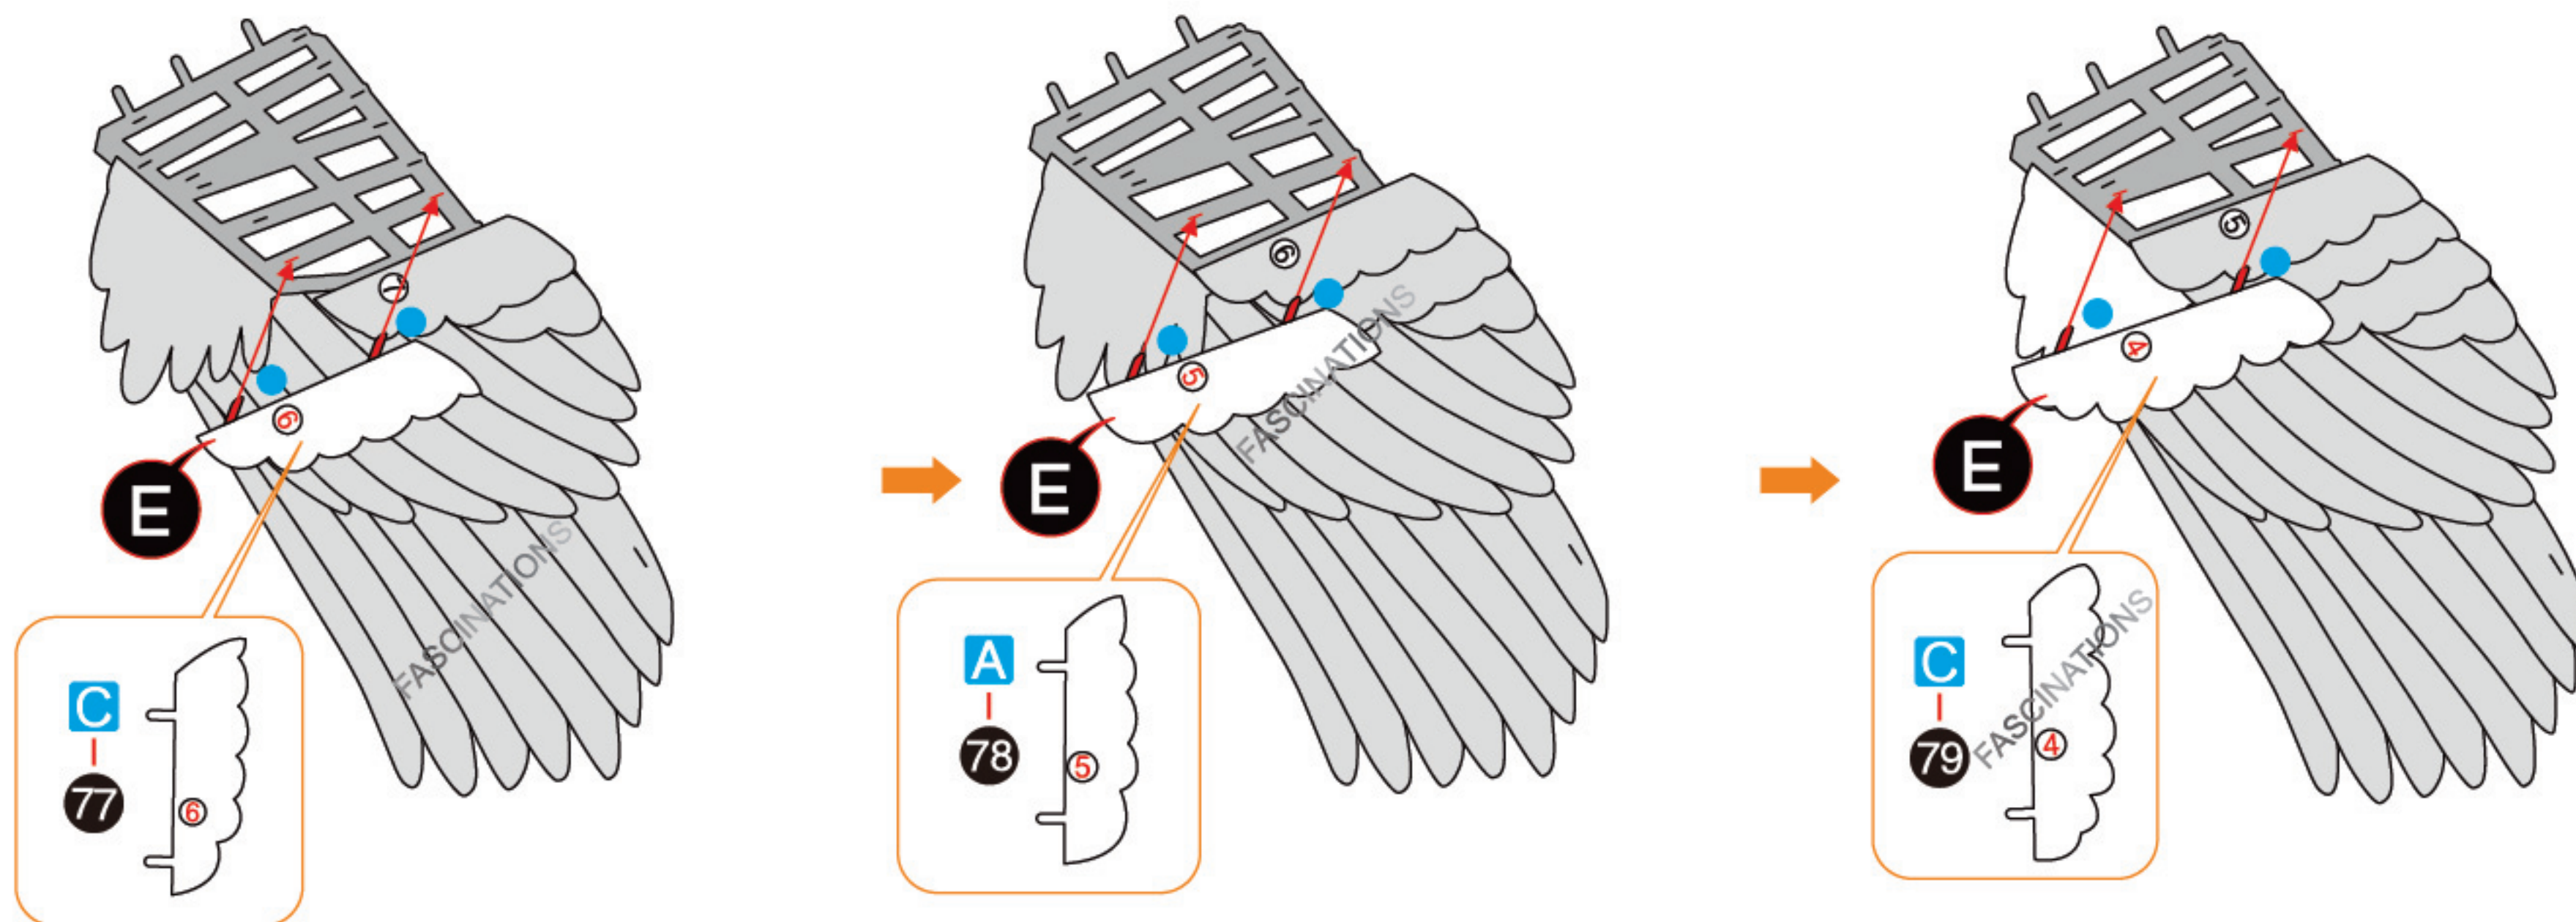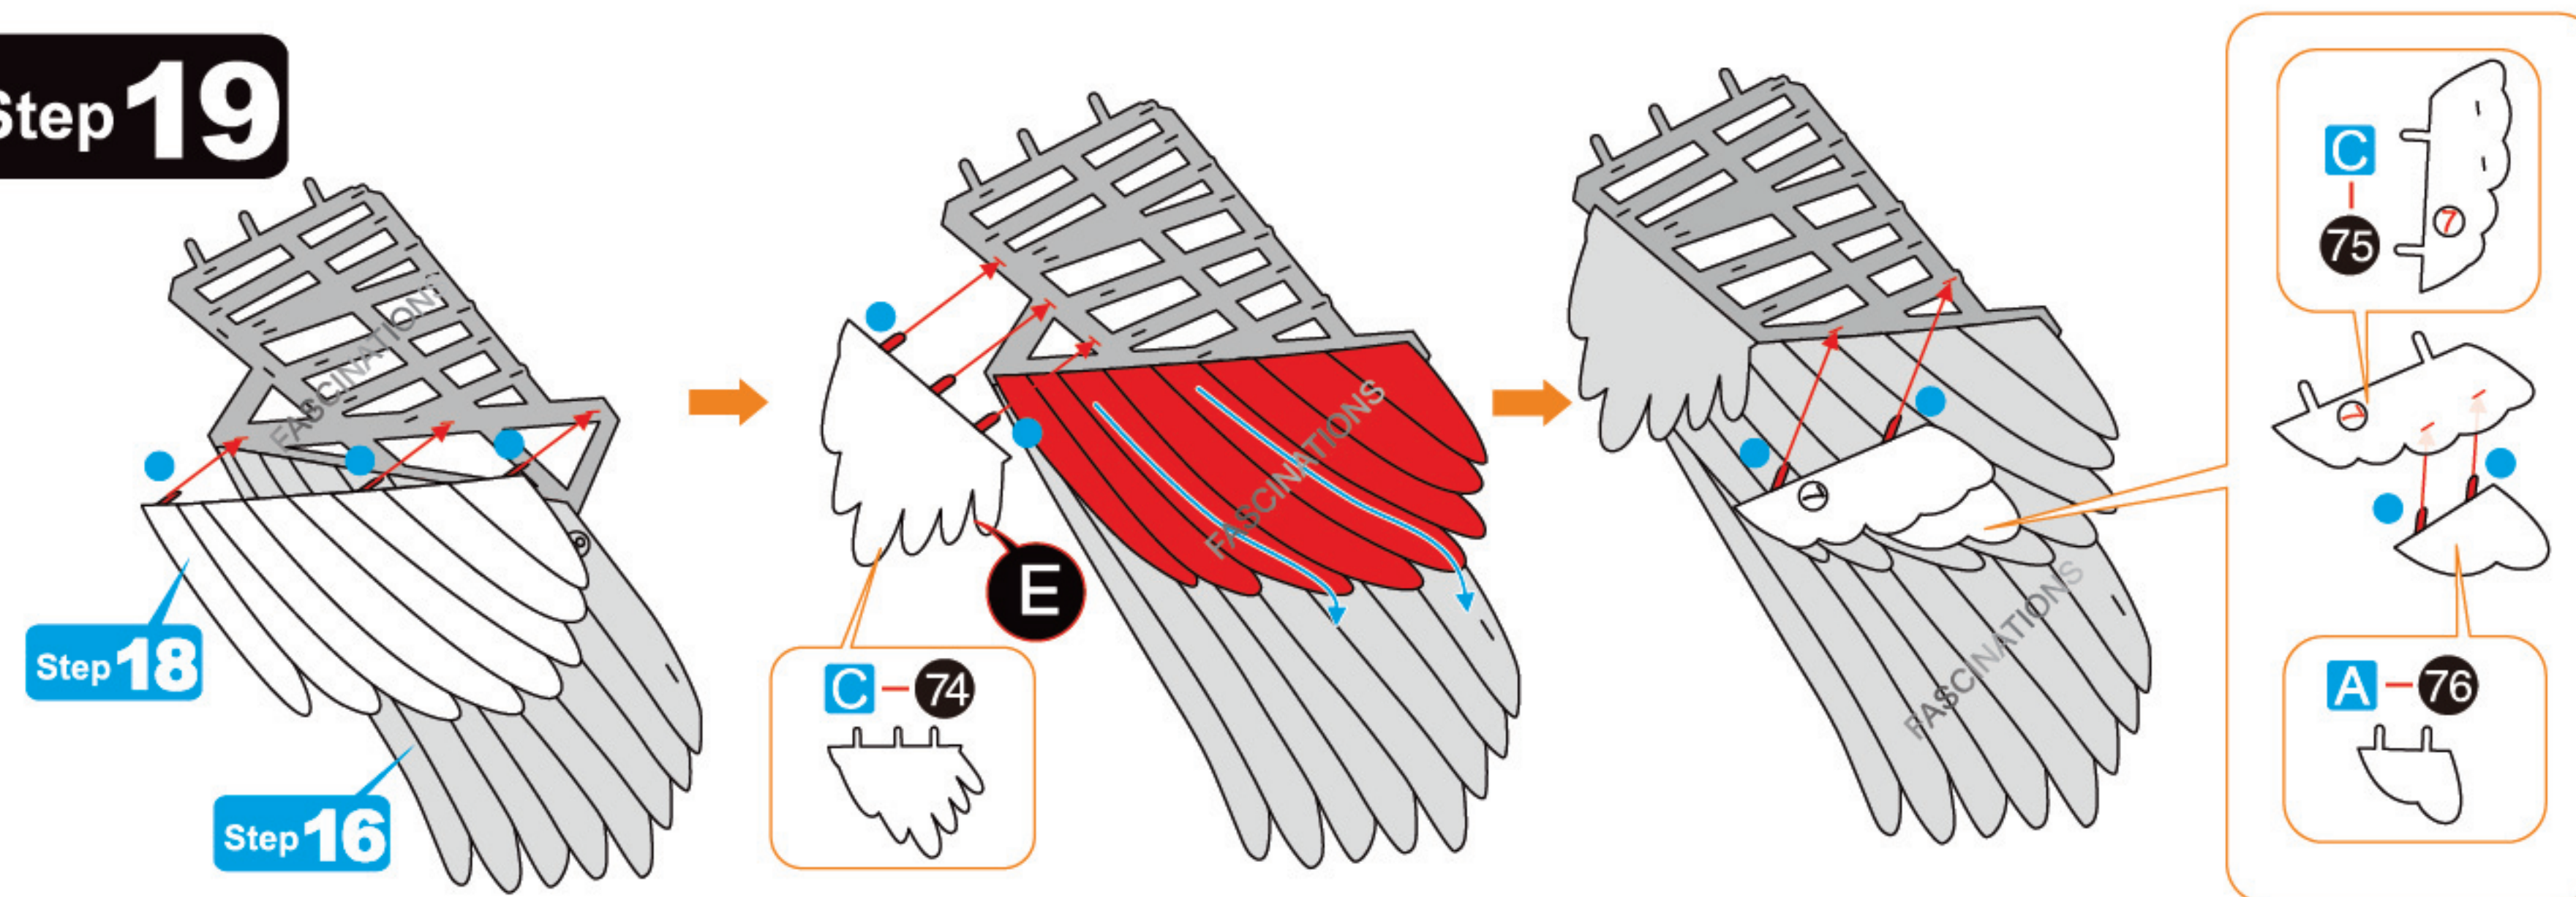


Step 20

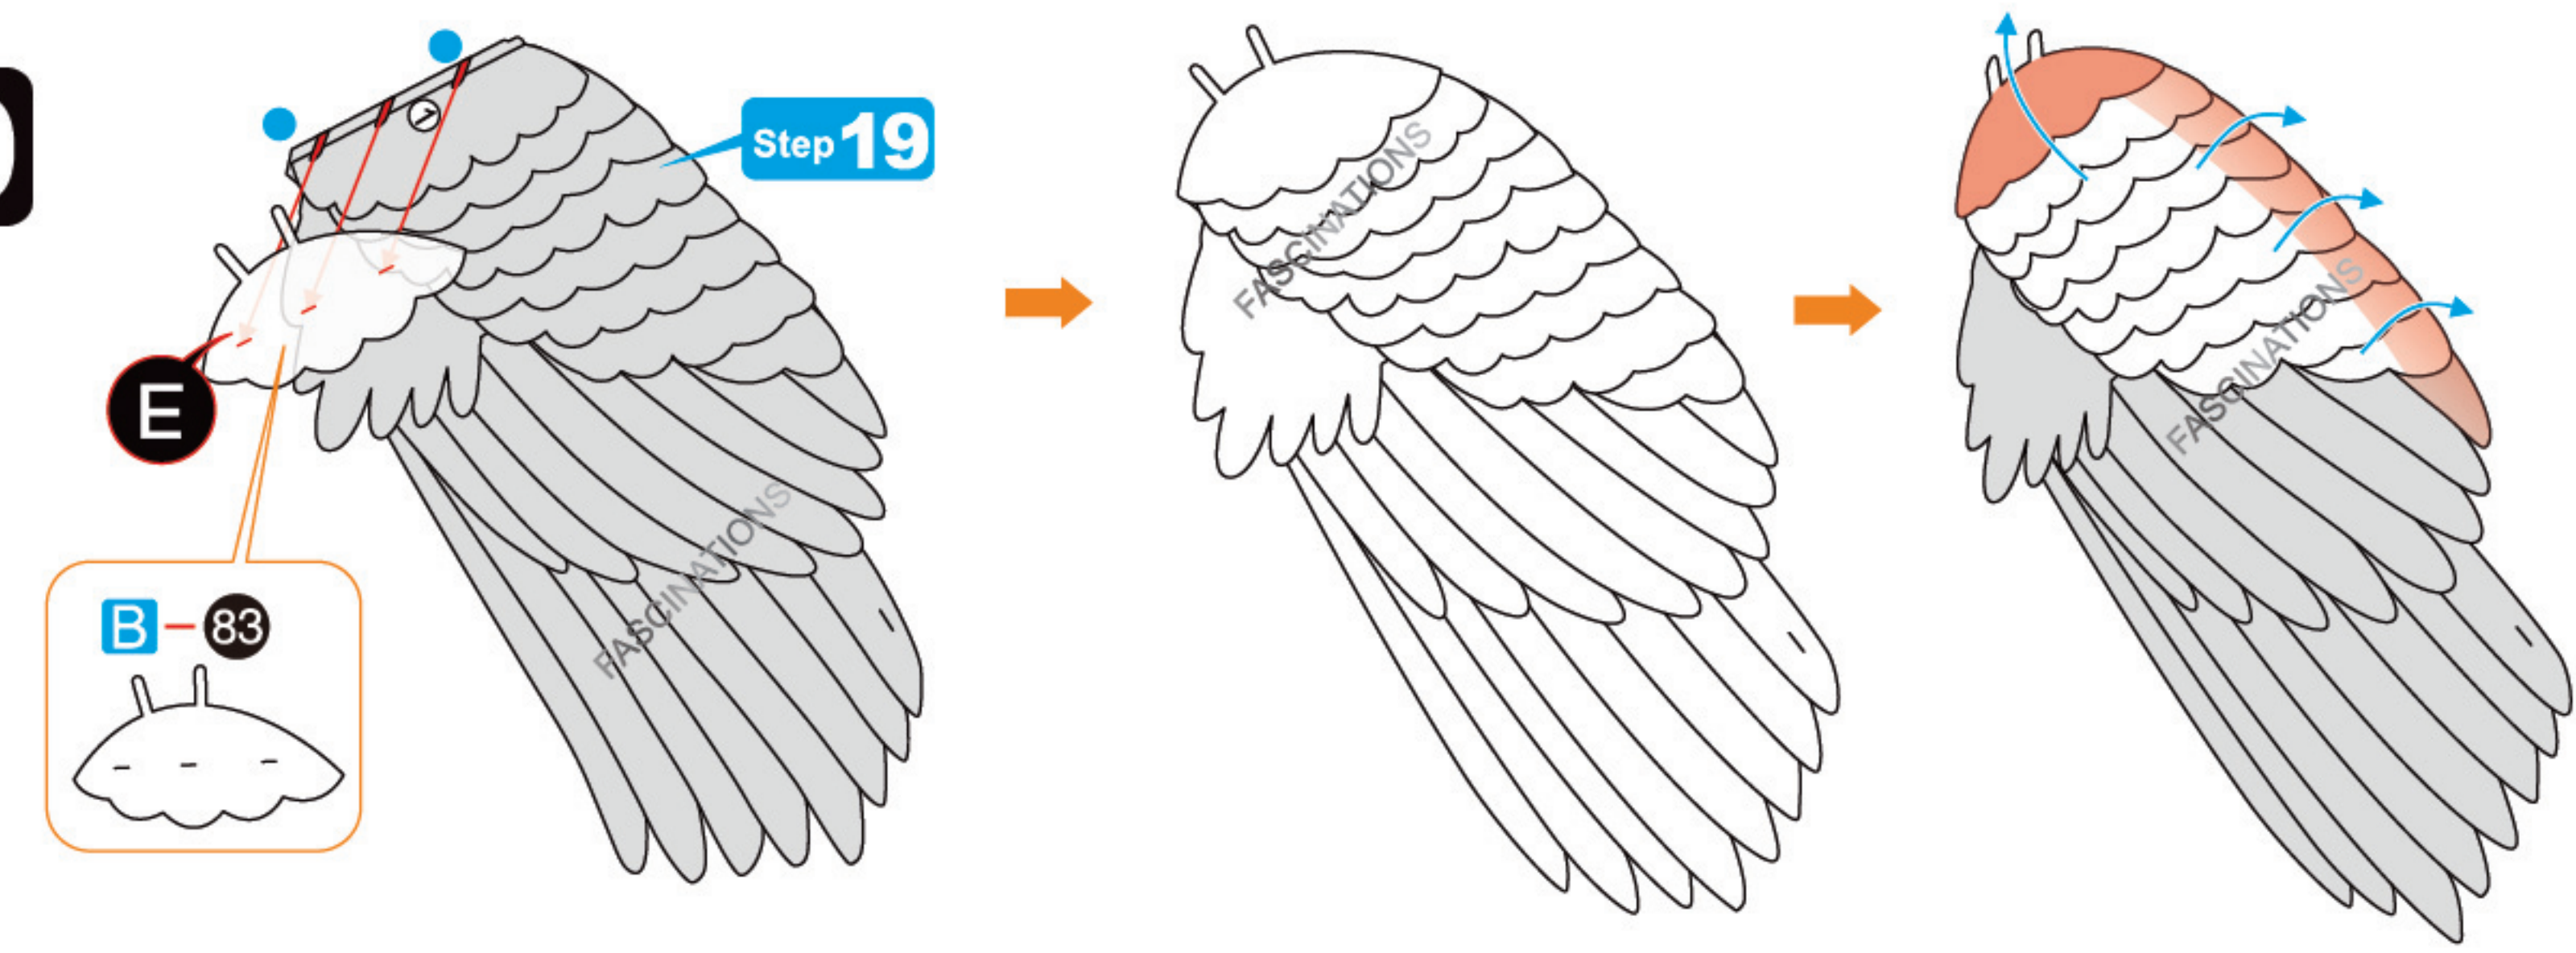


Step 21

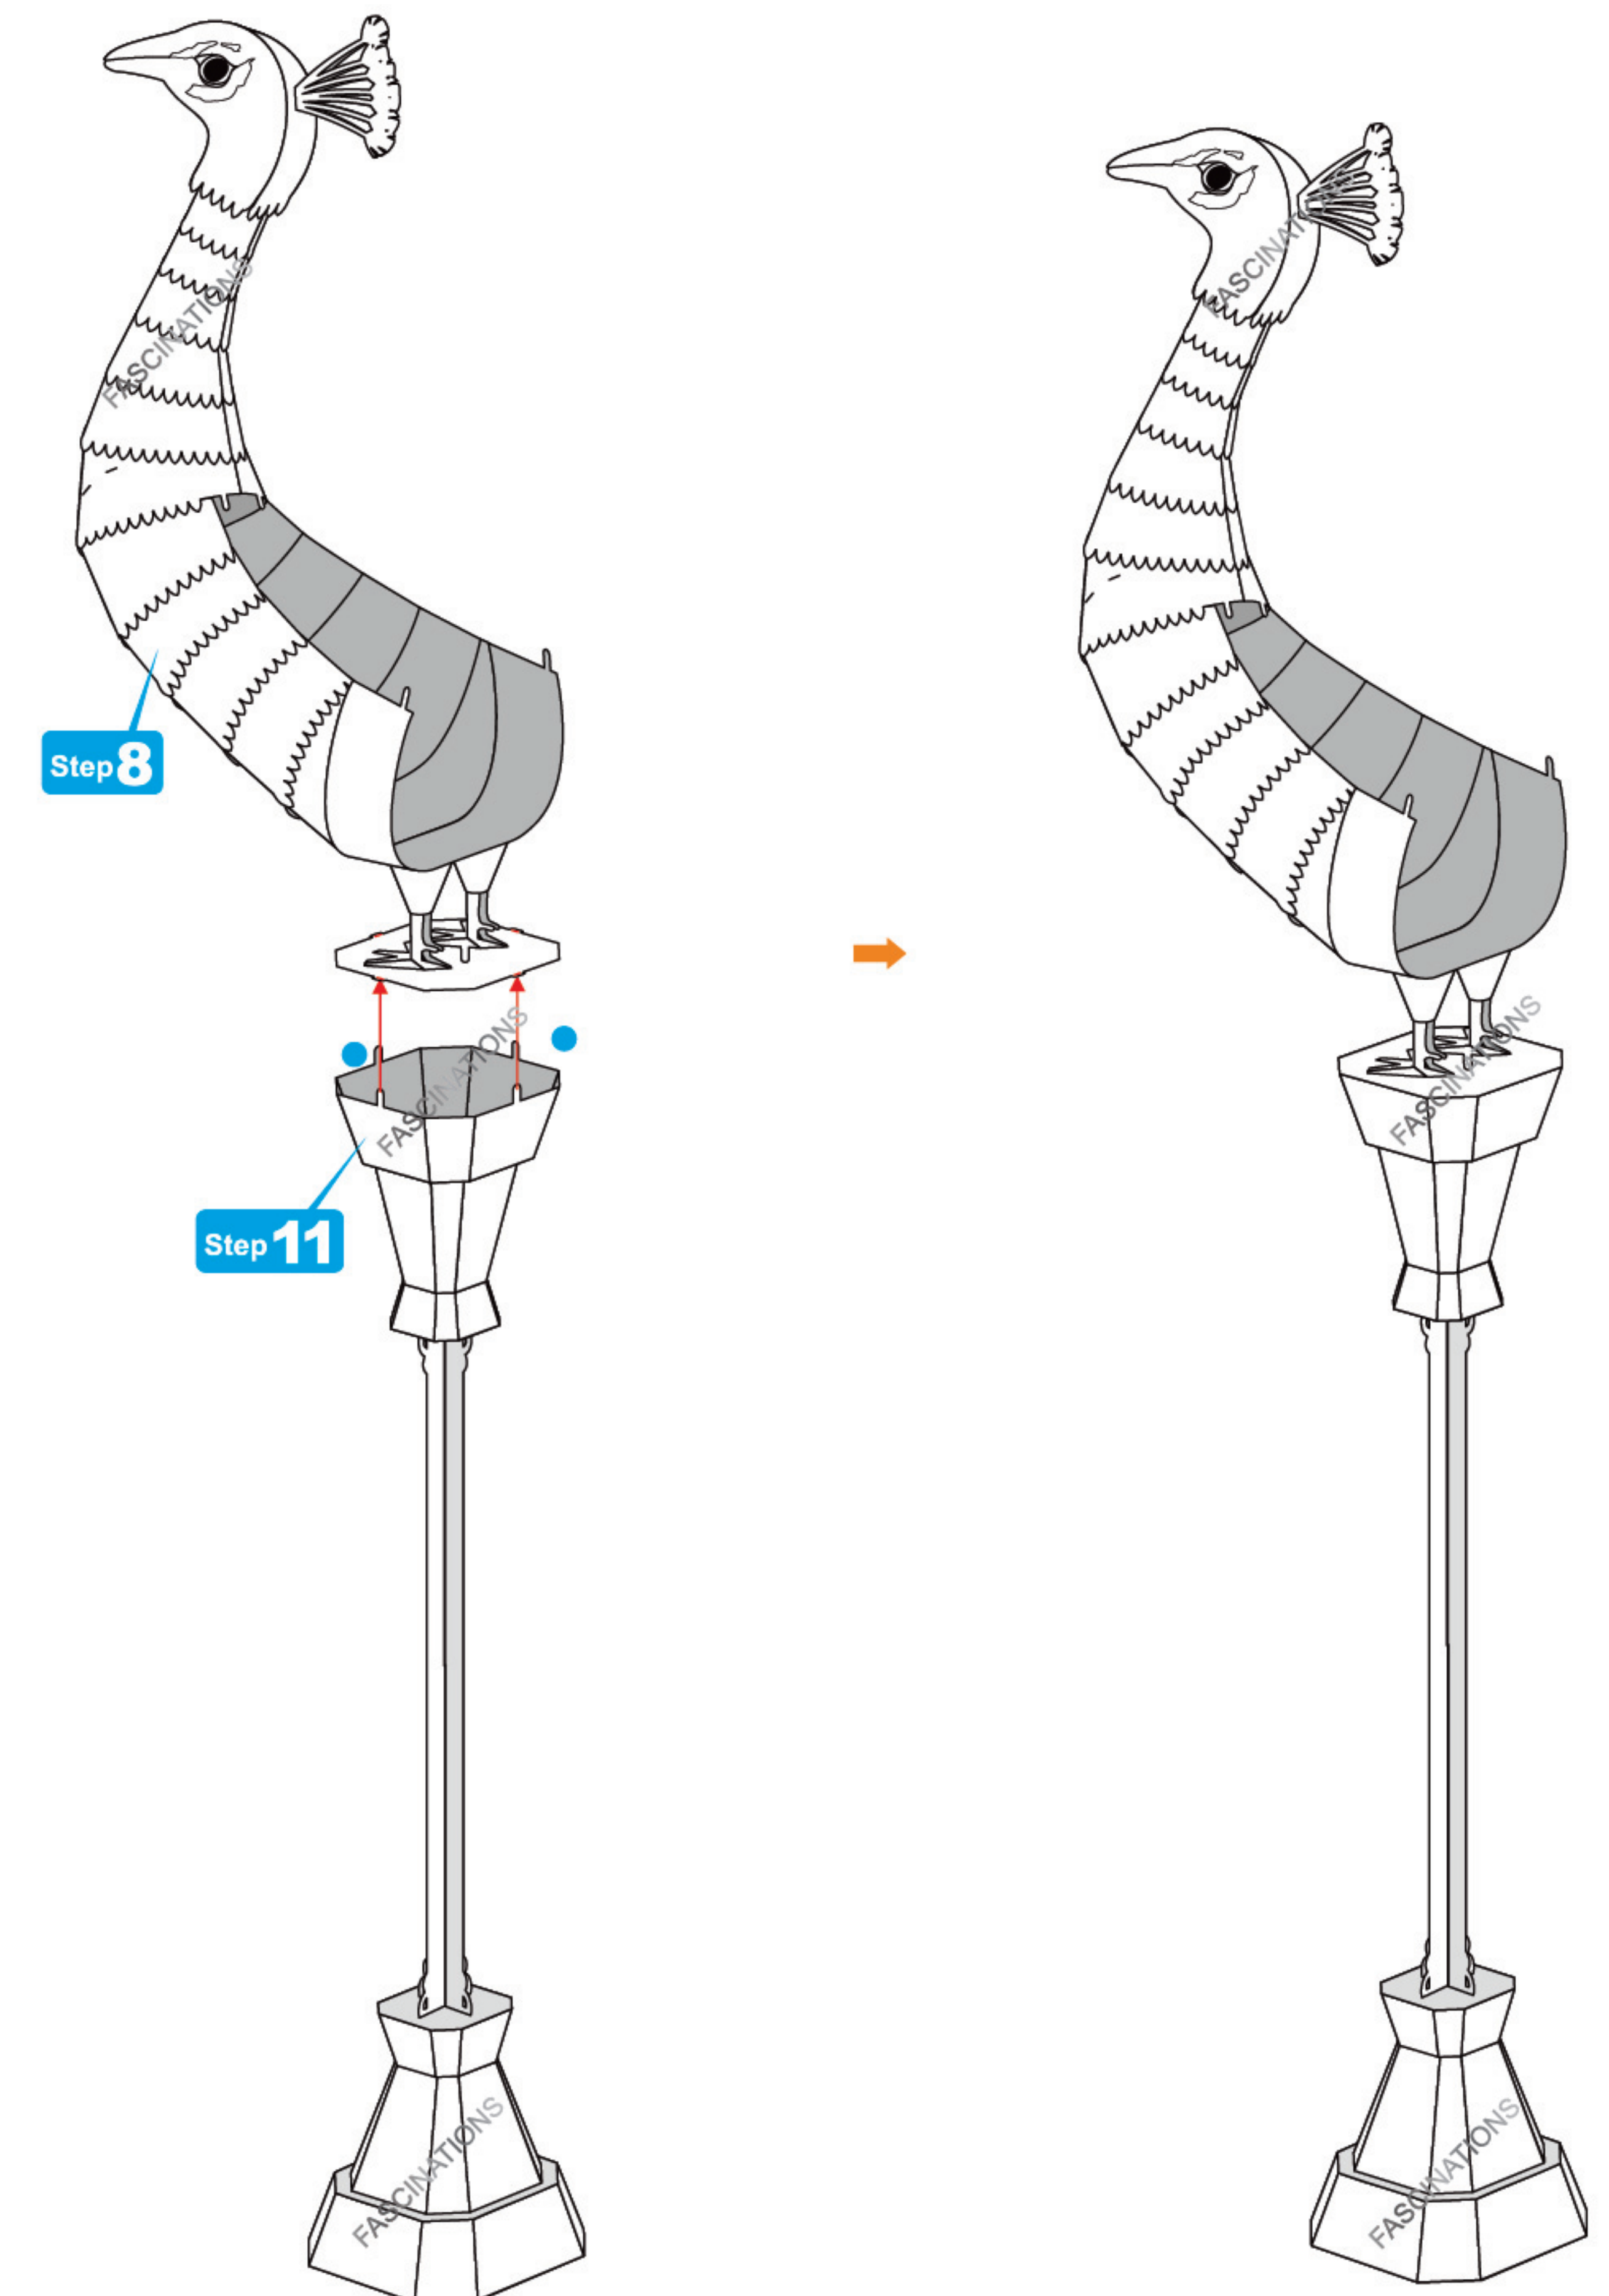




Step22

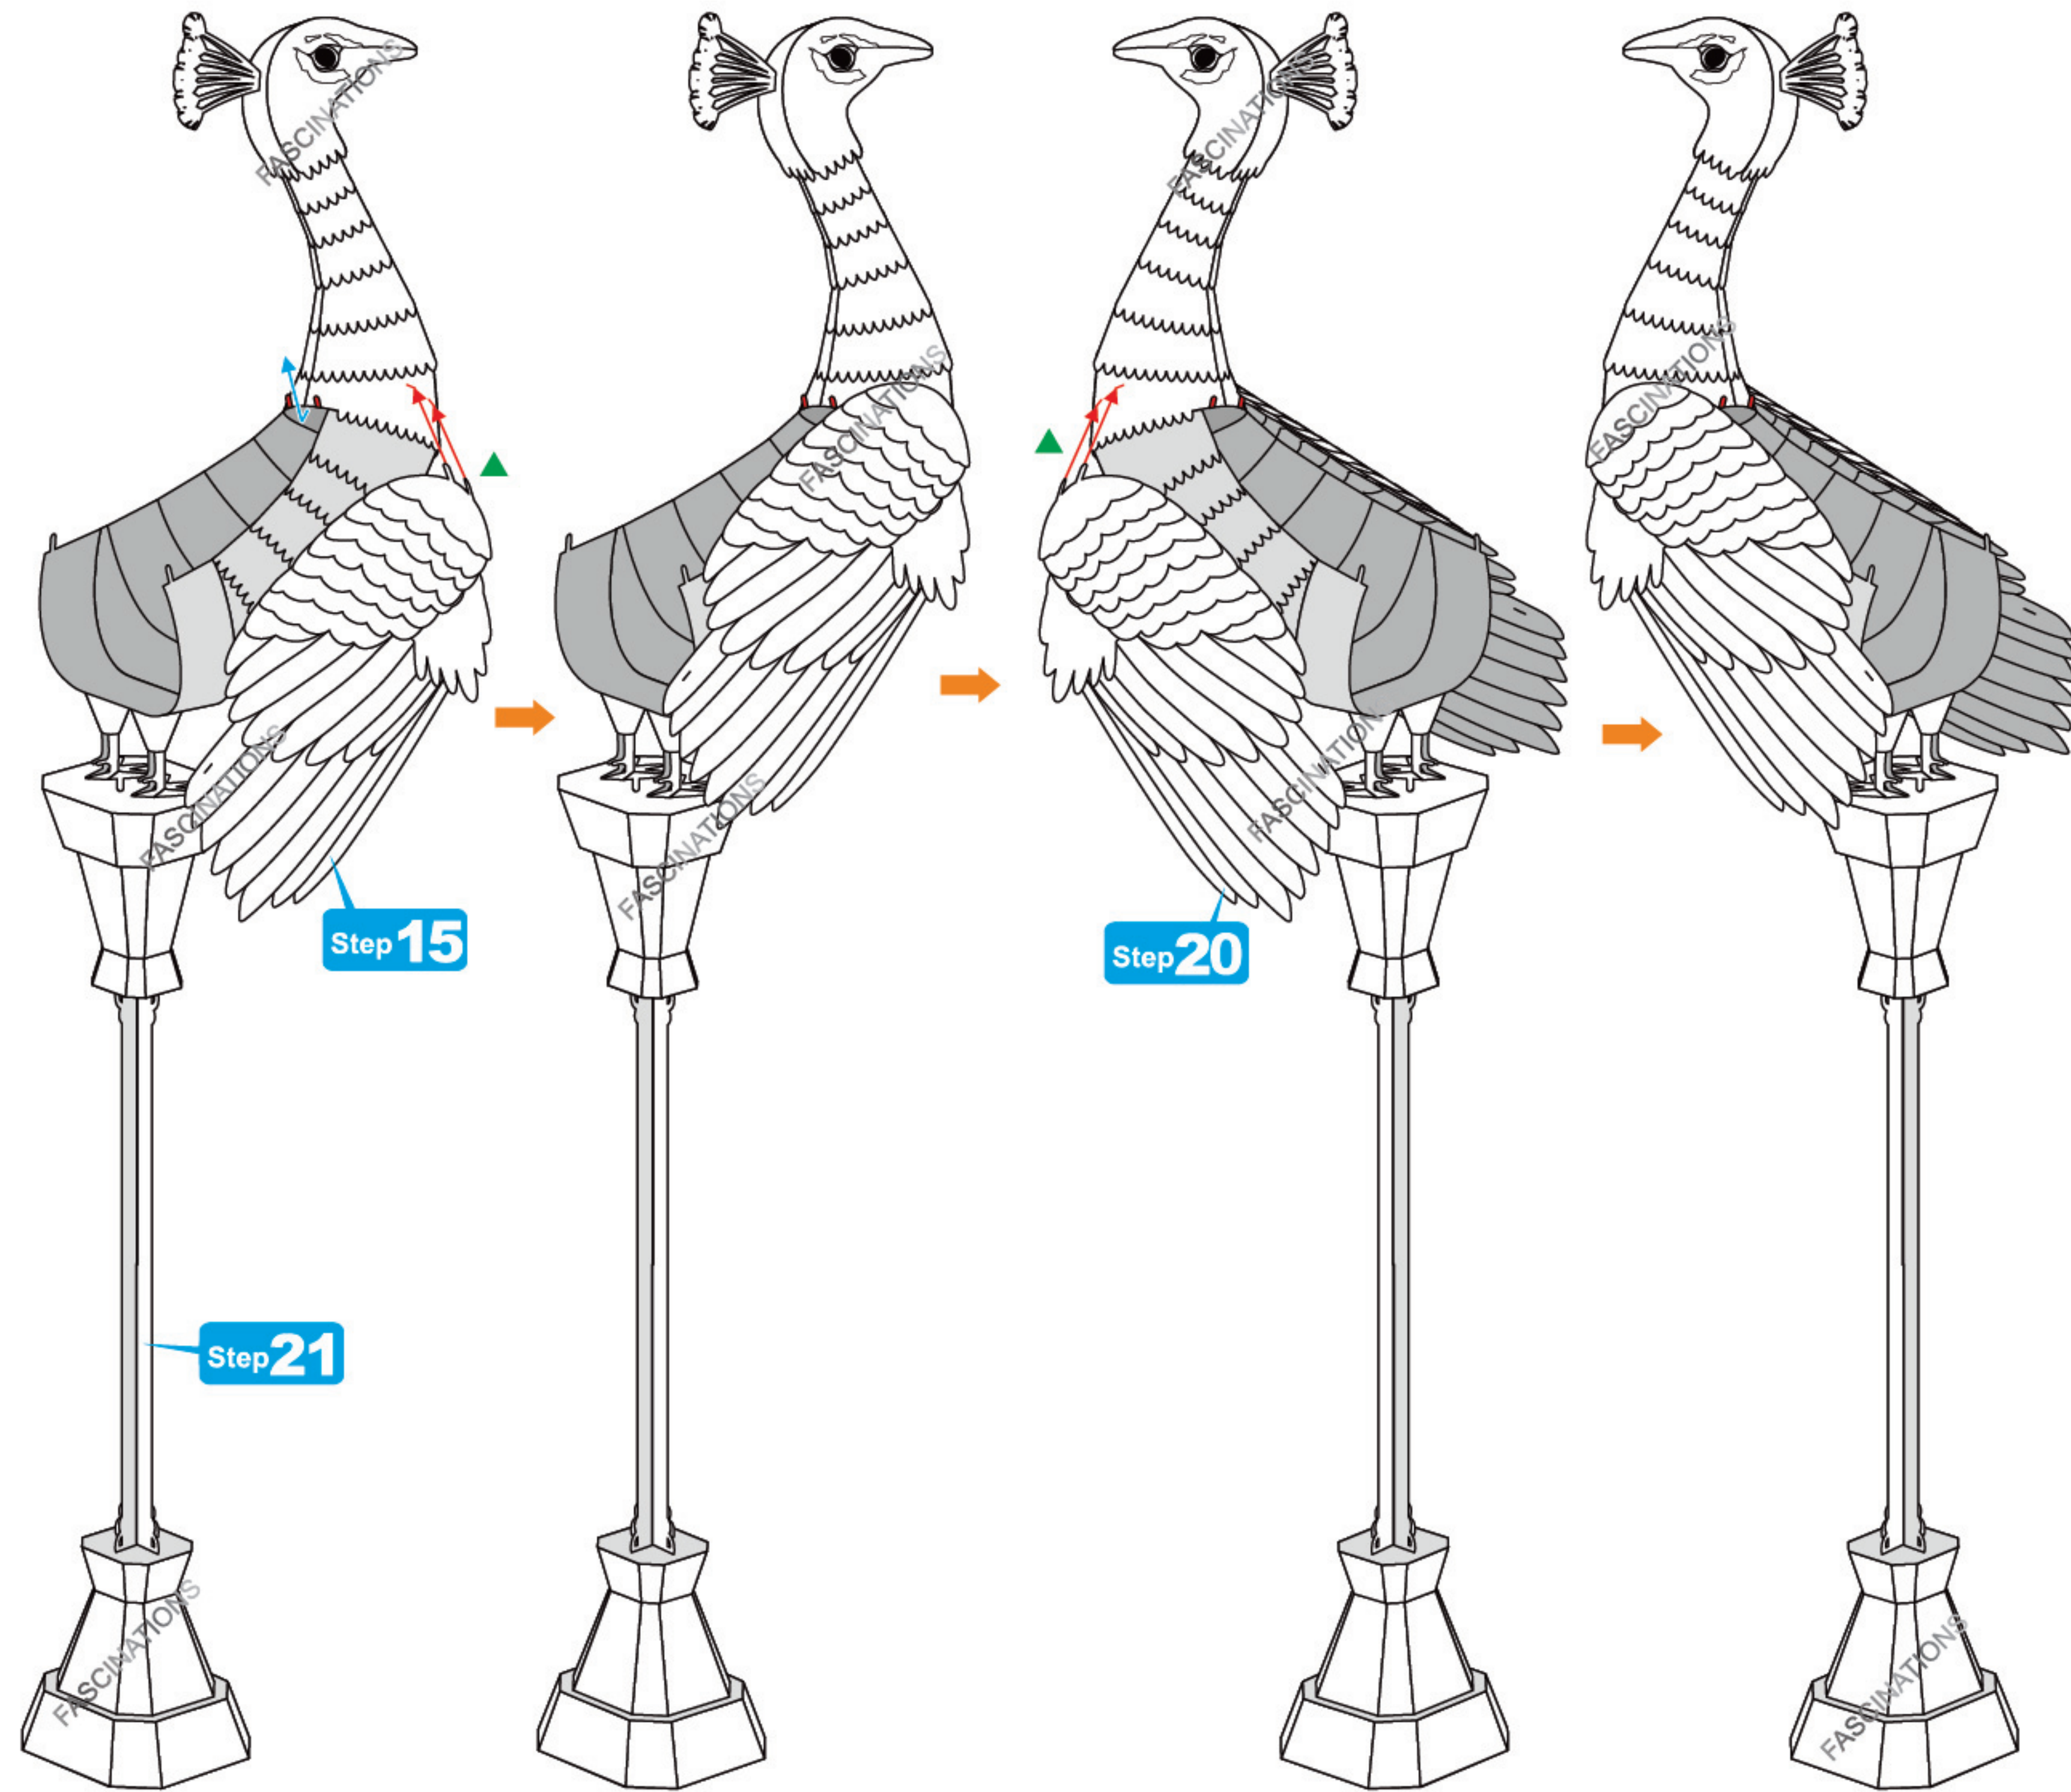


Step23

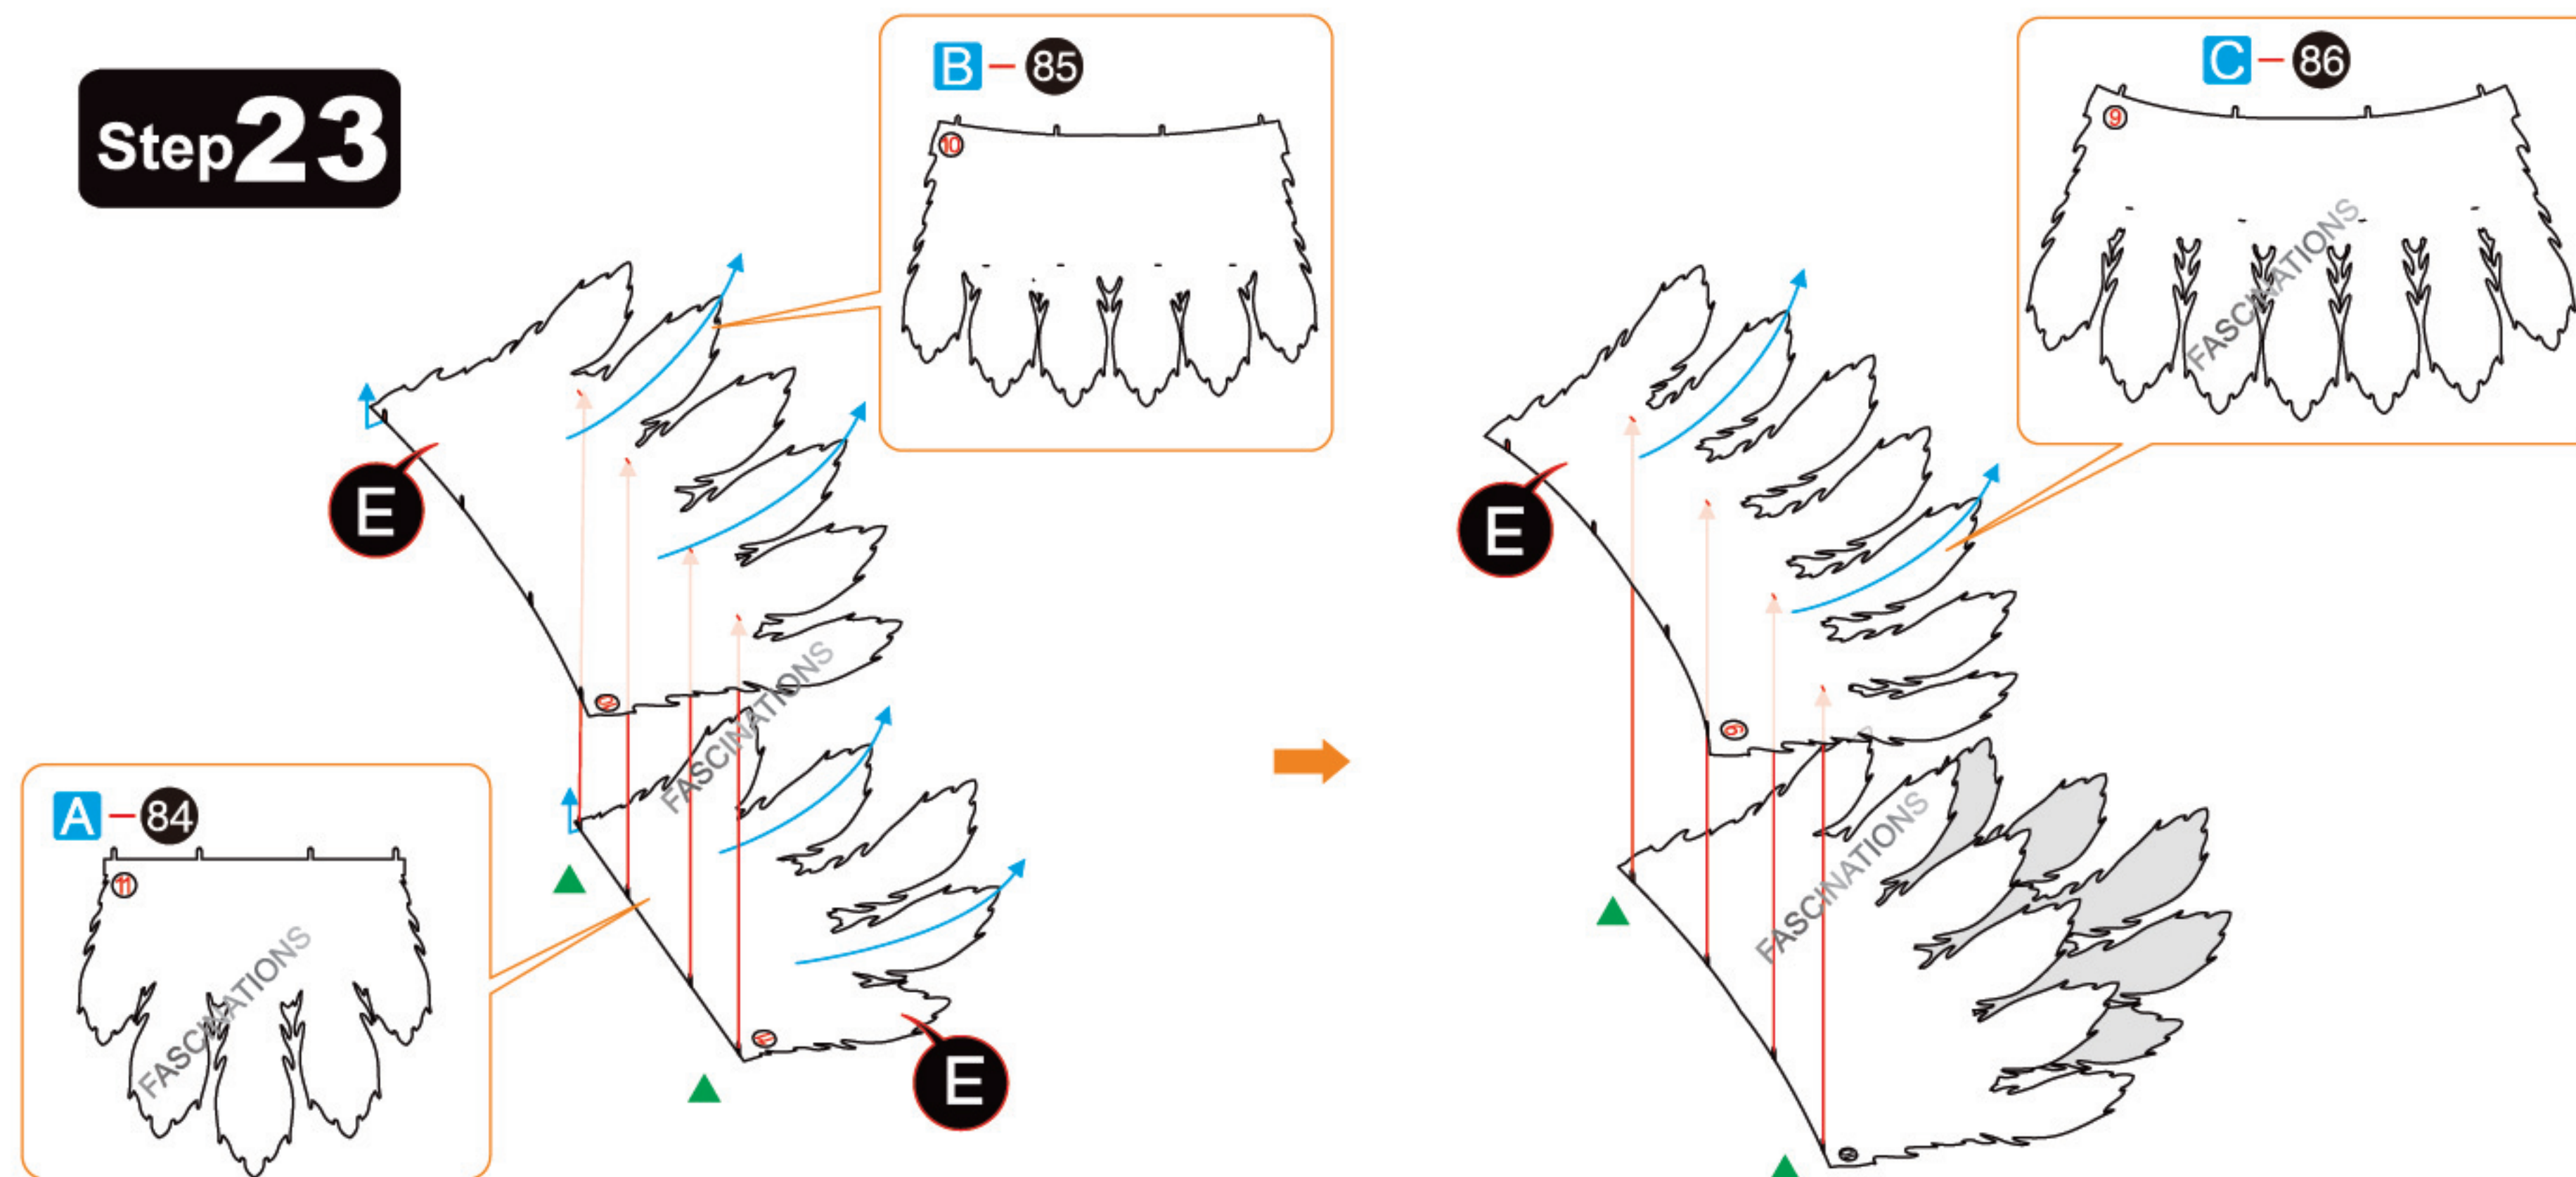

Step24

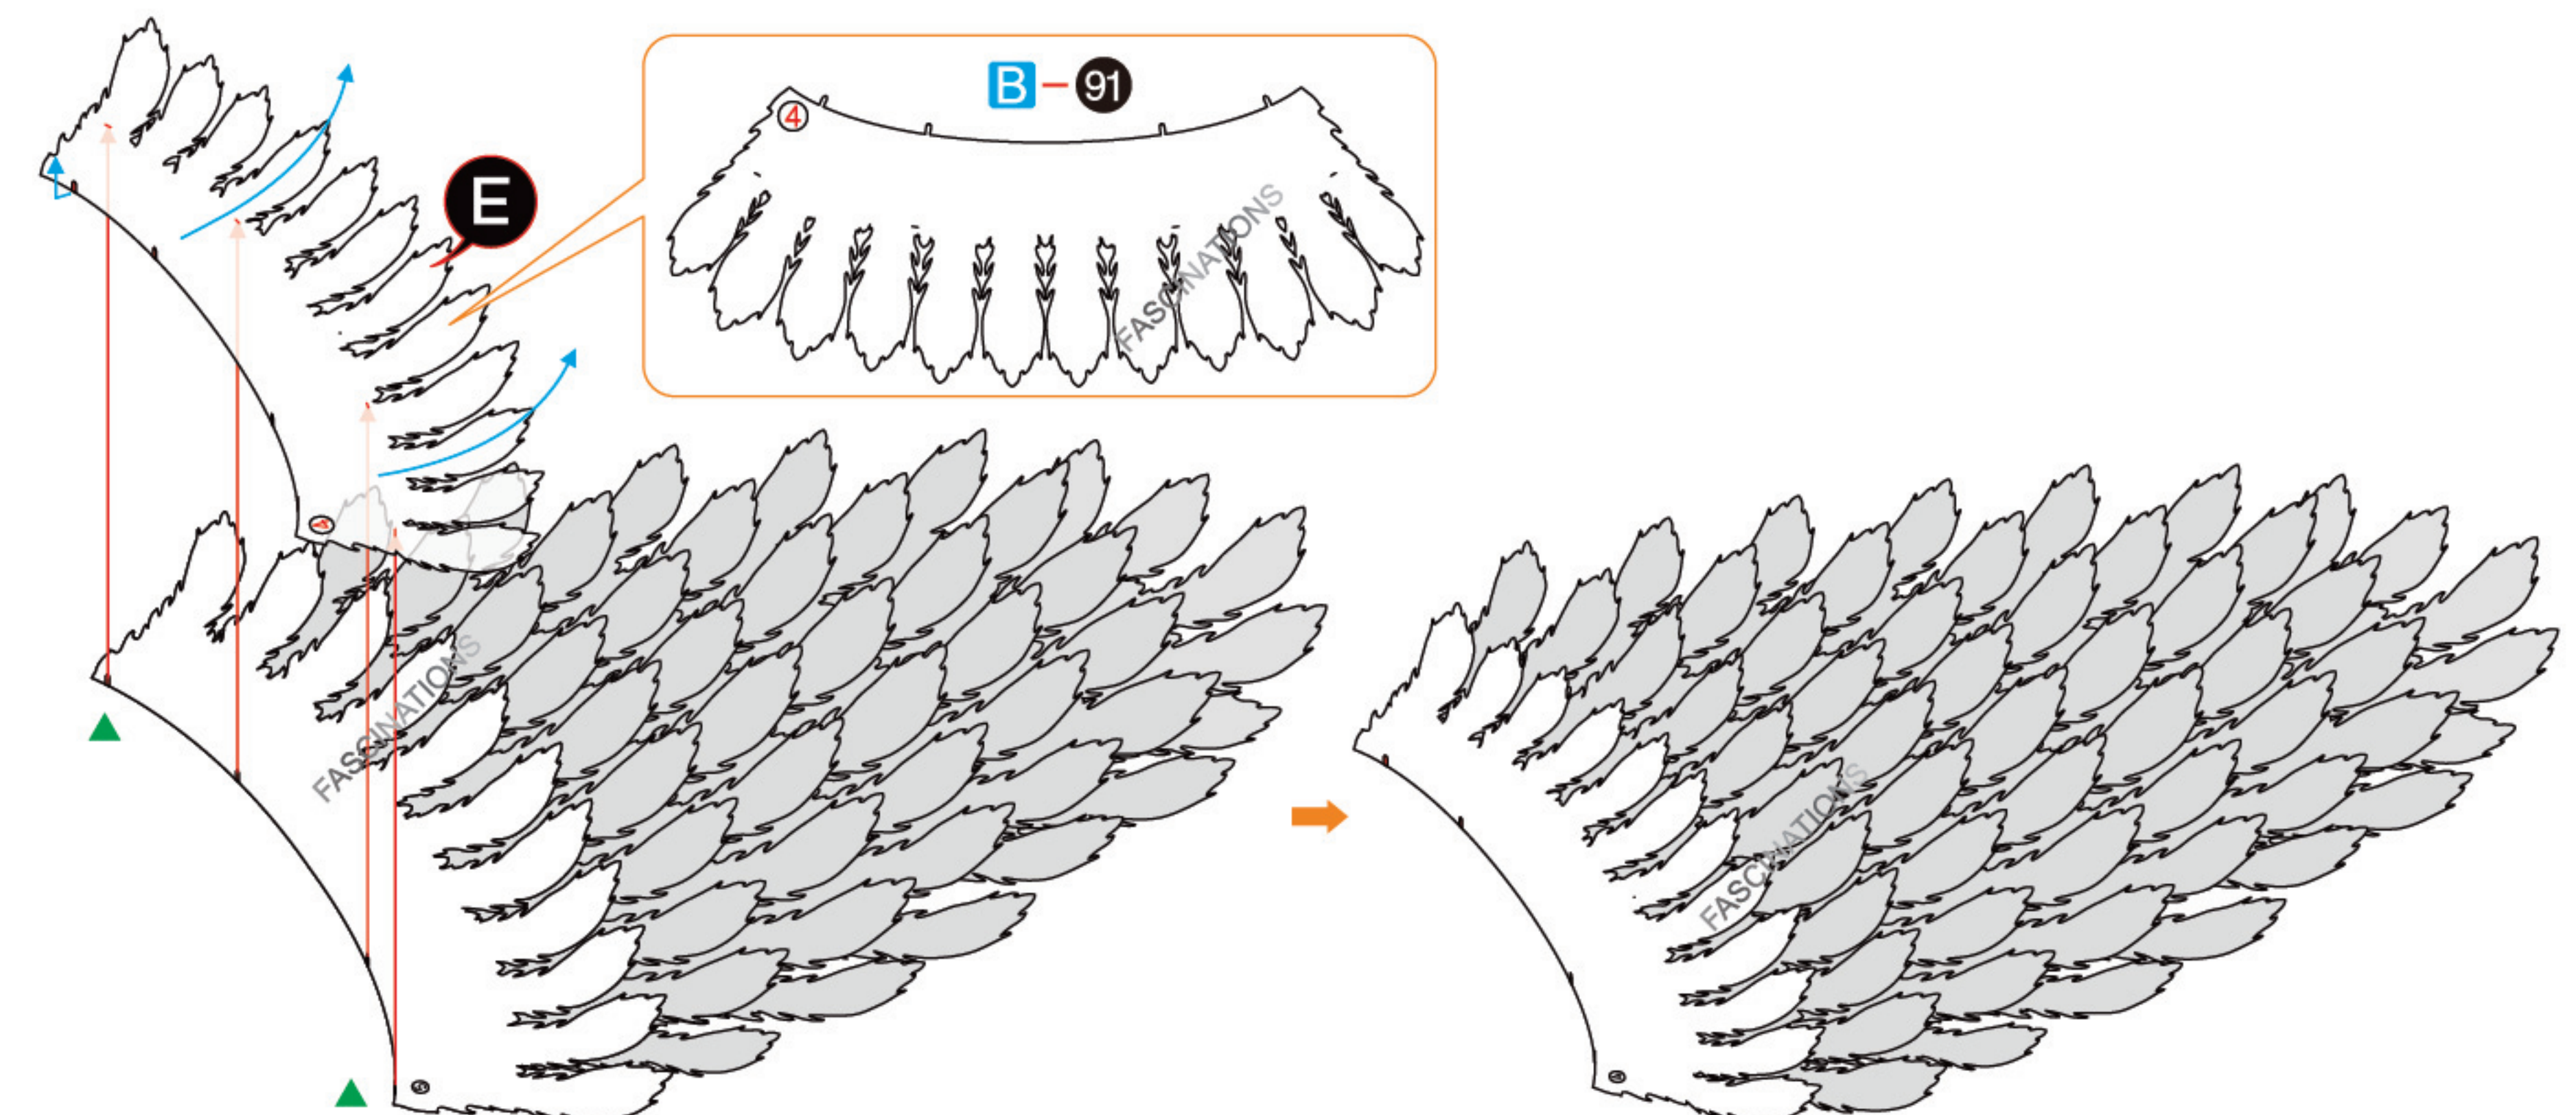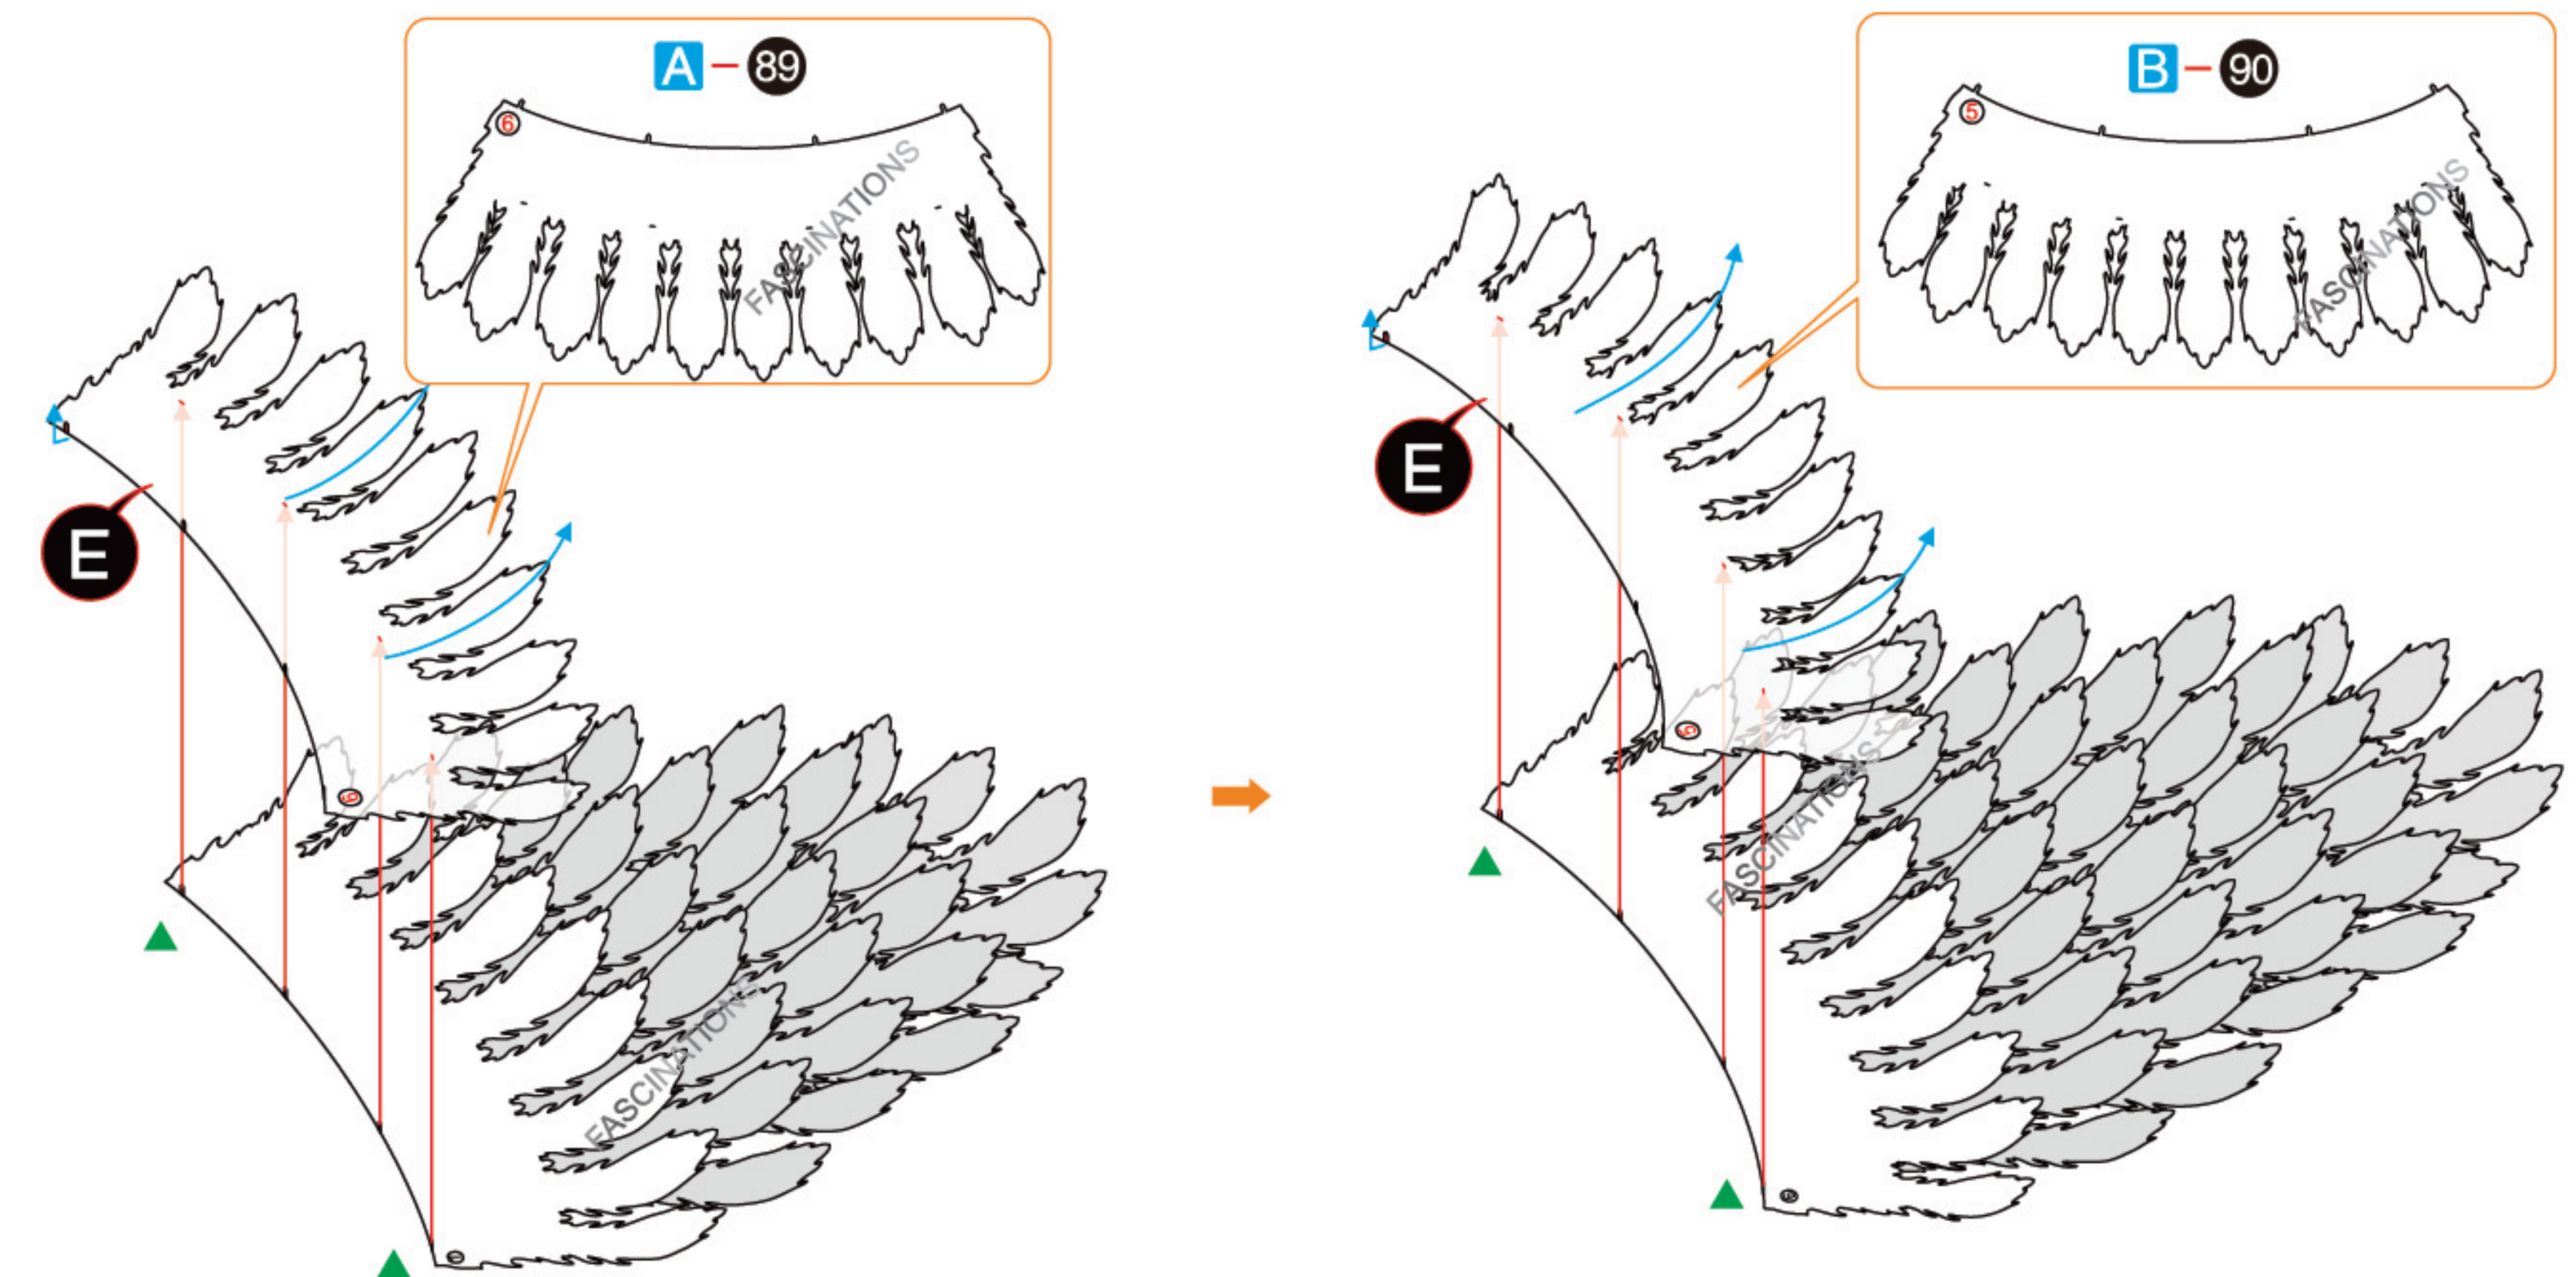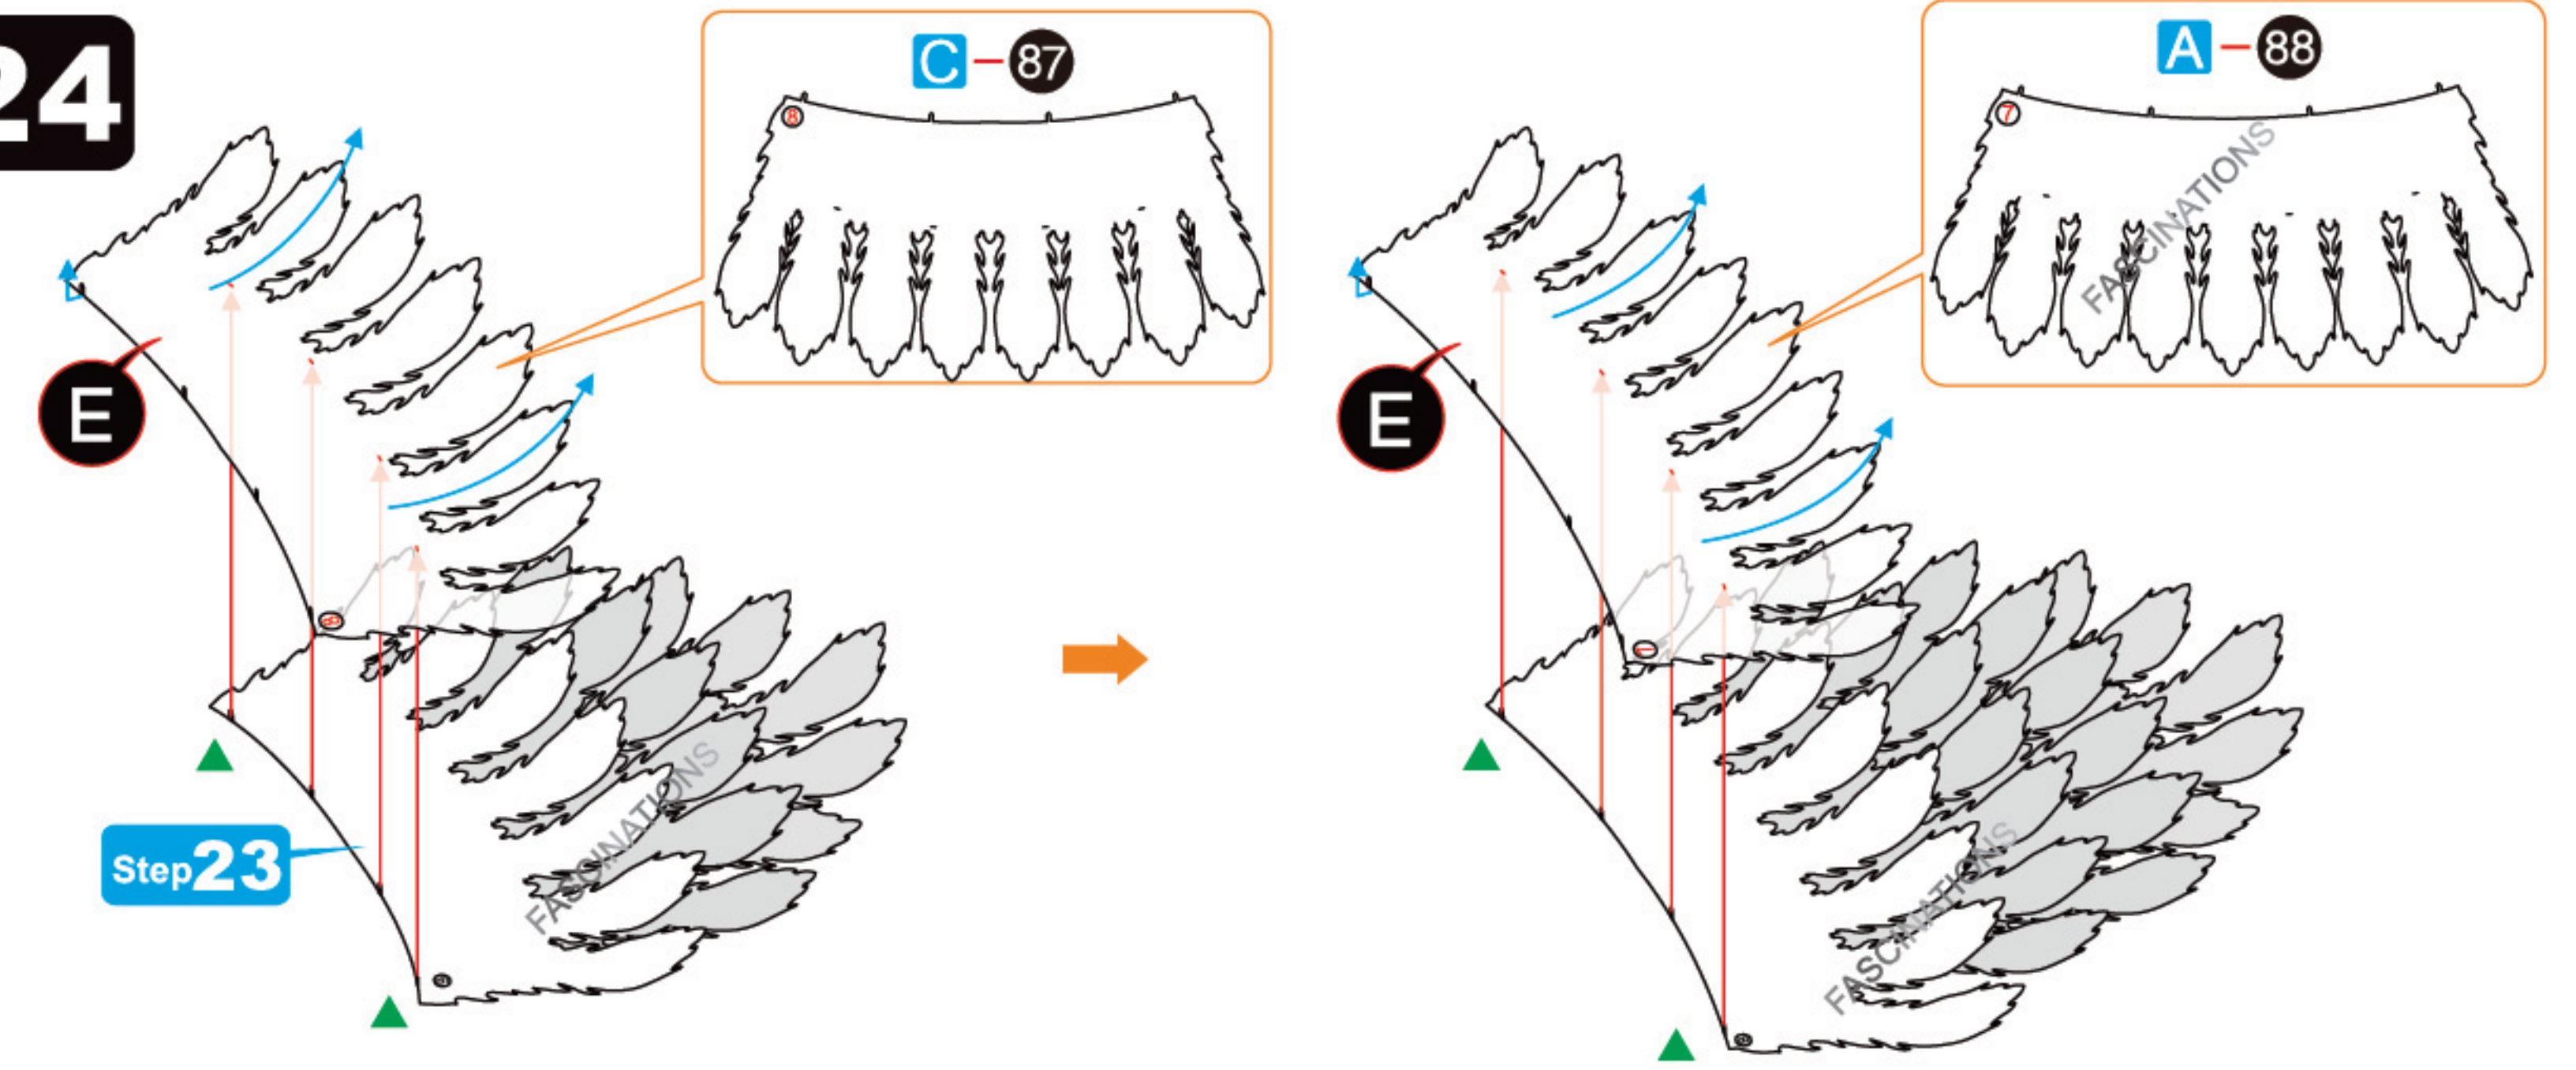

Step25

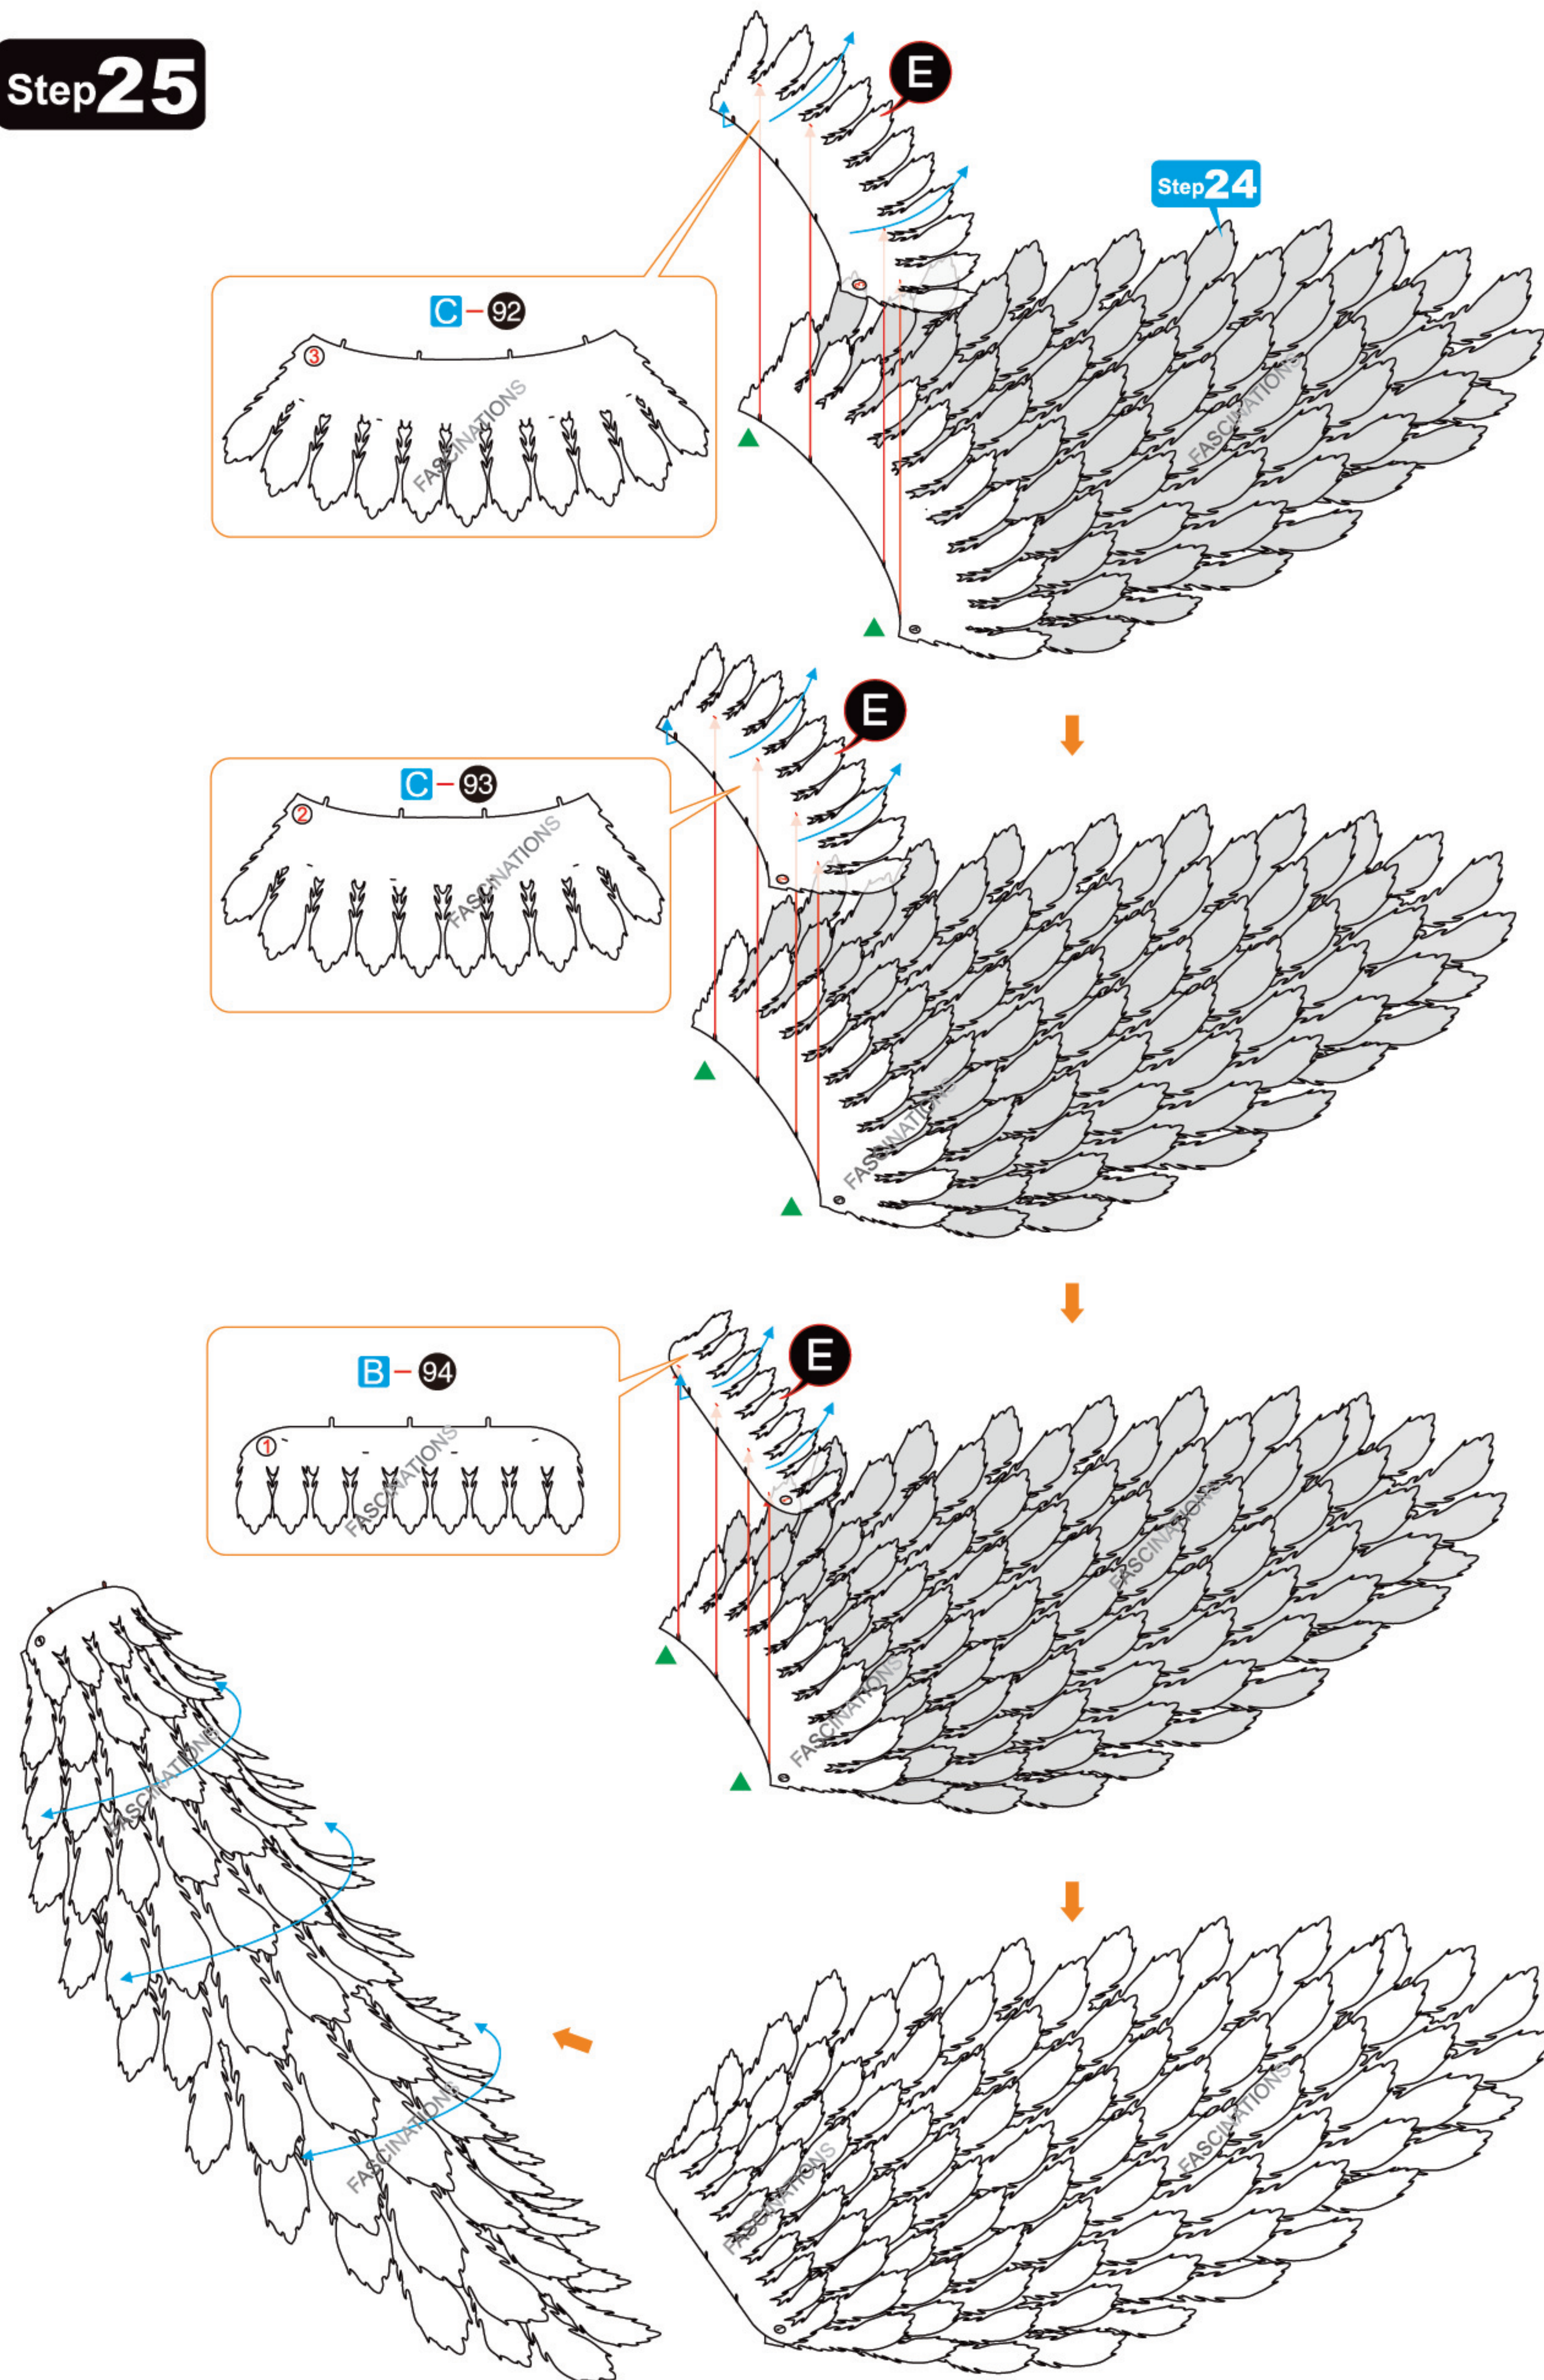

Step26

