


METAL SHEETS




Parts that are in the same color are duplicates

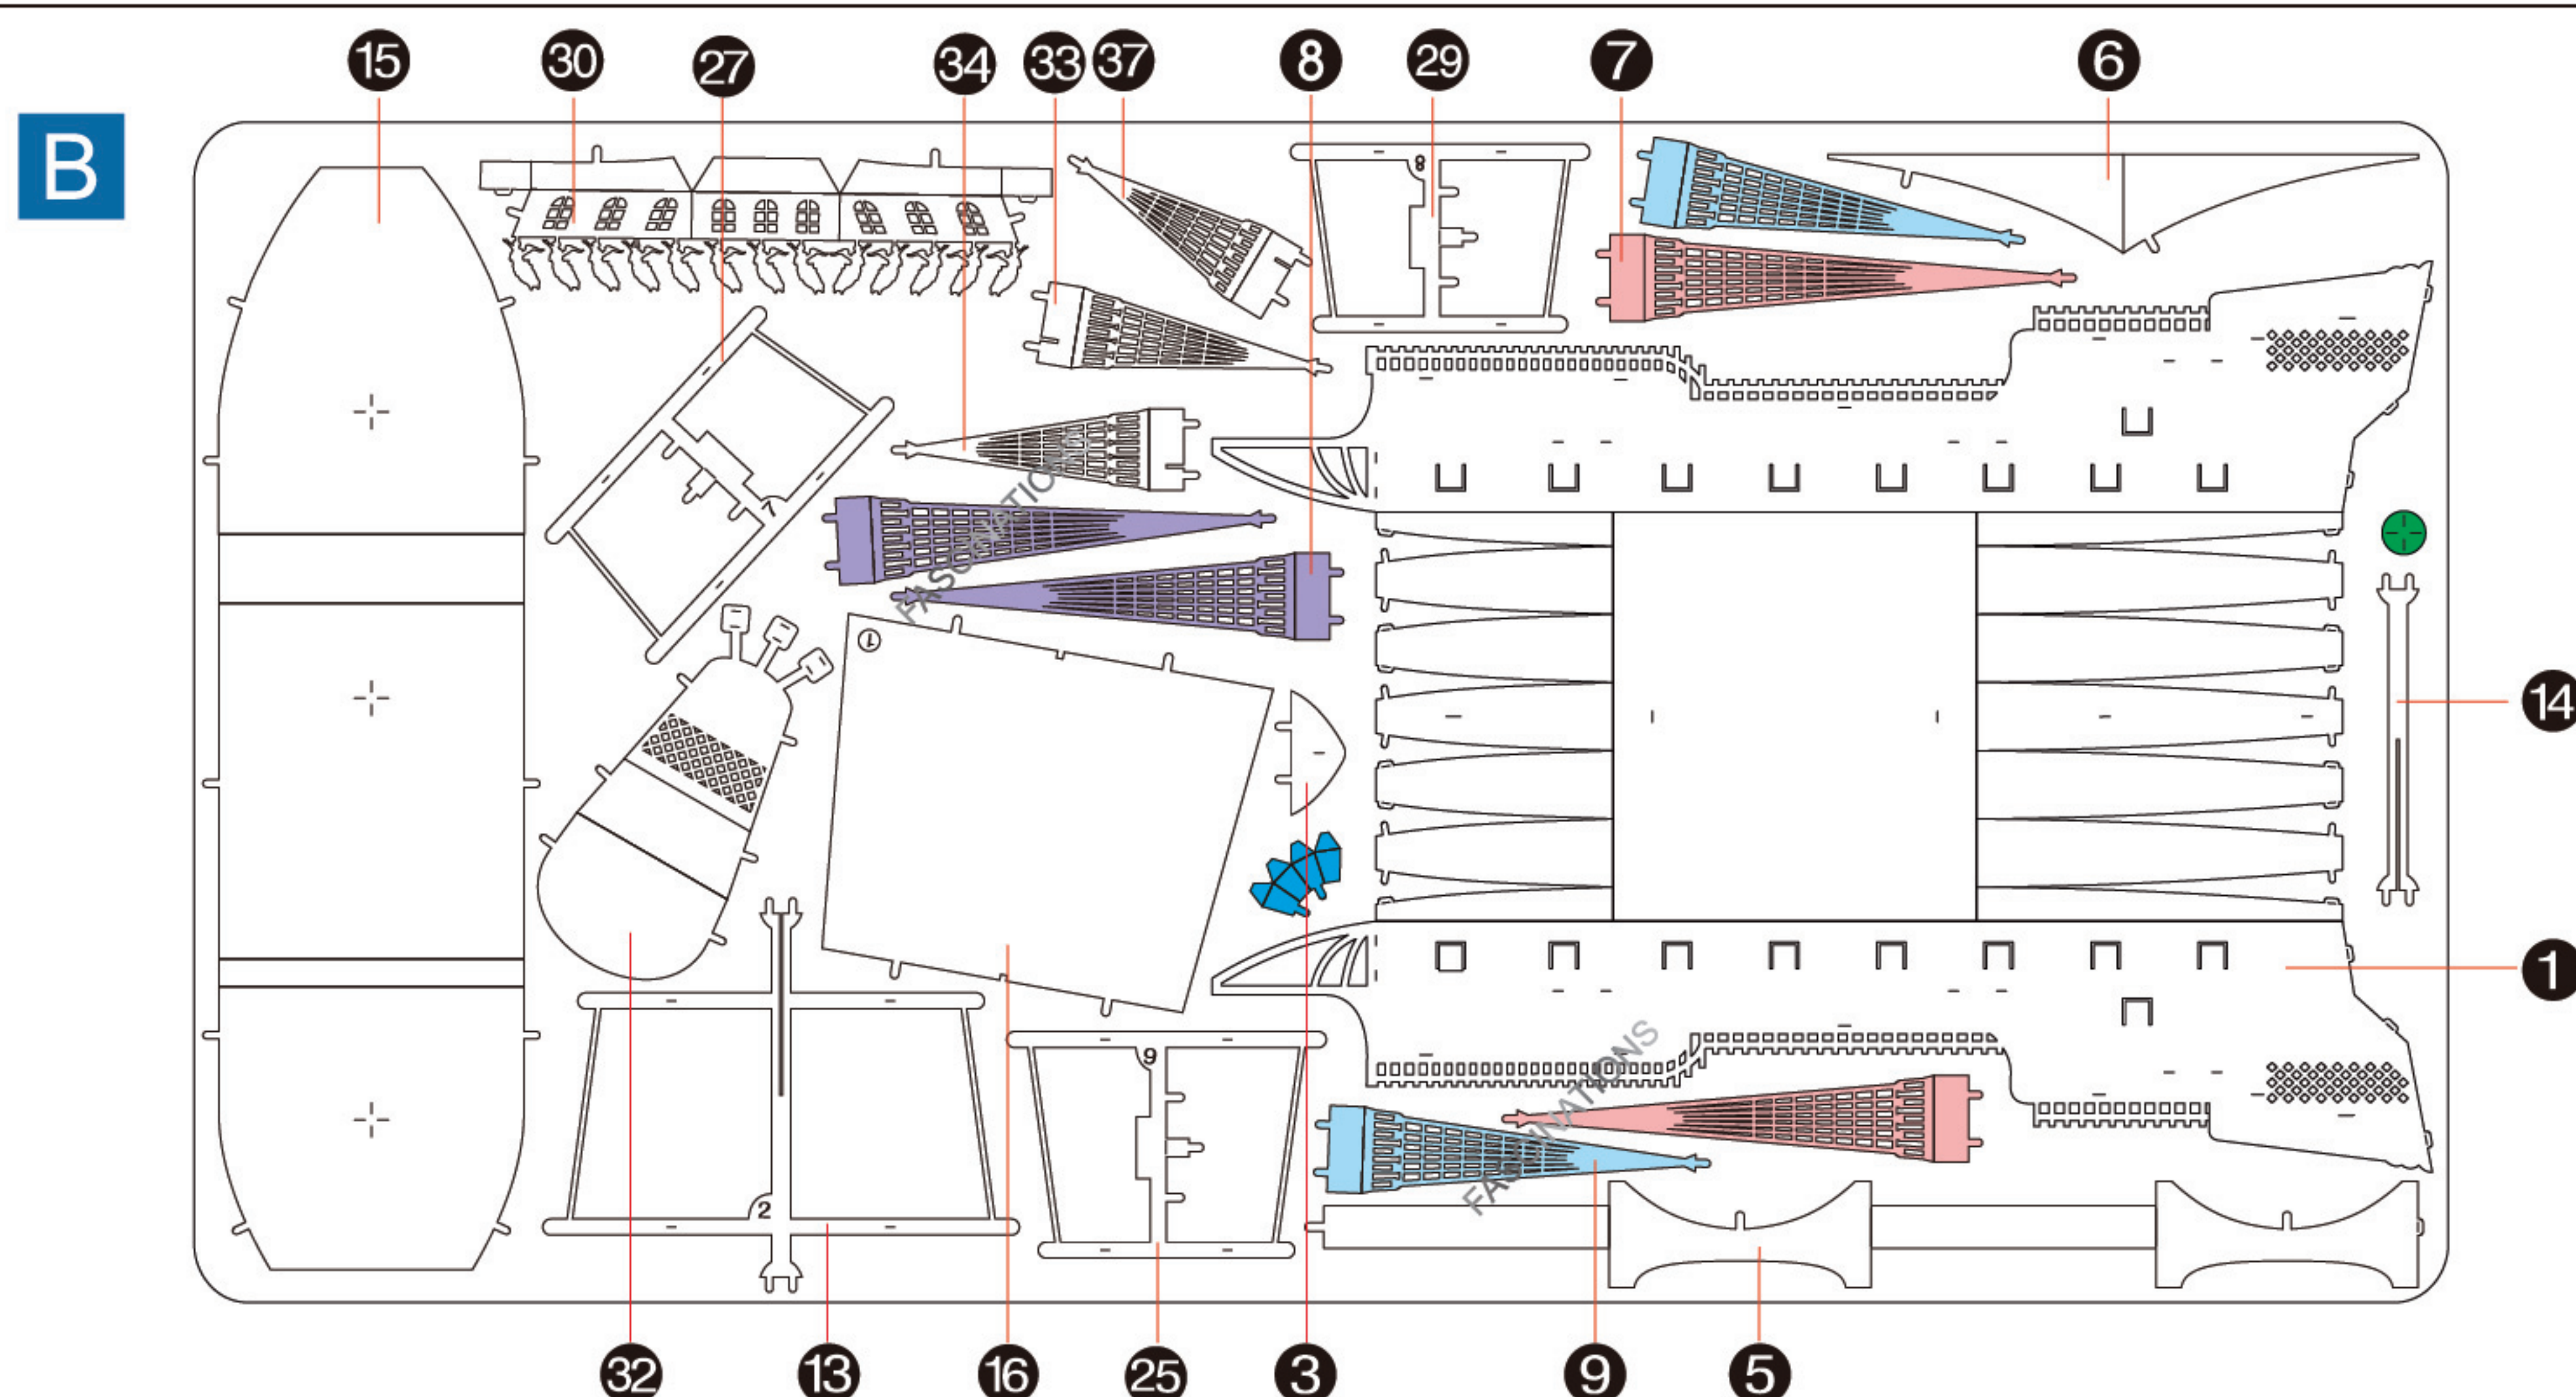


In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed

ICX016B

Black Pearl

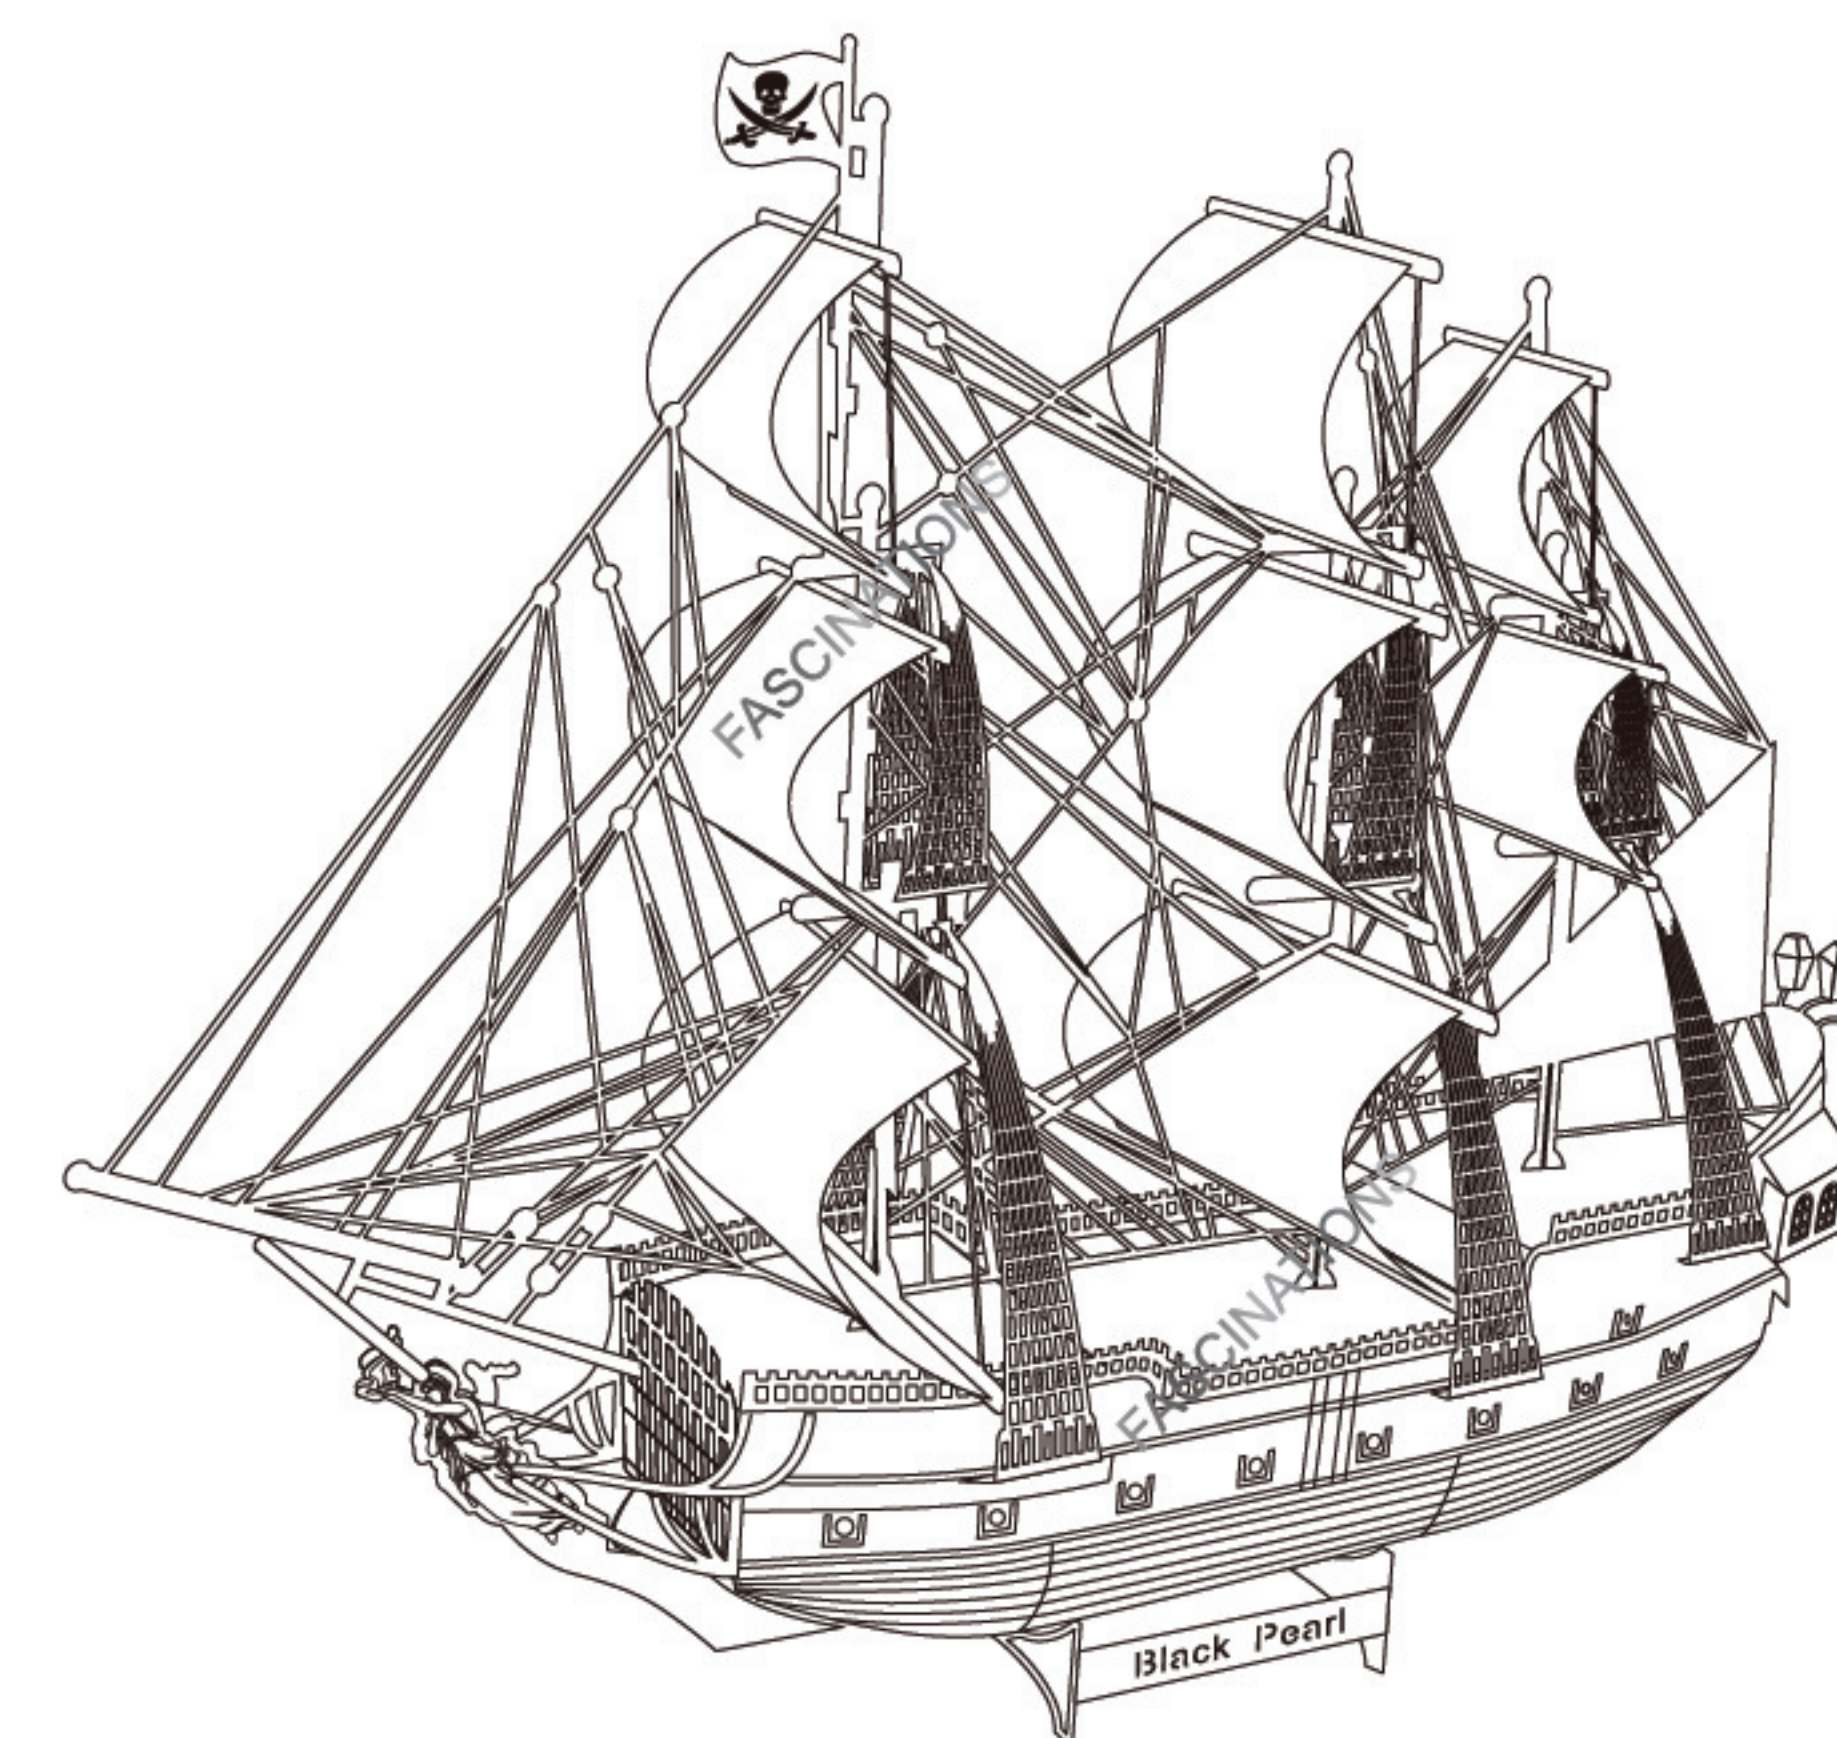

TO CREATE THE BEST CONNECTIONS

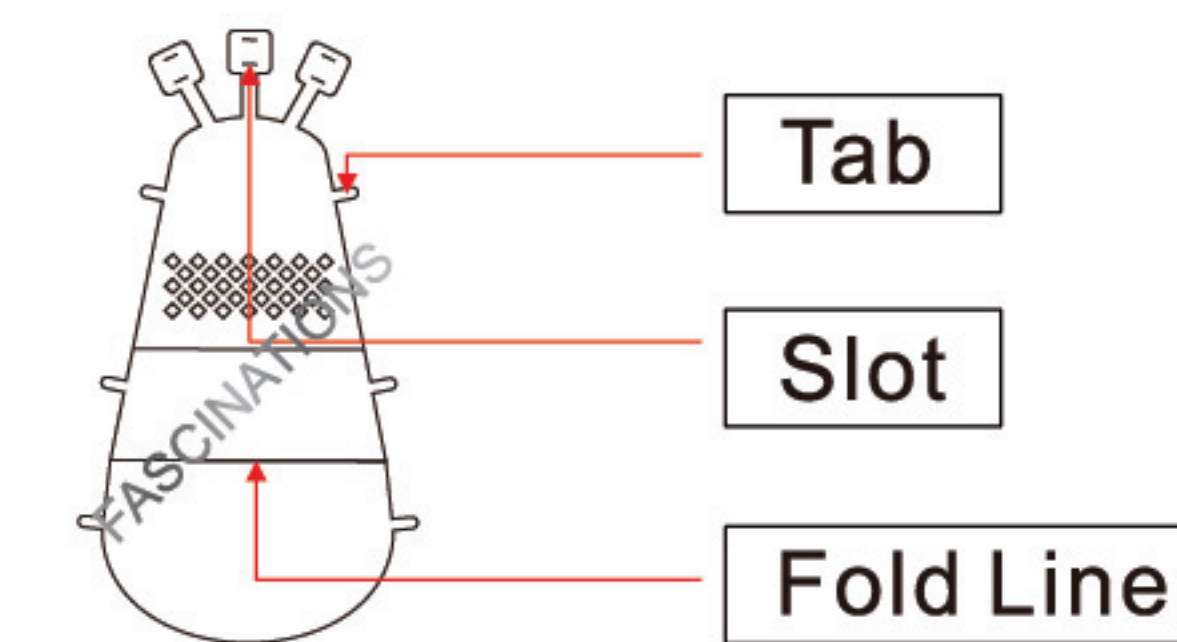

Legends:


- E** Engraved side
- NE** Non-engraved side
- Attention point
- Insert tab and bend 90 degrees
- Insert tab and twist 90 degrees

Recommended tools:

-Wire cutters: helpful for taking parts from the metal sheets.



-Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.

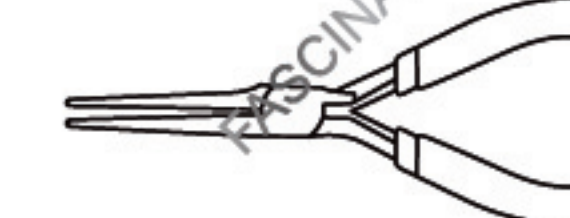


Assembly tip:


If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish

ASSEMBLY STEPS


Step 1










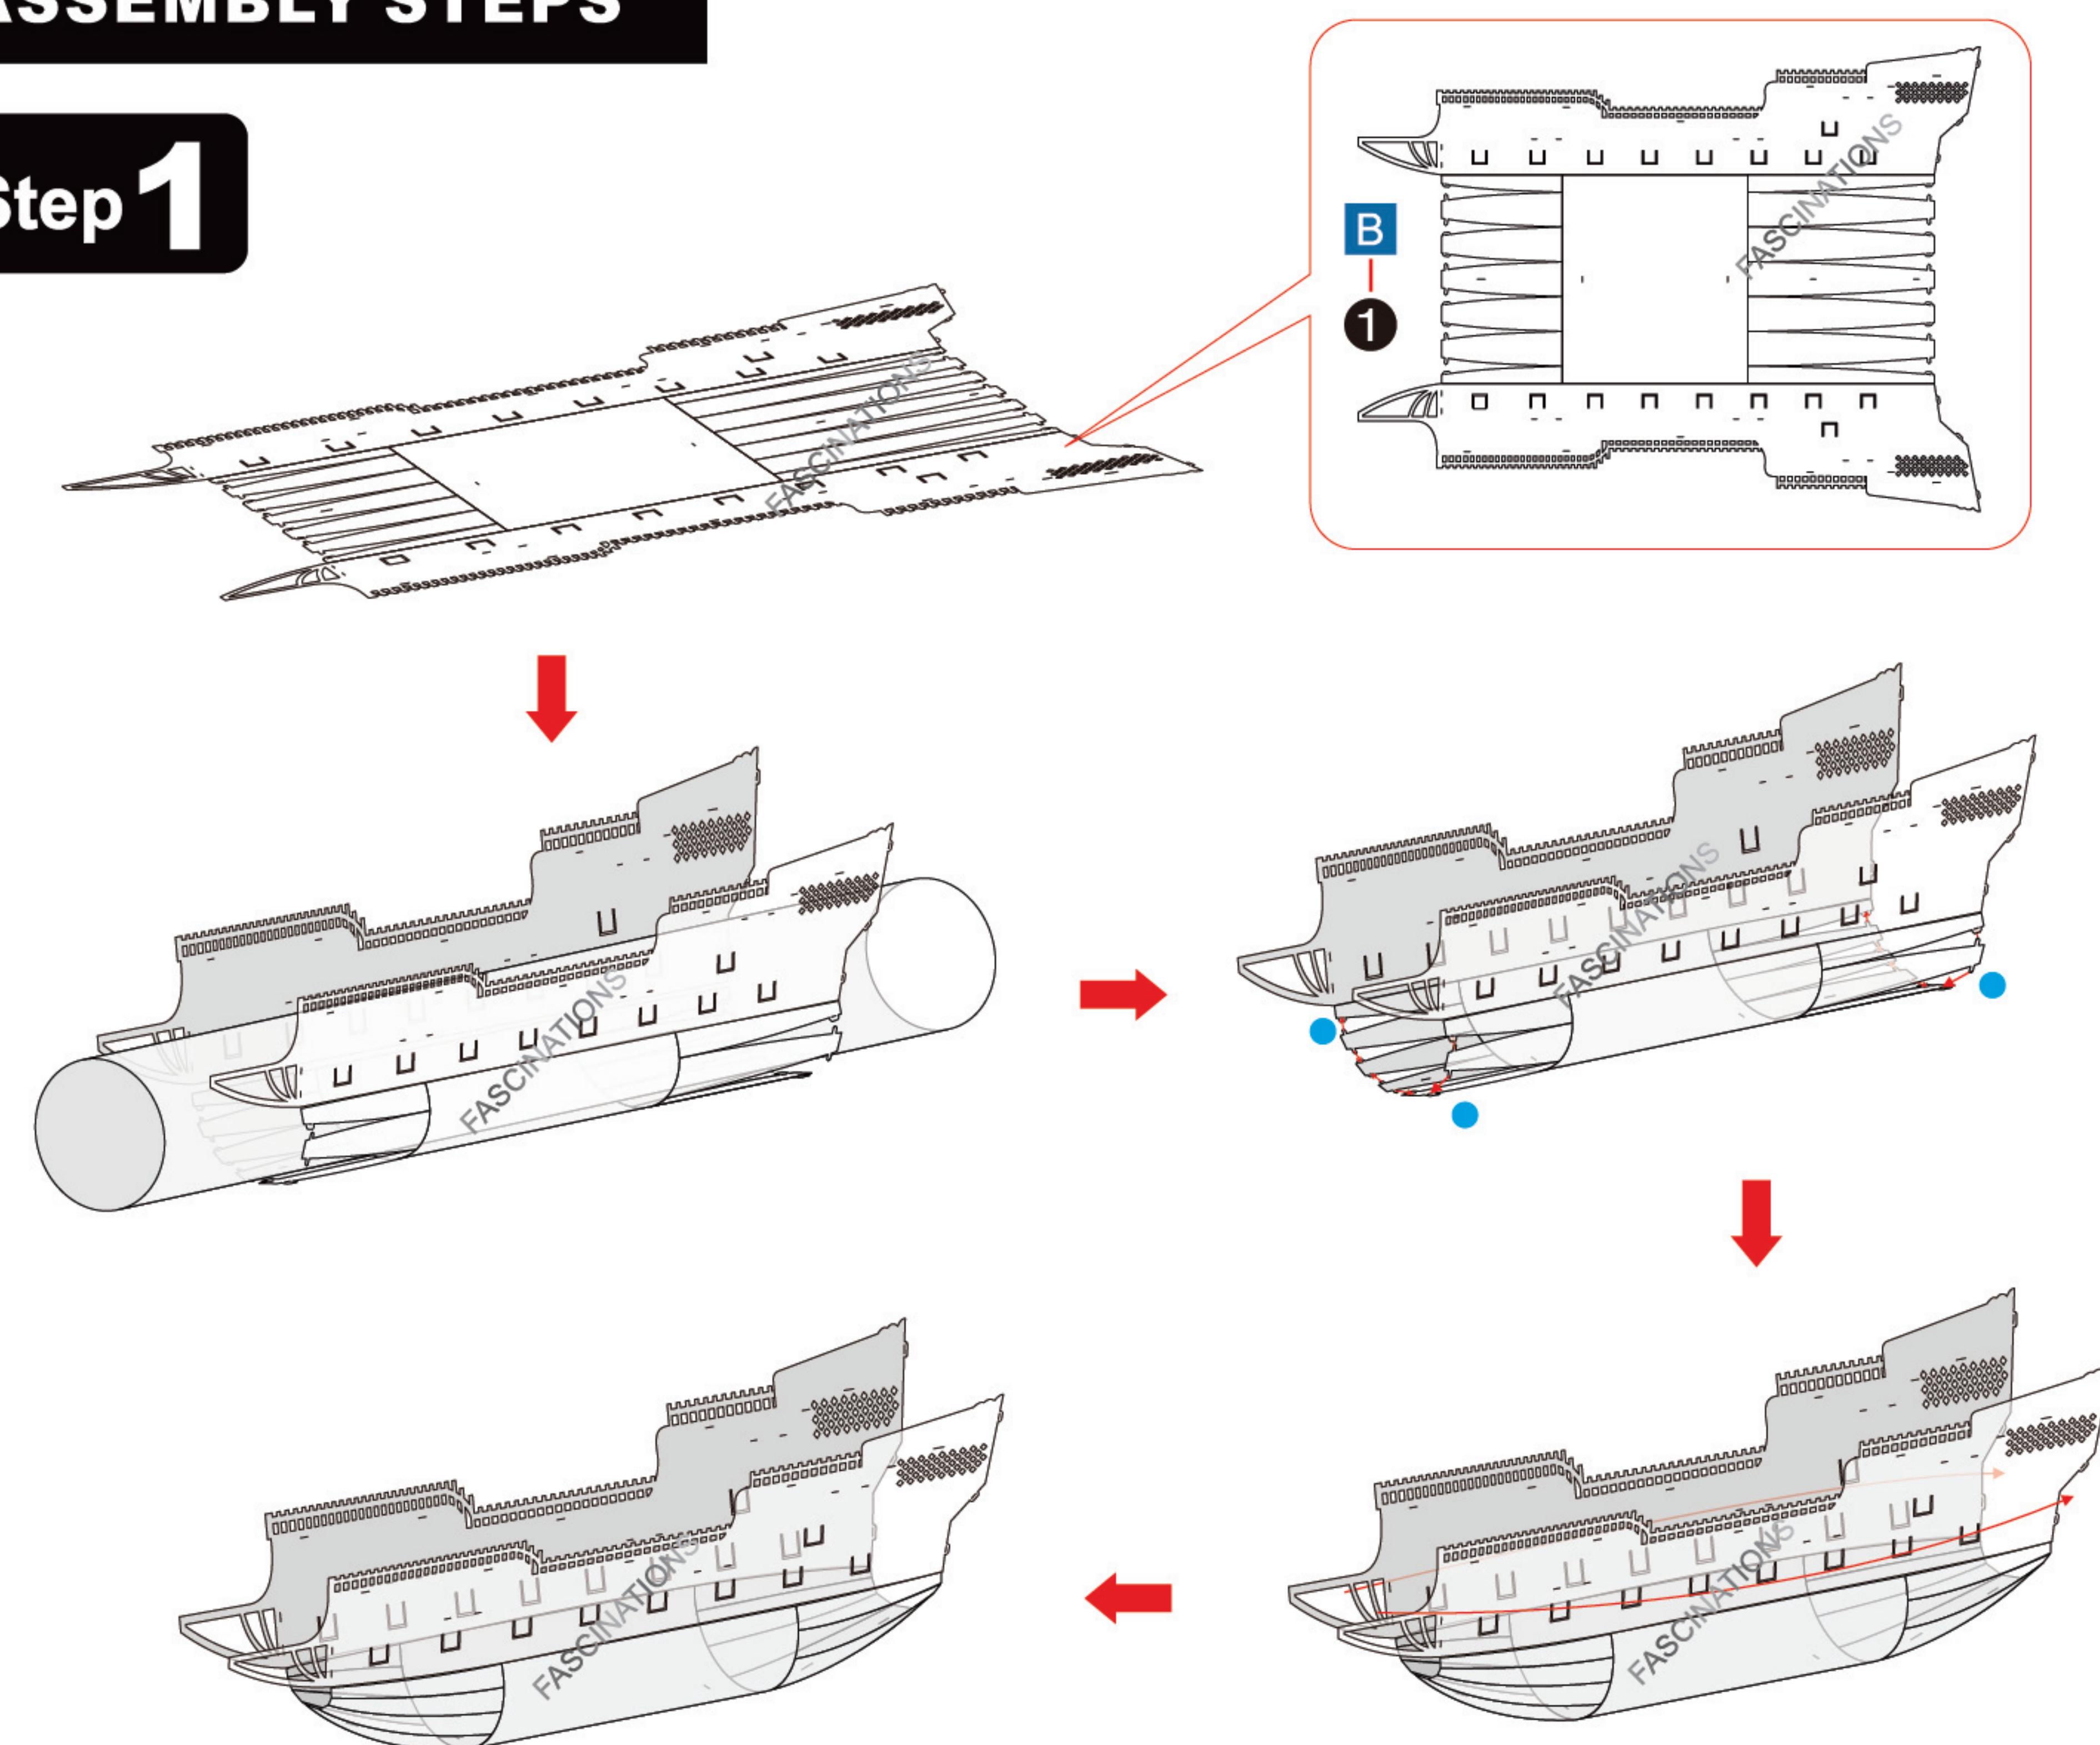


Step 2

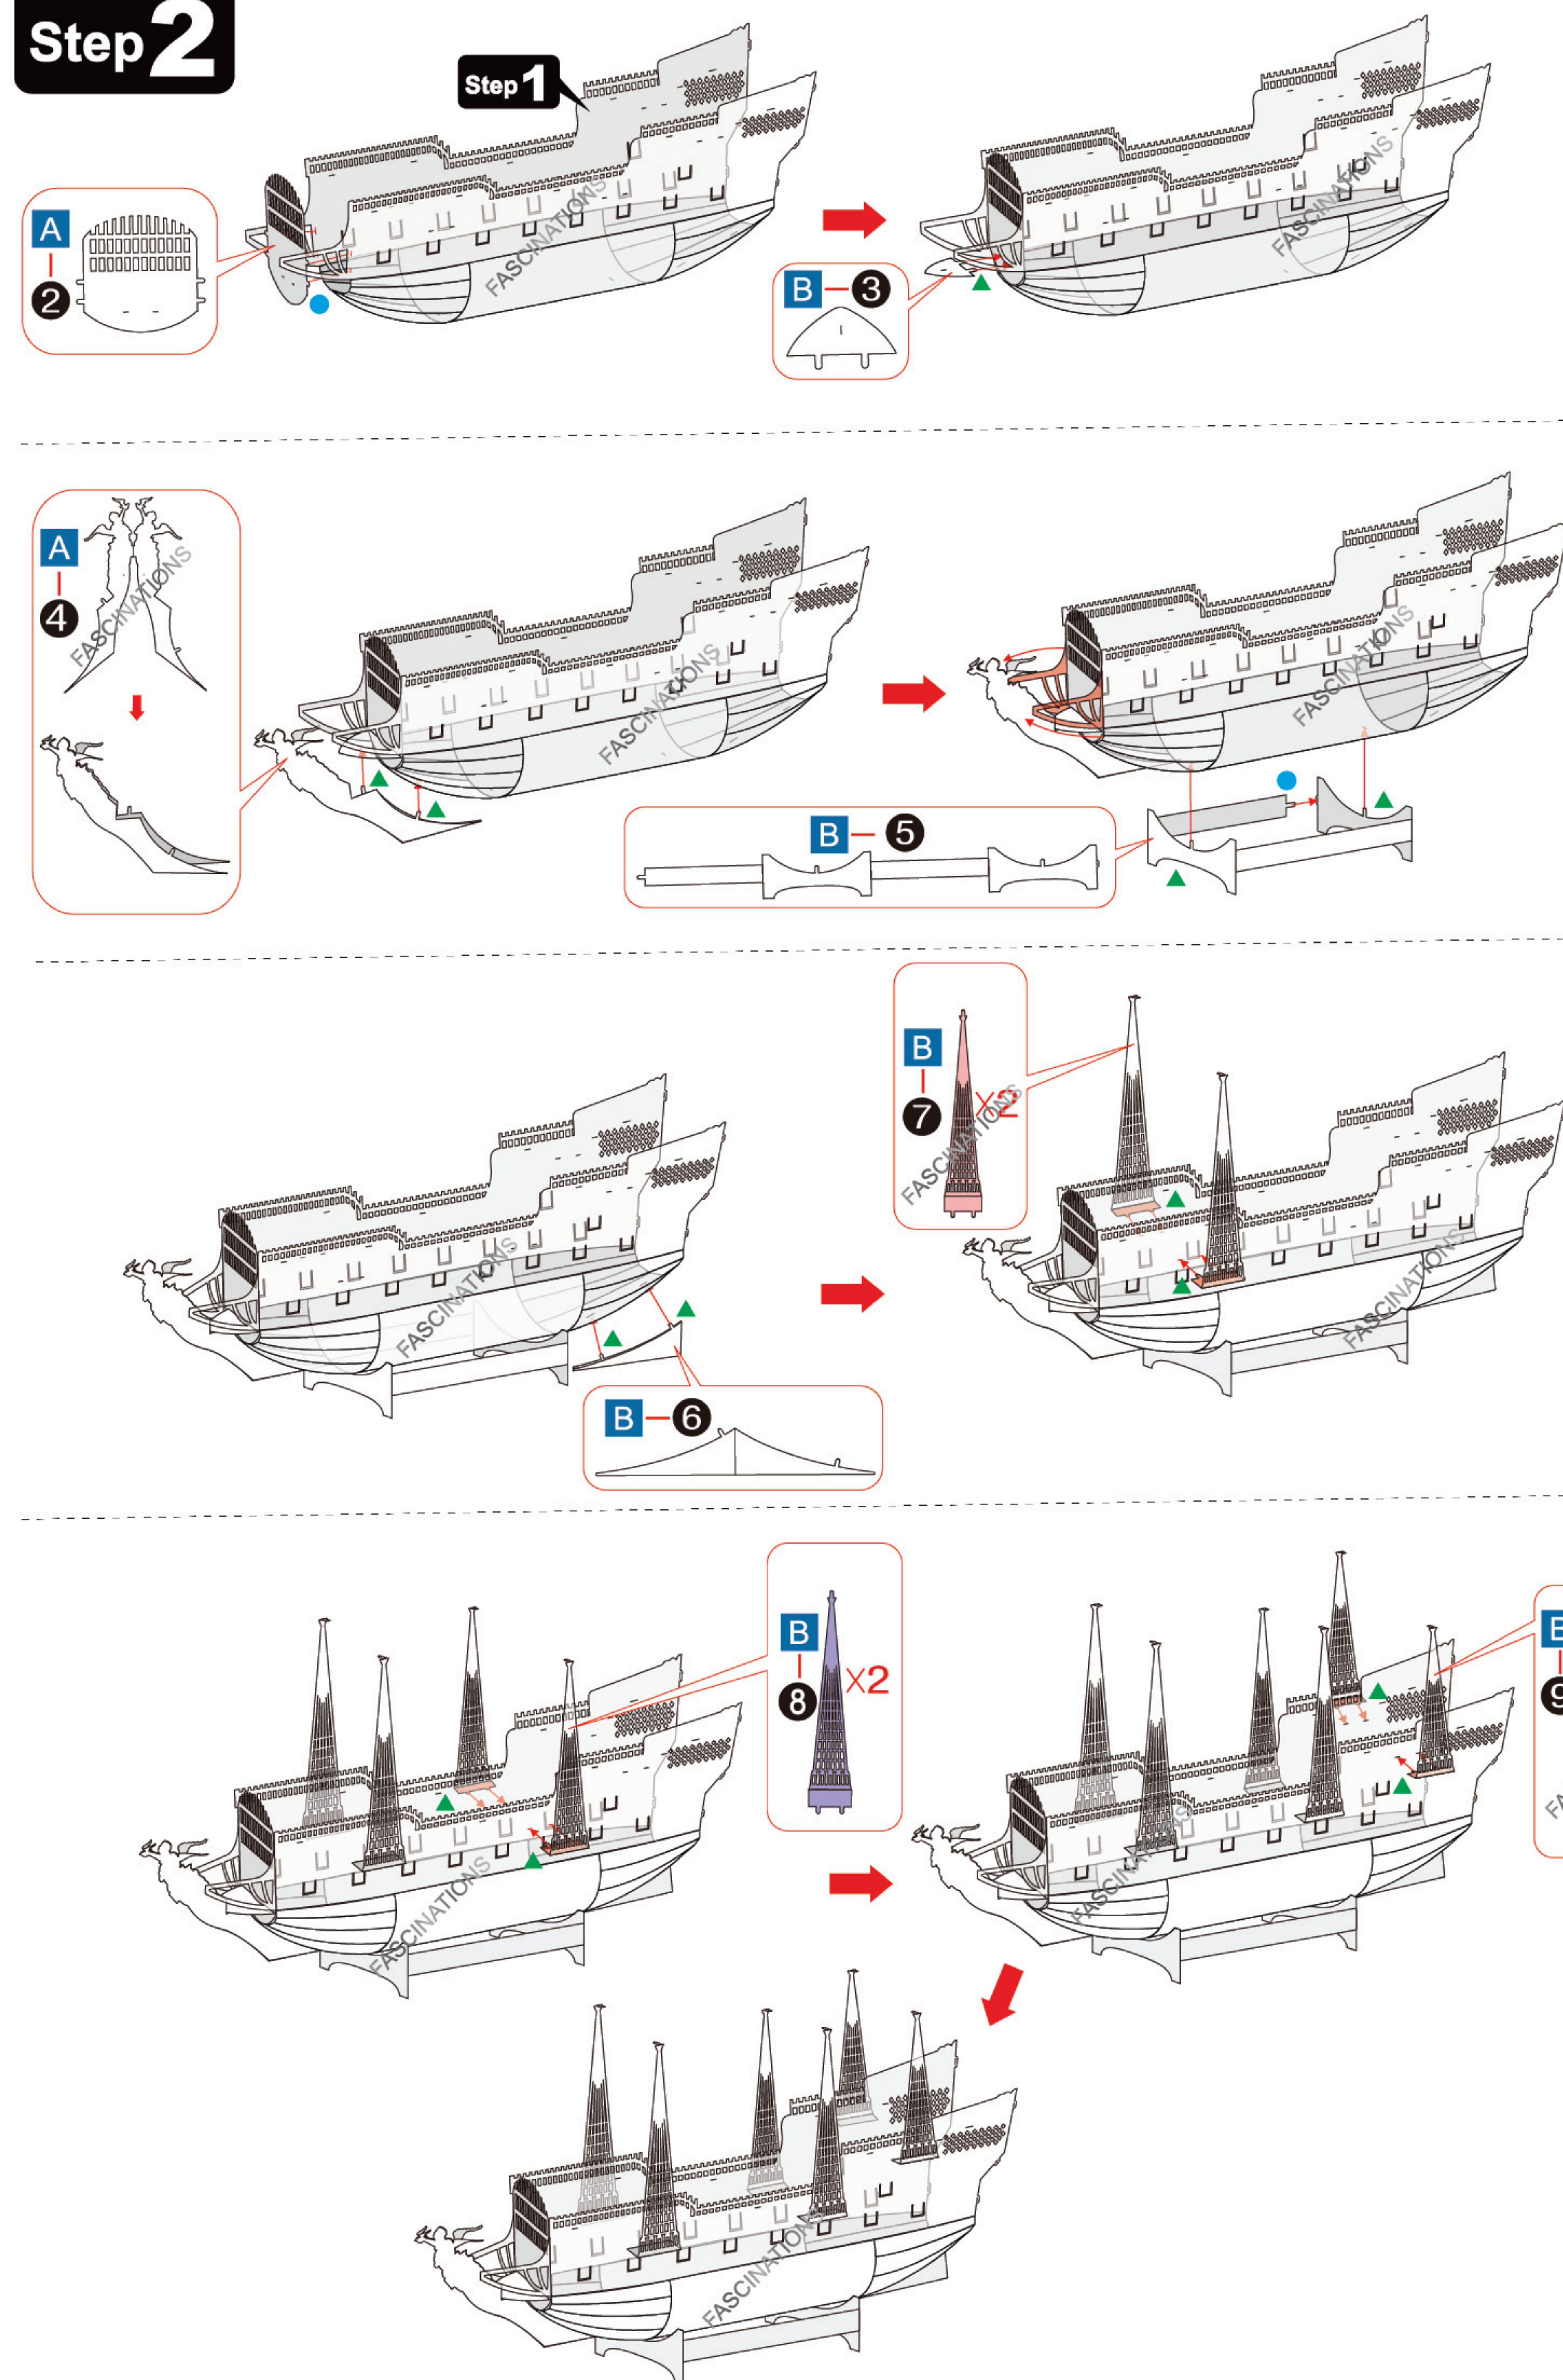


Step 3

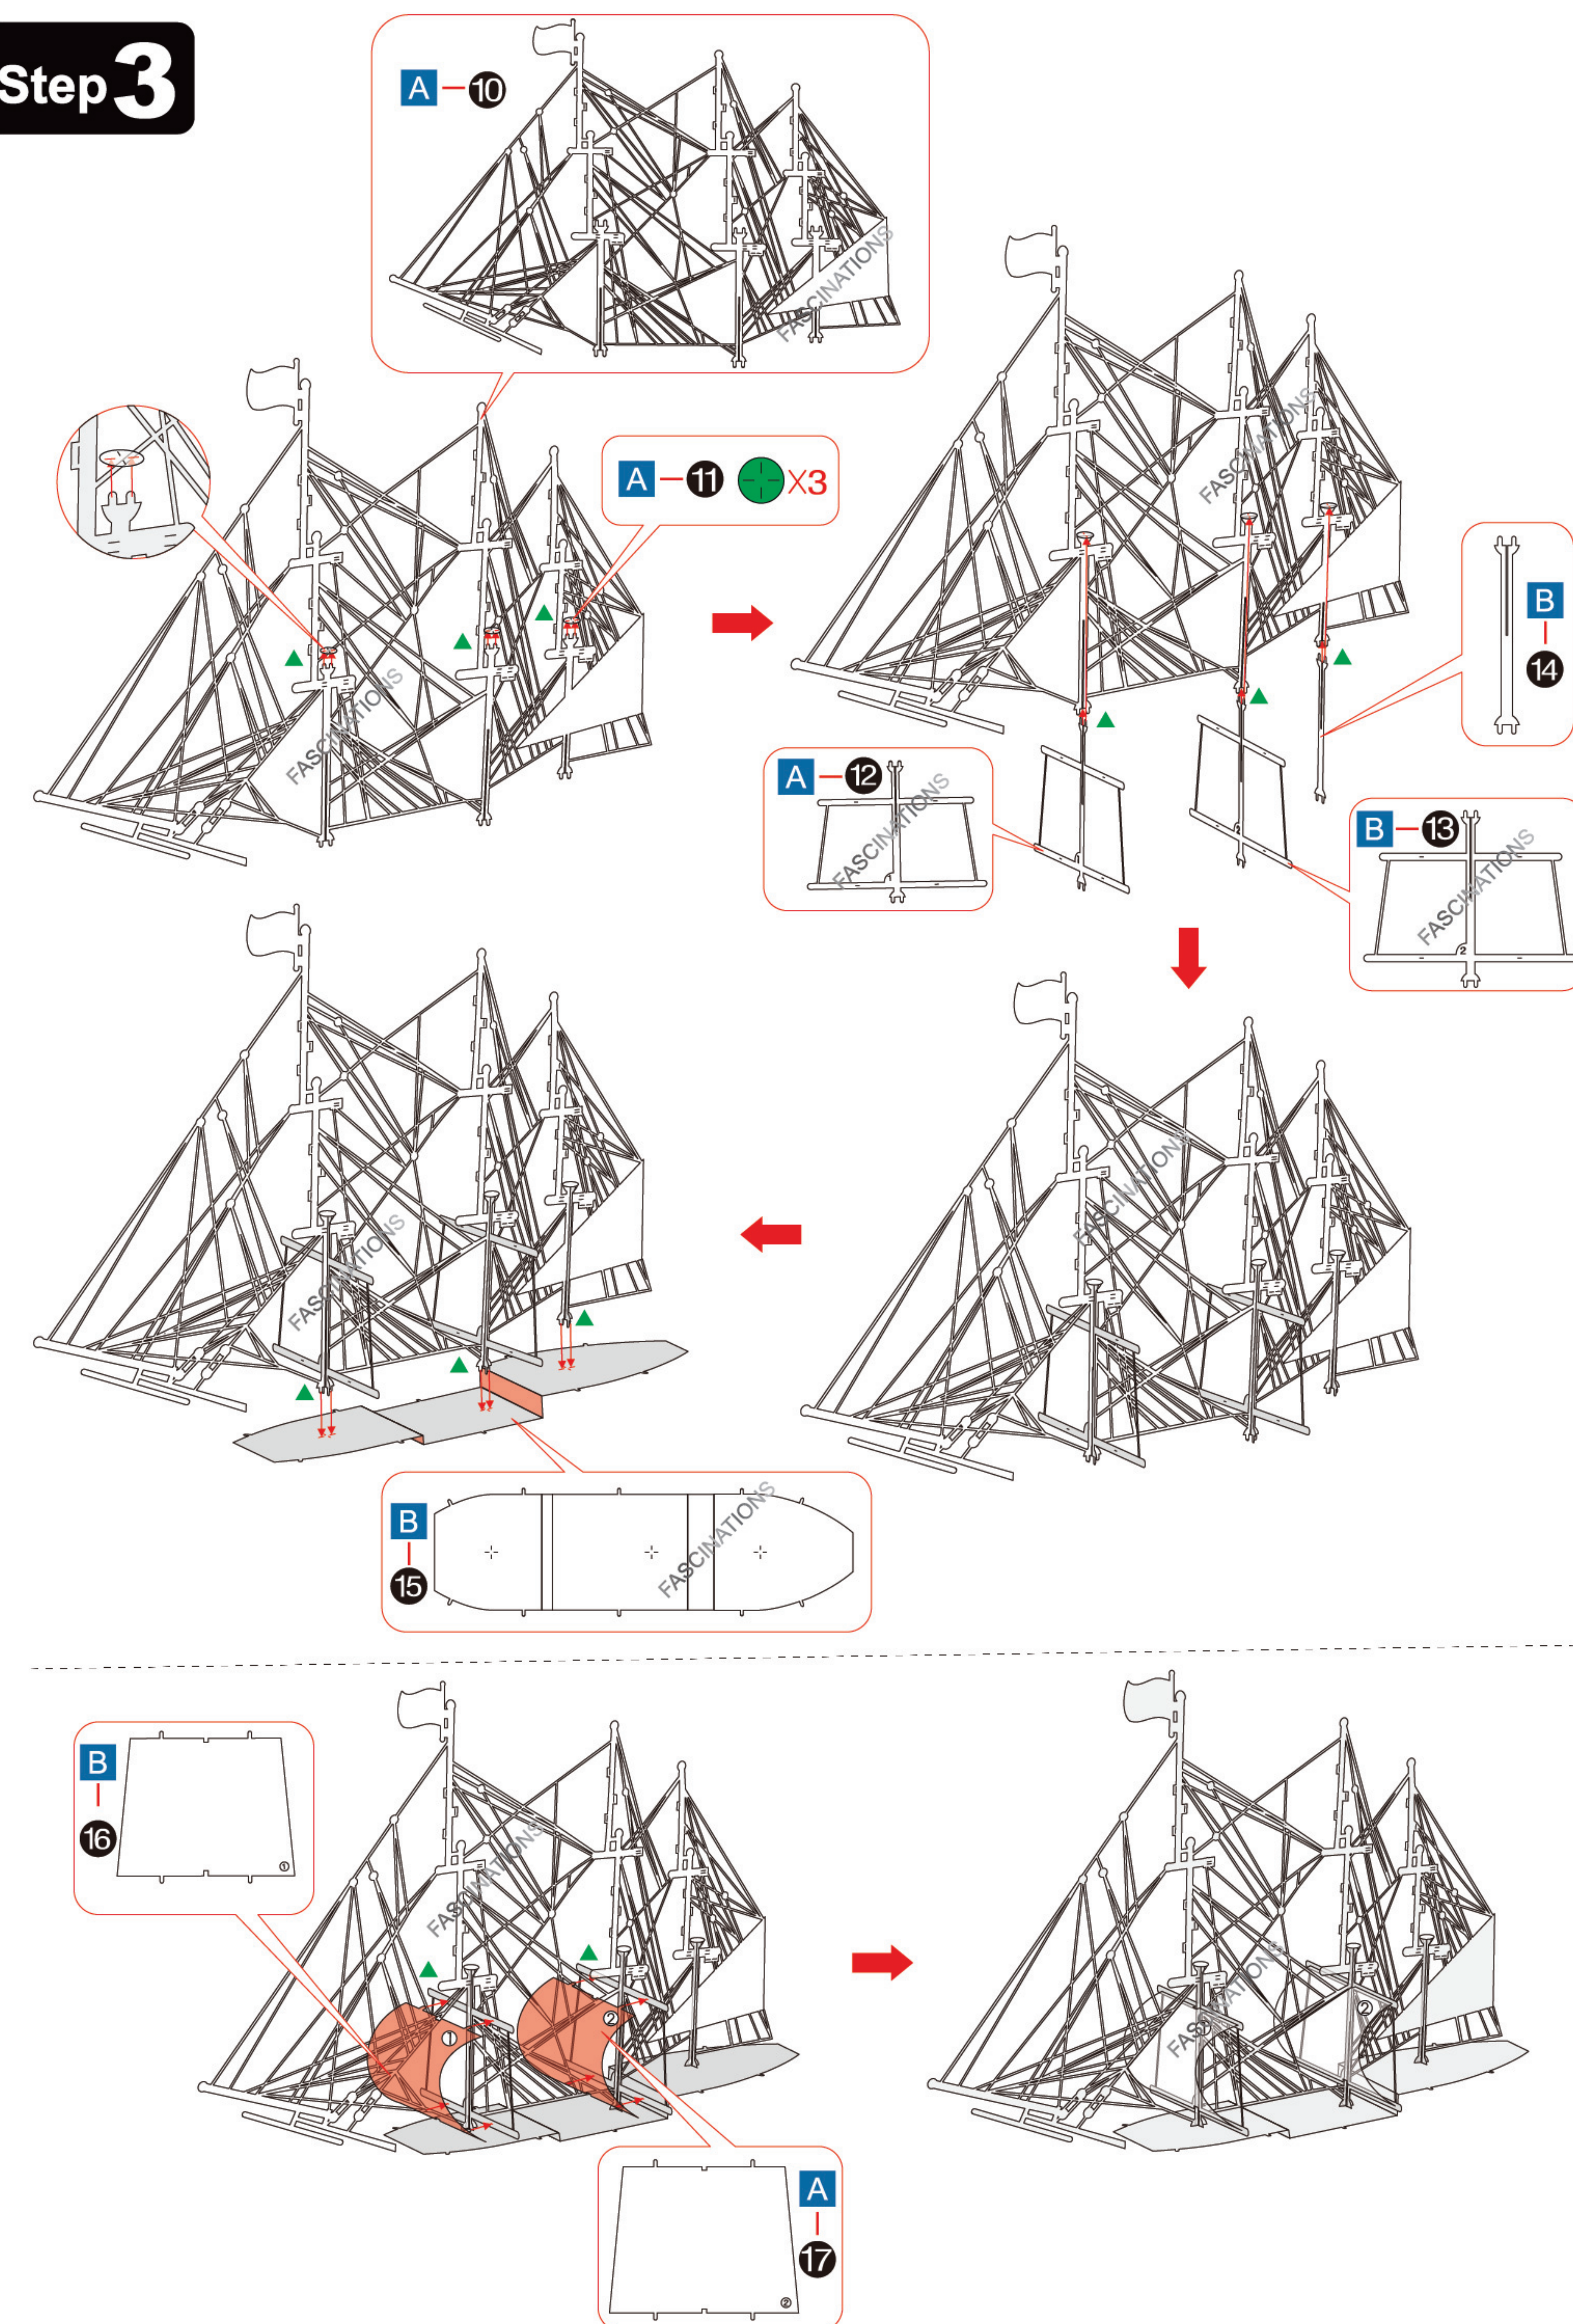


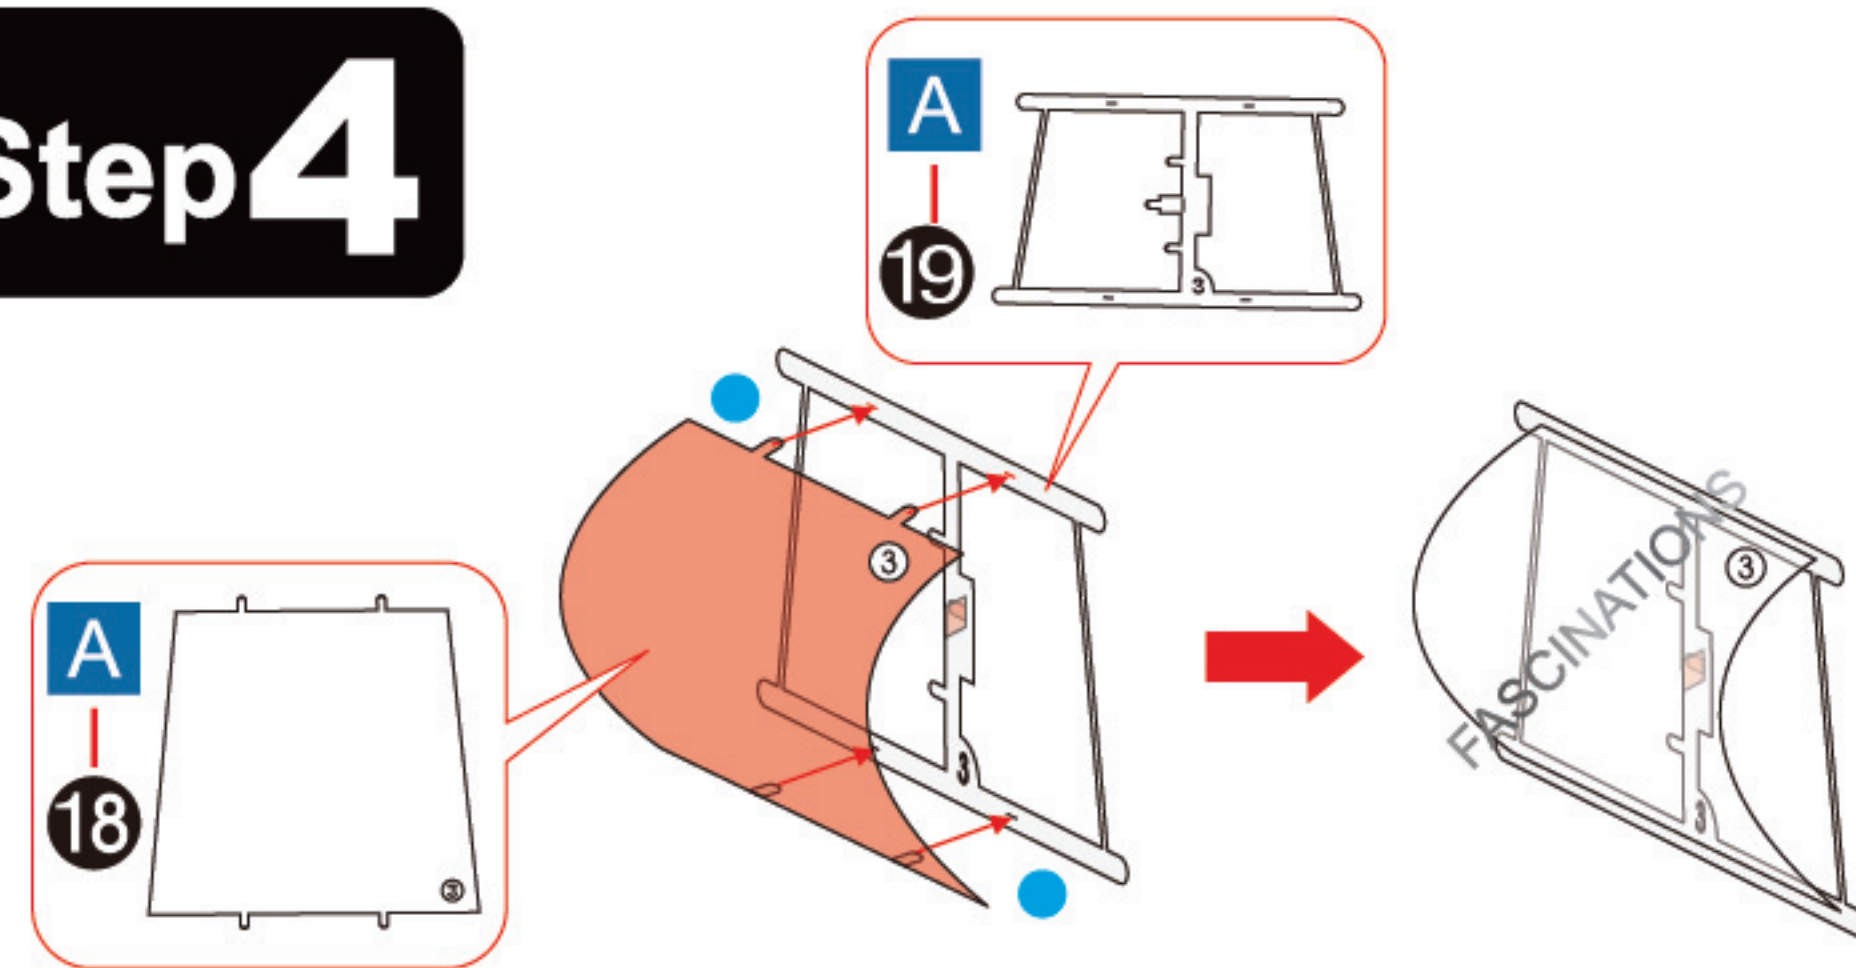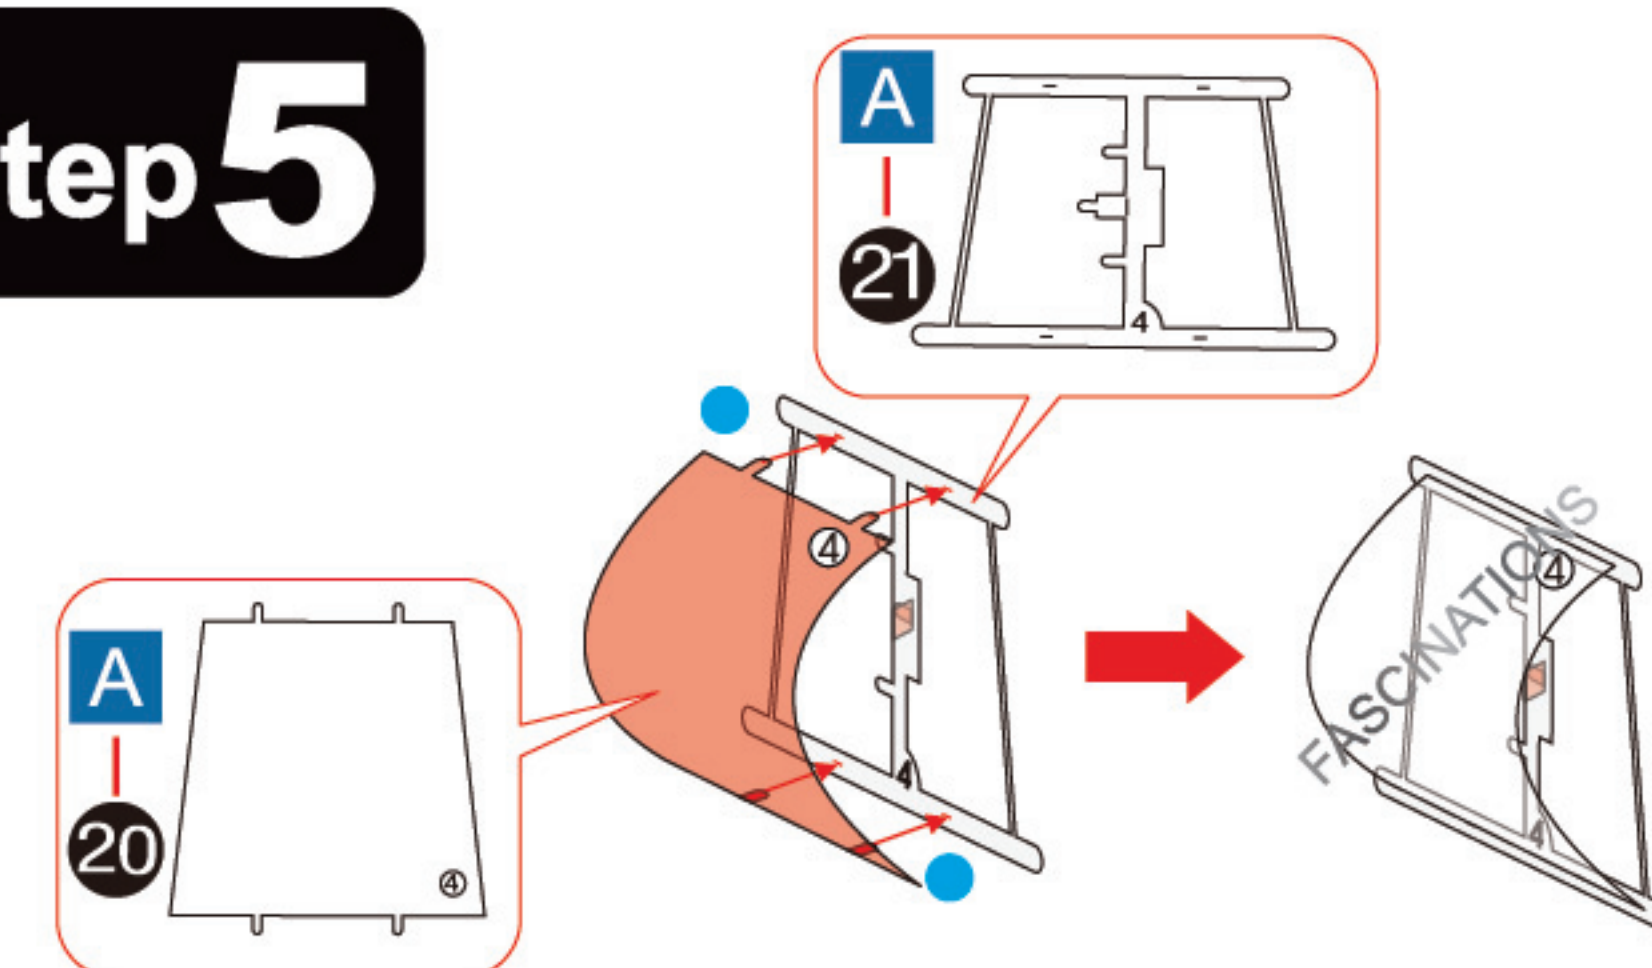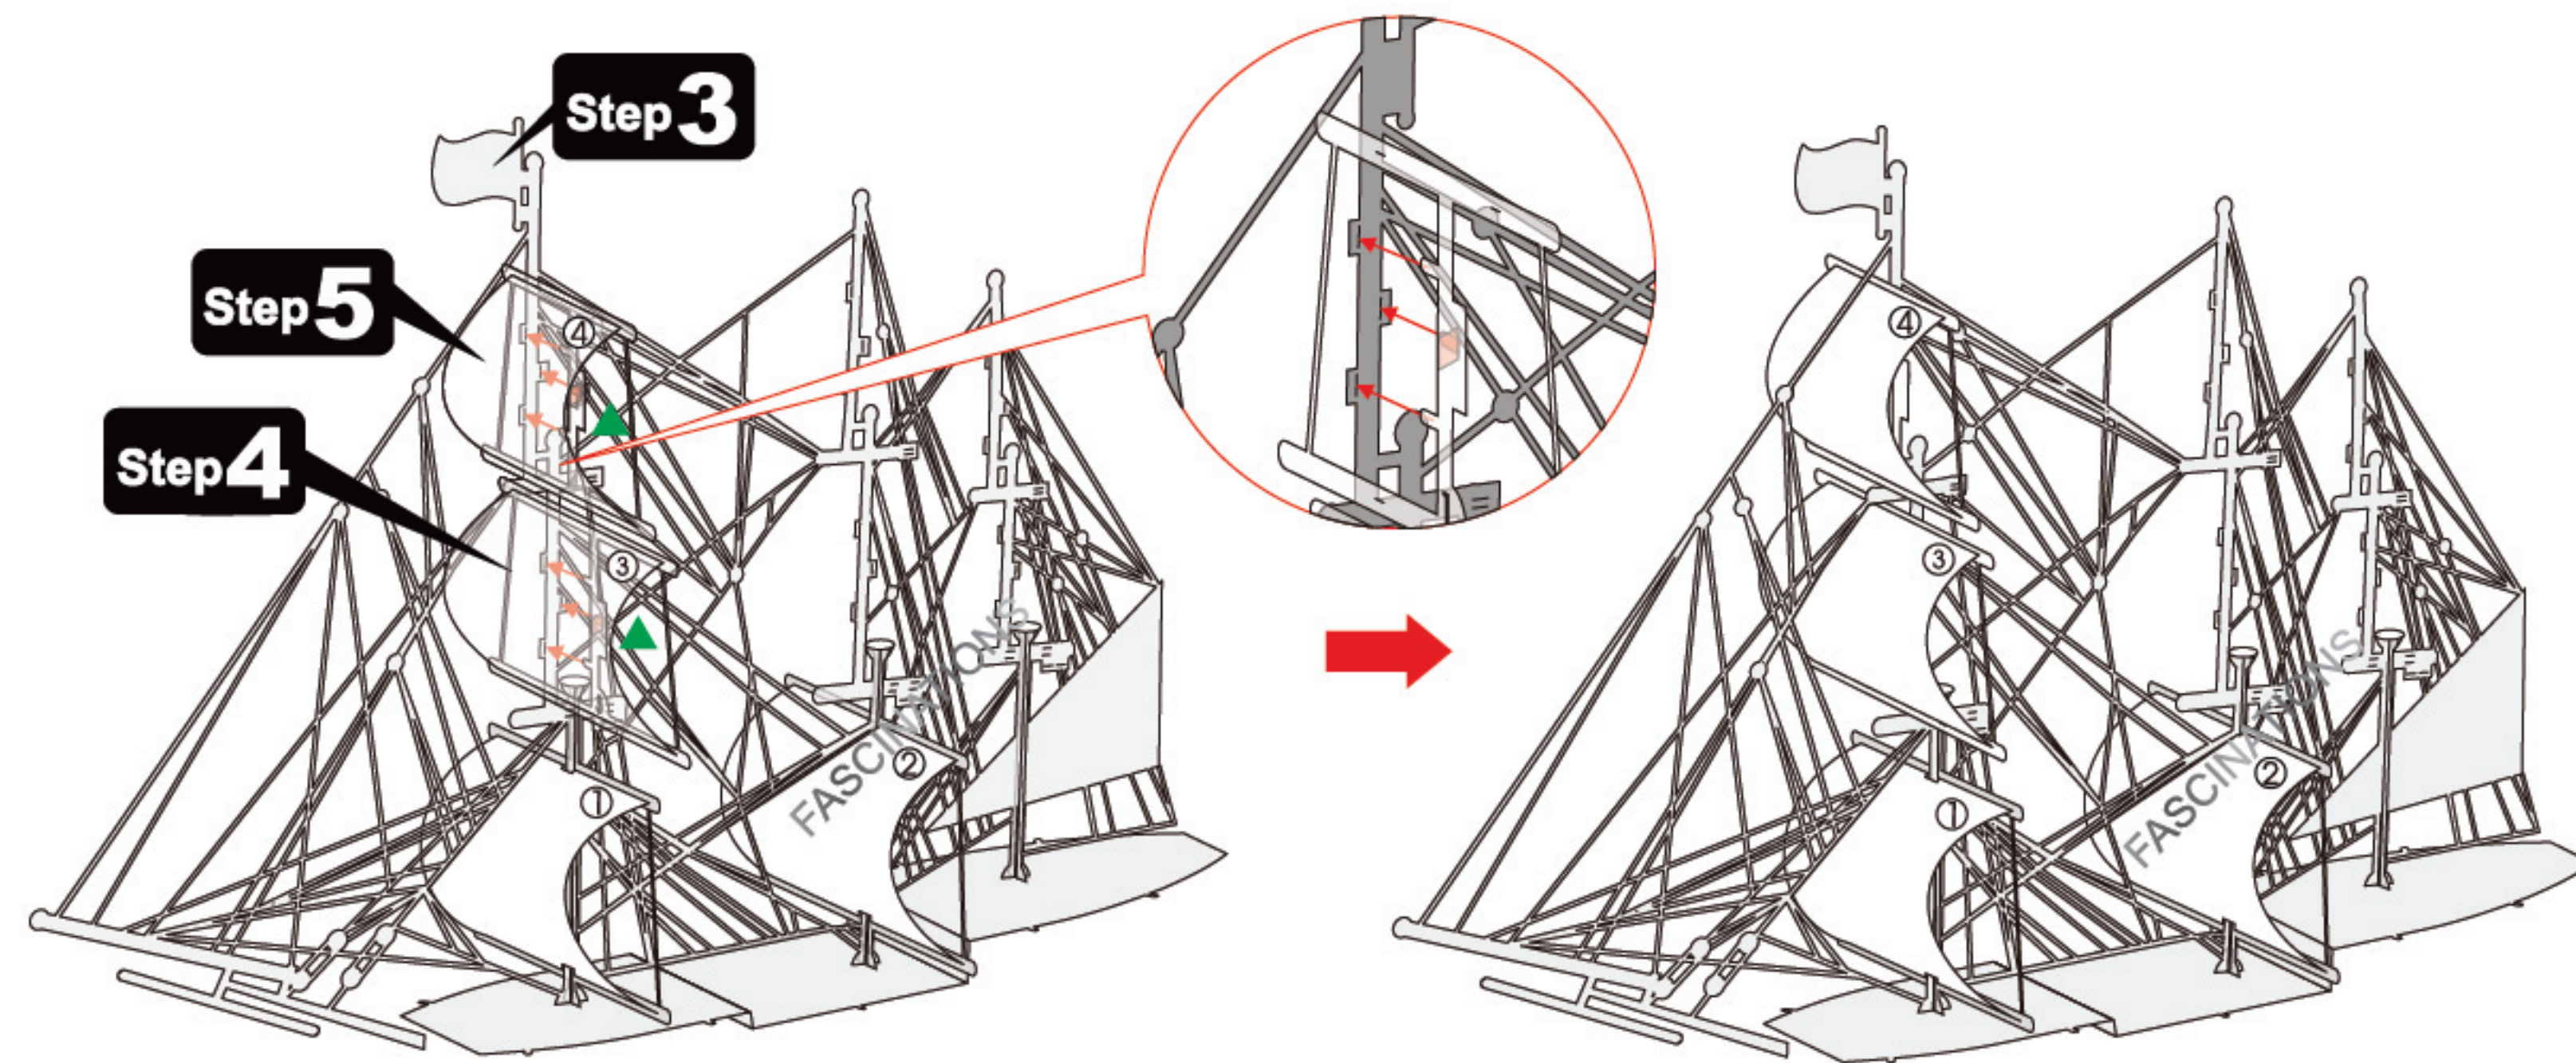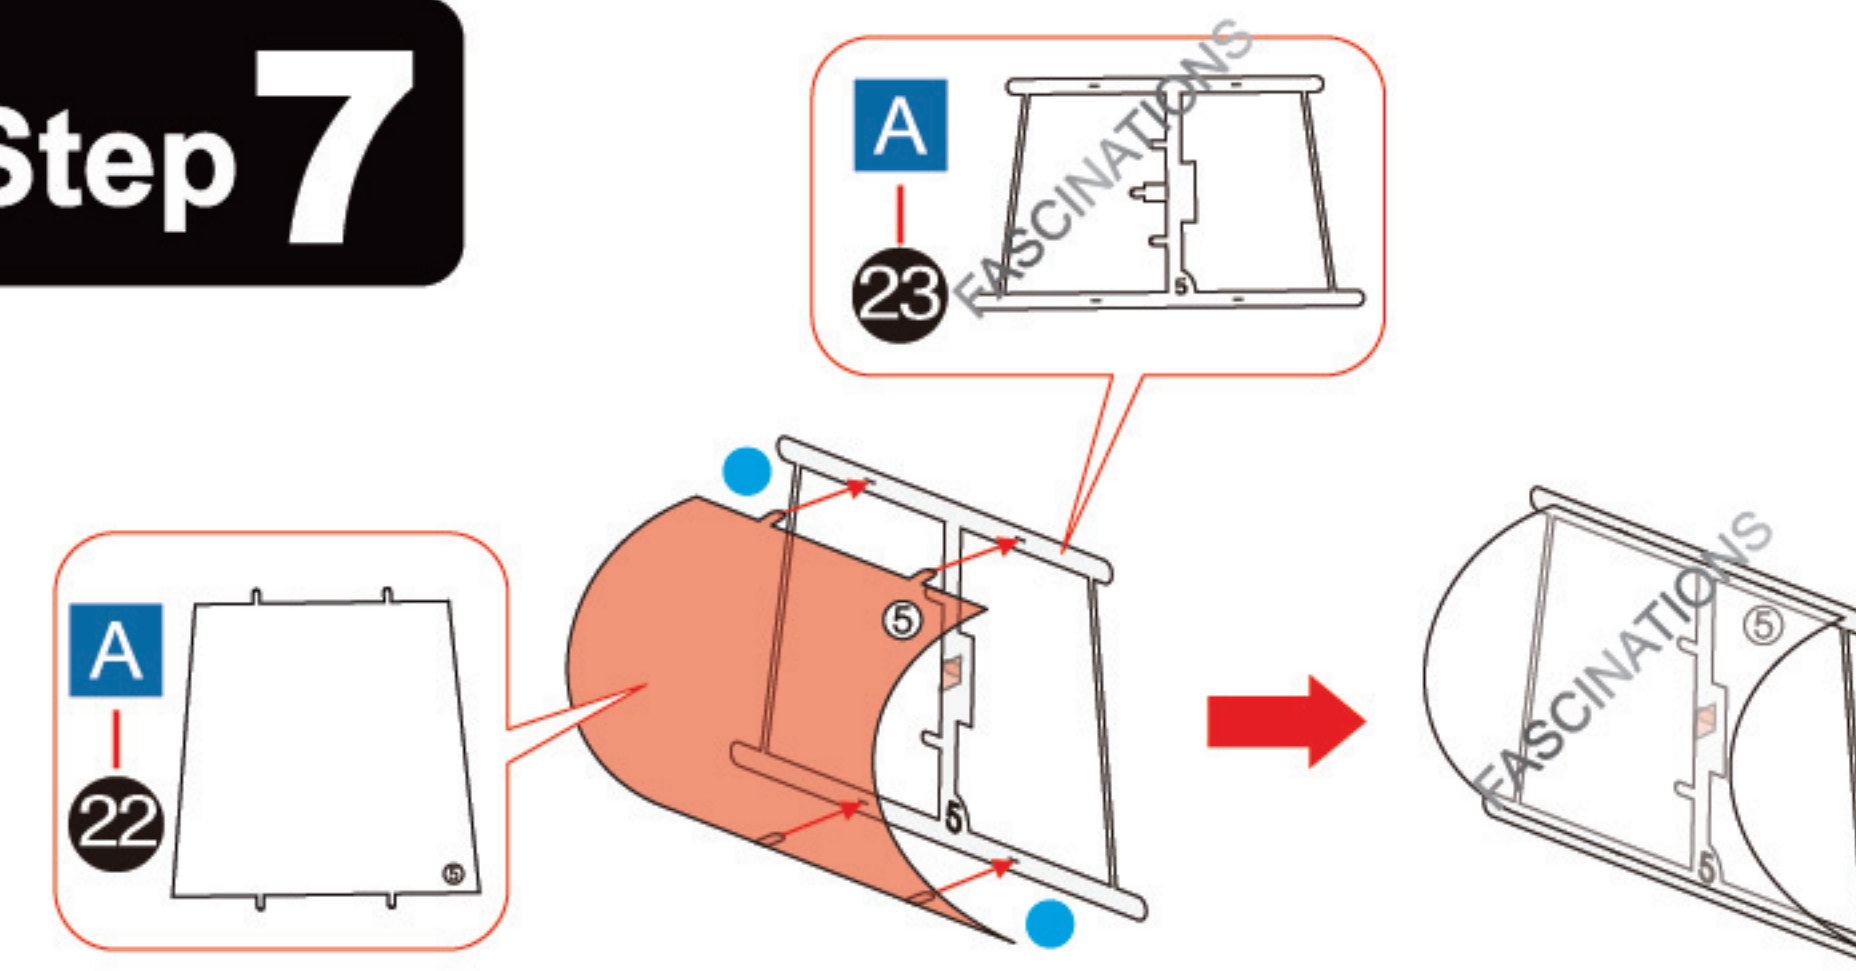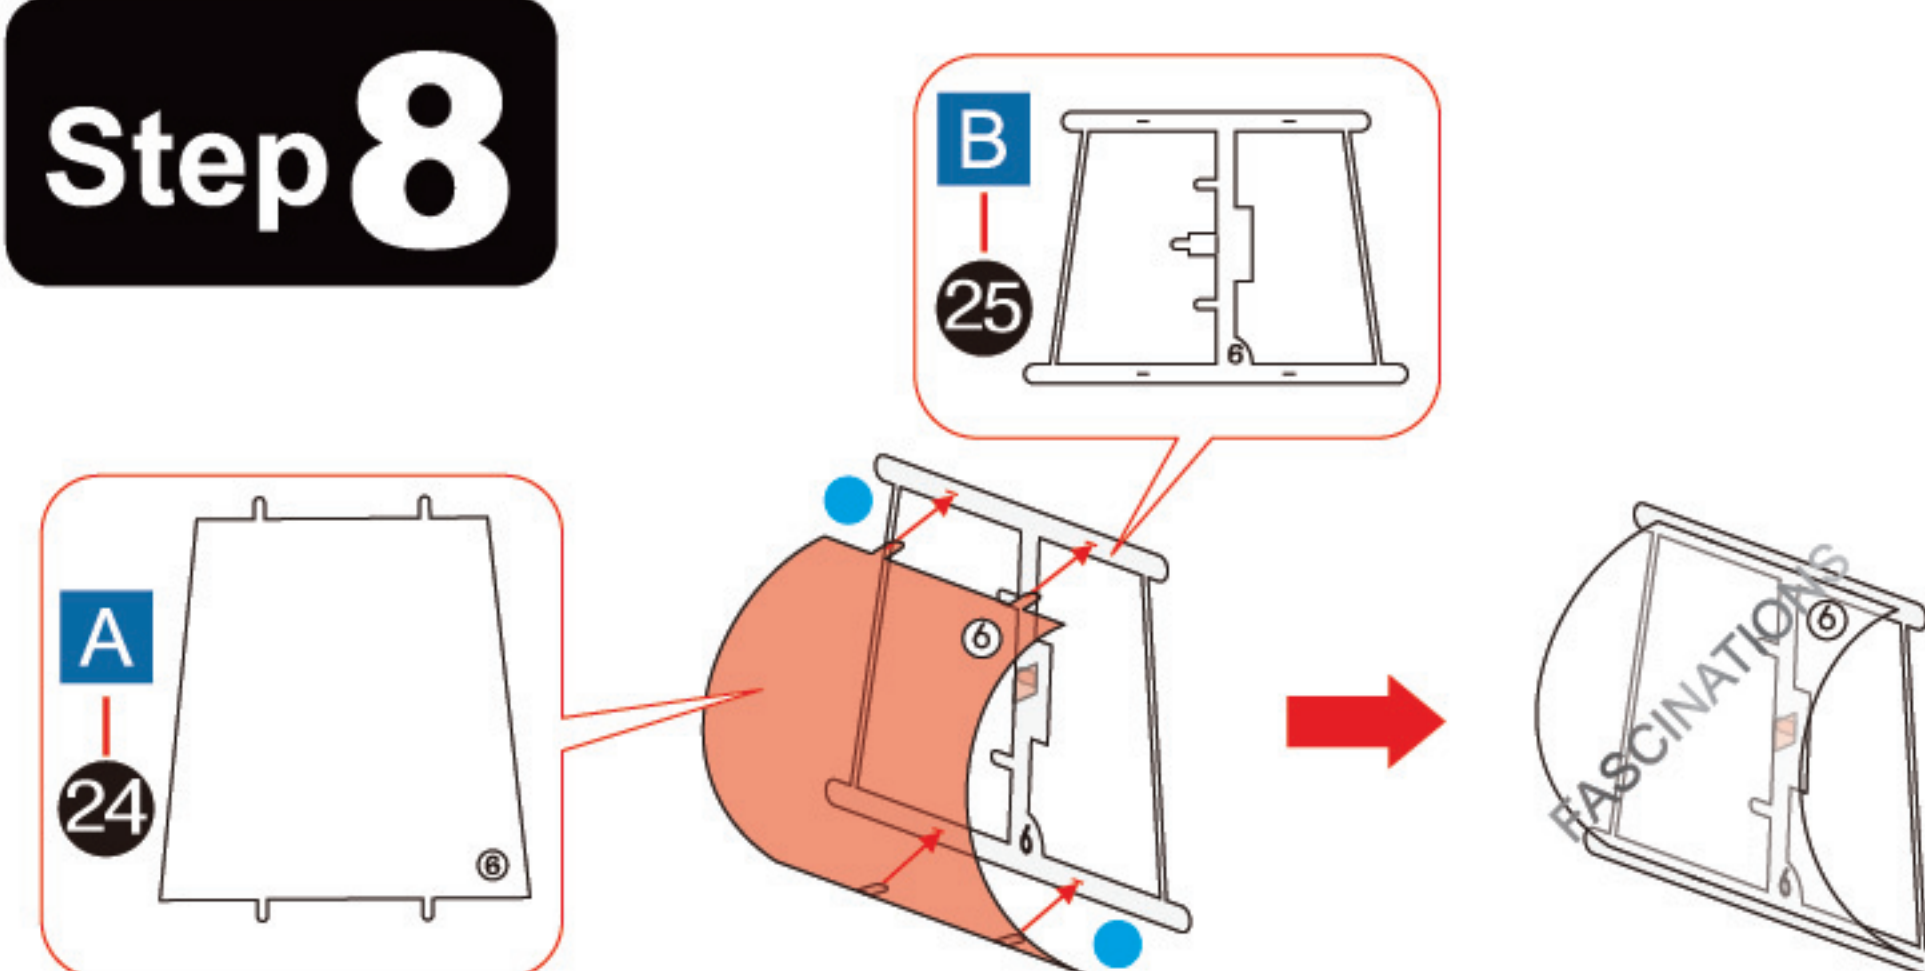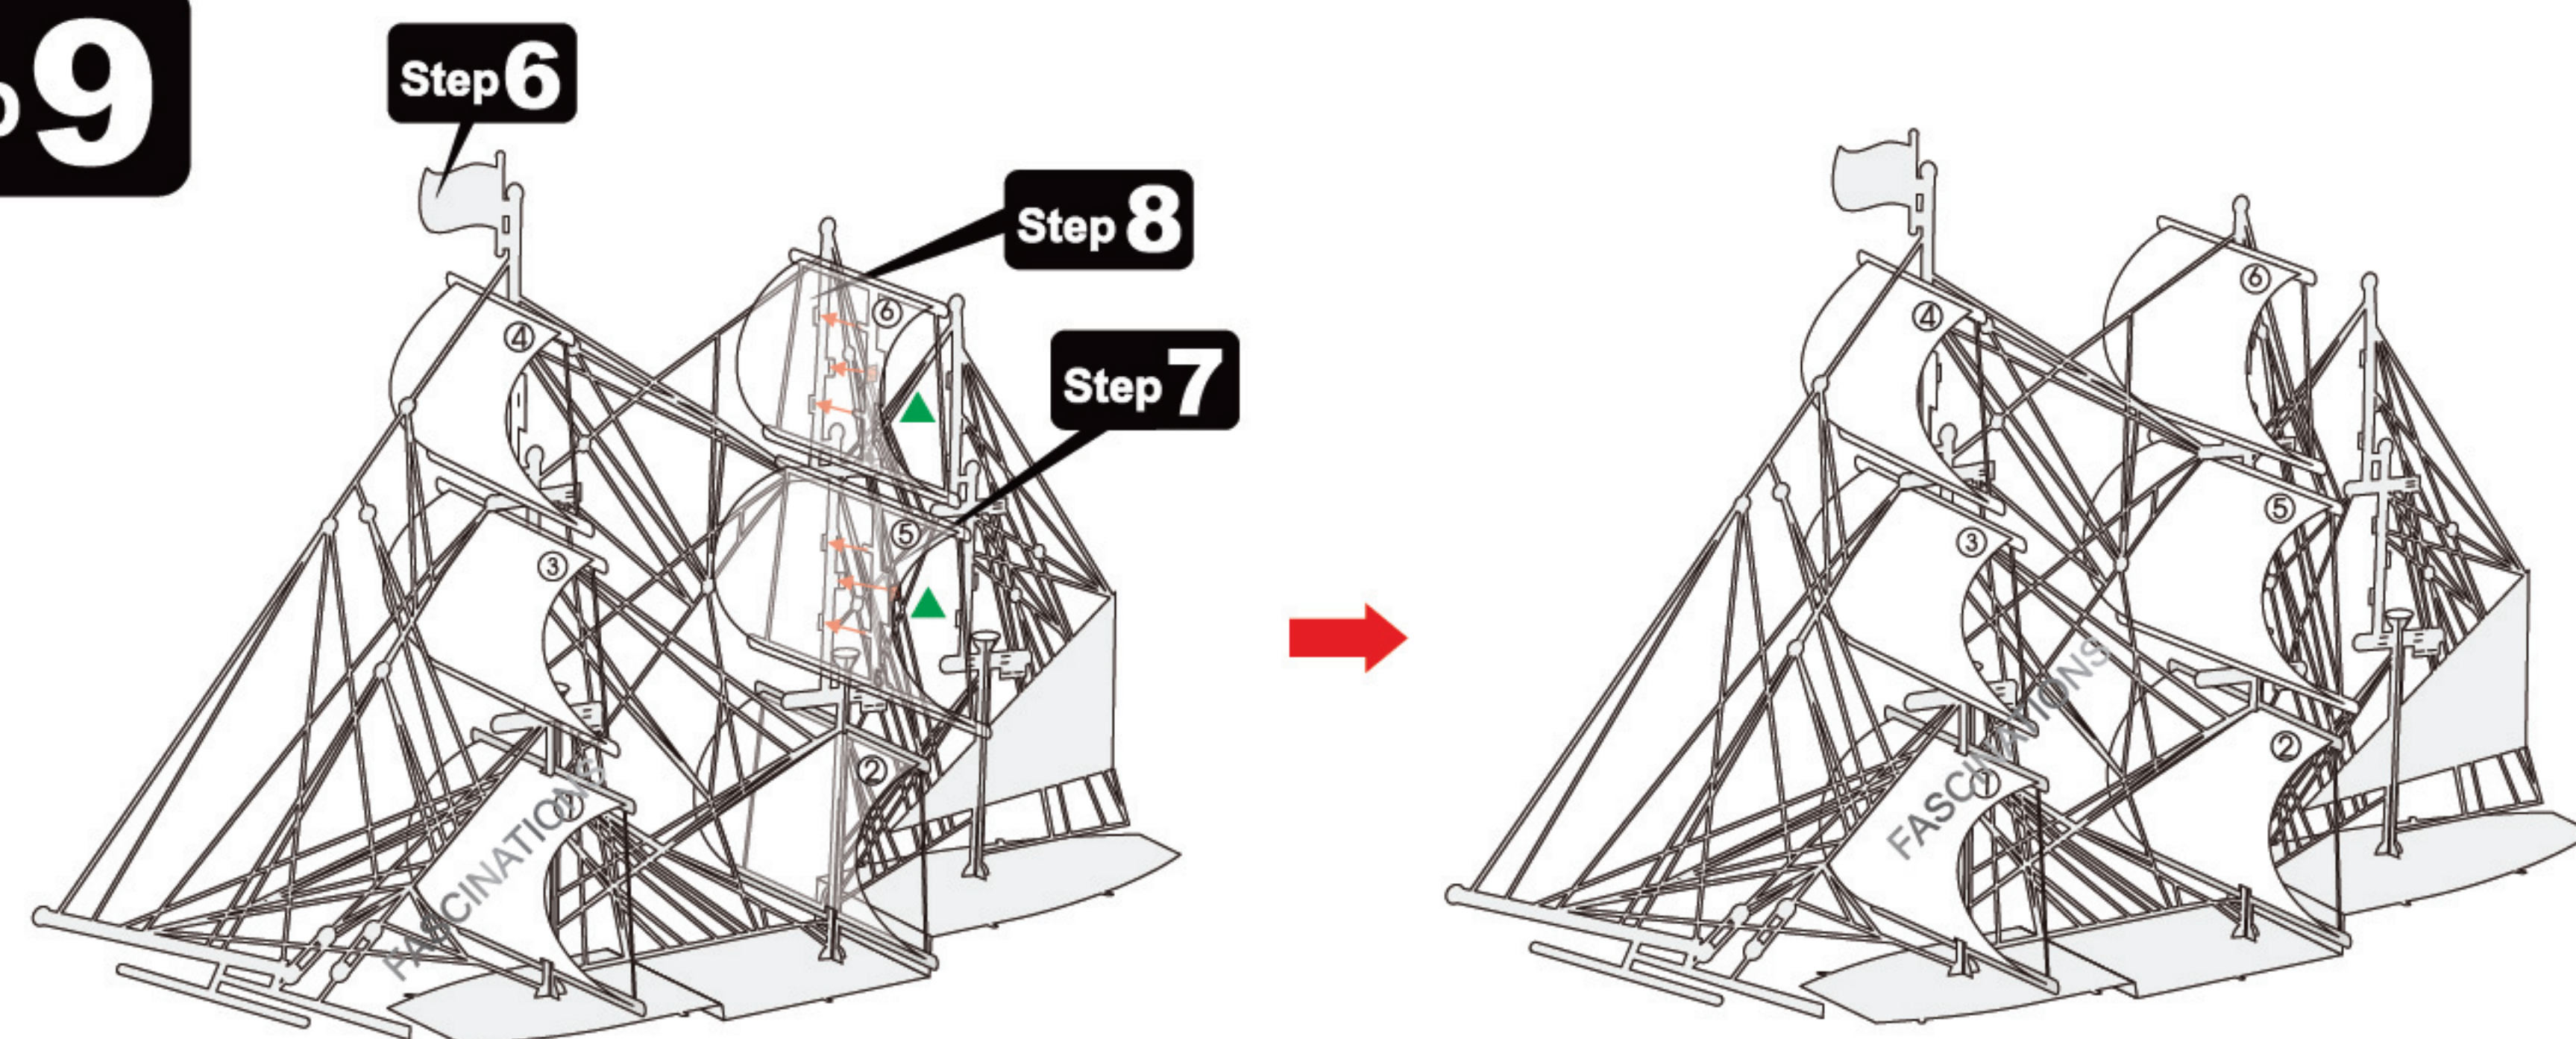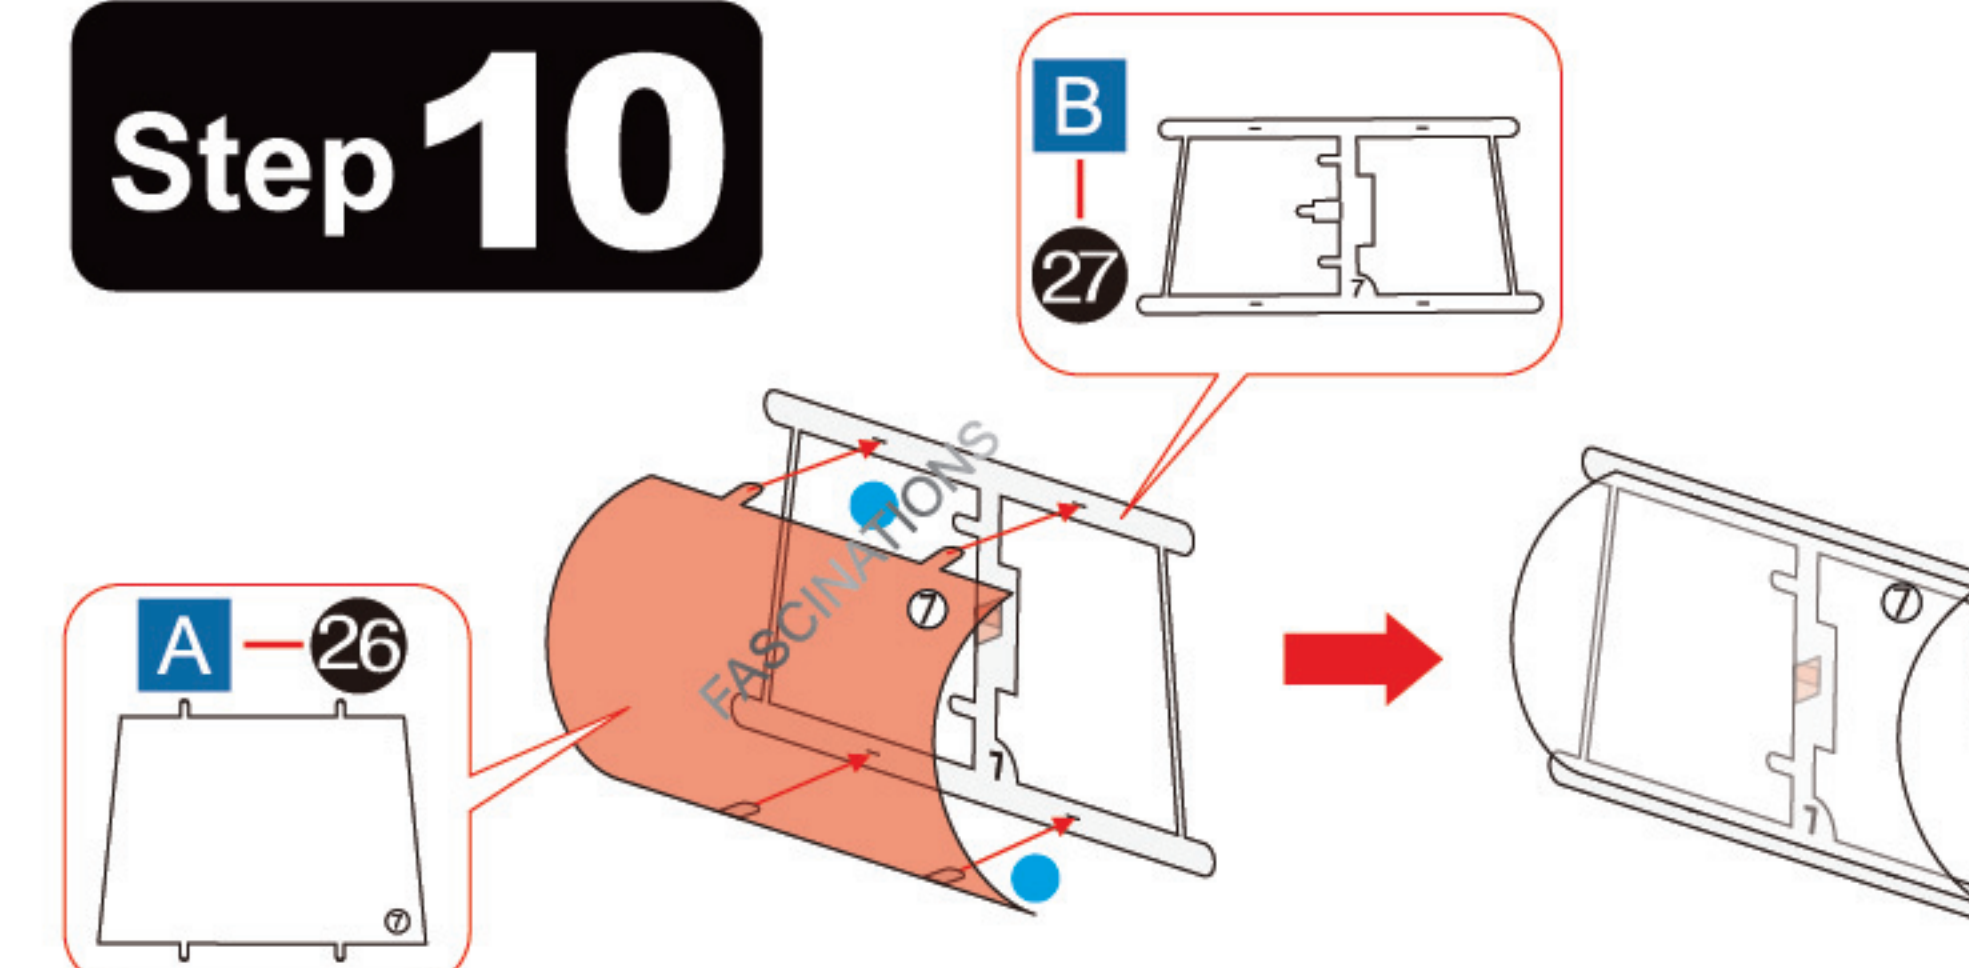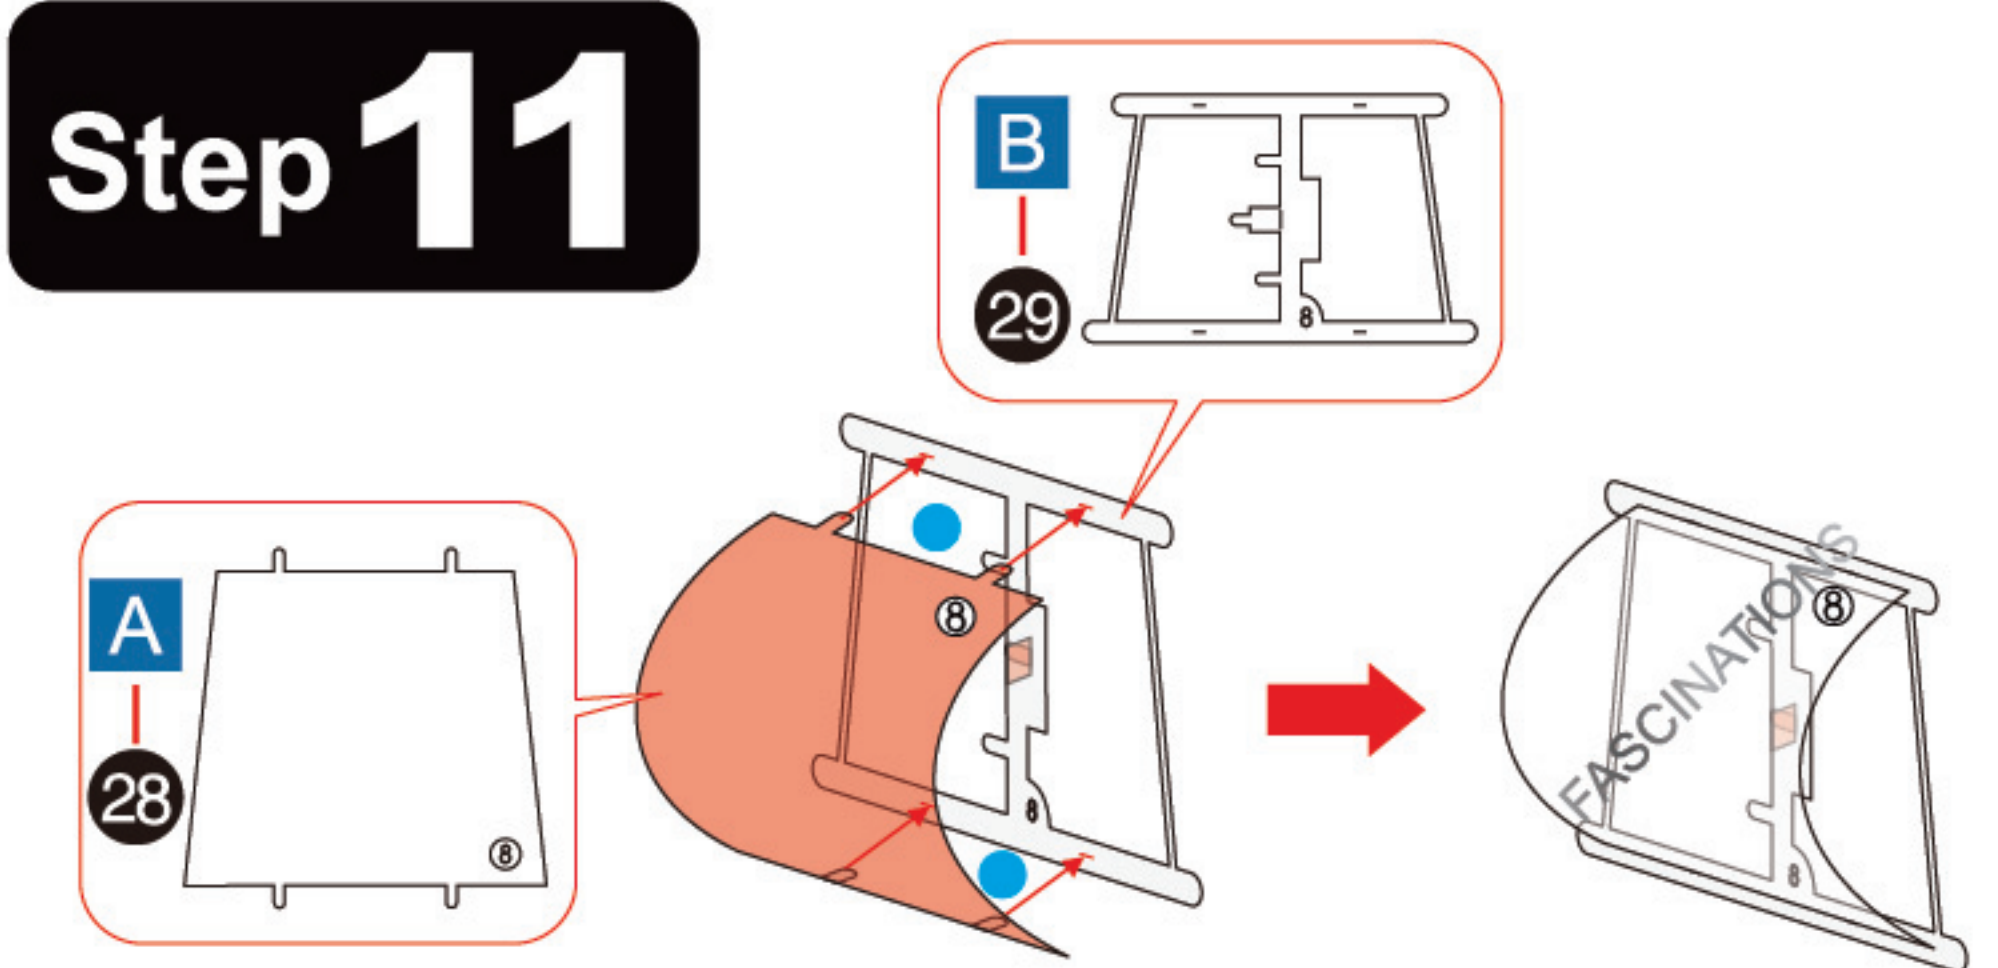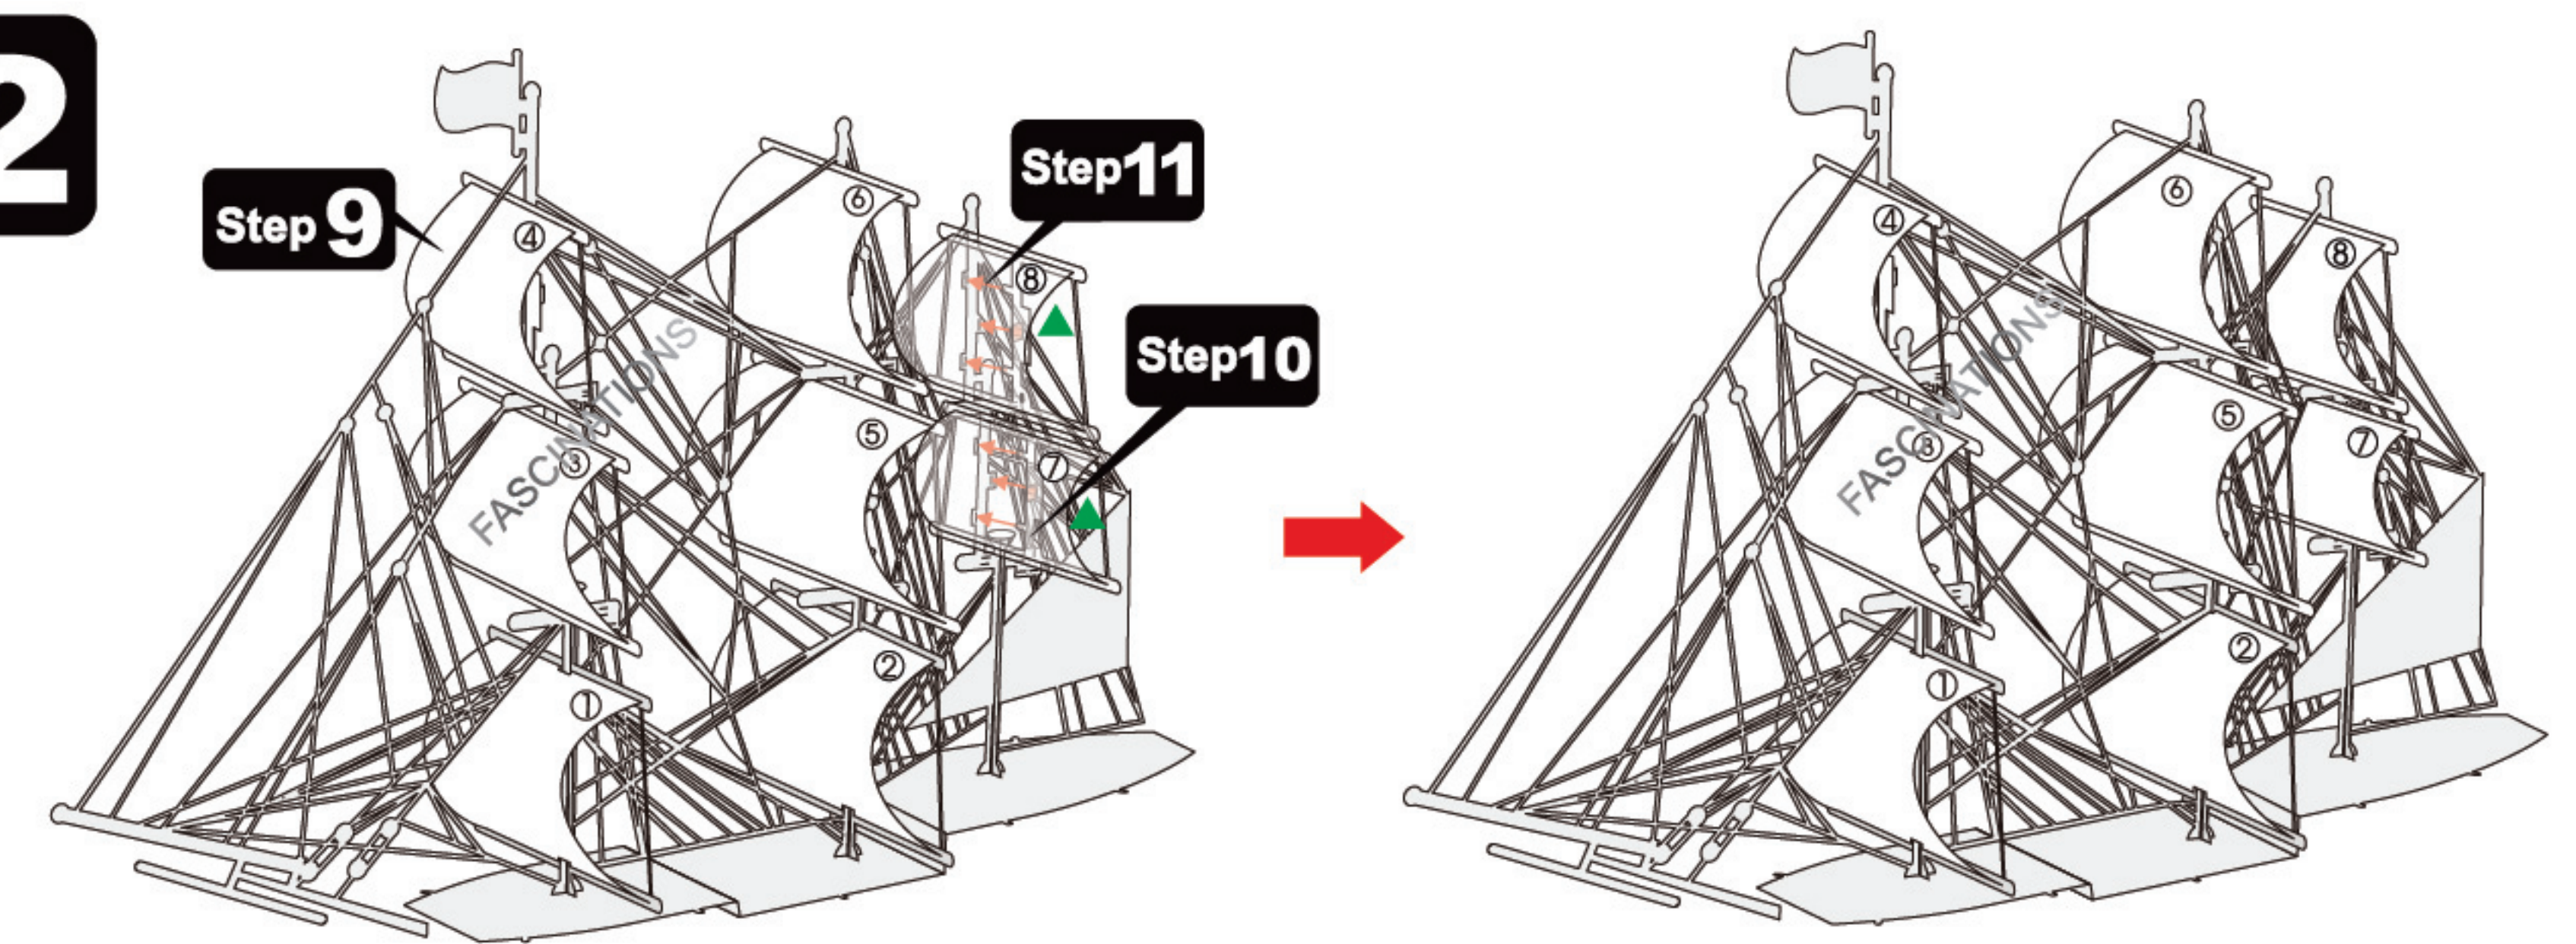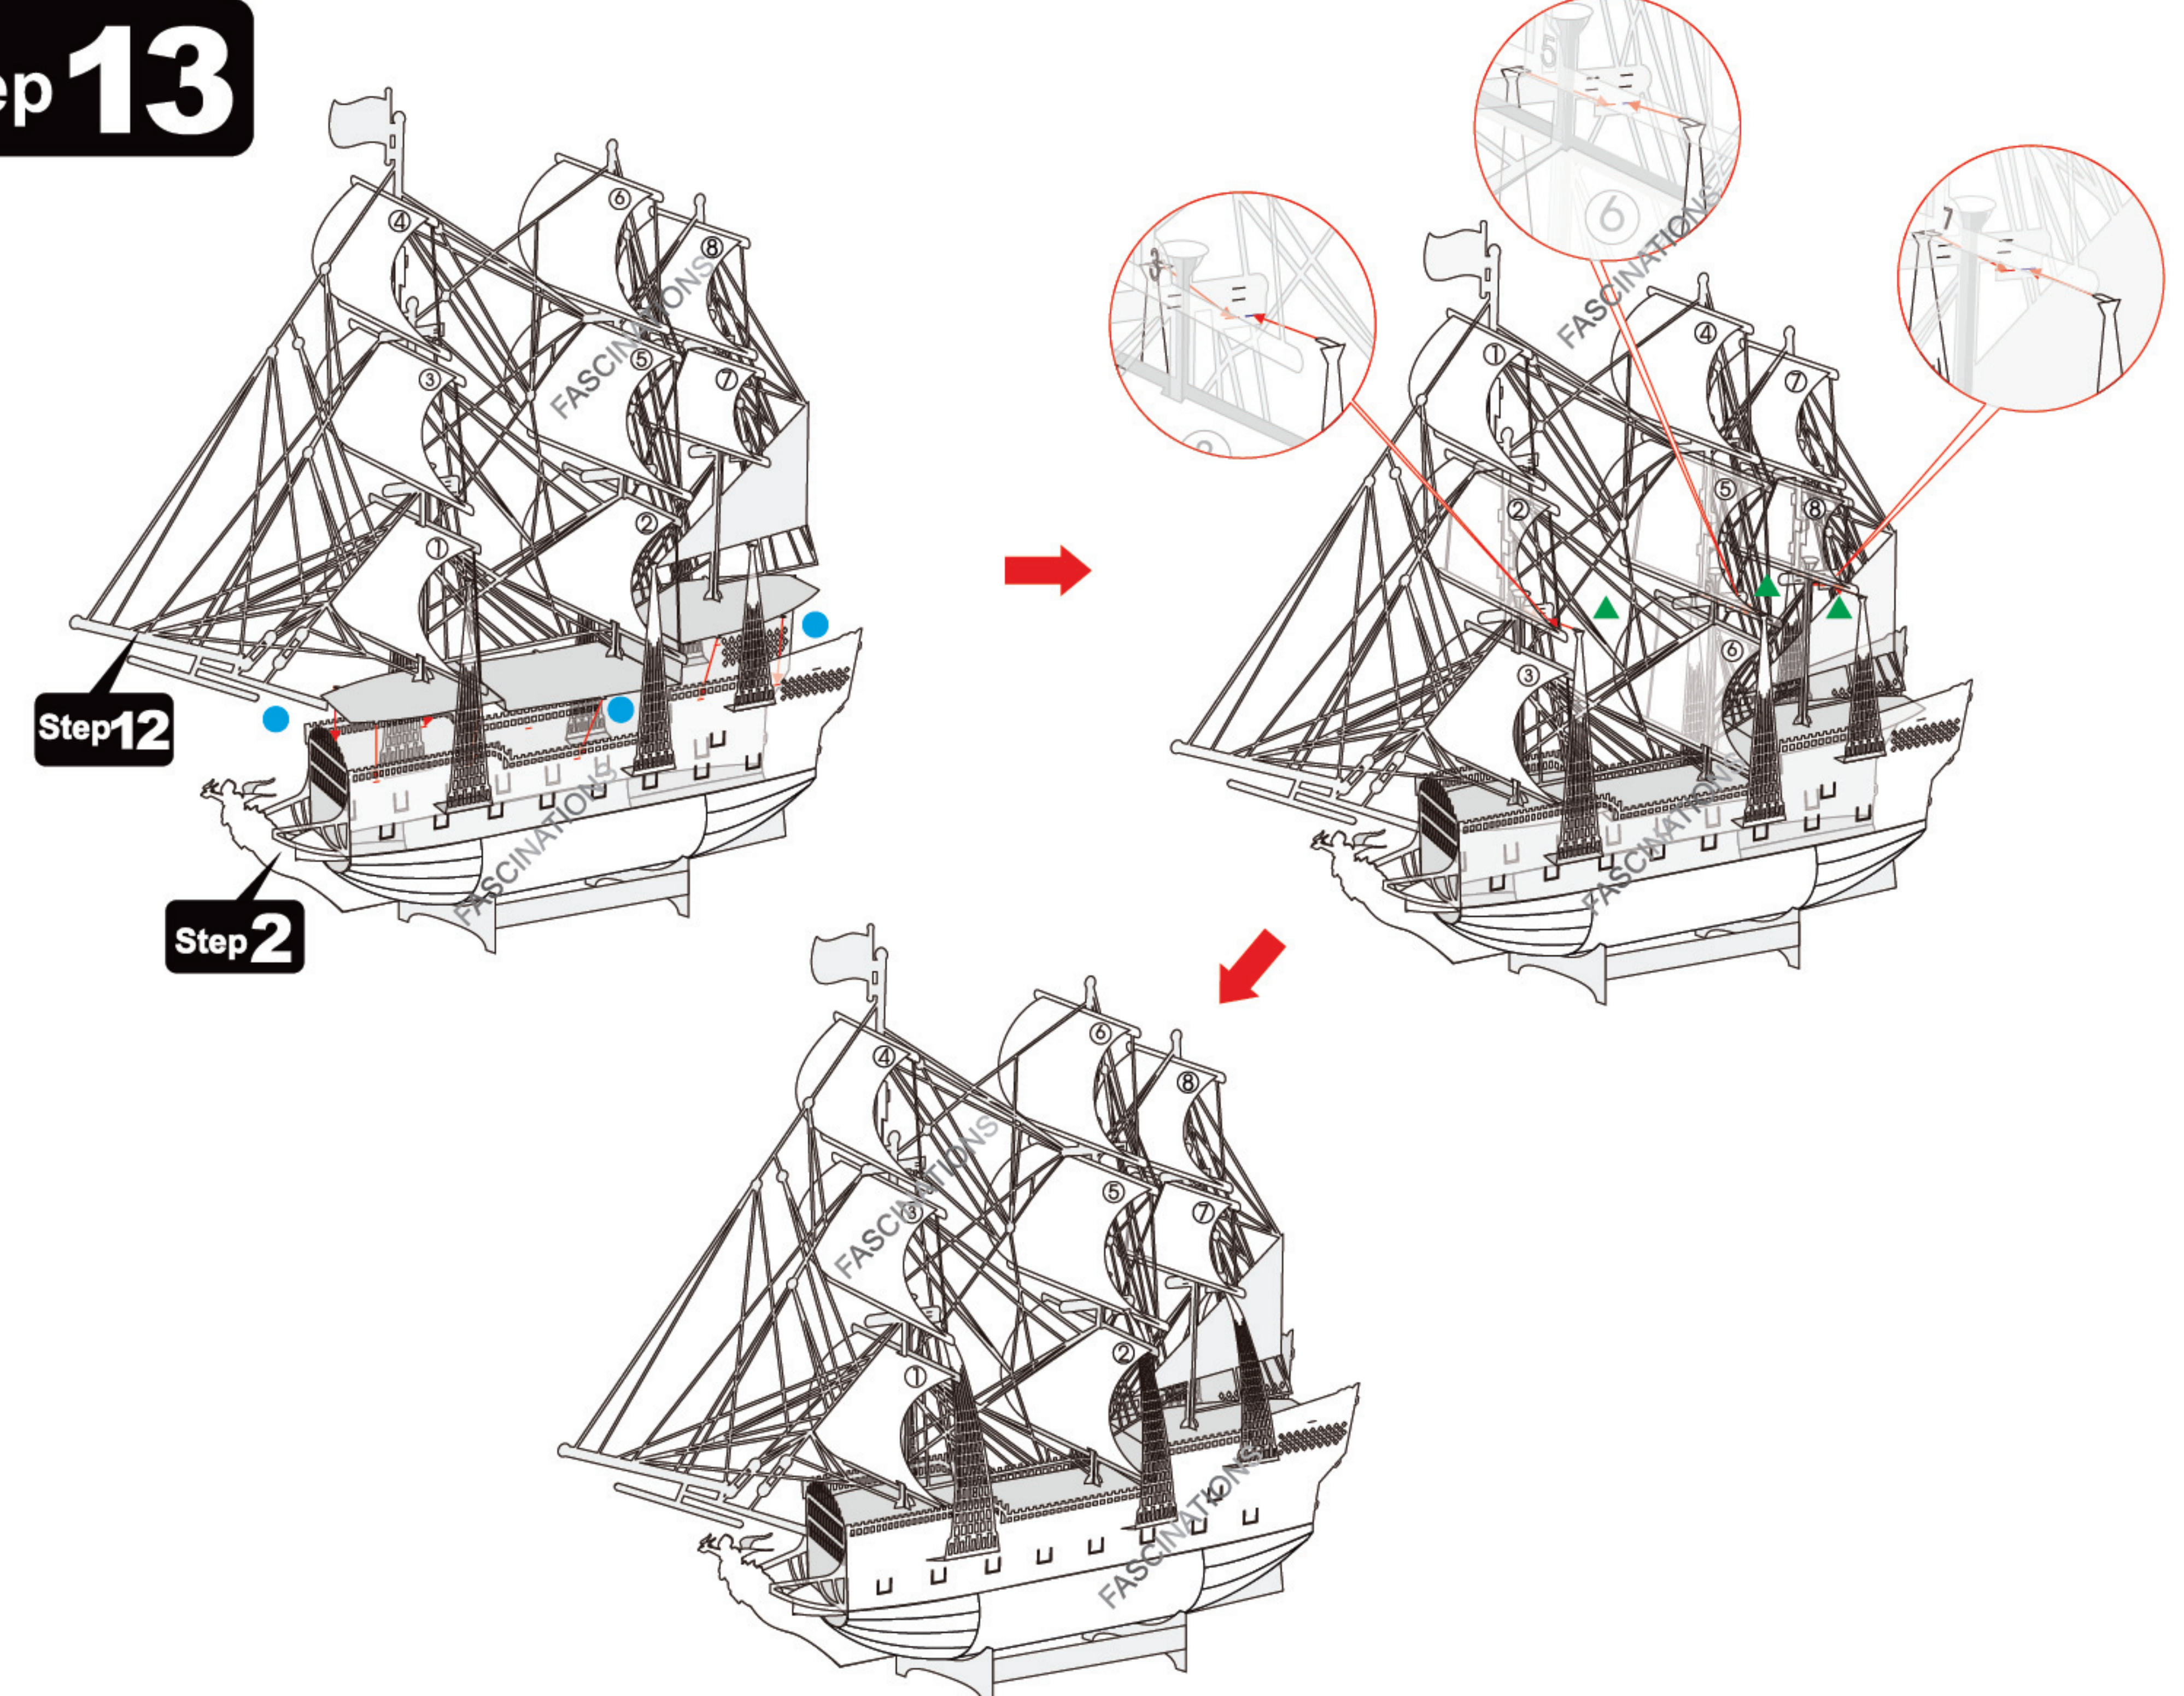Step 4**Step 5****Step 6****Step 7****Step 8****Step 9****Step 10****Step 11****Step 12****Step 13**



Step 14

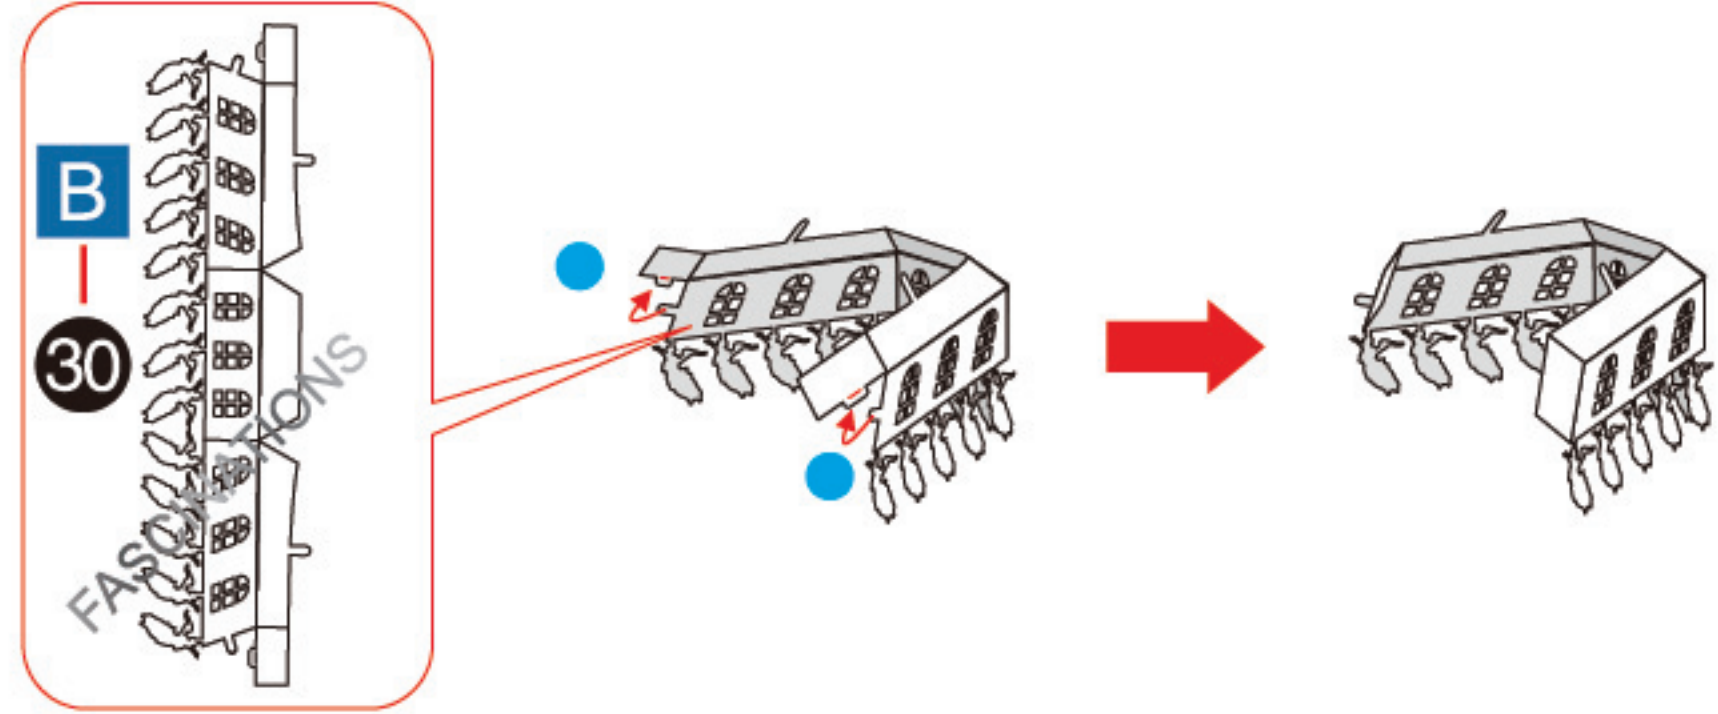

Step 15

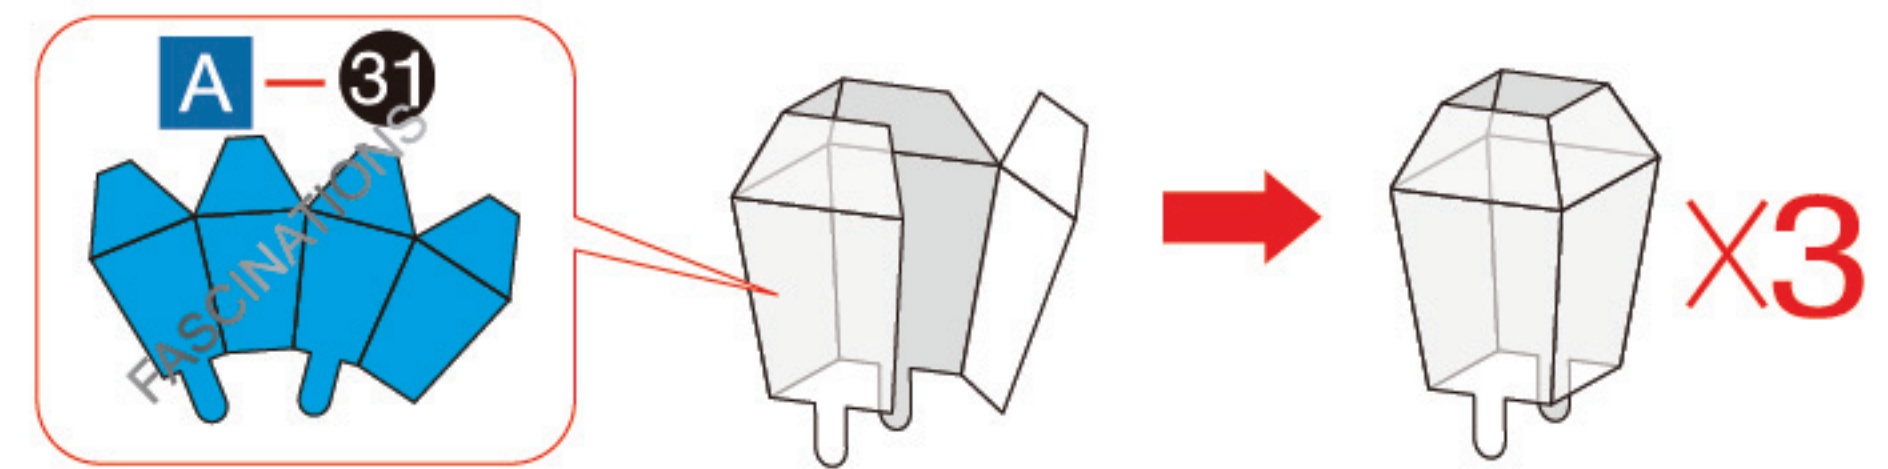

Step 16

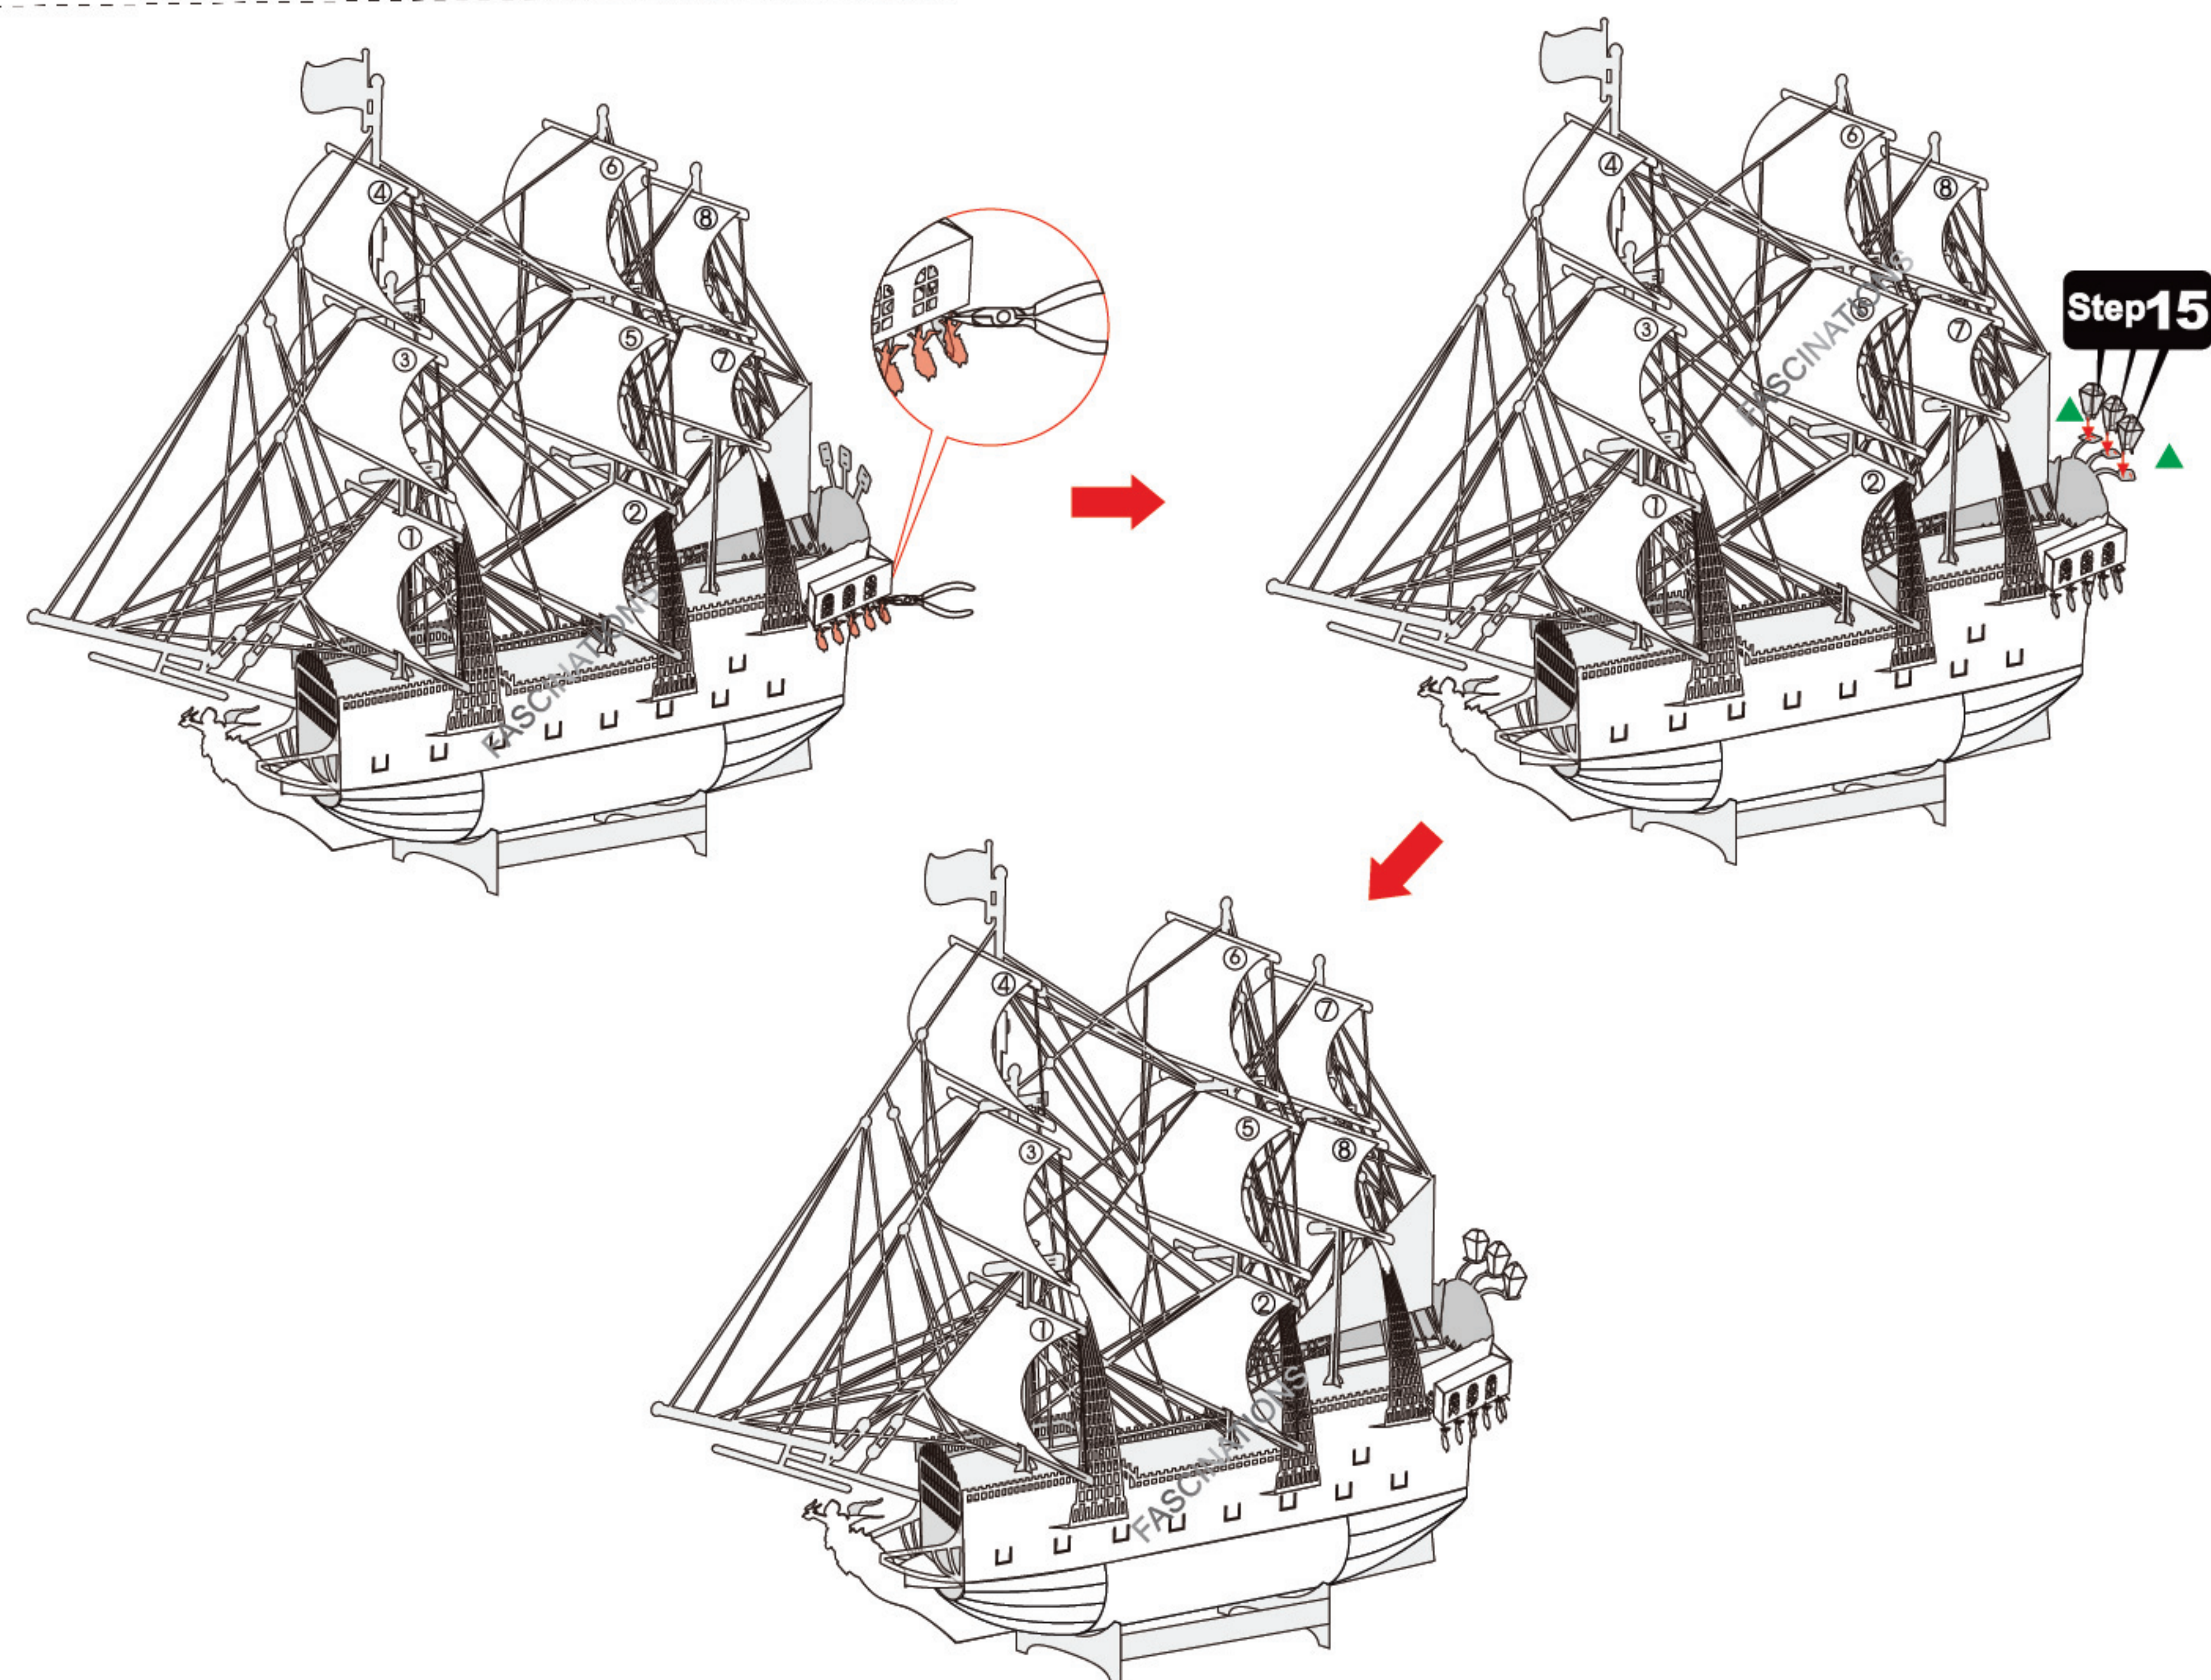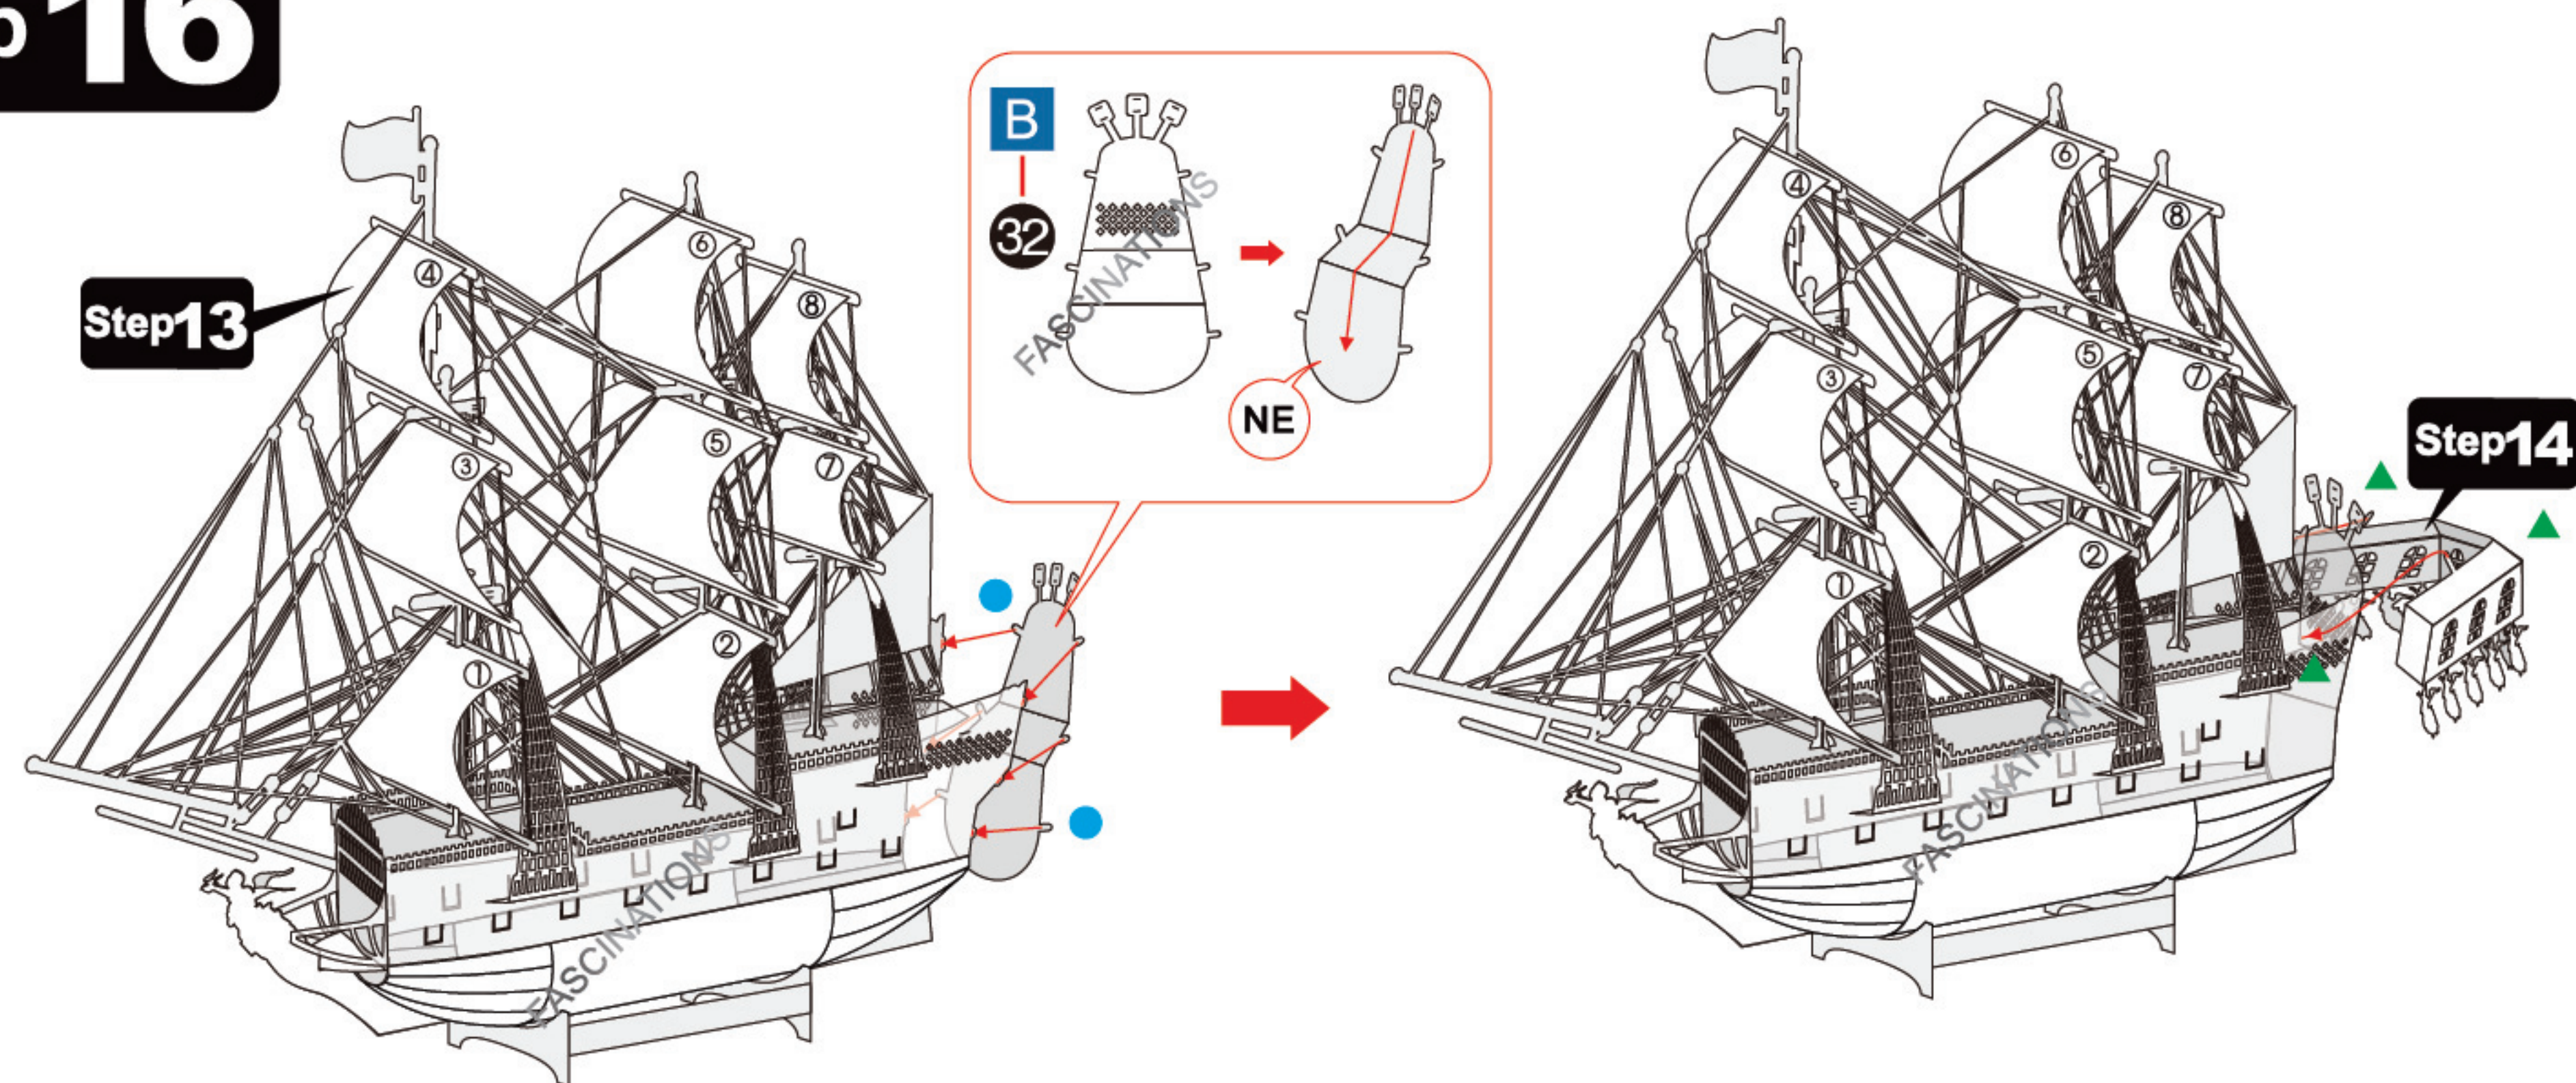

Step 17

