


FOKKER DR.I TRIPLANE

MMS210



is highly recommended that you visit www.metalearth.com/360/mms210 to see the completed model before assembling your own

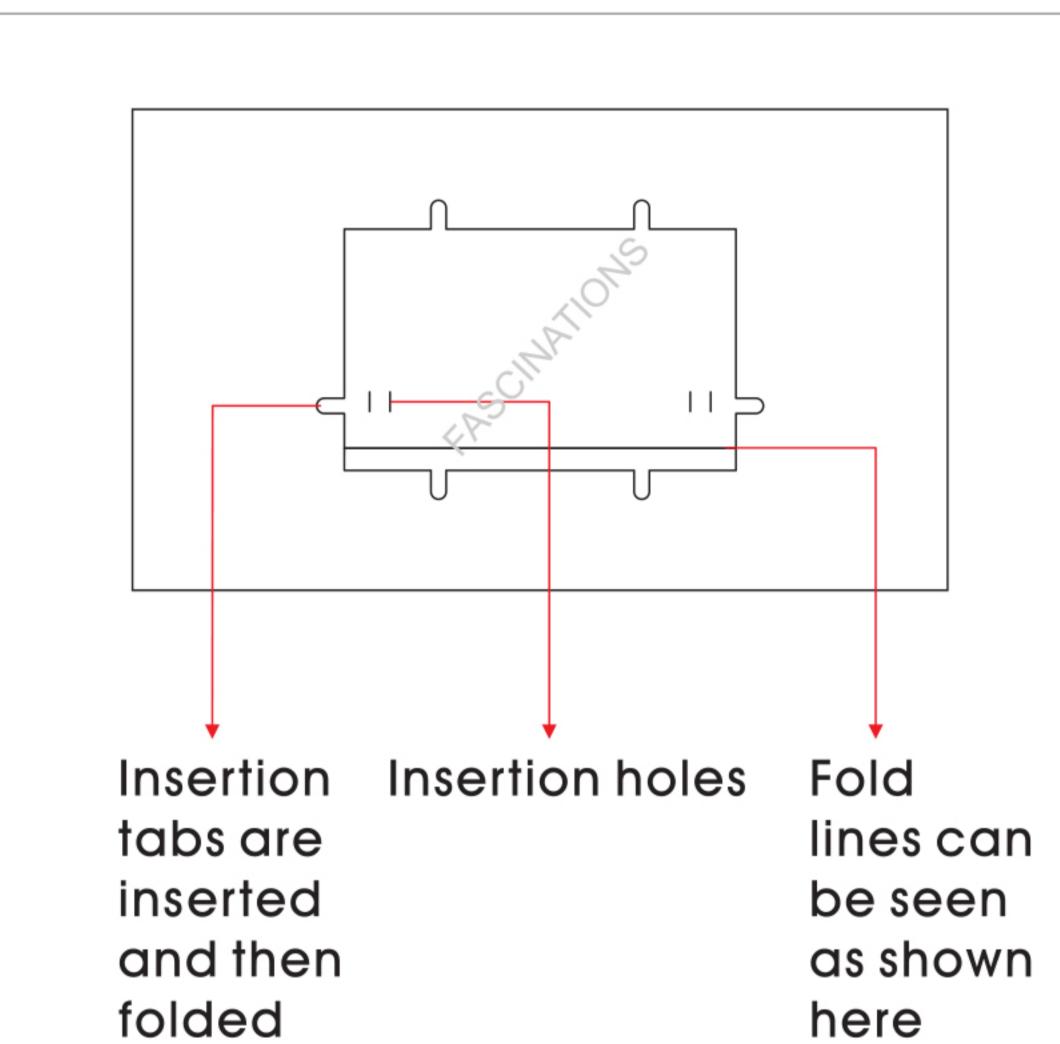





Non-engraved /Silver side



Attention point



Insert tab and bend 90 degrees

Insert tab and twist 90 degrees


Assembly tip:

If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish


Recommended tools:

-Wire cutters: helpful for taking parts from the metal sheets.

Page 1

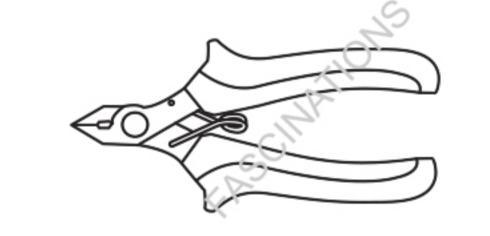

-Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.

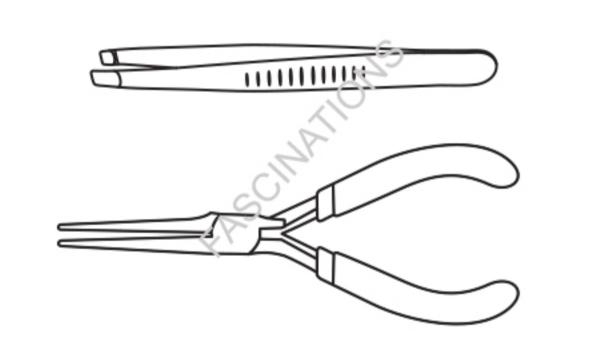

Metal sheets Parts that are in the same color are duplicates In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed

