


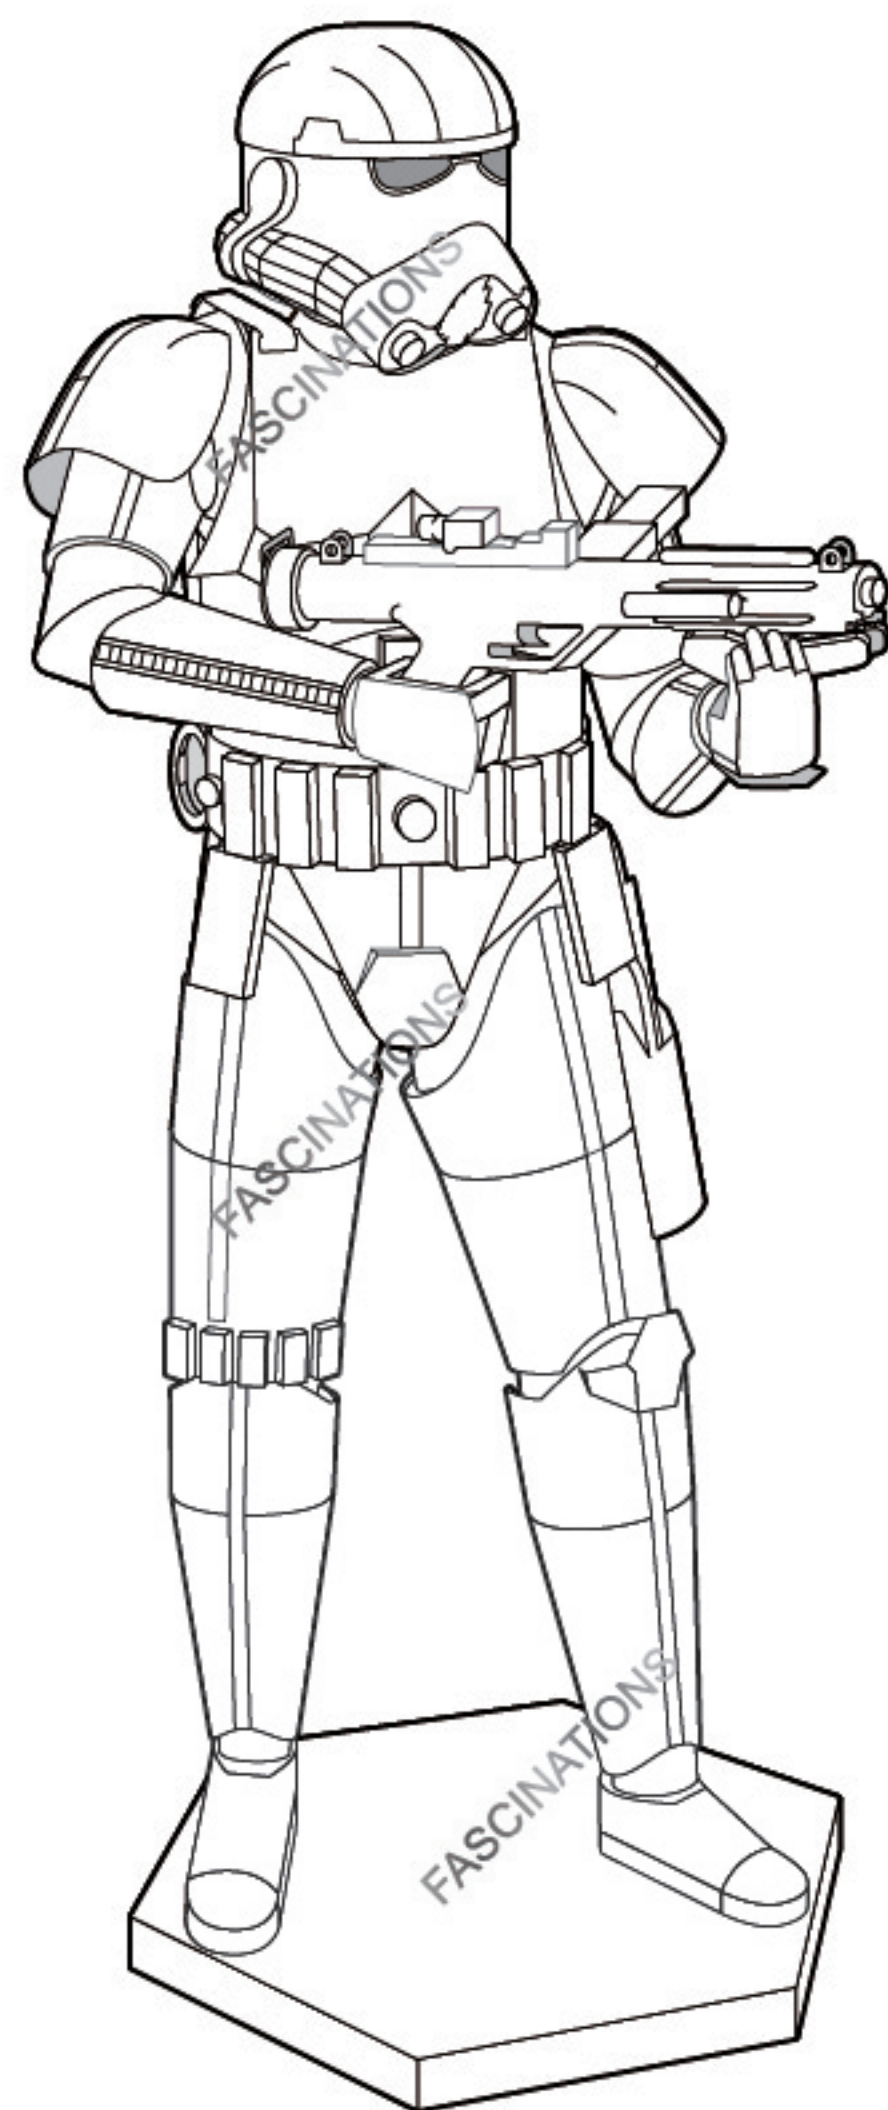


It is highly recommended that you visit www.metalearth.com/360/icx134 to see the completed model before assembling your own

ICX 134 STORMTROOPER



TO CREATE THE BEST CONNECTIONS

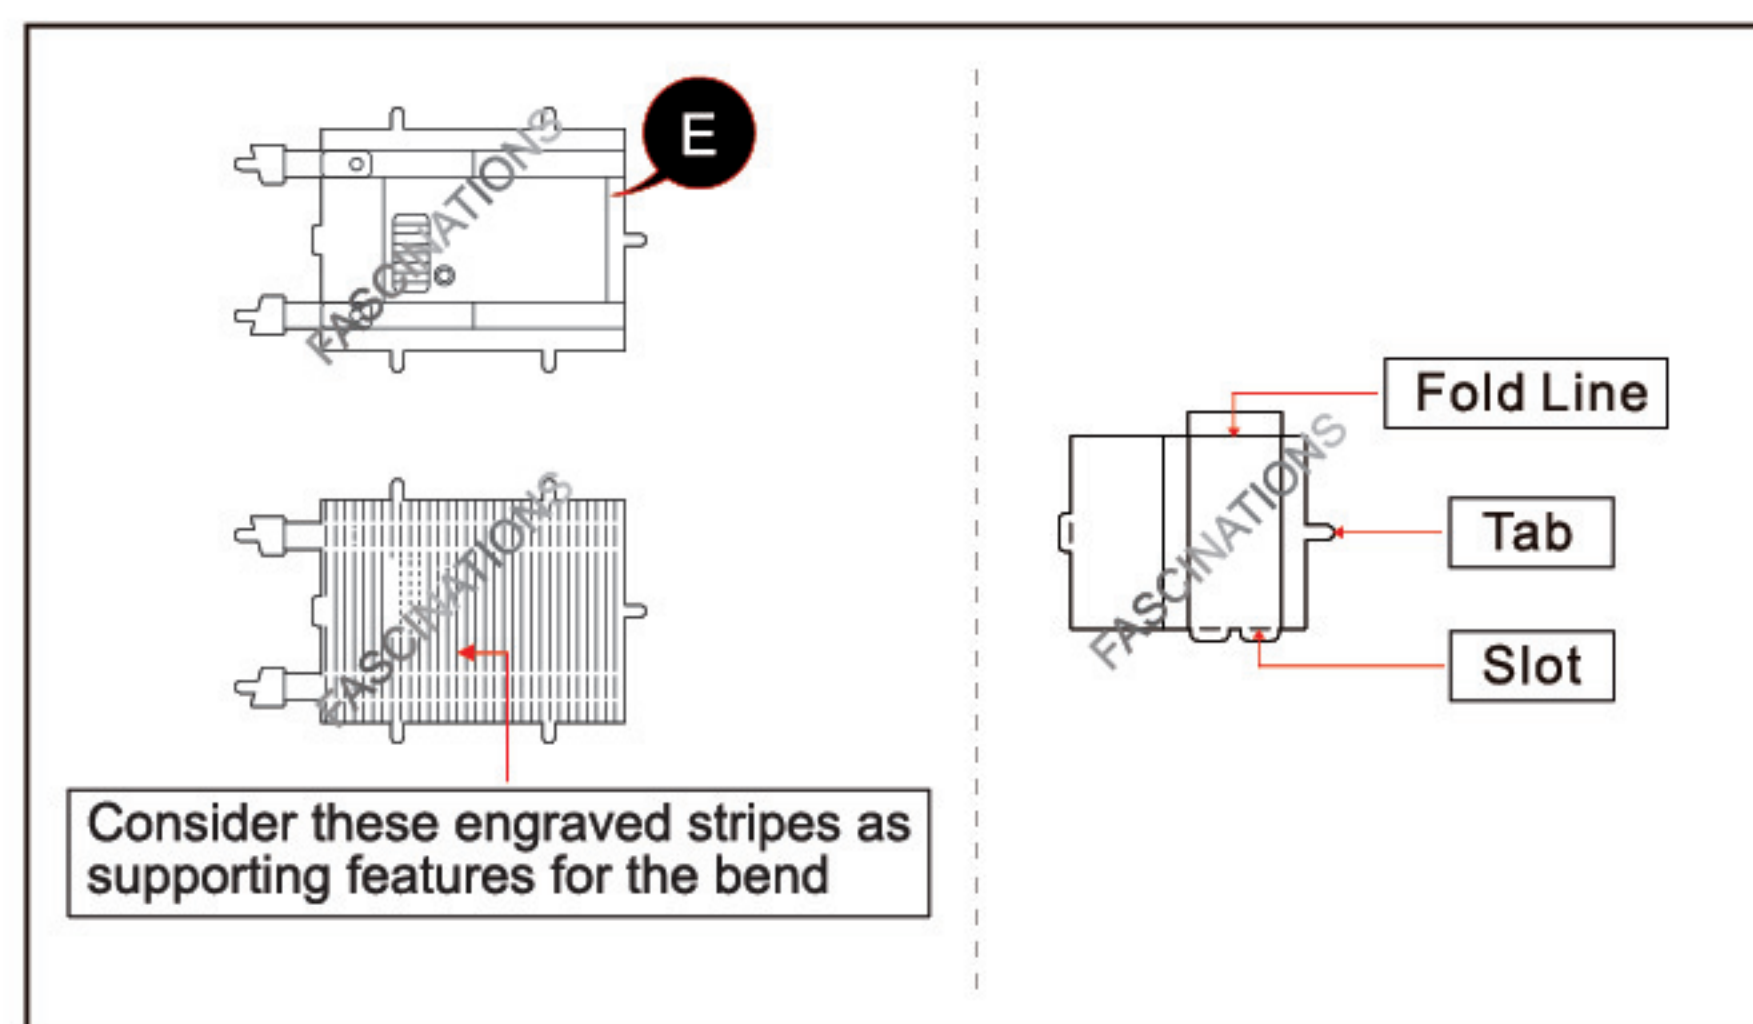

Legends:

- E** Engraved/Color side
- NE** Non-engraved/Silver side
- Attention point
- Insert tab and bend 90 degrees
- Insert tab and twist 90 degrees

Assembly tip:


If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish

Recommended tools:

-Wire cutters: helpful for taking parts from the metal sheets.





-Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.

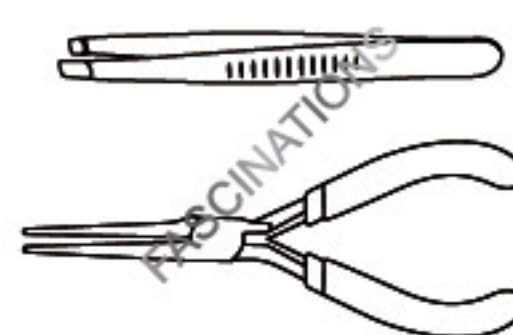

ASSEMBLY STEPS


Step 1

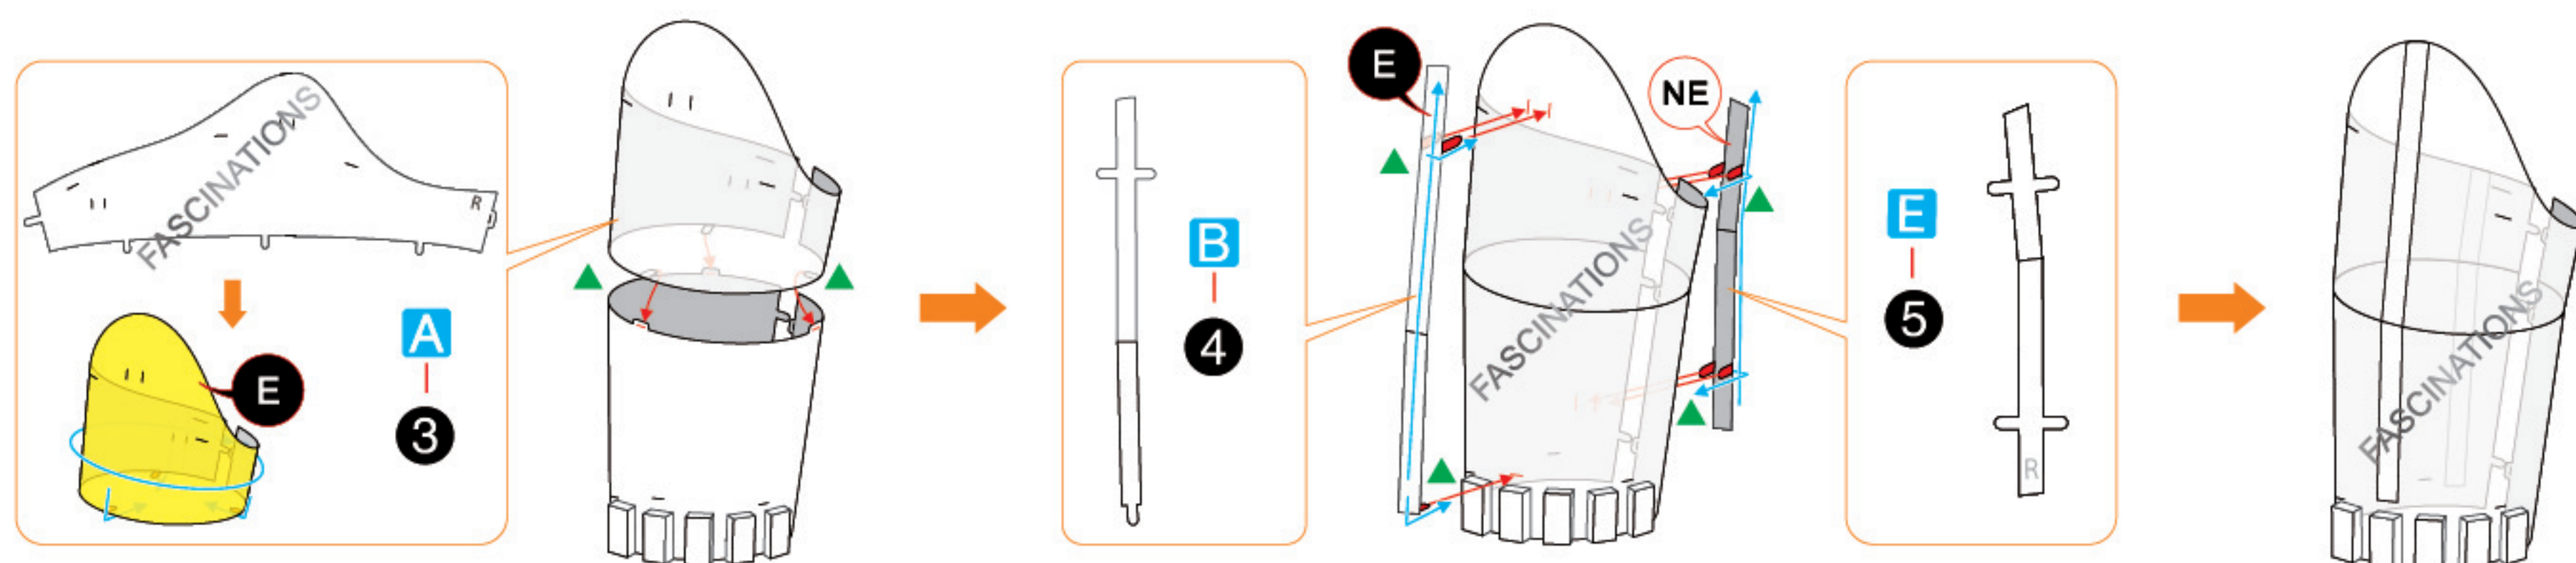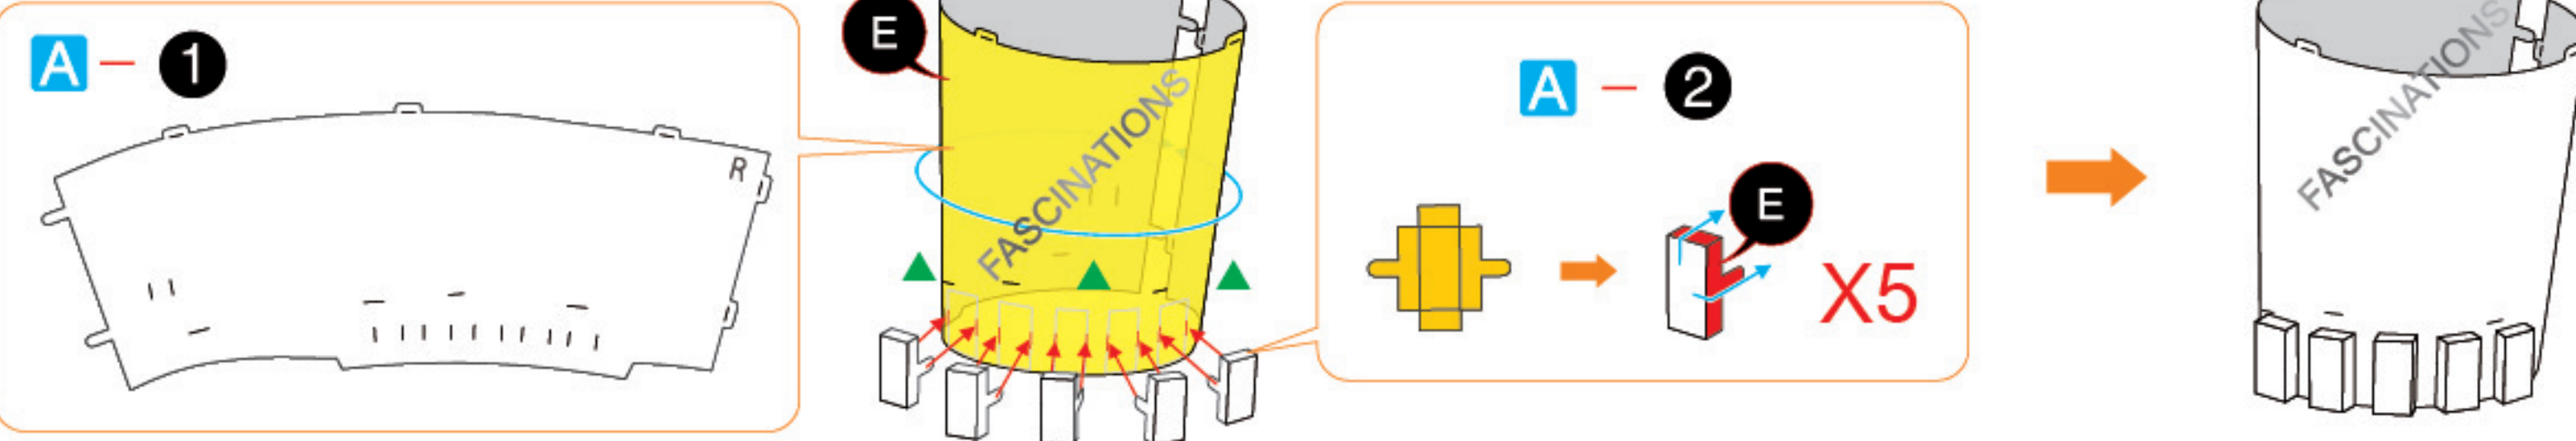


In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed.

METAL SHEETS


A

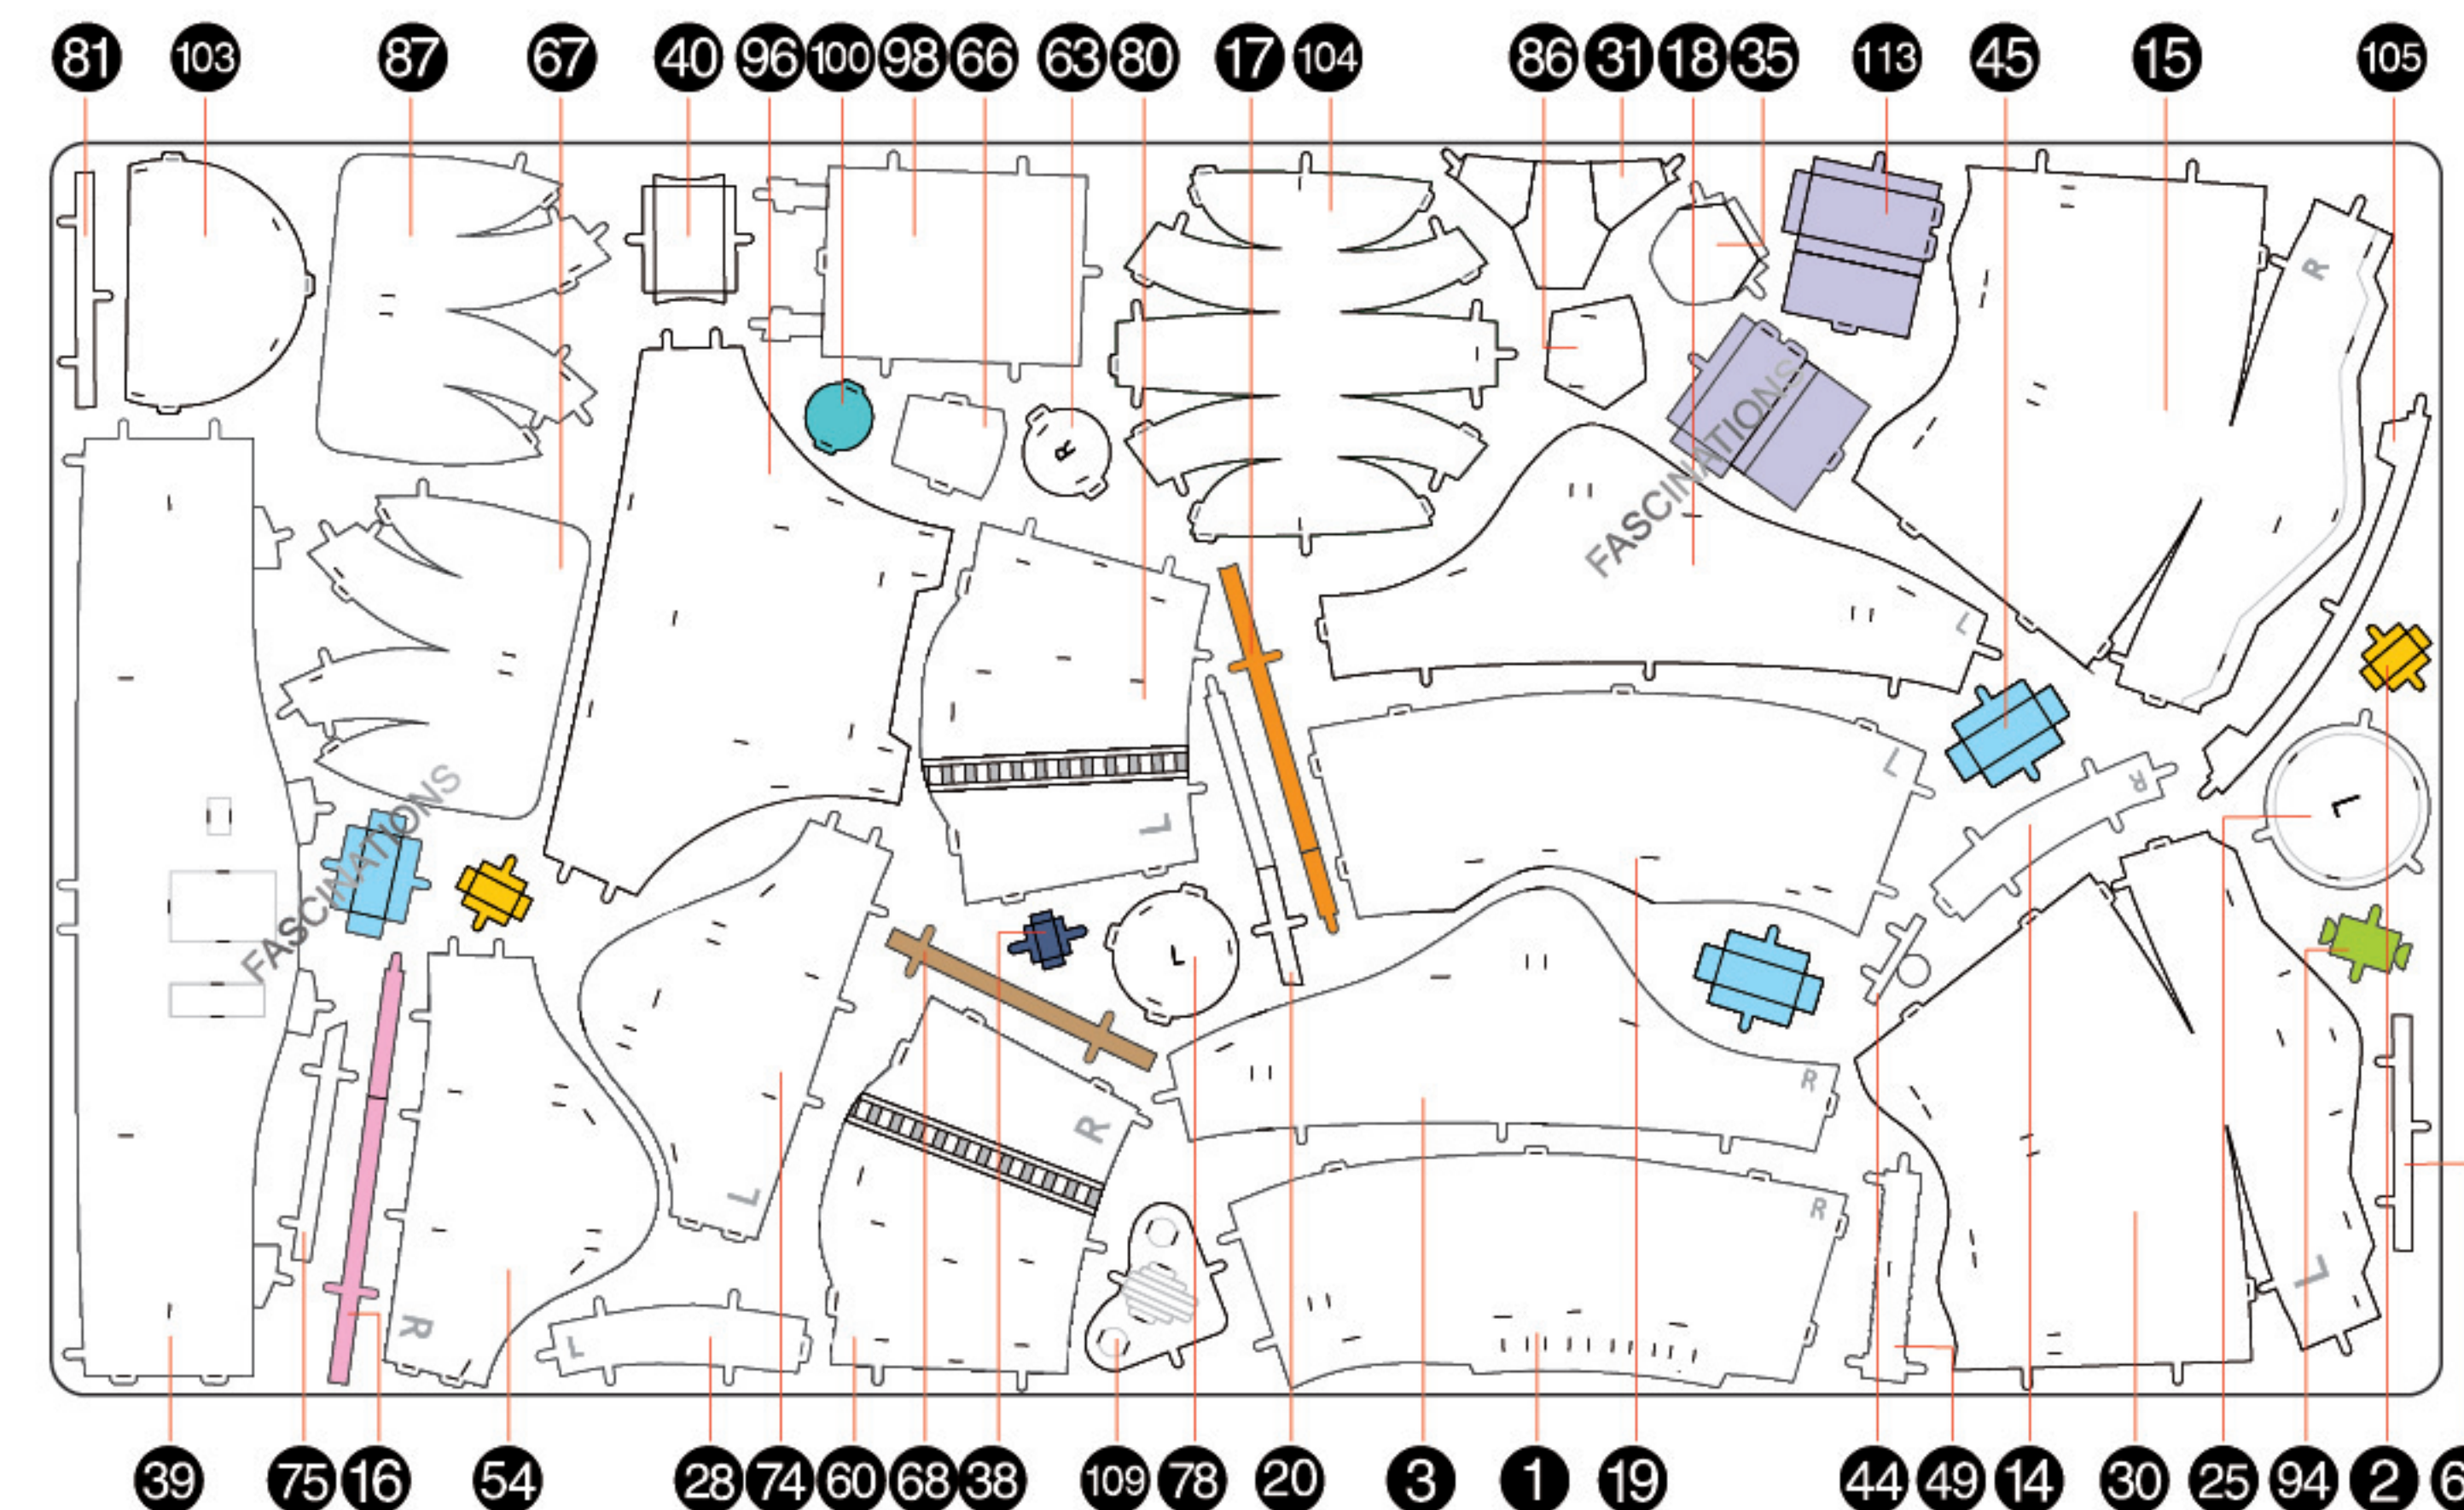


B

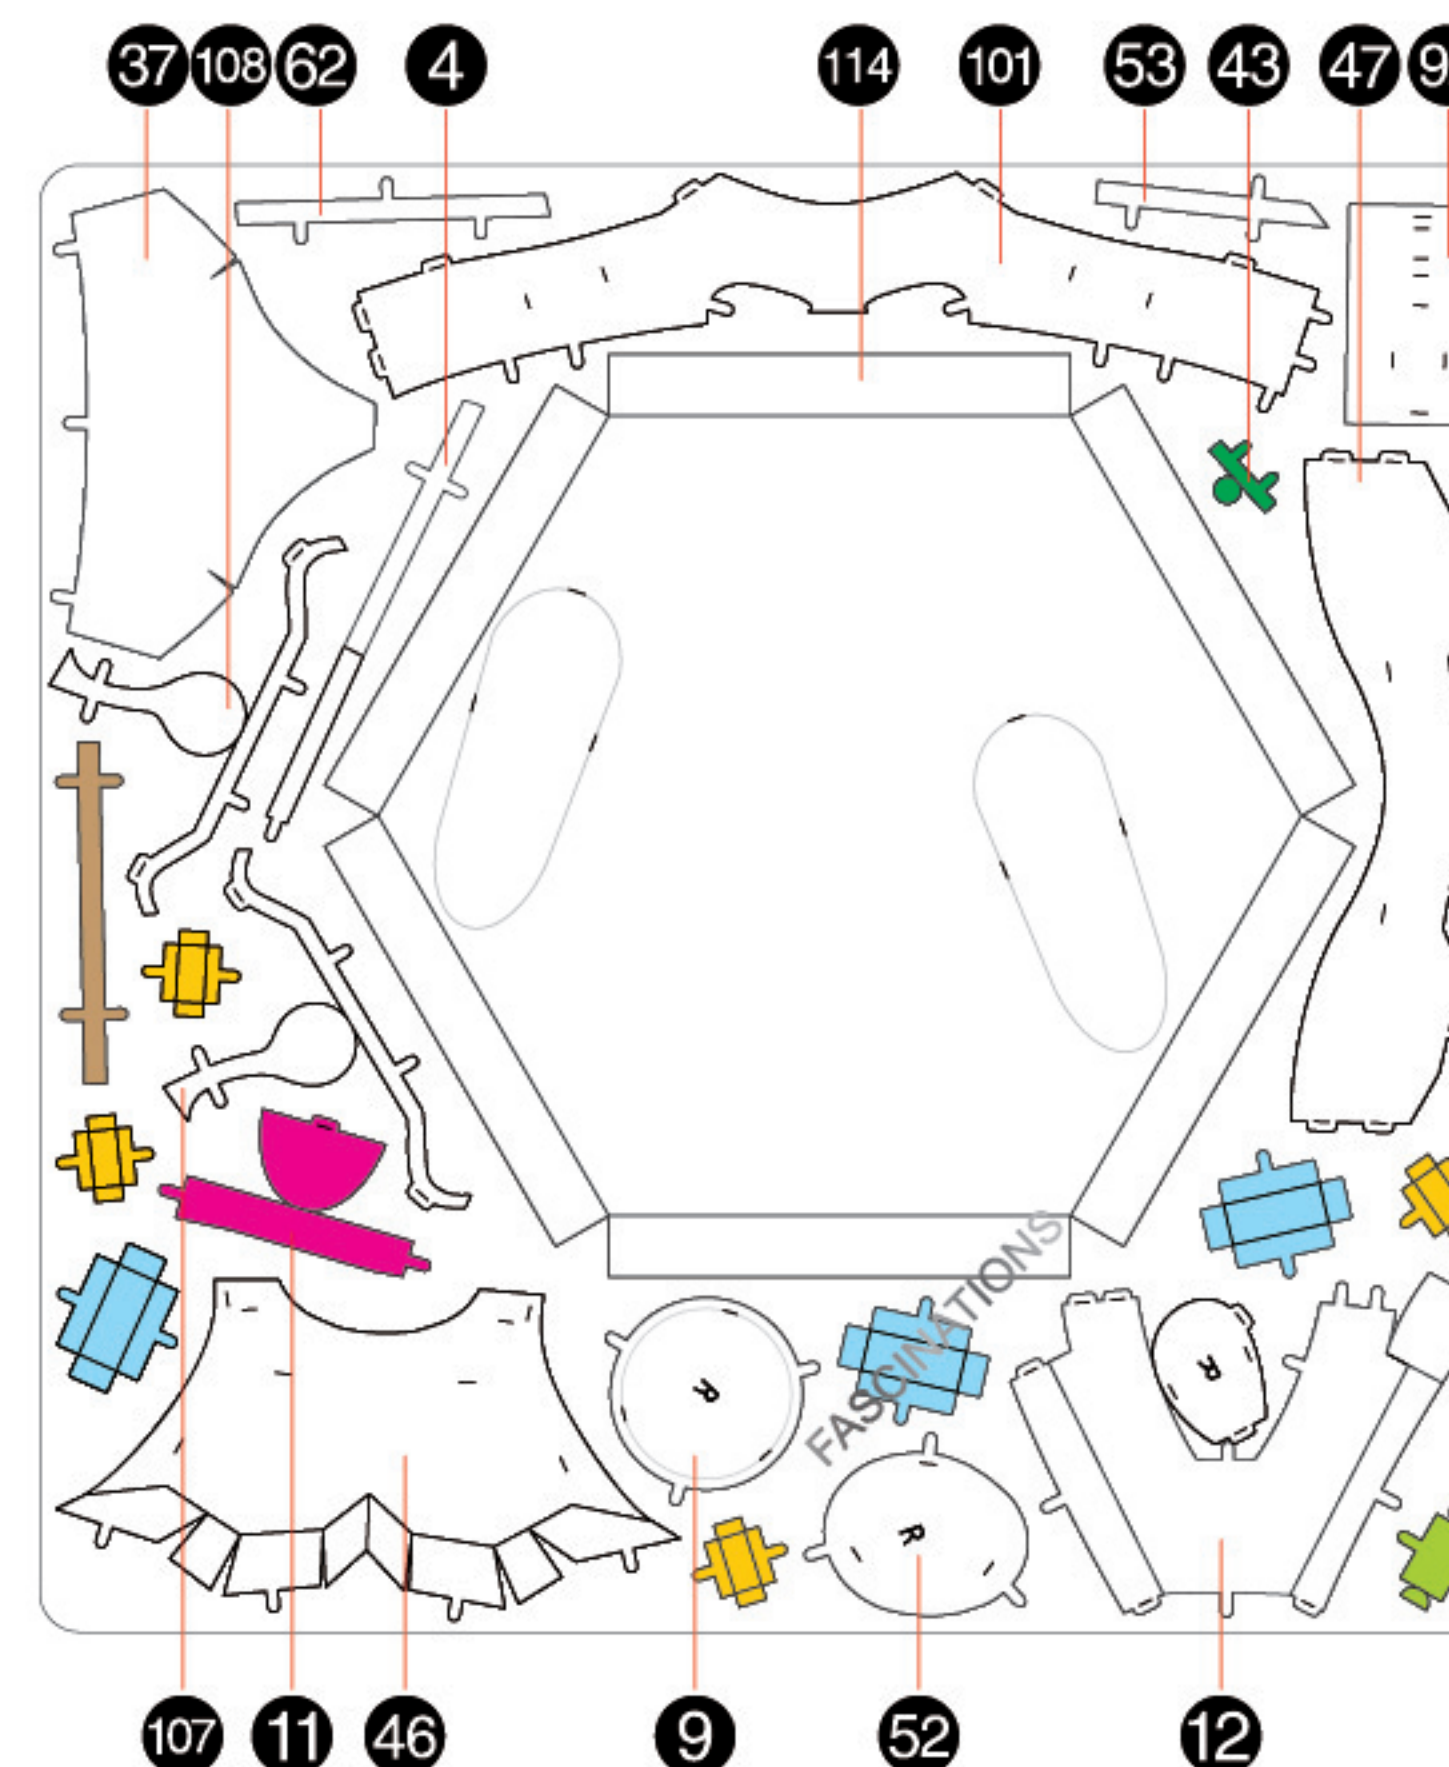


C

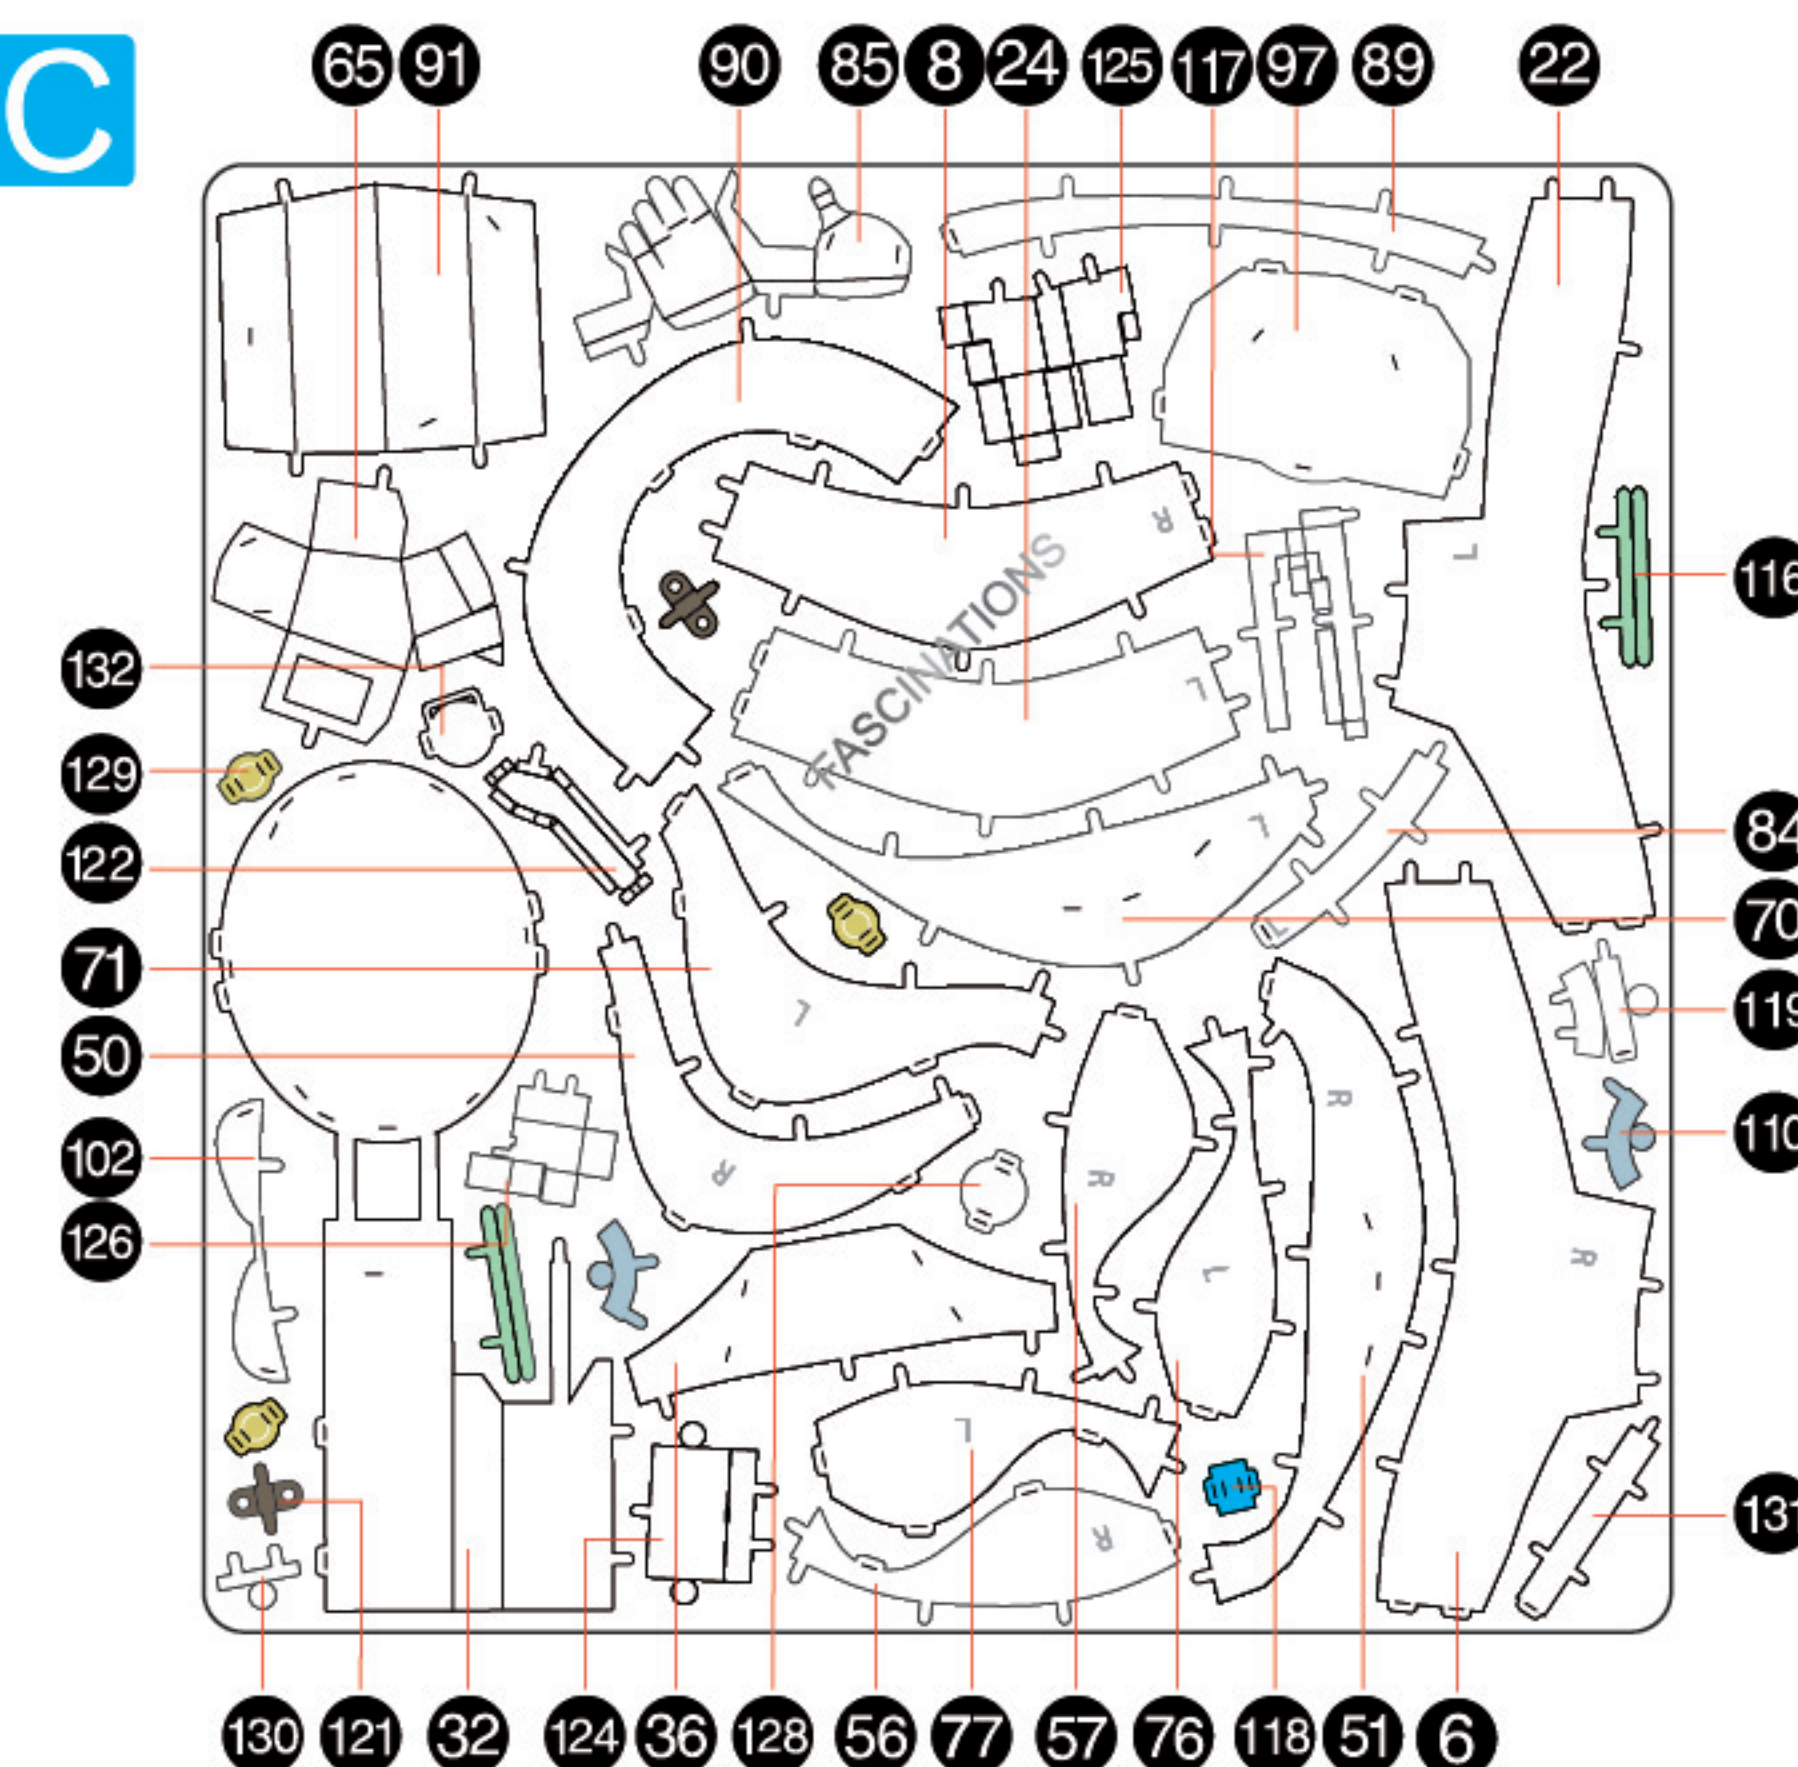


D



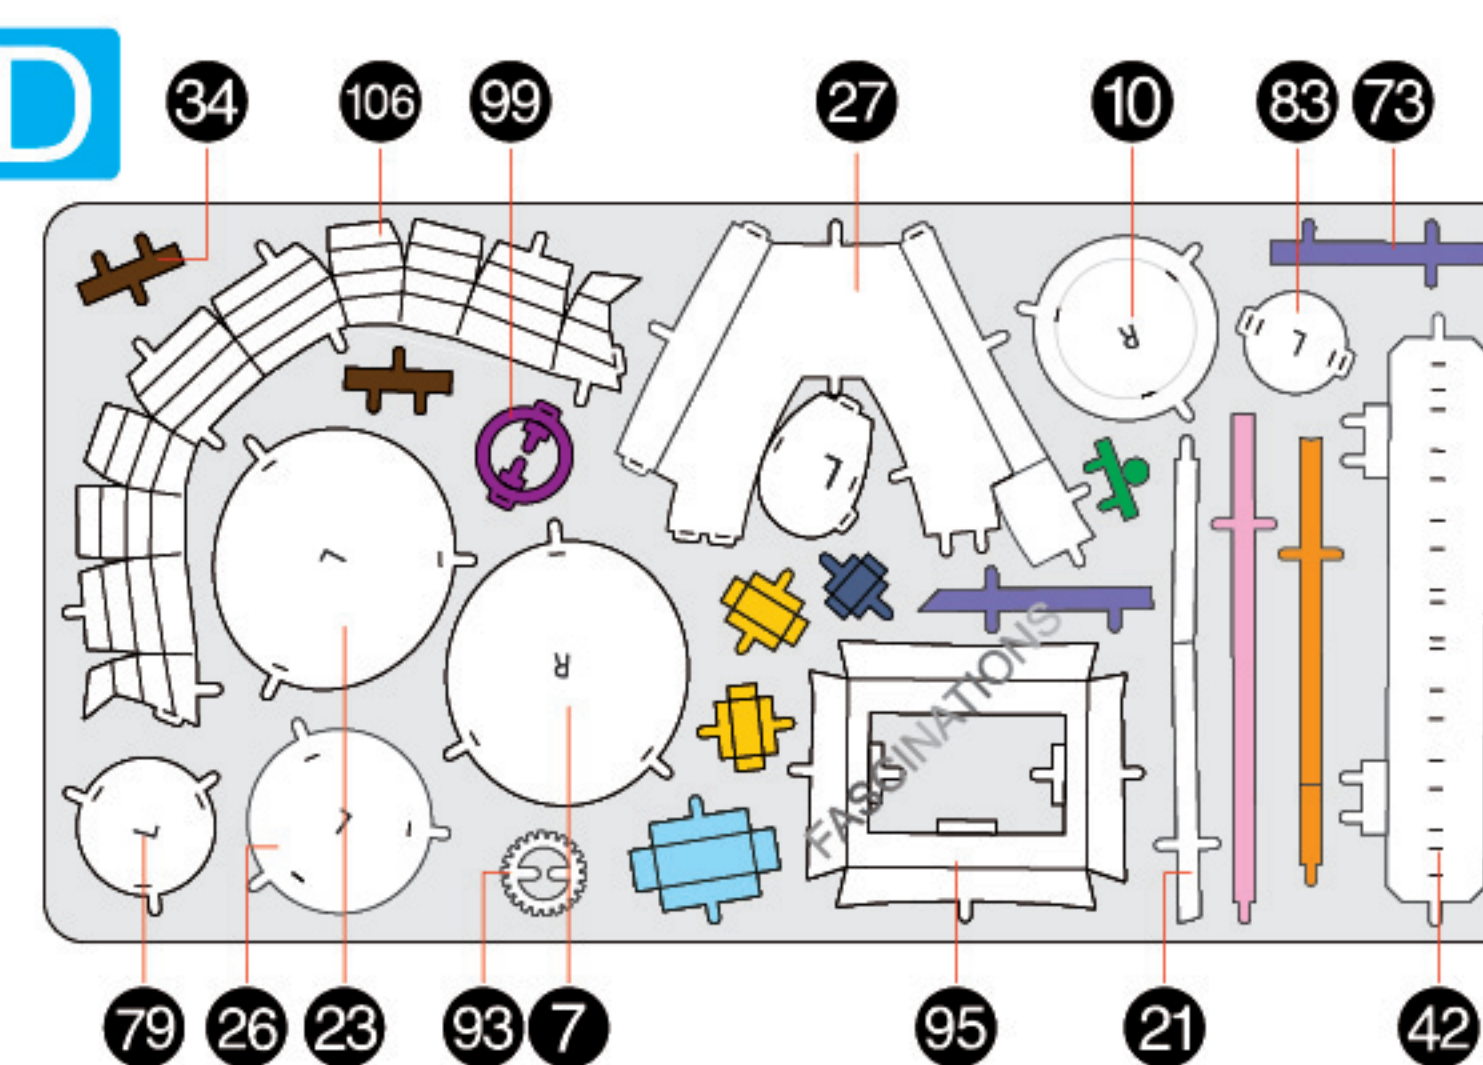


E


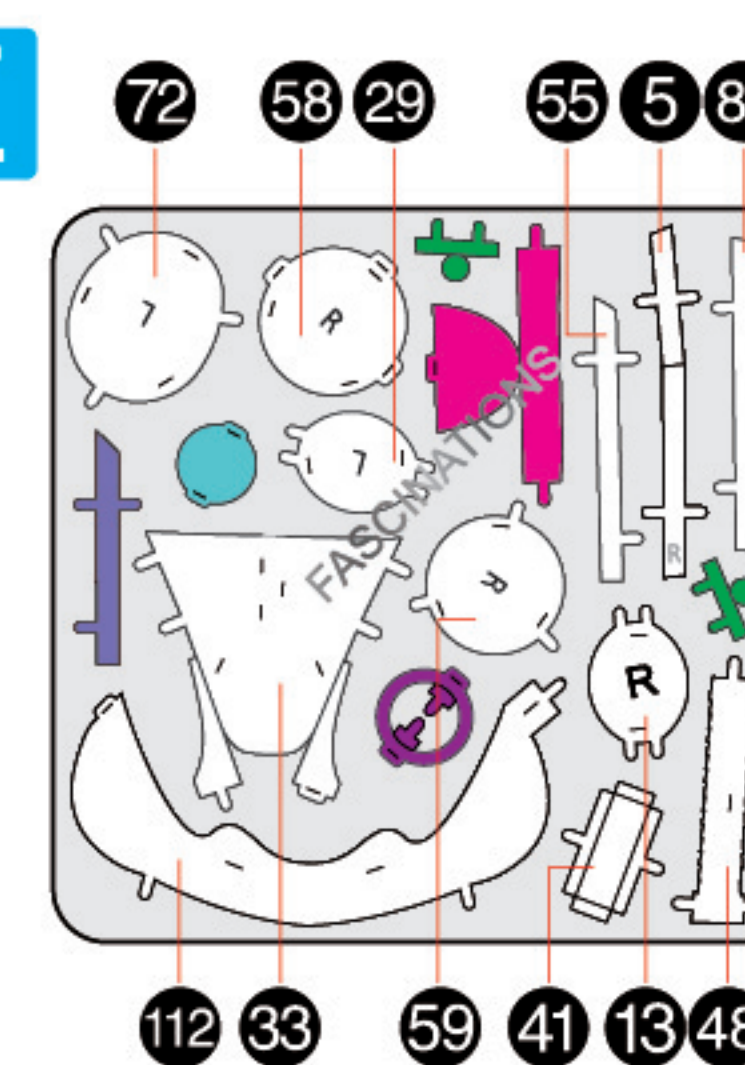


F


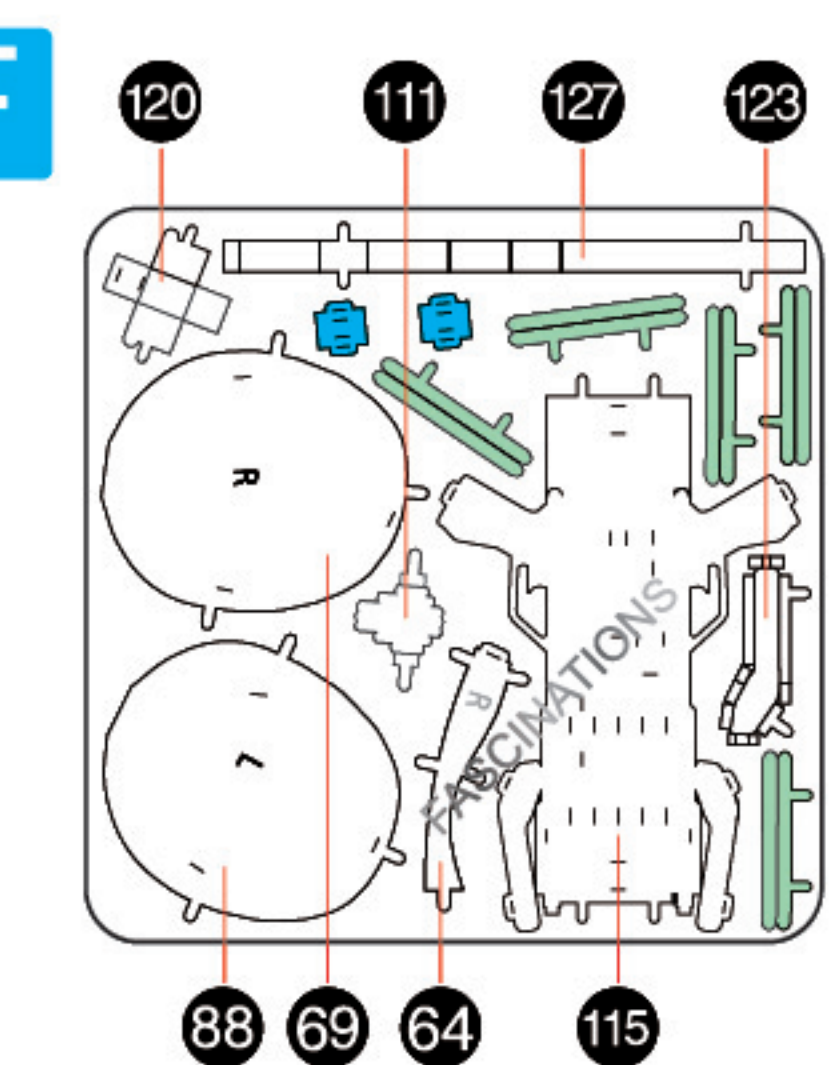


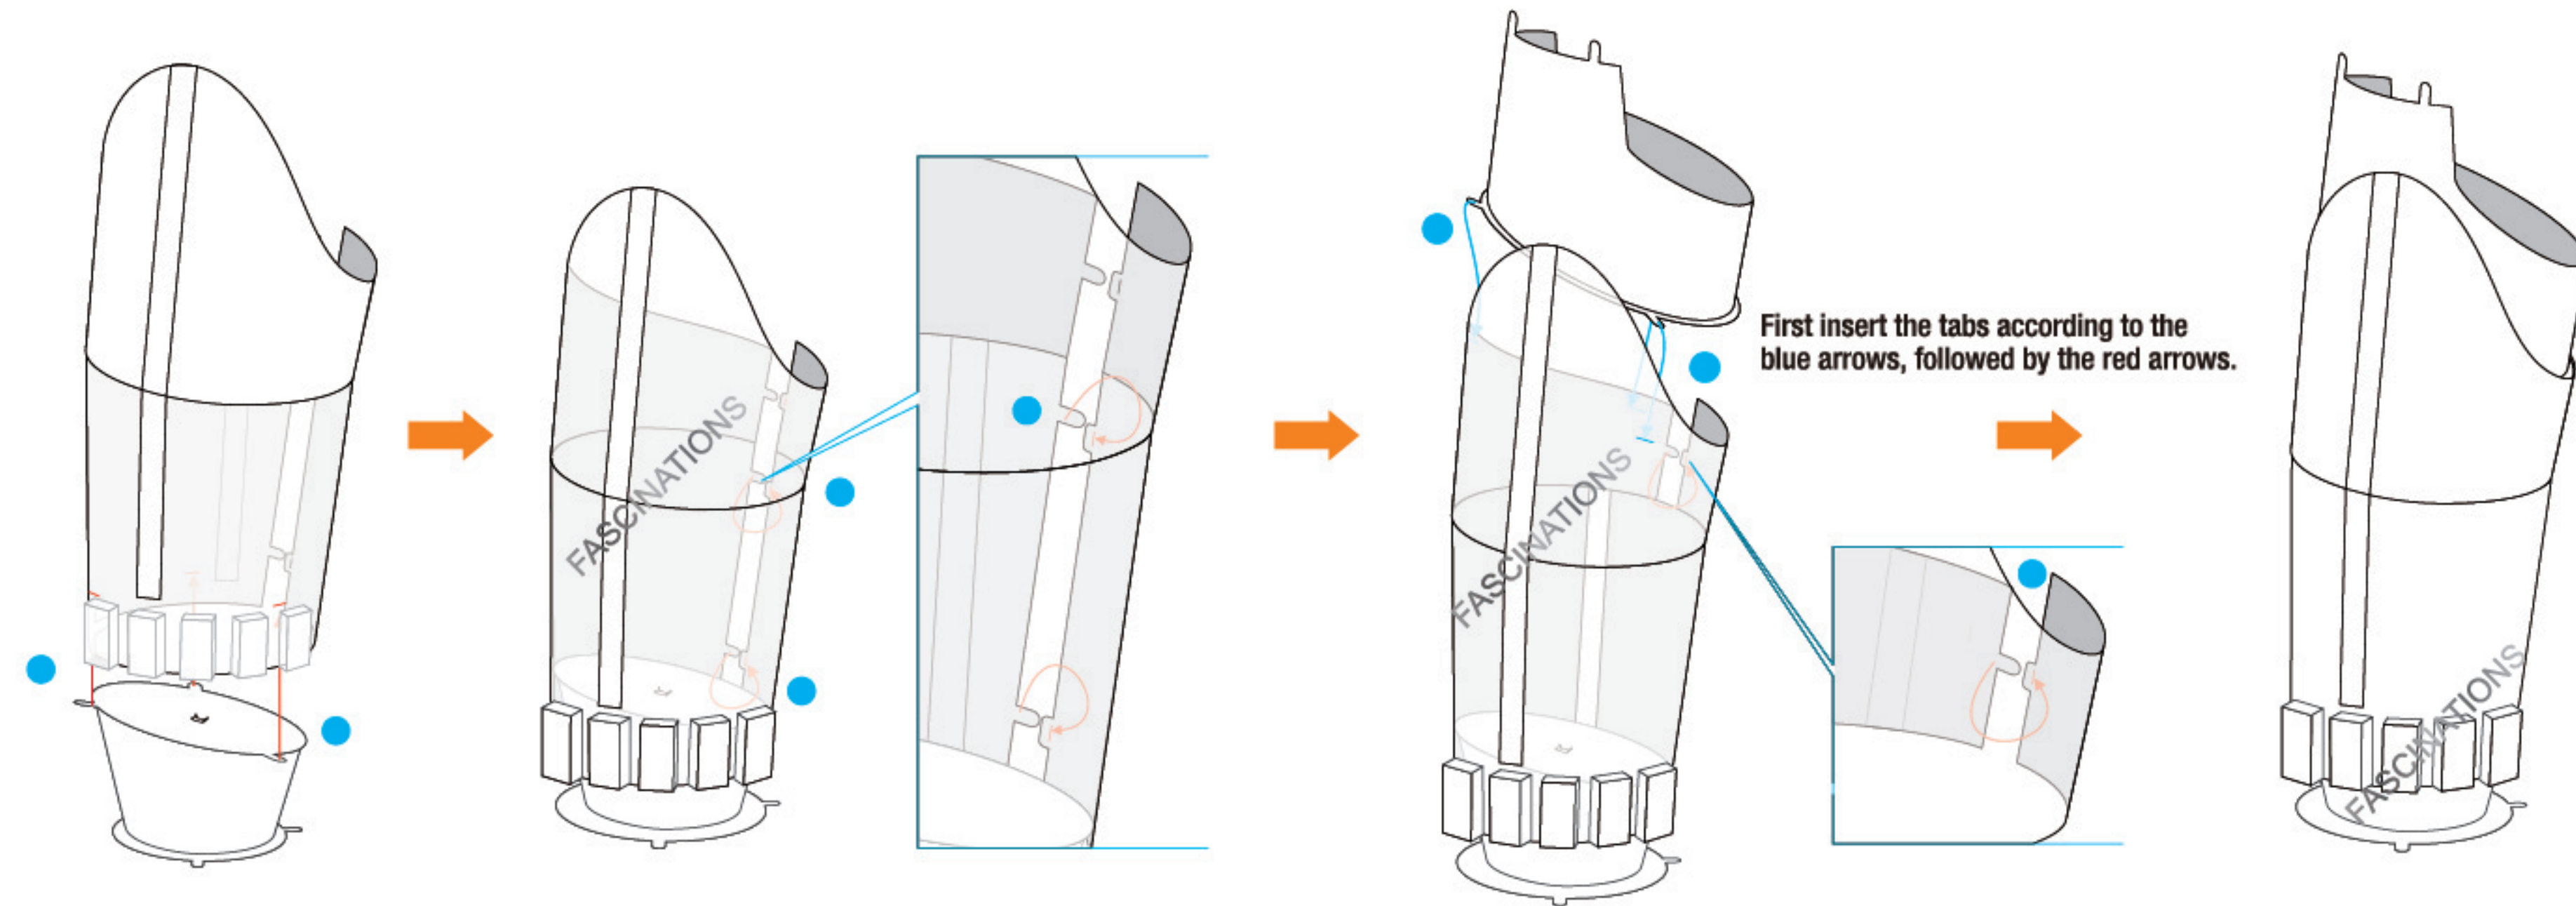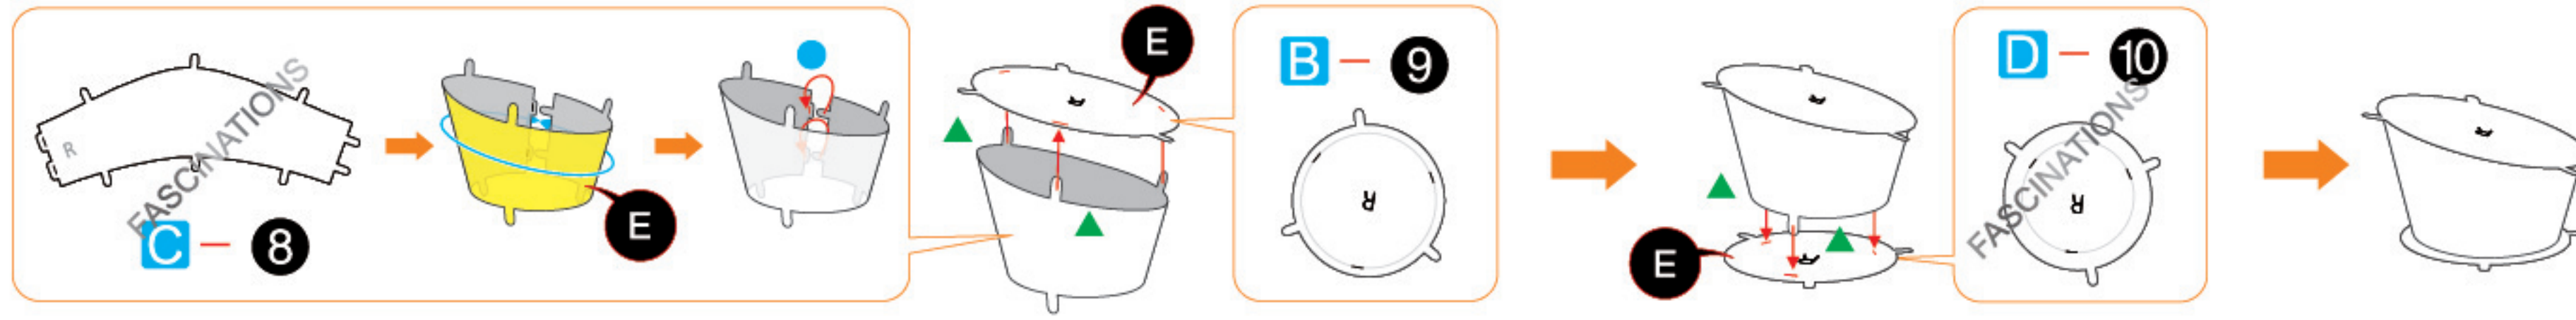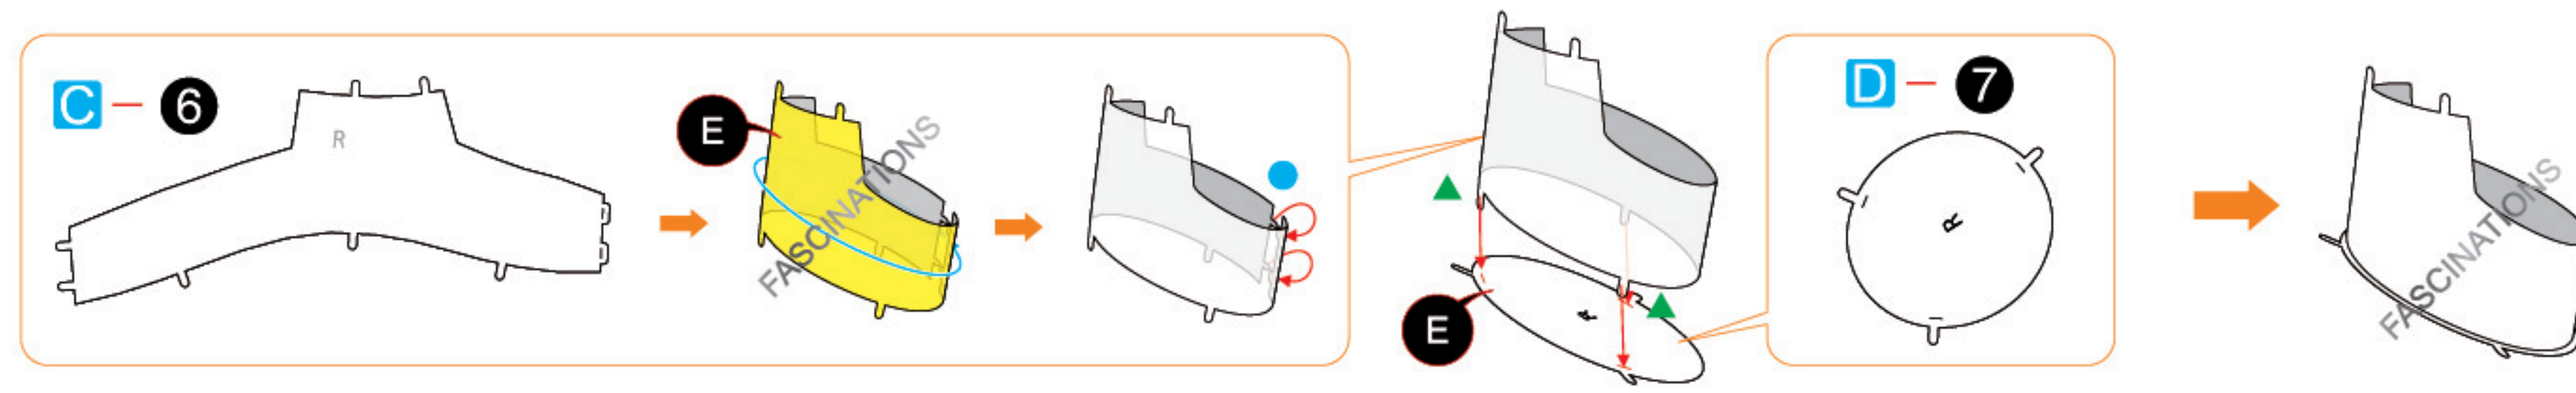





Step 2

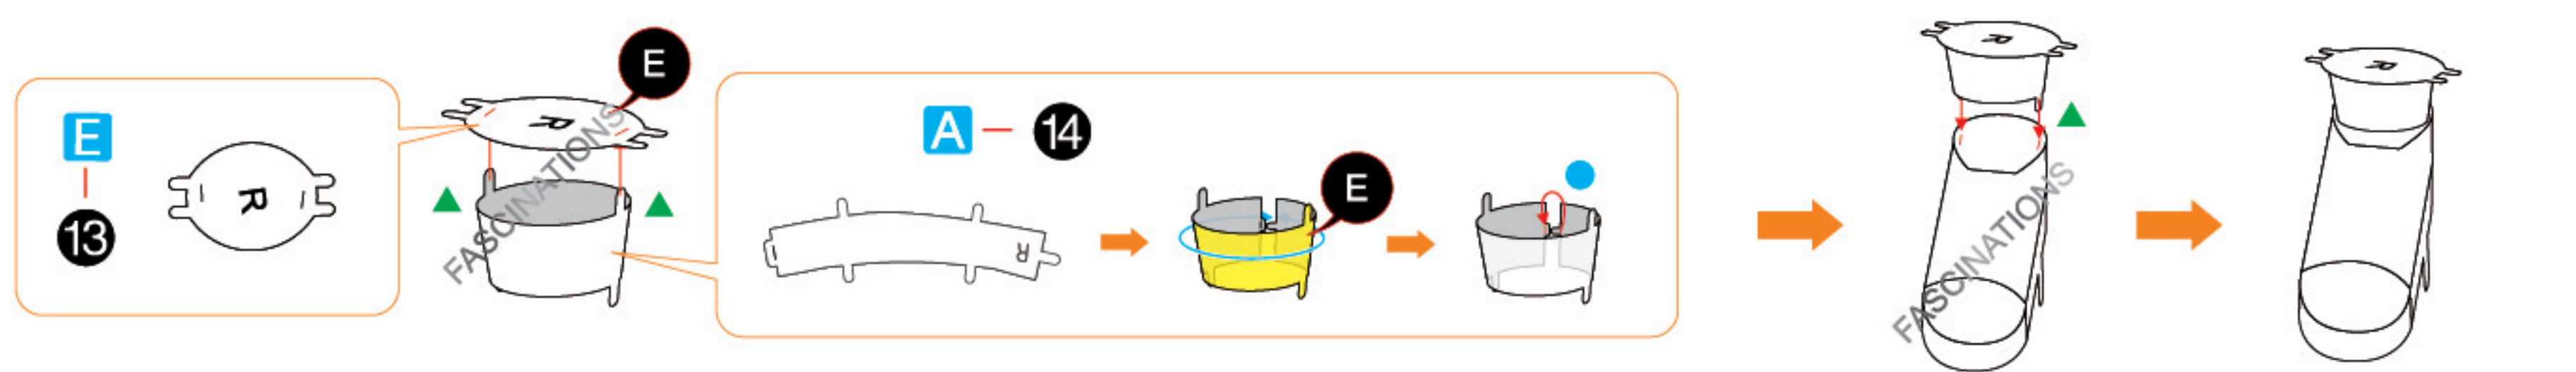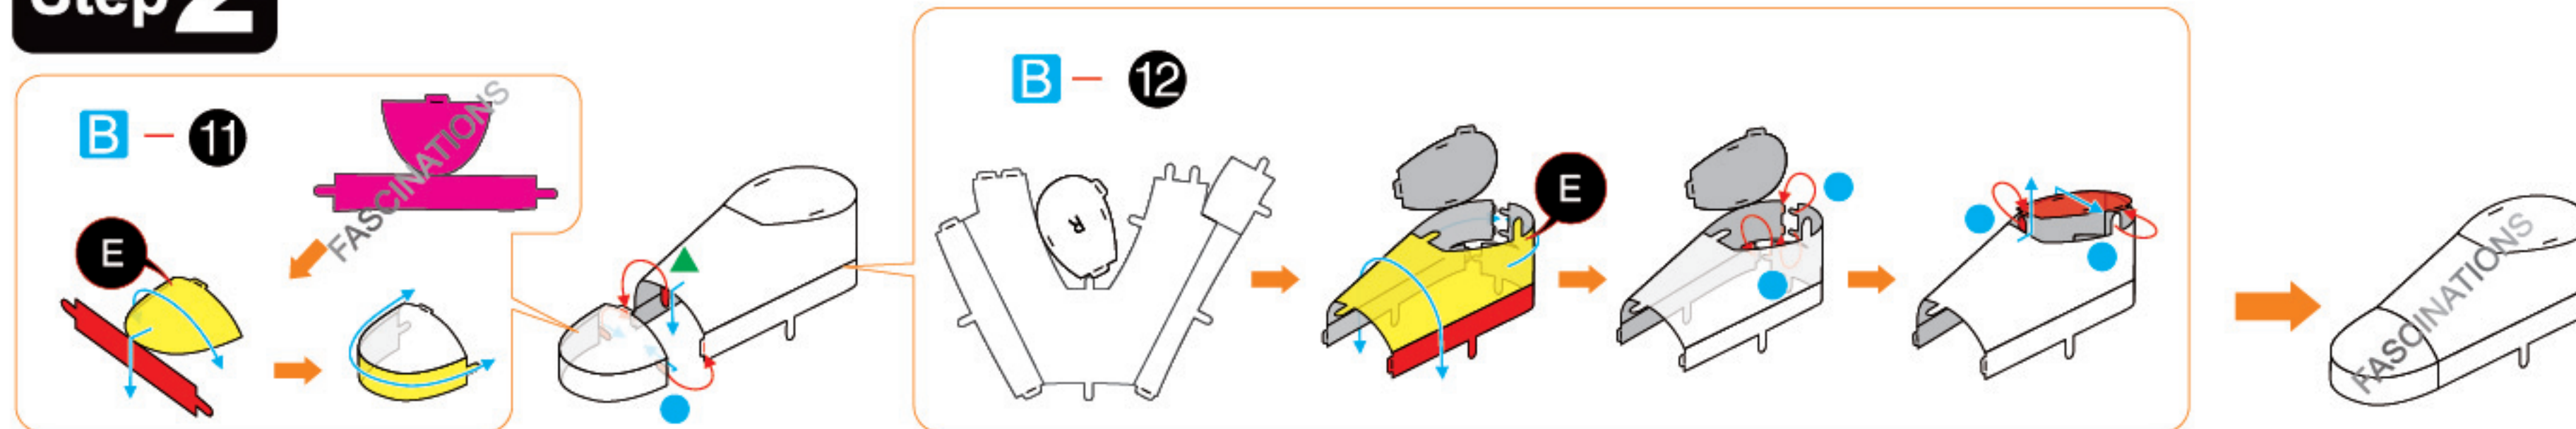


Step 3

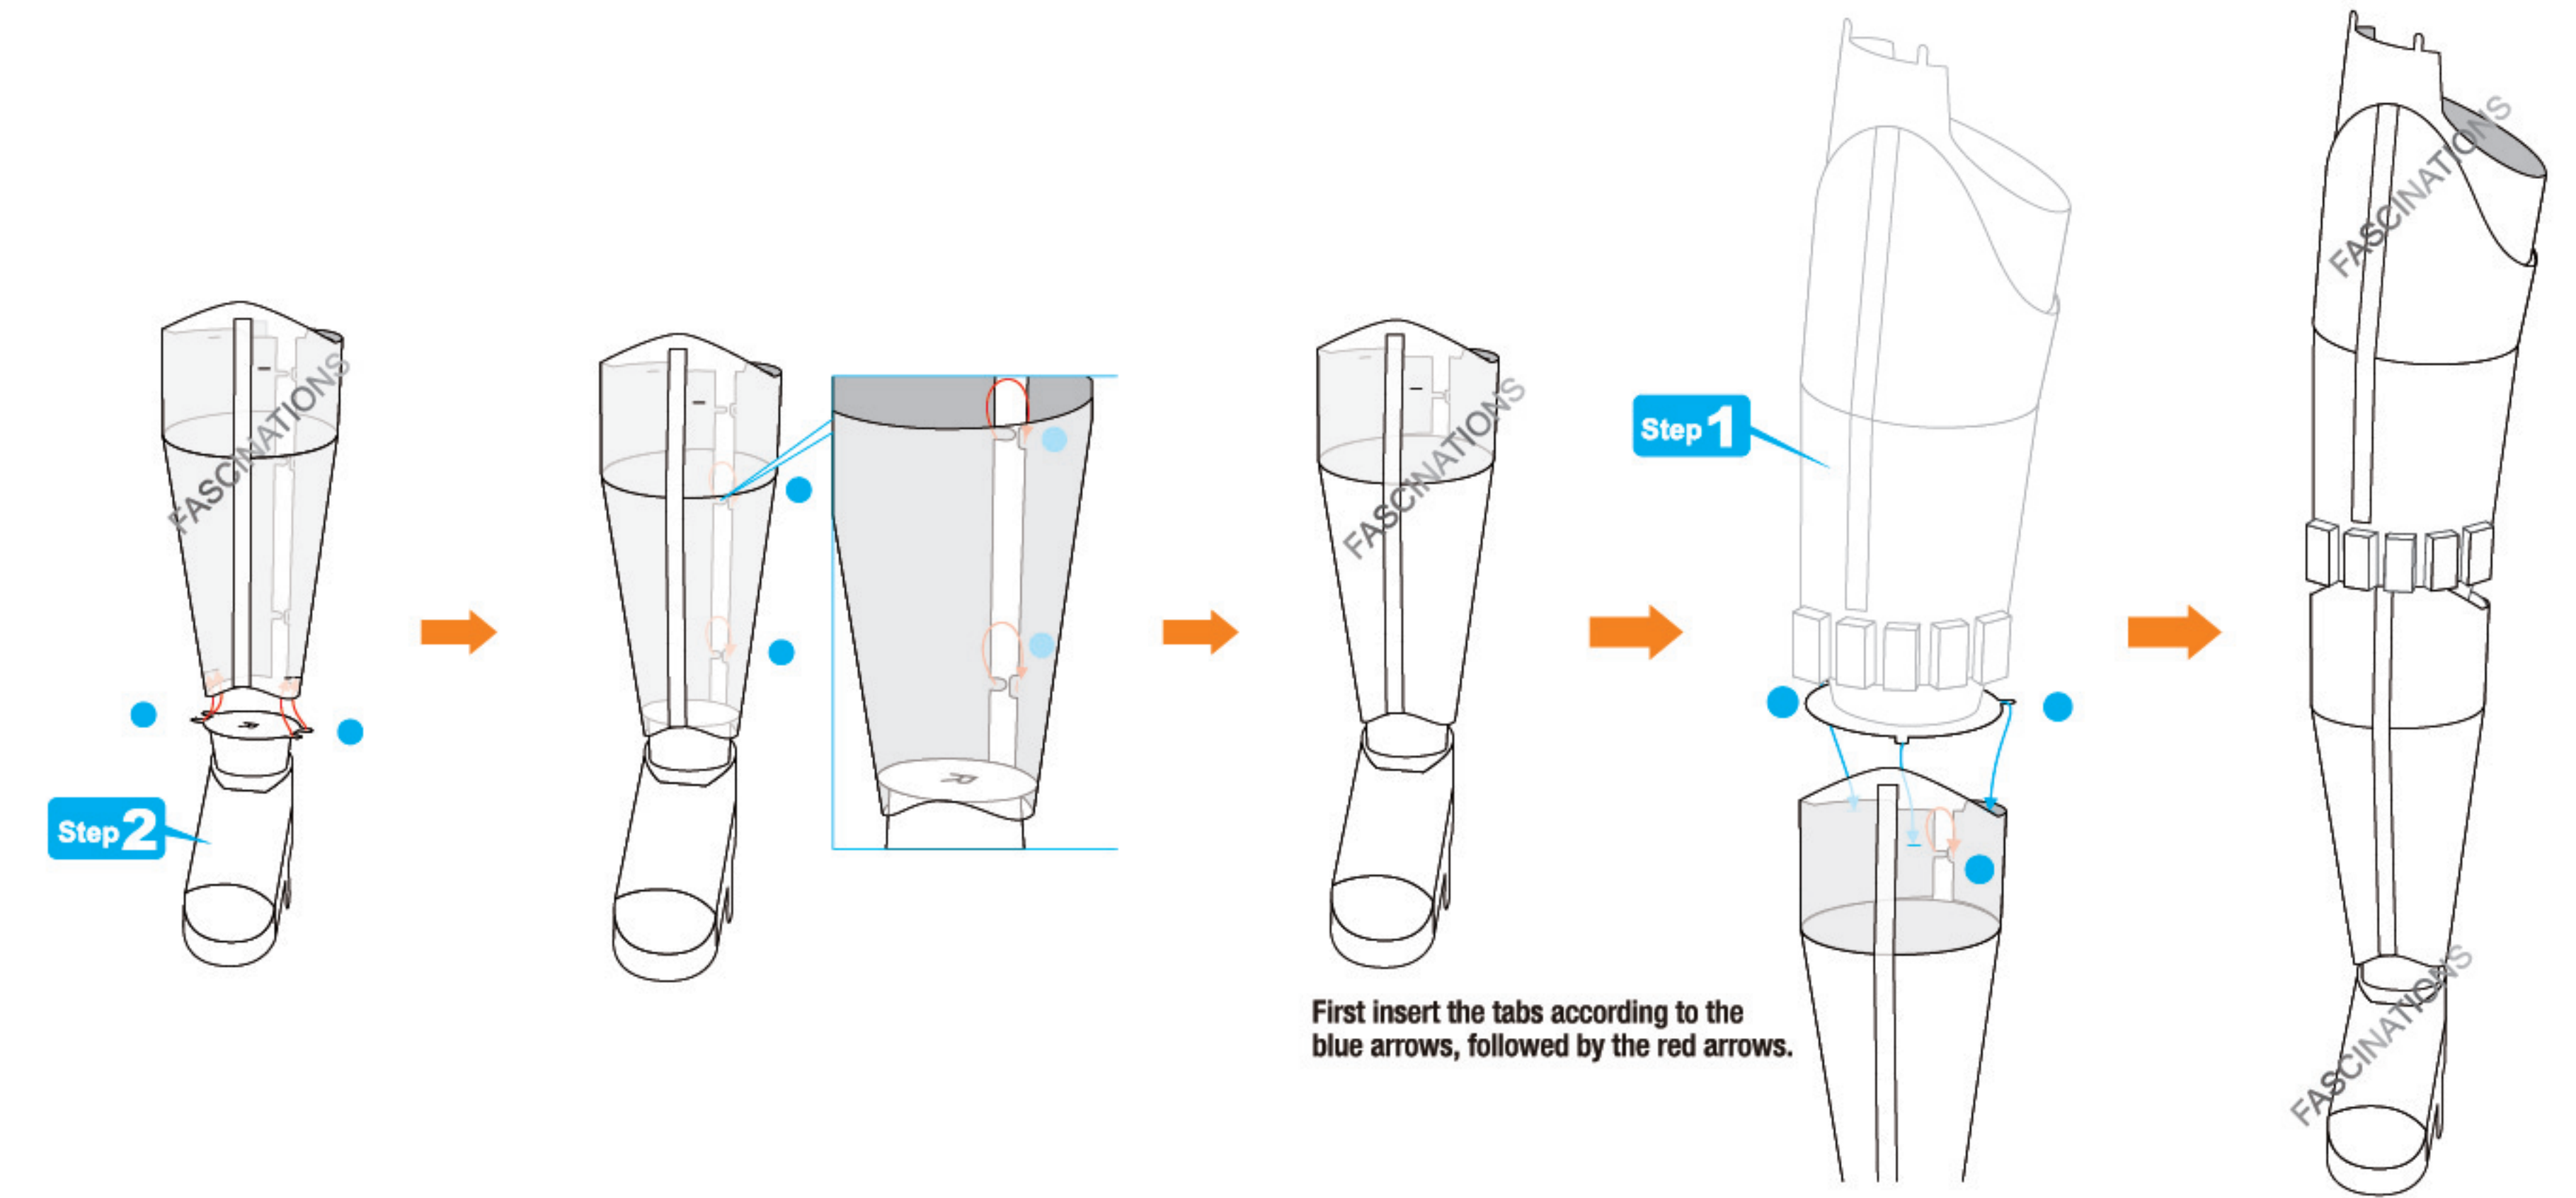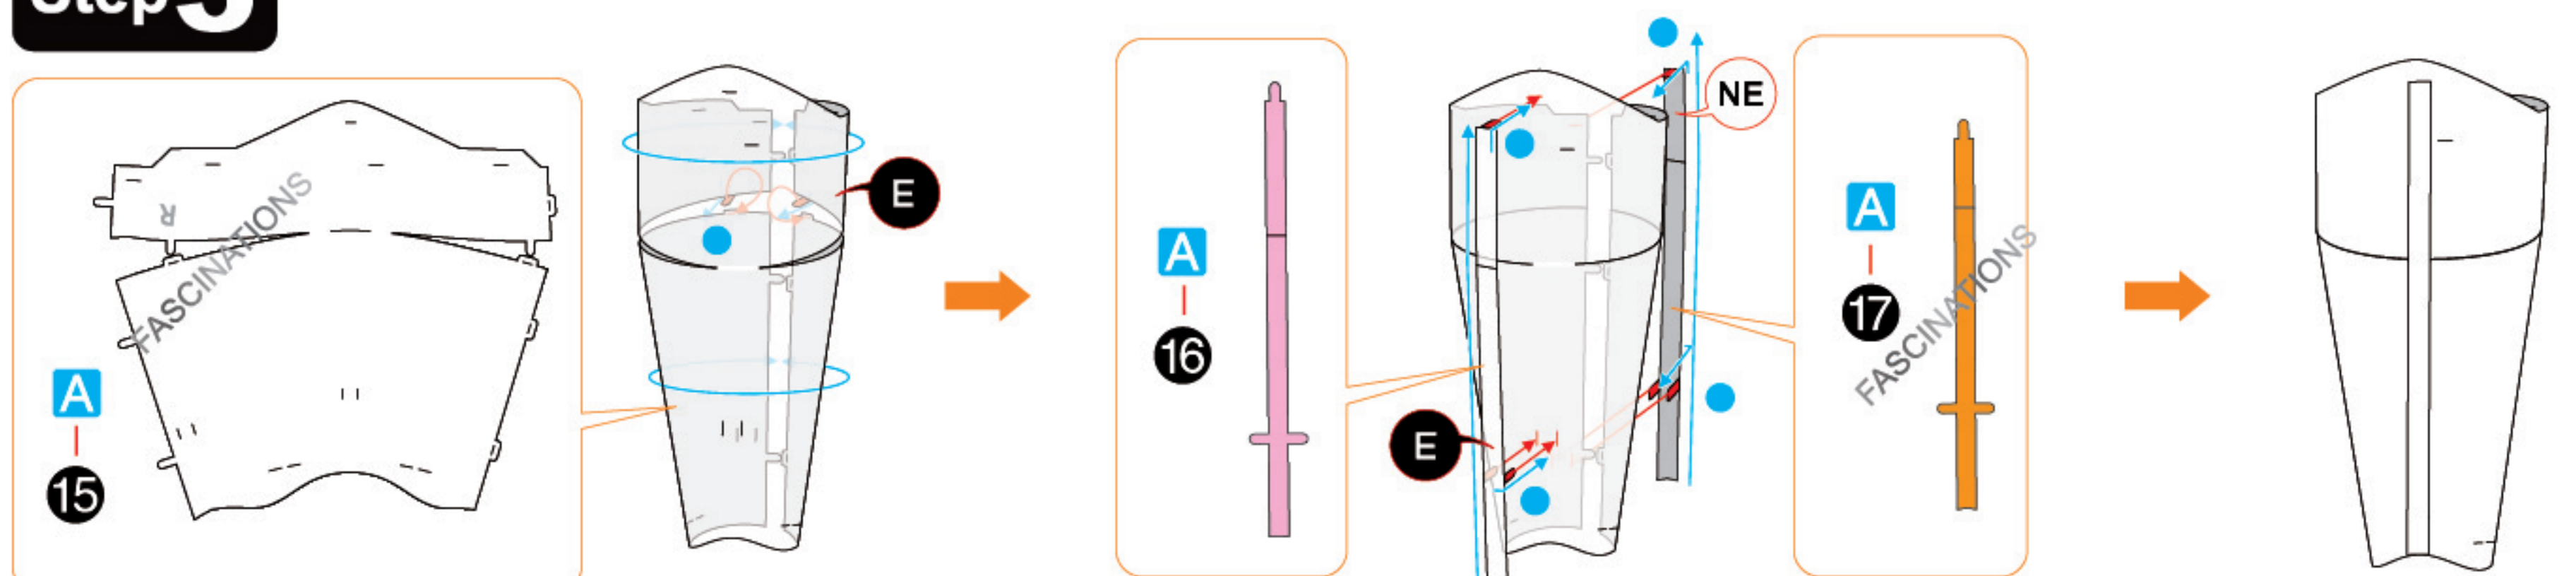



Step 4

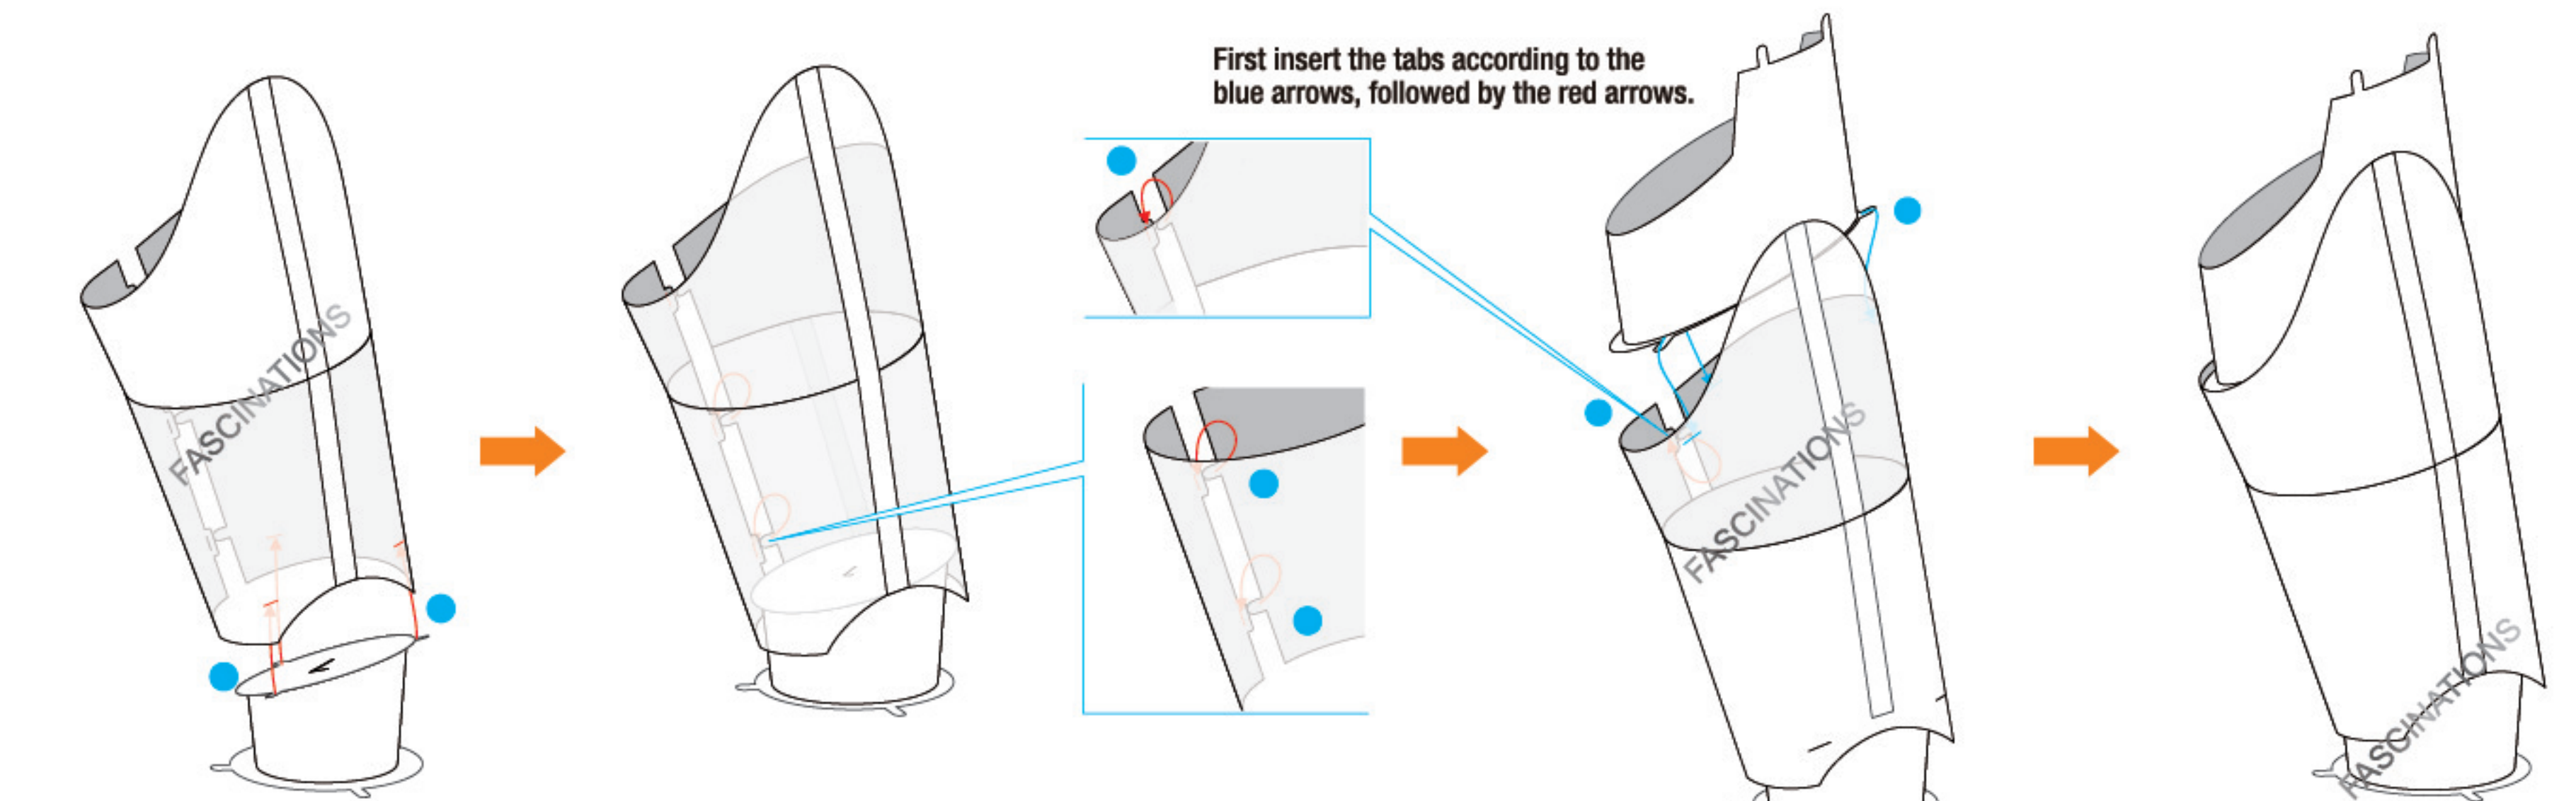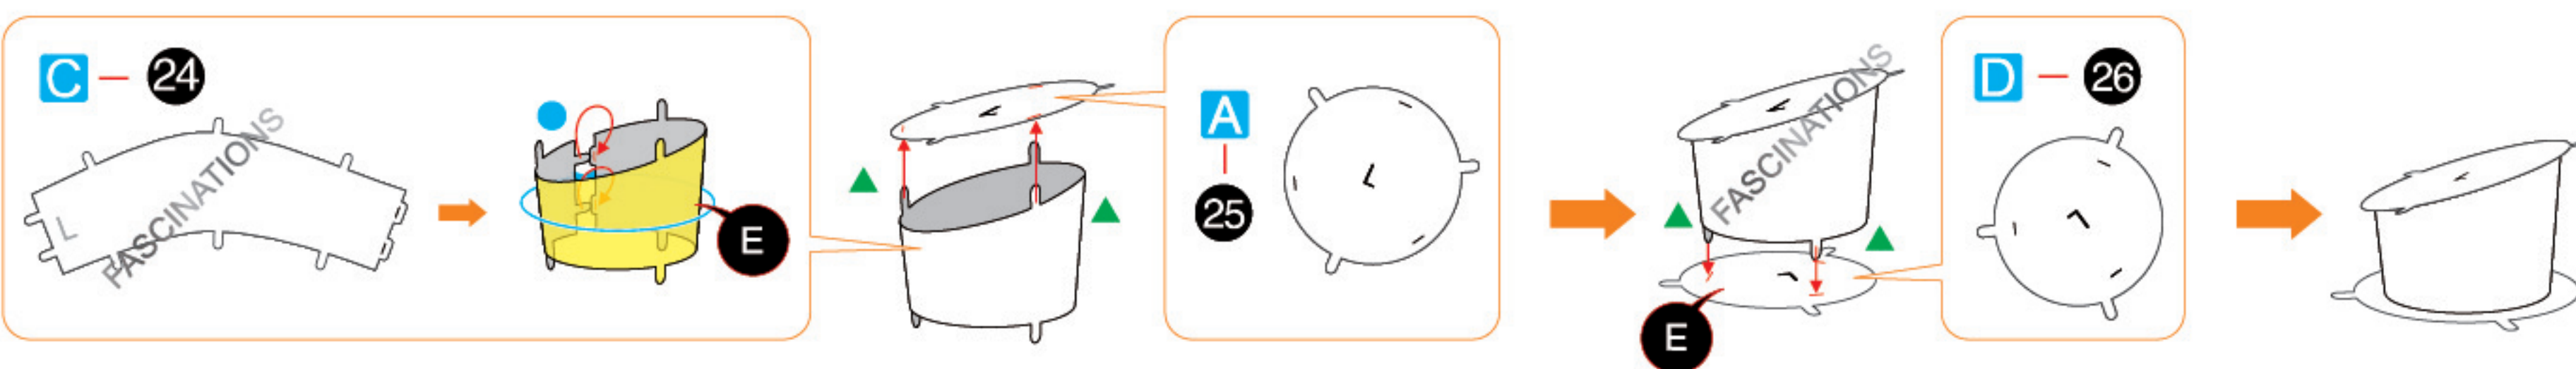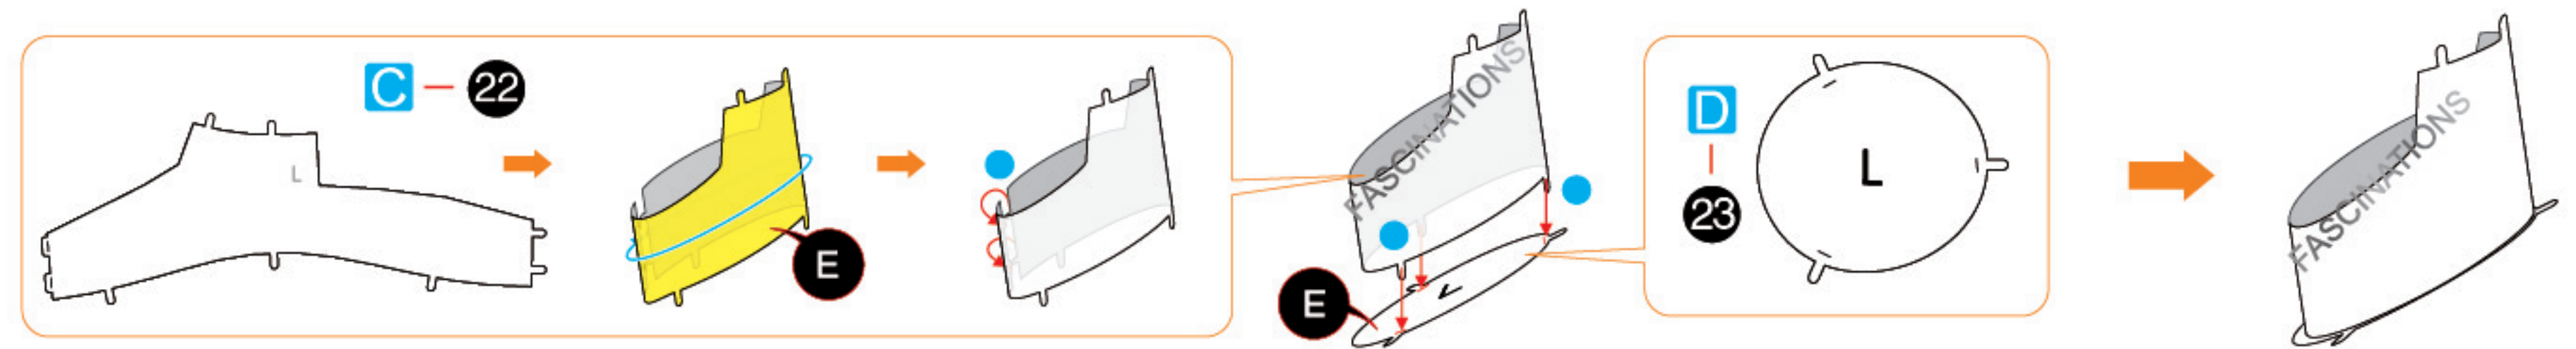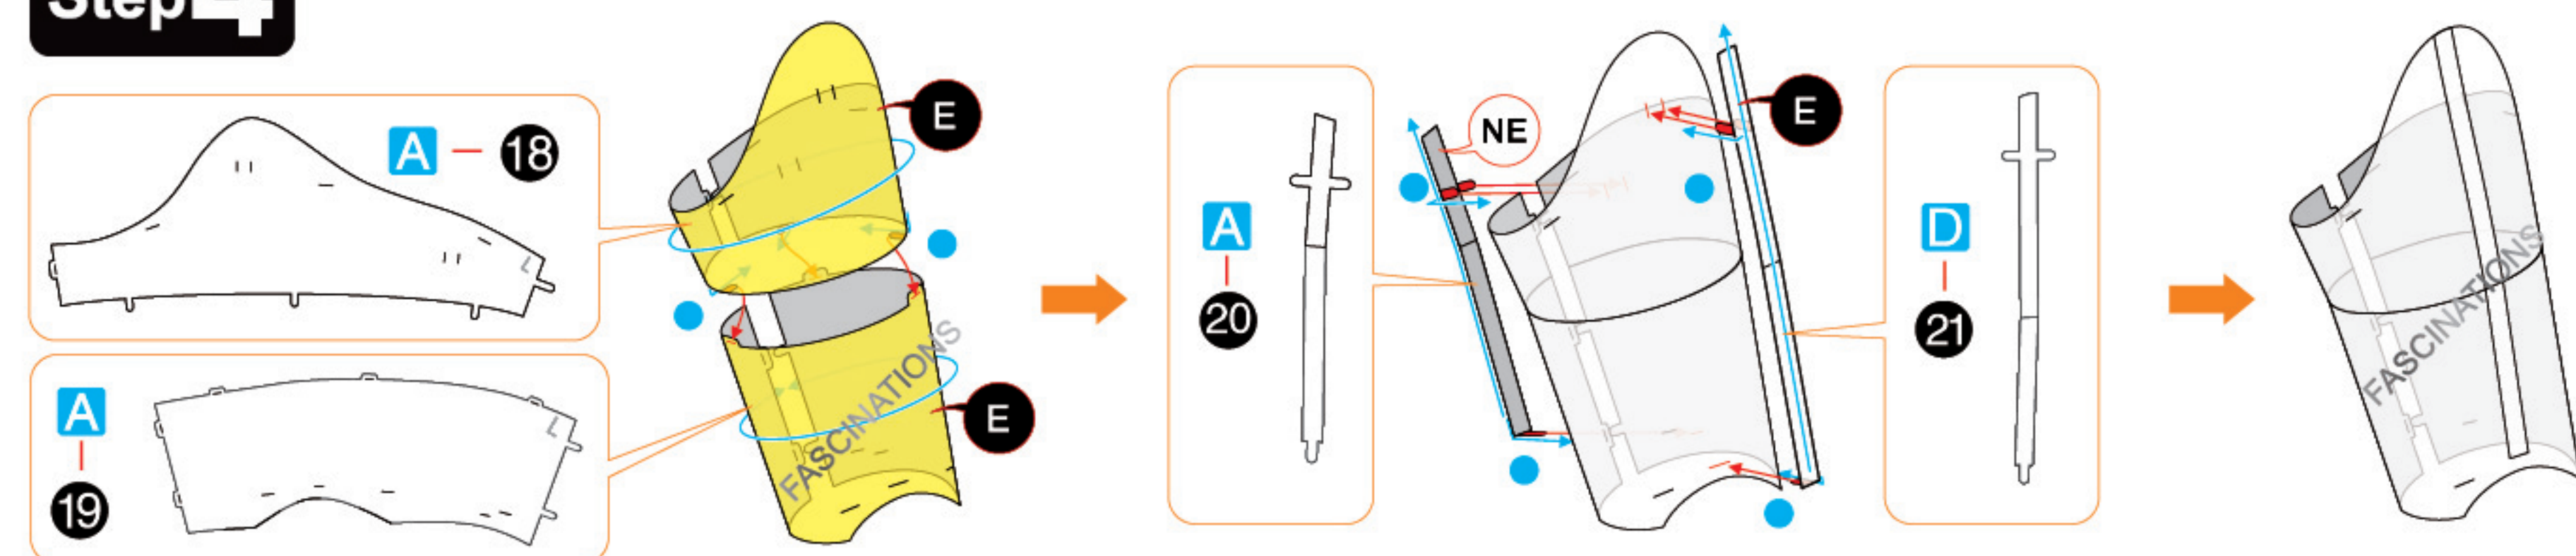


Step 5

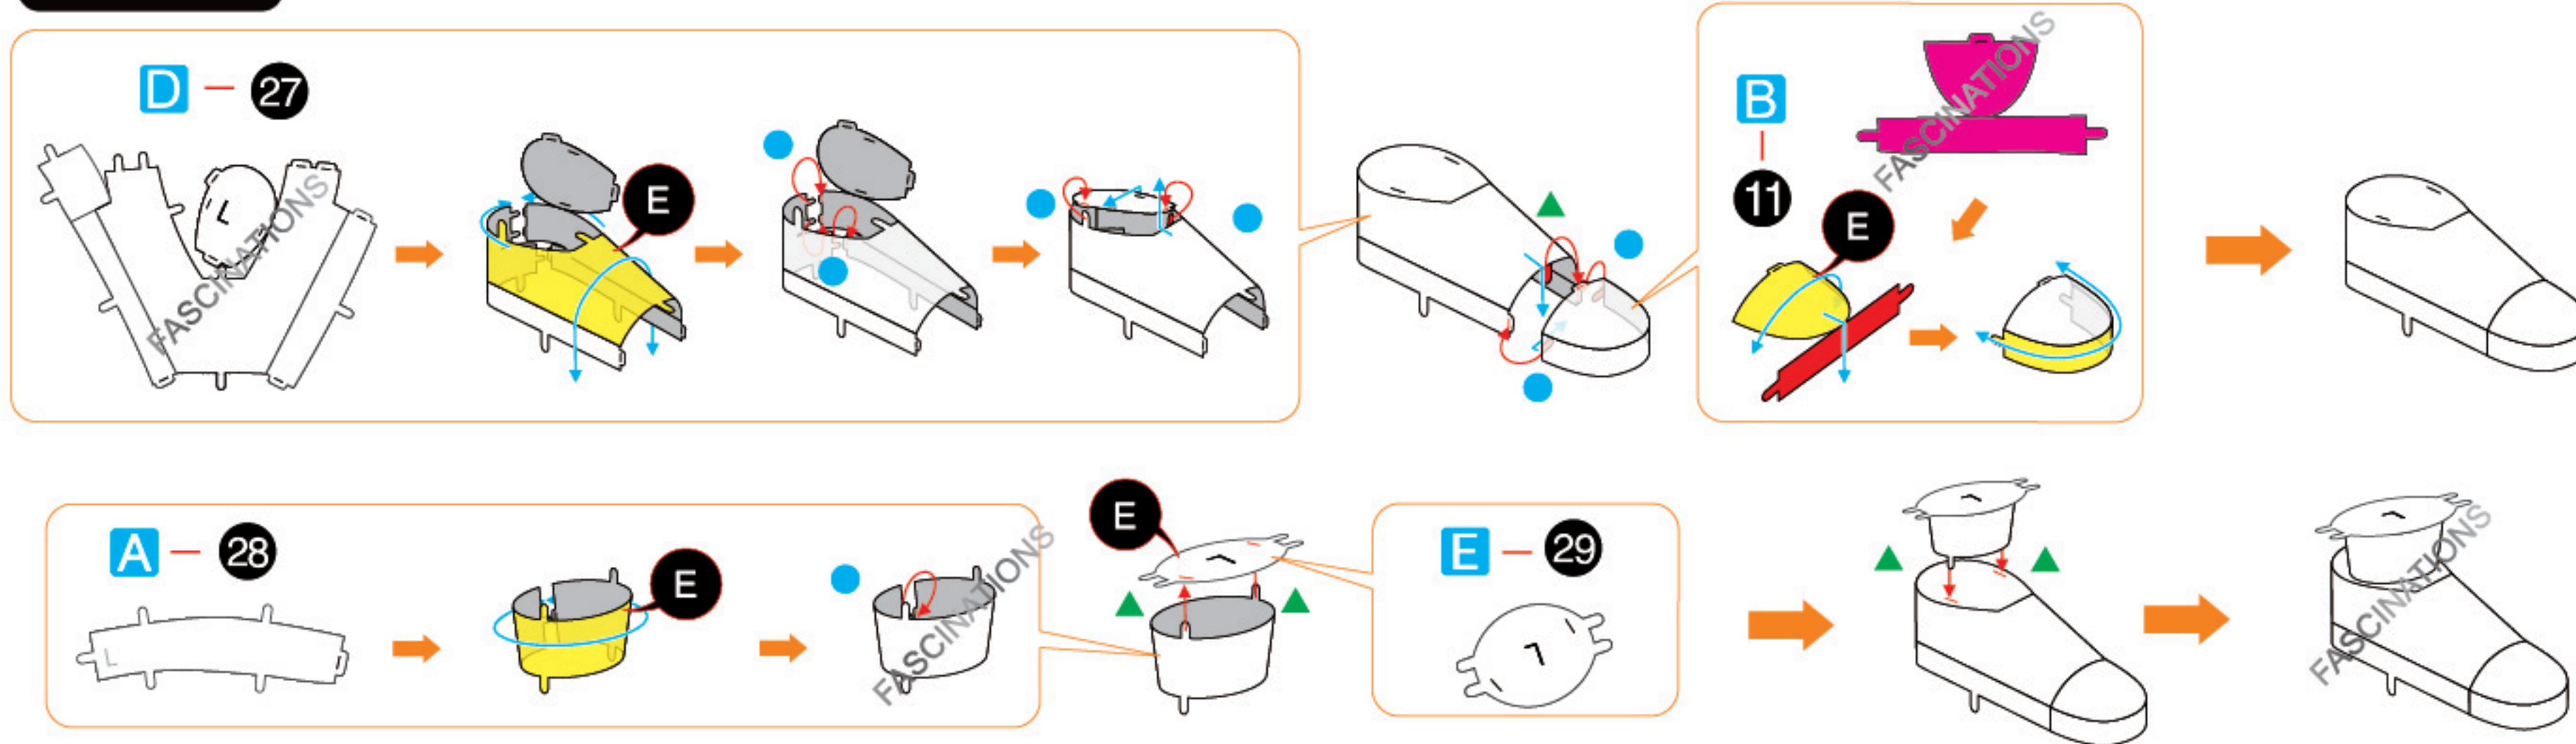


Step 6

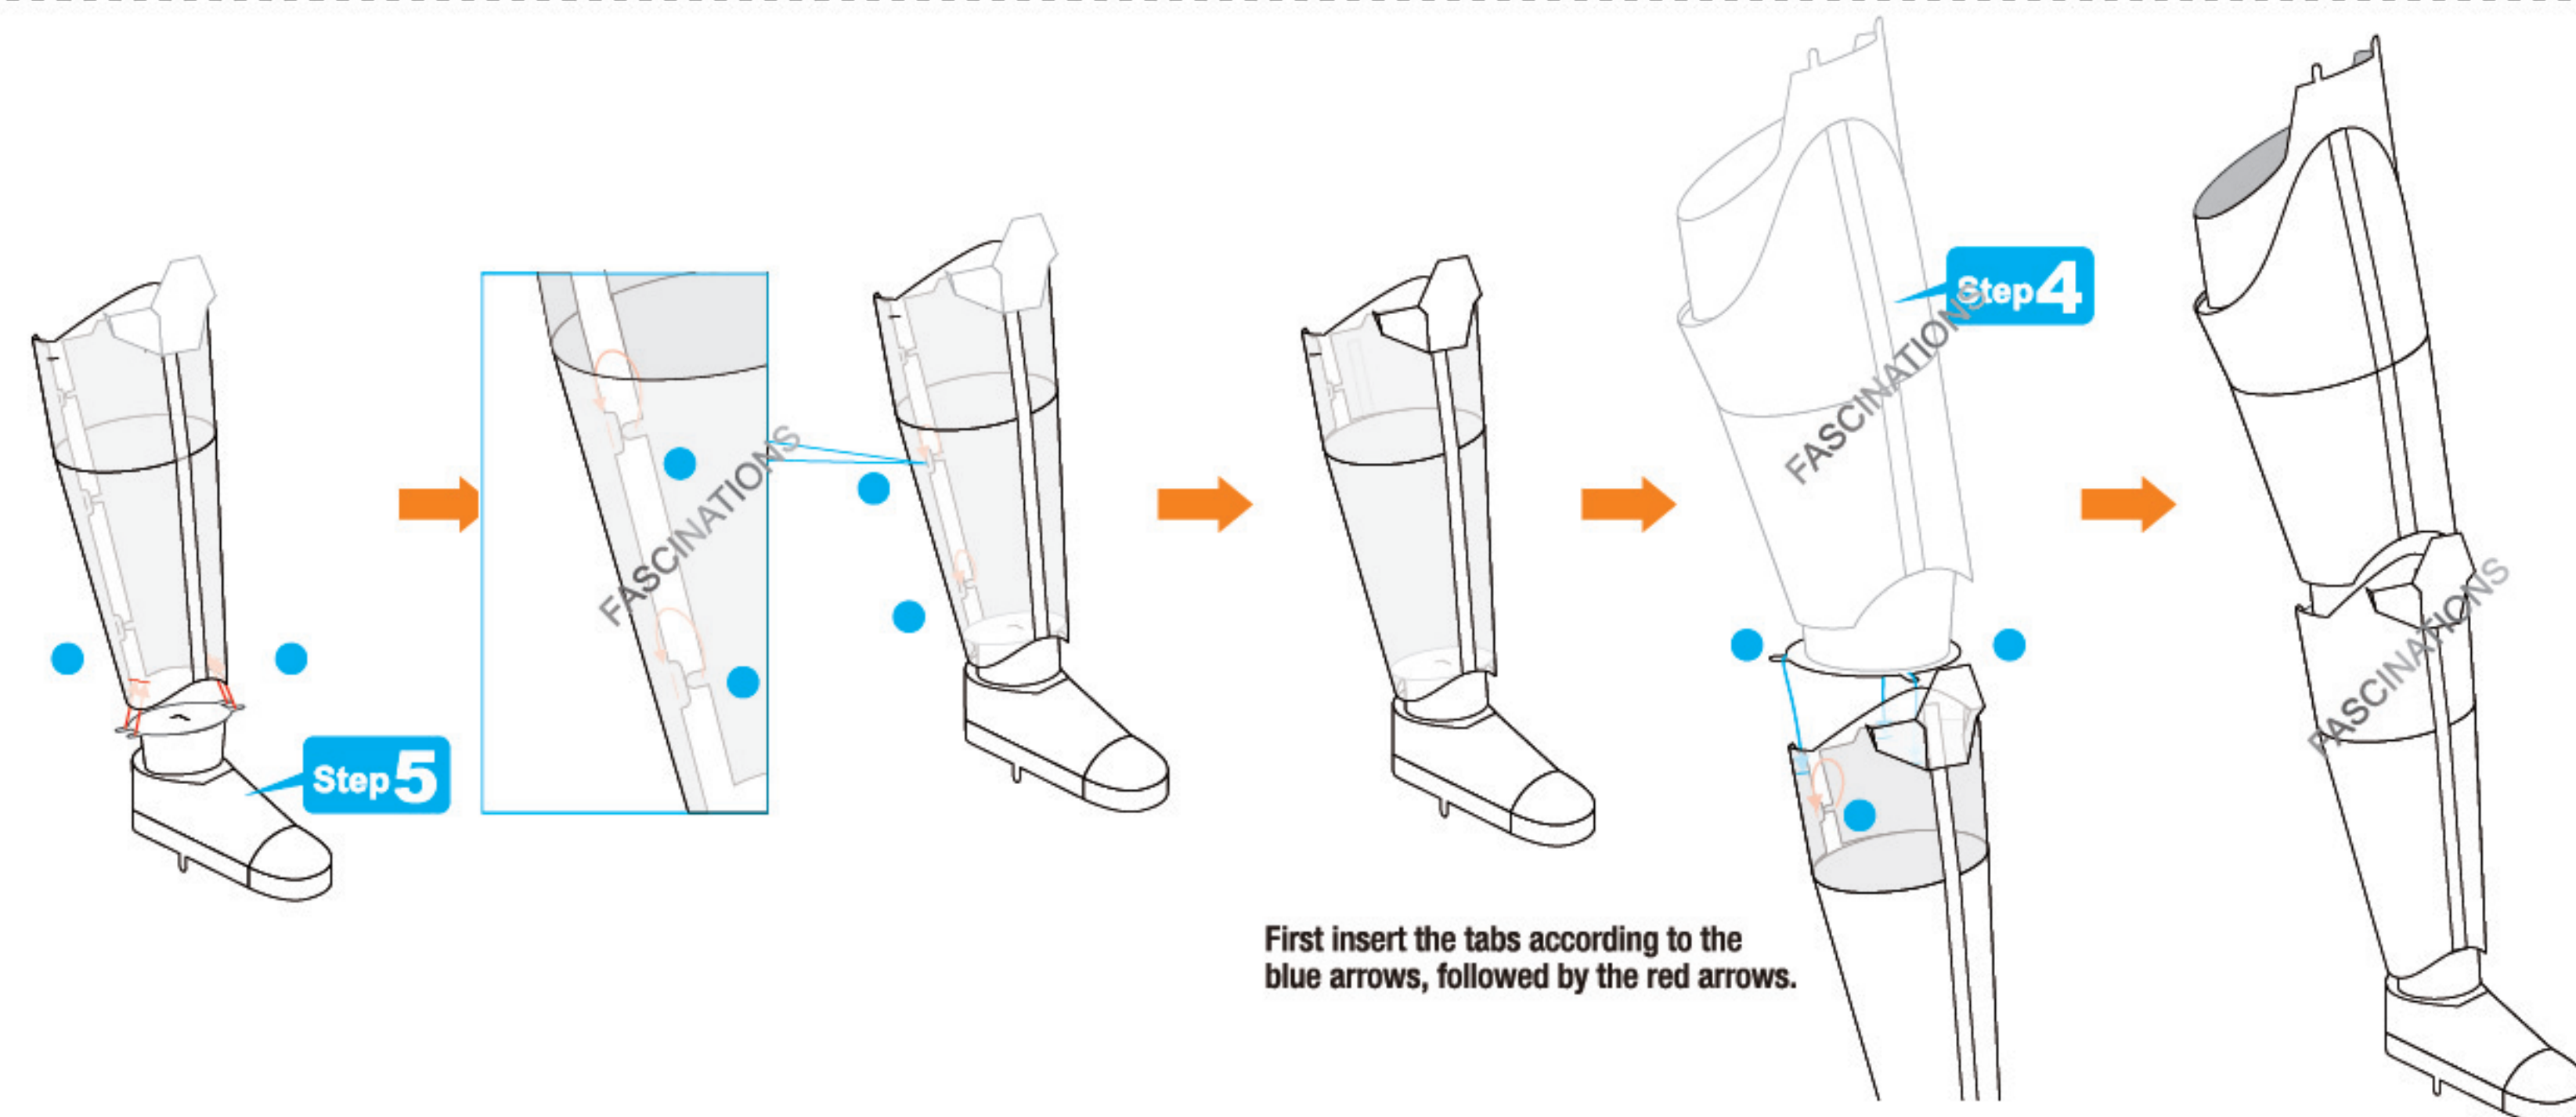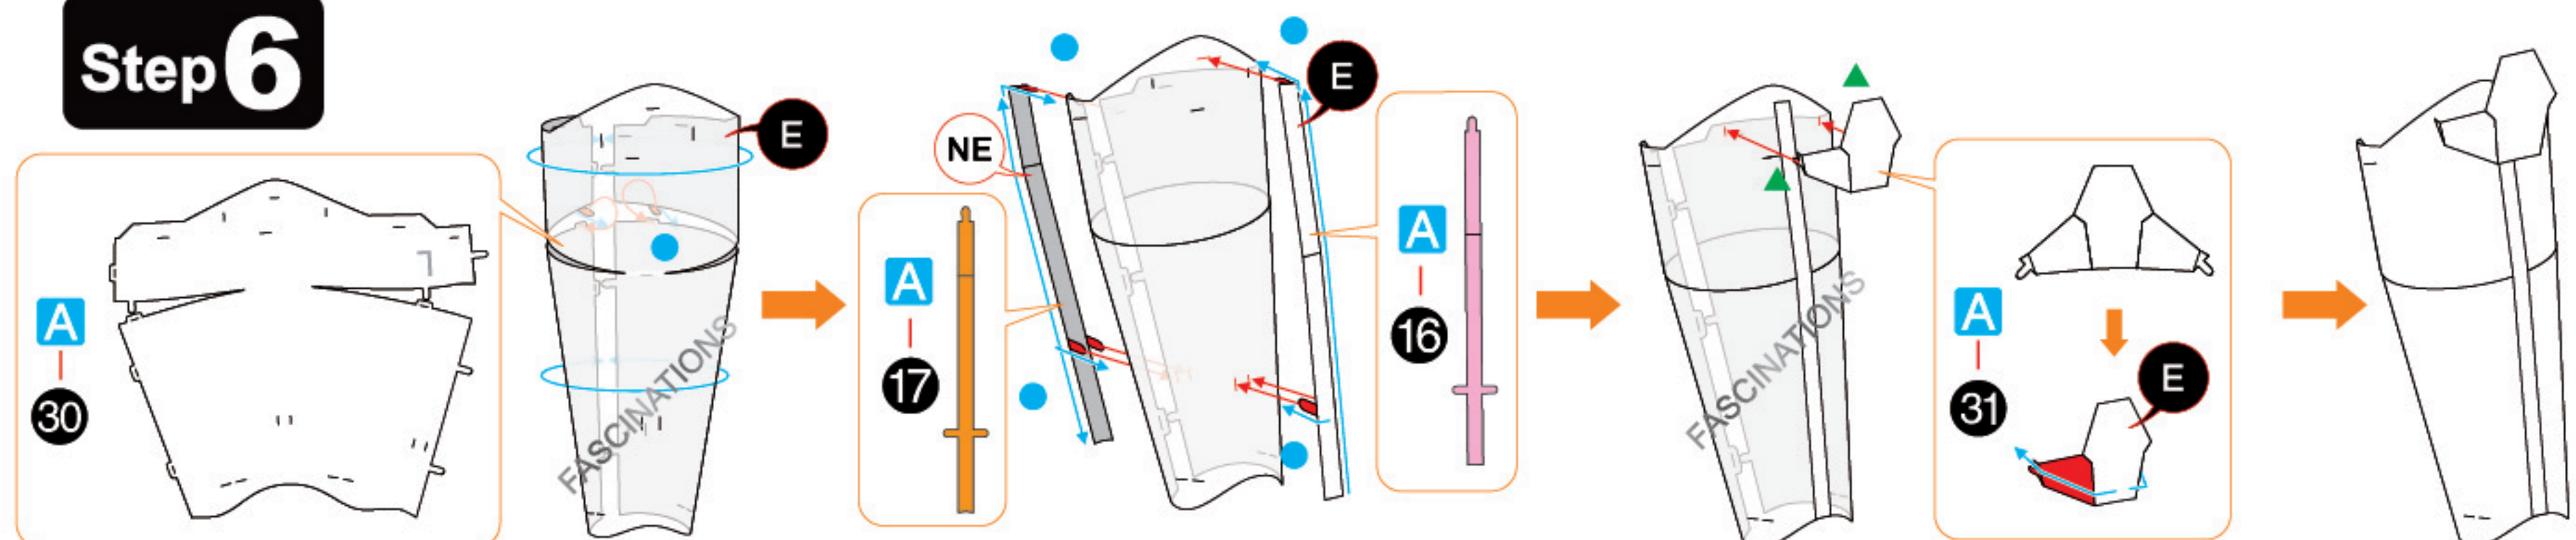


Step 7

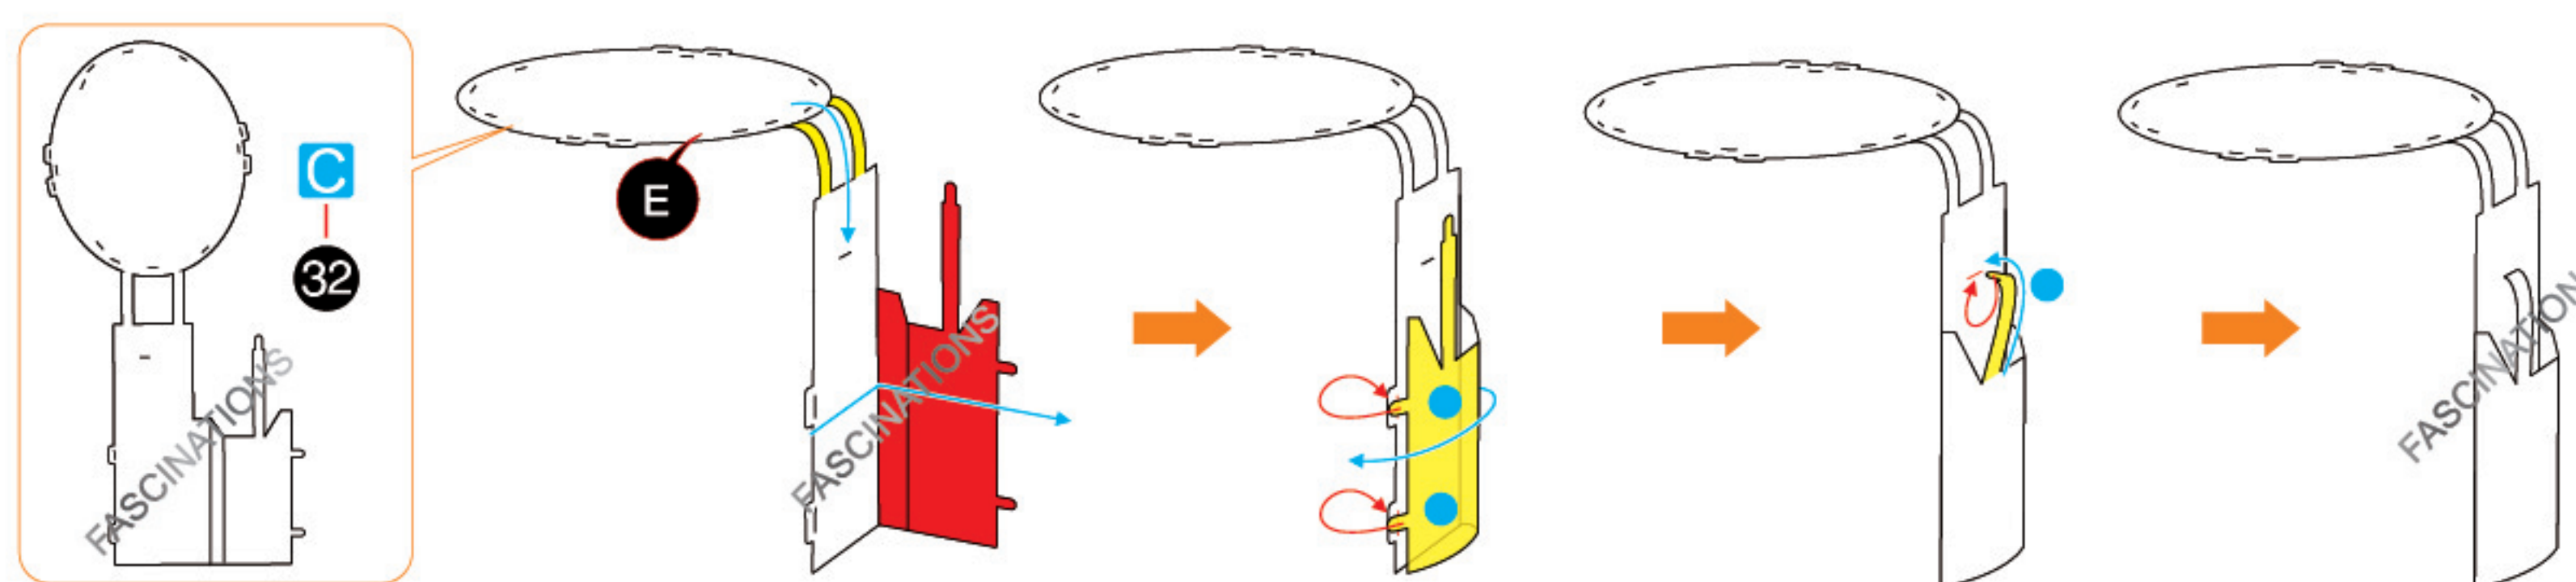


Step 8

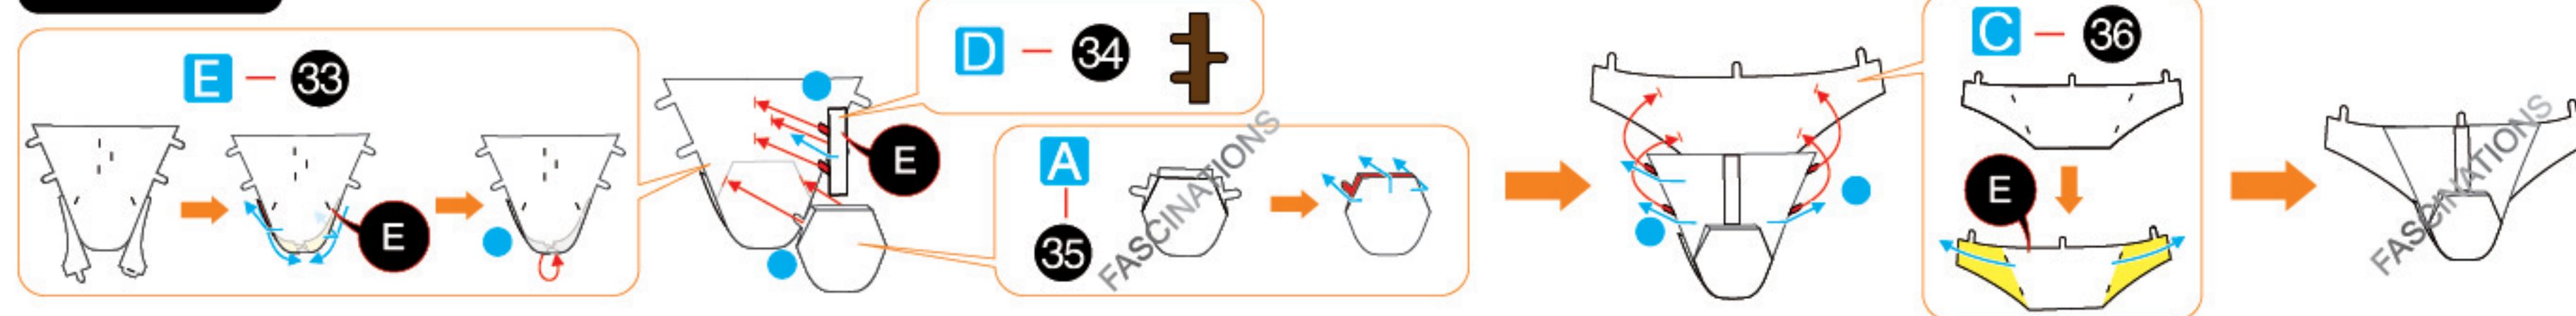


Step 9

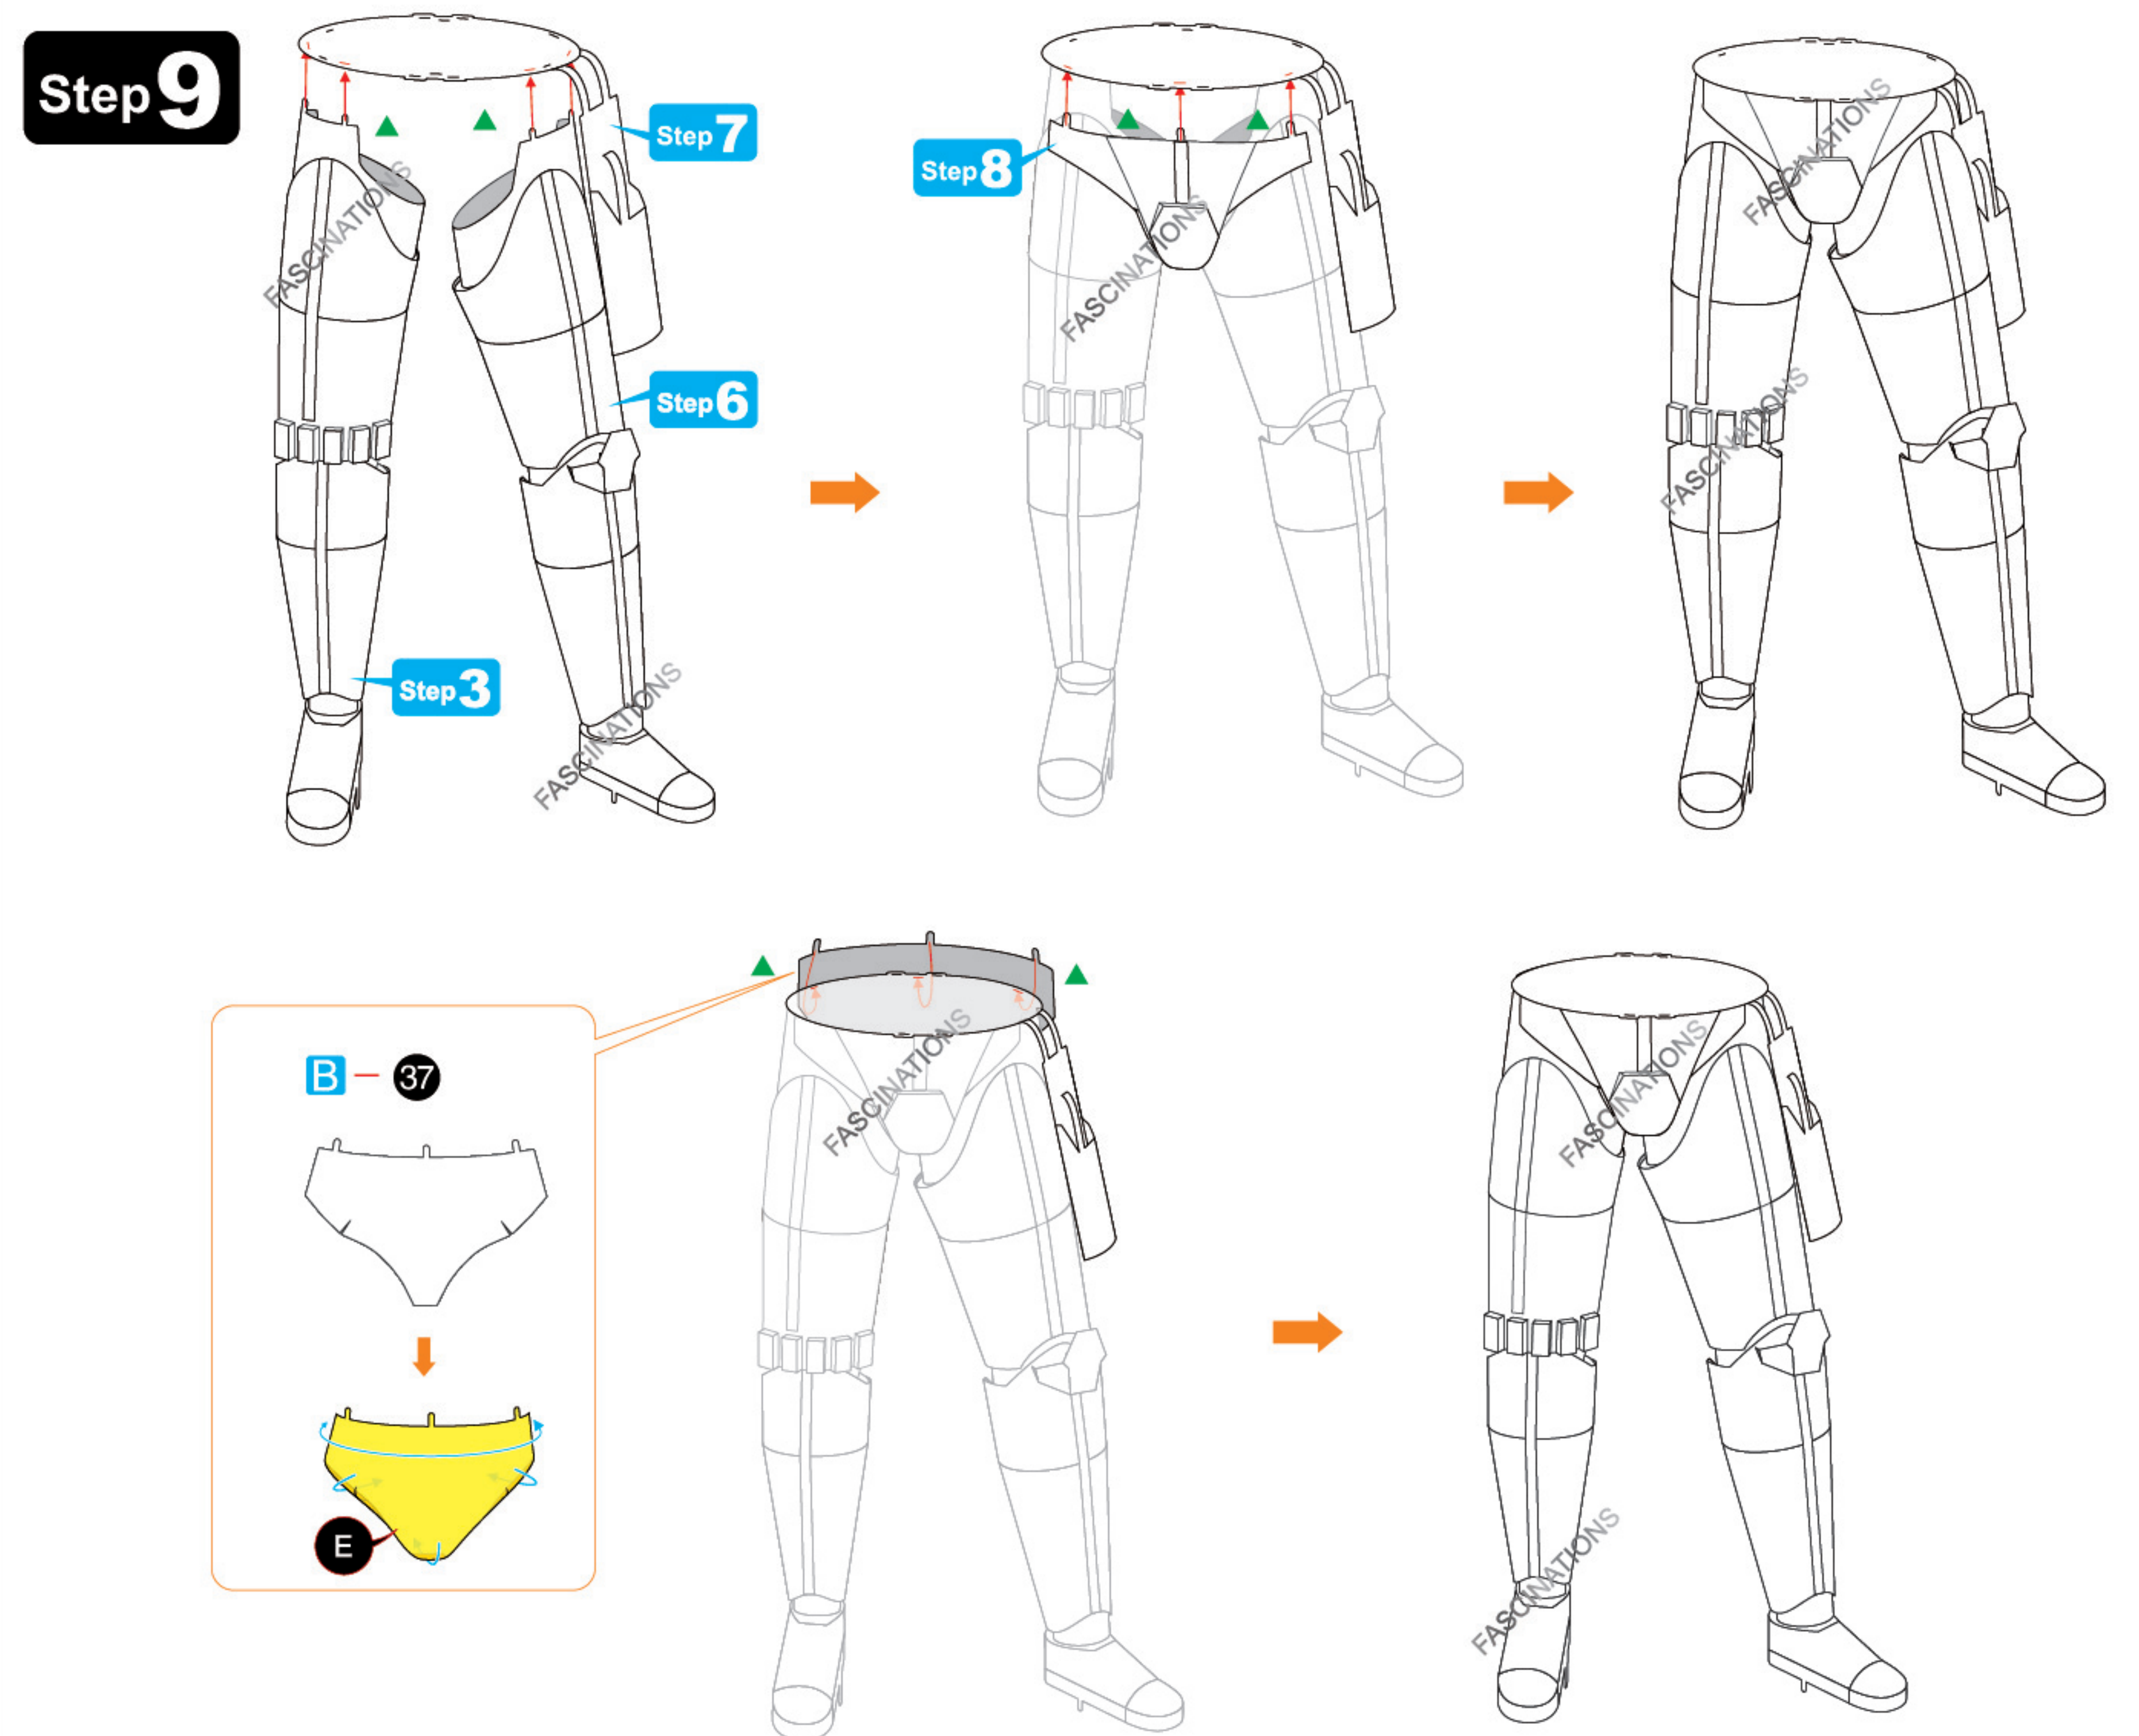



Step 10





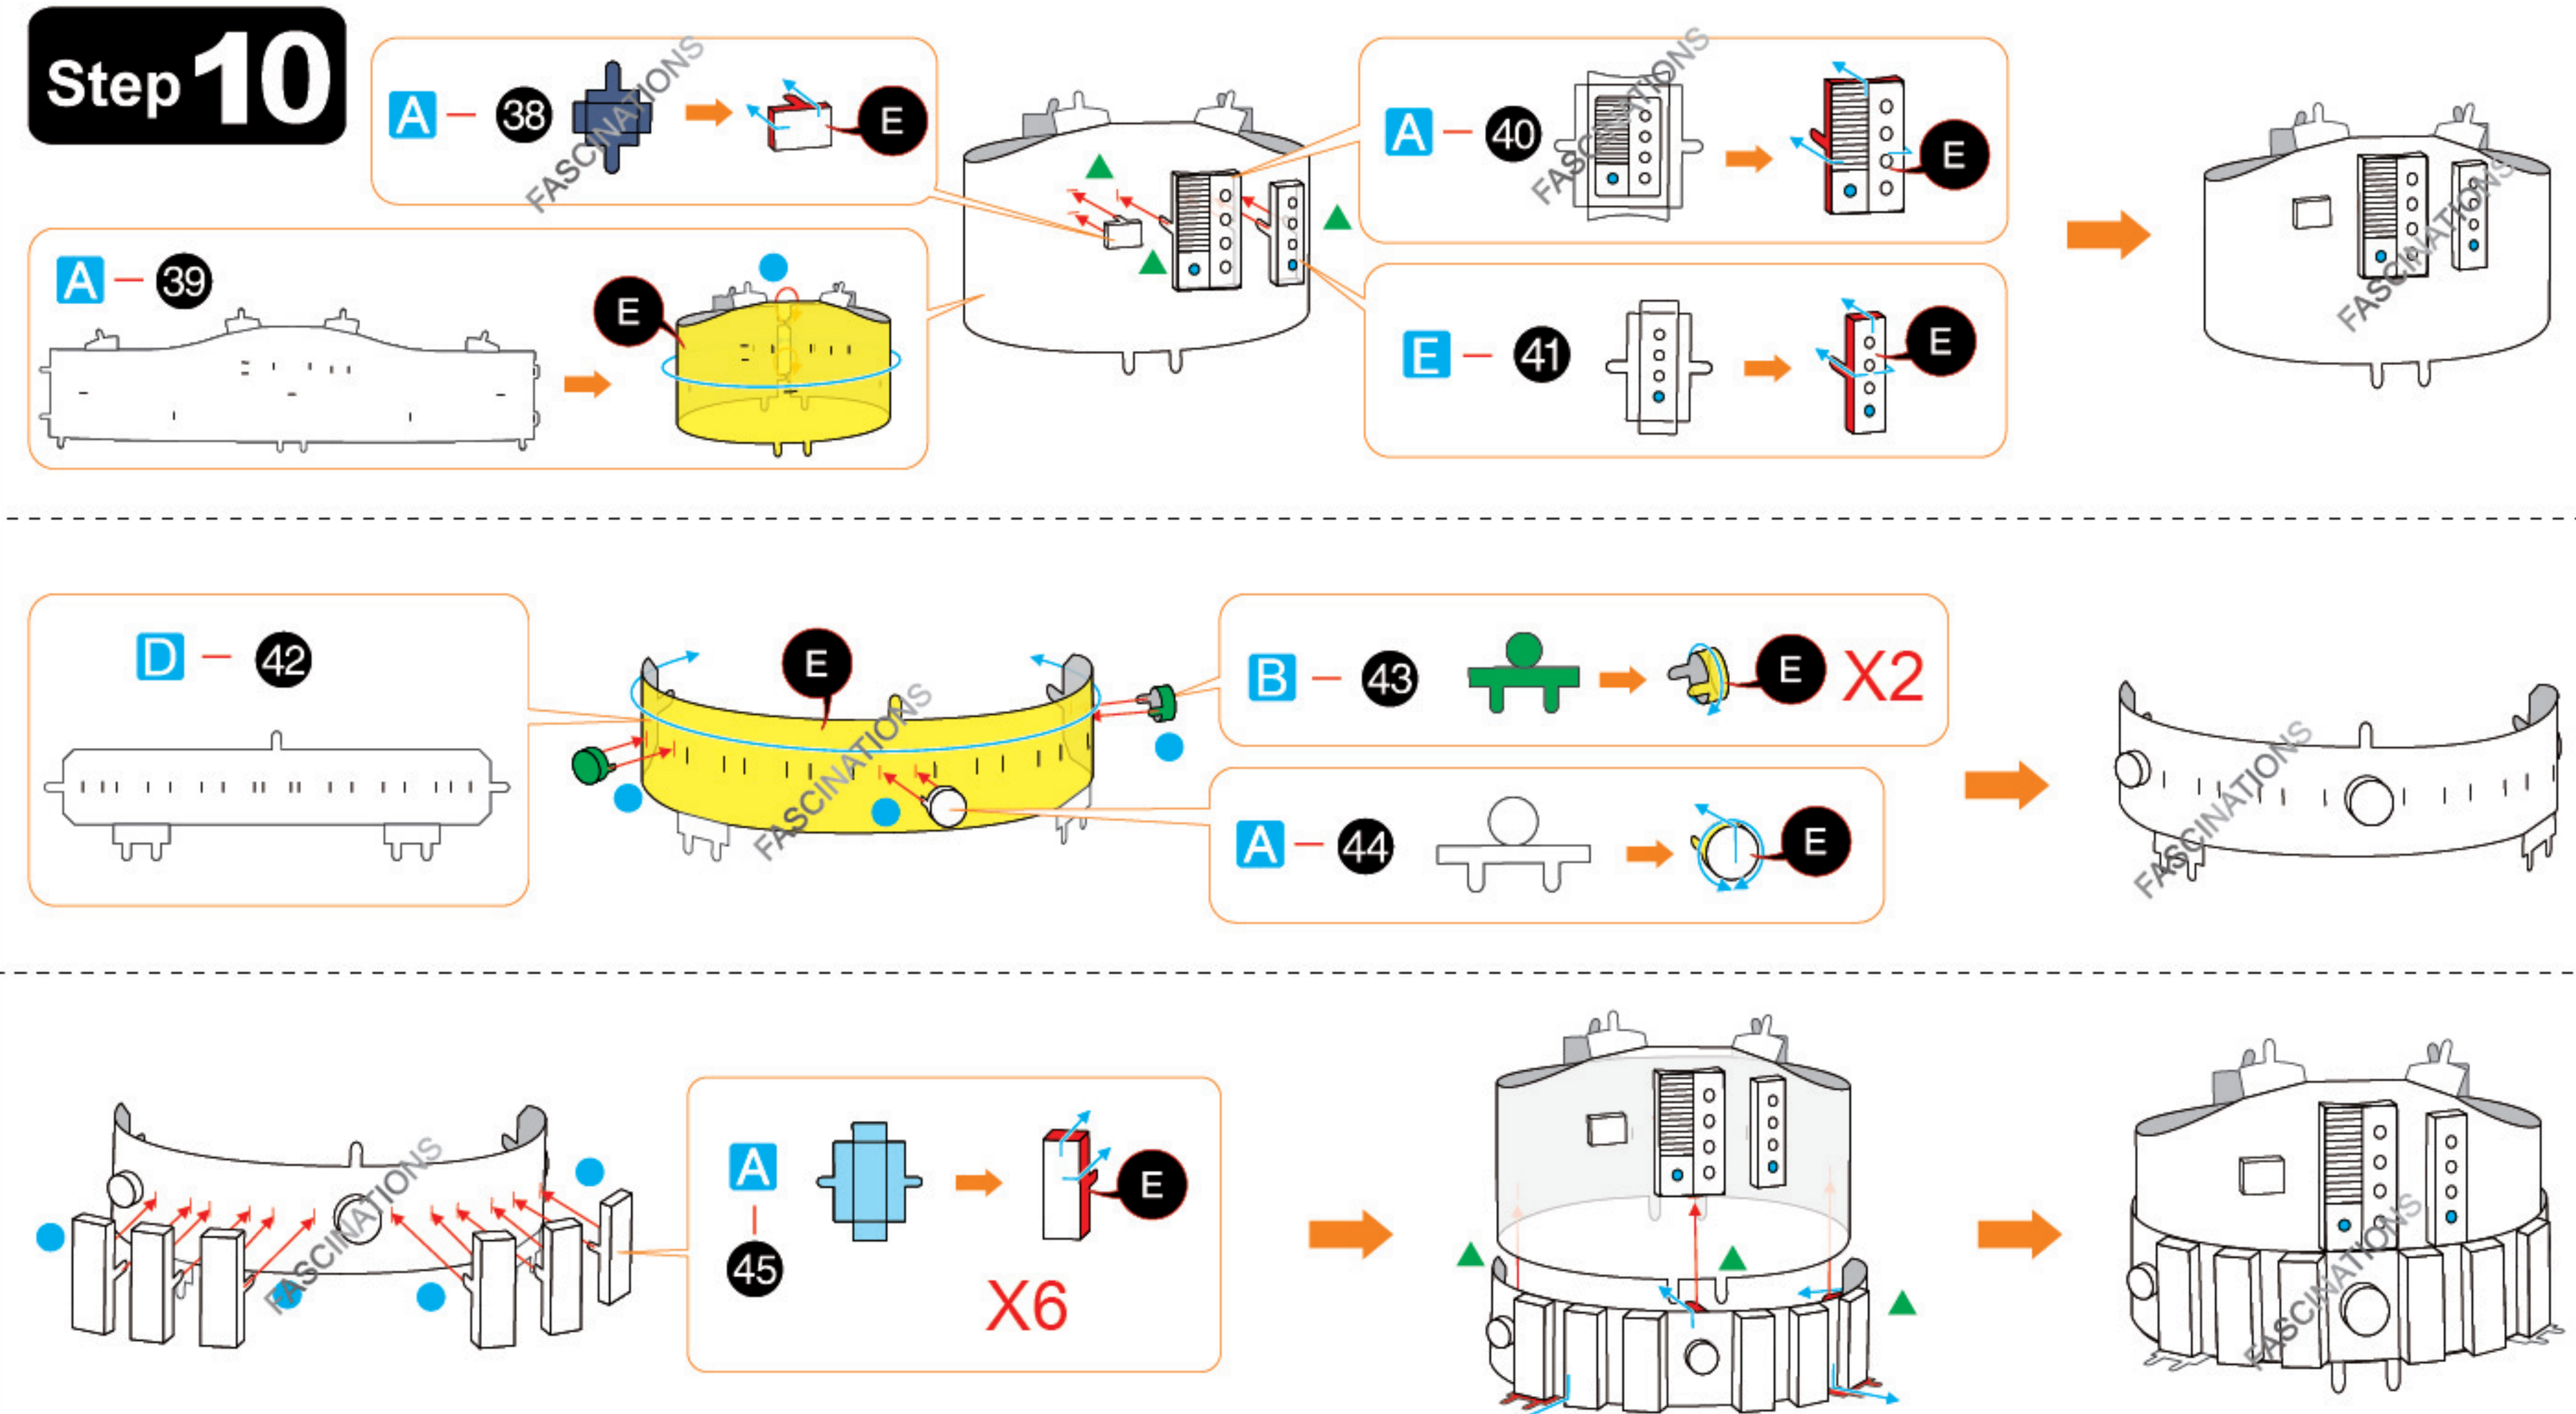


Step 11

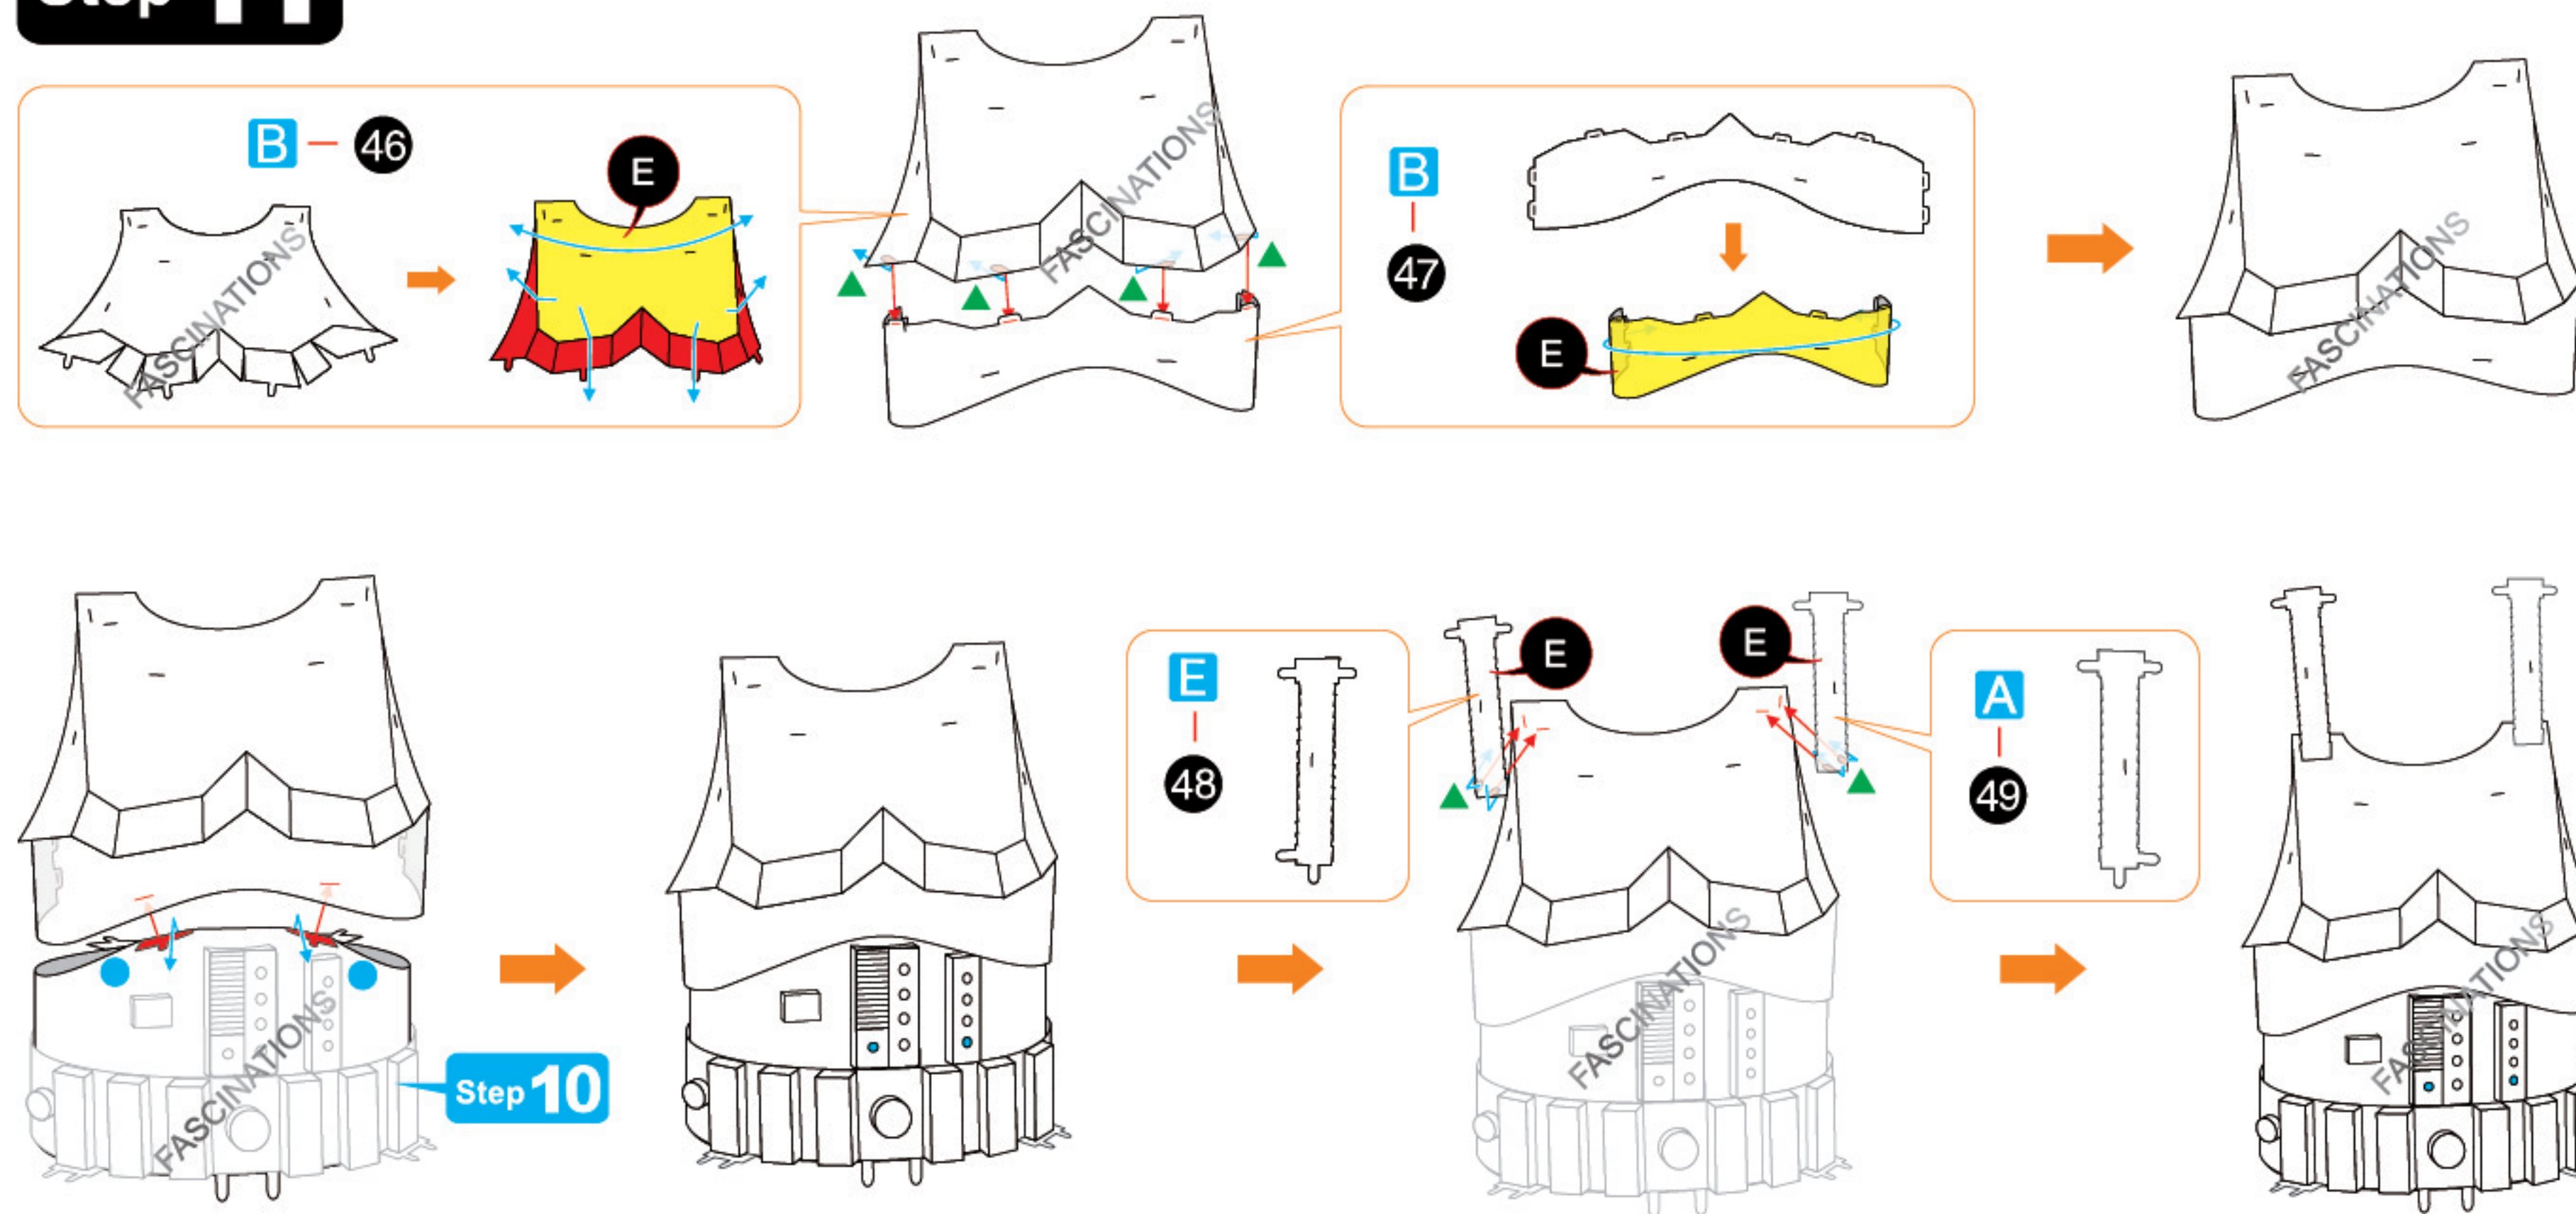


Step 12

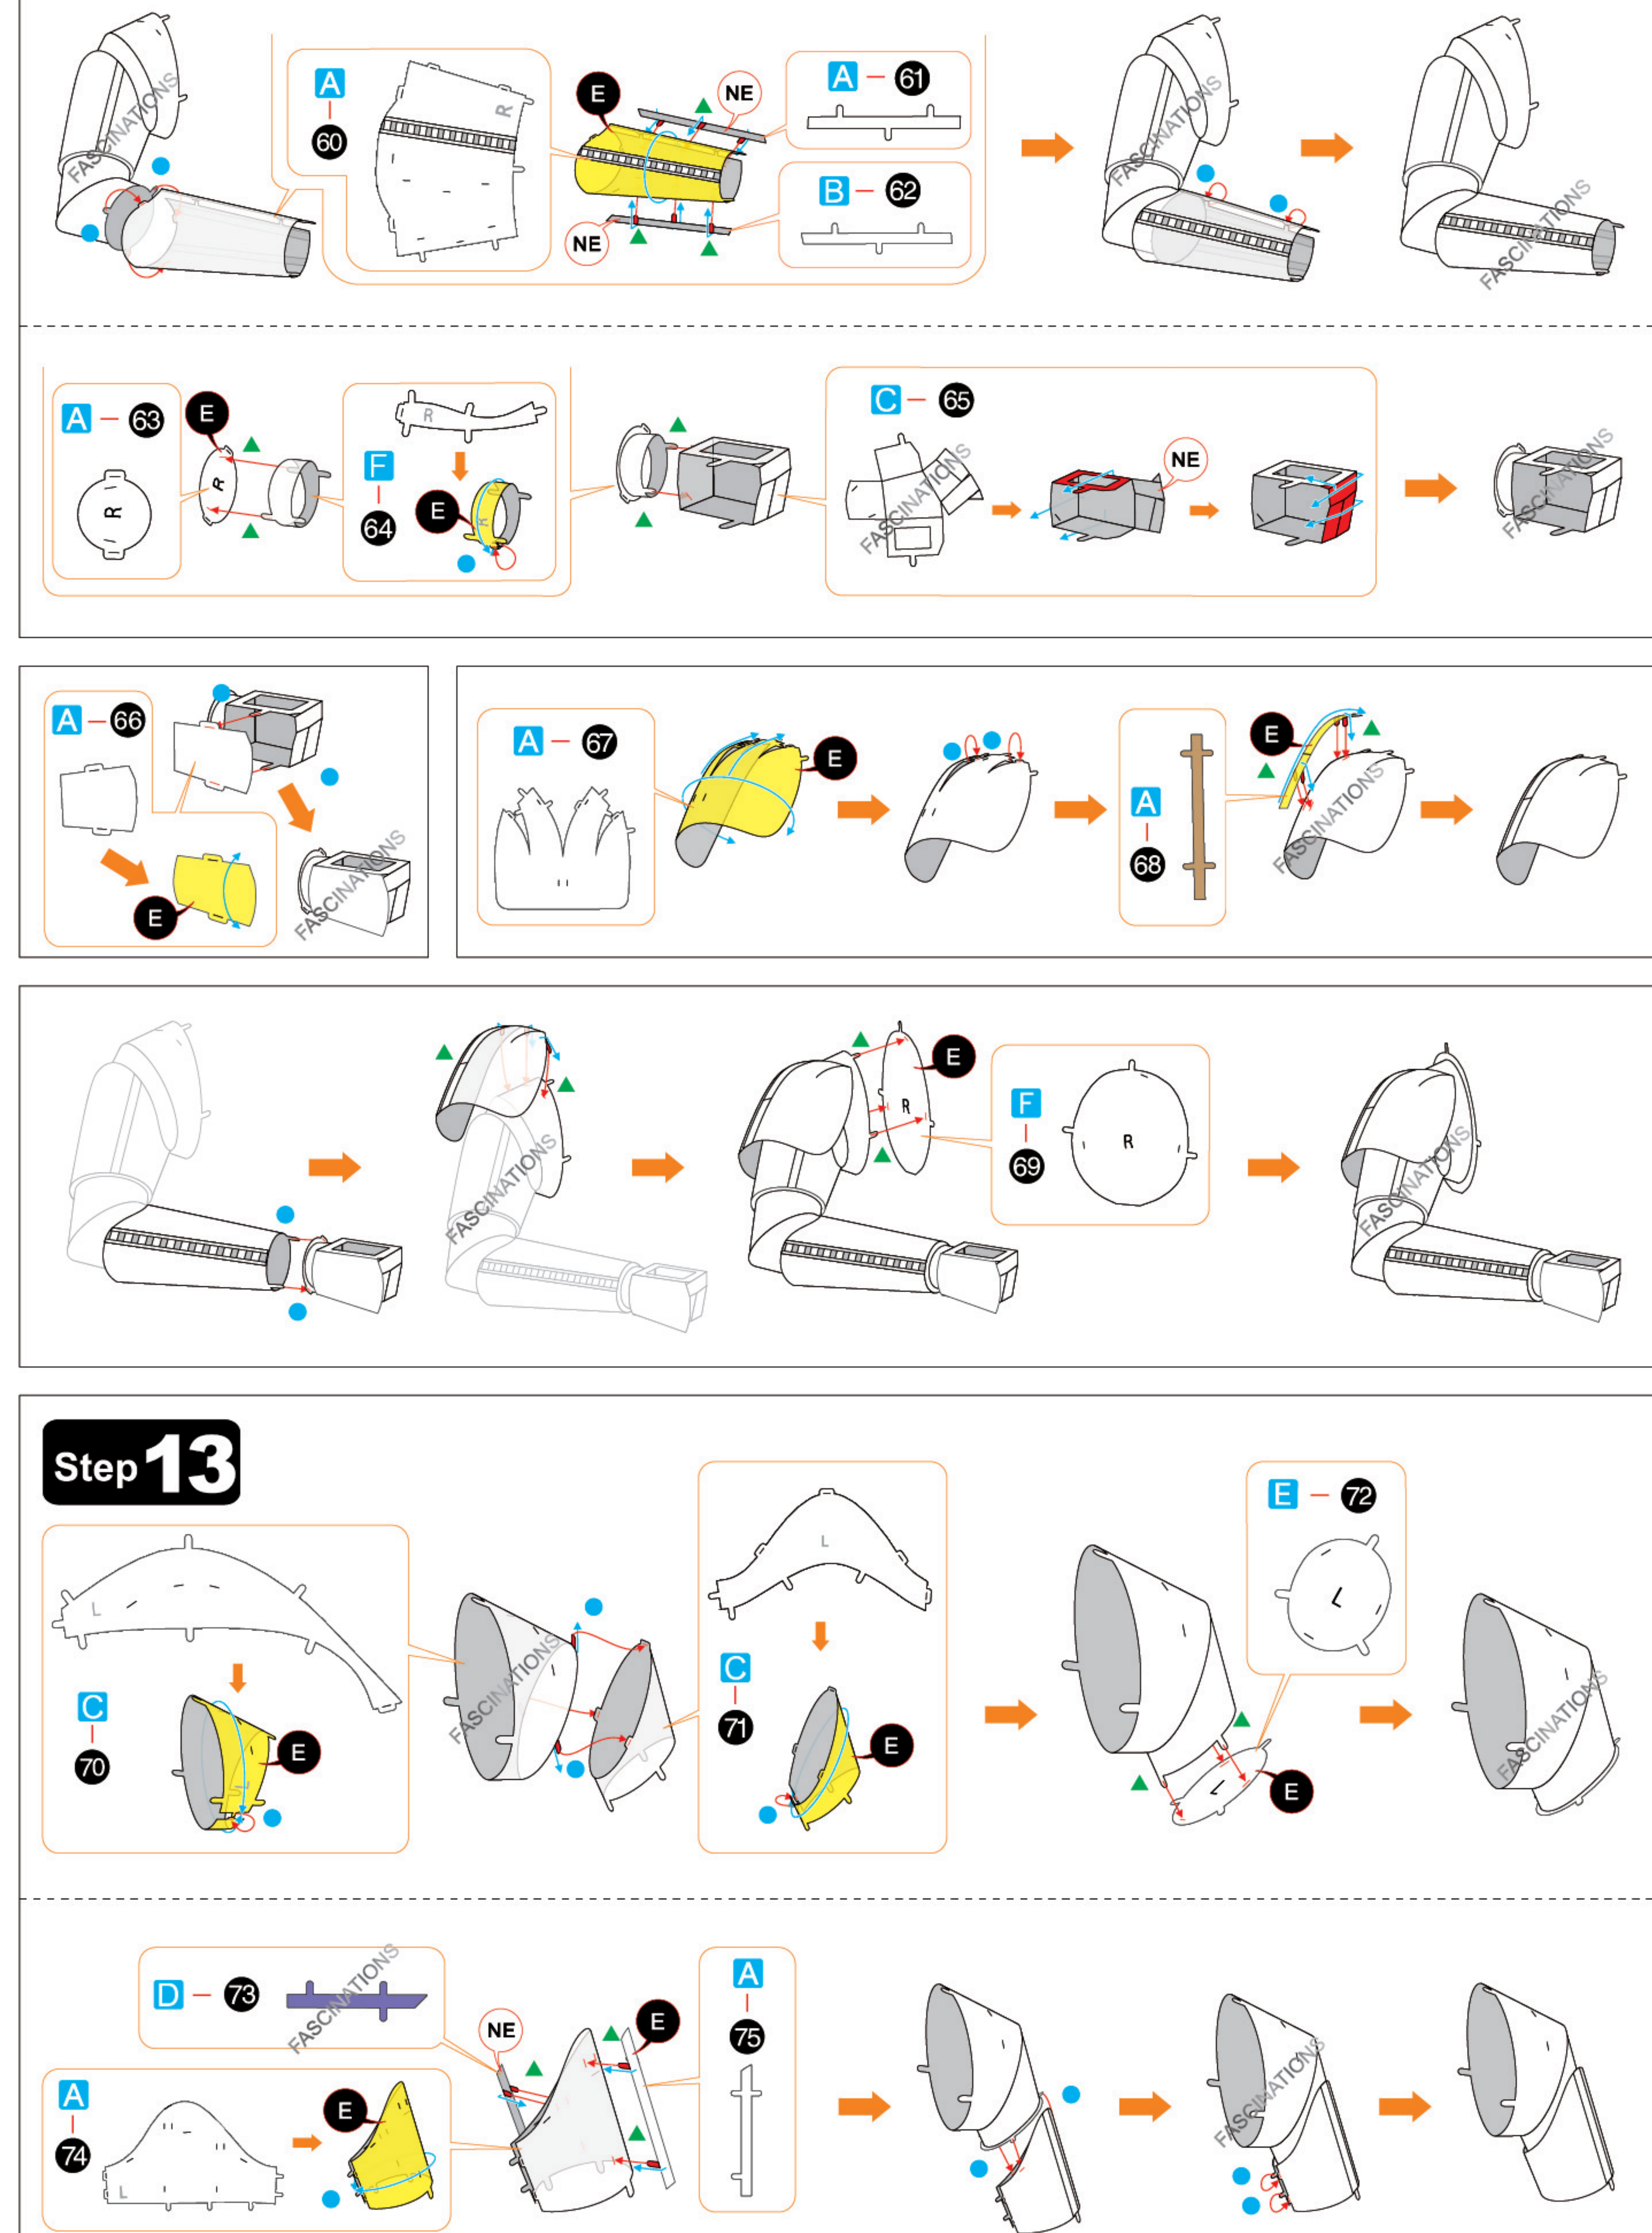
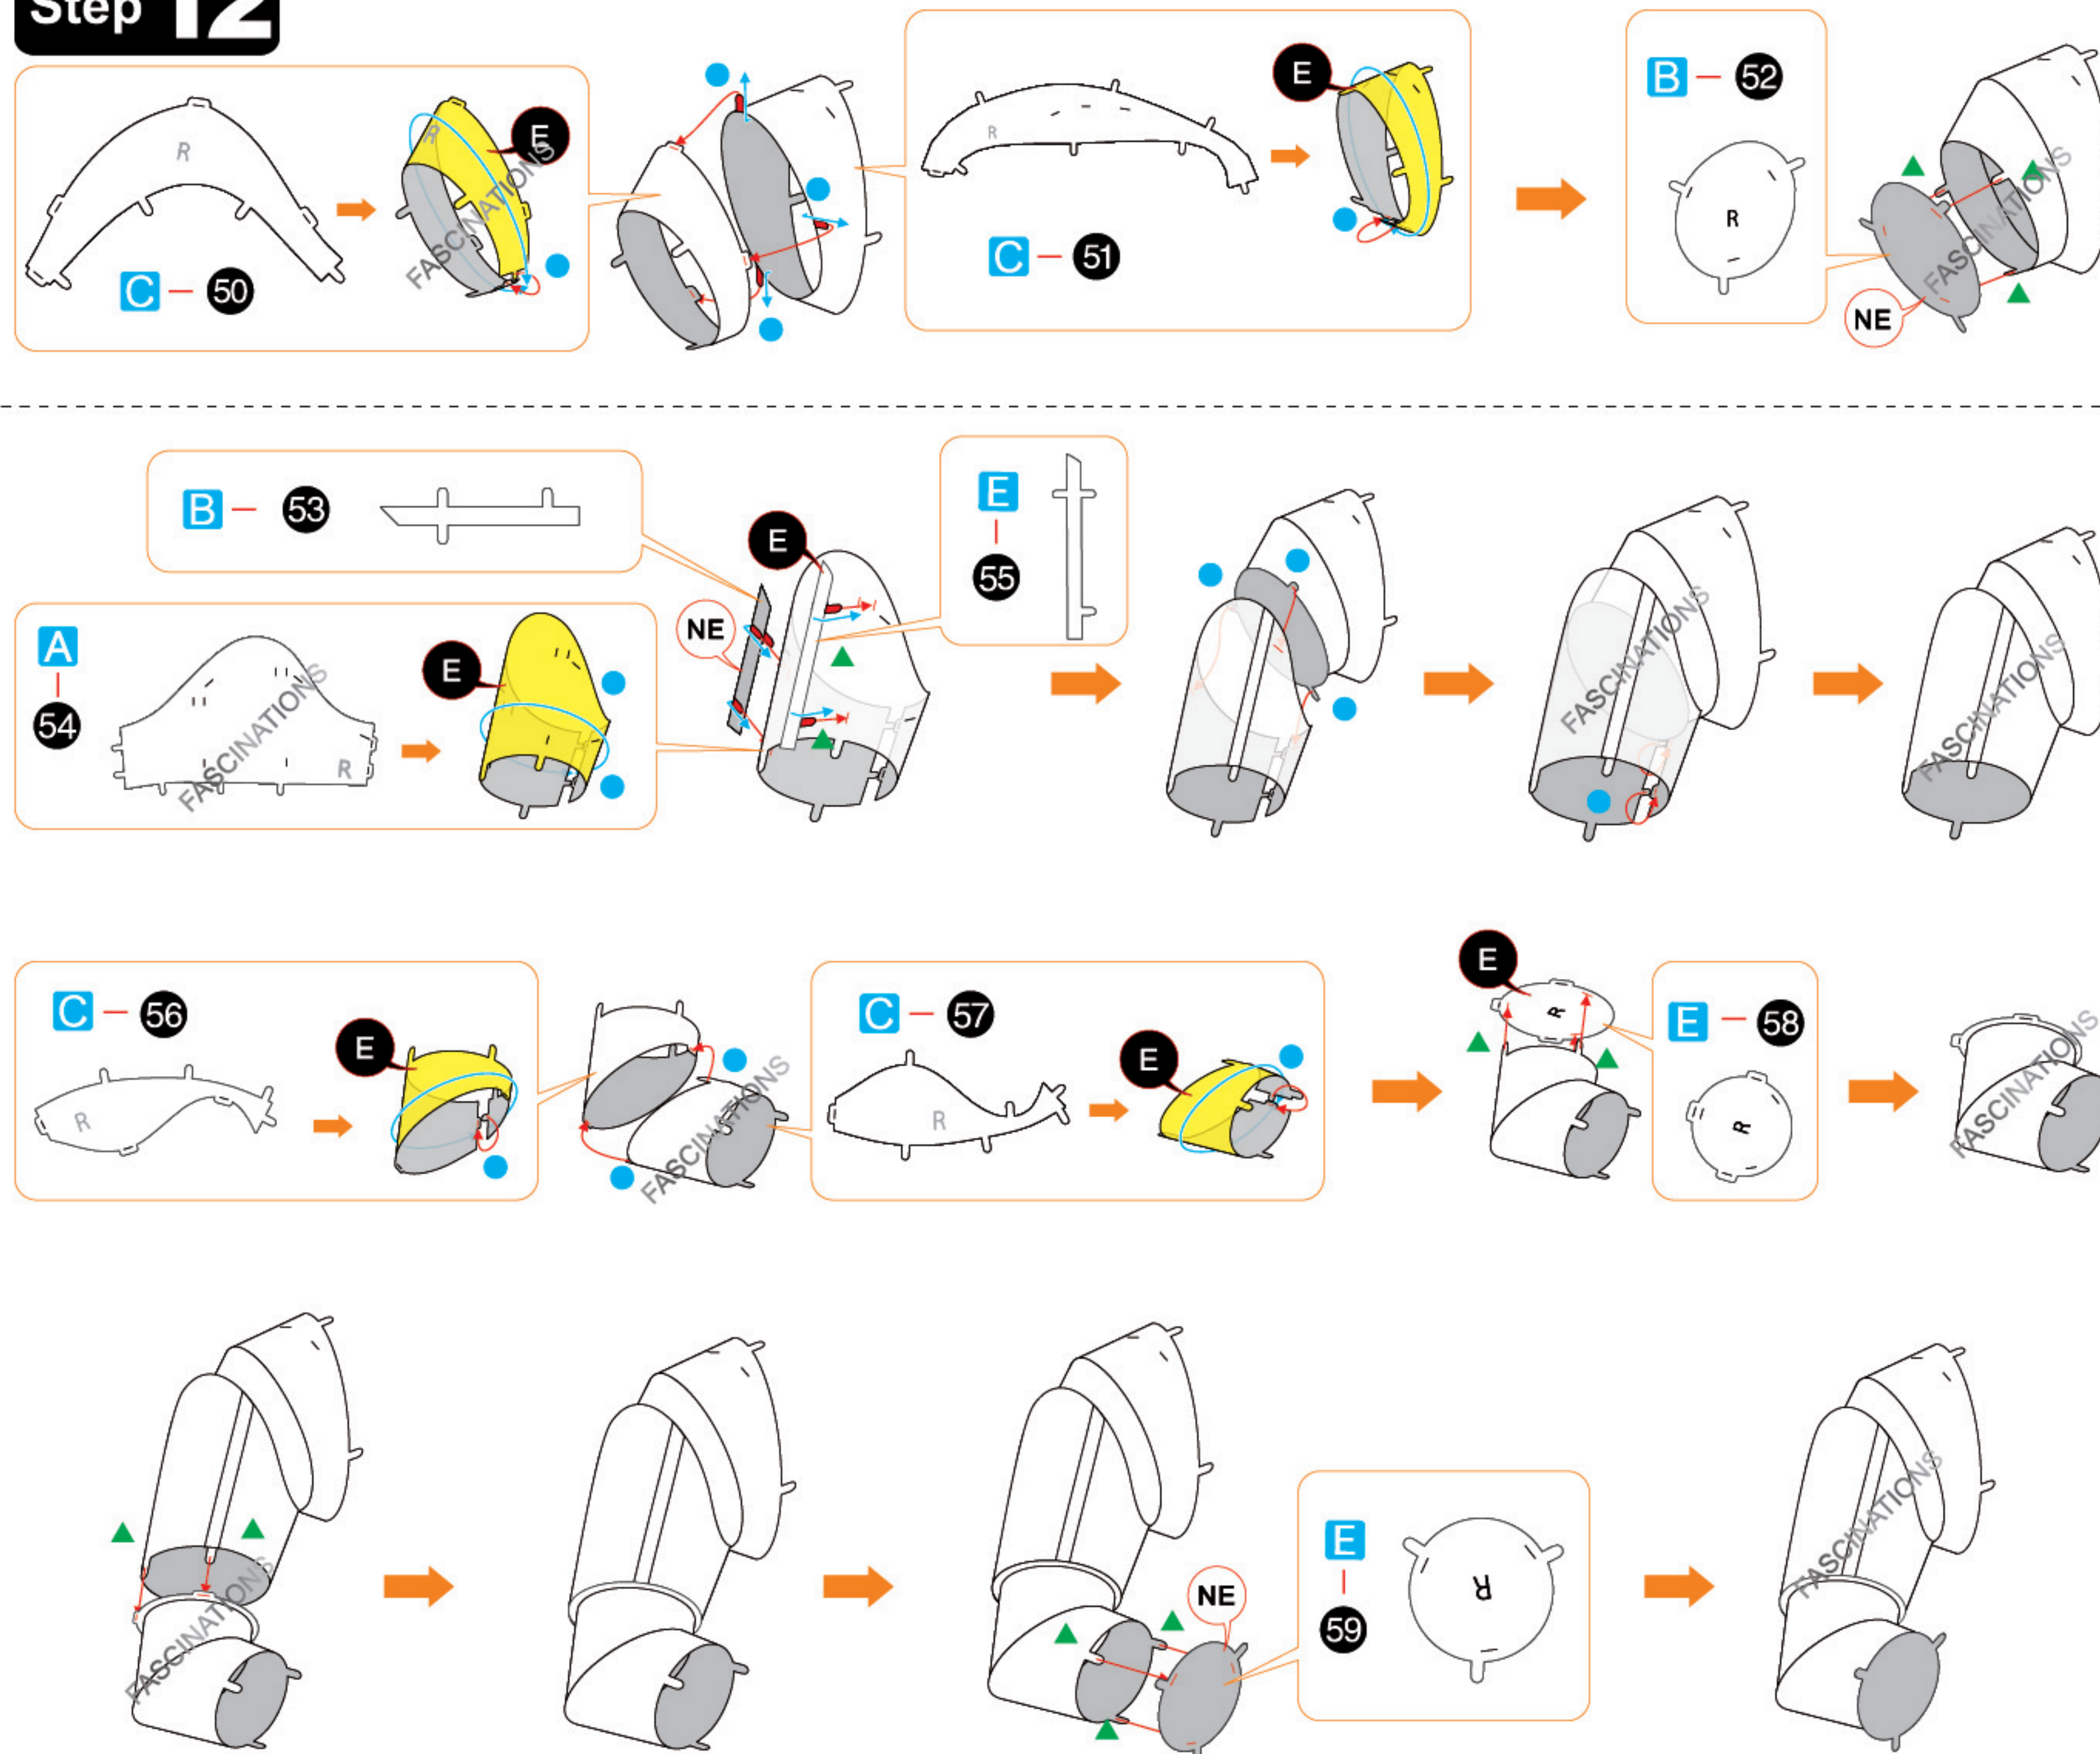


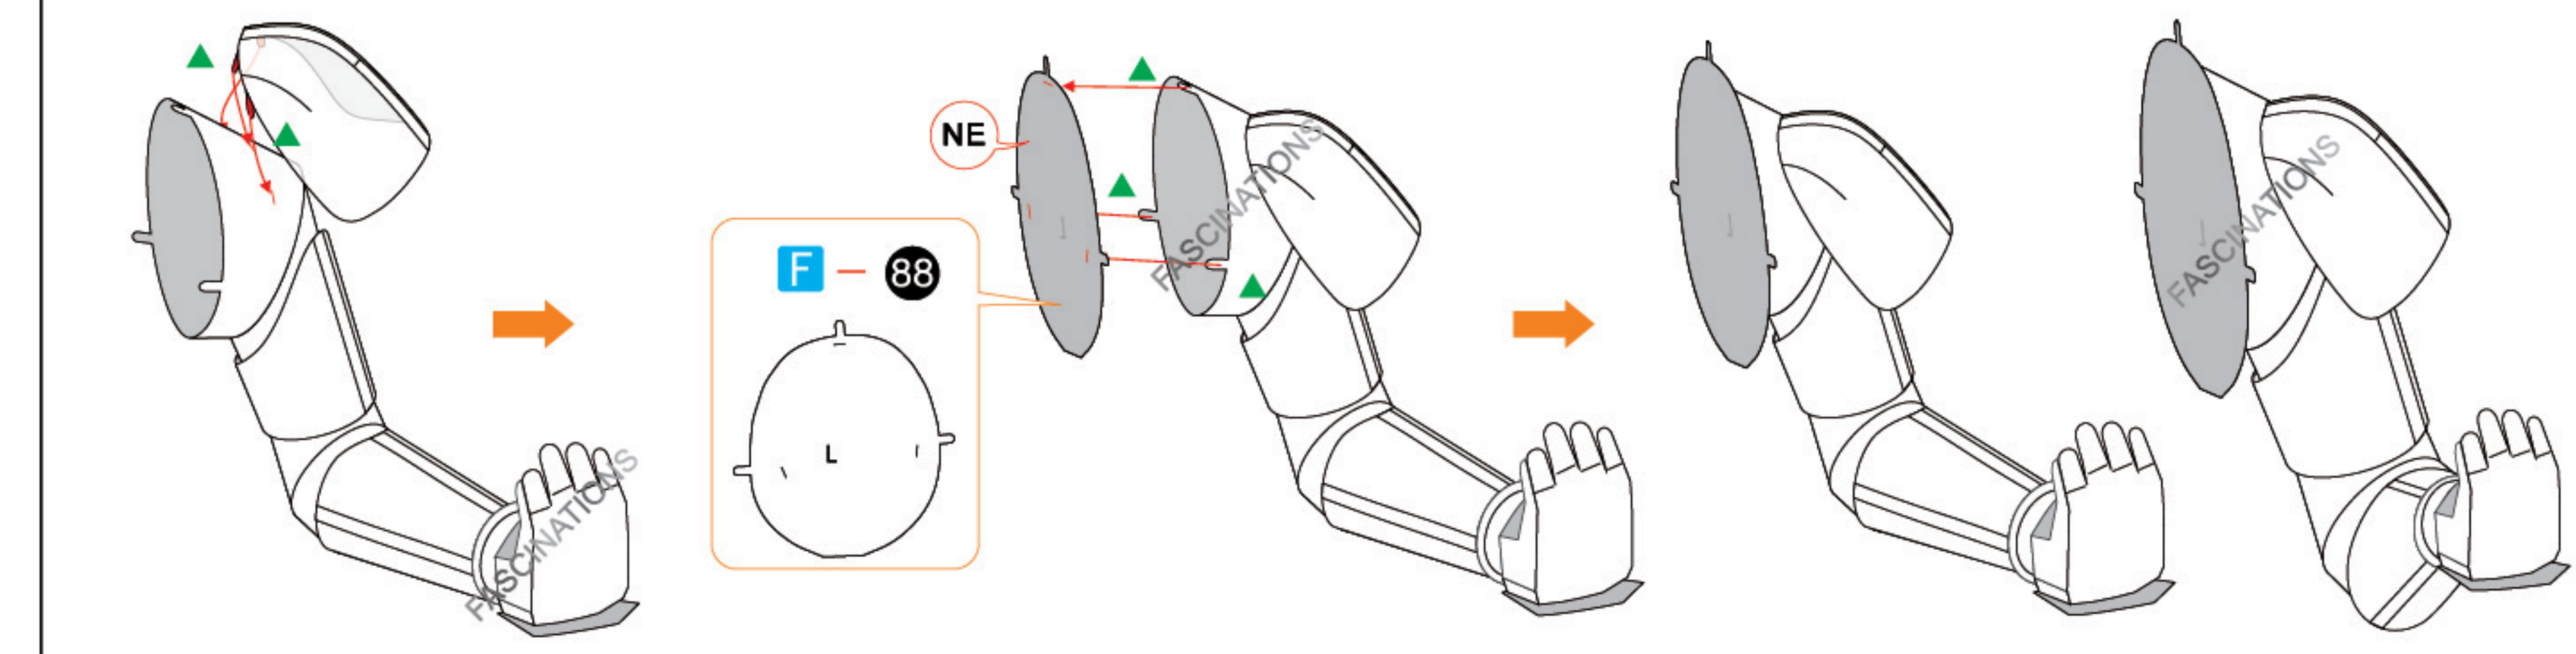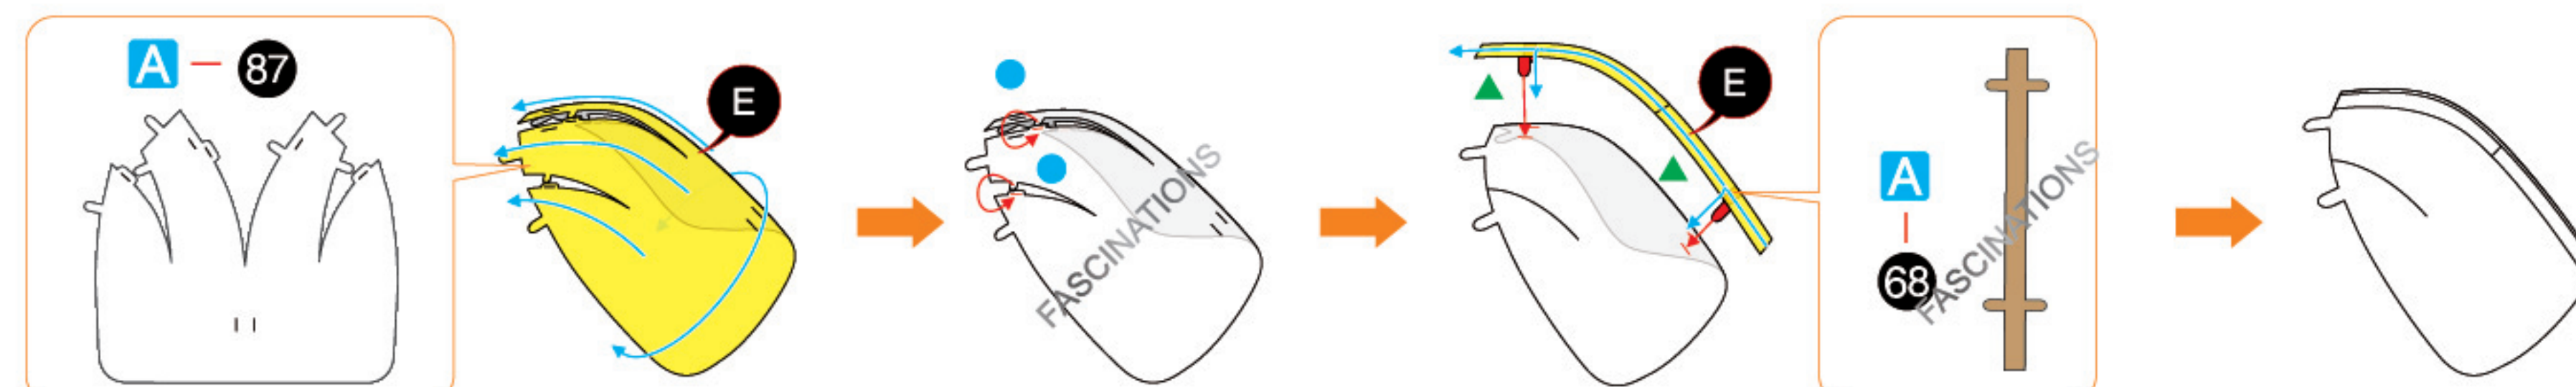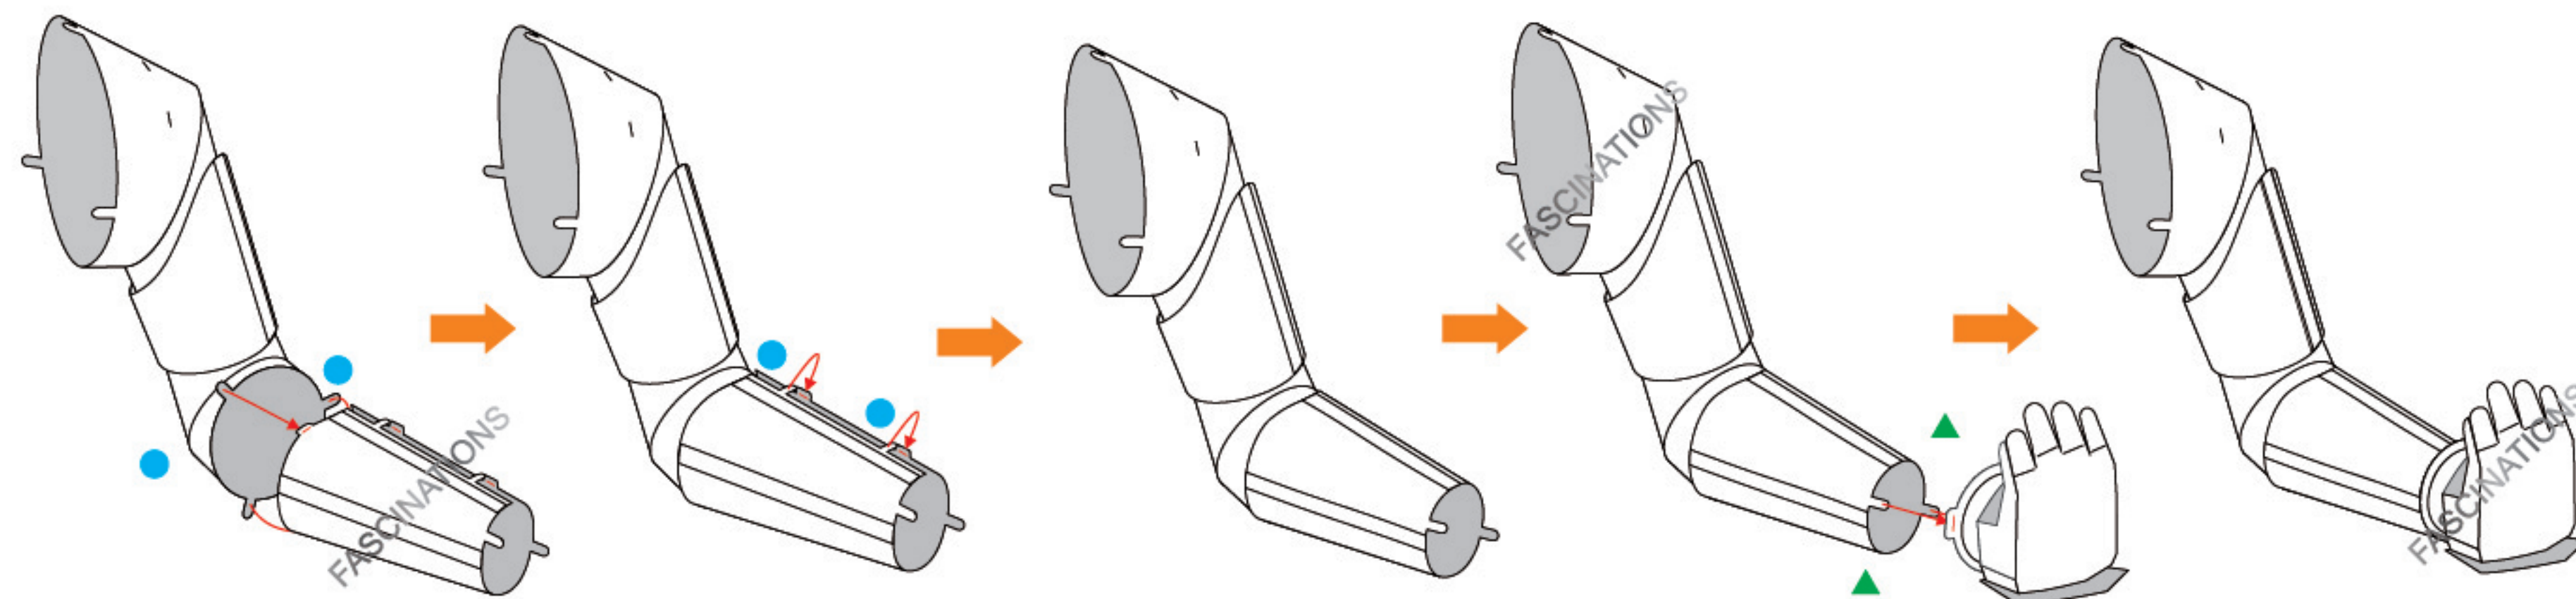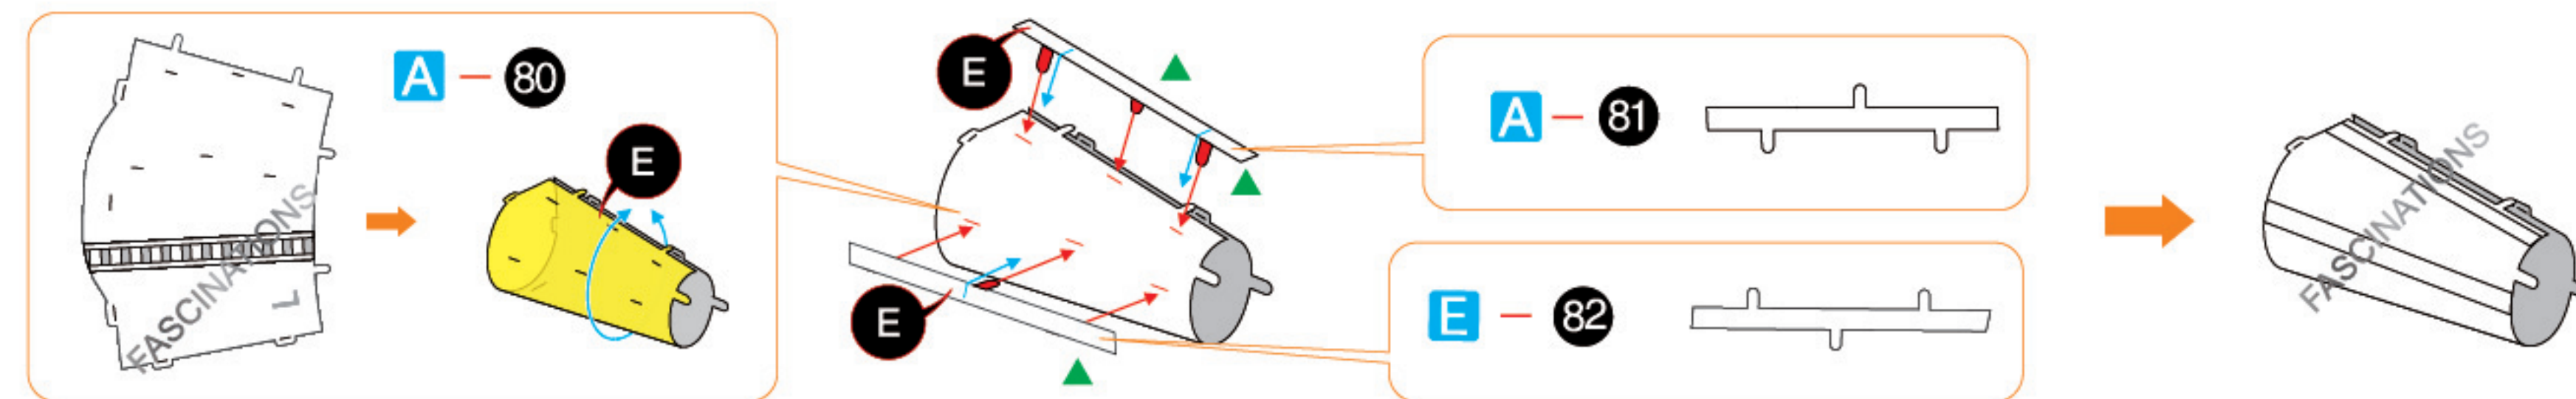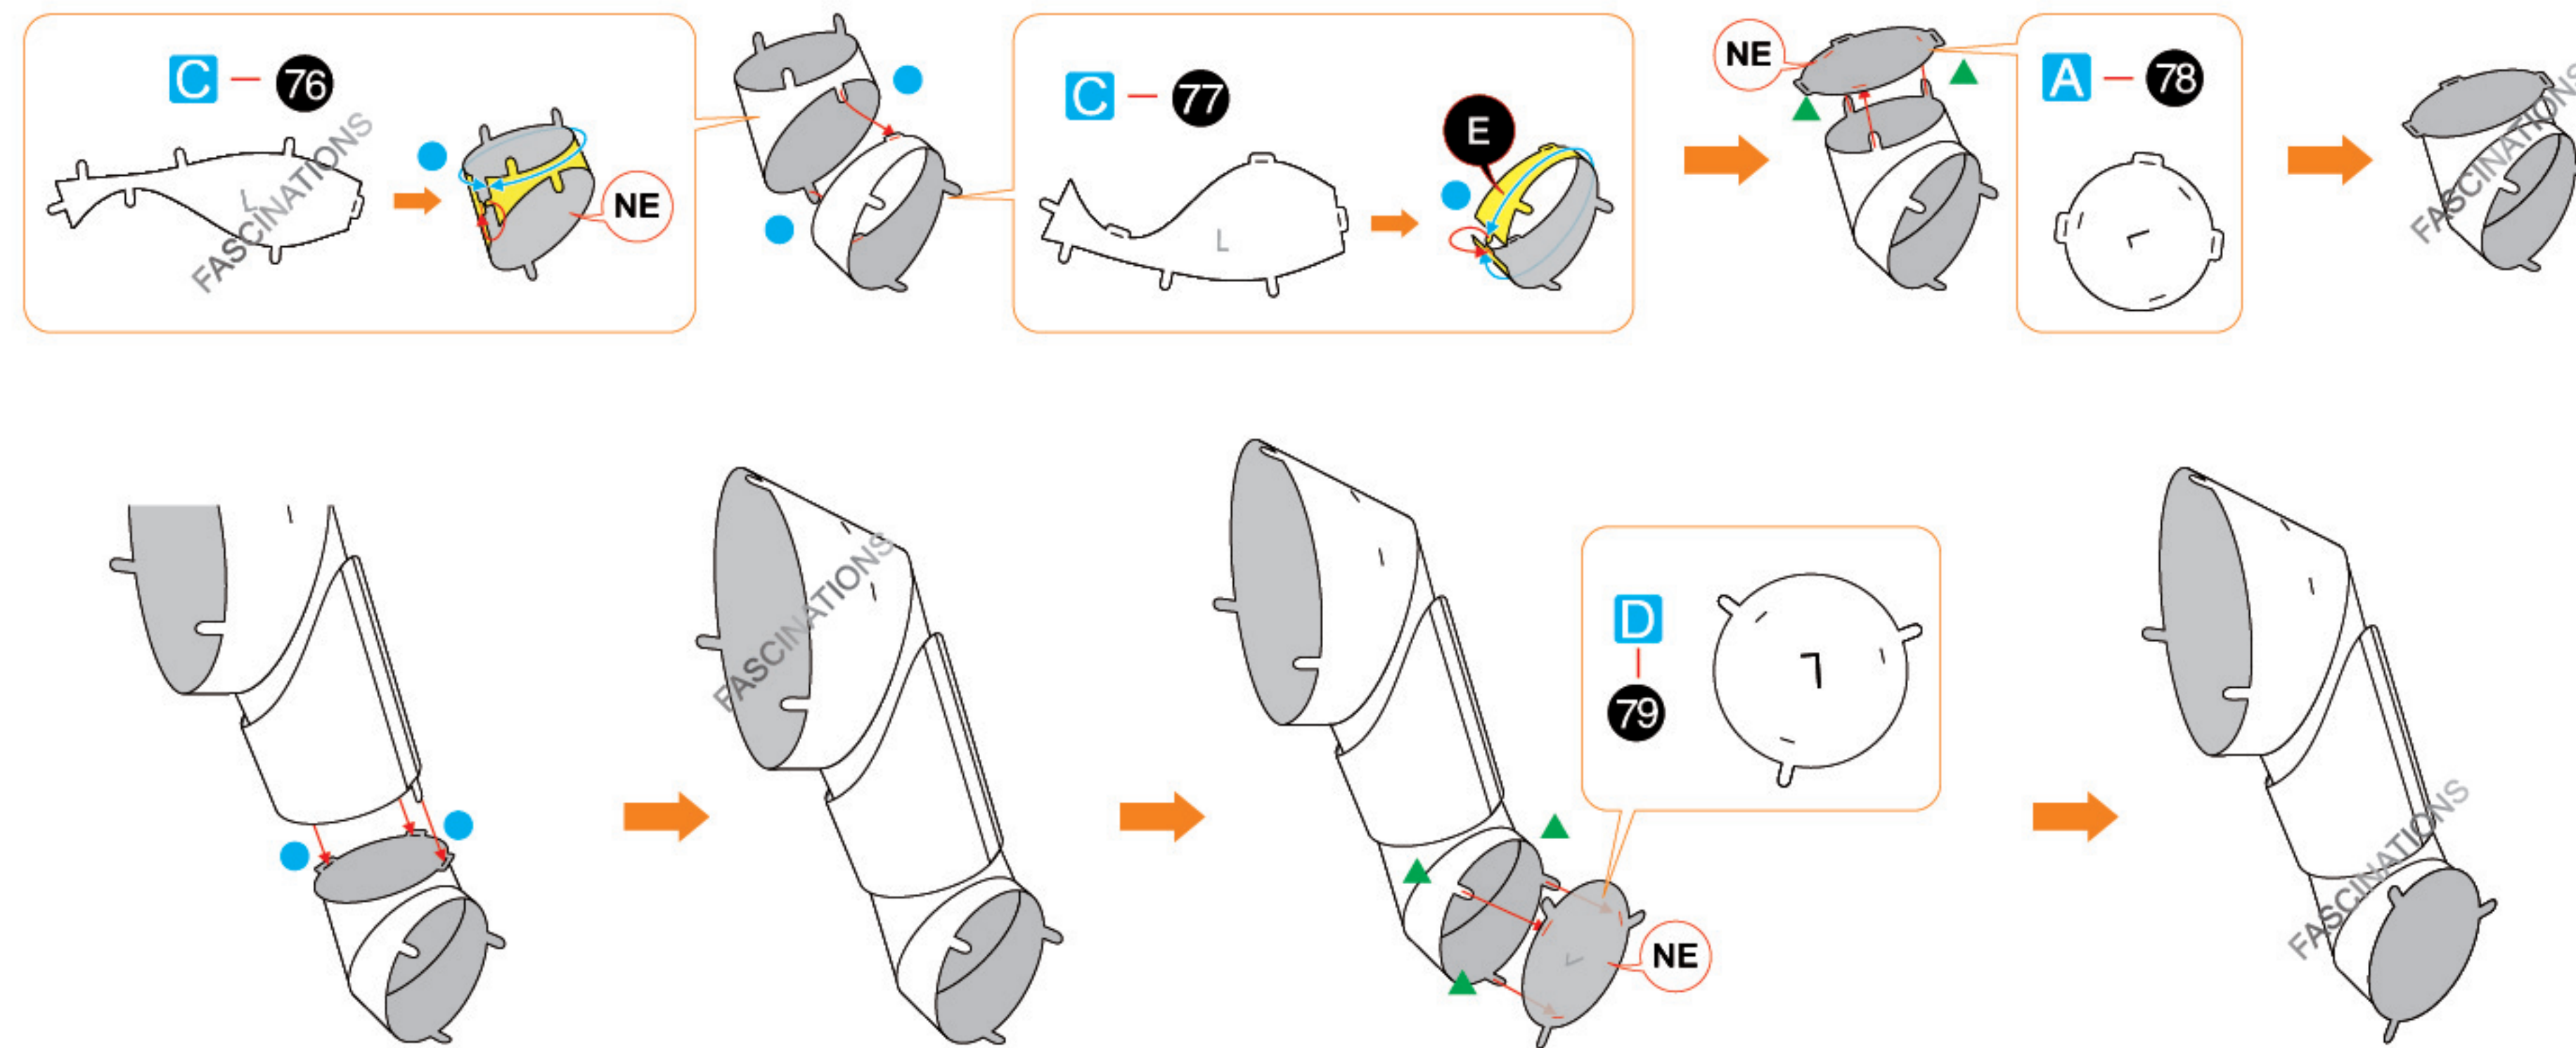


Step 14


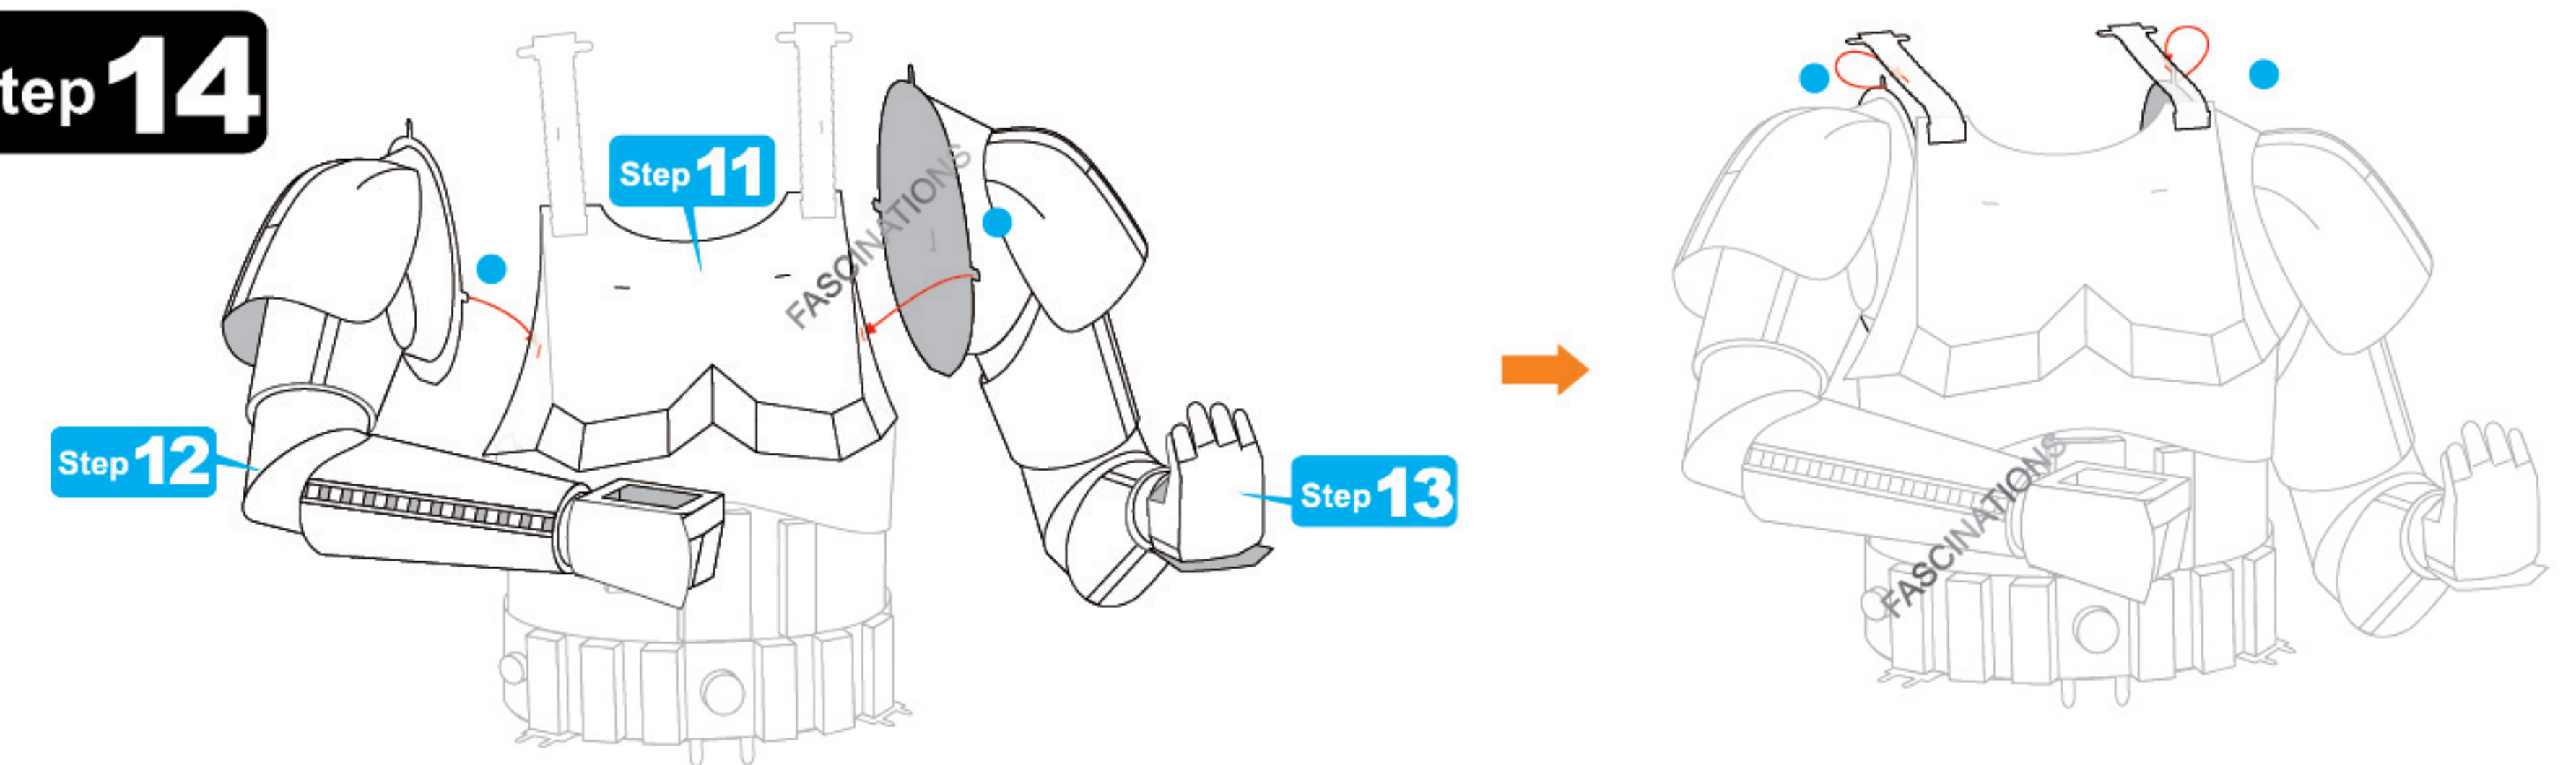


Step 15

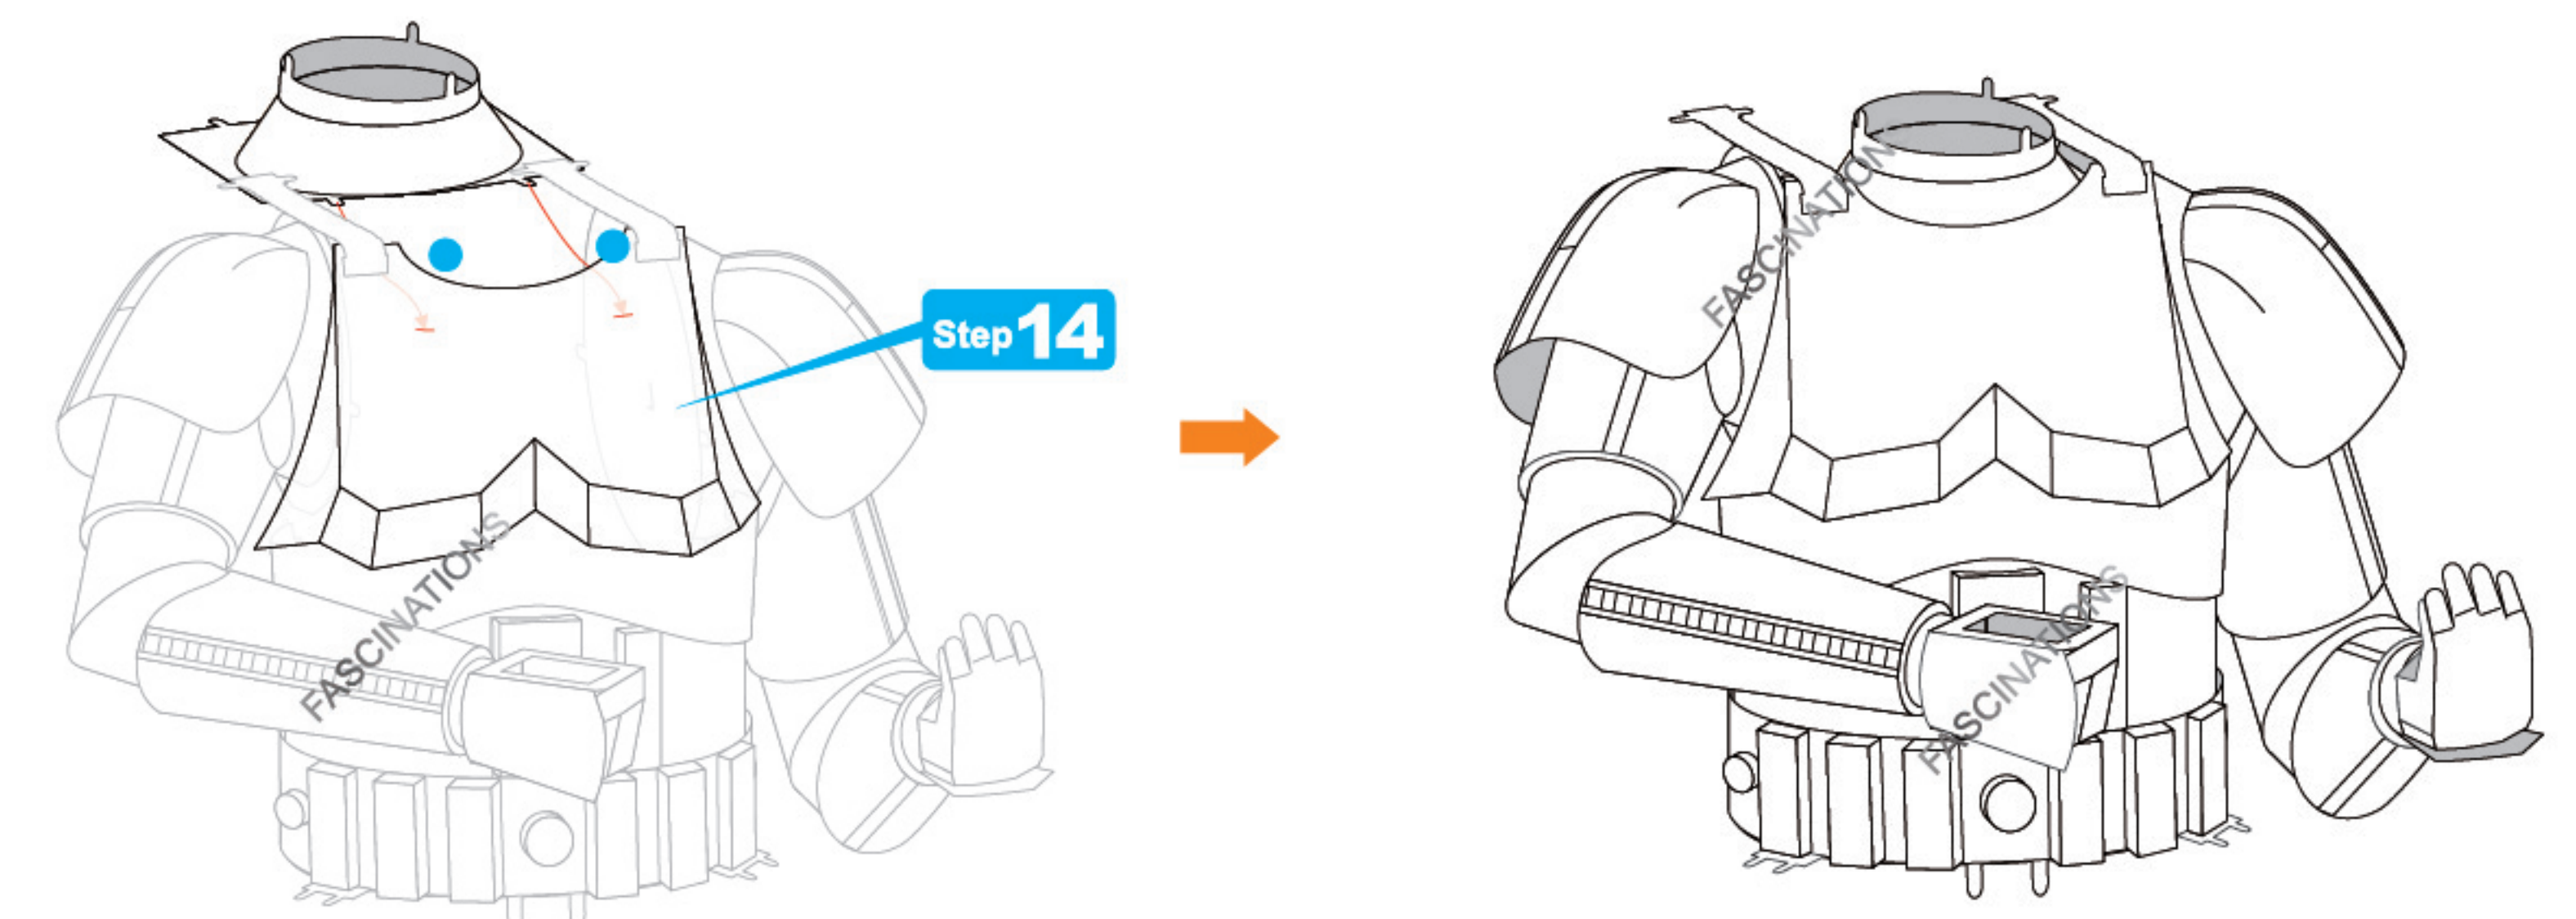
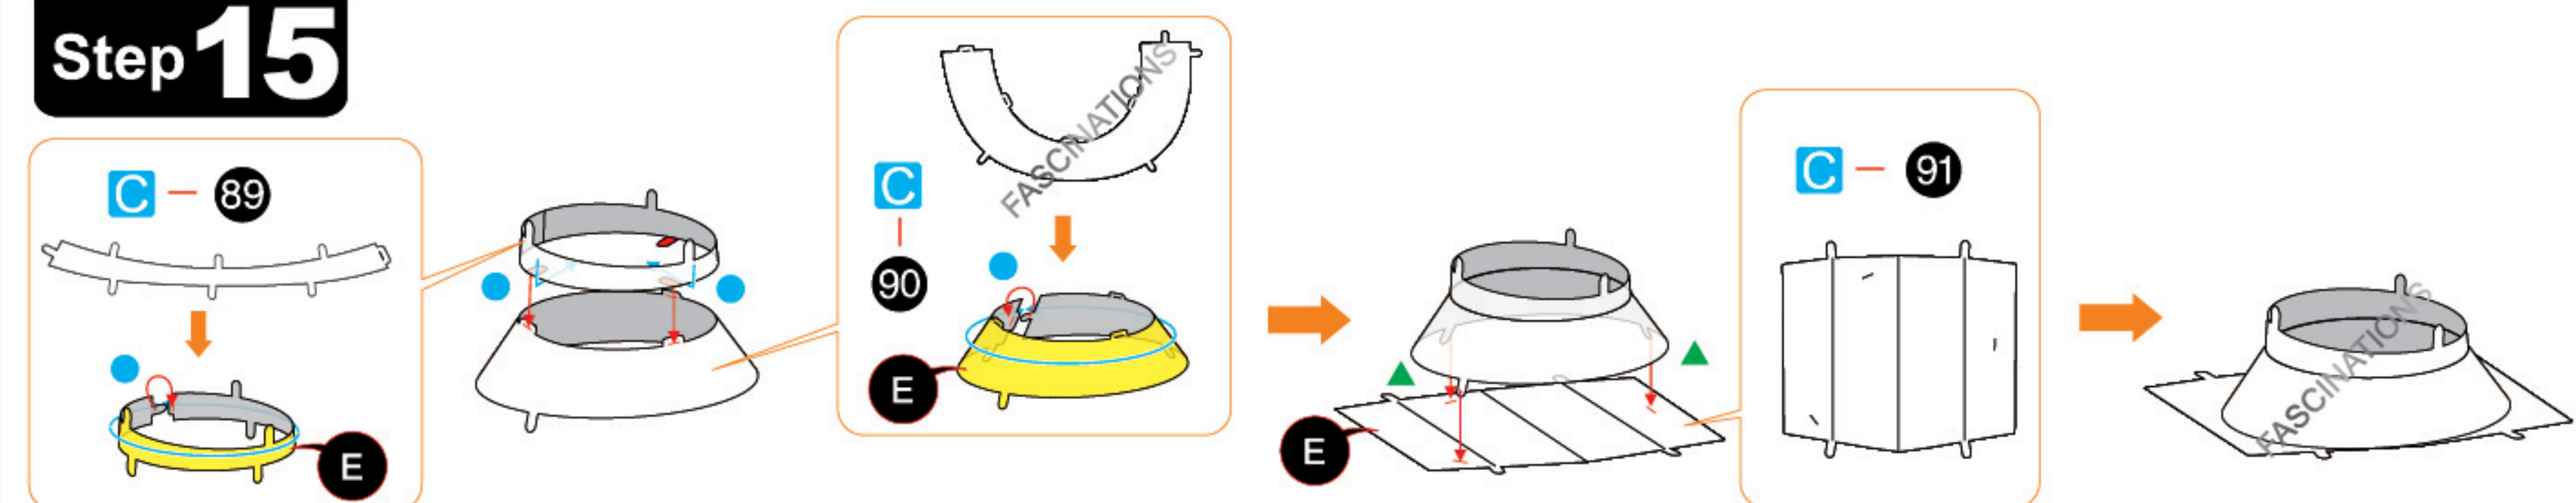


Step 16





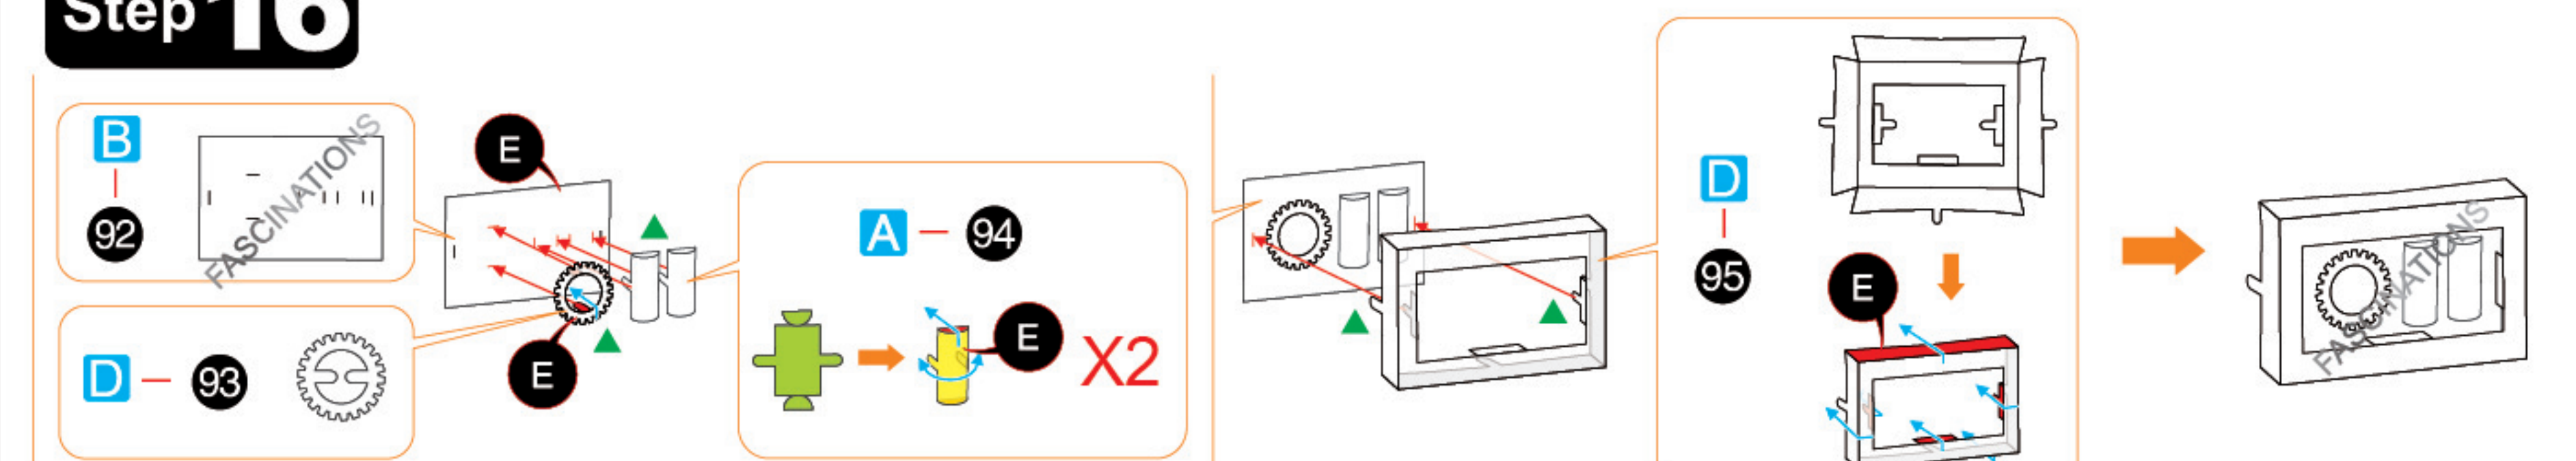


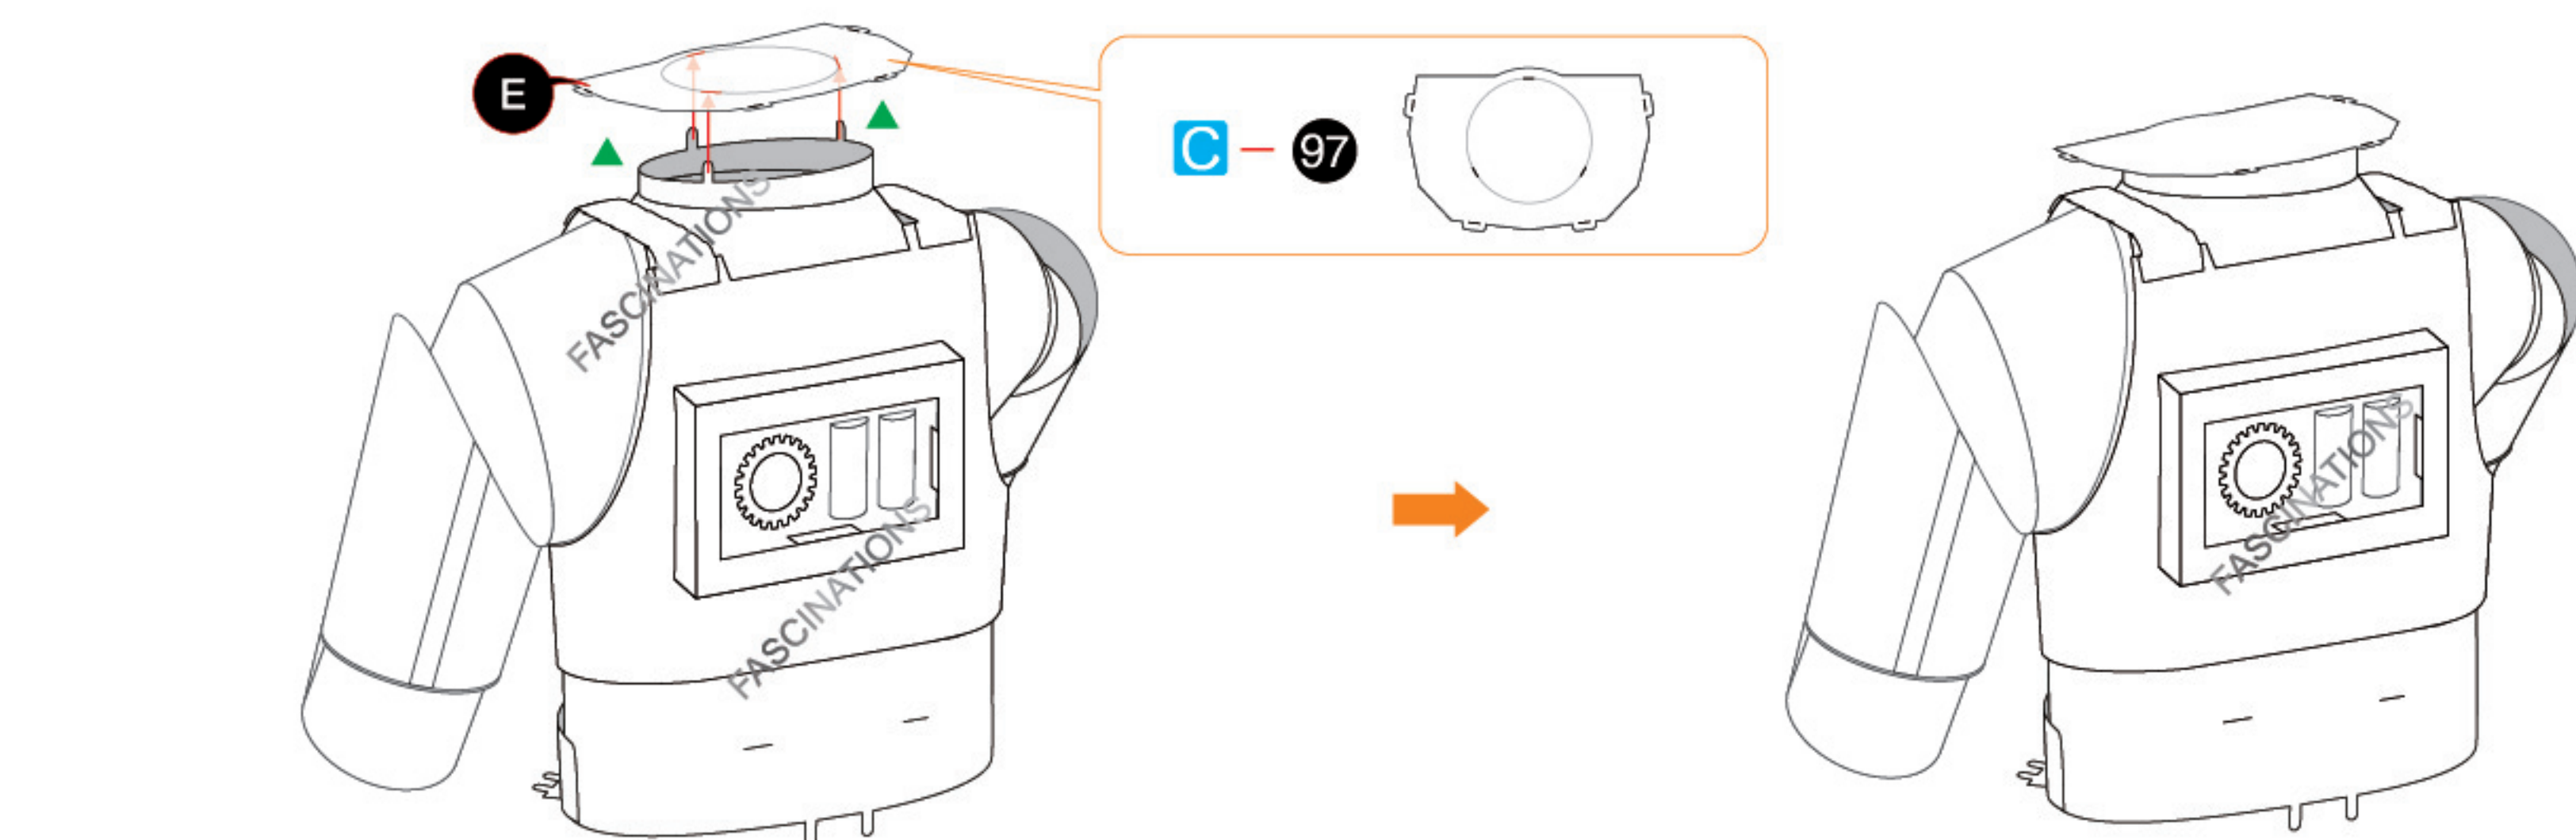
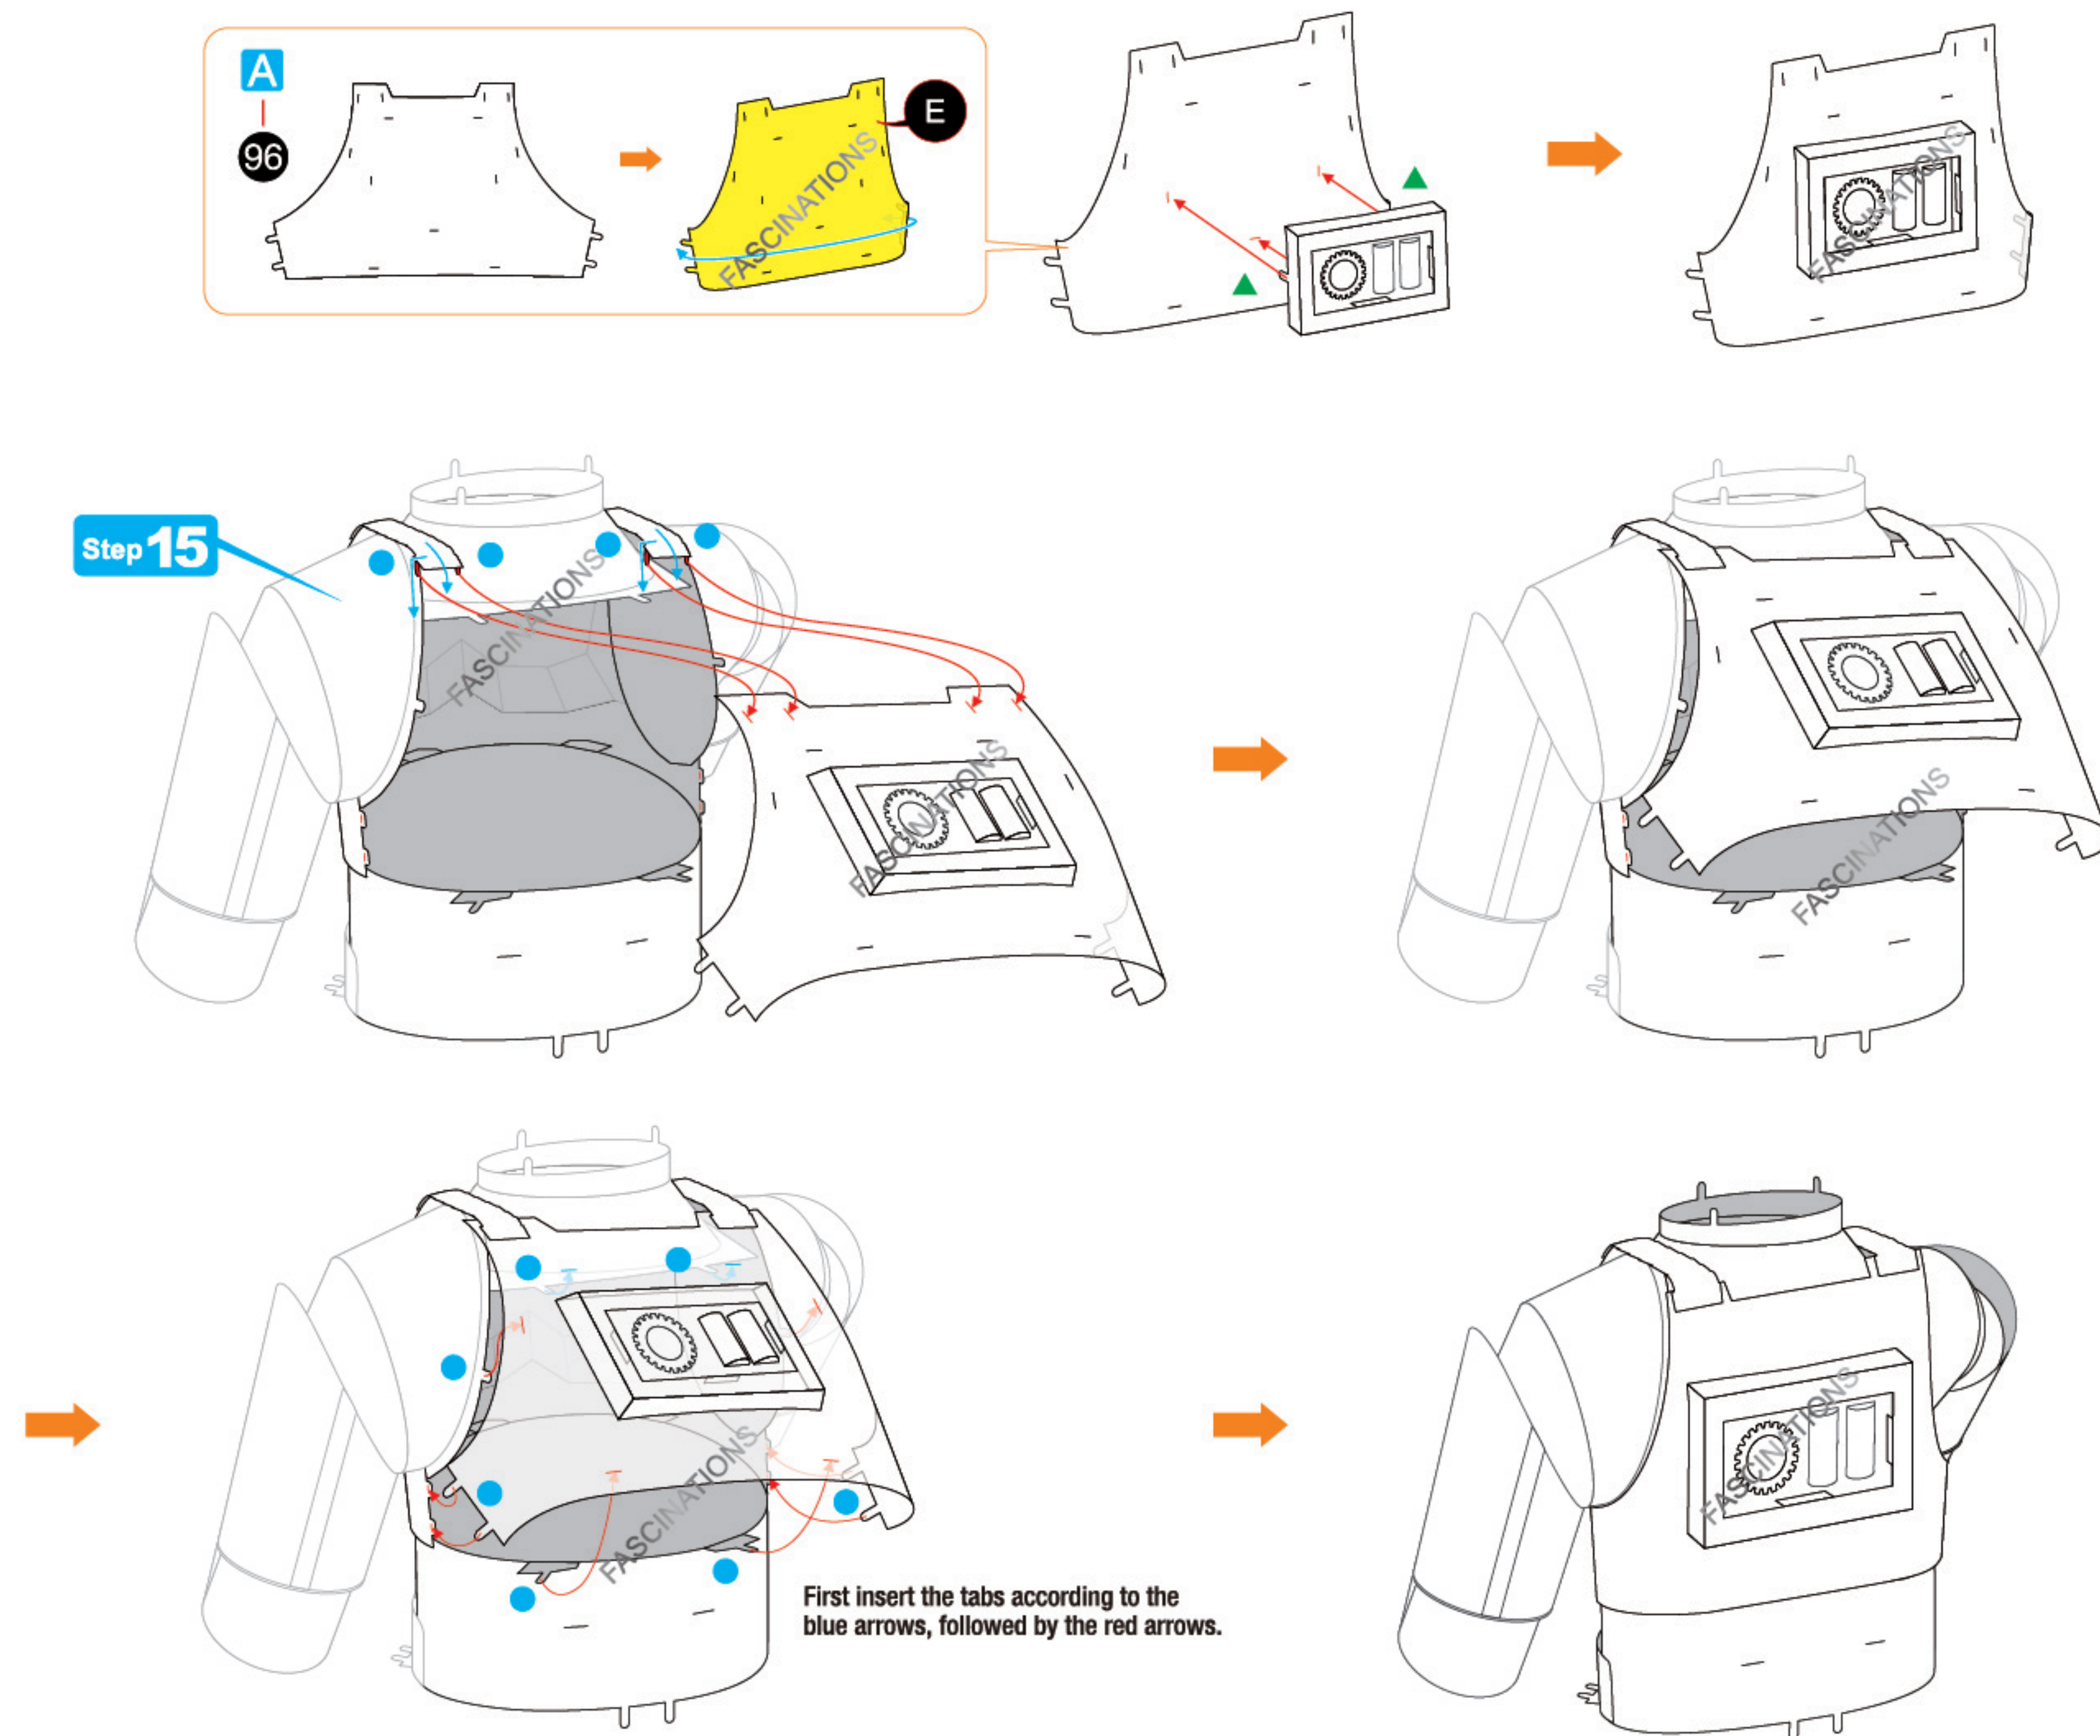


Step 17

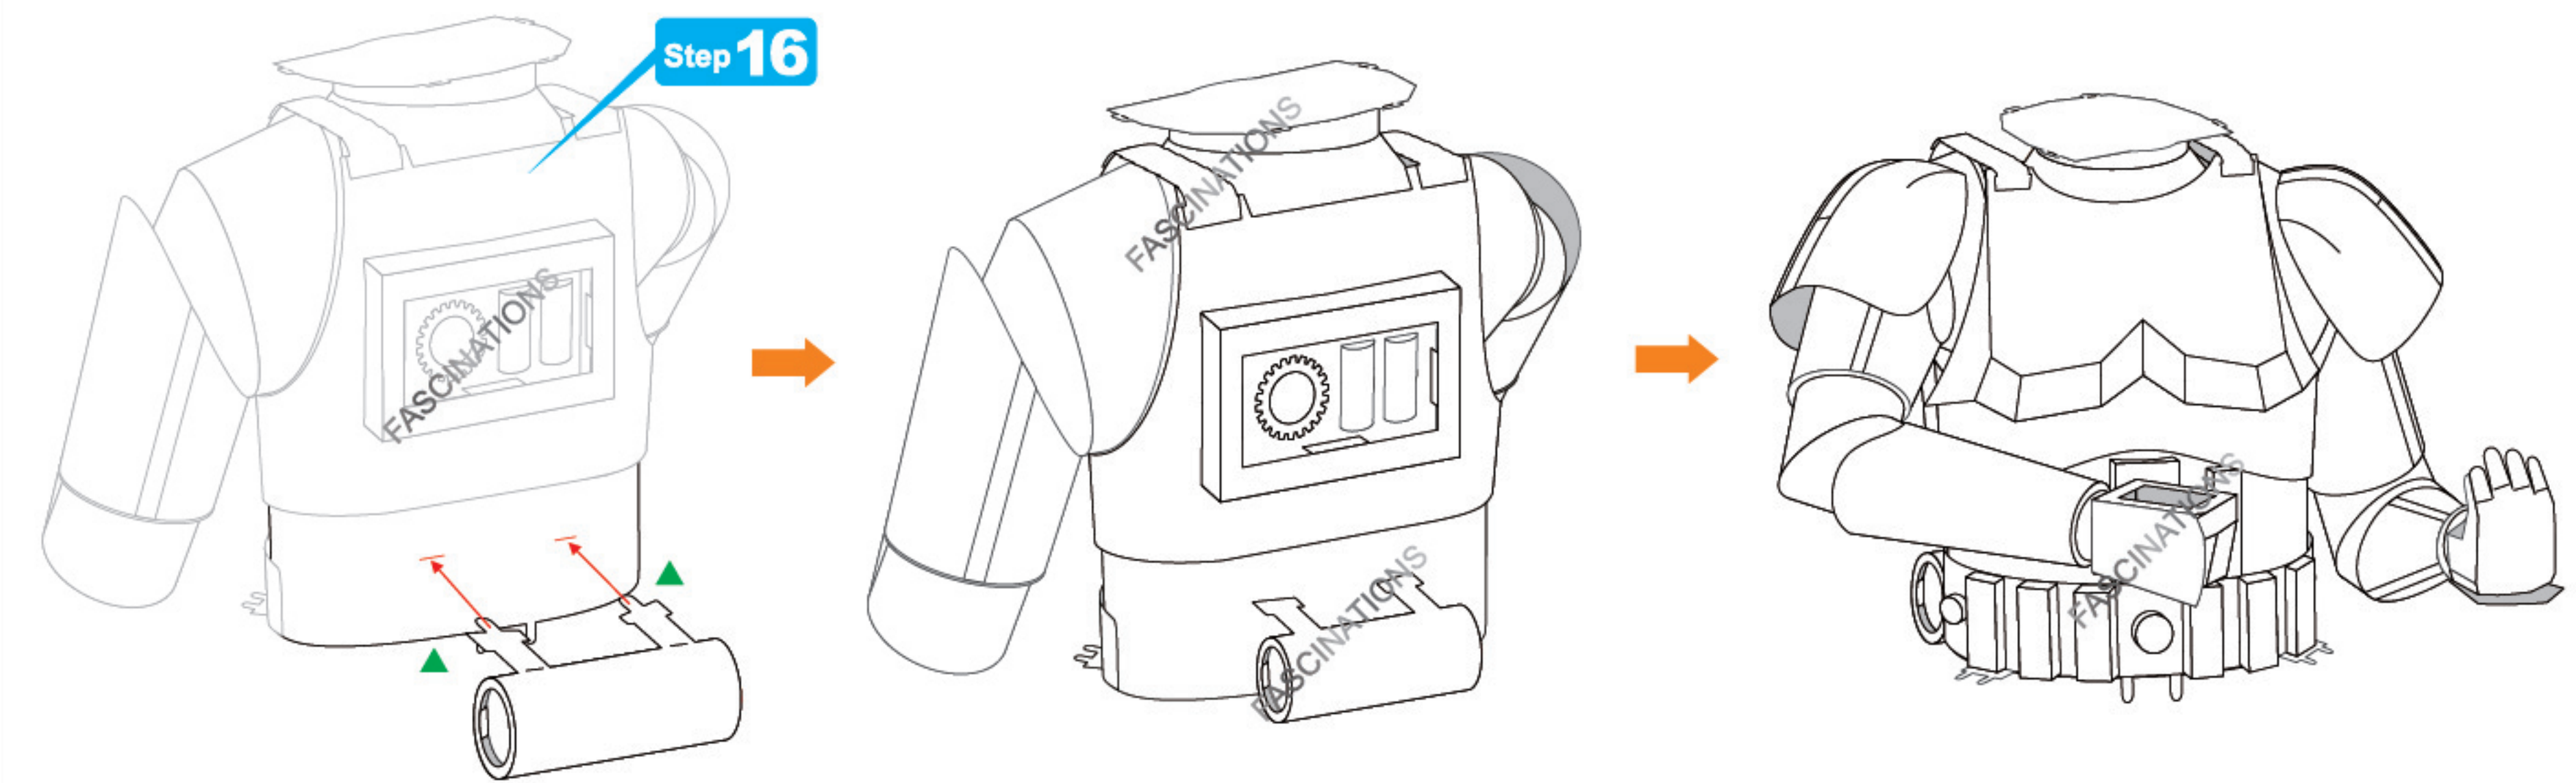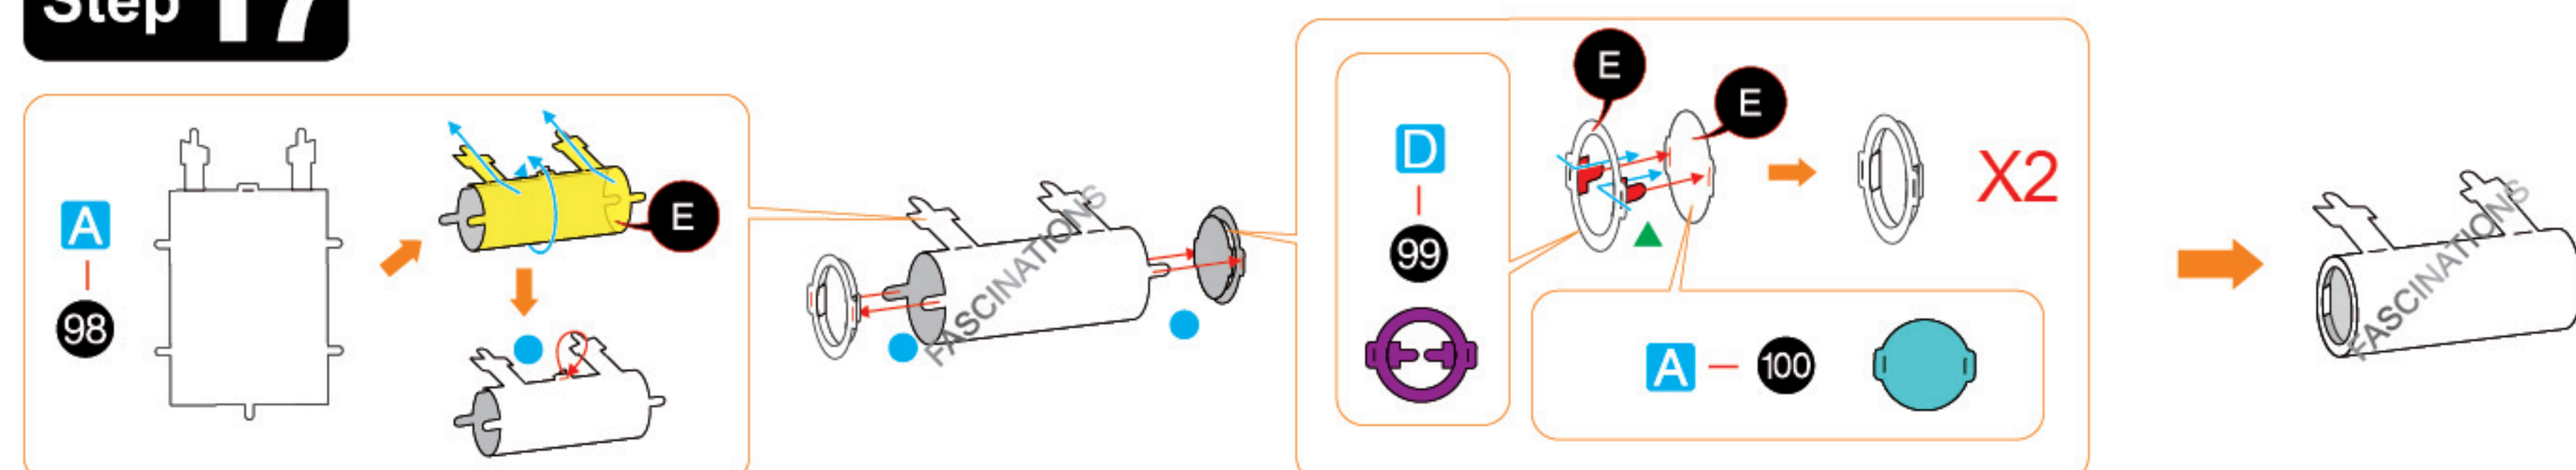

Step 18

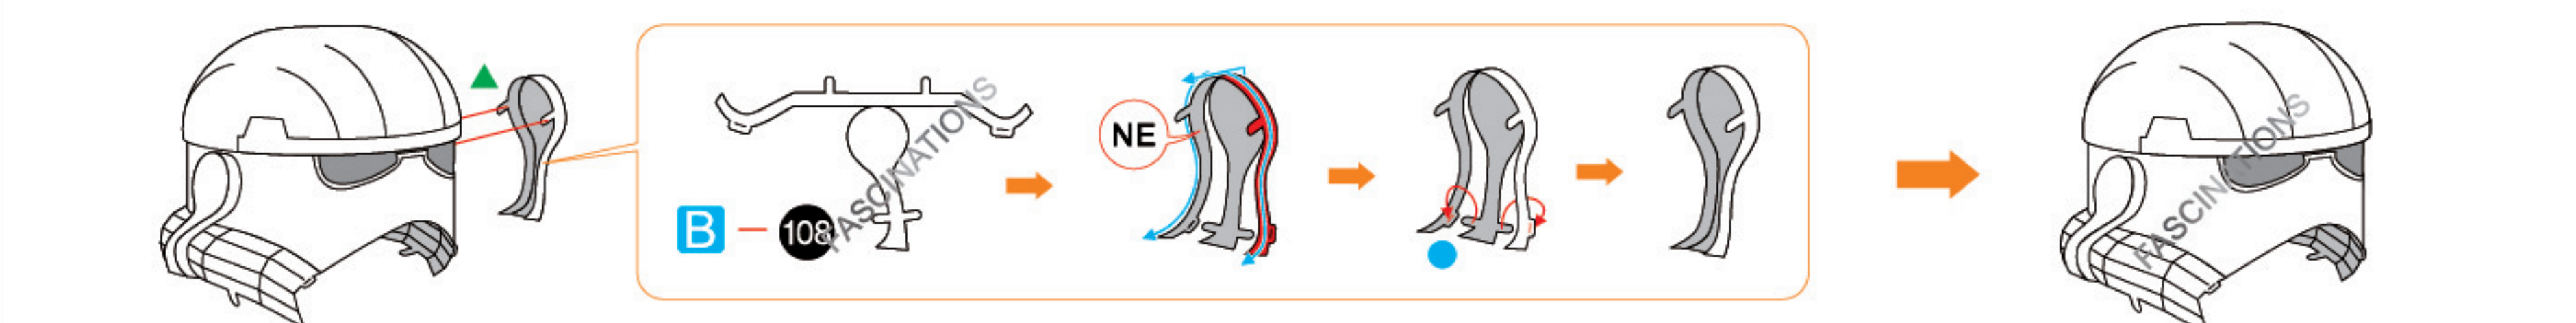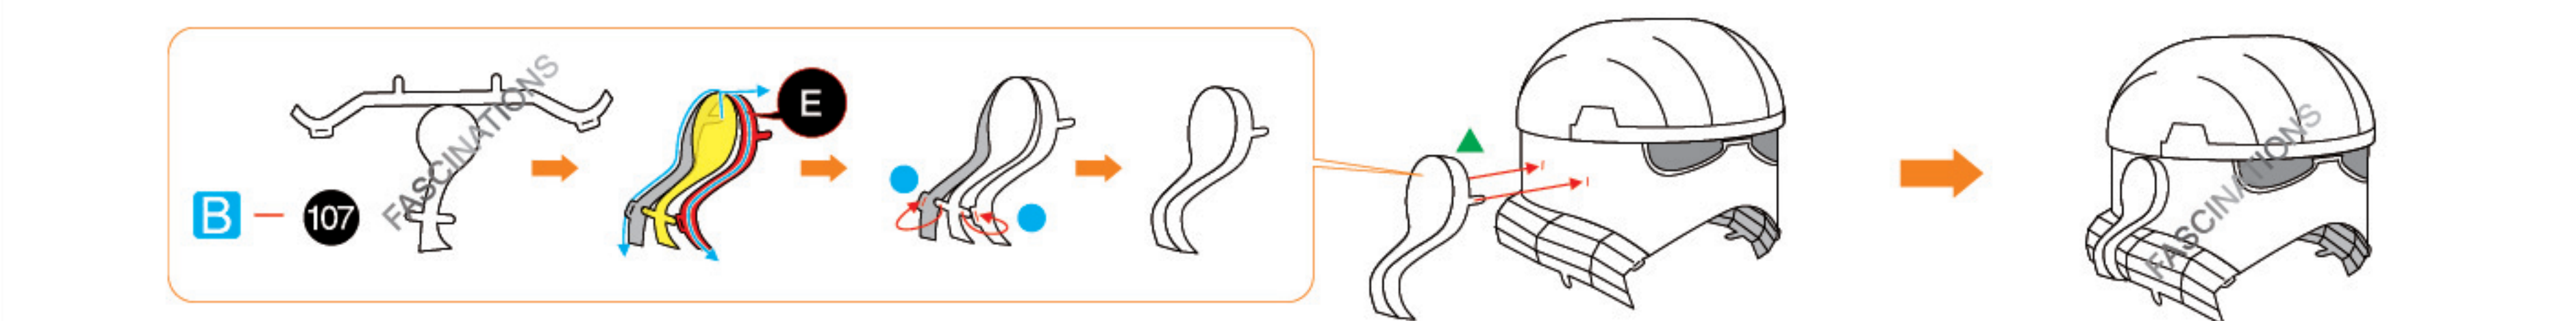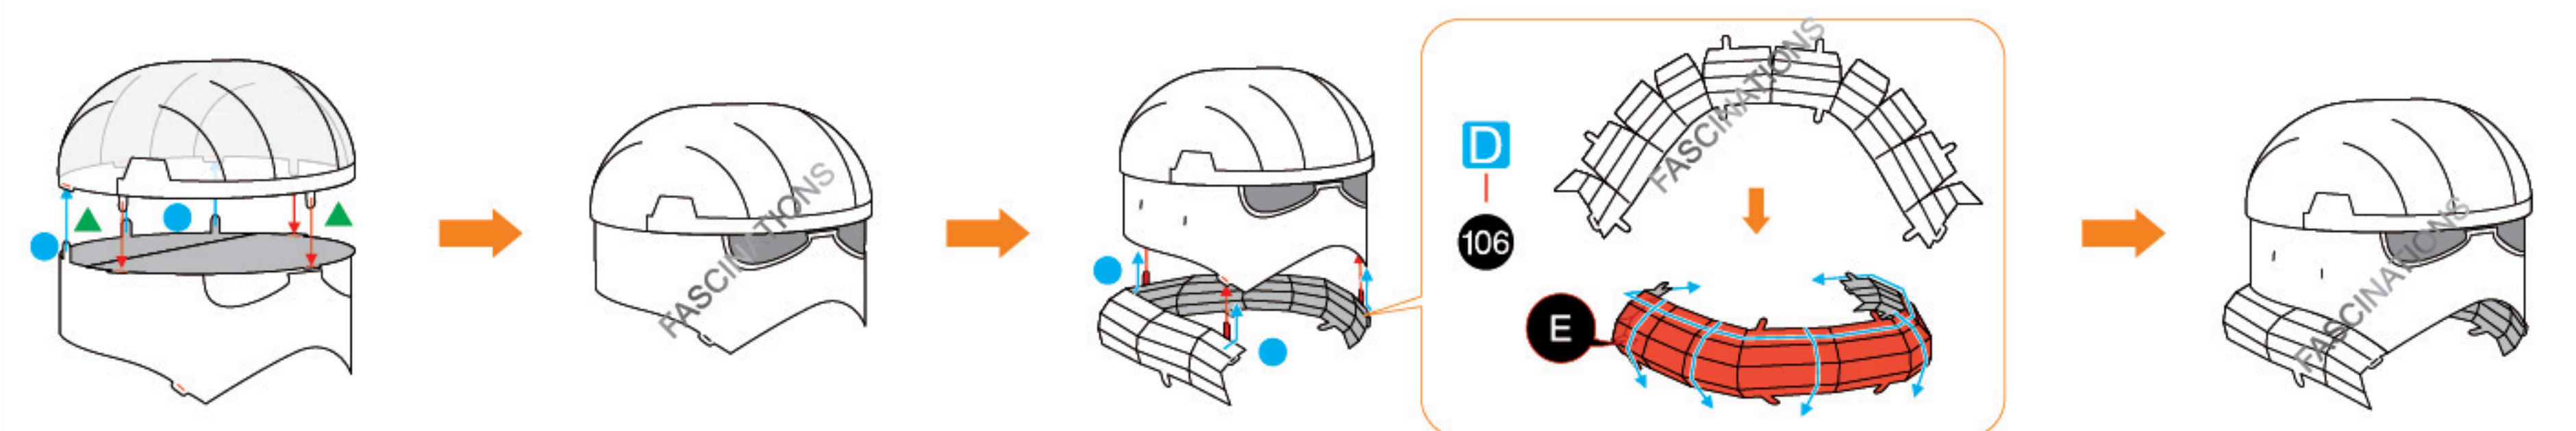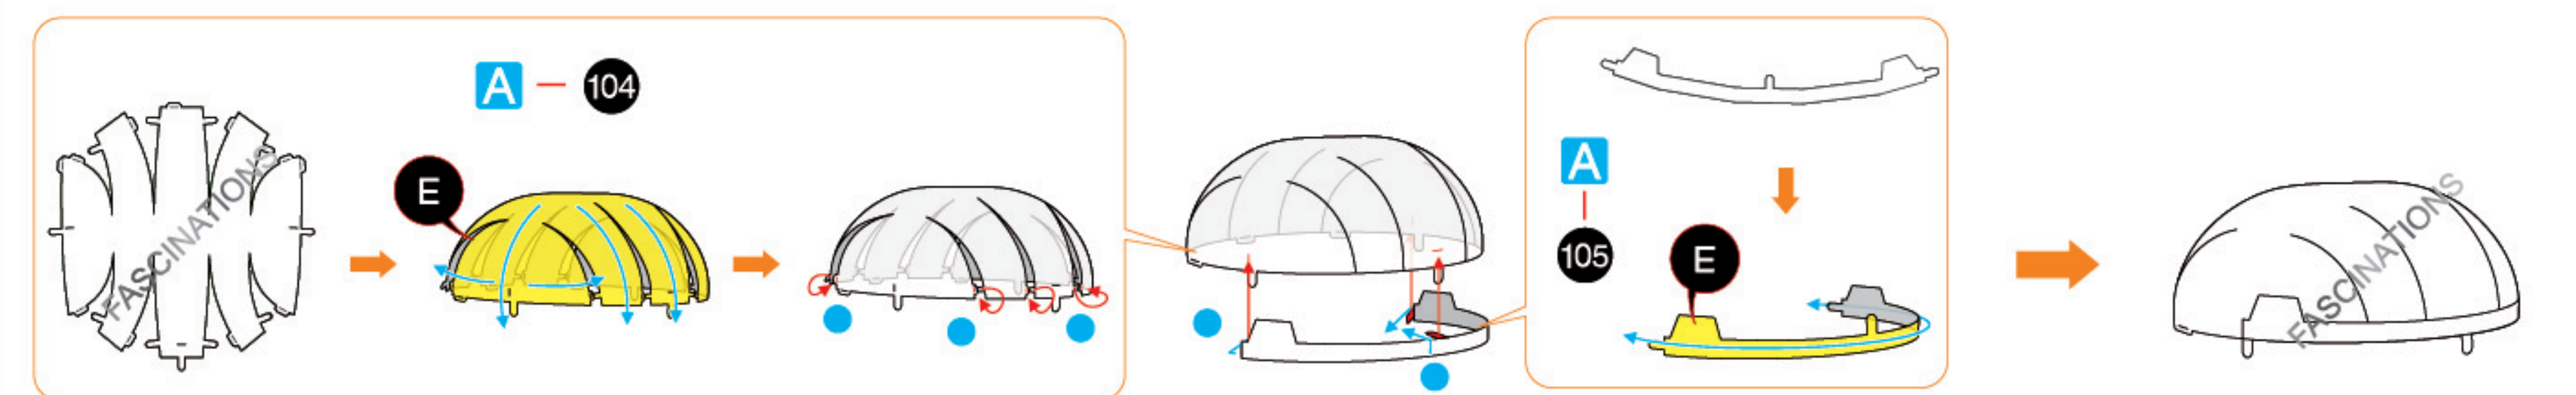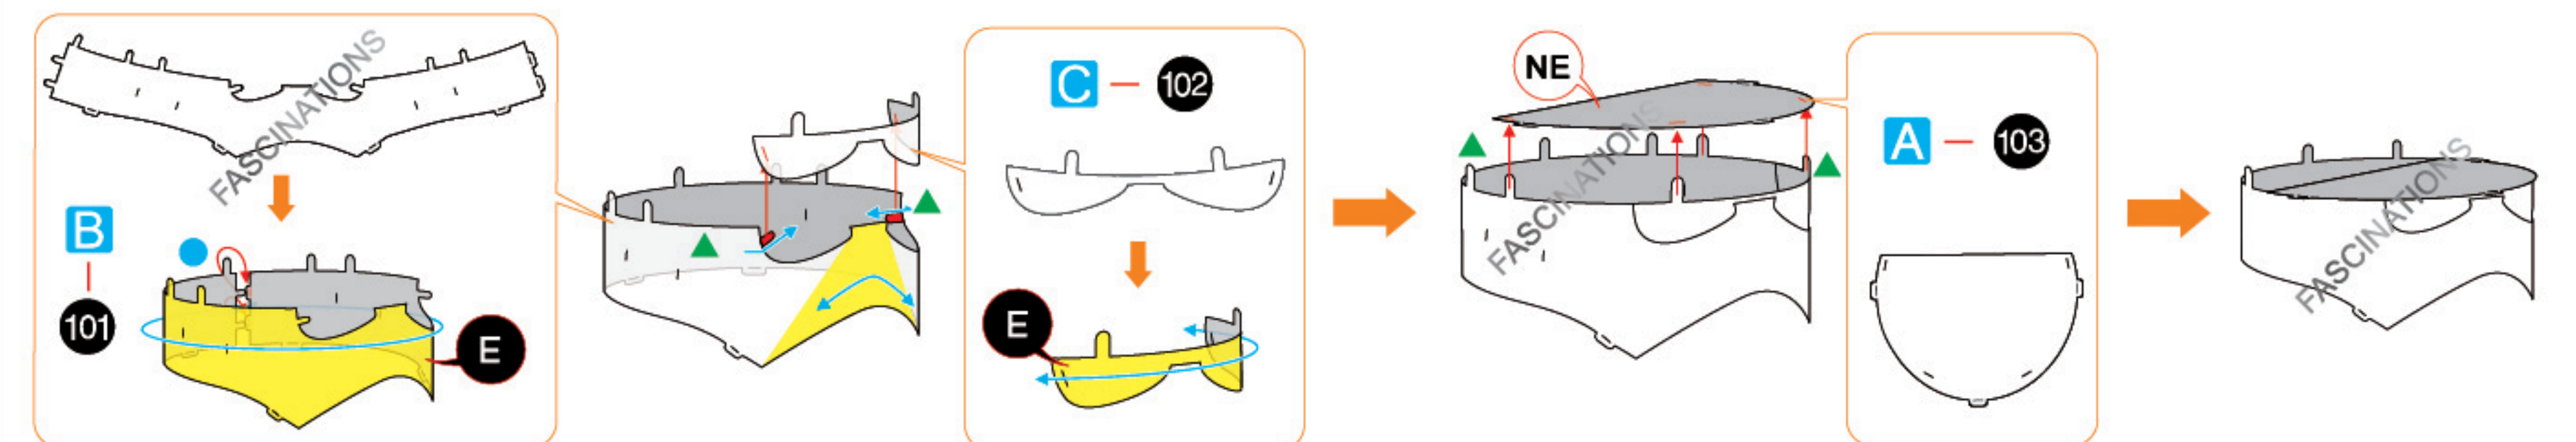


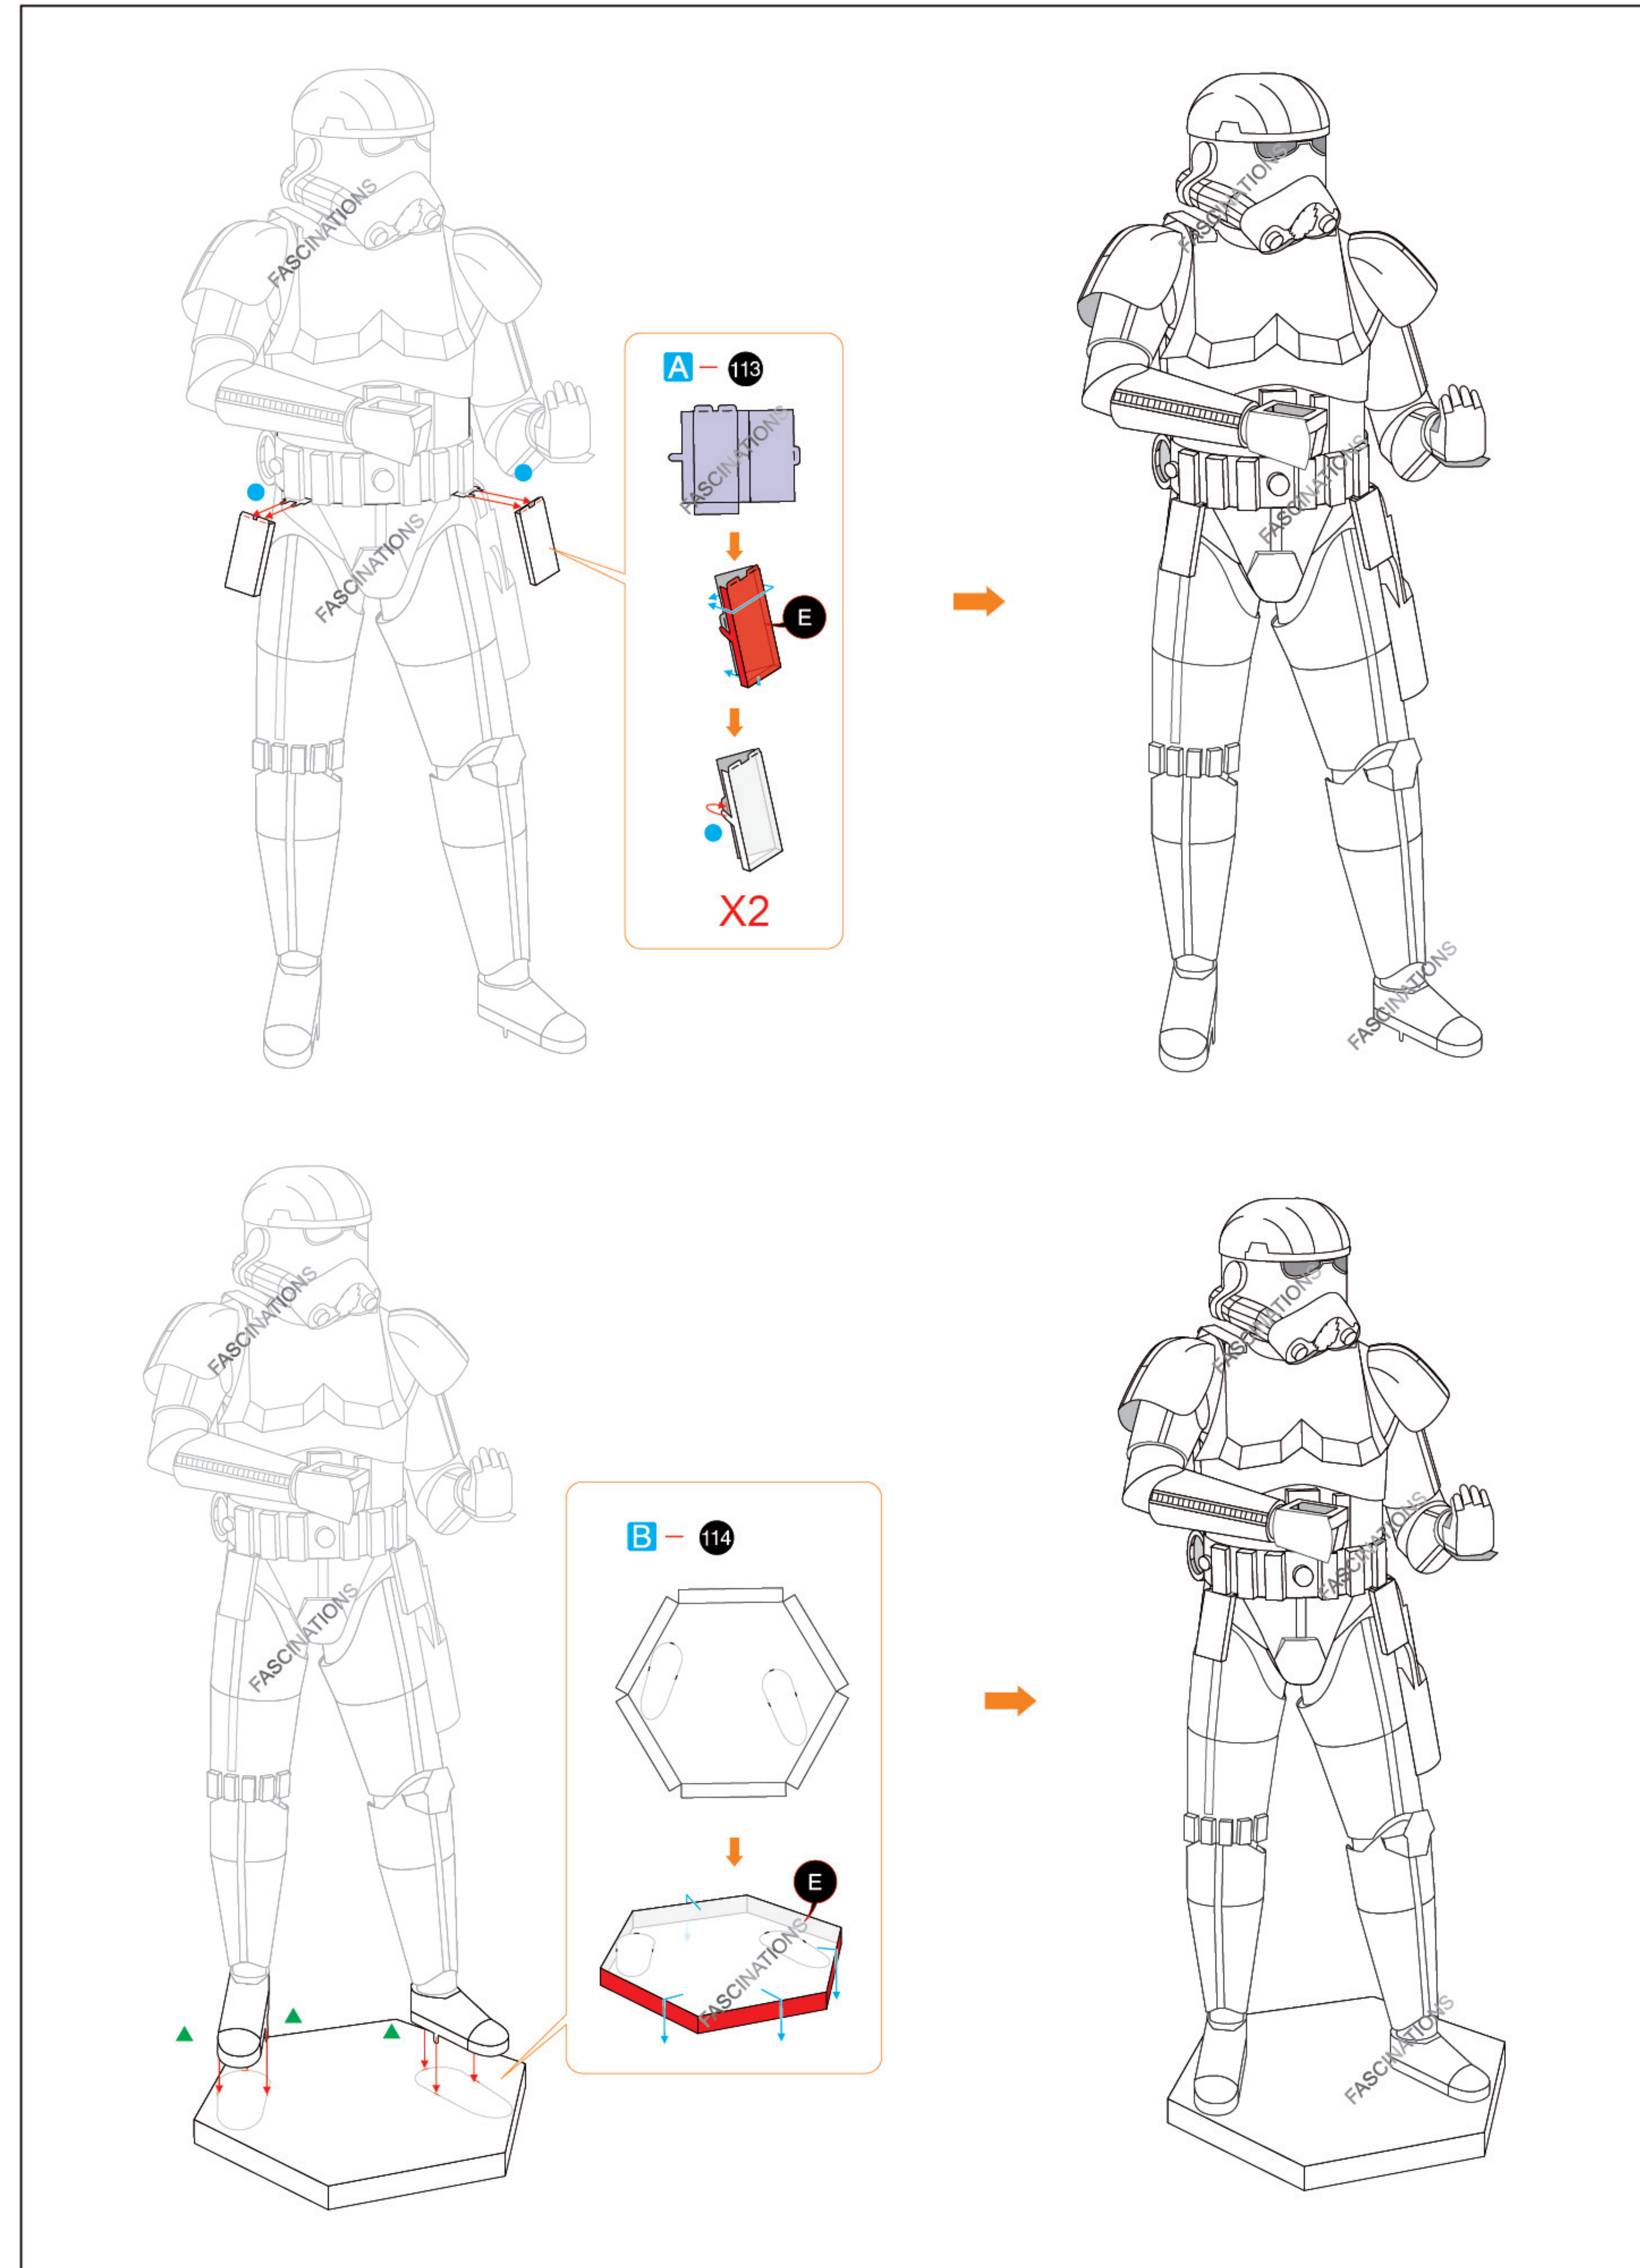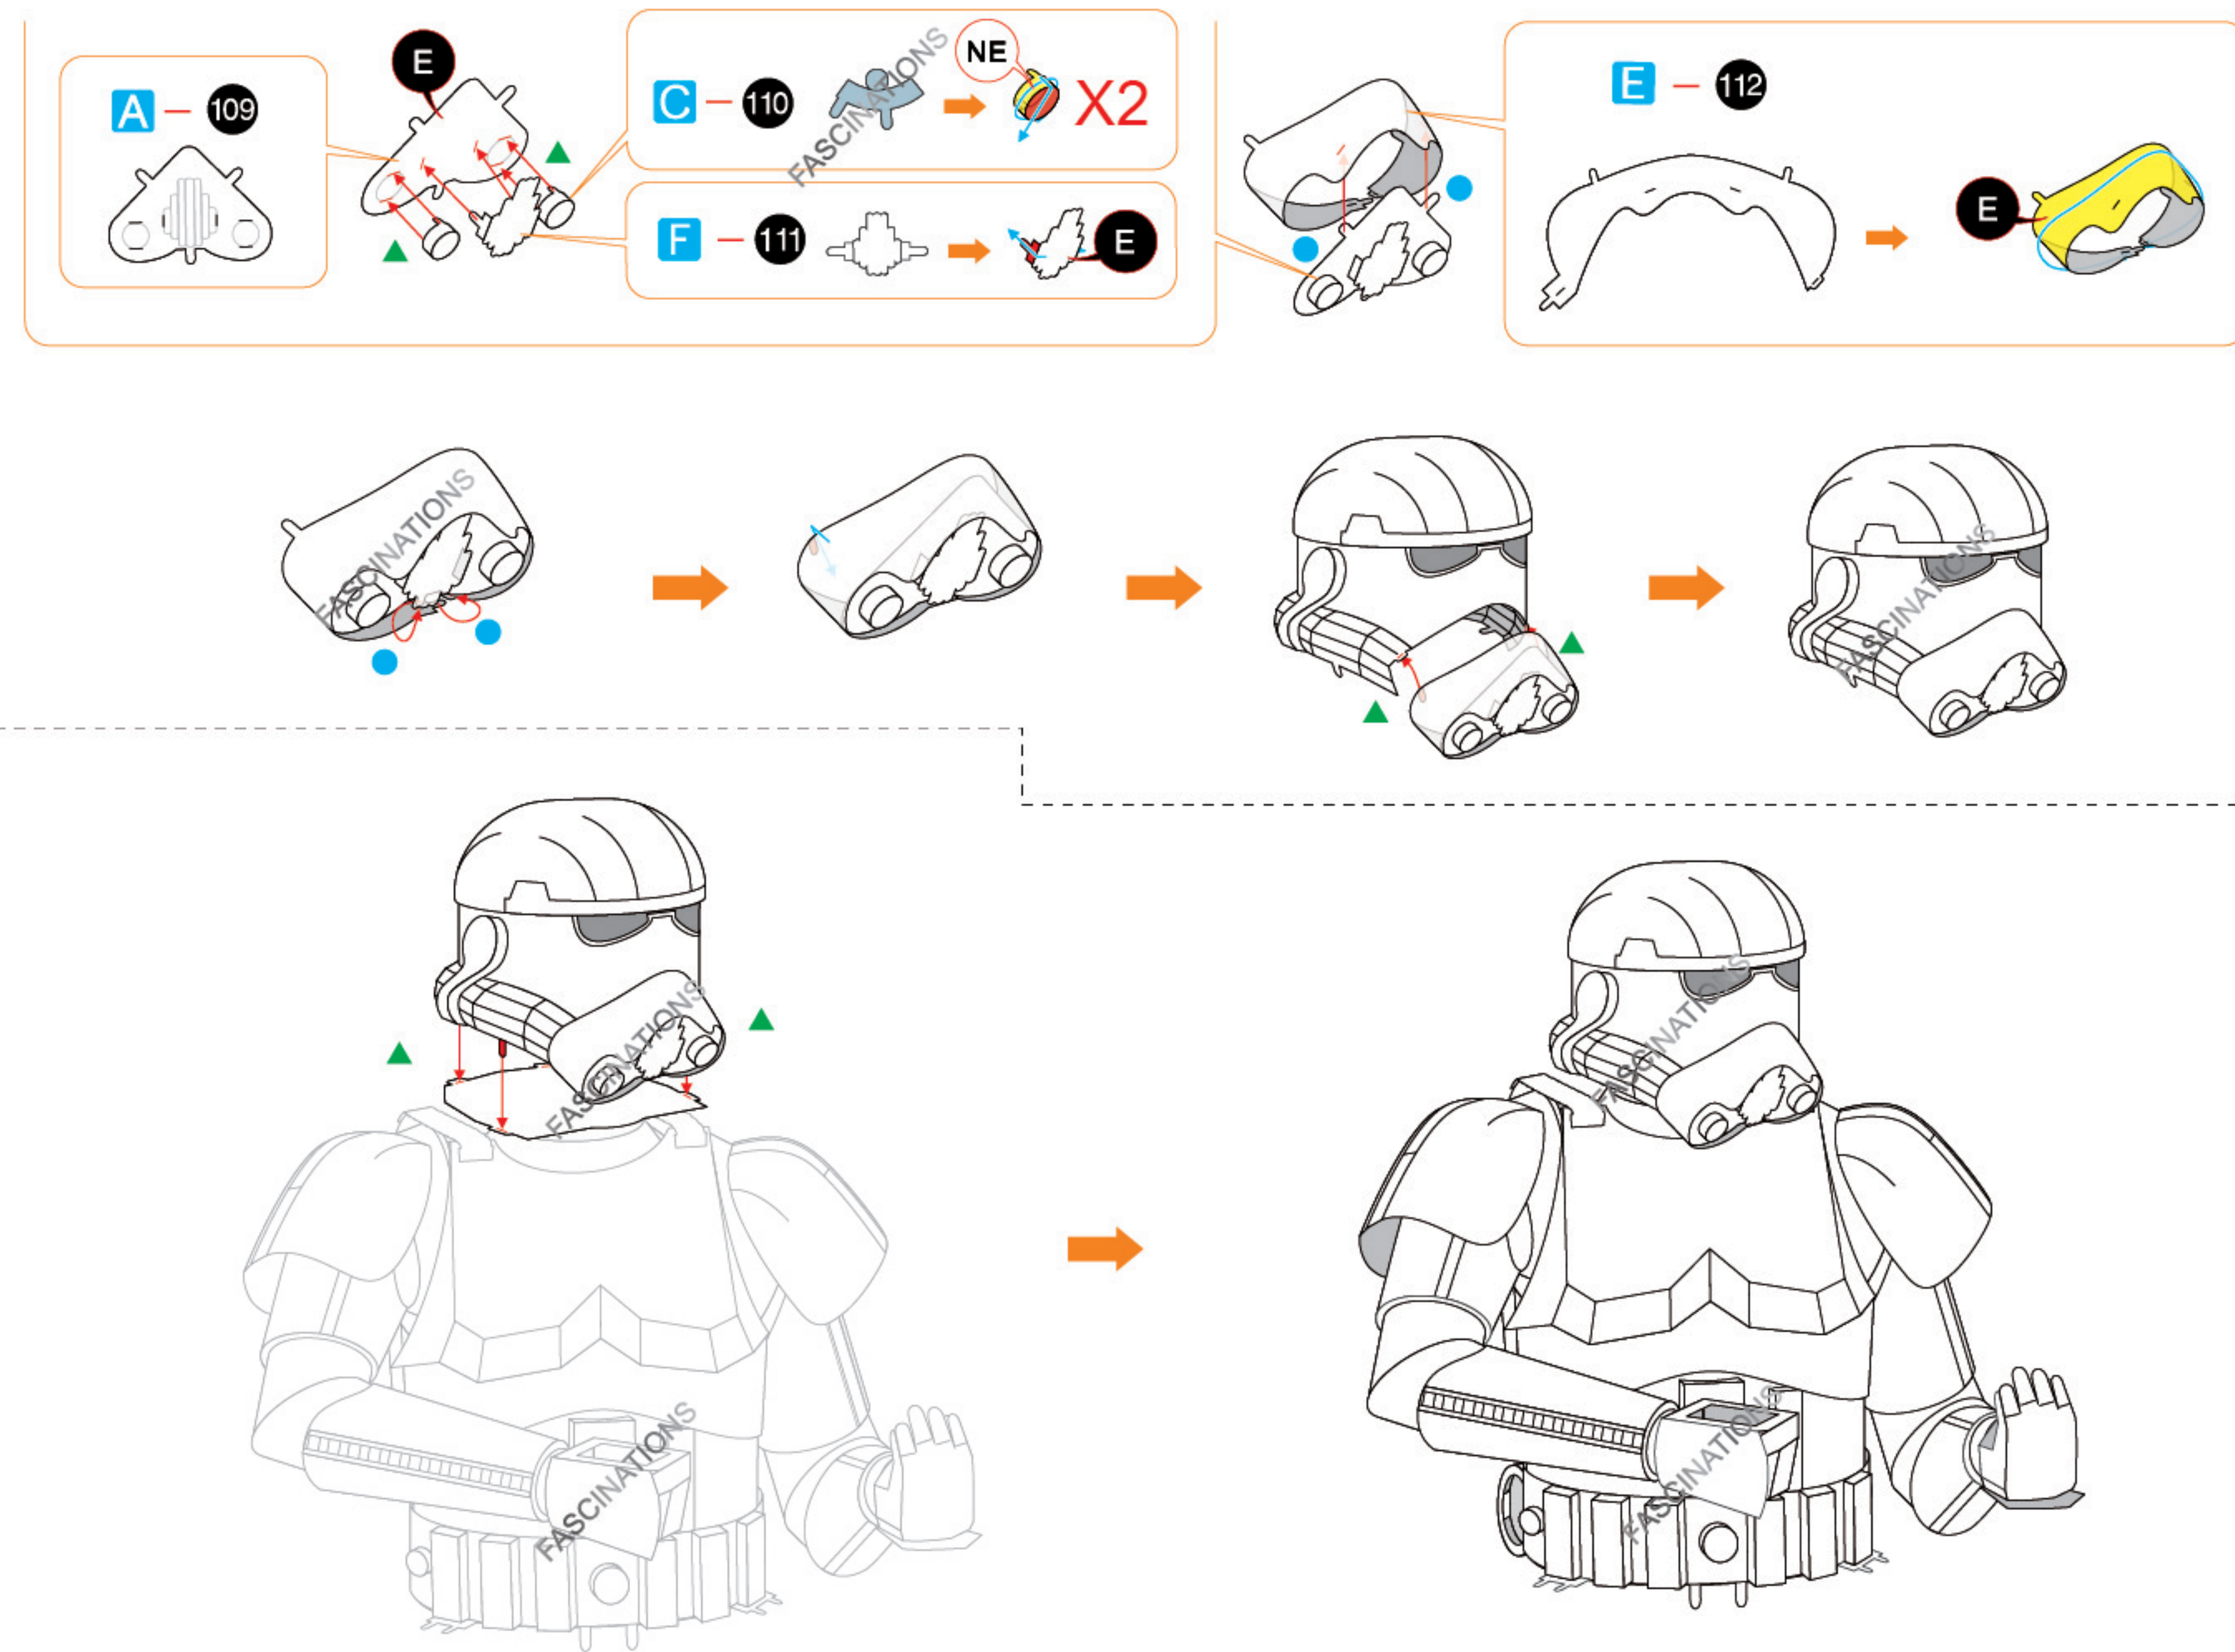



Step 19

Step 18

Step 9

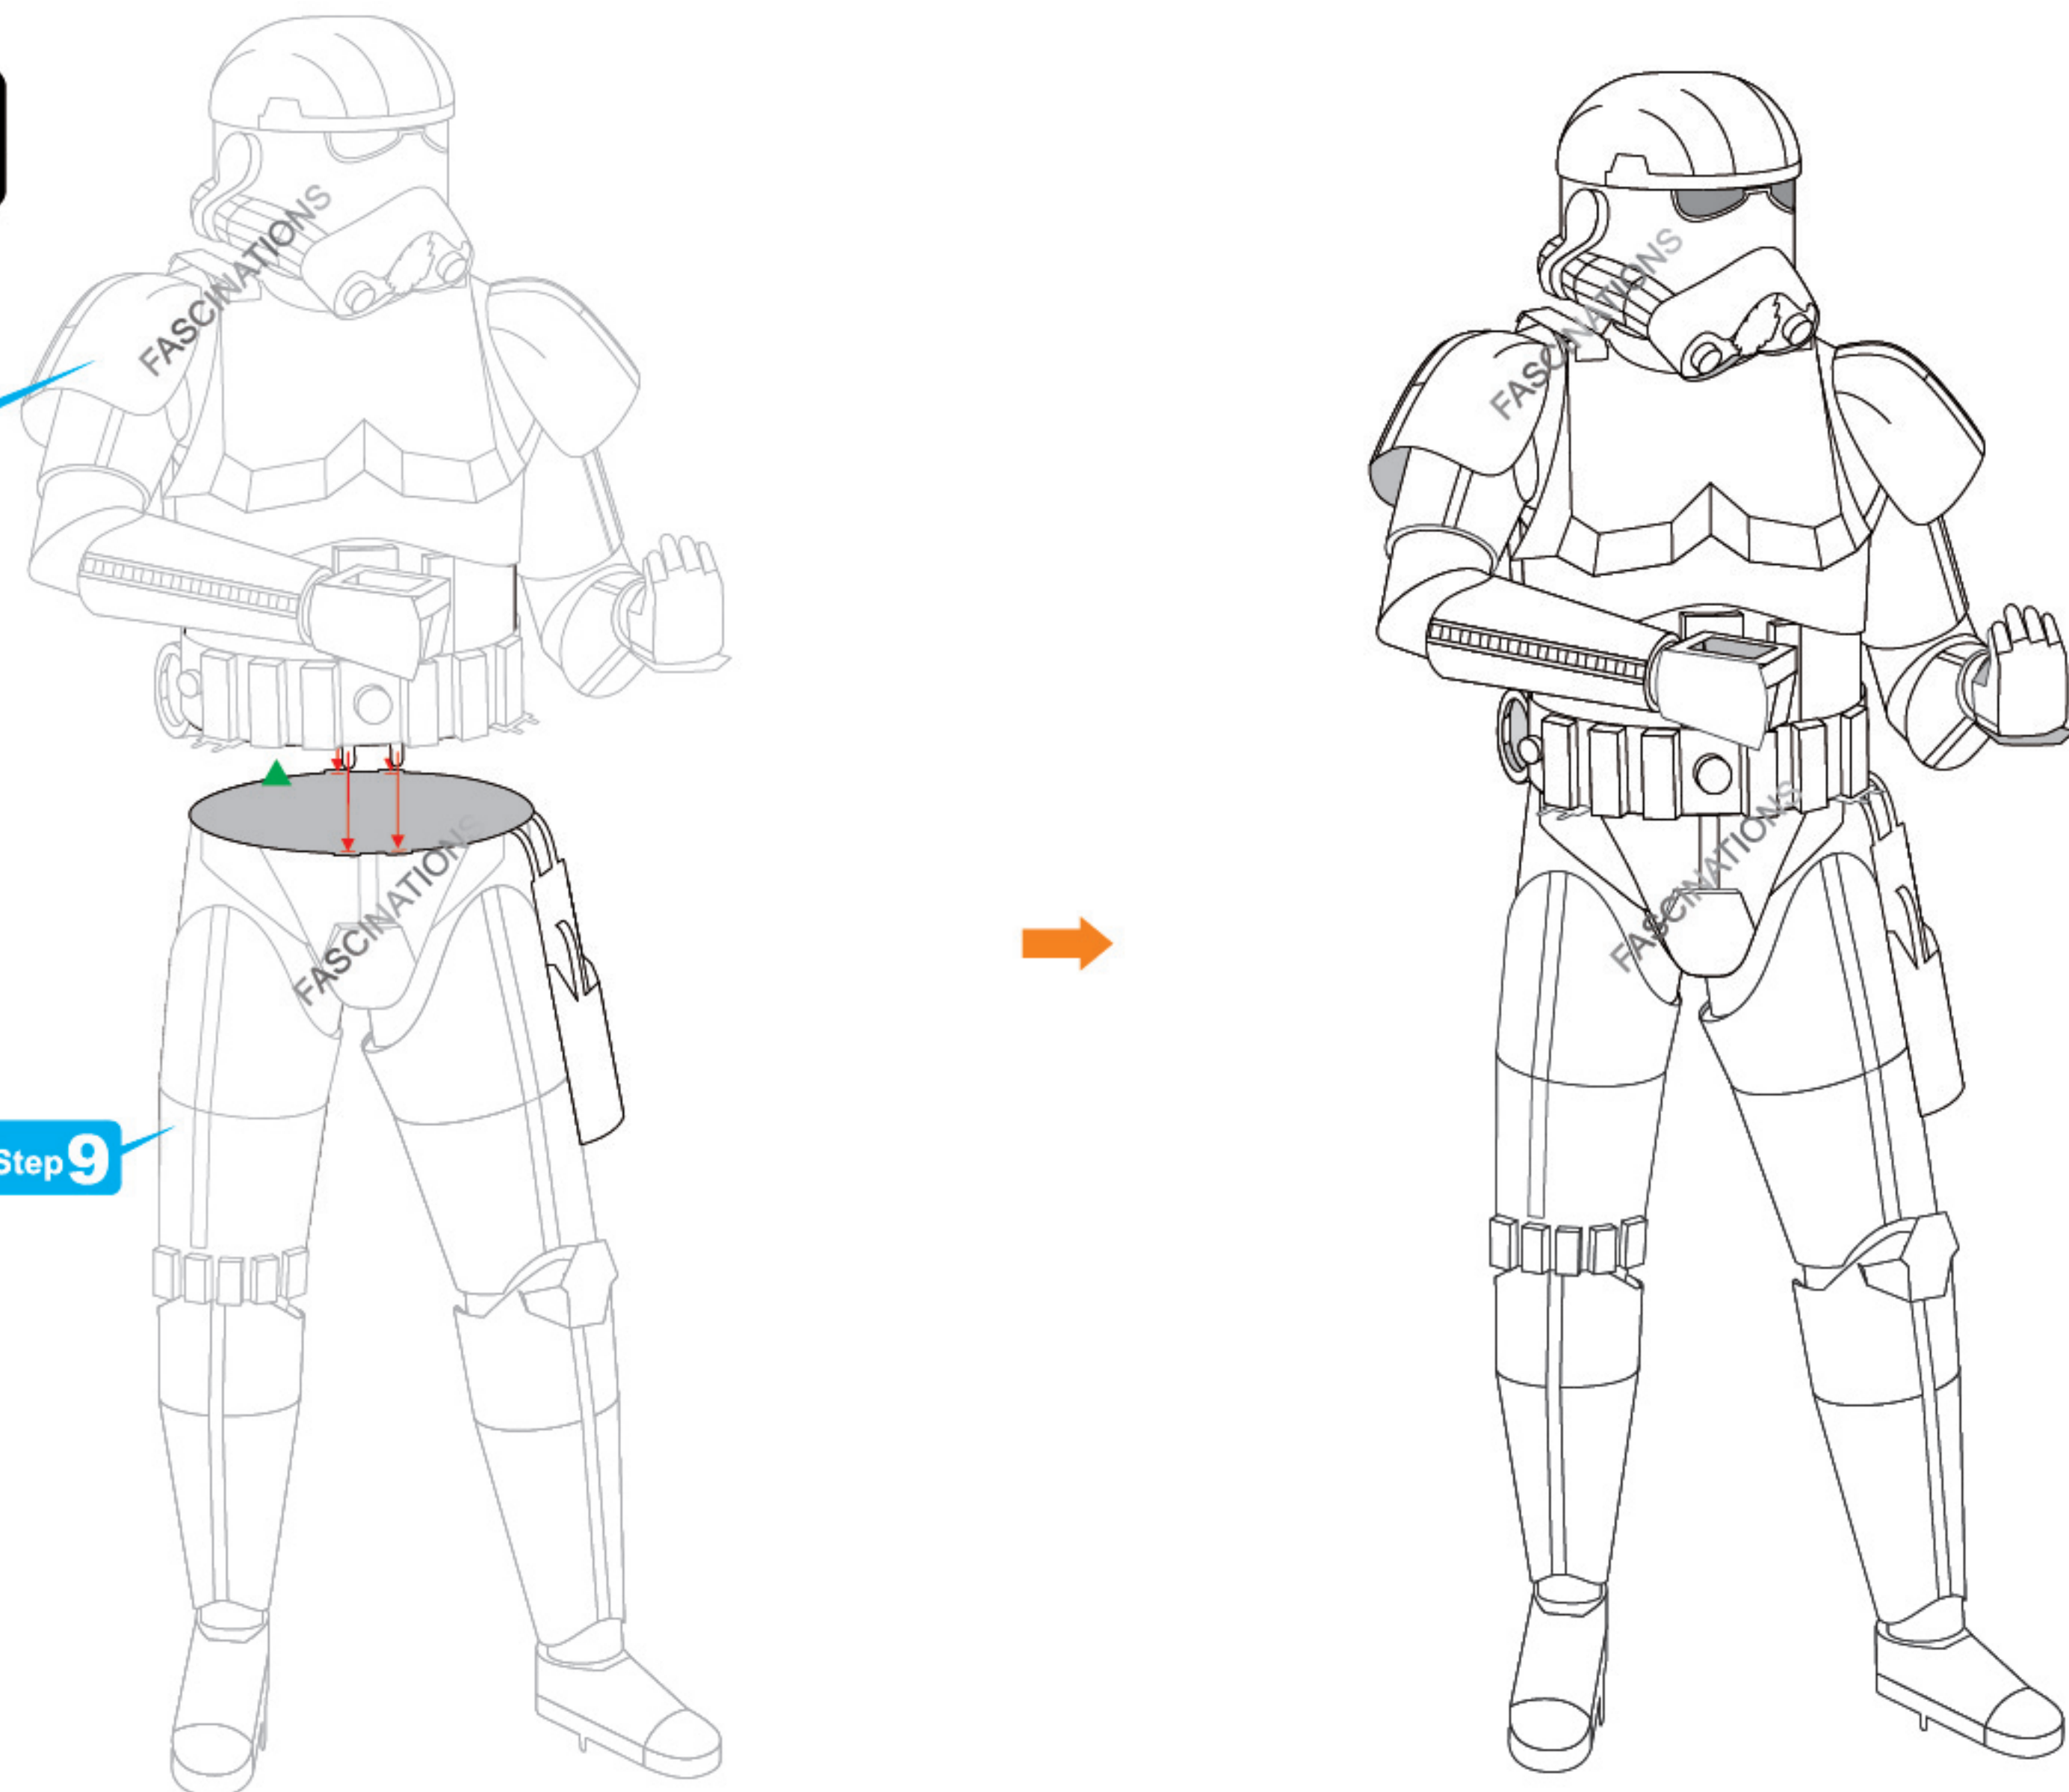

Step 20

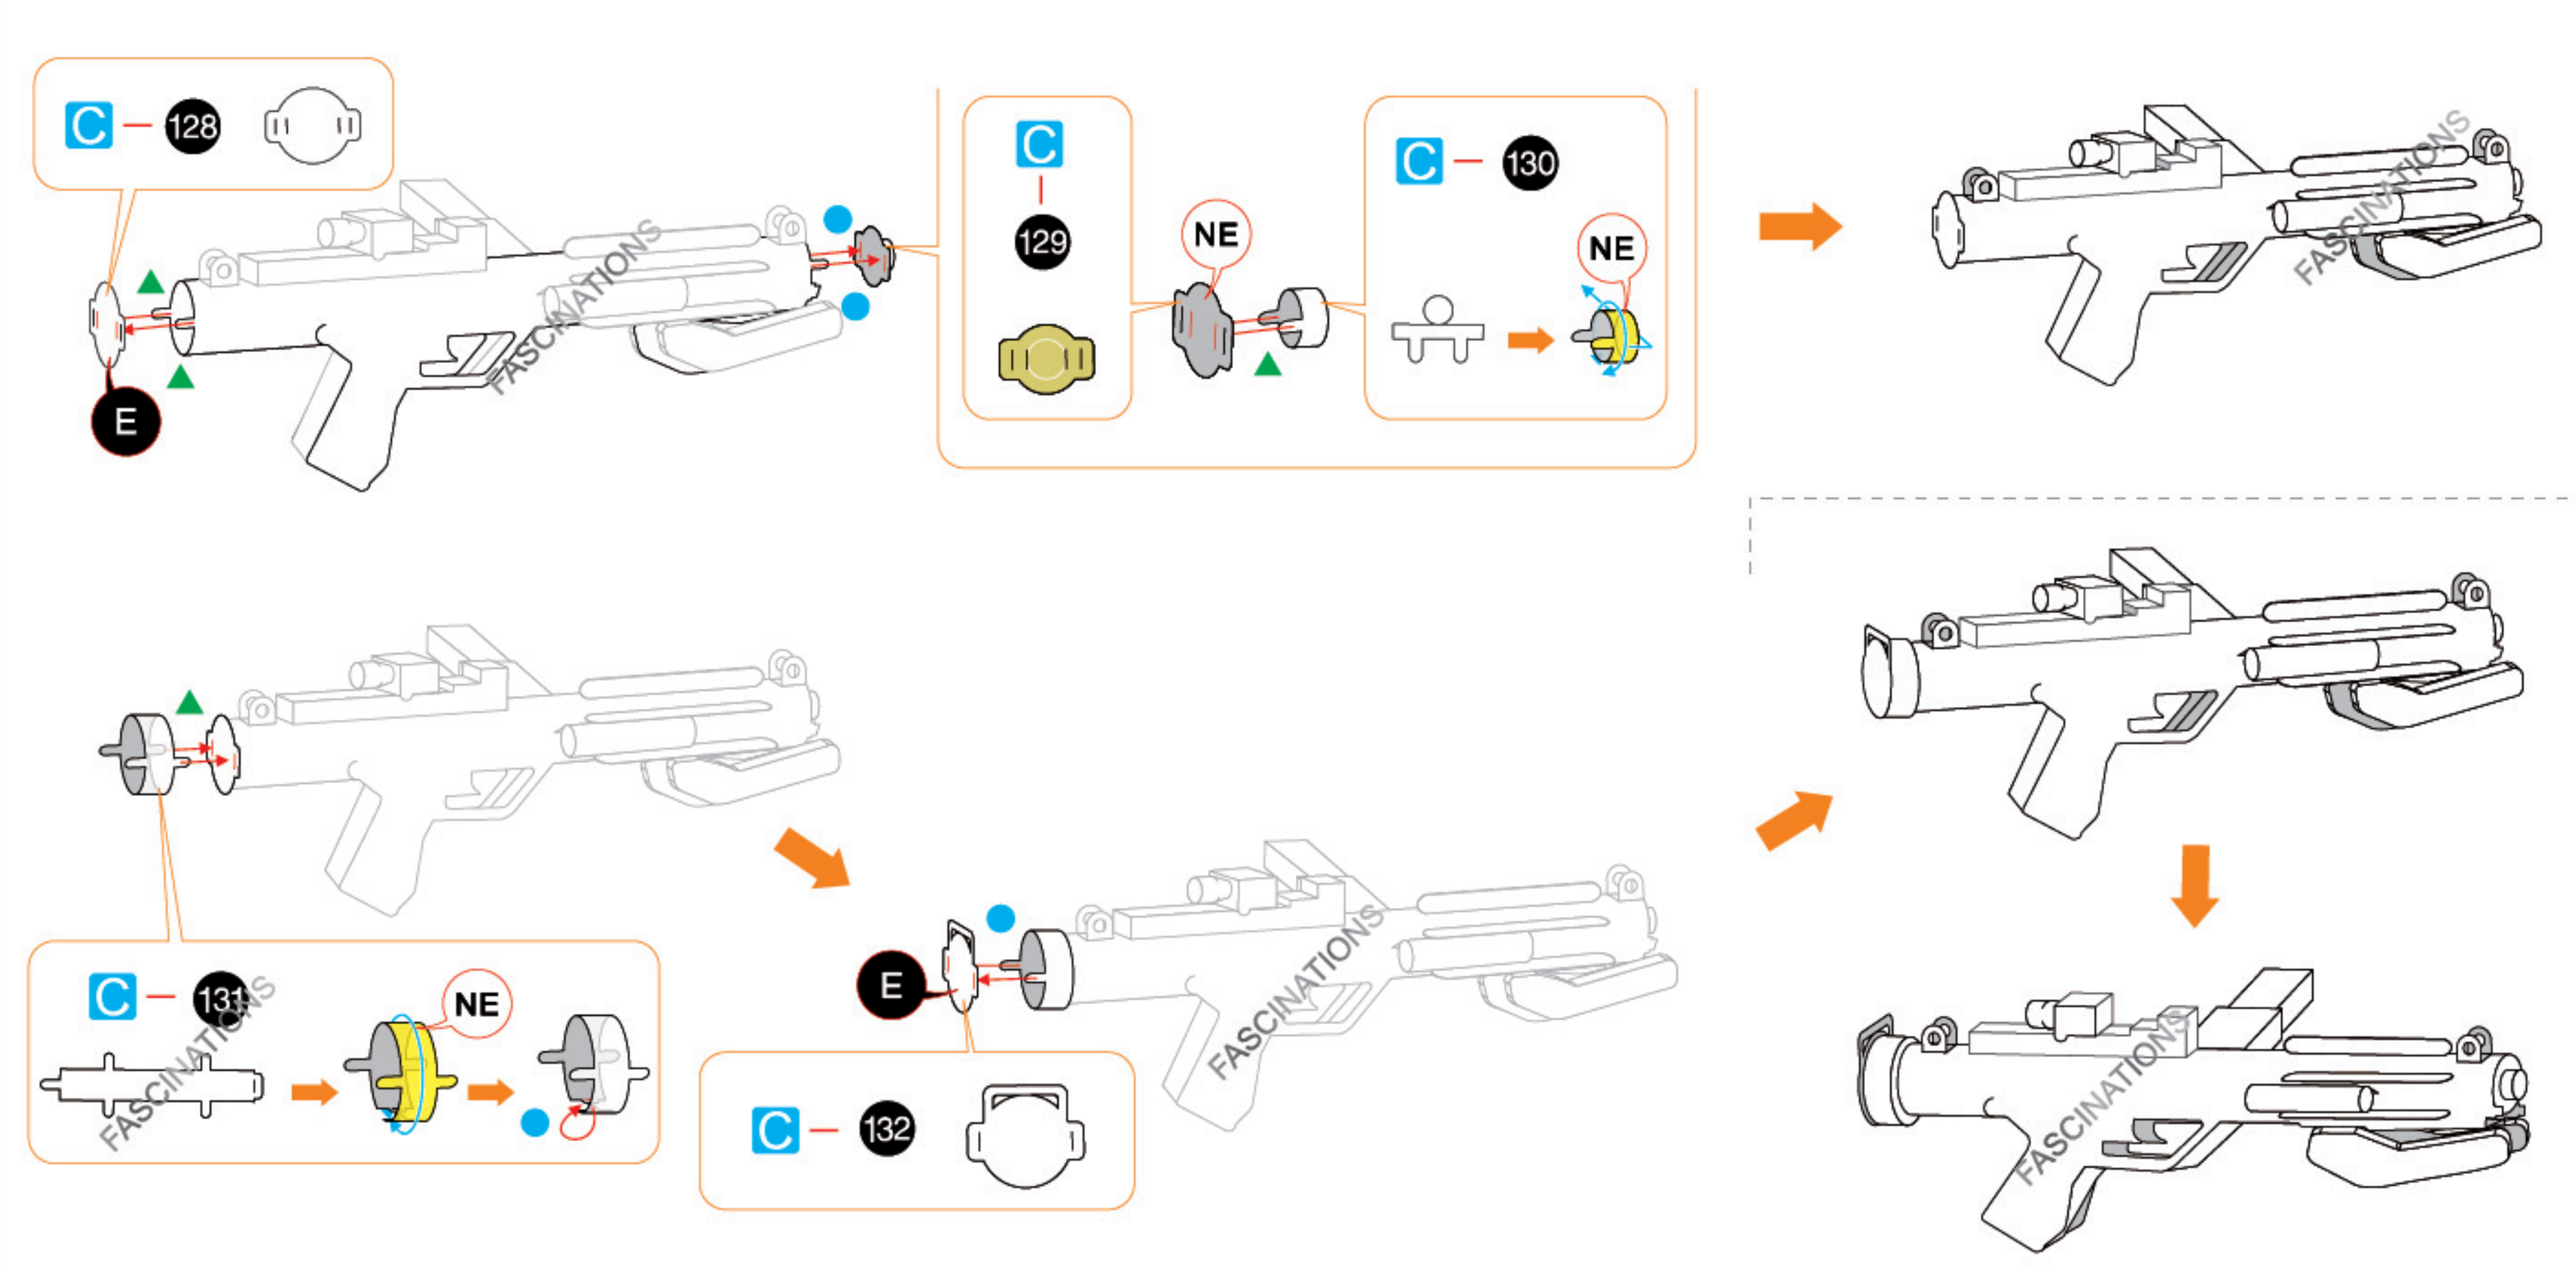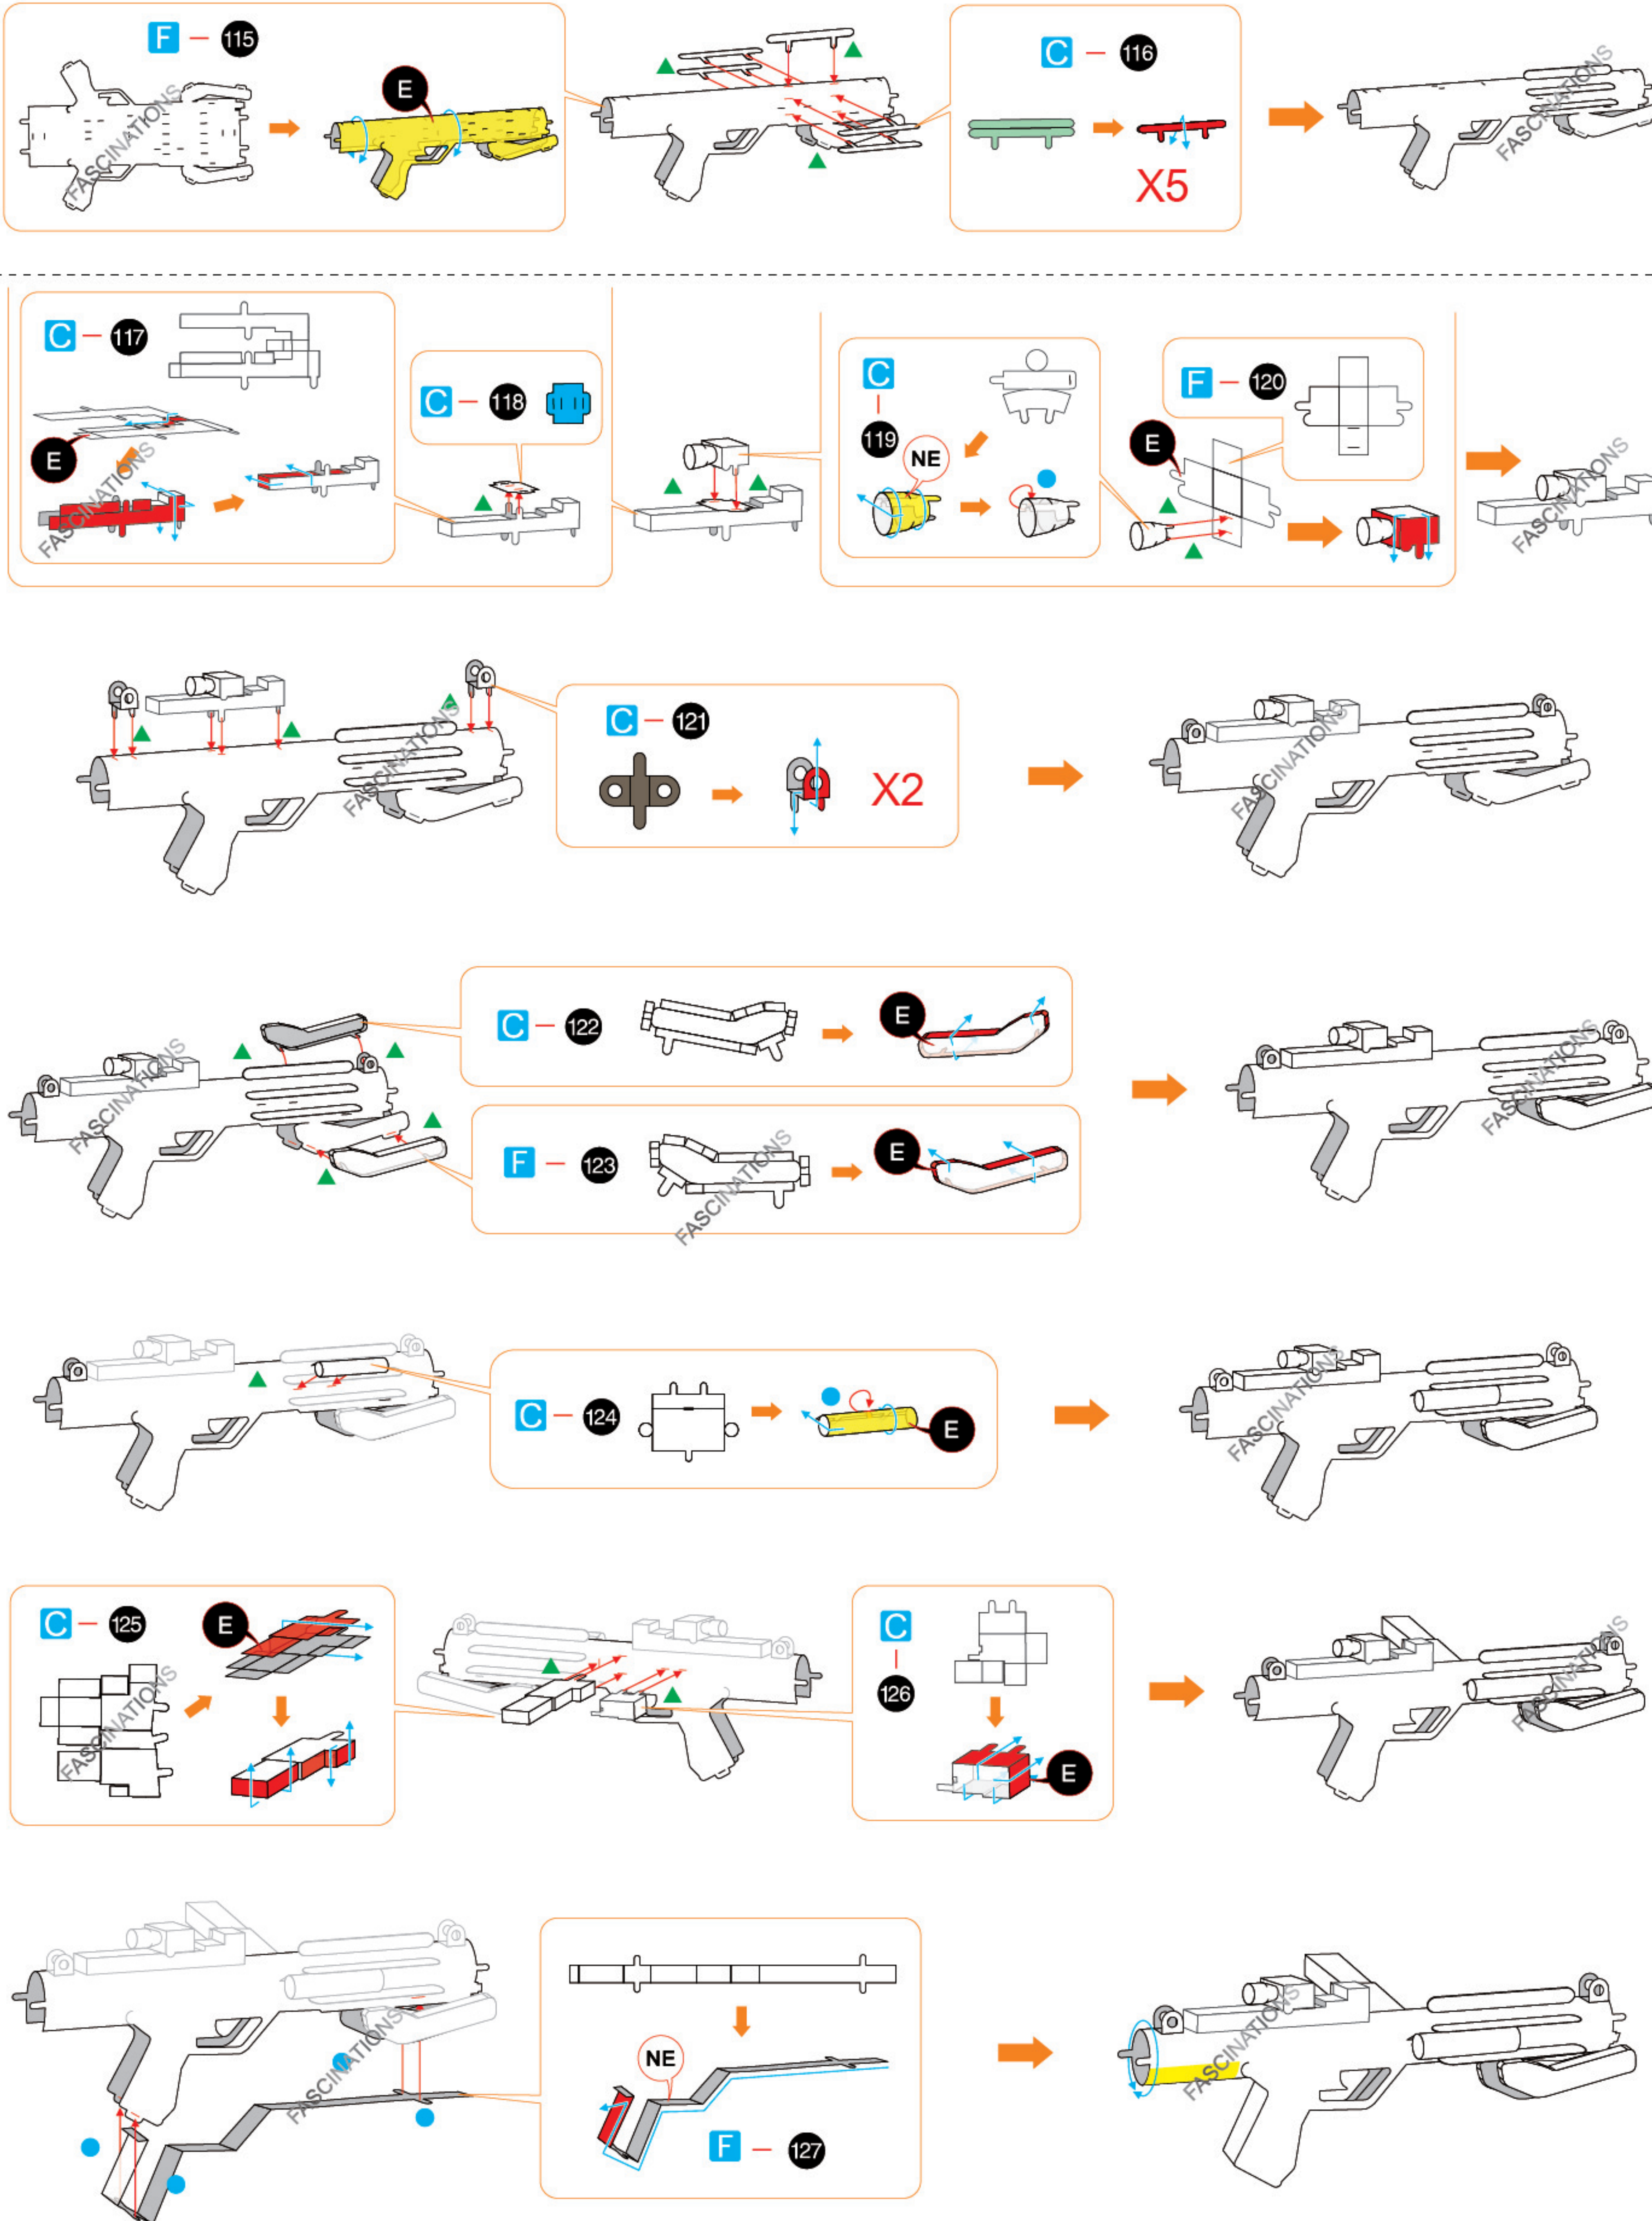

Step 21

