

SIKORSKY® UH-60 BLACK HAWK®
MMS461


360°
view



It is highly recommended that you visit
www.metal-earth.com/360/mms461
to see the completed model before assembling your own


TO CREATE THE BEST CONNECTIONS

B-19

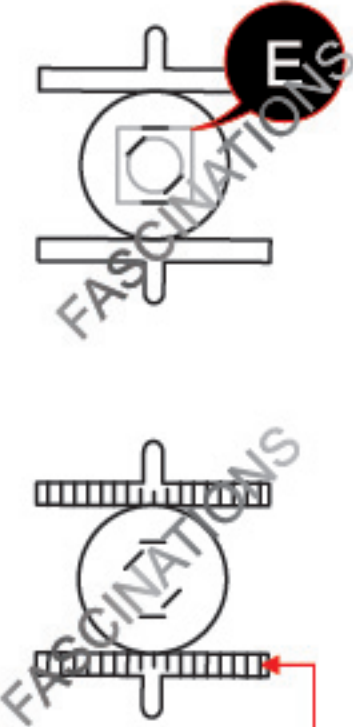

Consider these engraved stripes as supporting features for the bend

A-55

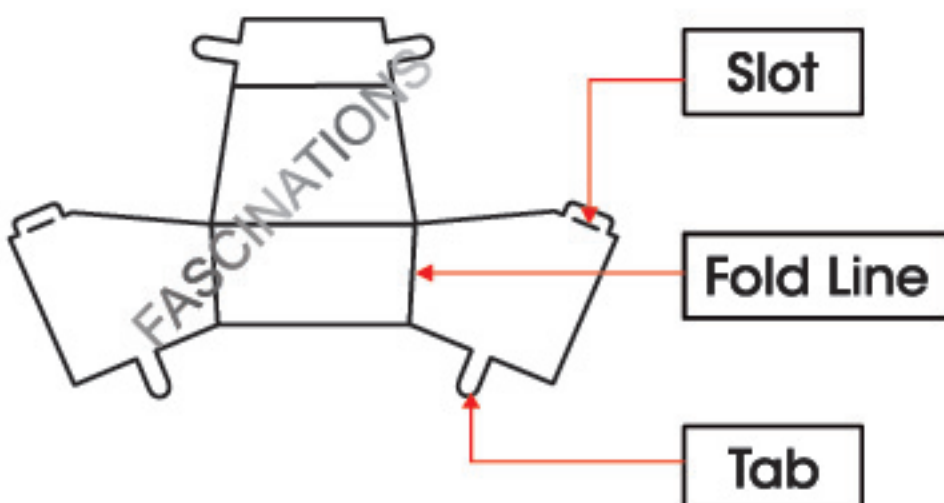

Legends:

E Engraved/ Color side

NE Non - engraved/ Silver side

Attention point

Insert tab and bend 90 degrees

Insert tab and twist 90 degrees

Assembly tip:

If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish.




In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed.

Recommended tools:

- Wire cutters: helpful for taking parts from the metal sheets.




- Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.

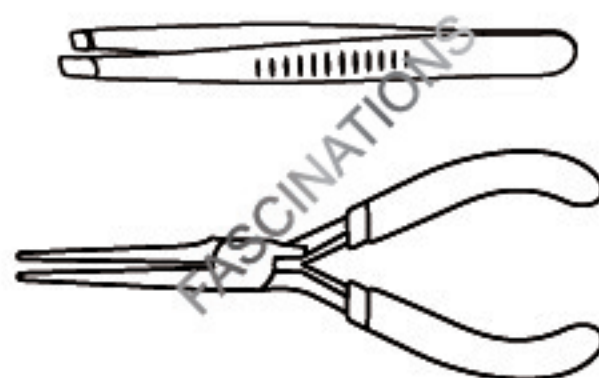


METAL SHEETS

Parts with same color are duplicates

A

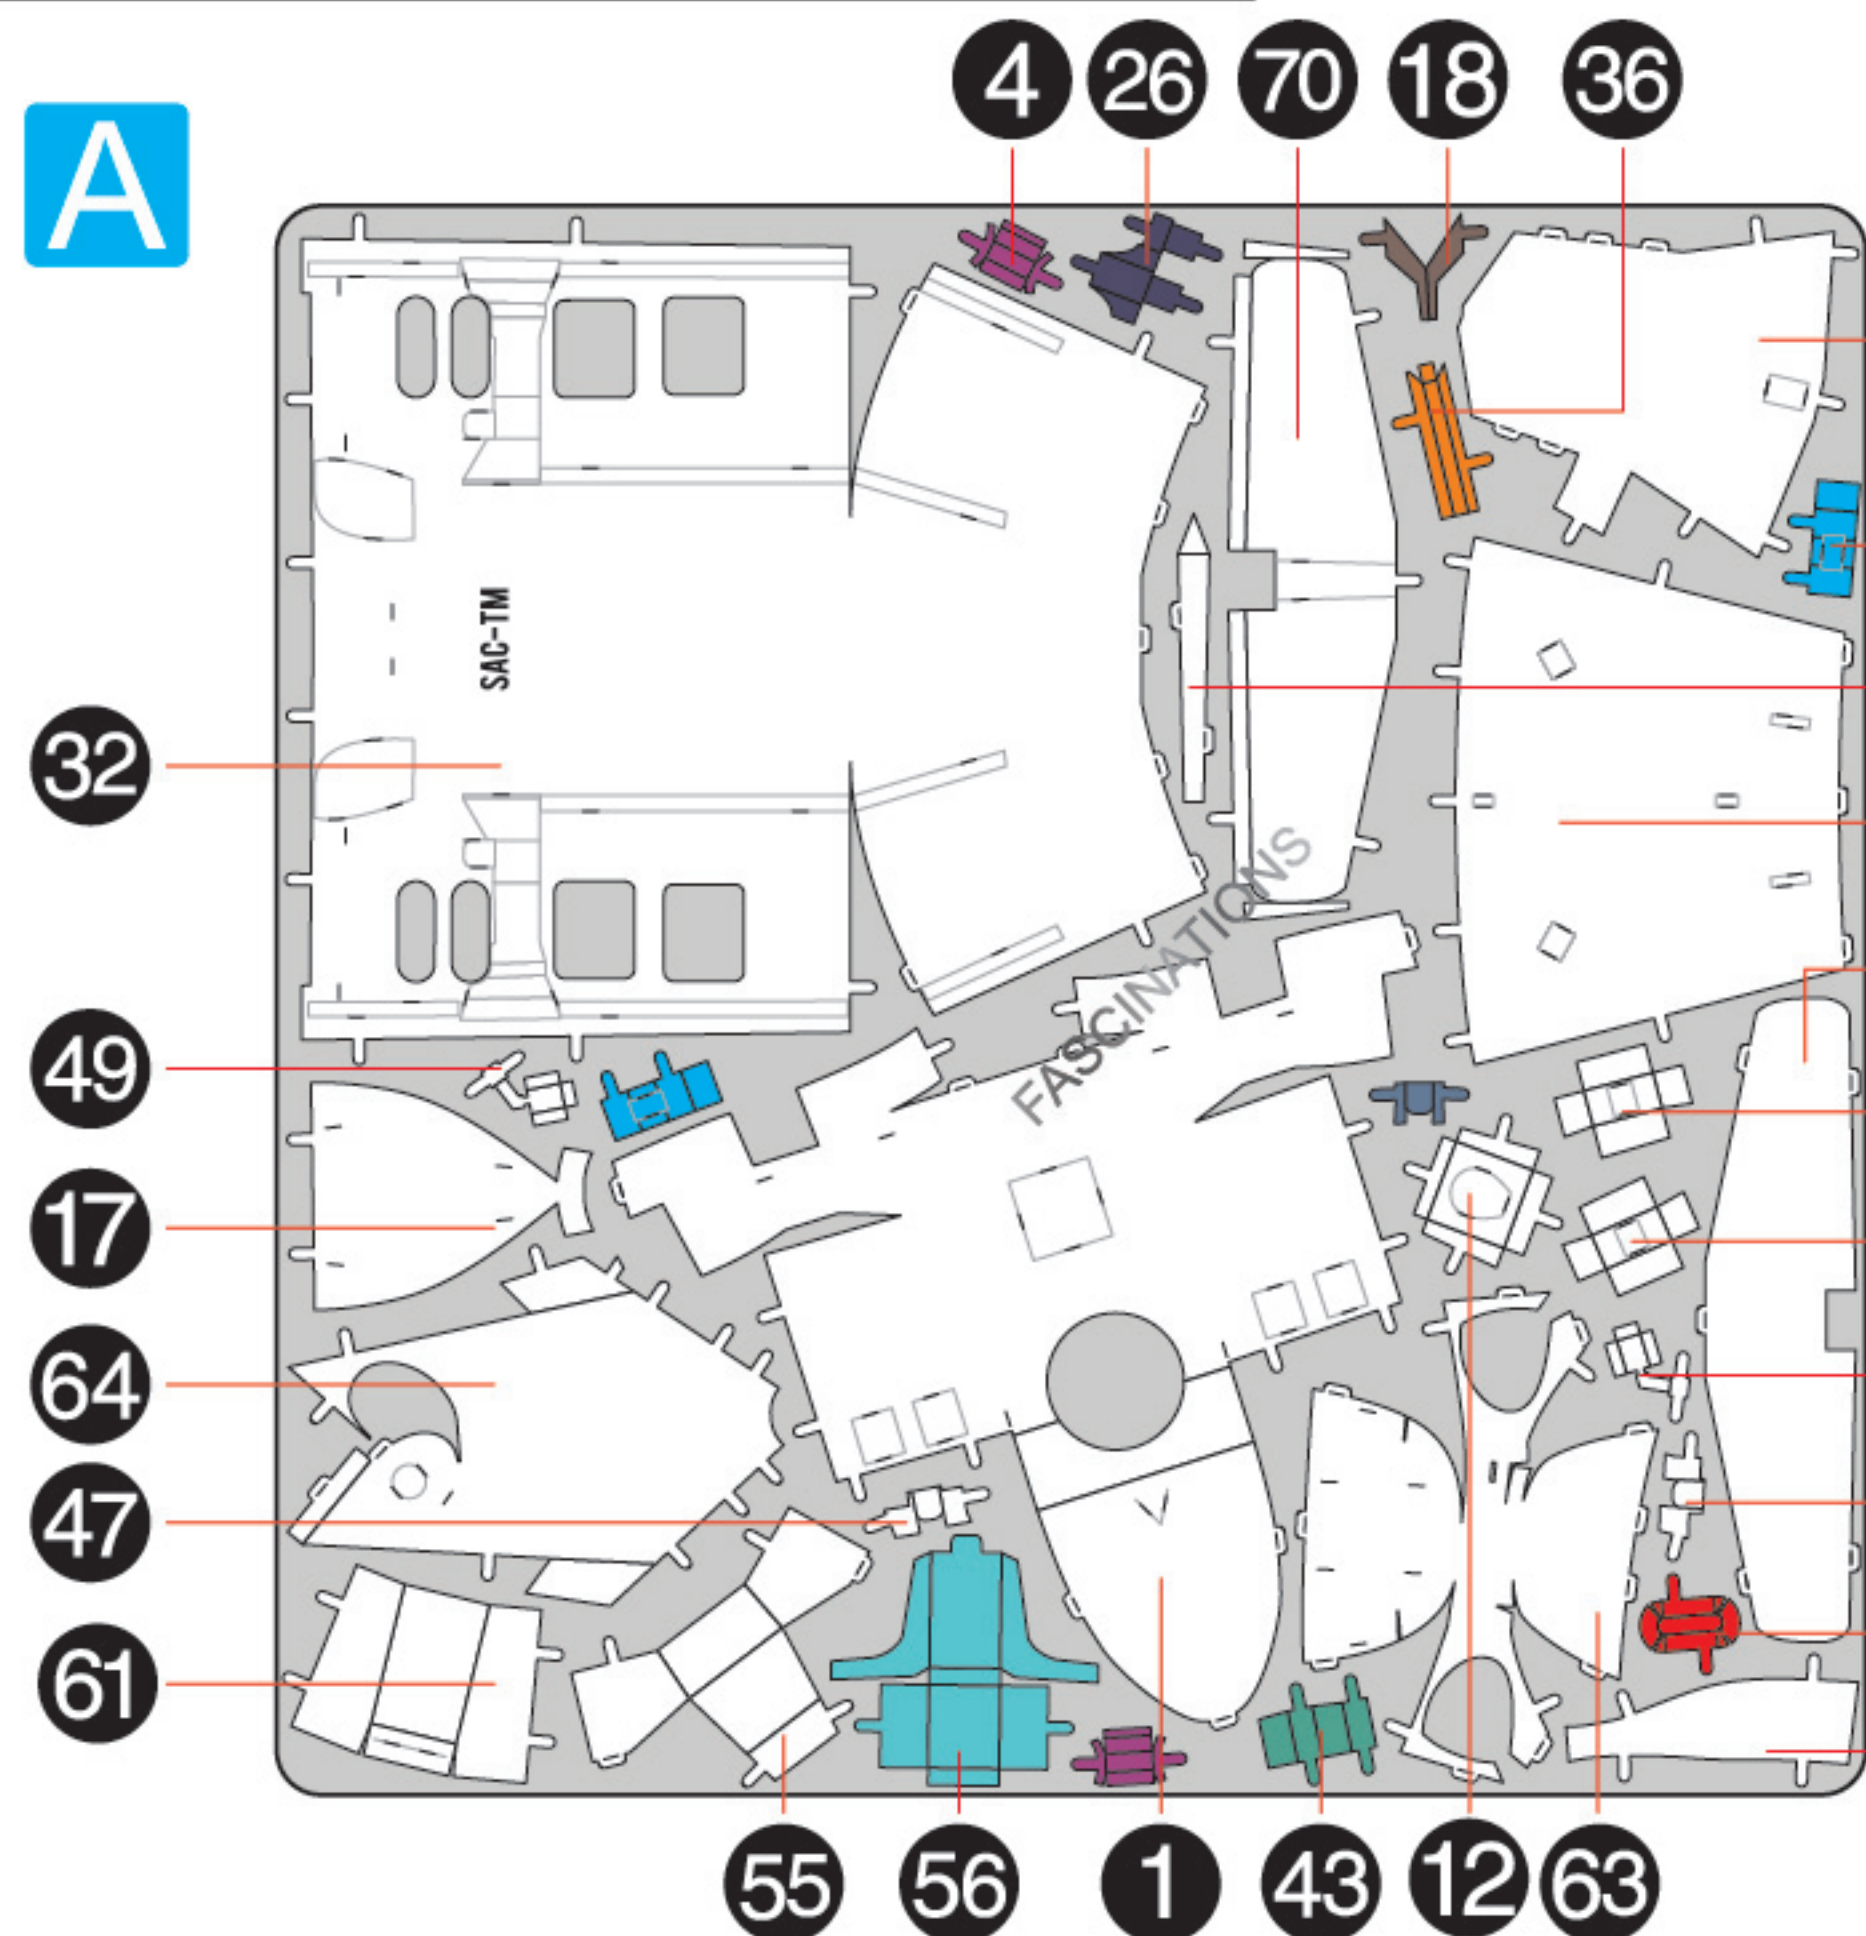


B

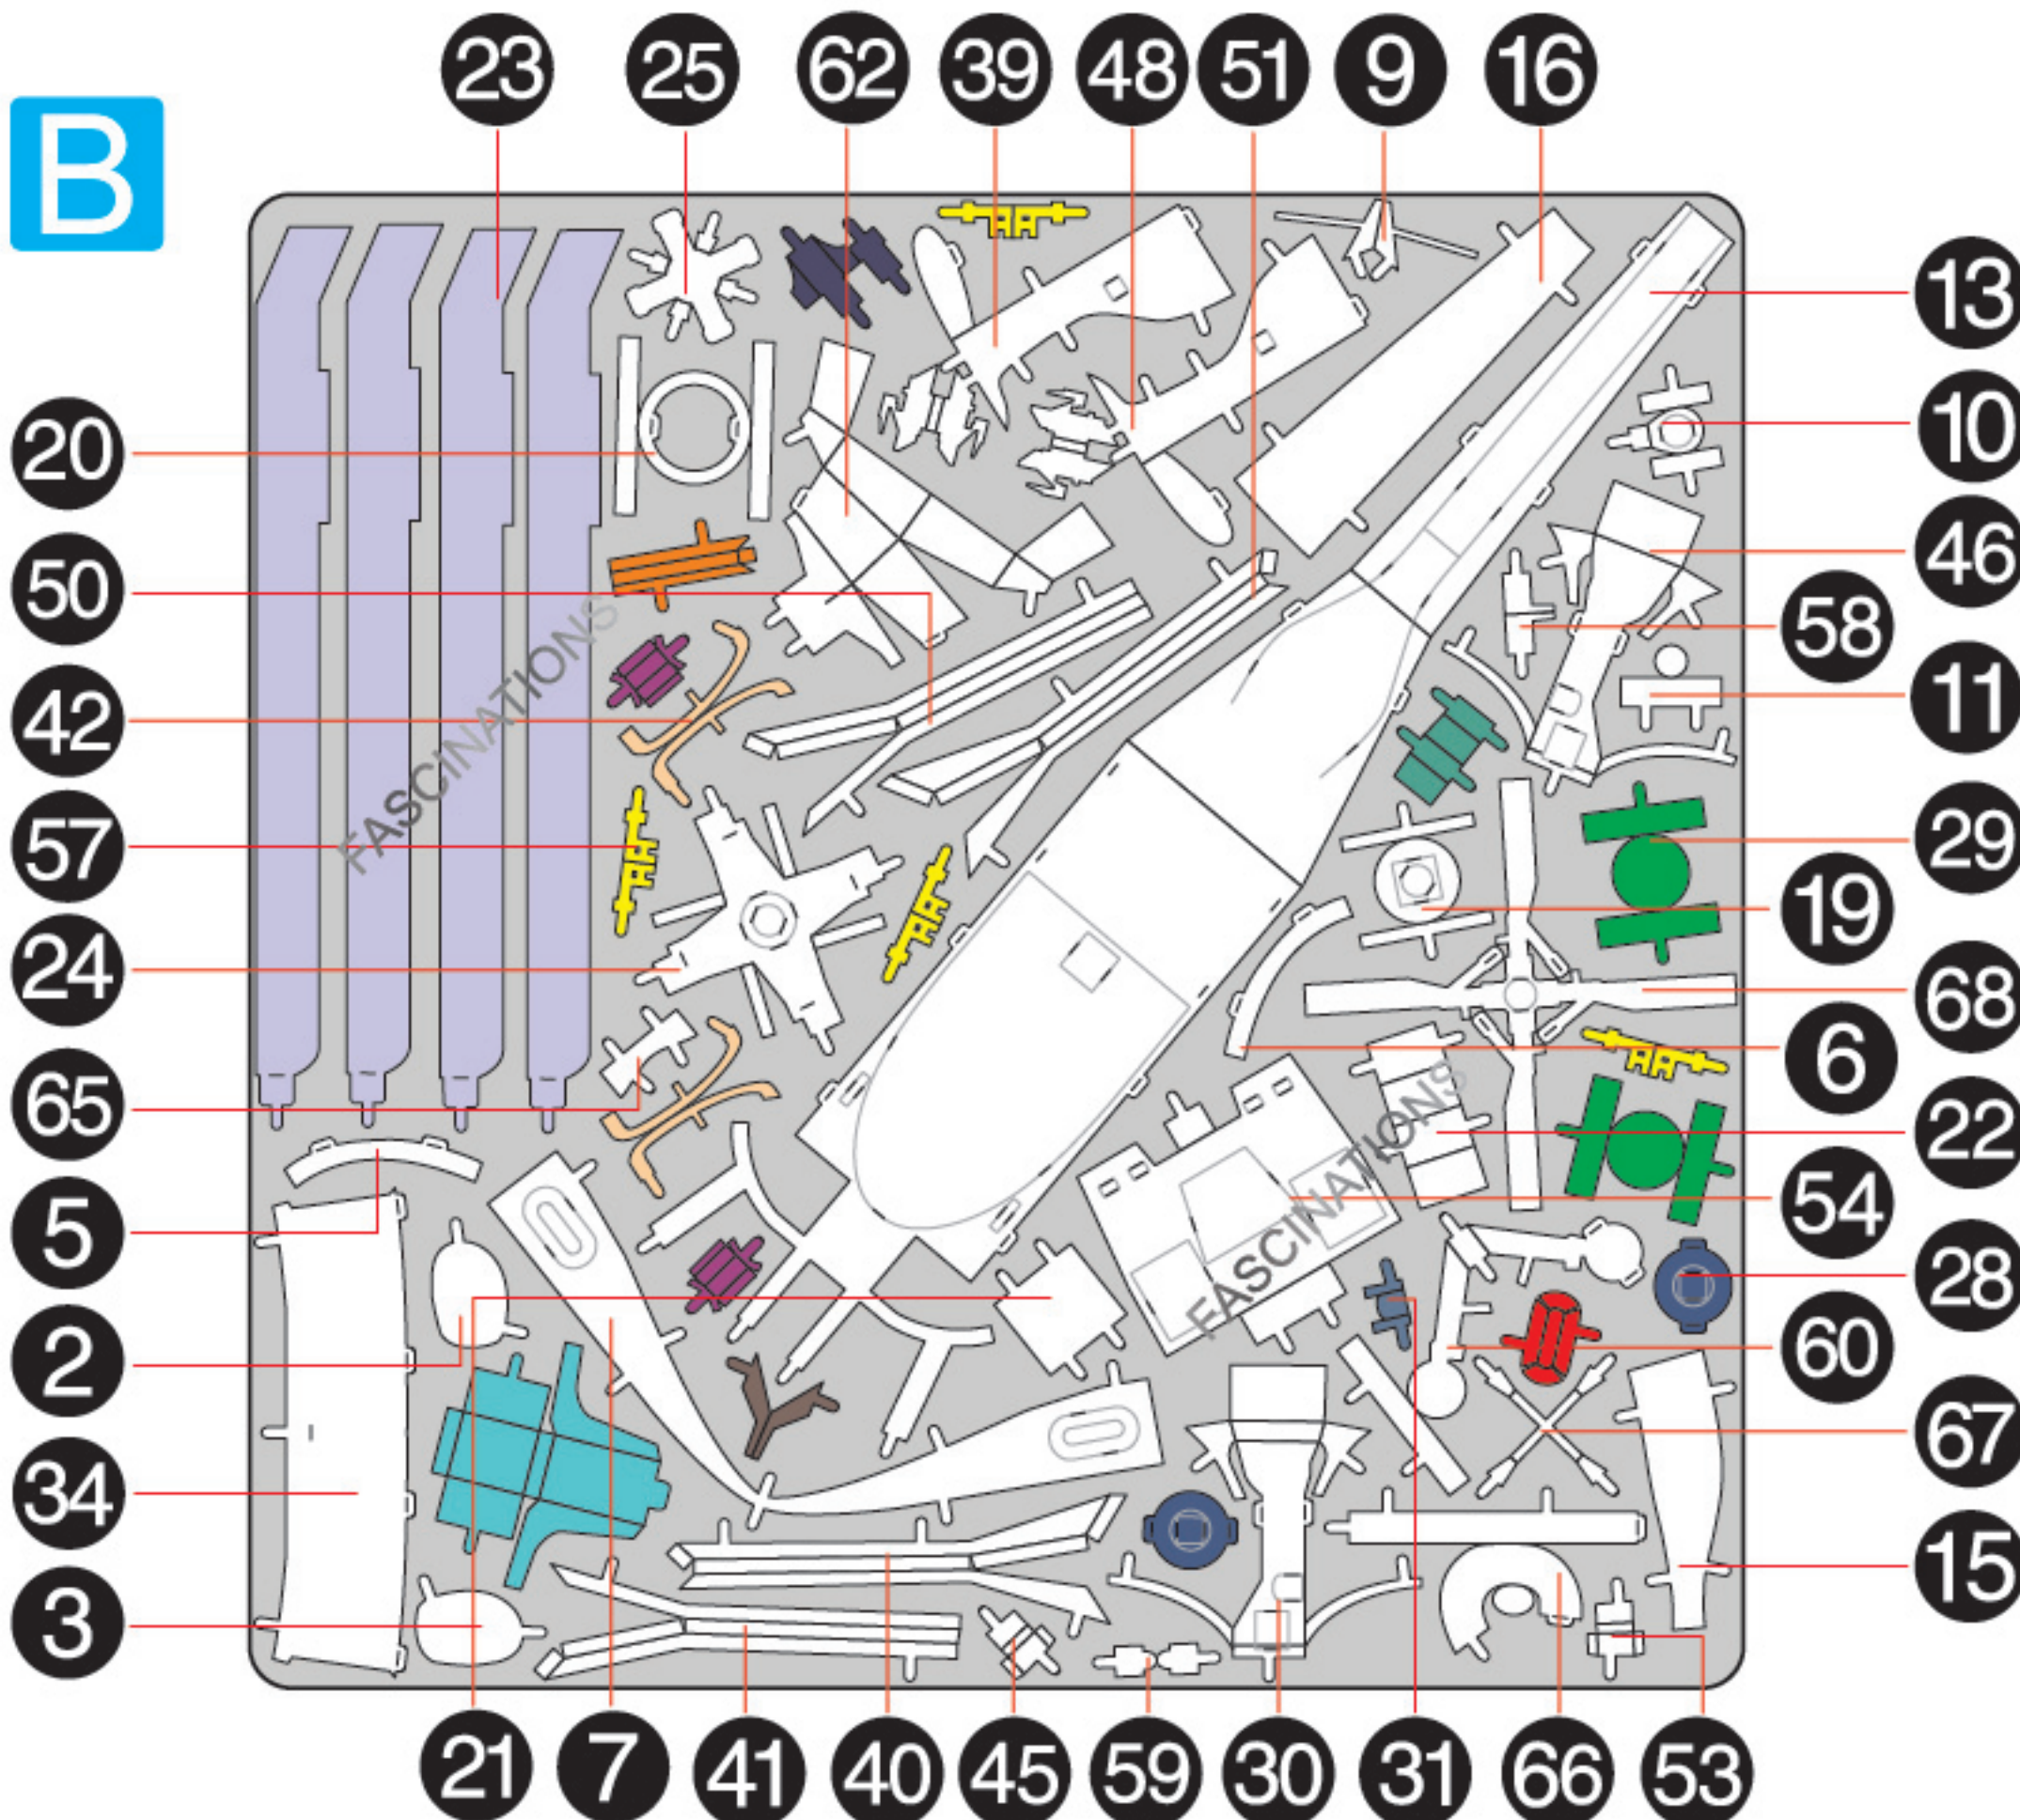


Go to www.metal-earth.com/360/mms461 to see the zoomable PDF version of this instruction sheet










ASSEMBLY FLOW CHART




Step 1

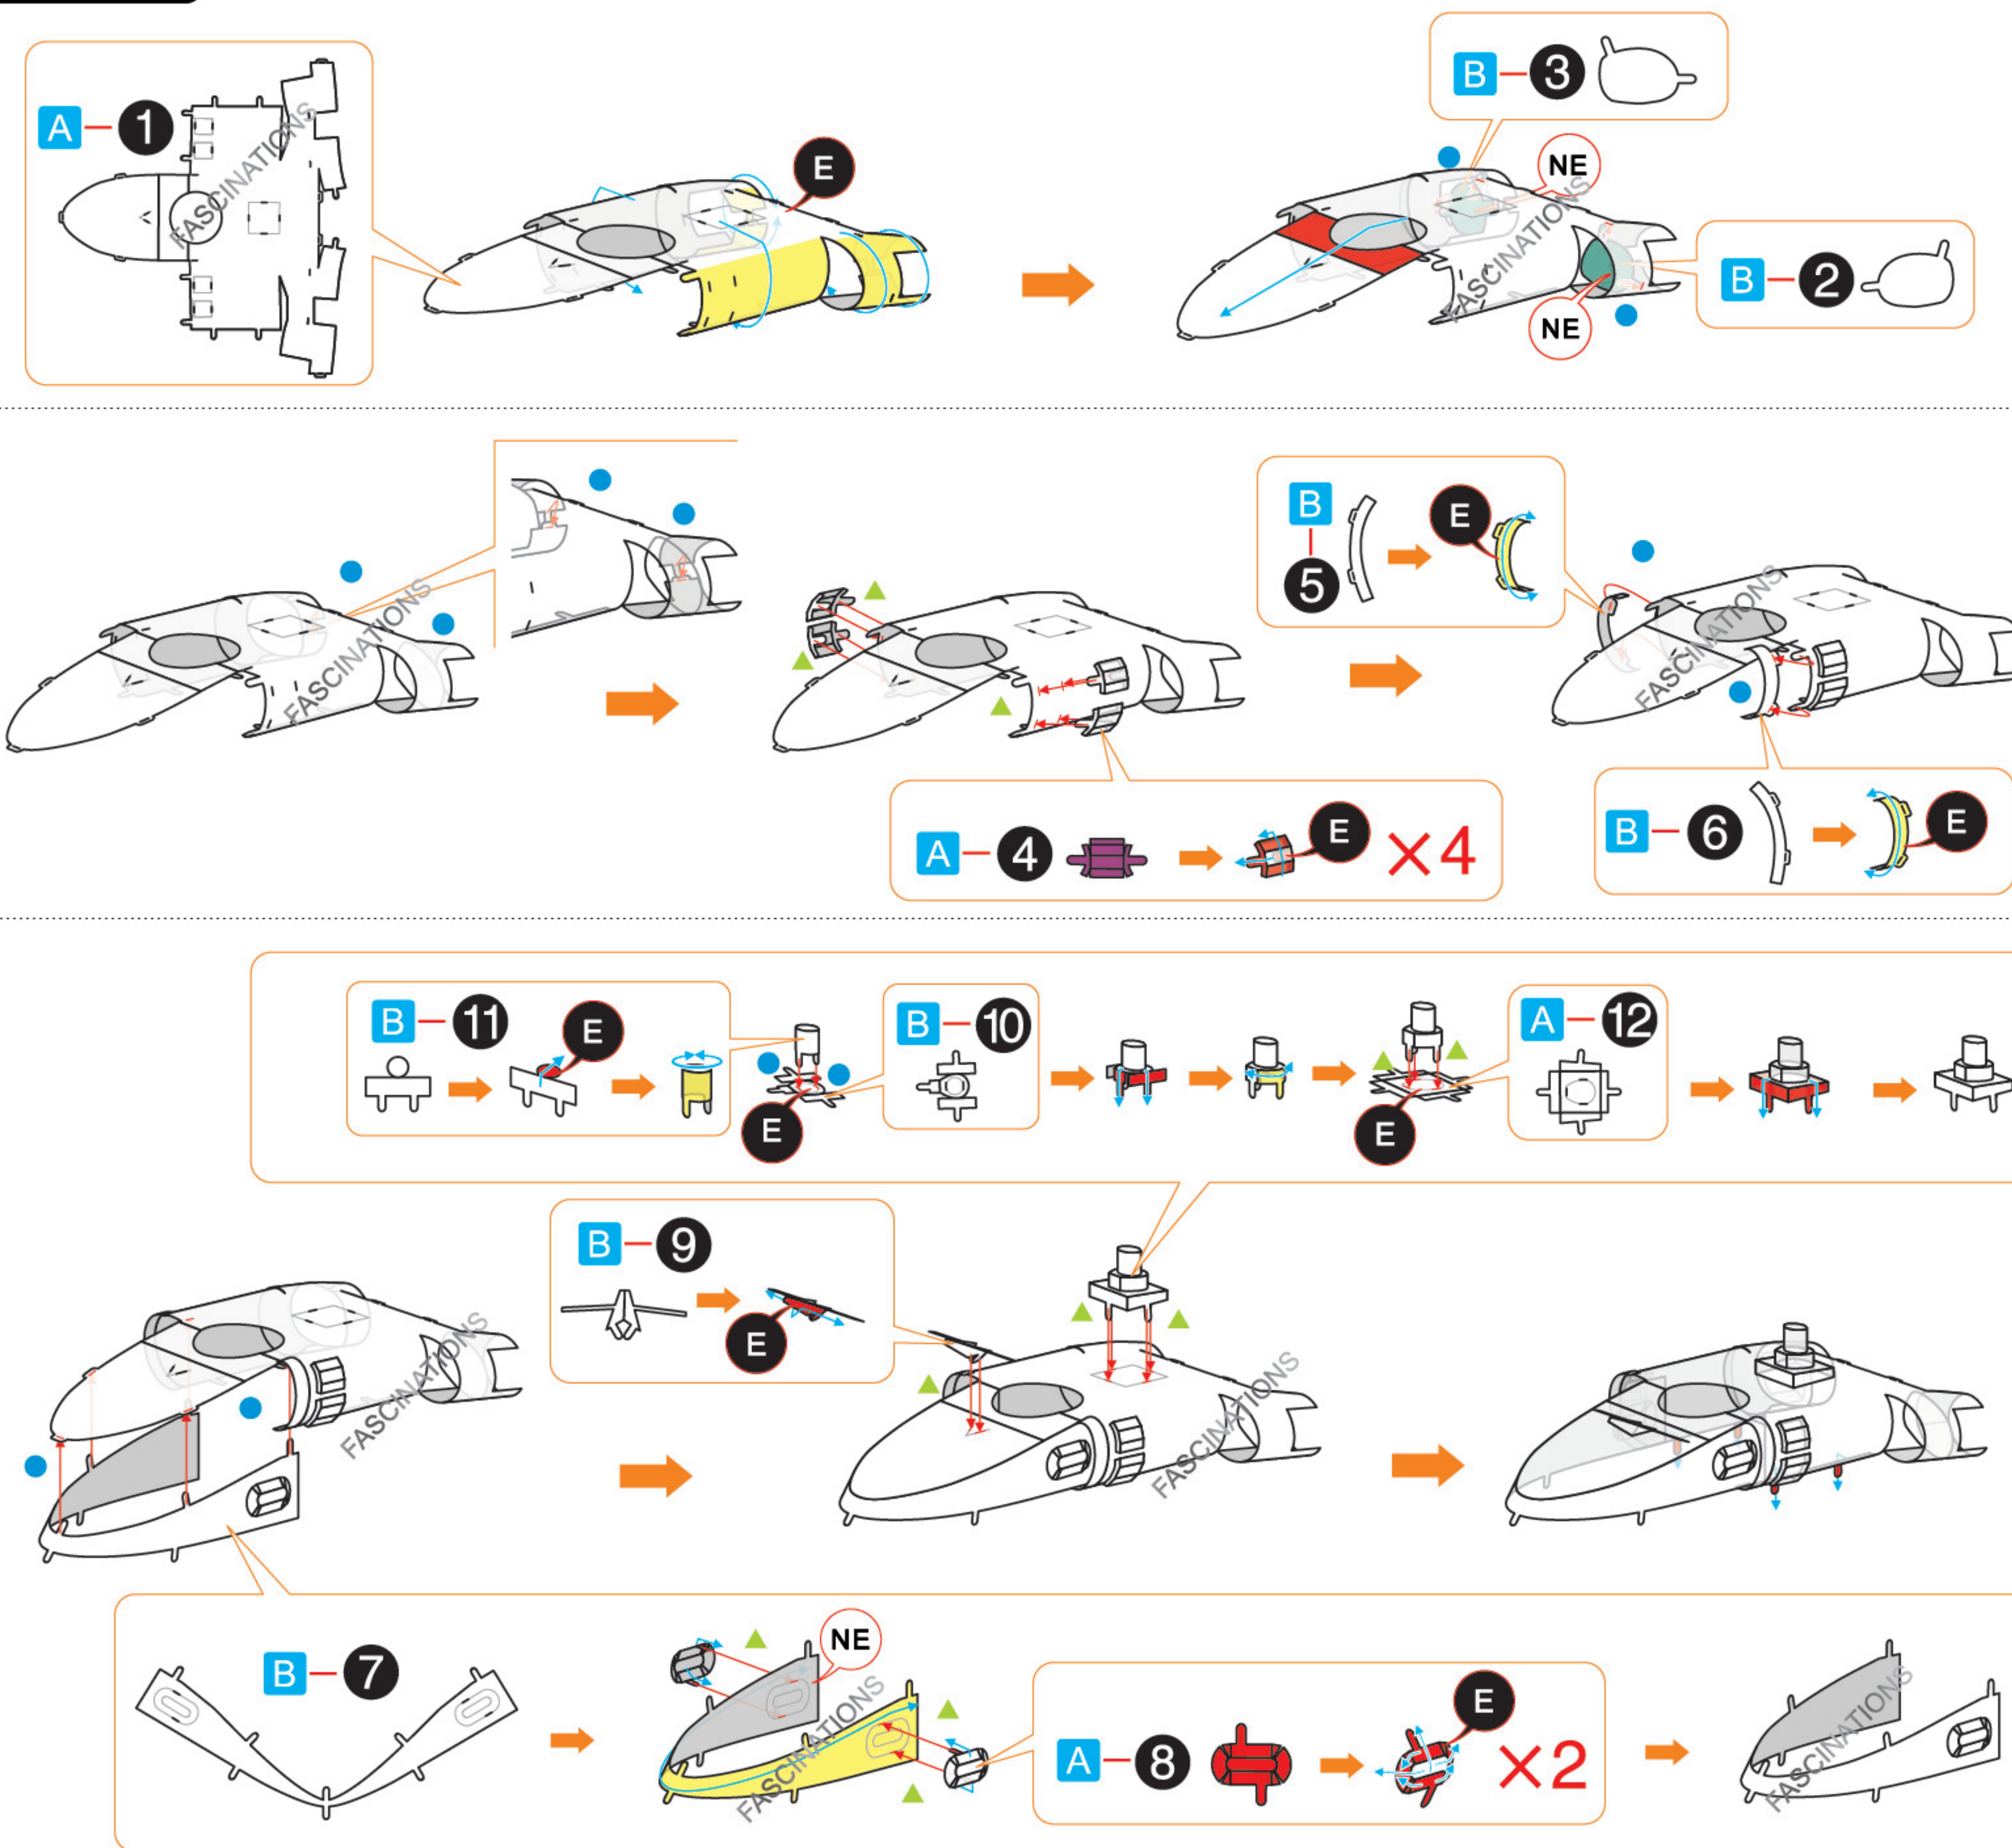


Step 2

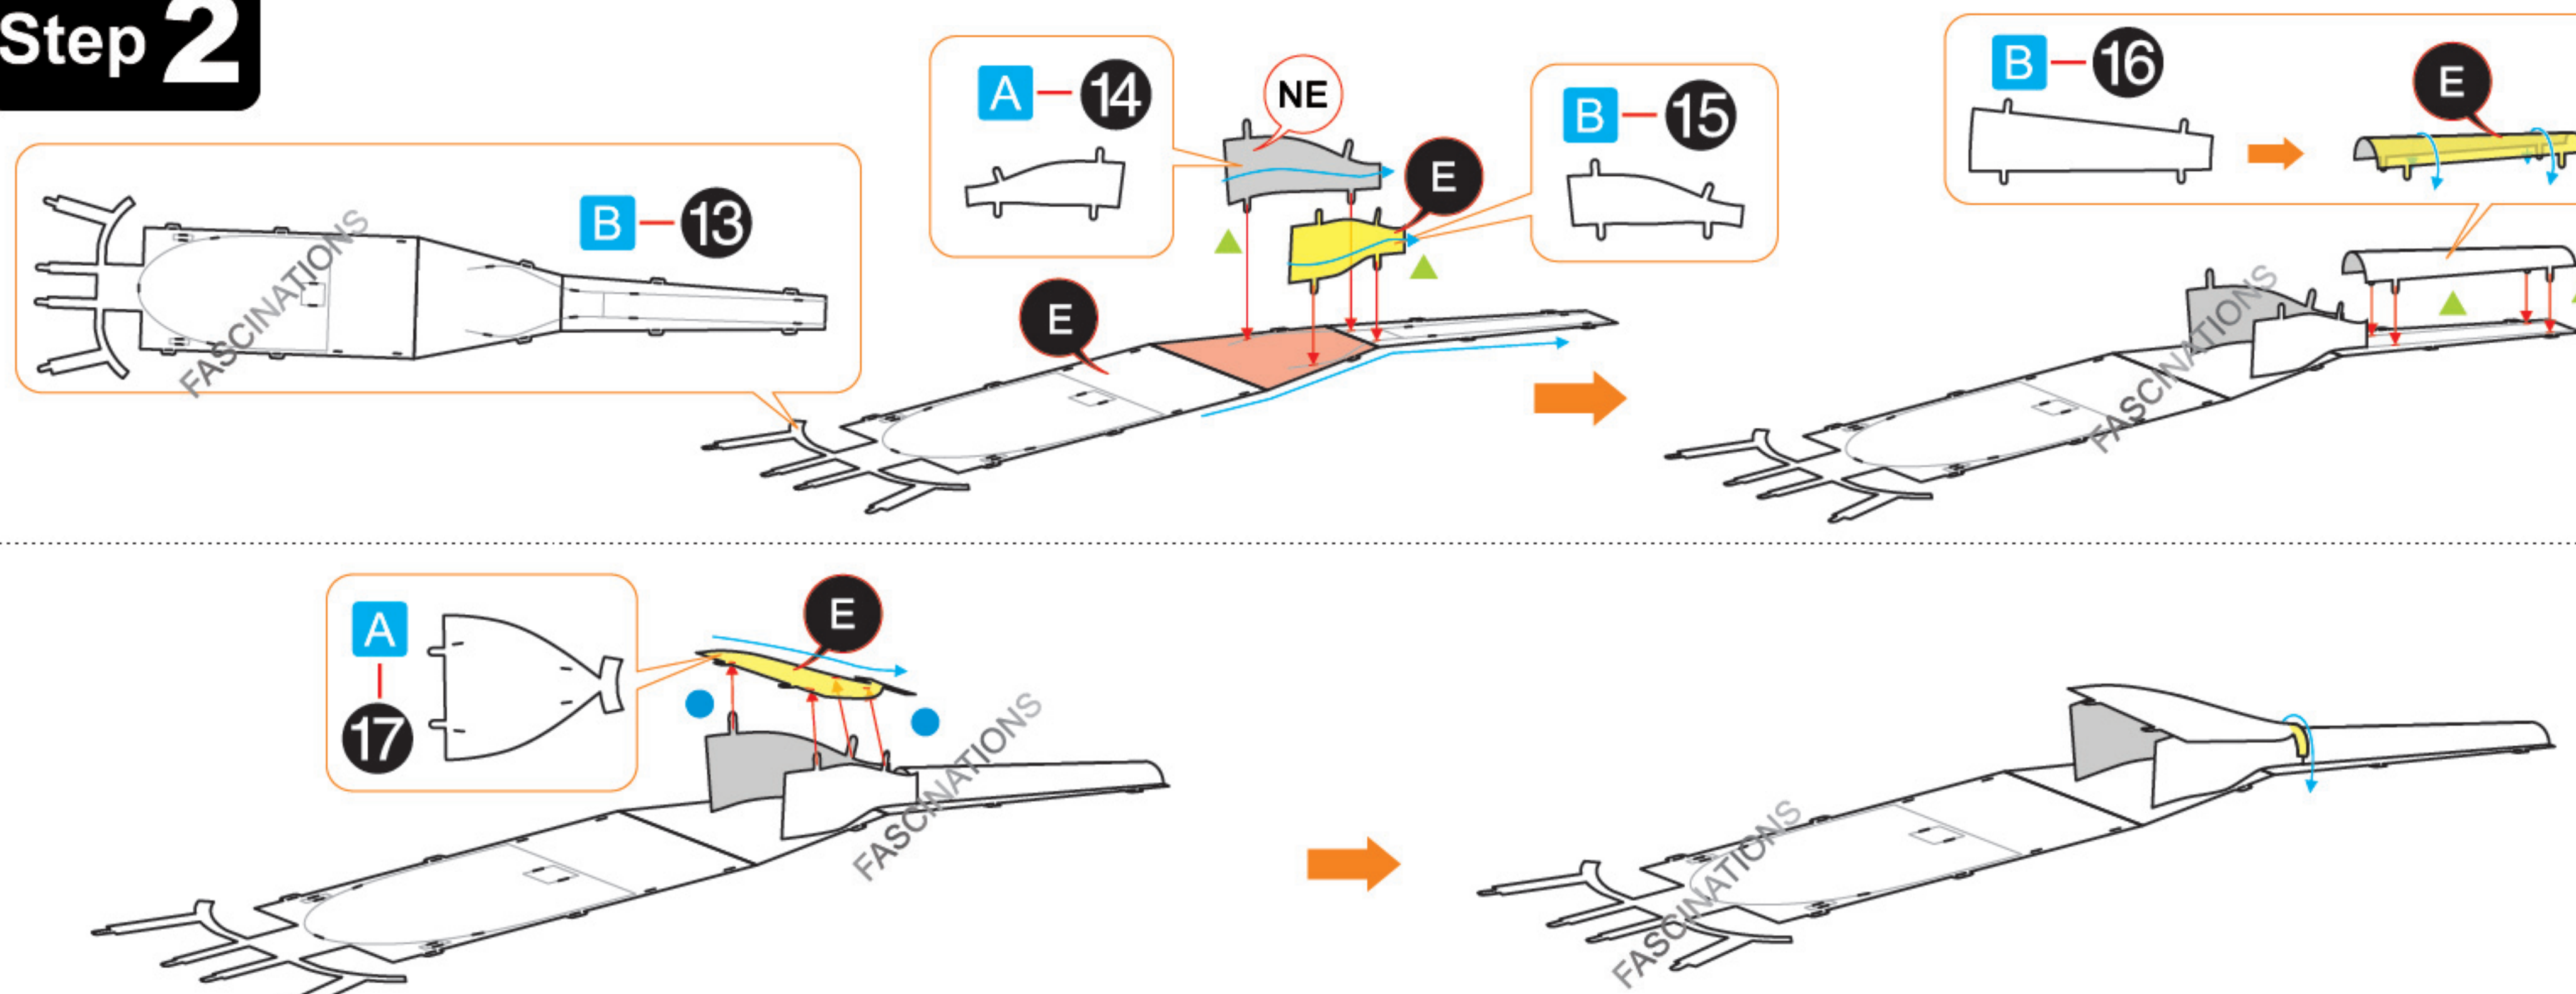

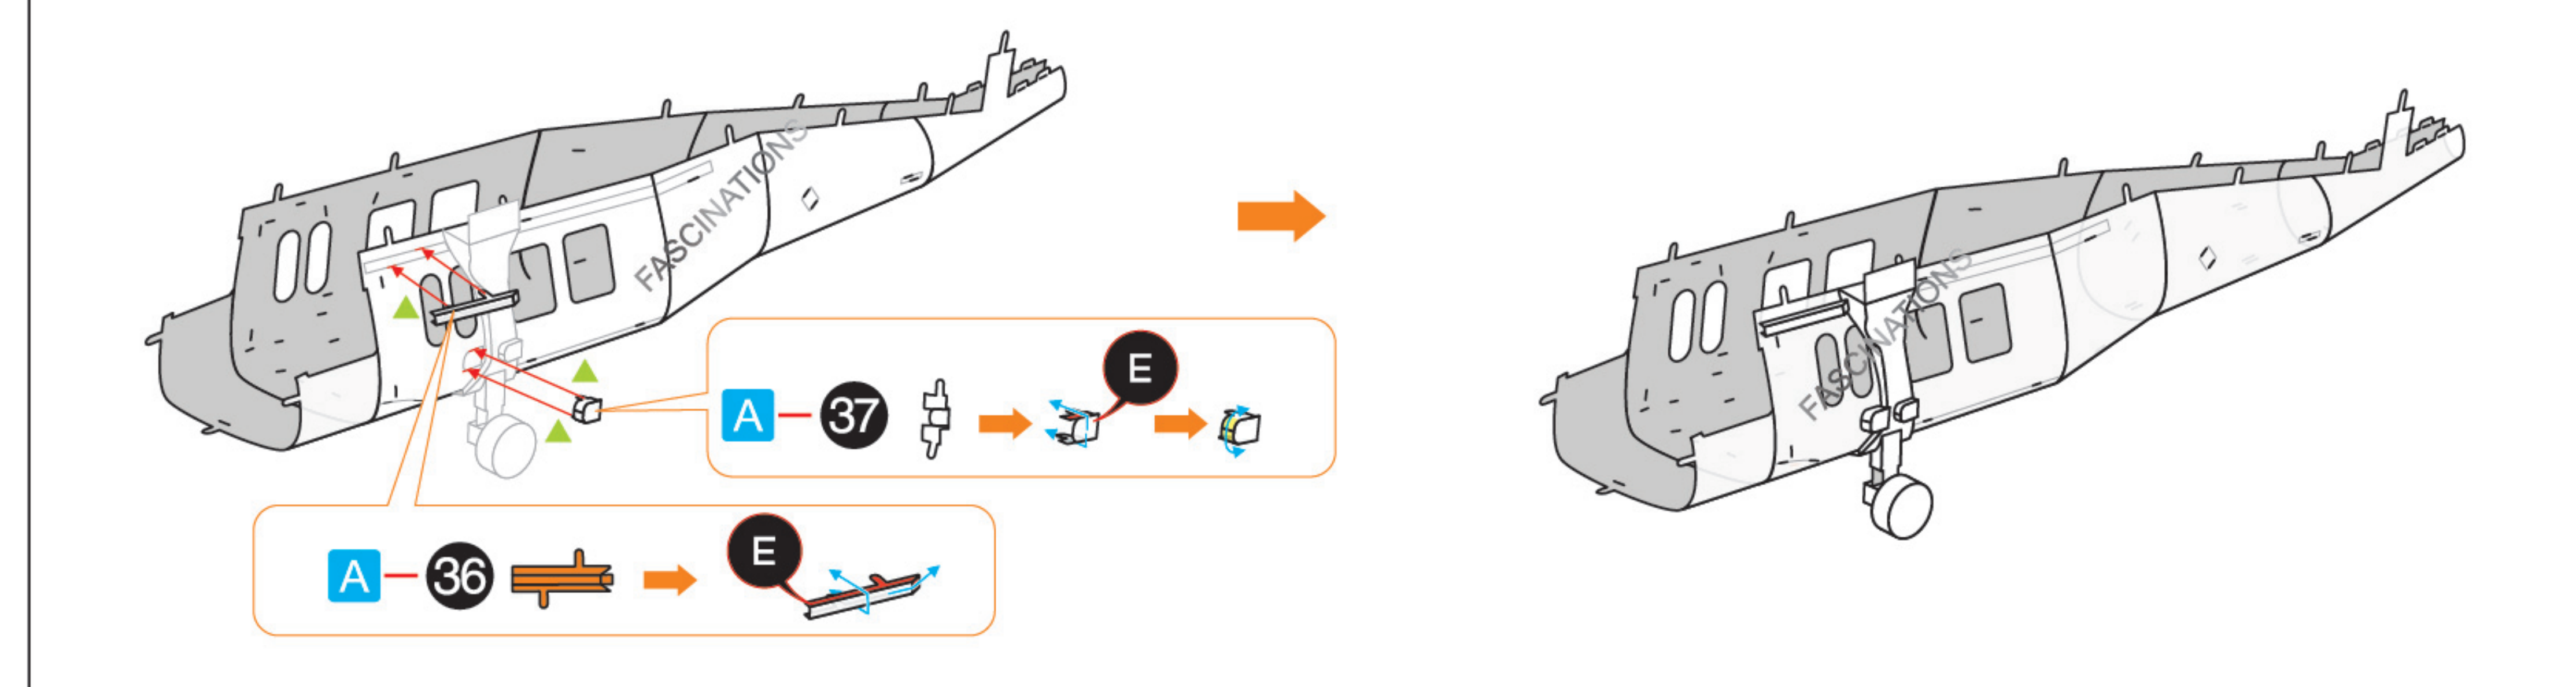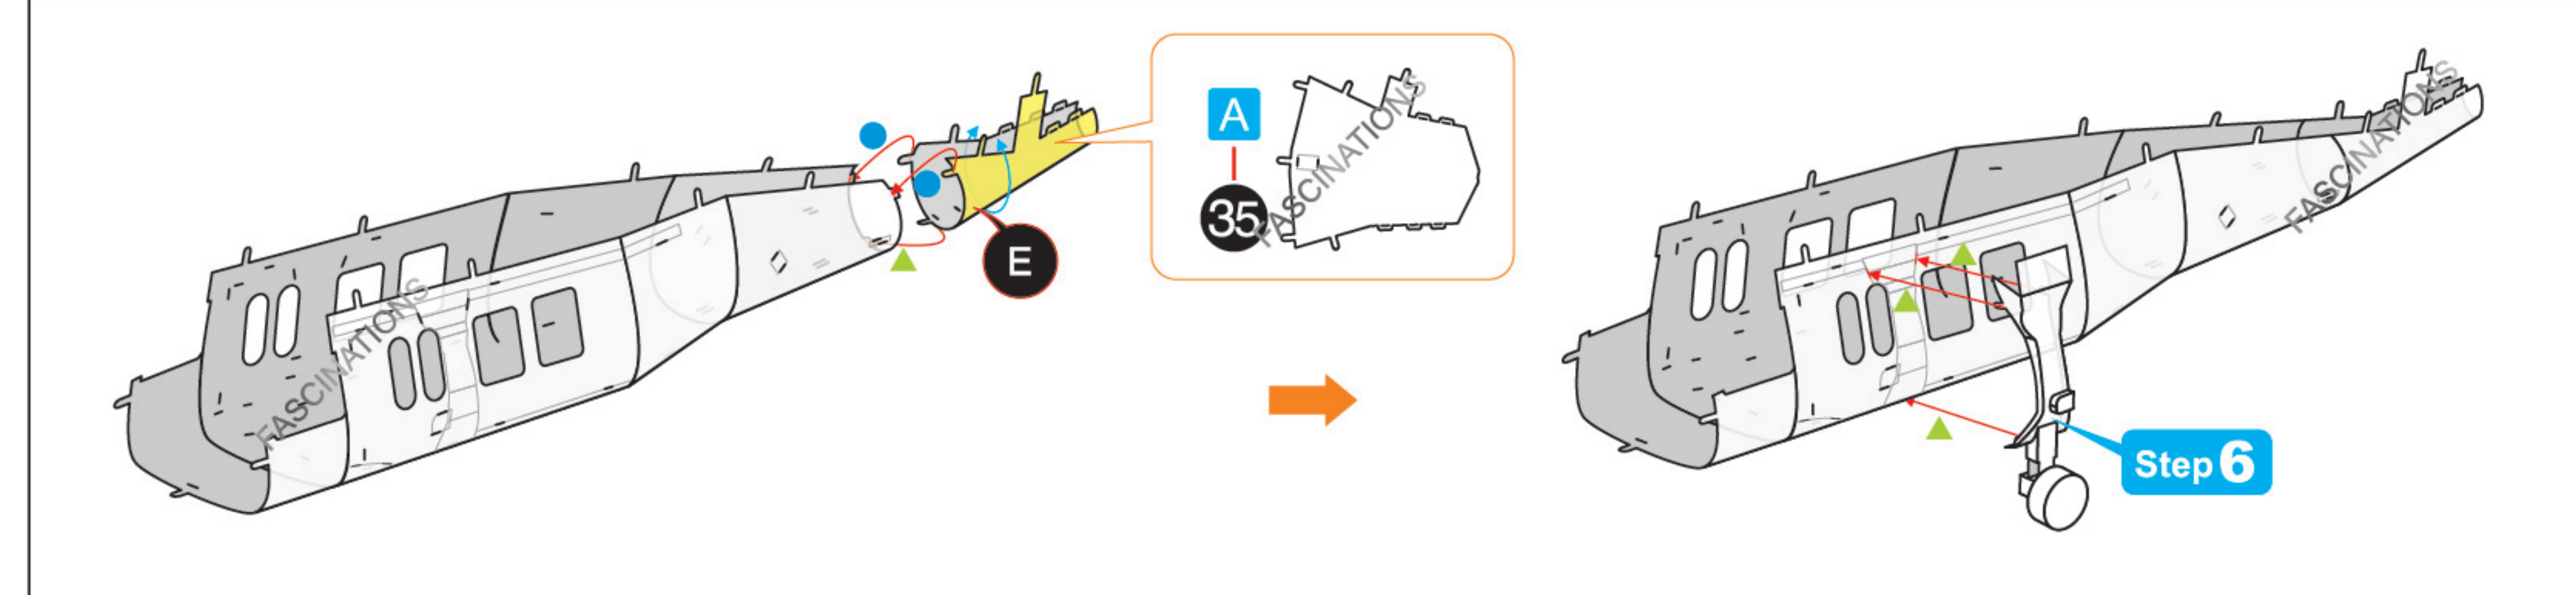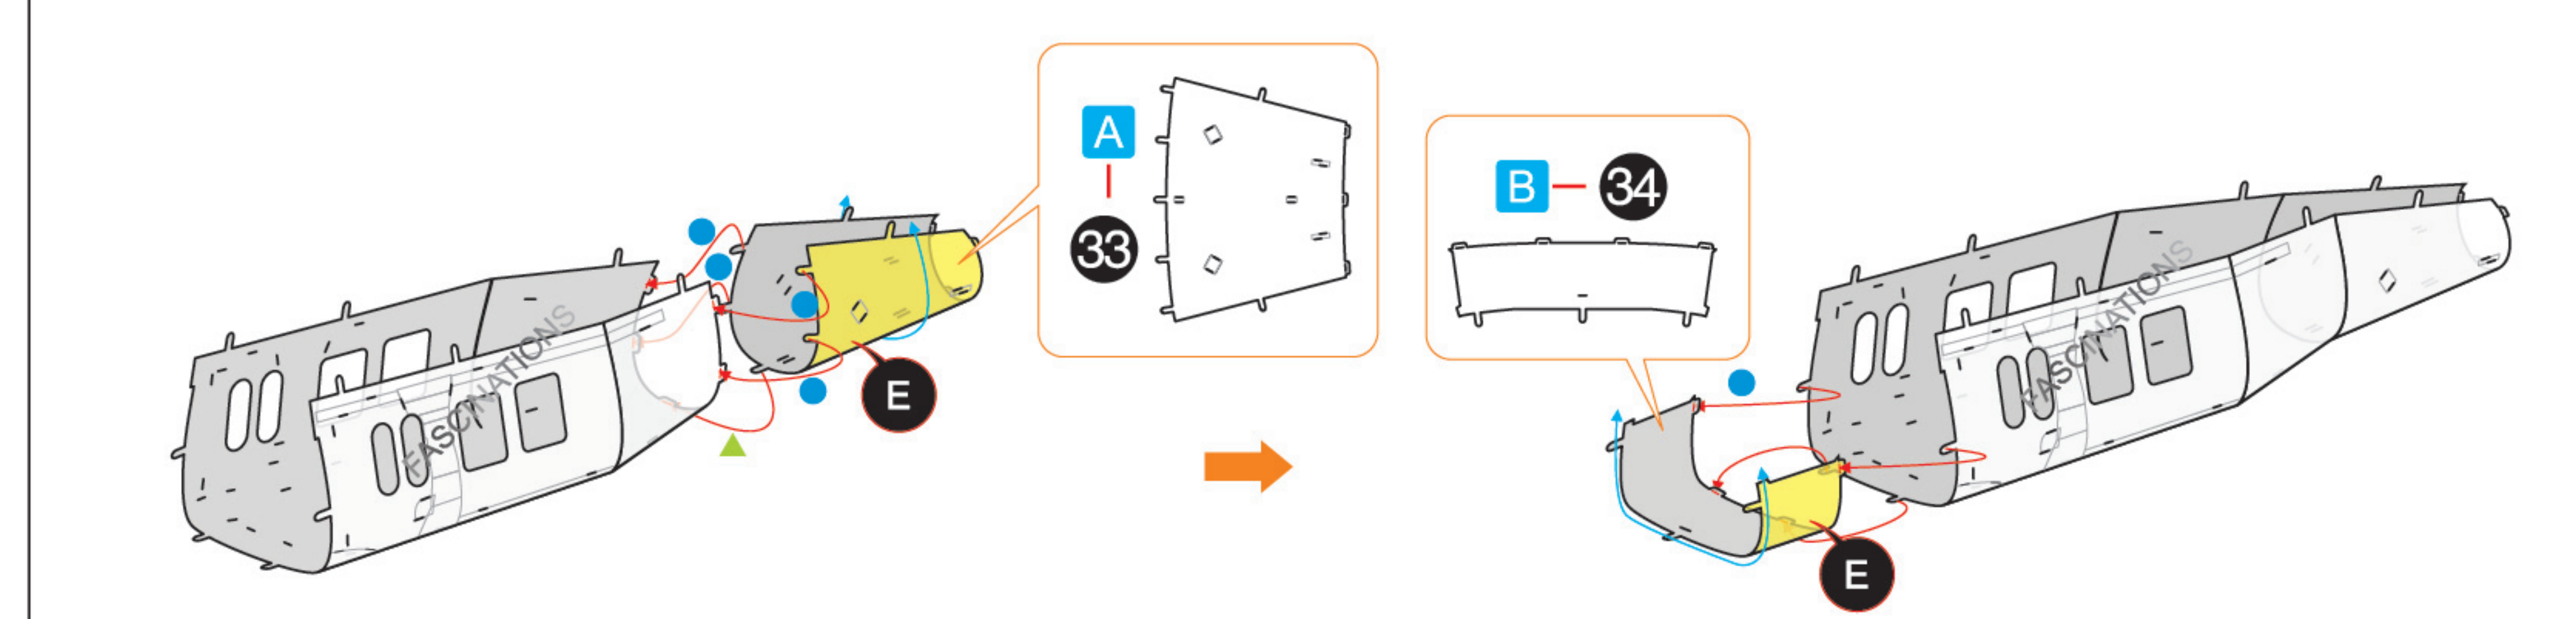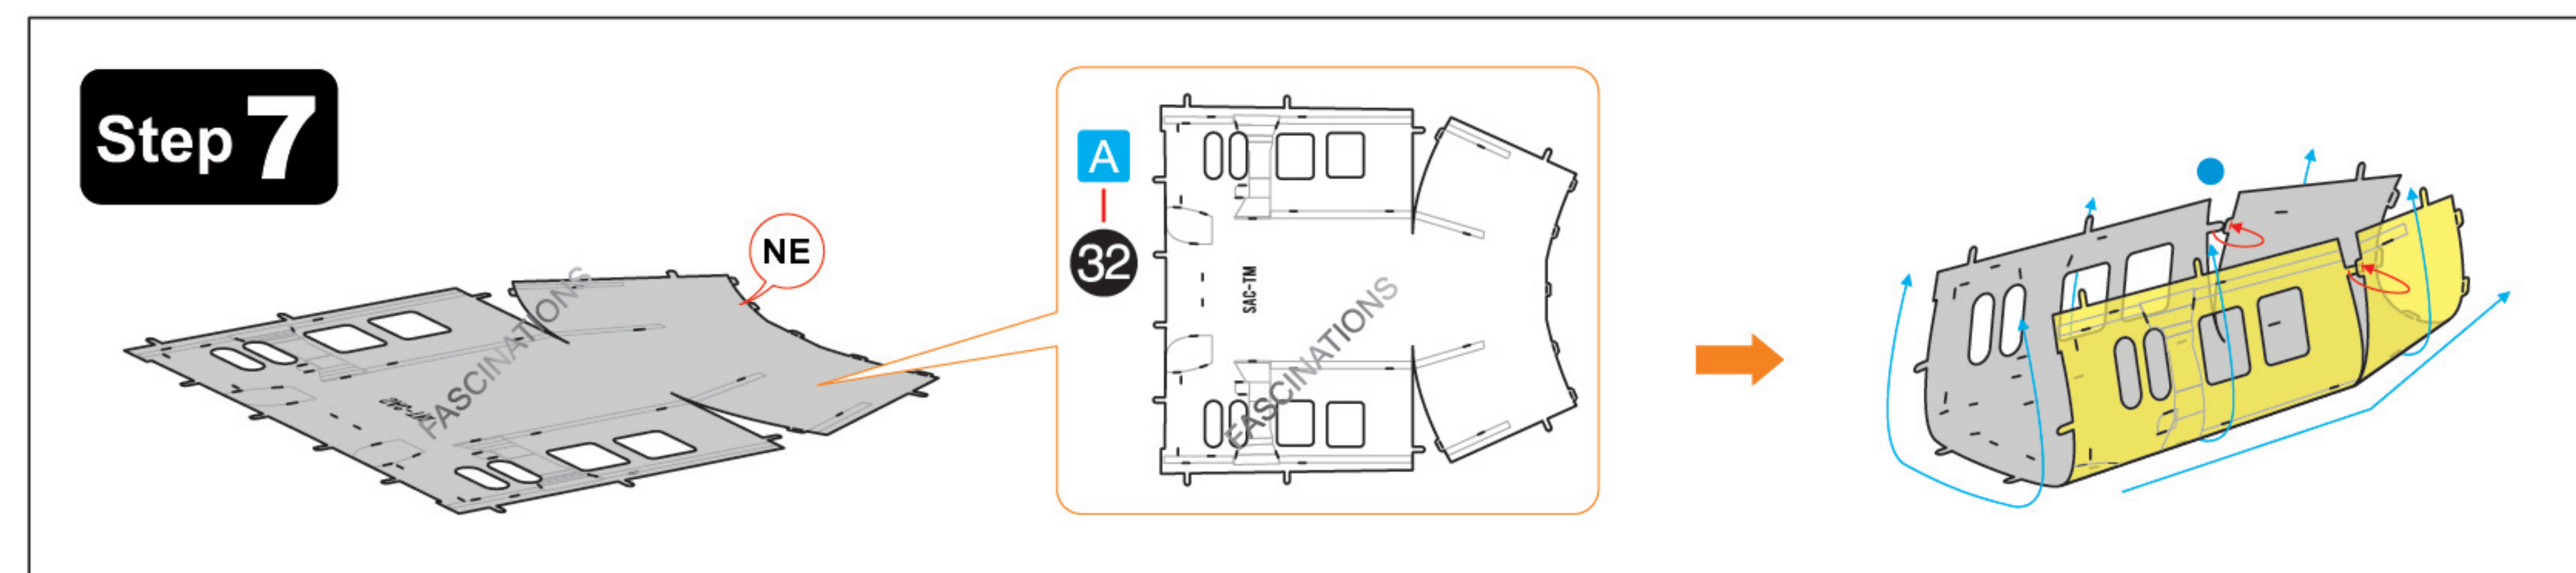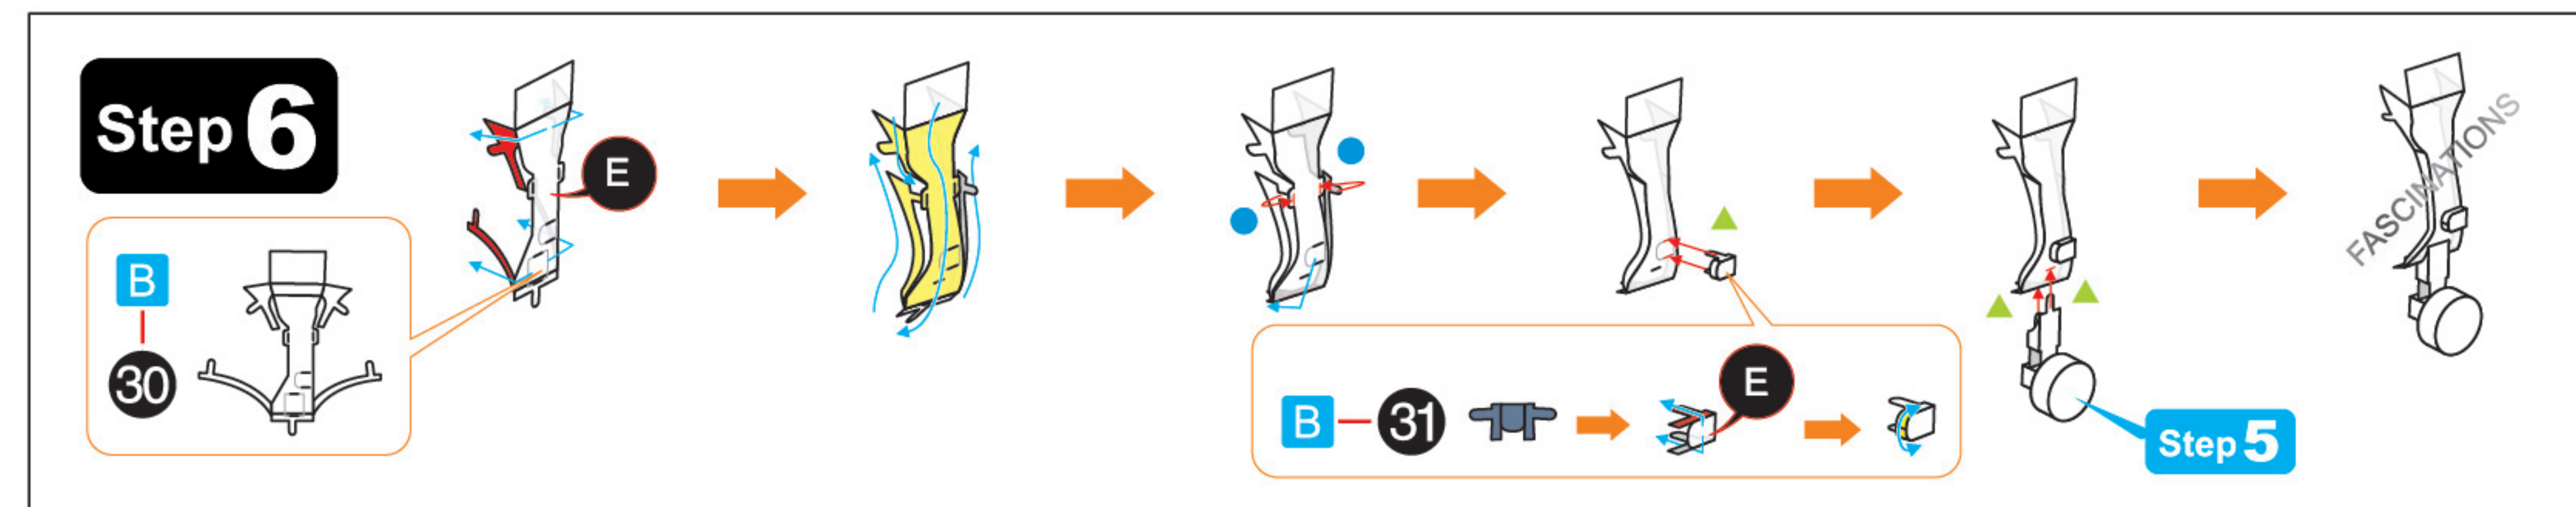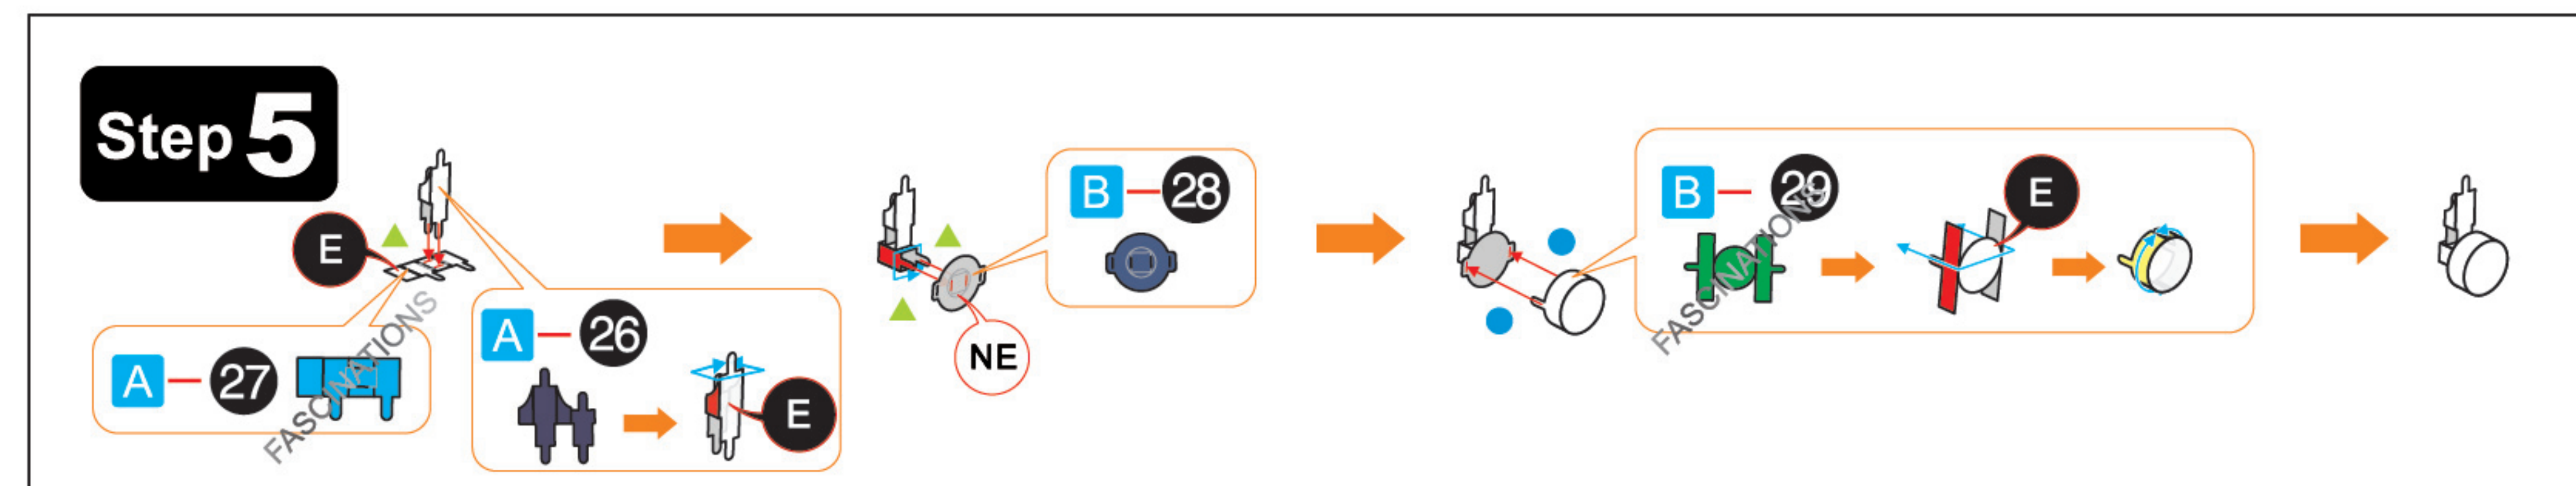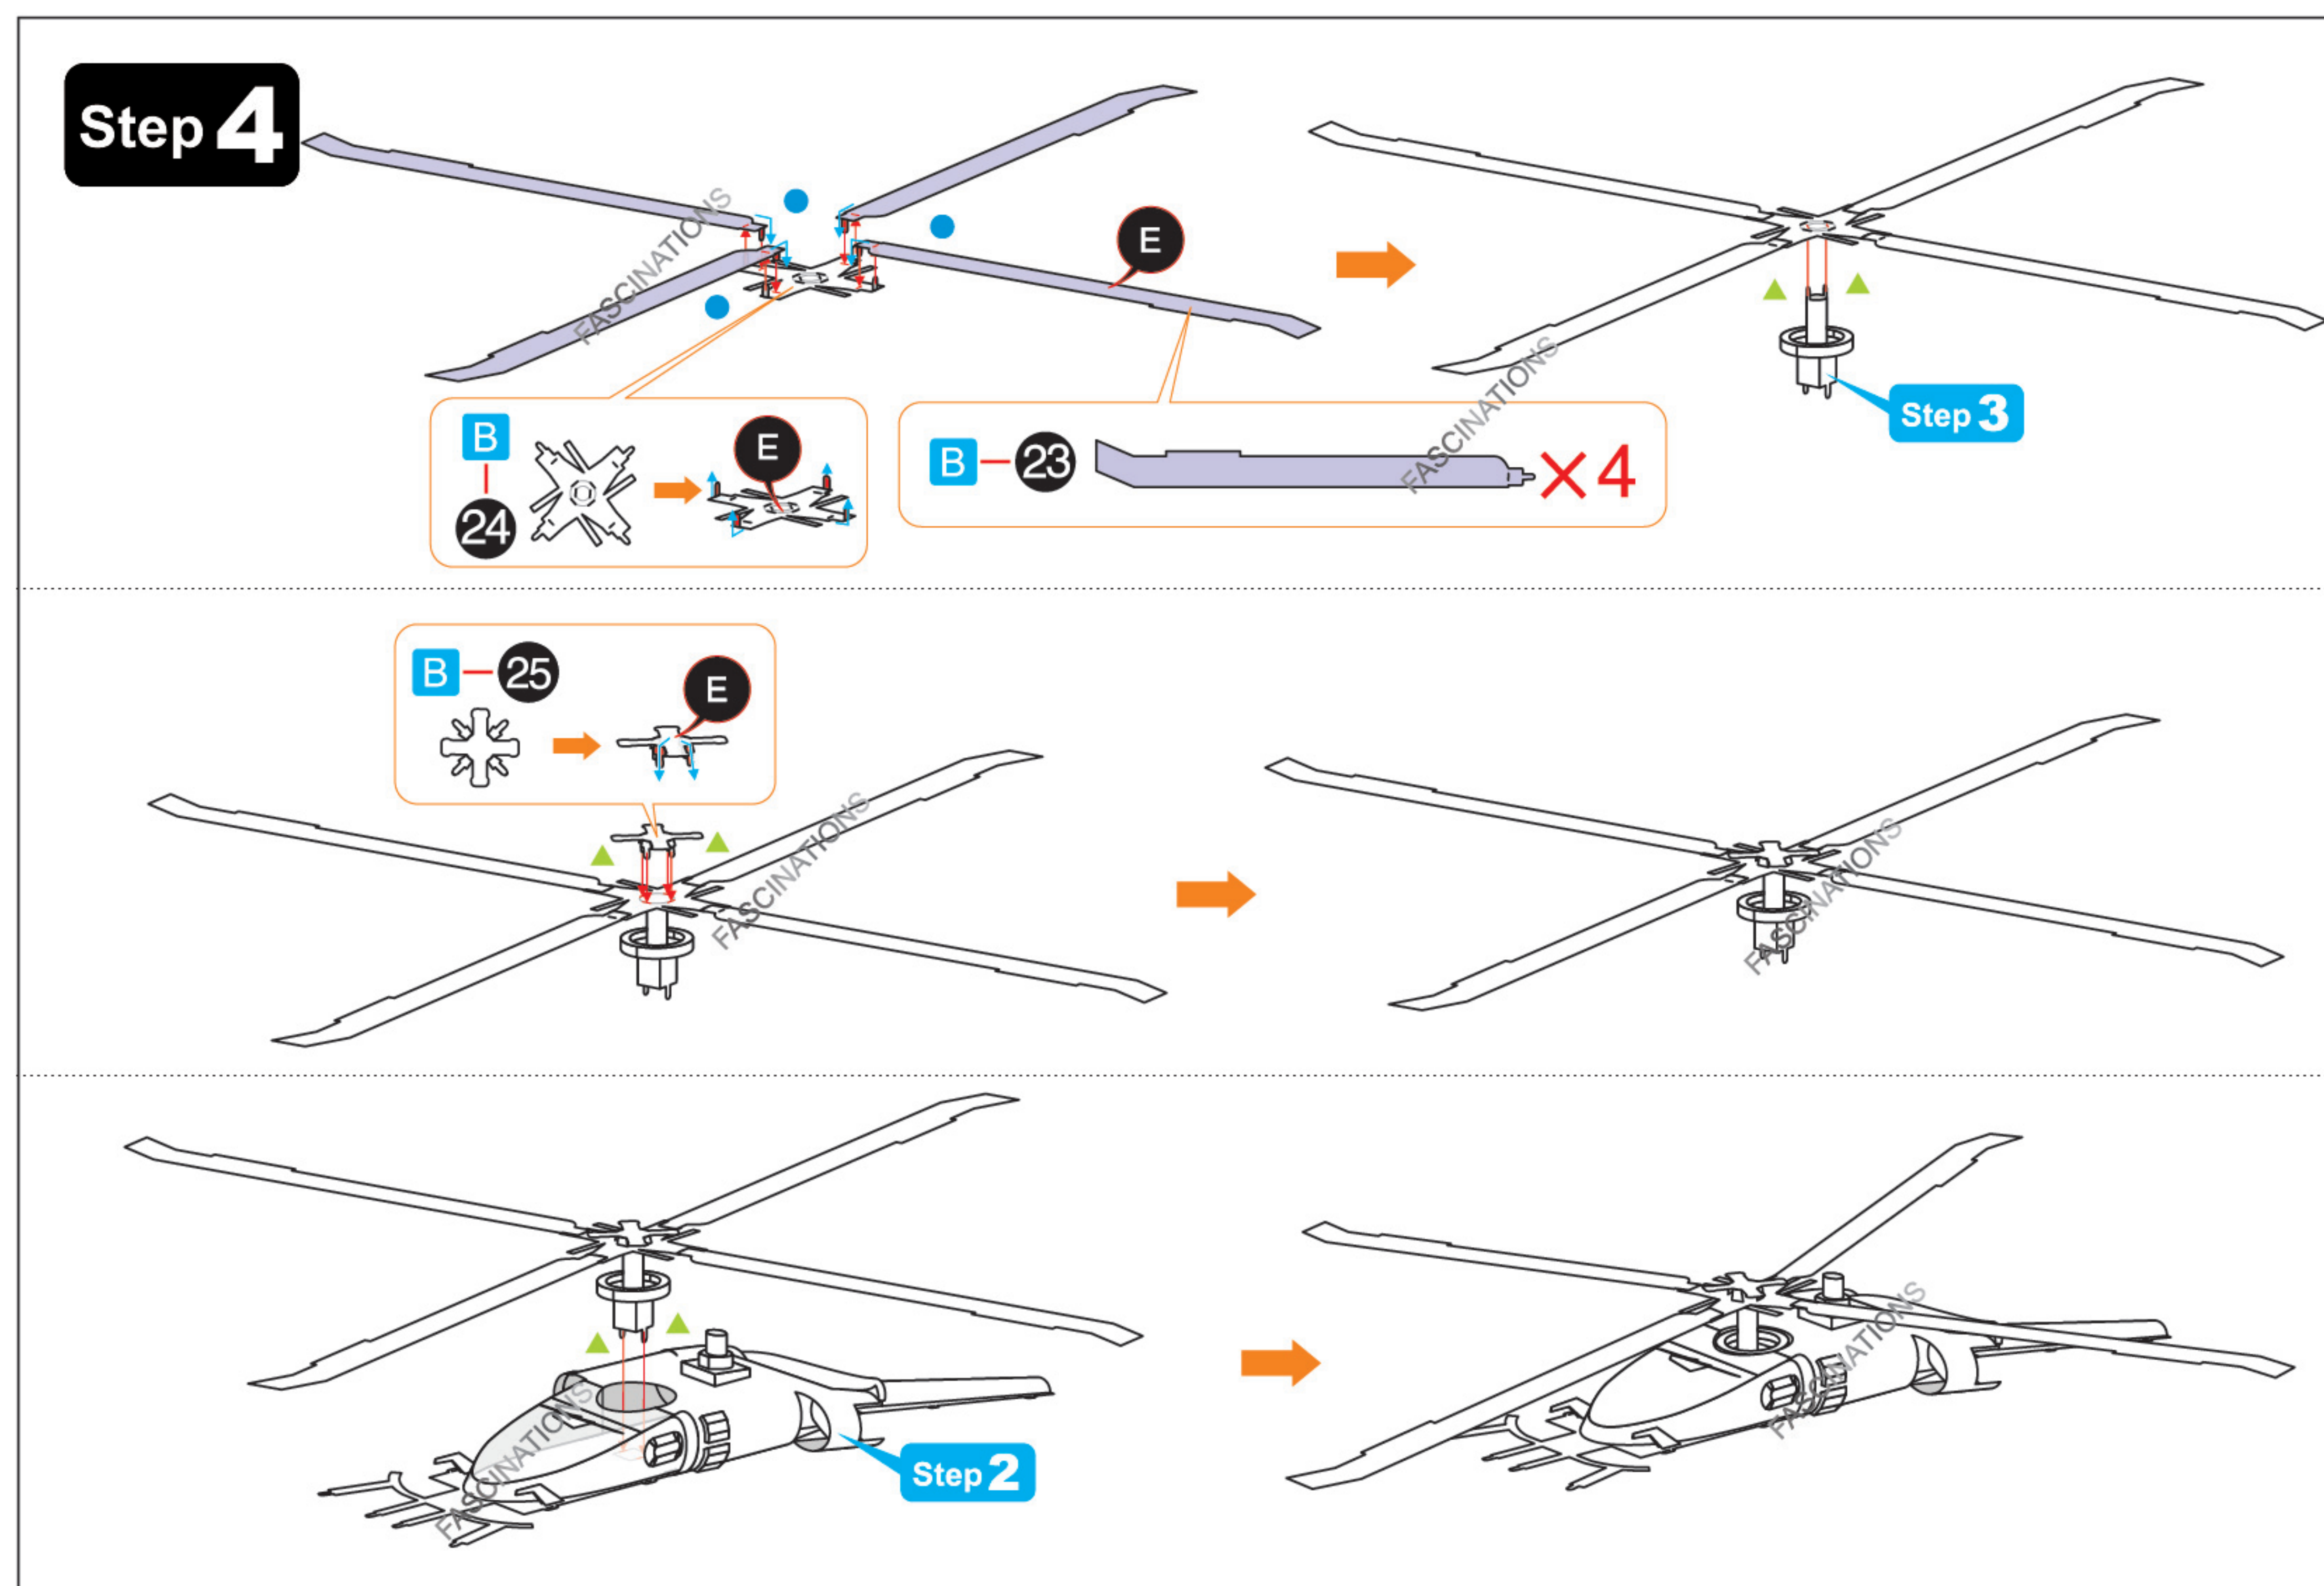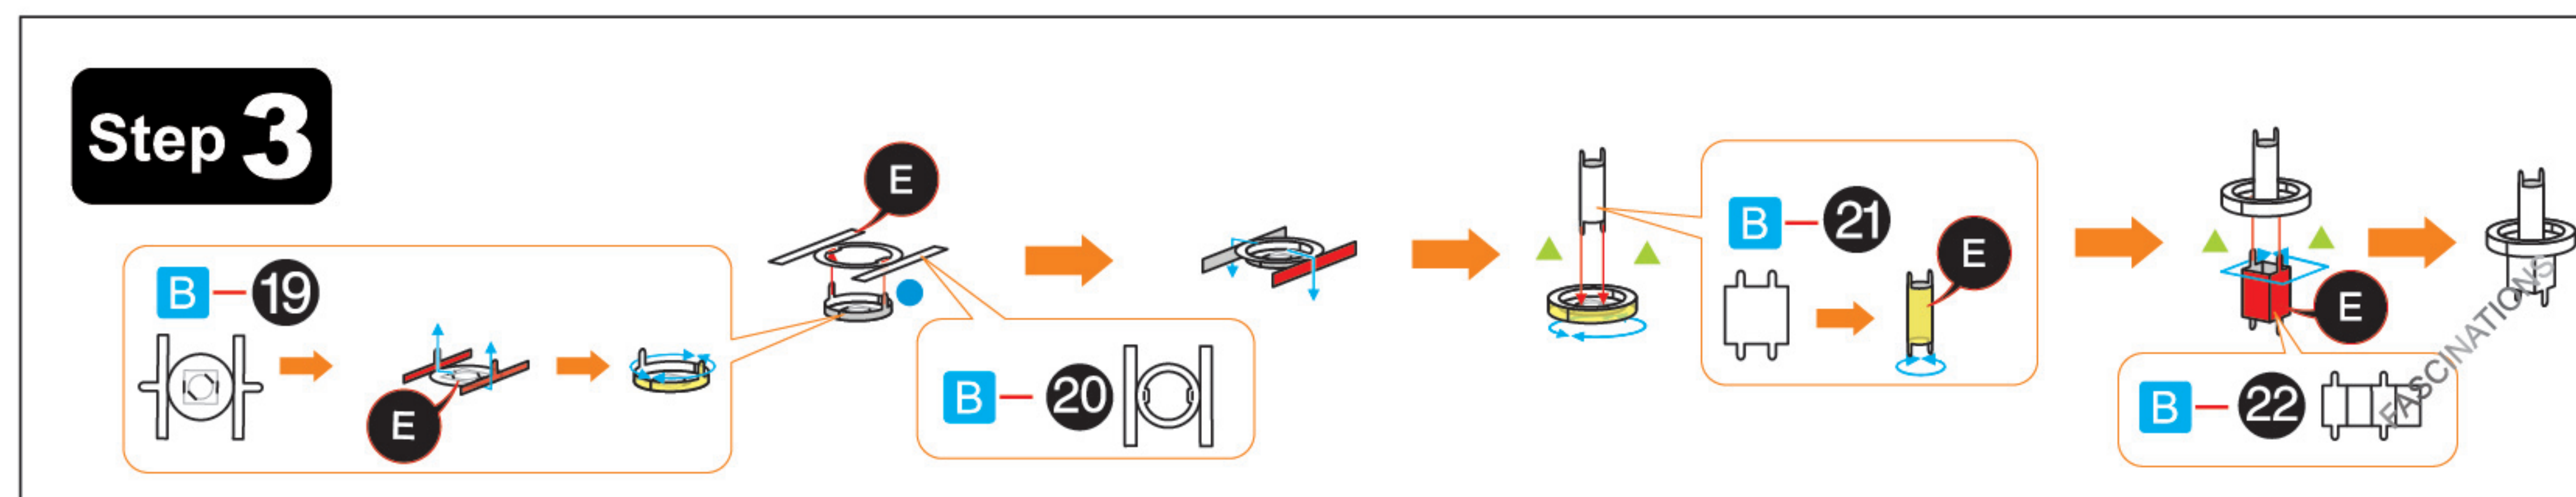
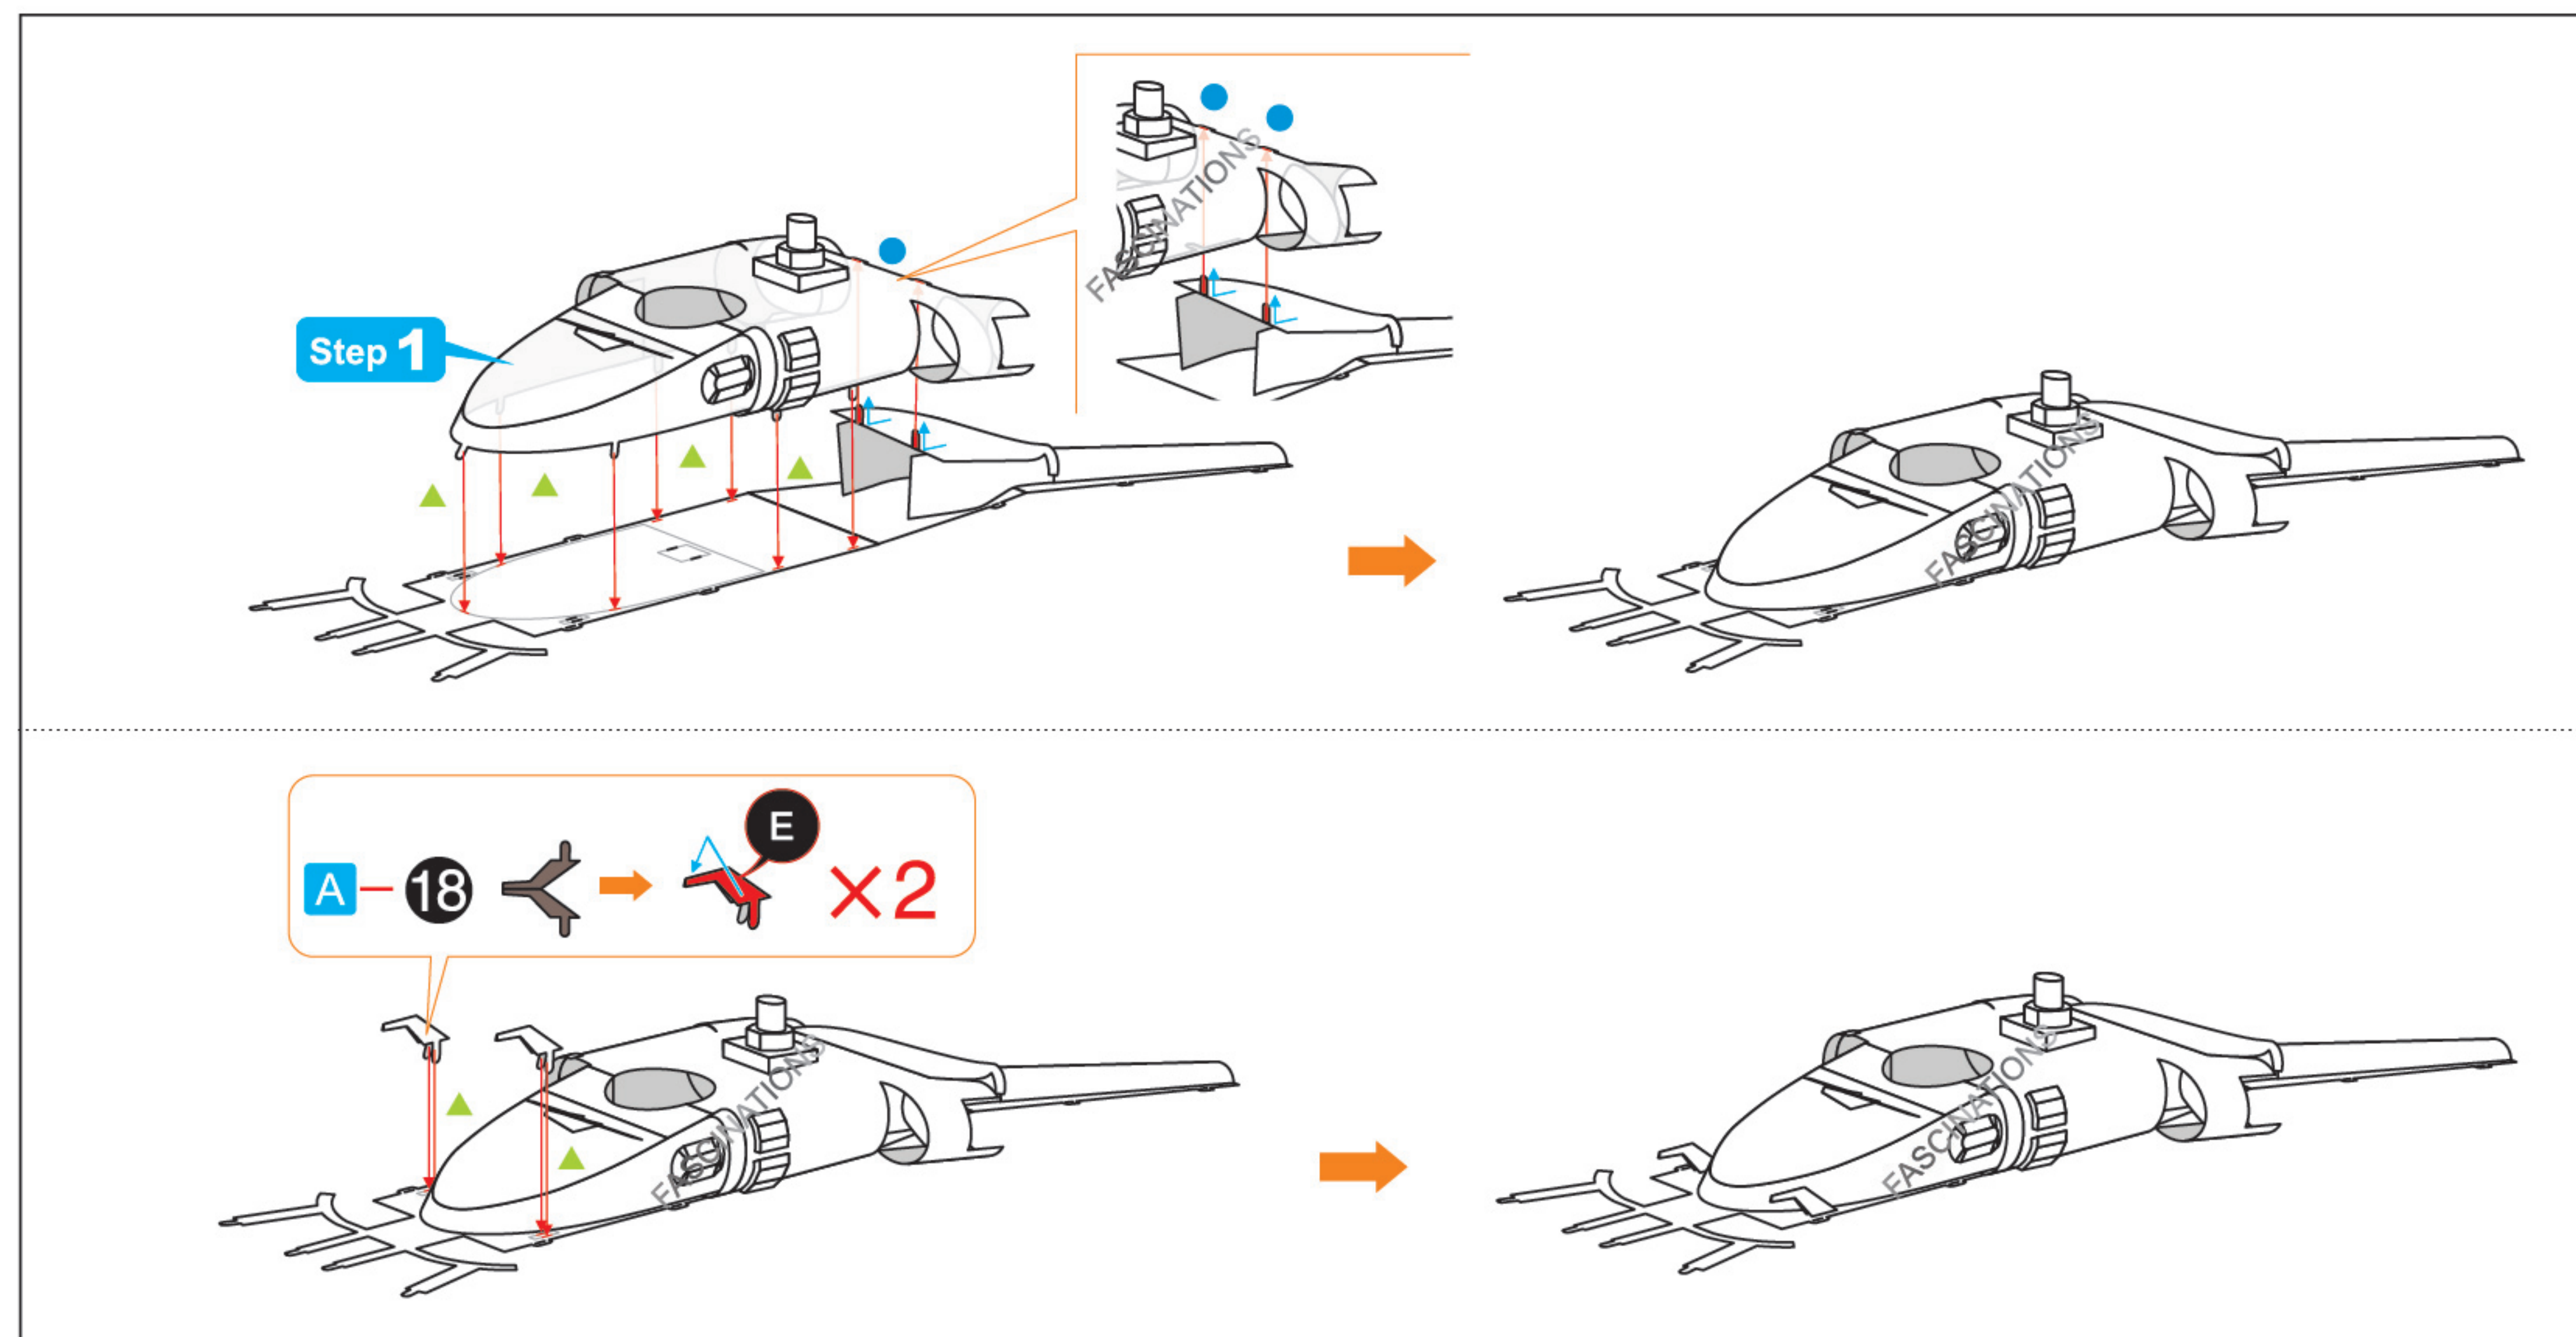


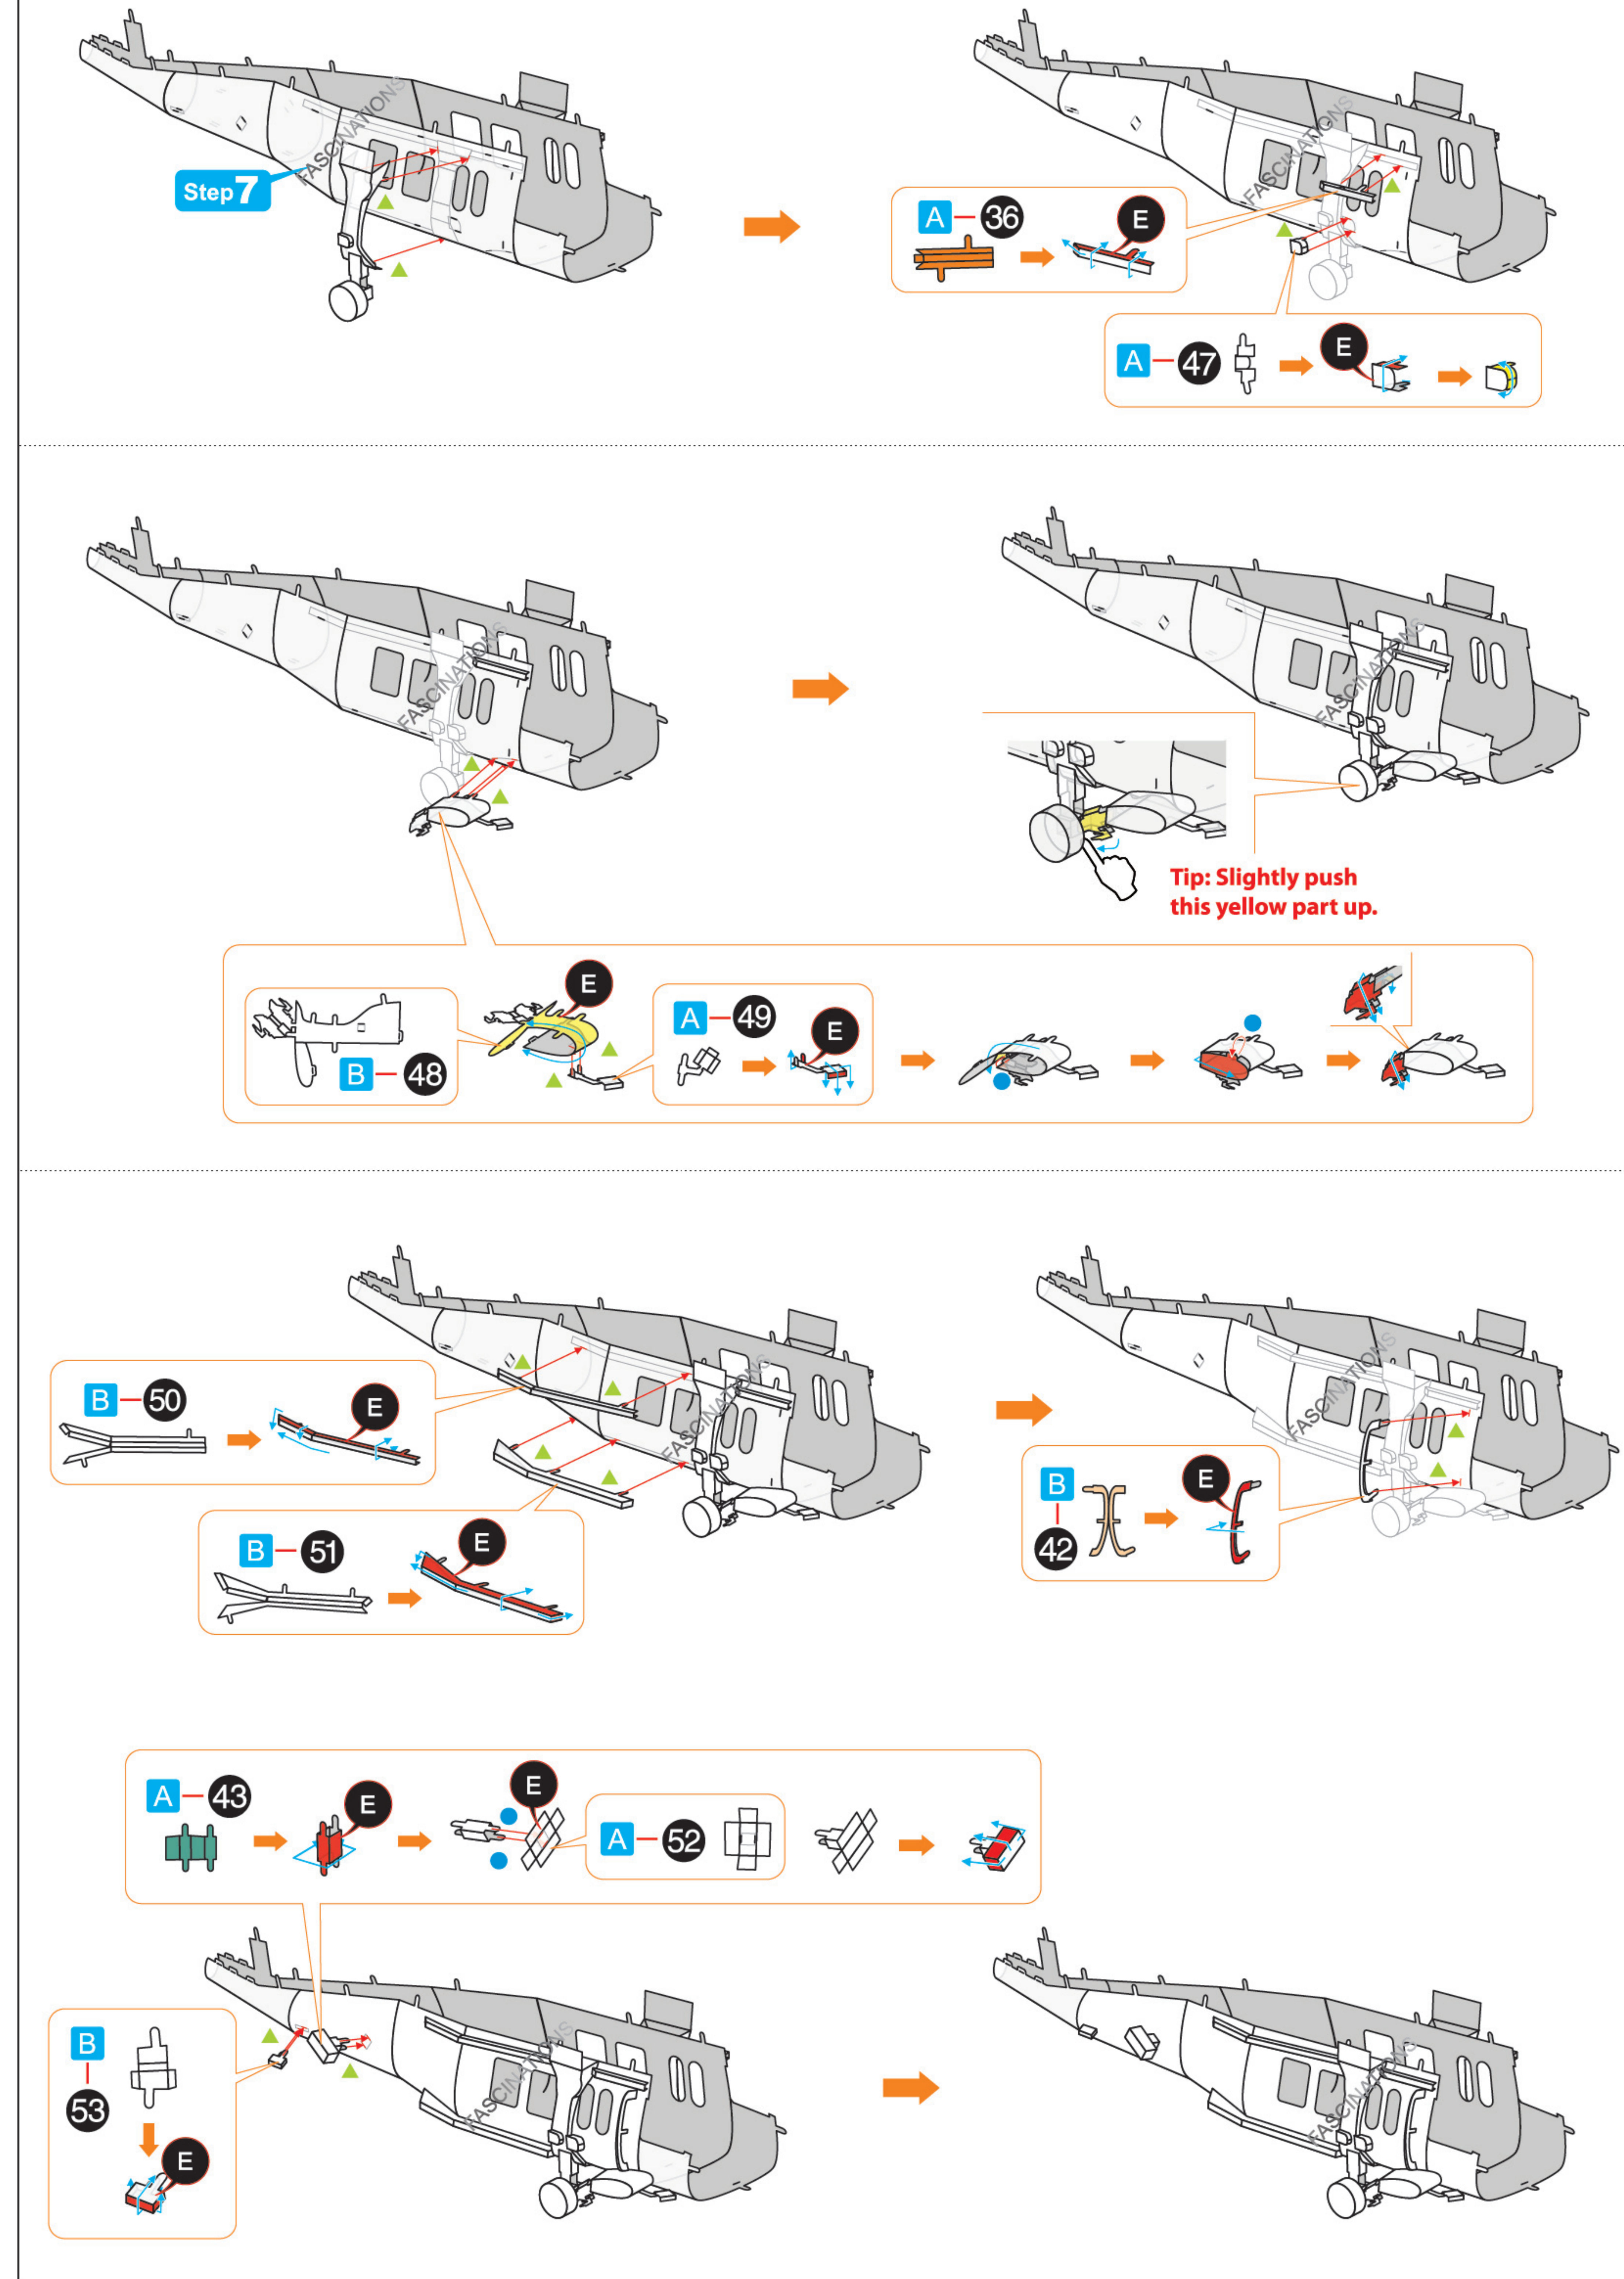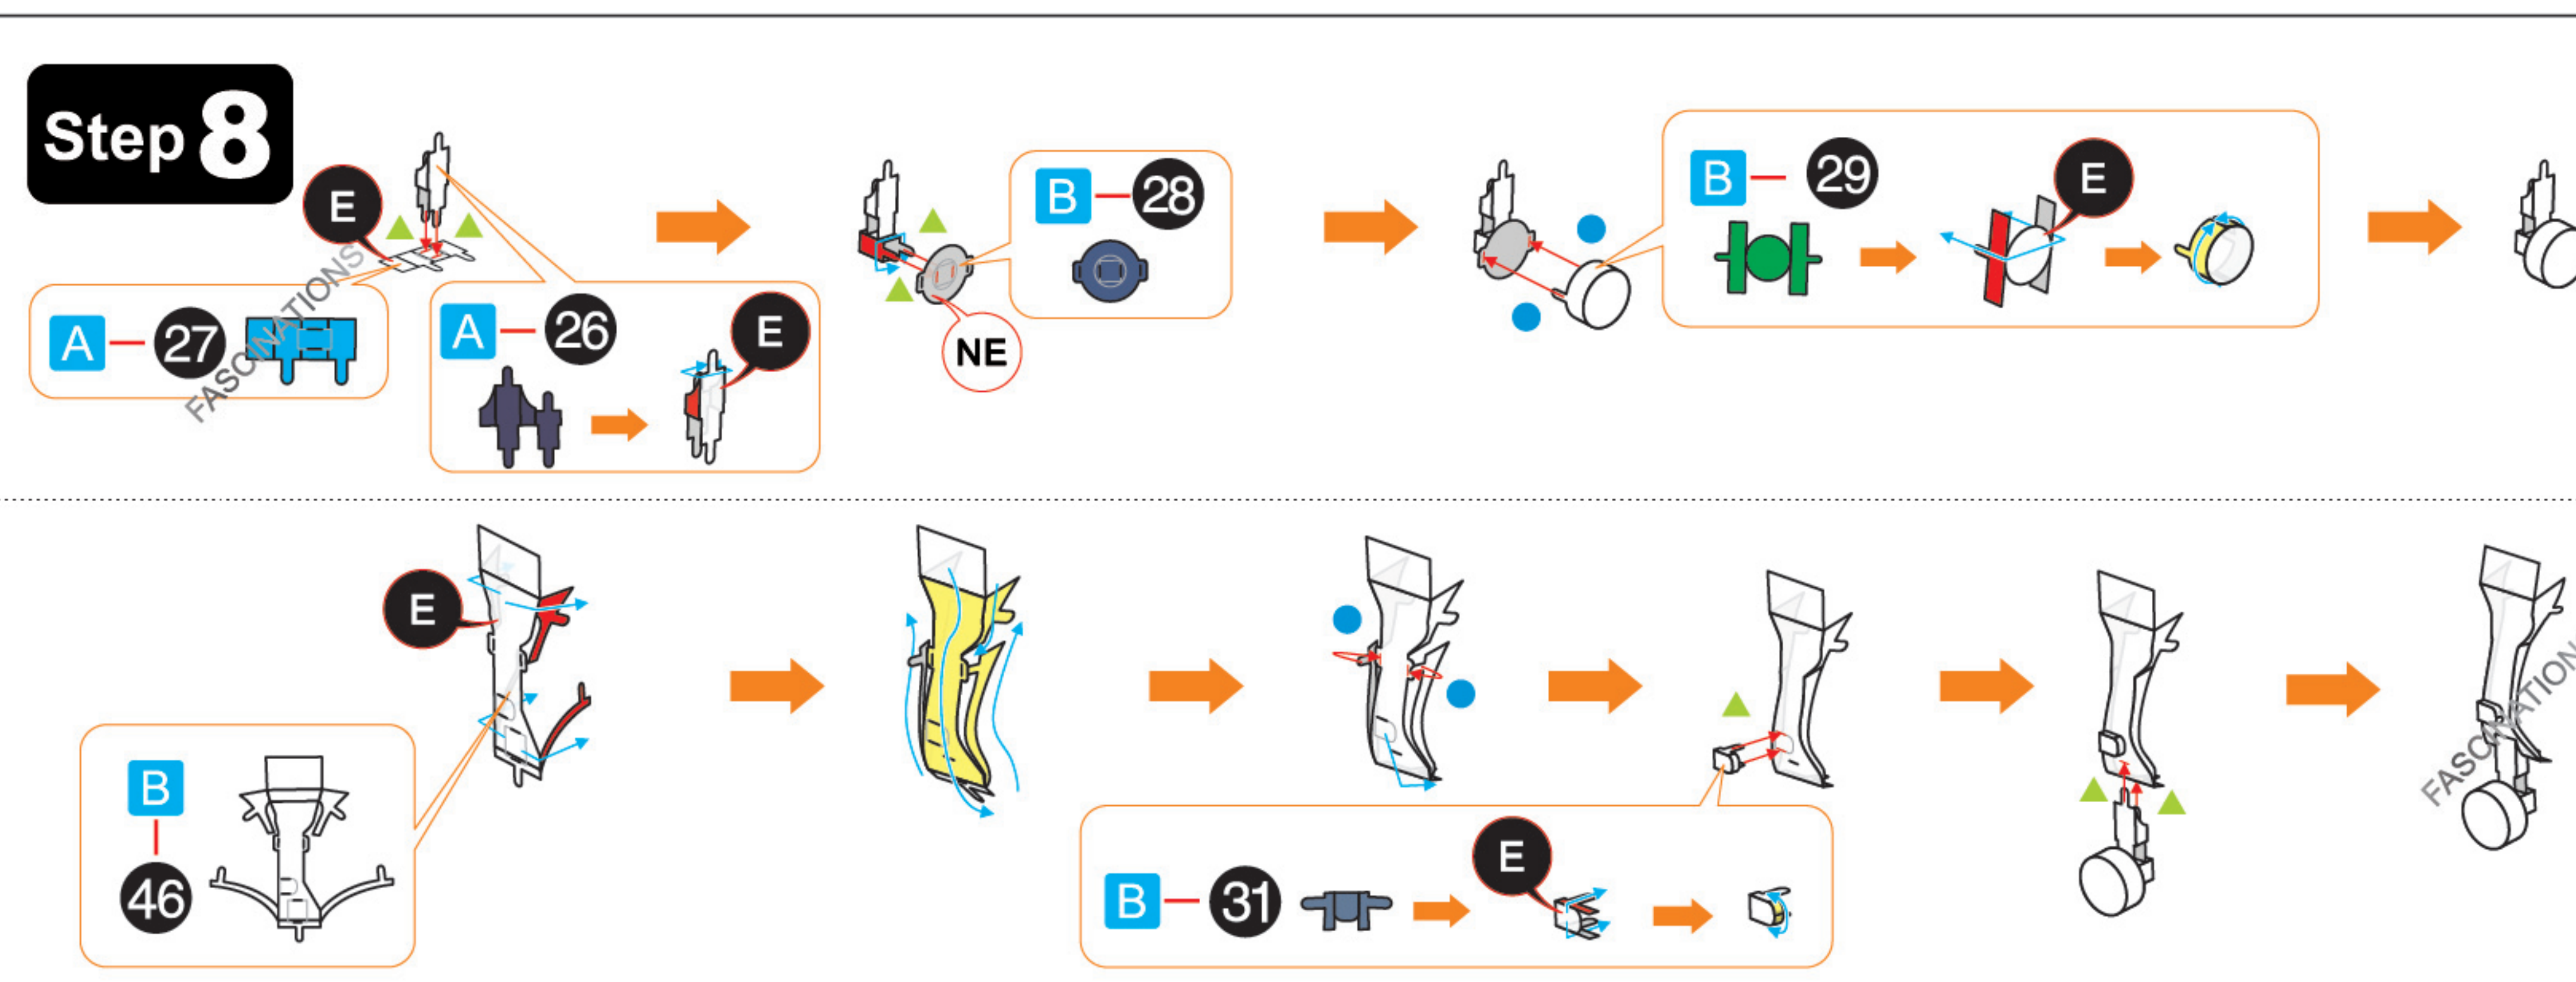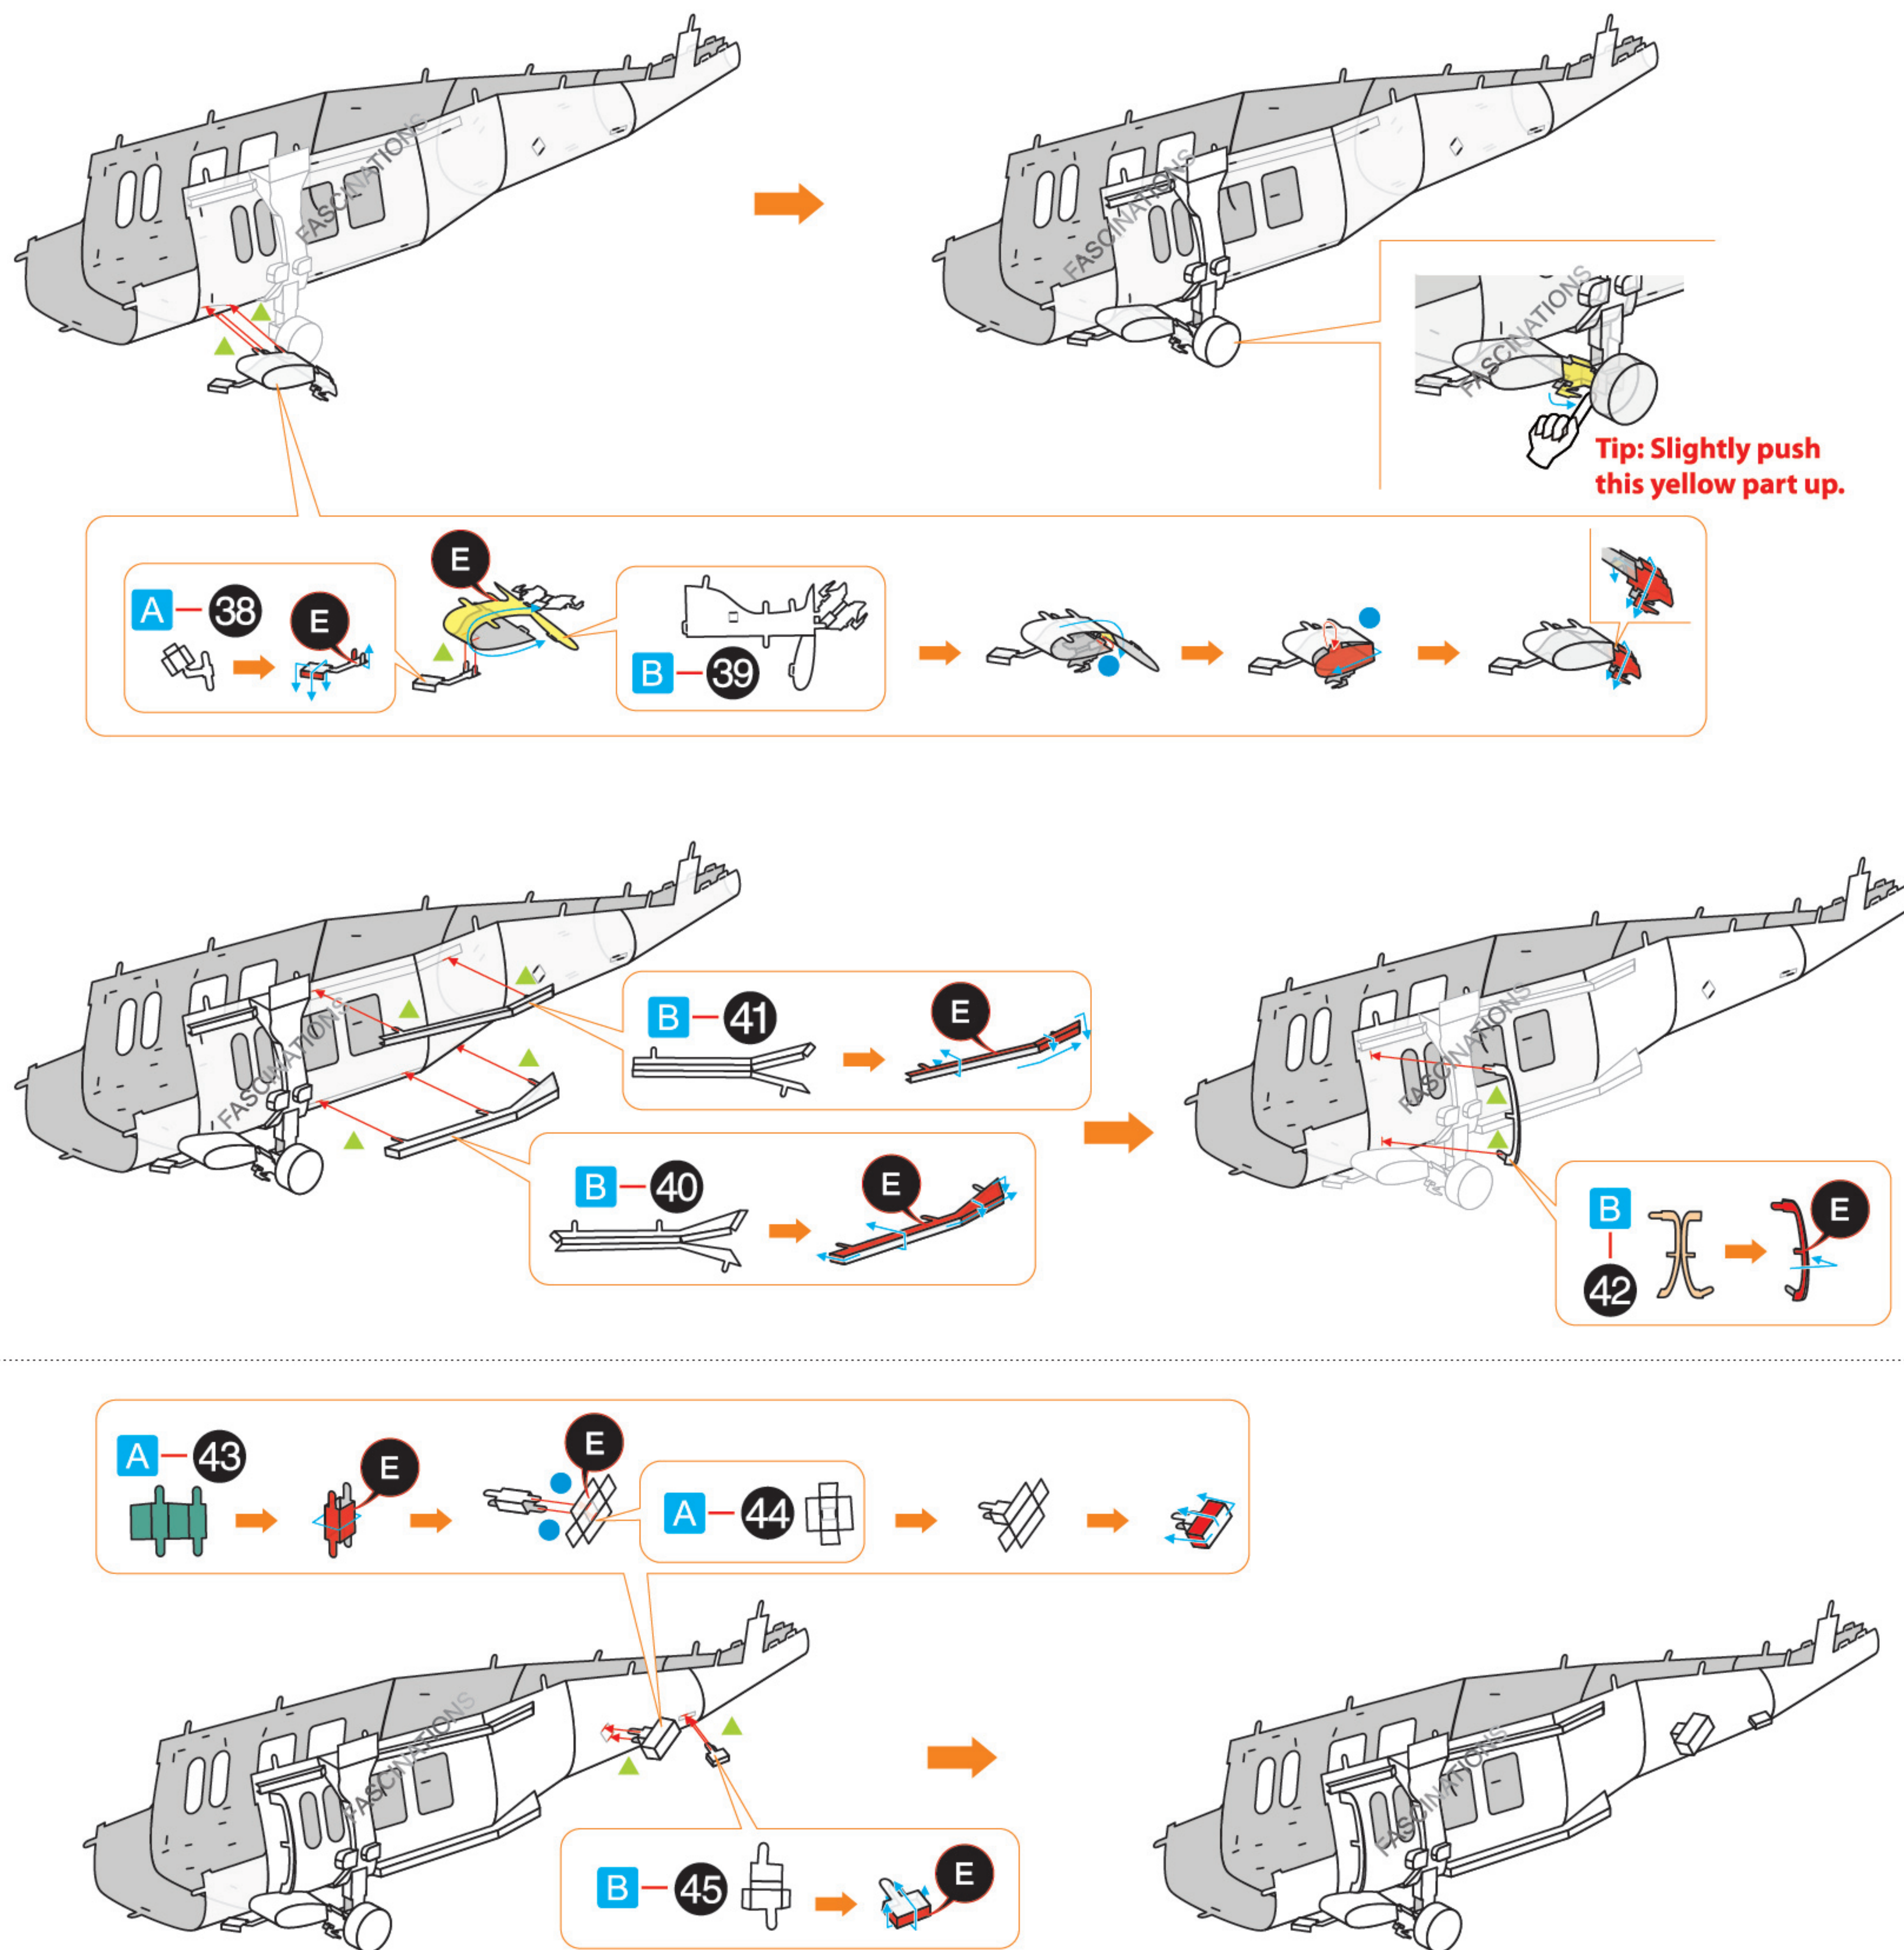


Step 9

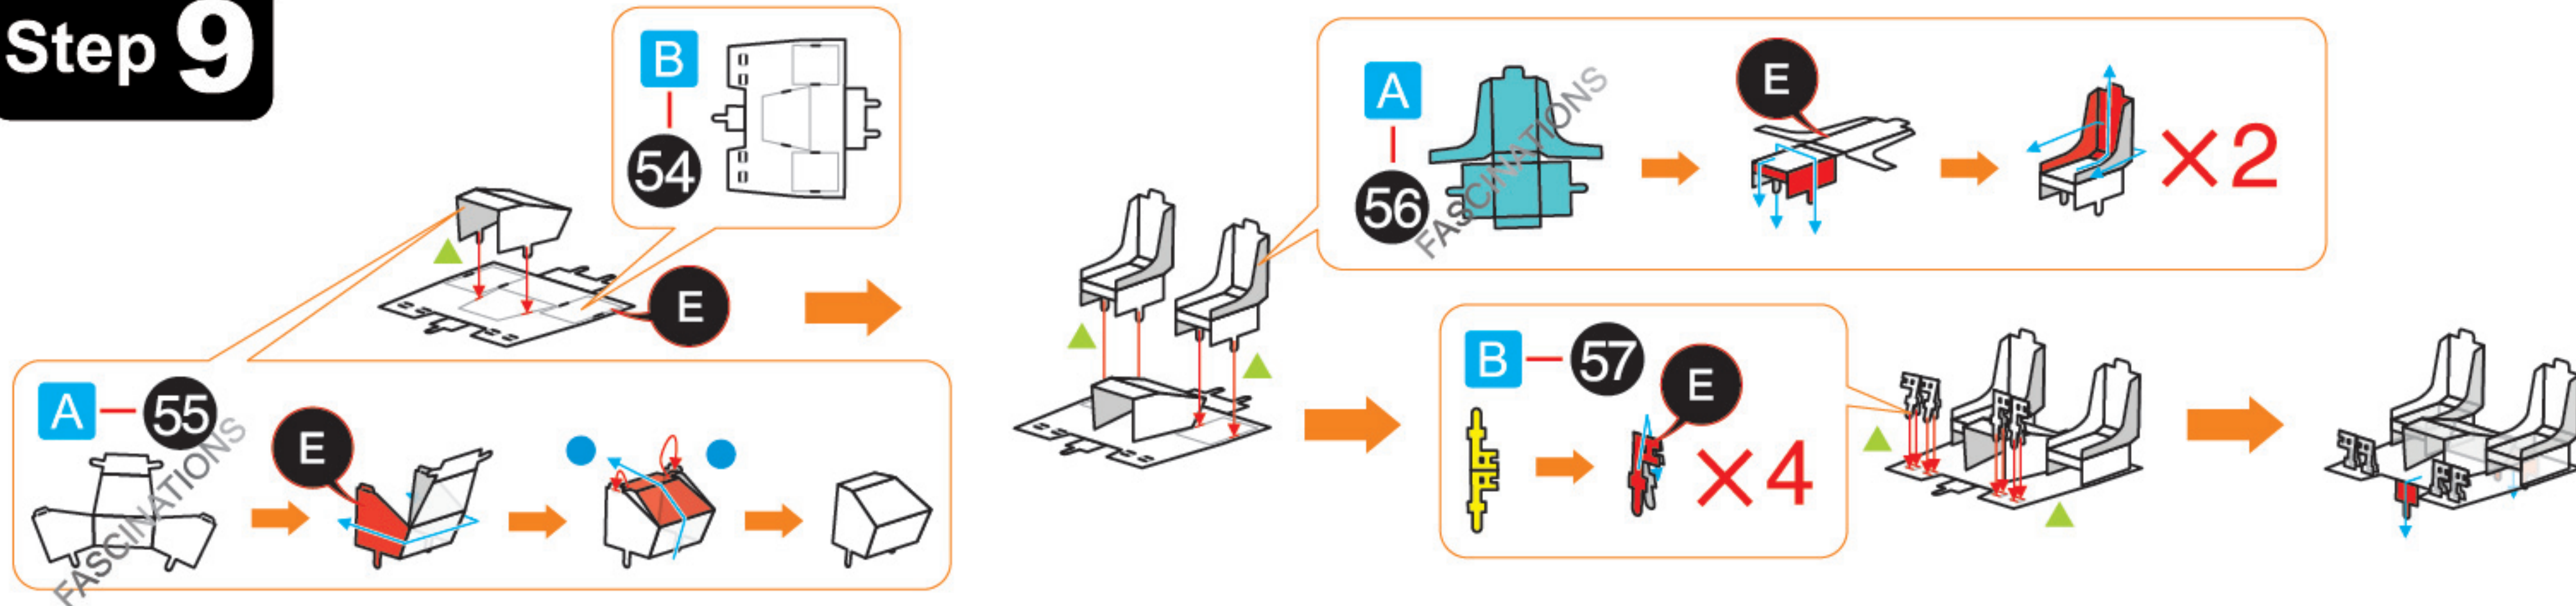


Step 10

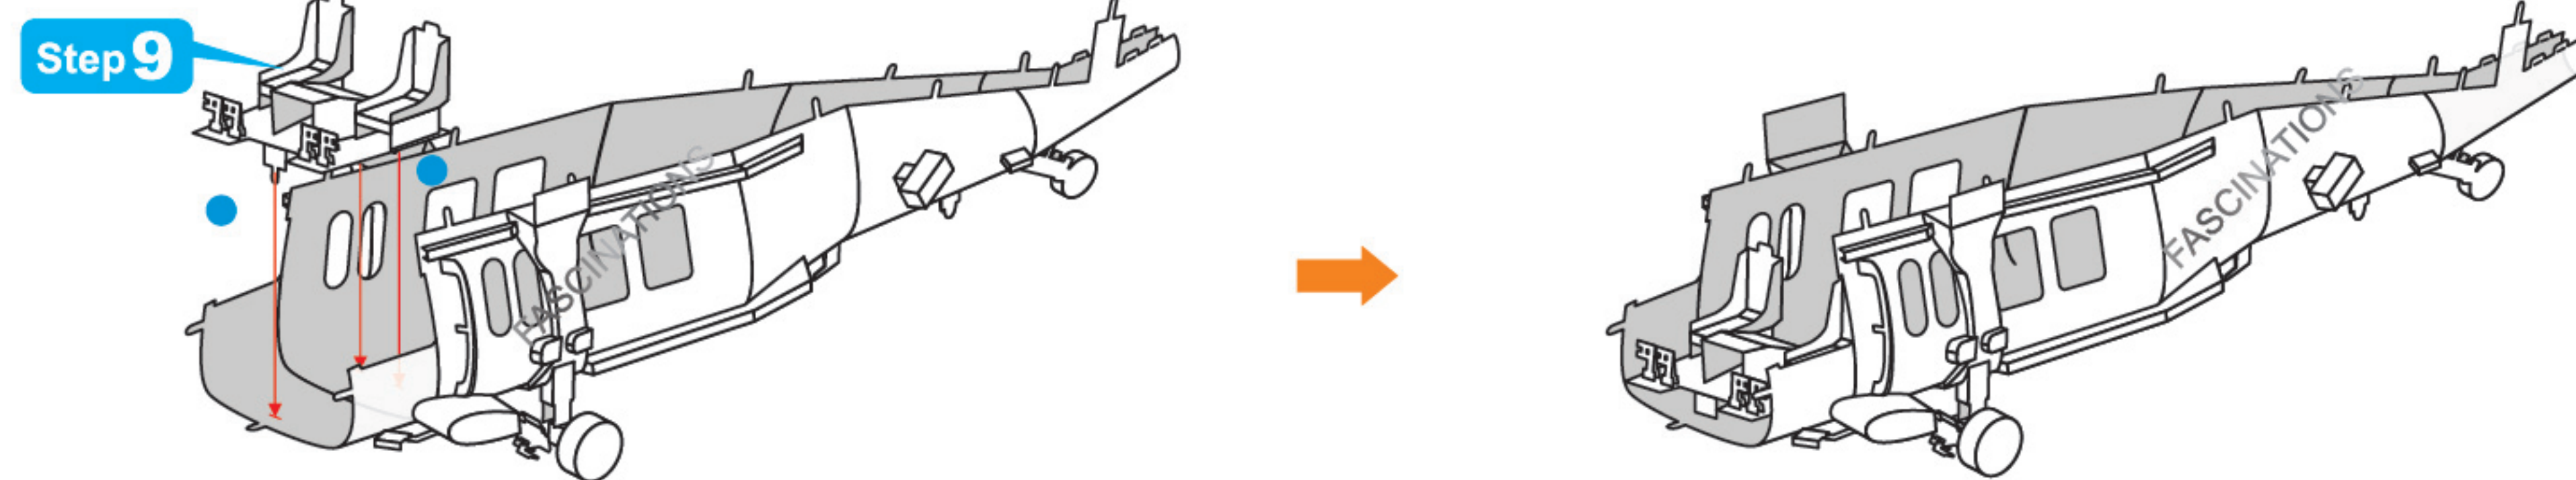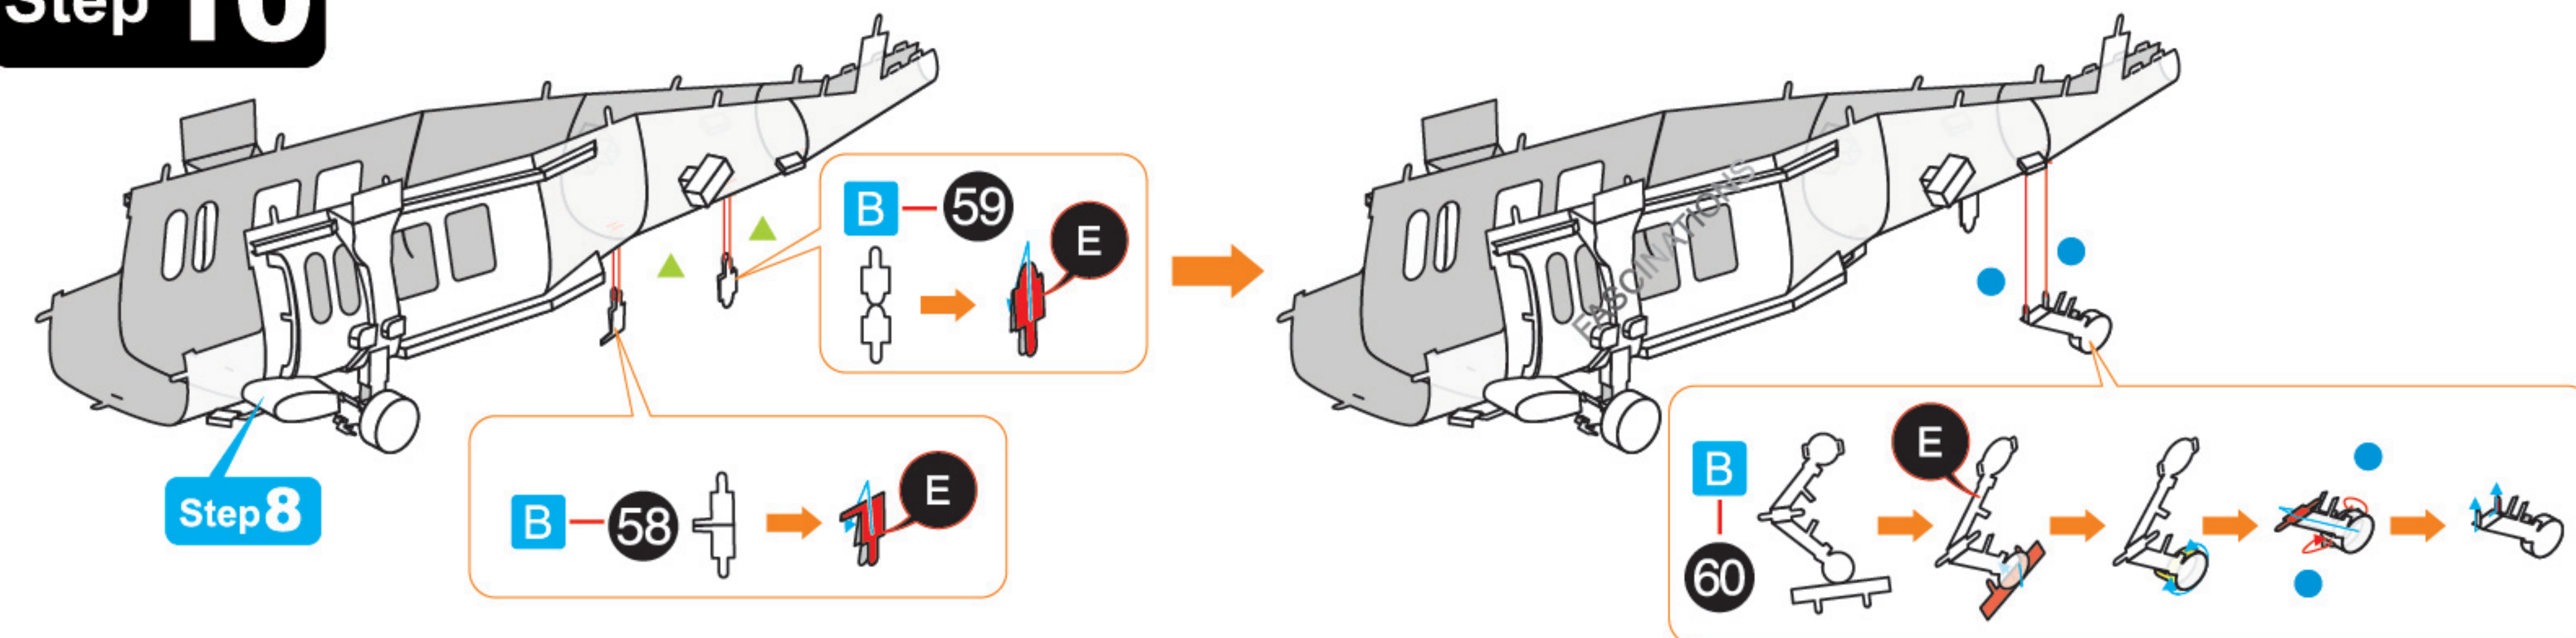


Step 11

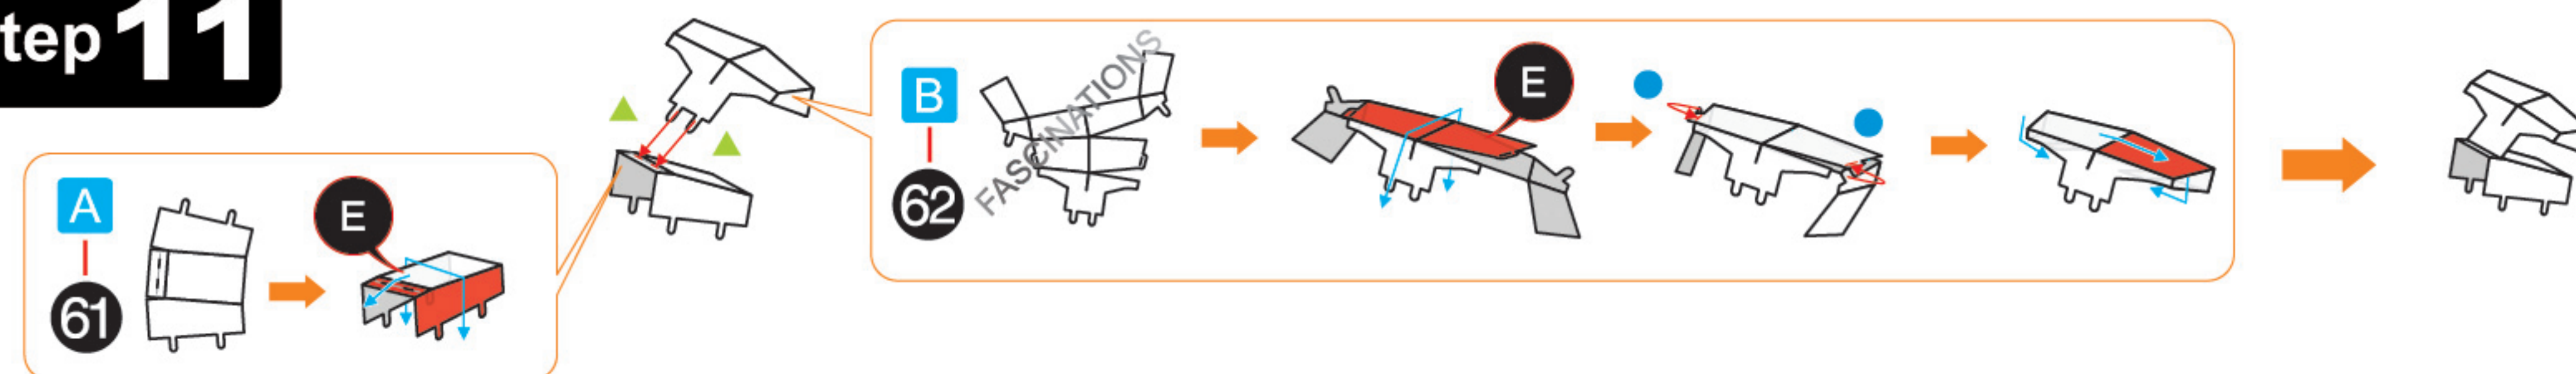


Step 12

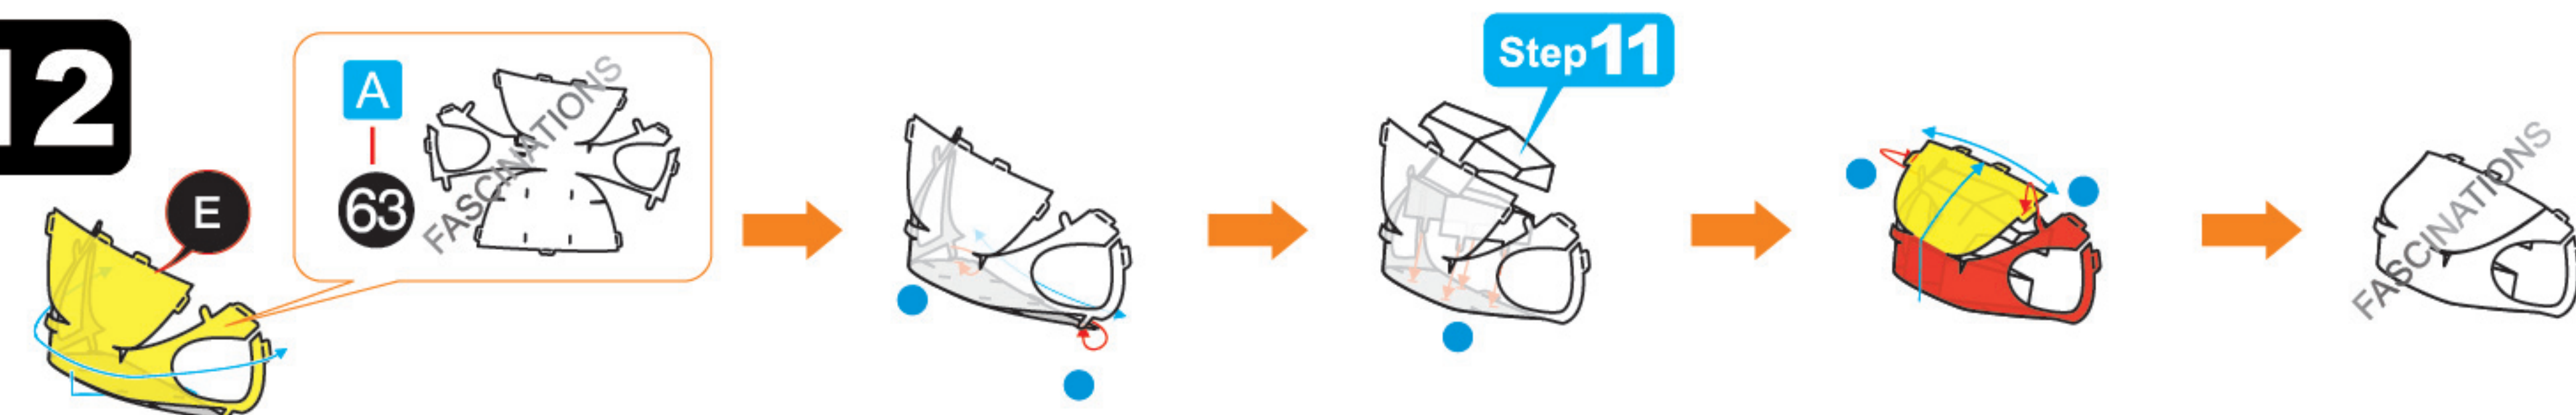

Step 13

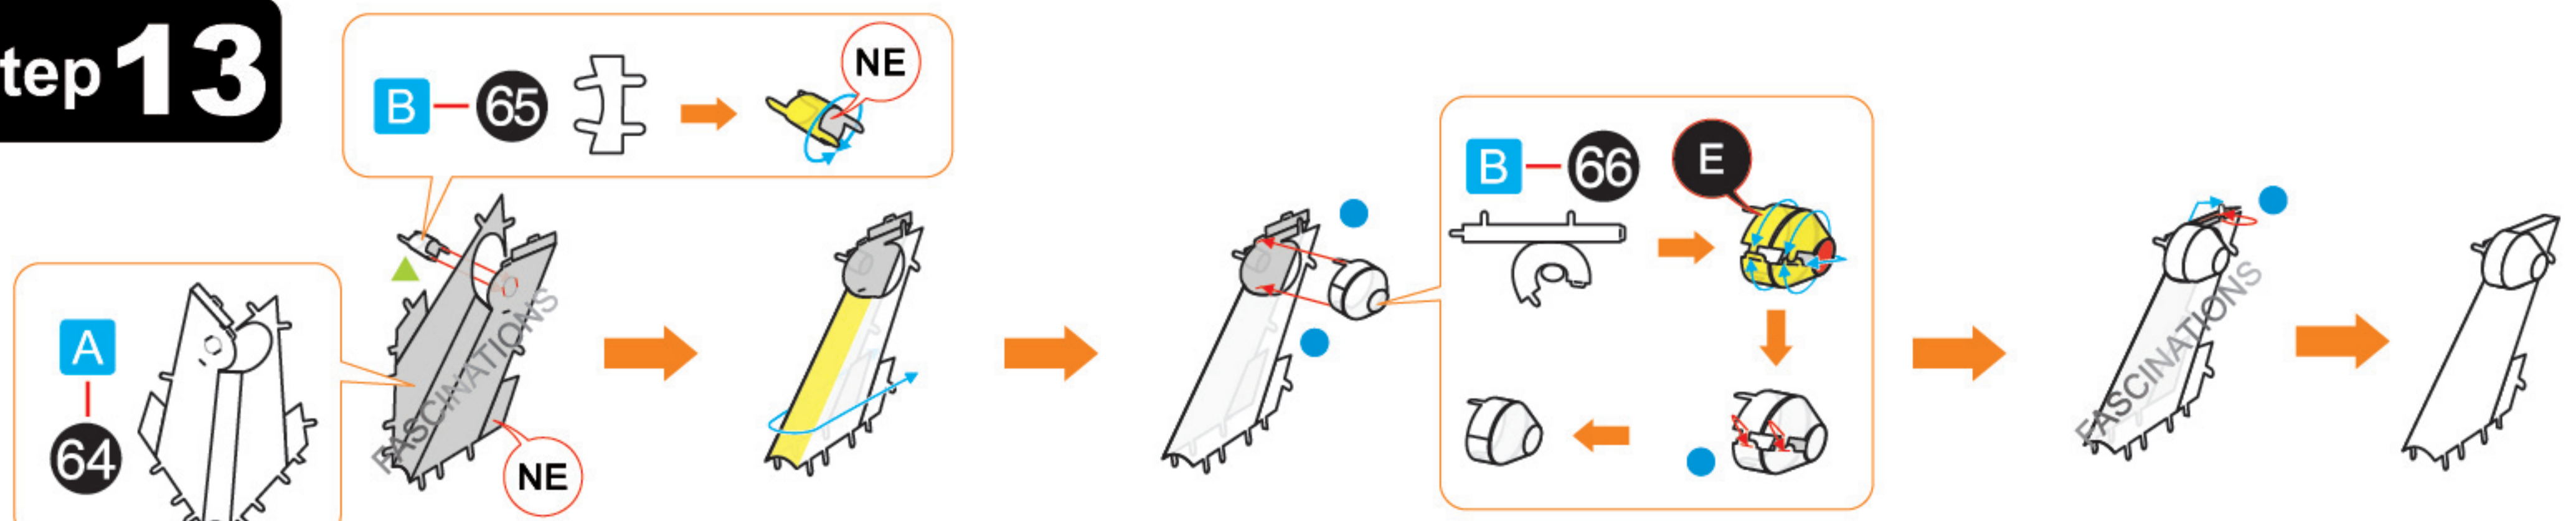

Step 14

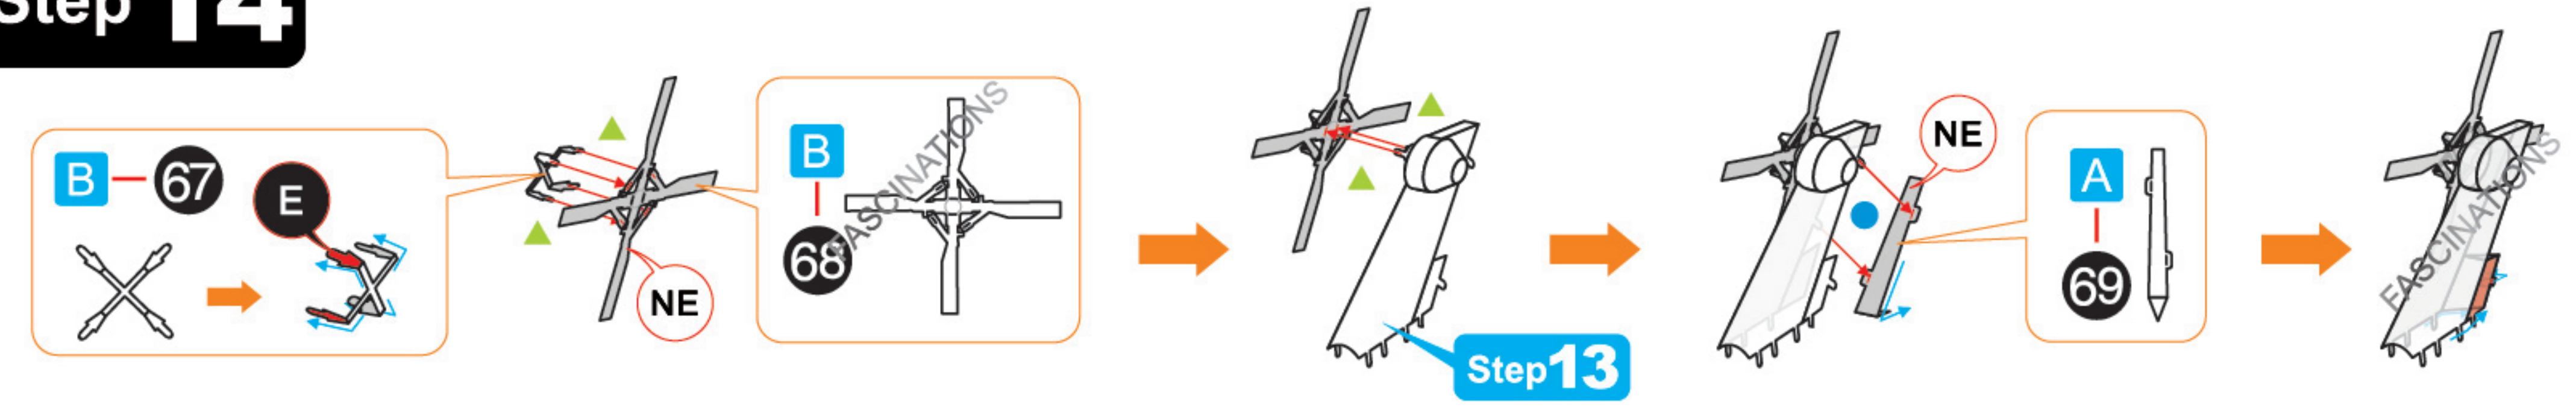

Step 15

