



**GIRAFFE**  
ME1014

360°  
view





It is highly recommended that you visit  
[www.metalearth.com/360/ME1014](http://www.metalearth.com/360/ME1014)  
to see the completed model before assembling your own



Go to [www.metalearth.com/360/ME1014](http://www.metalearth.com/360/ME1014) to see the zoomable PDF version of this instruction sheet

## TO CREATE THE BEST CONNECTIONS

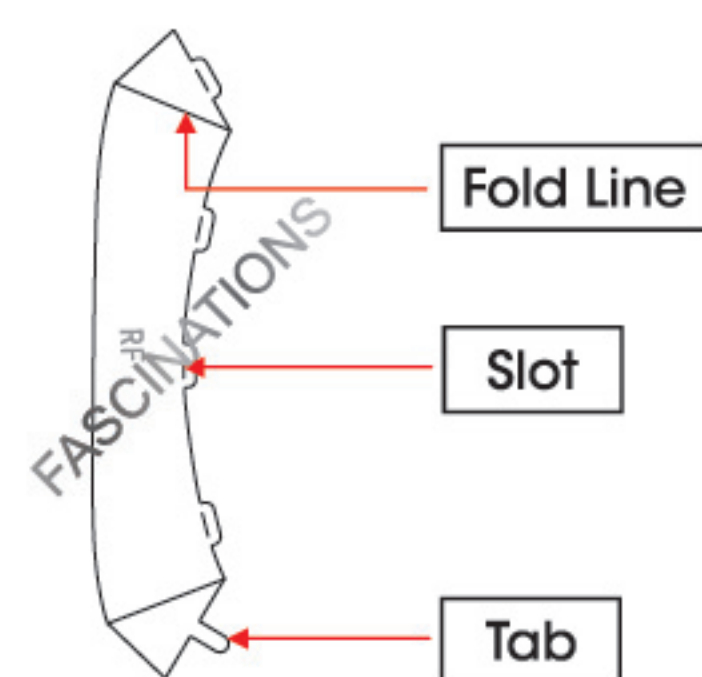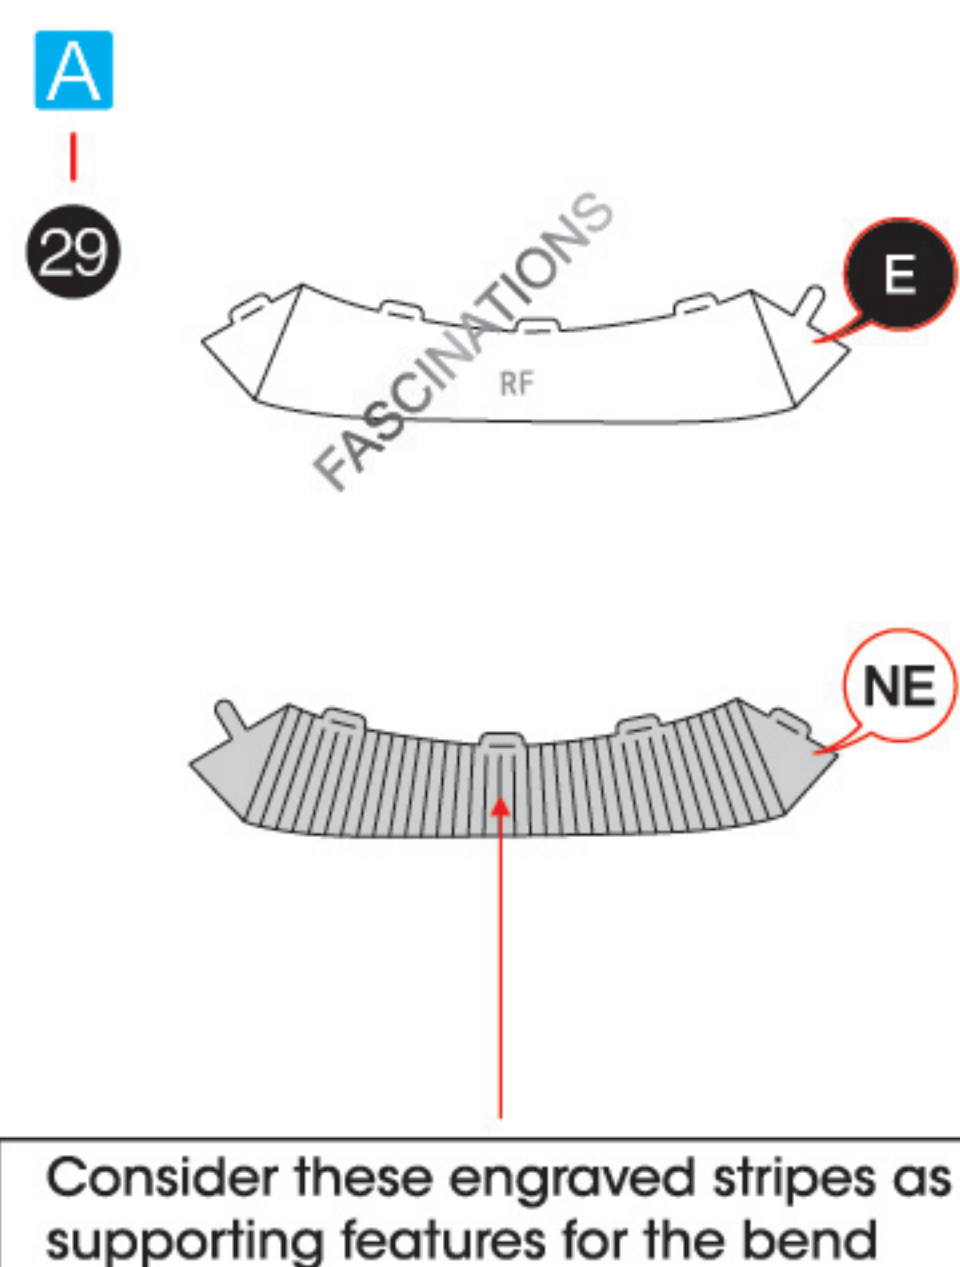

### Legends:

- E** Engraved/ Color side
- NE** Non - engraved/ Silver side
- Attention point
- Insert tab and bend 90 degrees
- Insert tab and twist 90 degrees

### Assembly tip:

If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish.

- Yellow areas should be curled
- Red areas should be folded




In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed.

### Recommended tools:

- Wire cutters: helpful for taking parts from the metal sheets.






- Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.

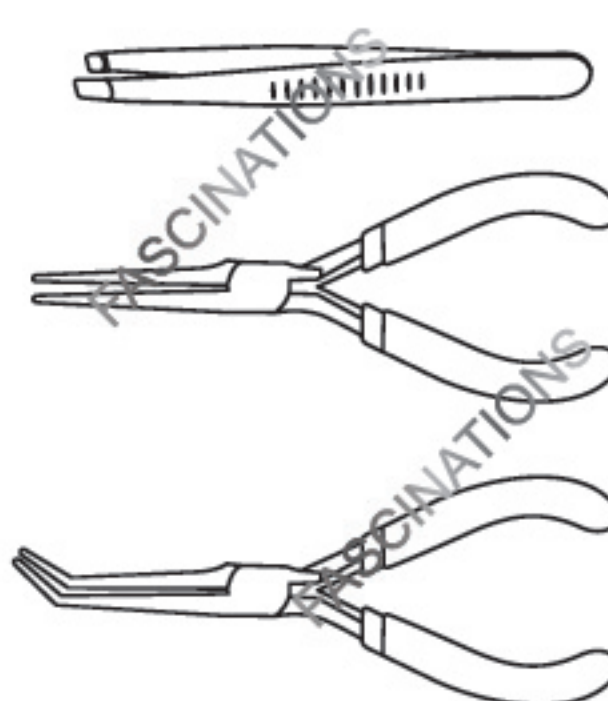










## METAL SHEETS

Parts with same color are duplicates

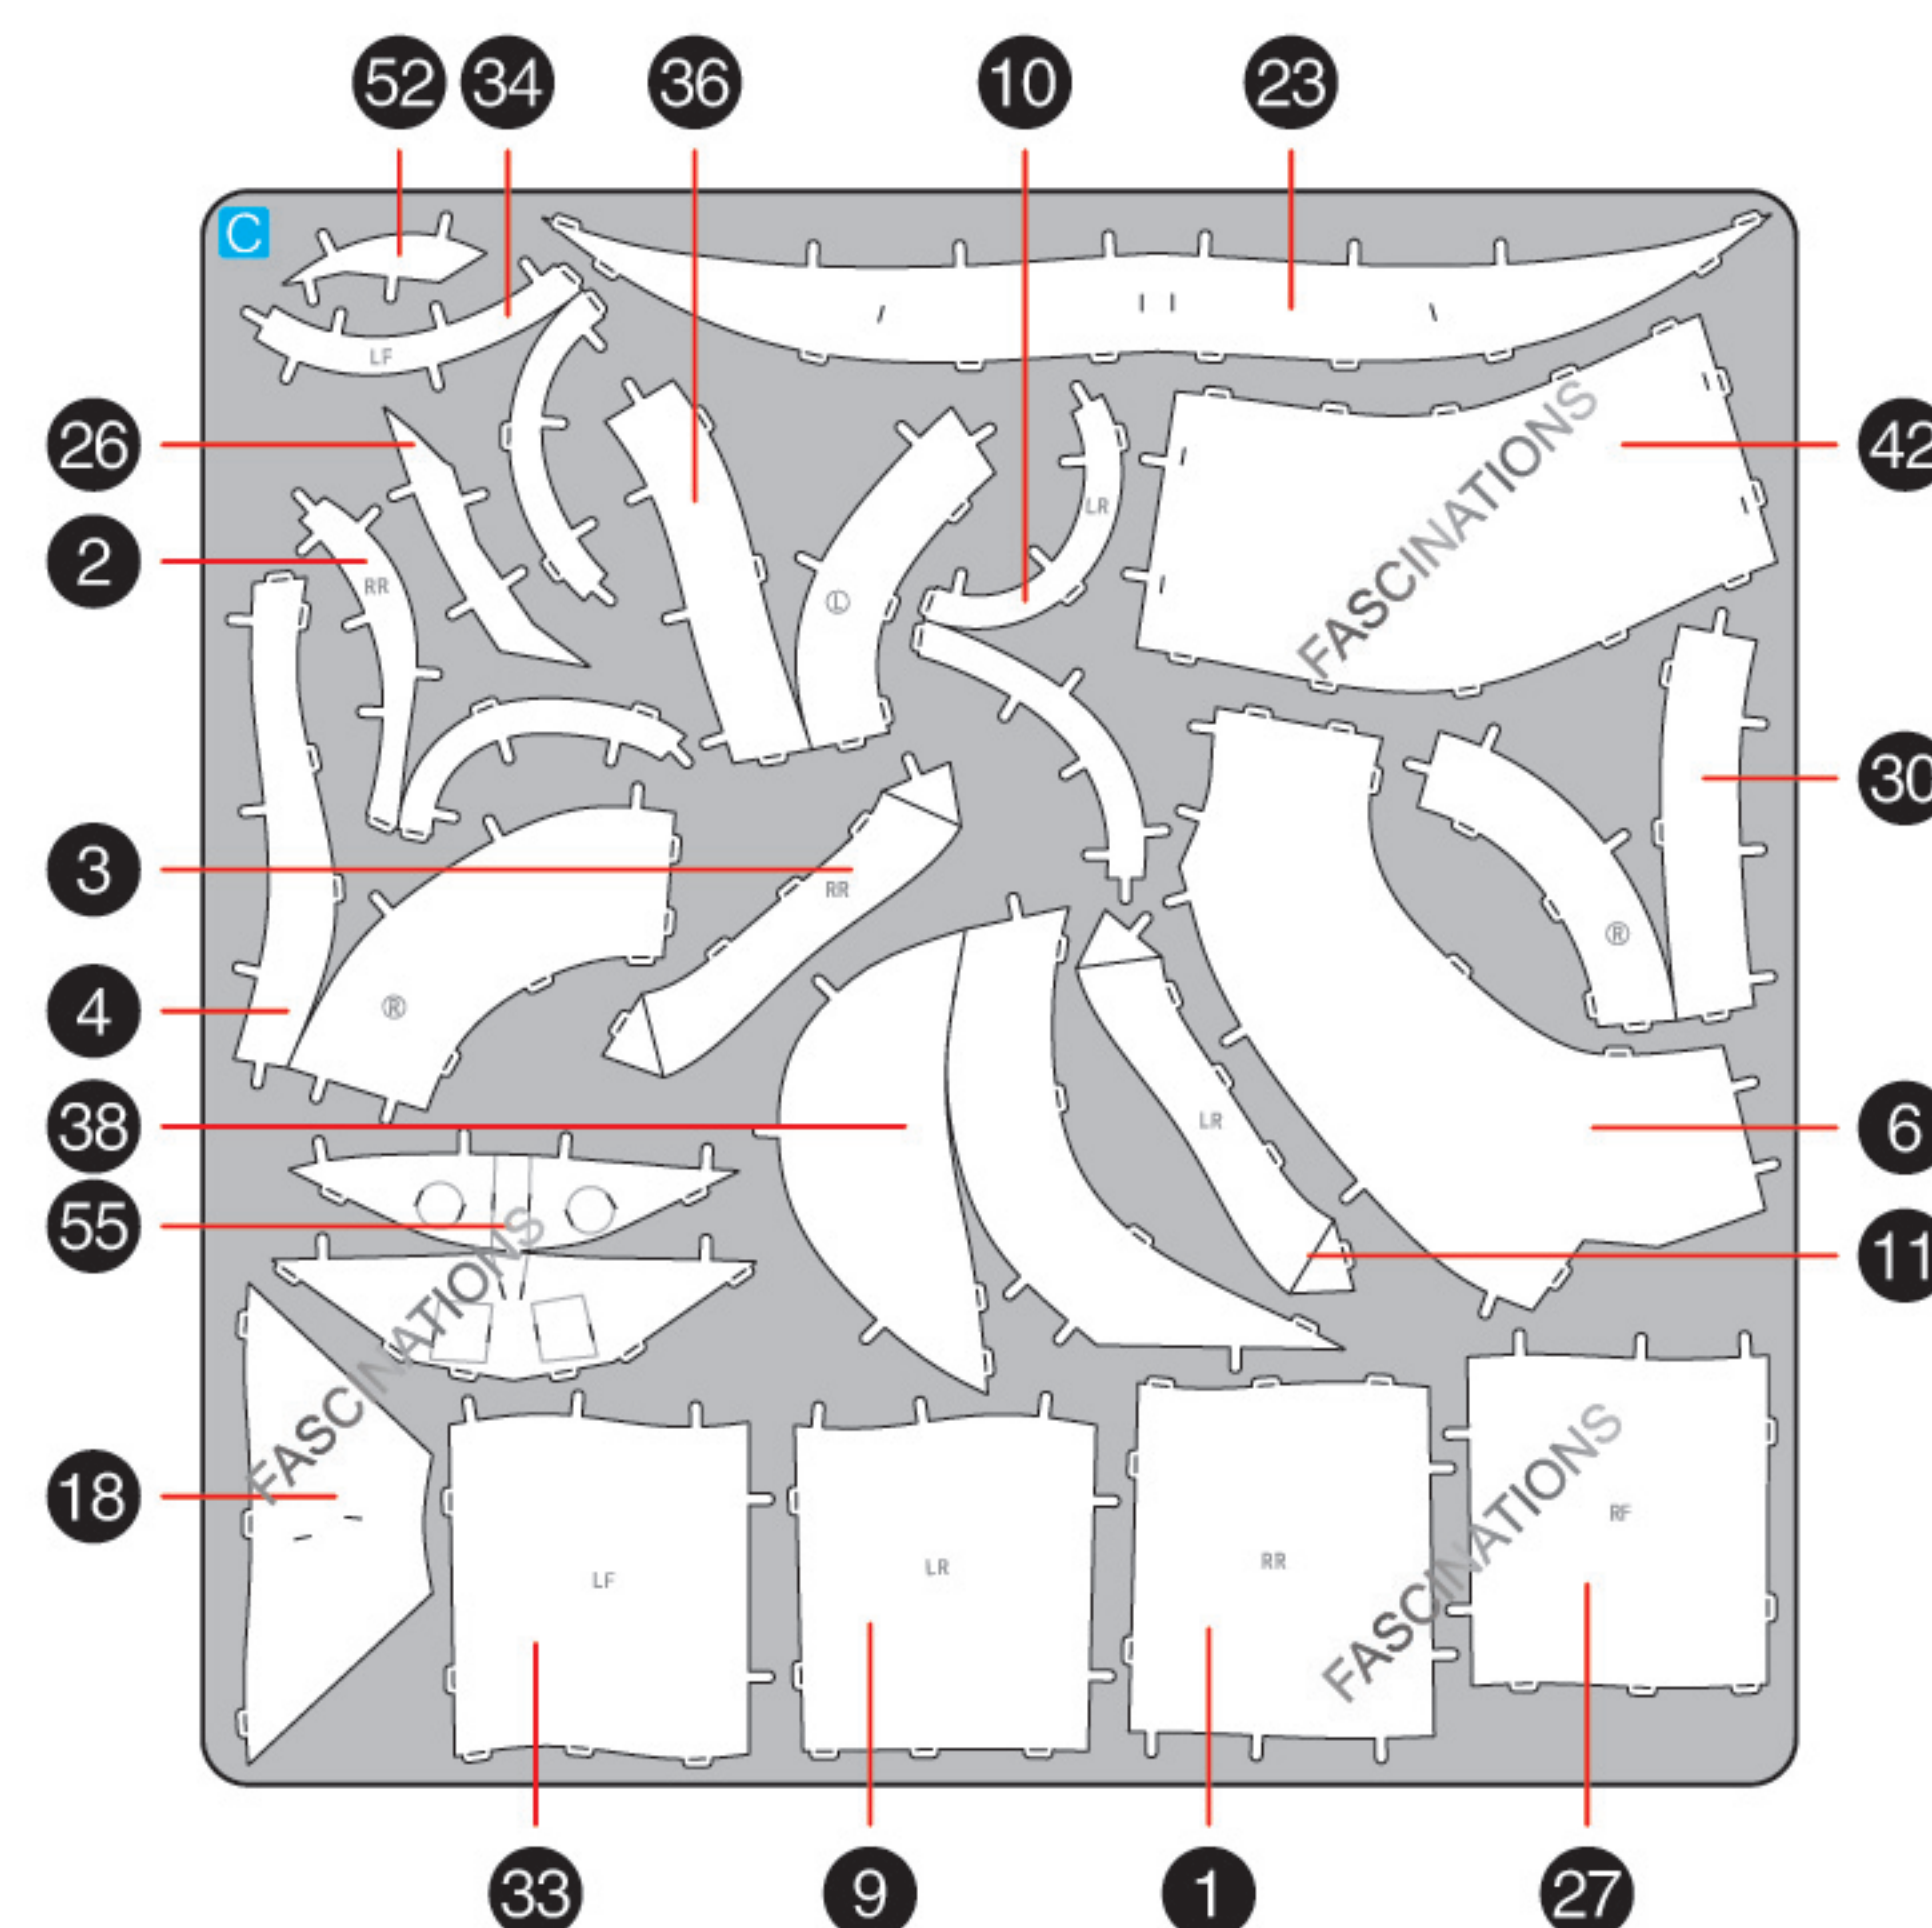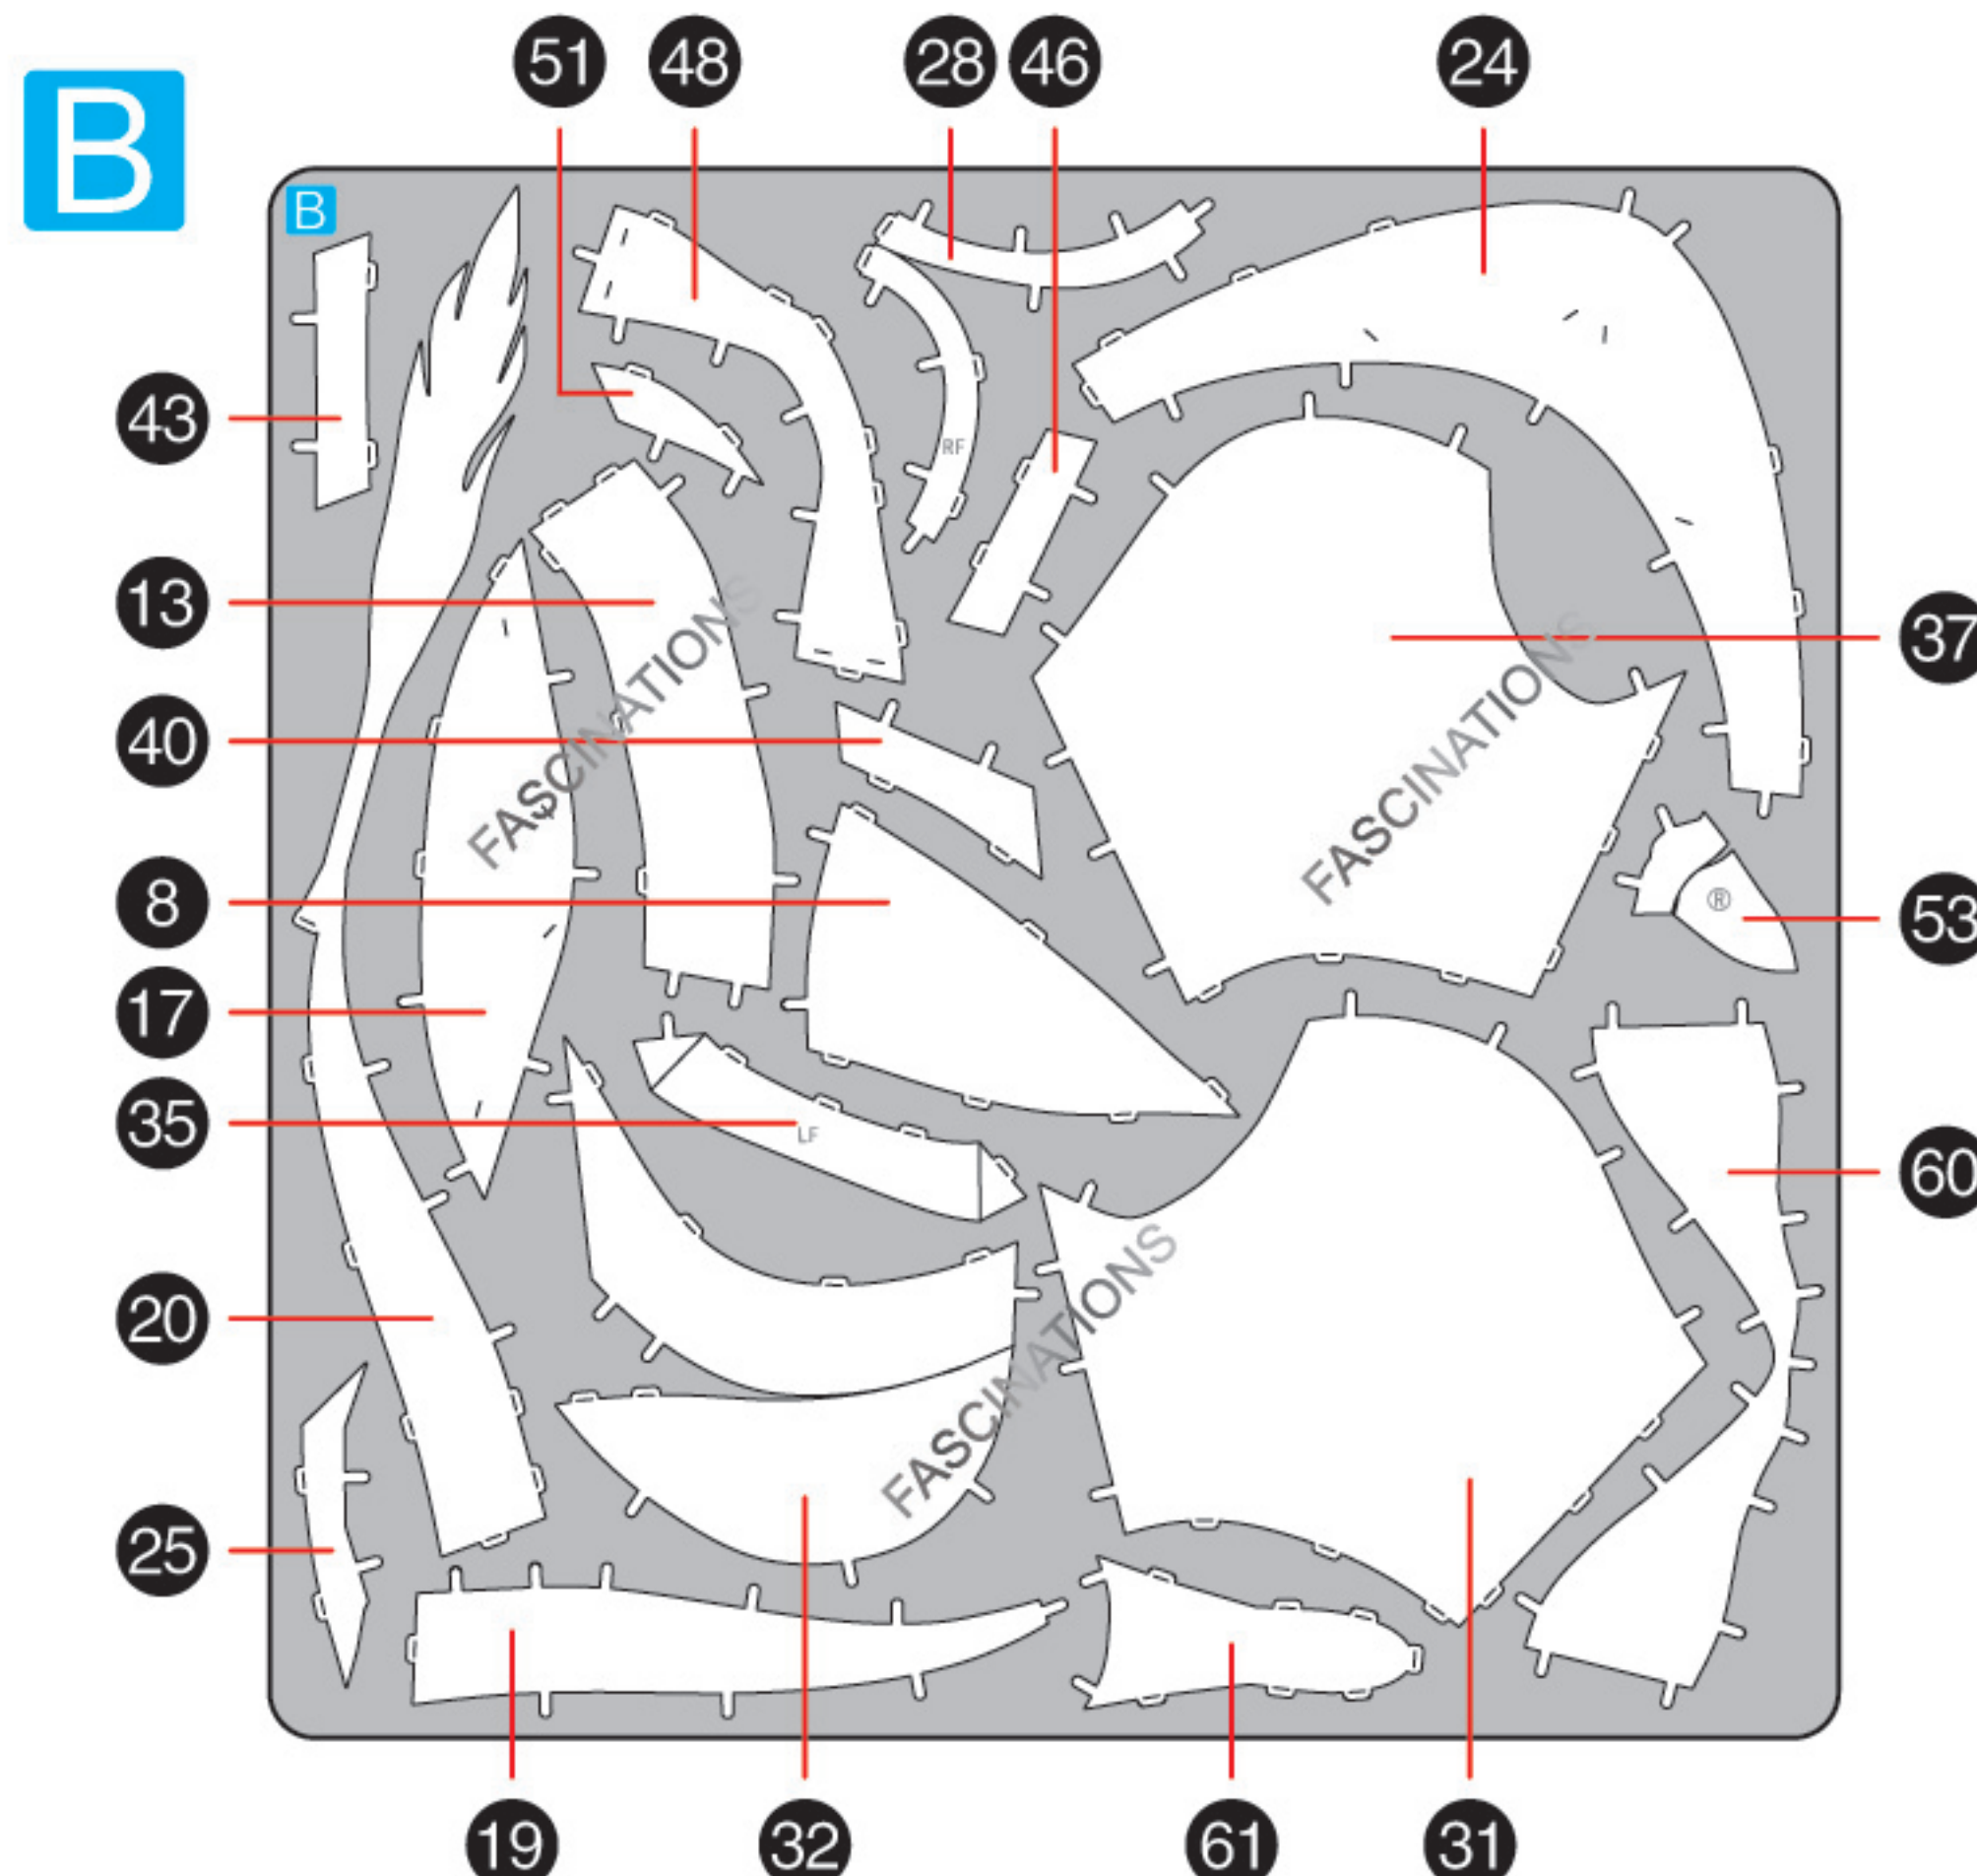
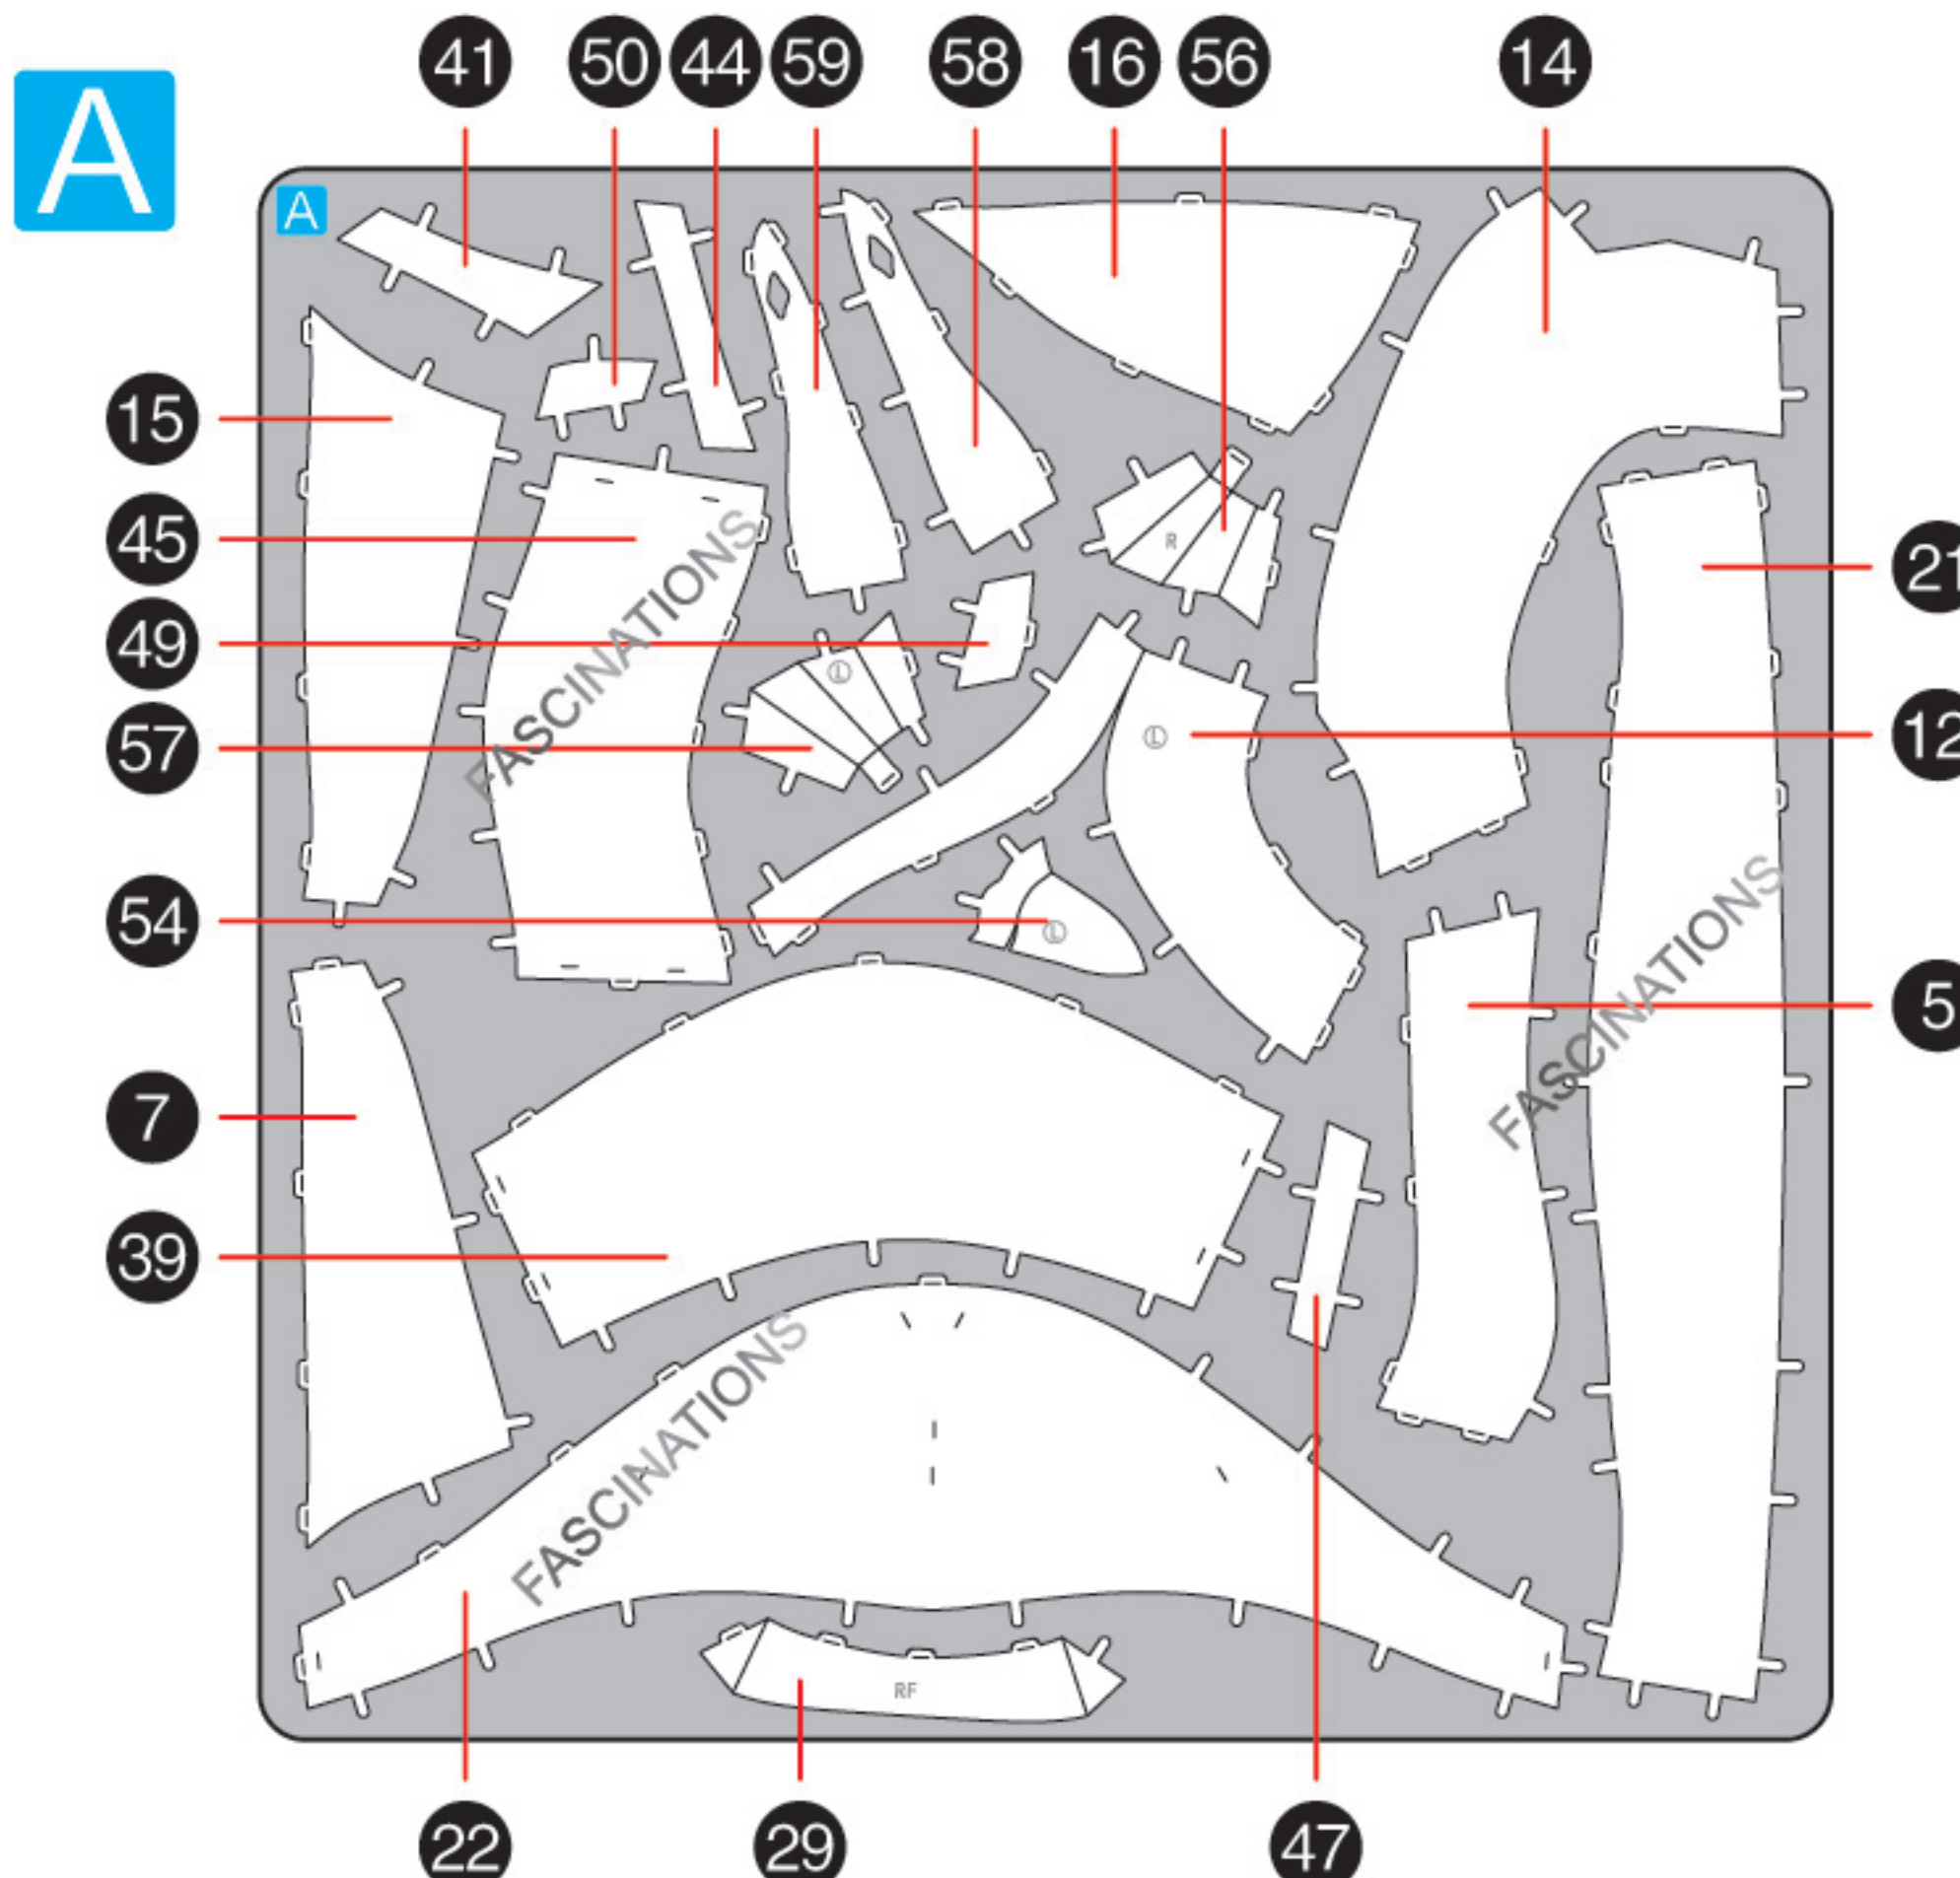


## ASSEMBLY FLOW CHART


### Step 1

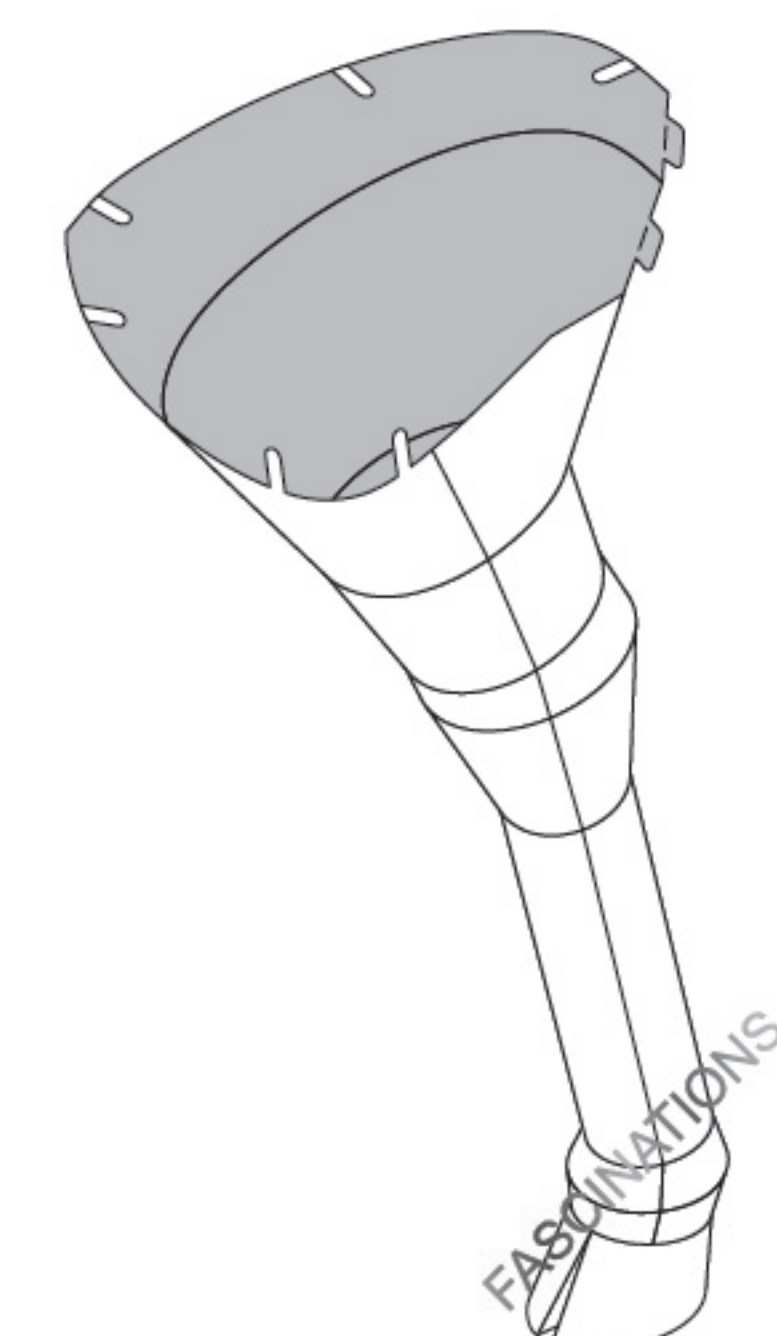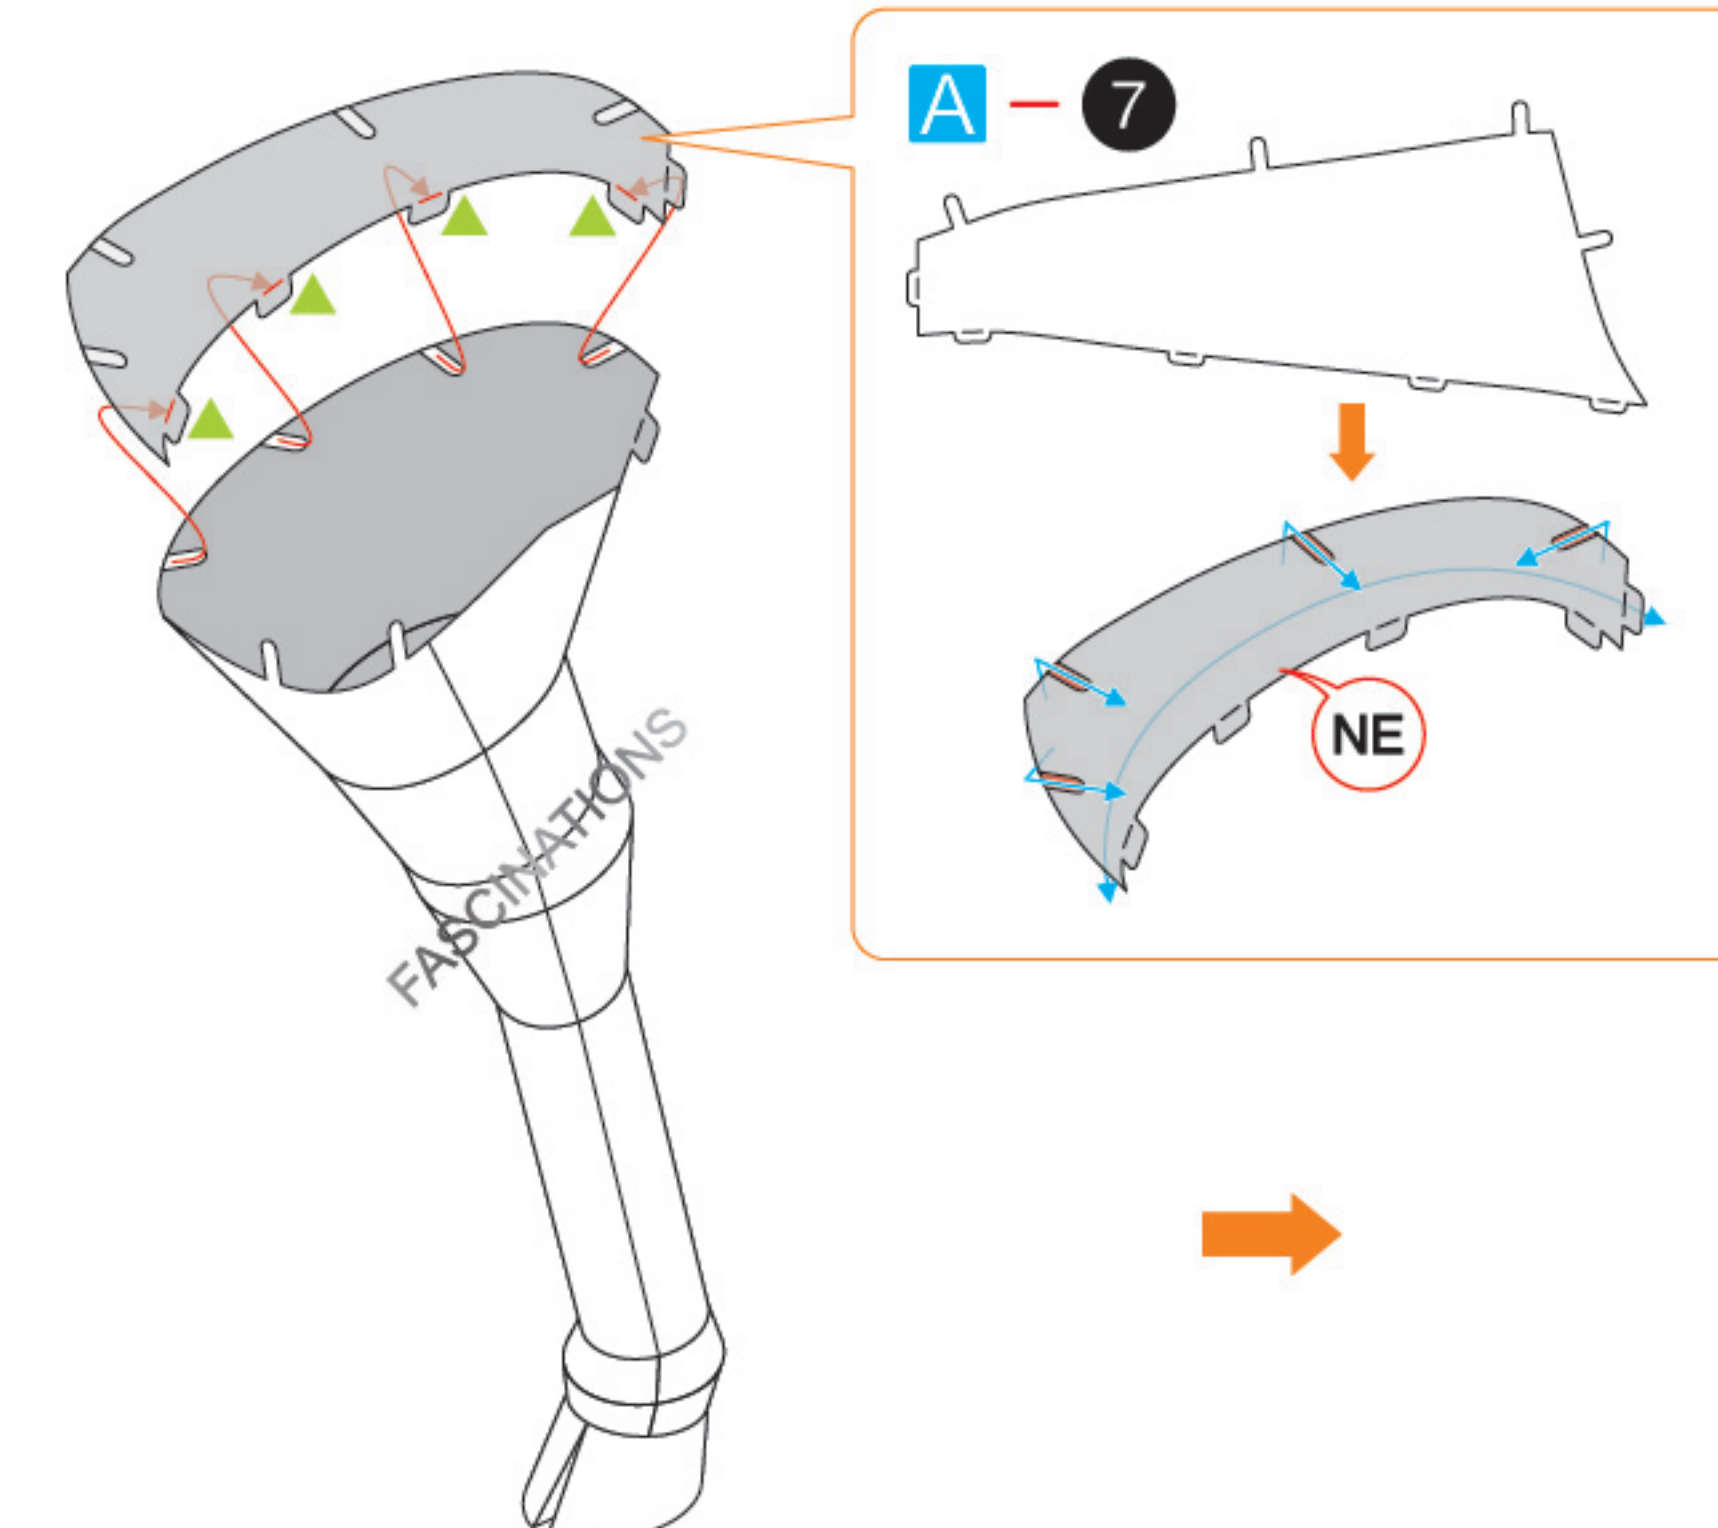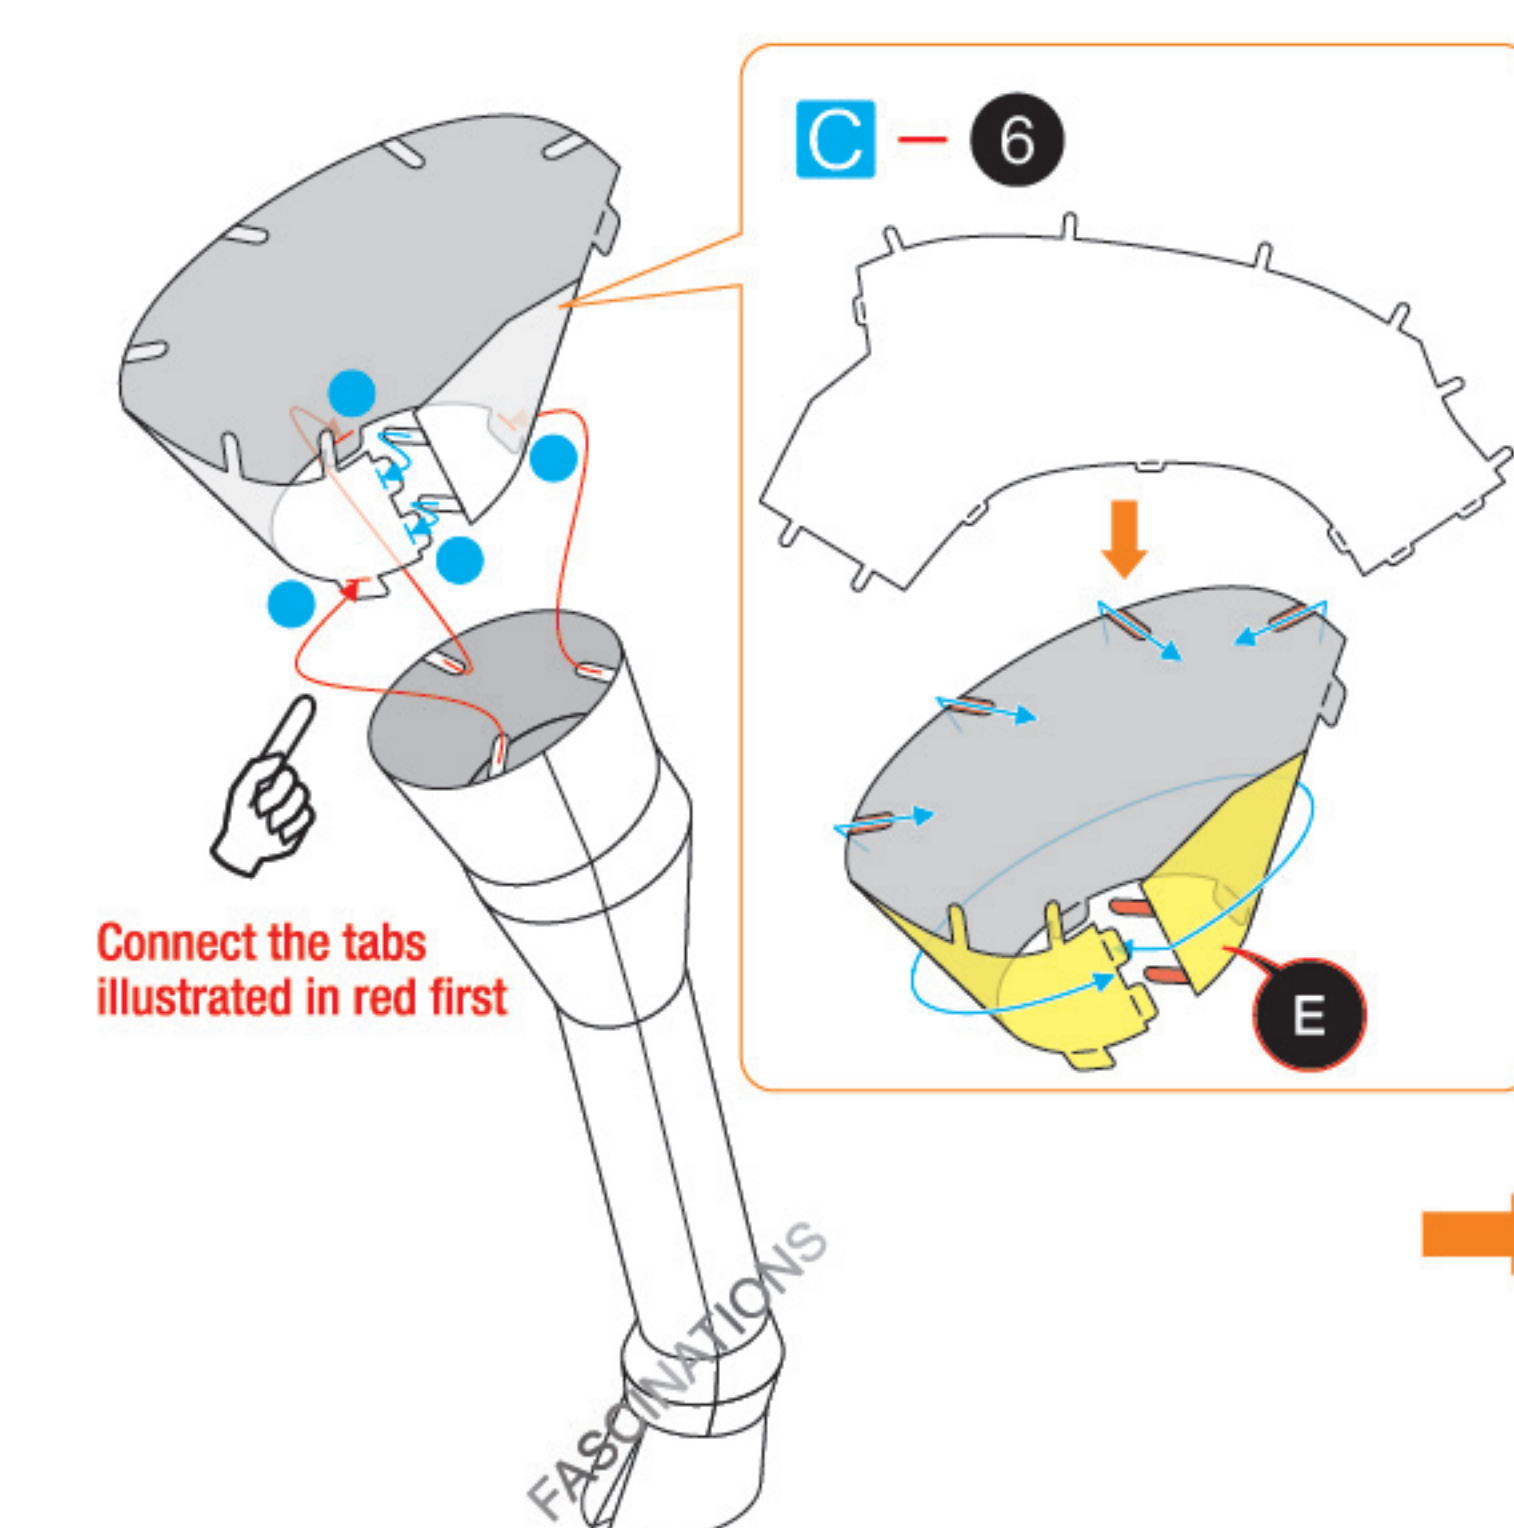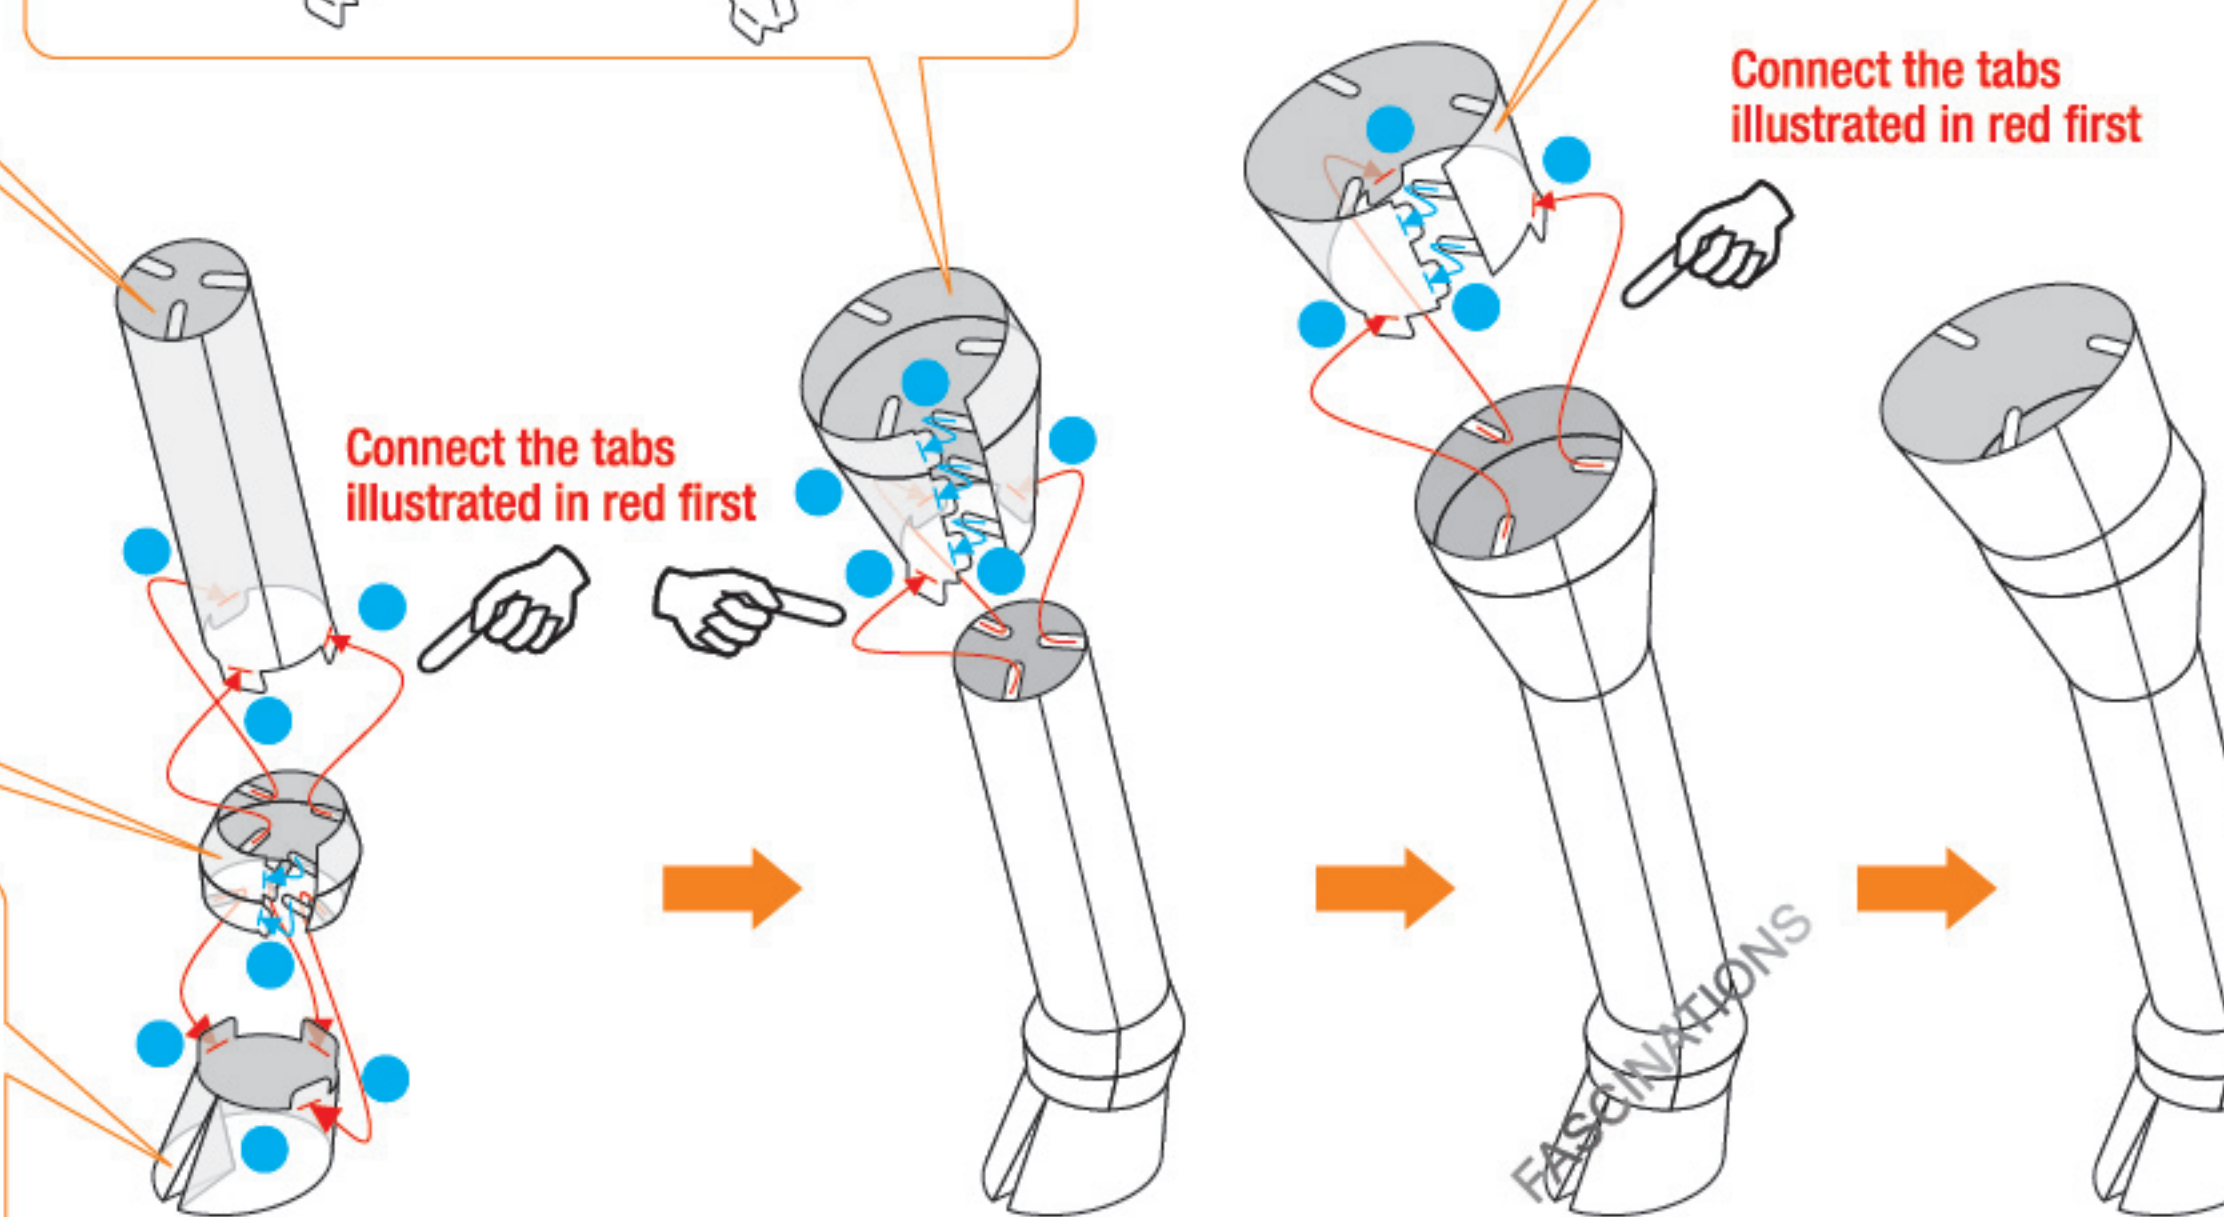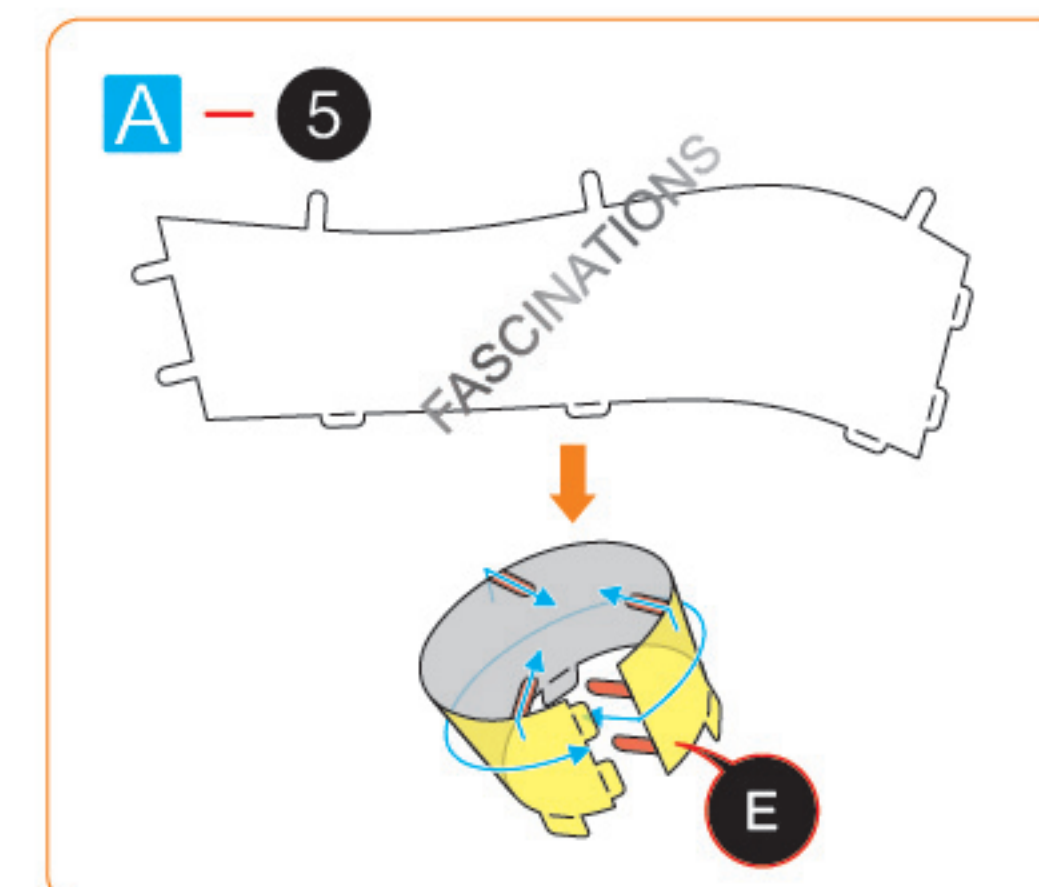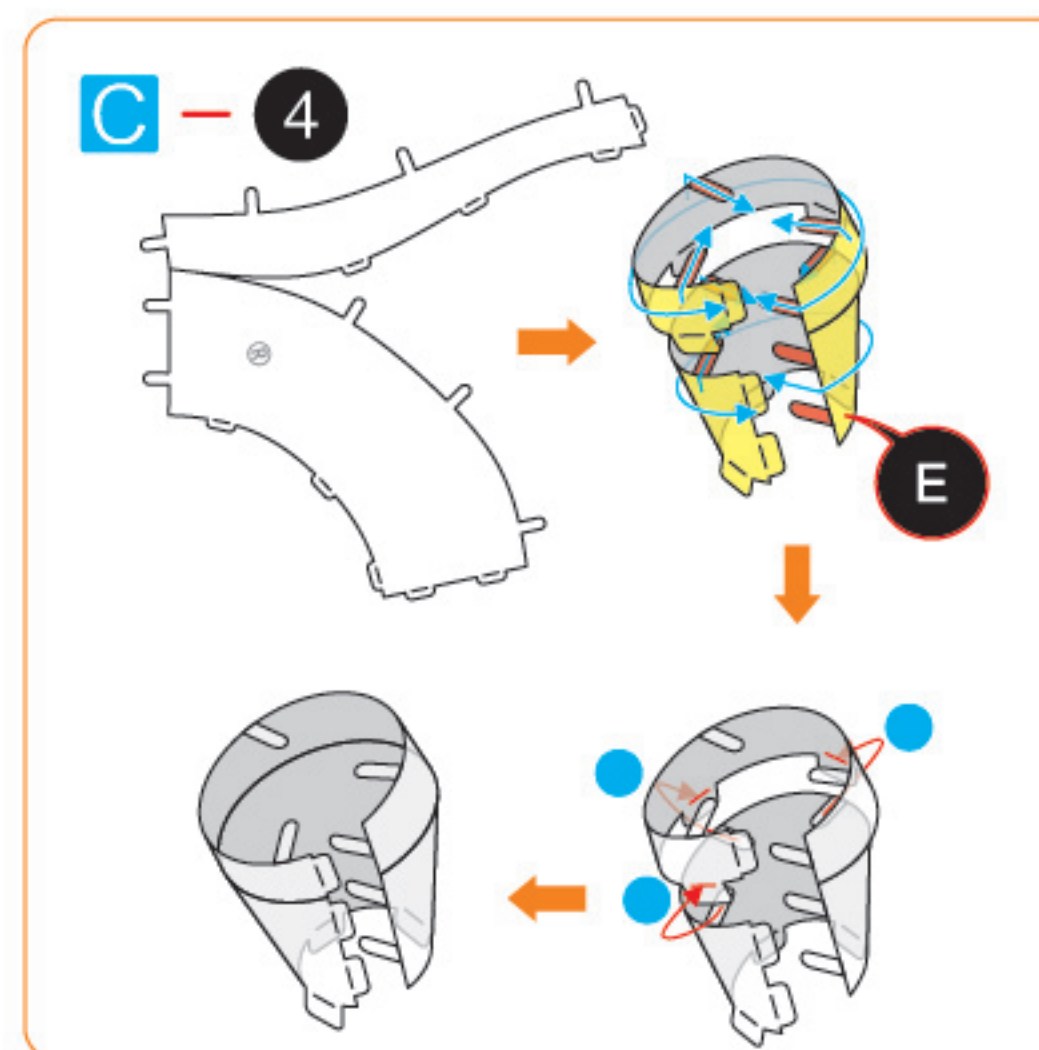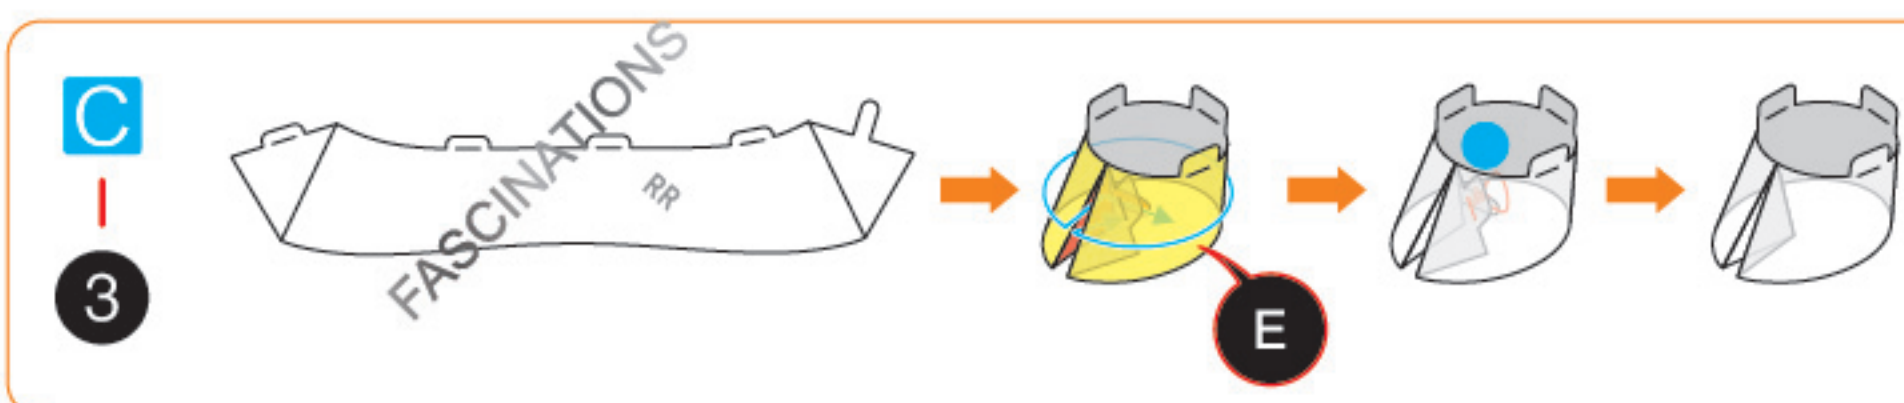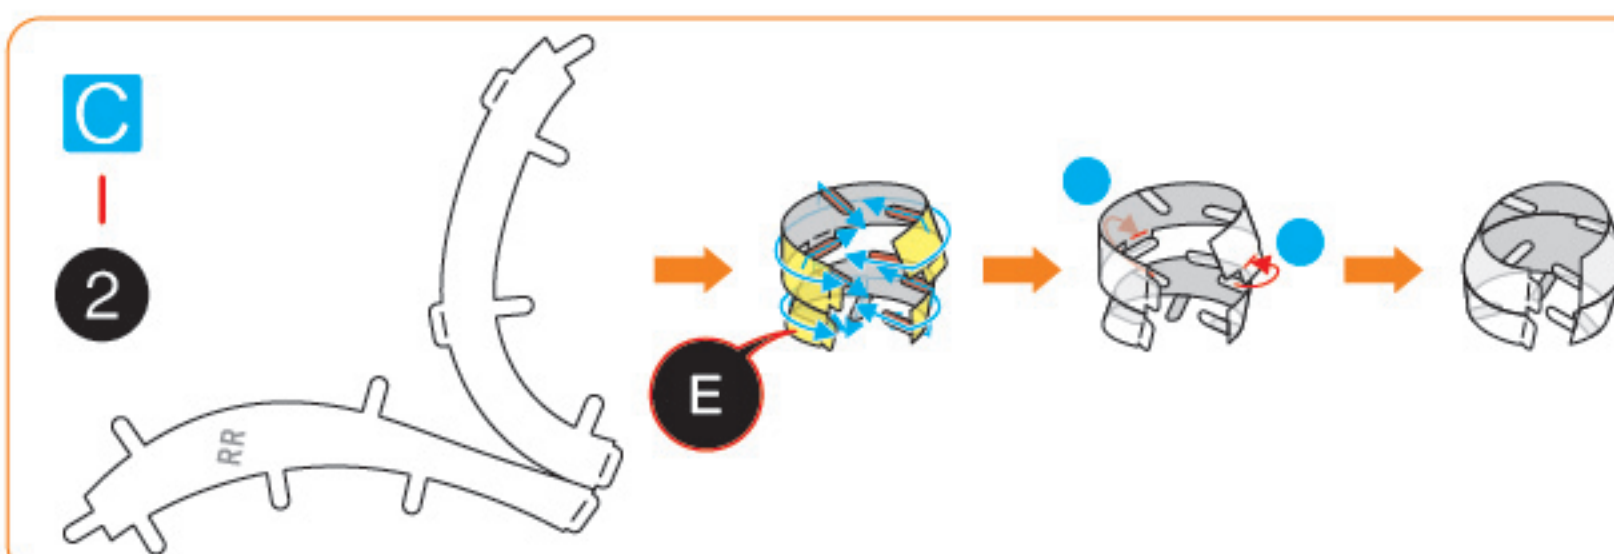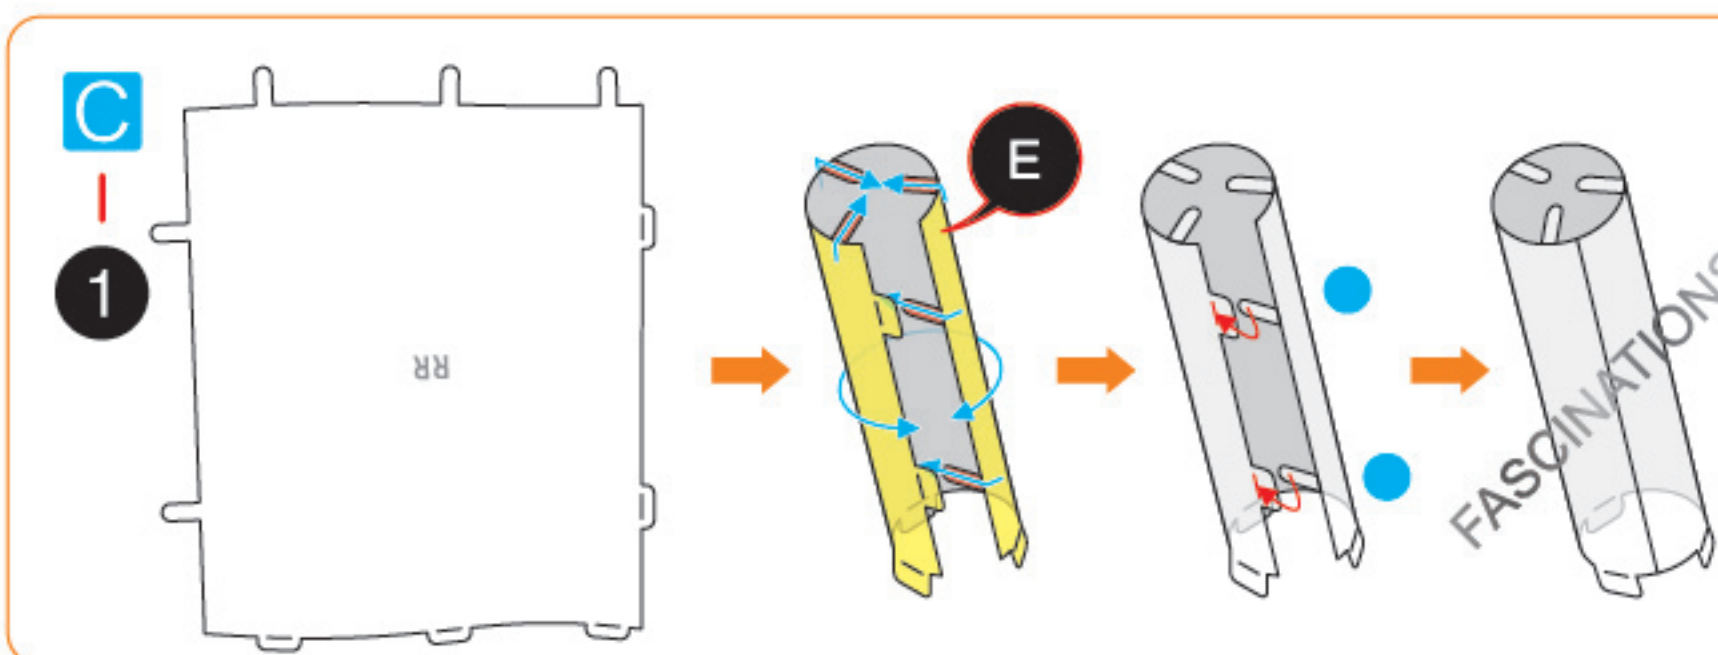






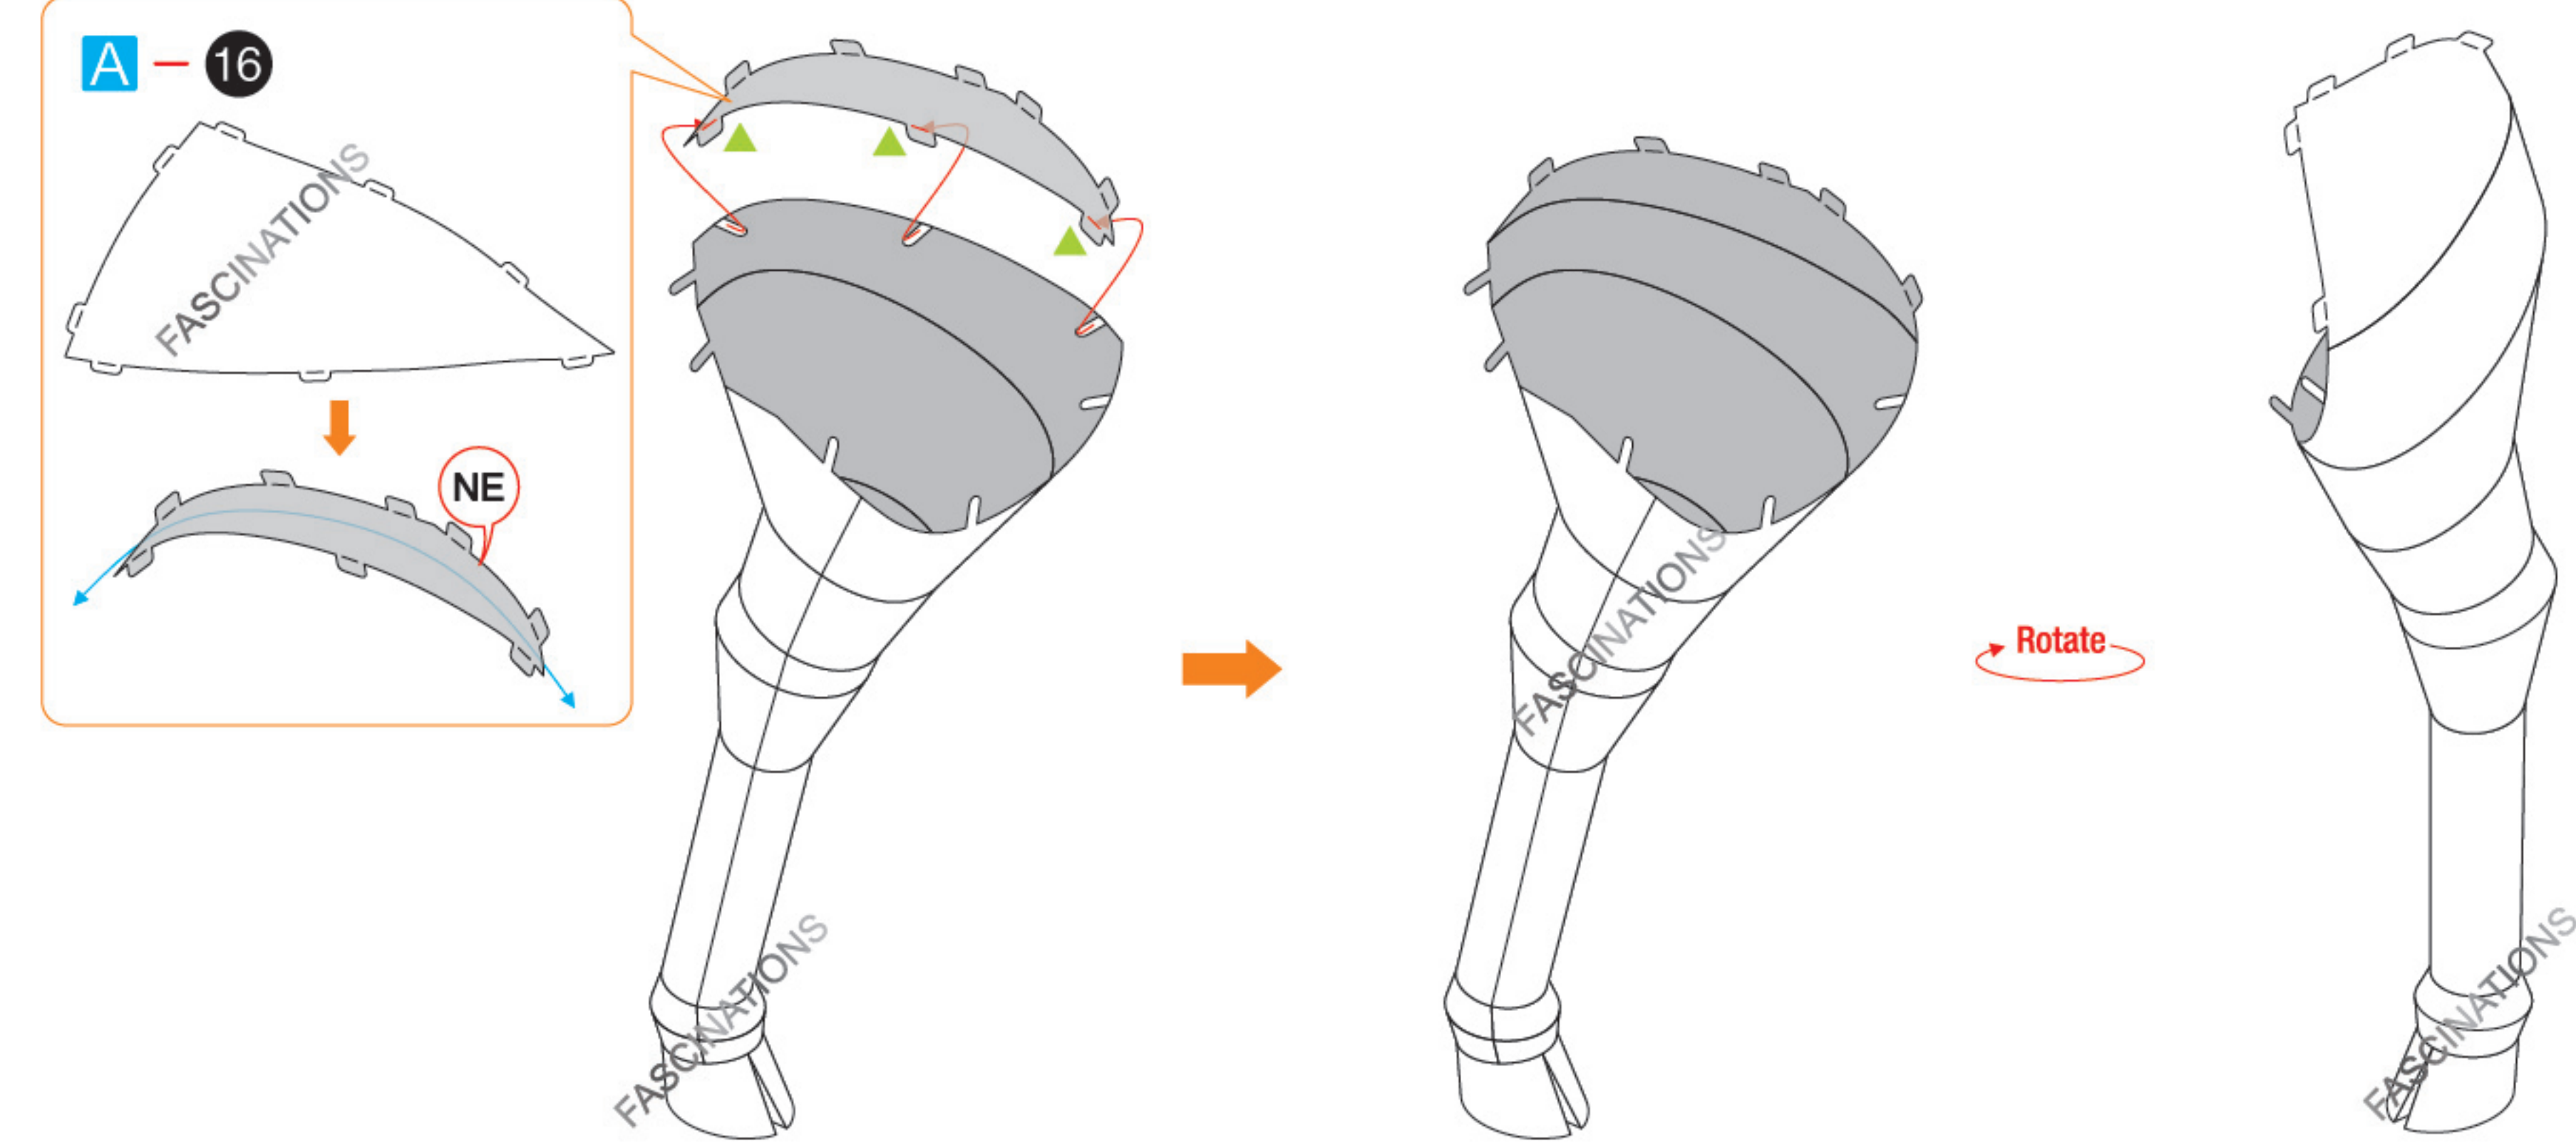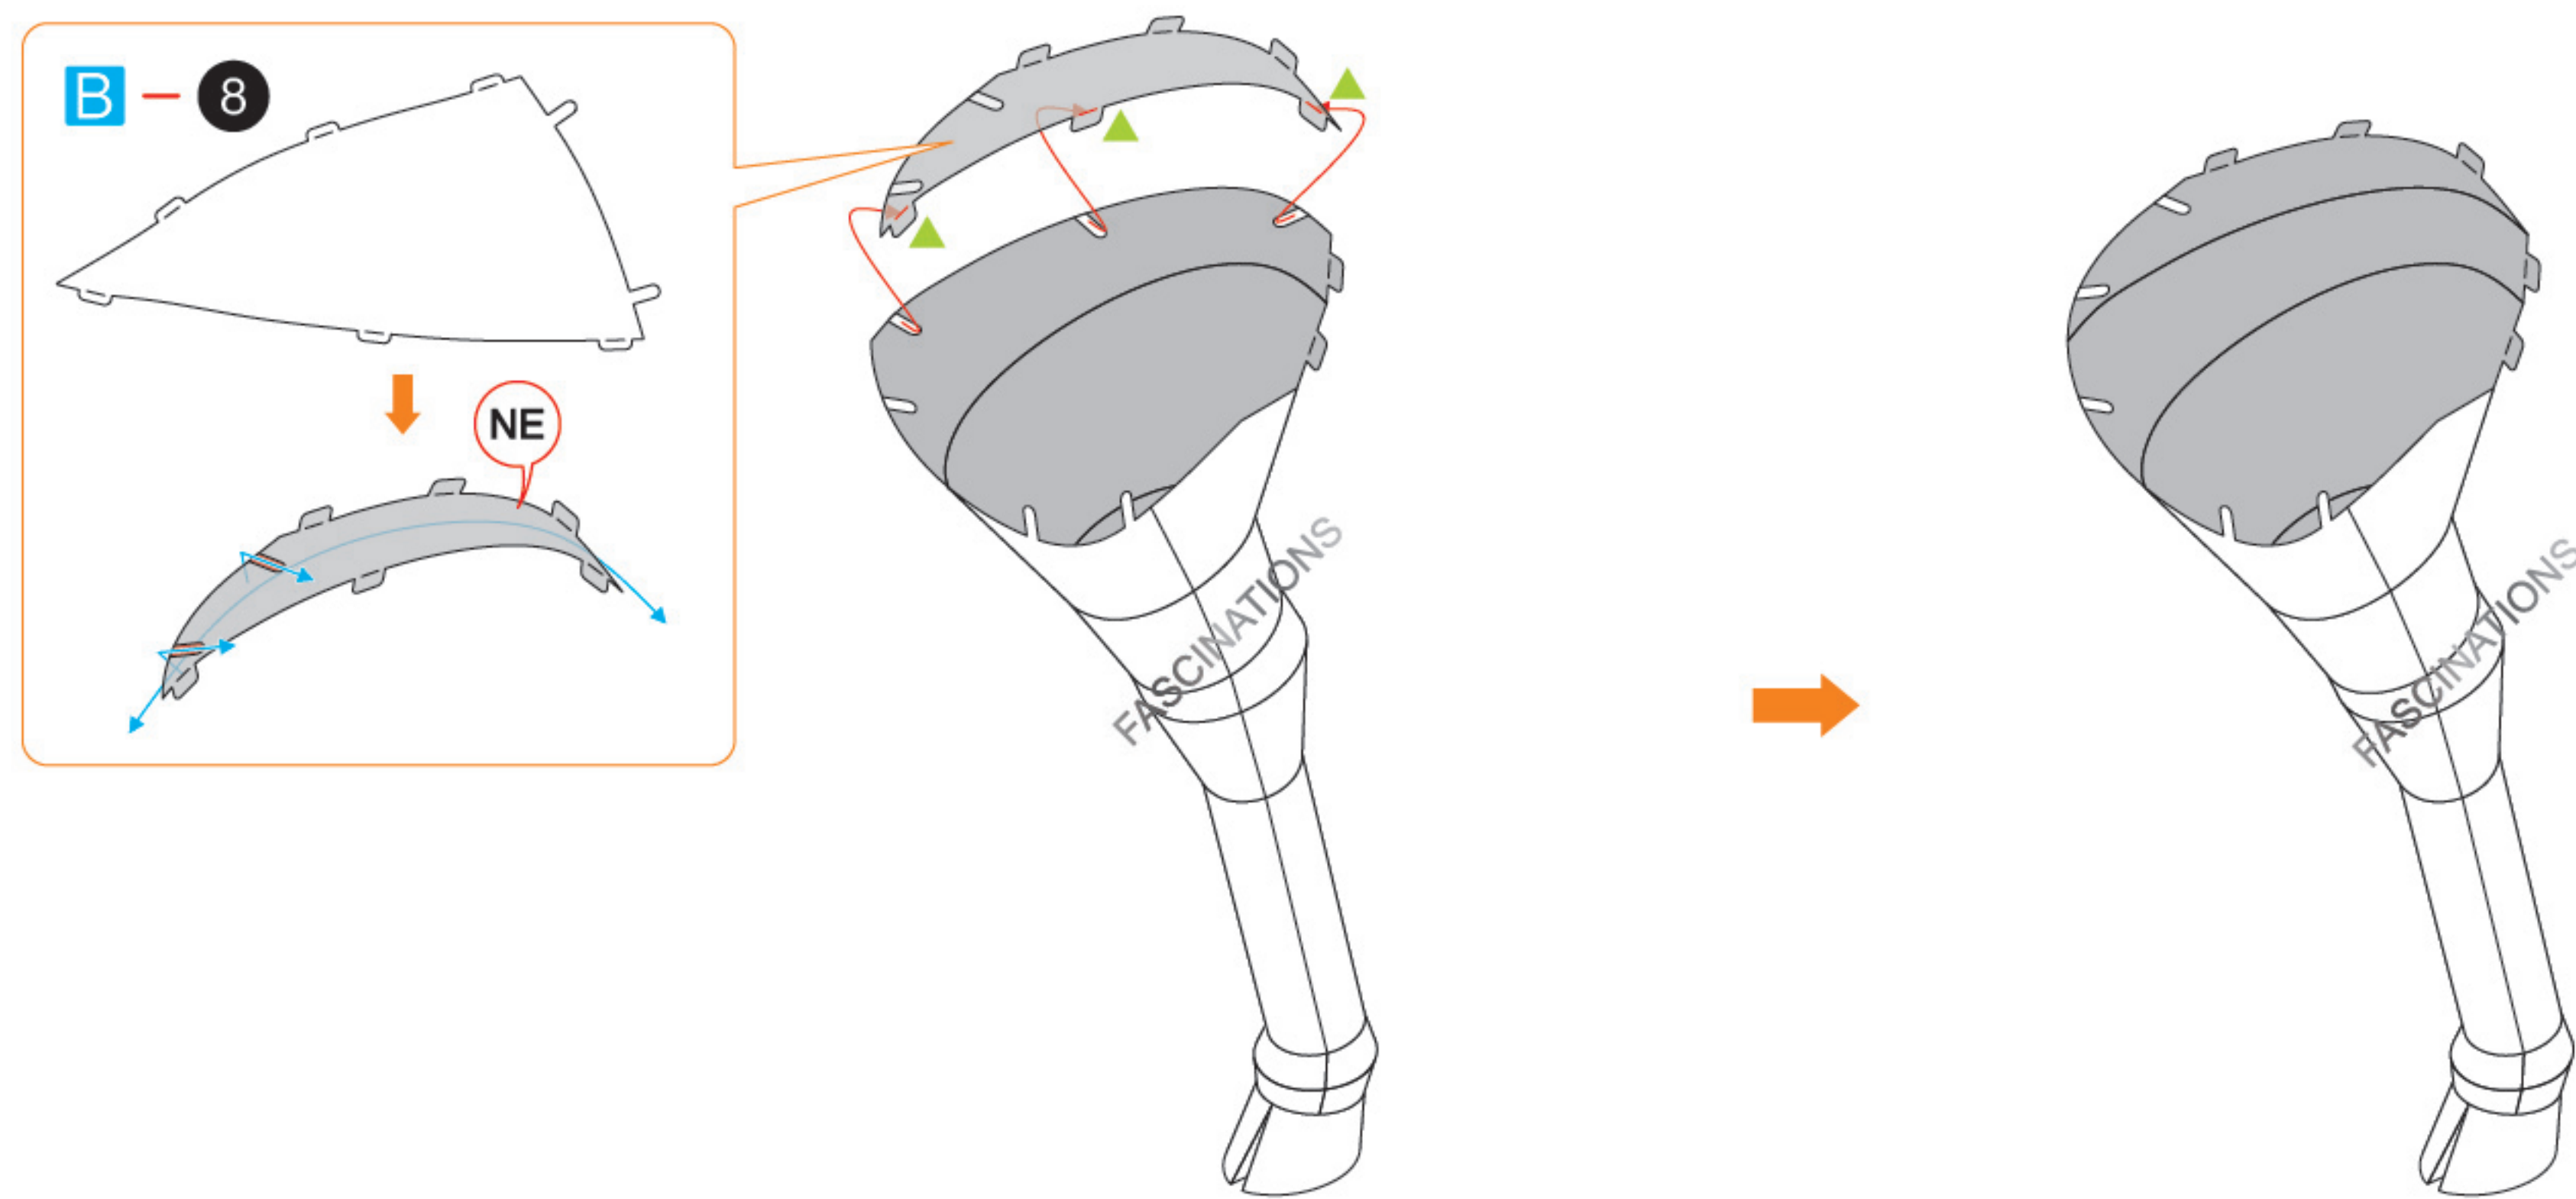






## Step 2

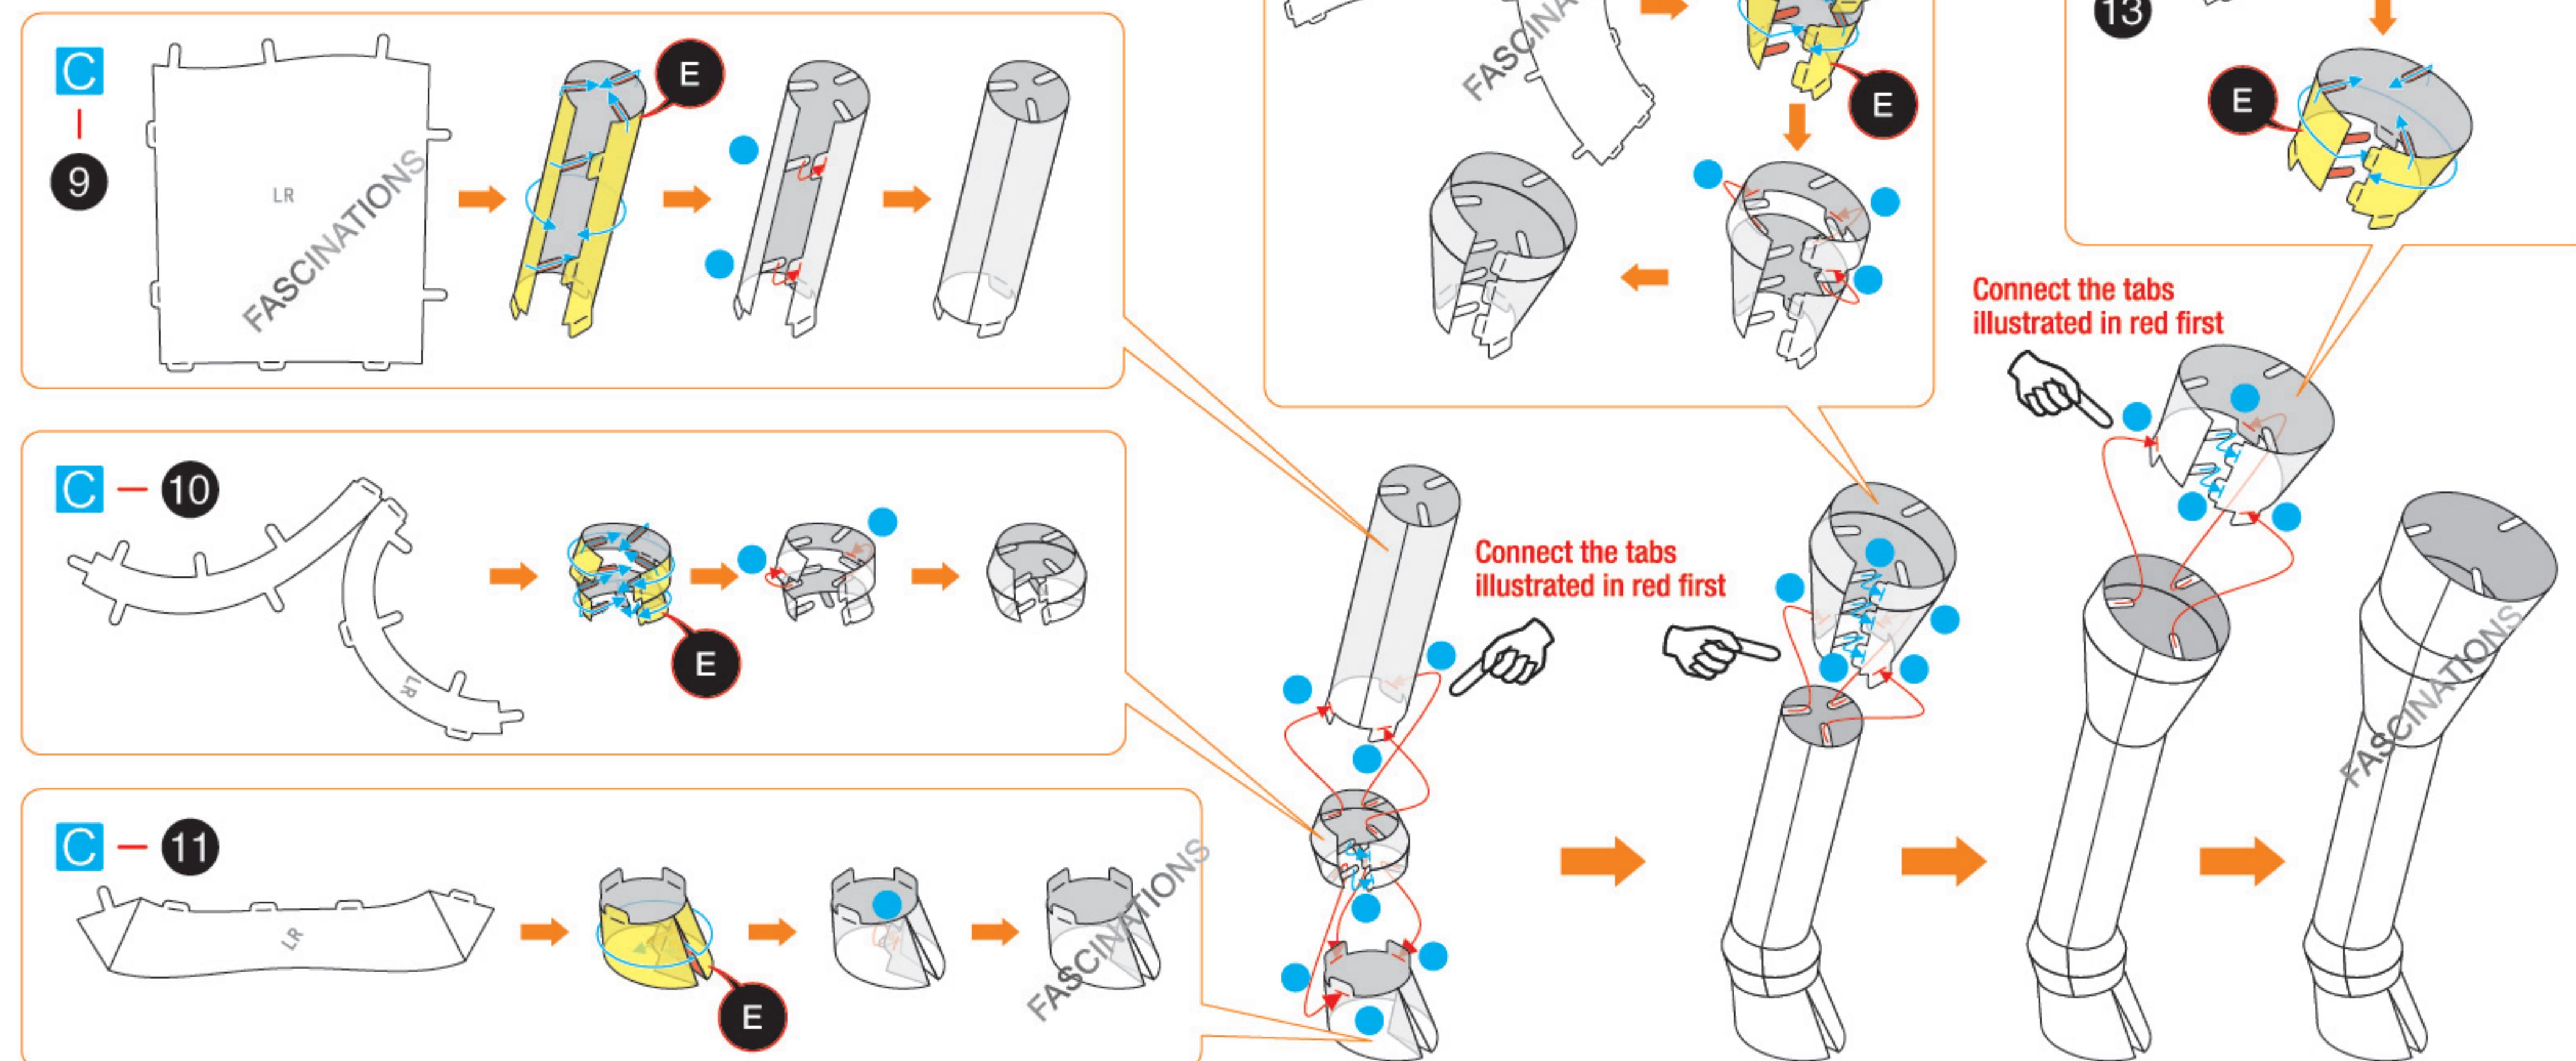

## Step 3


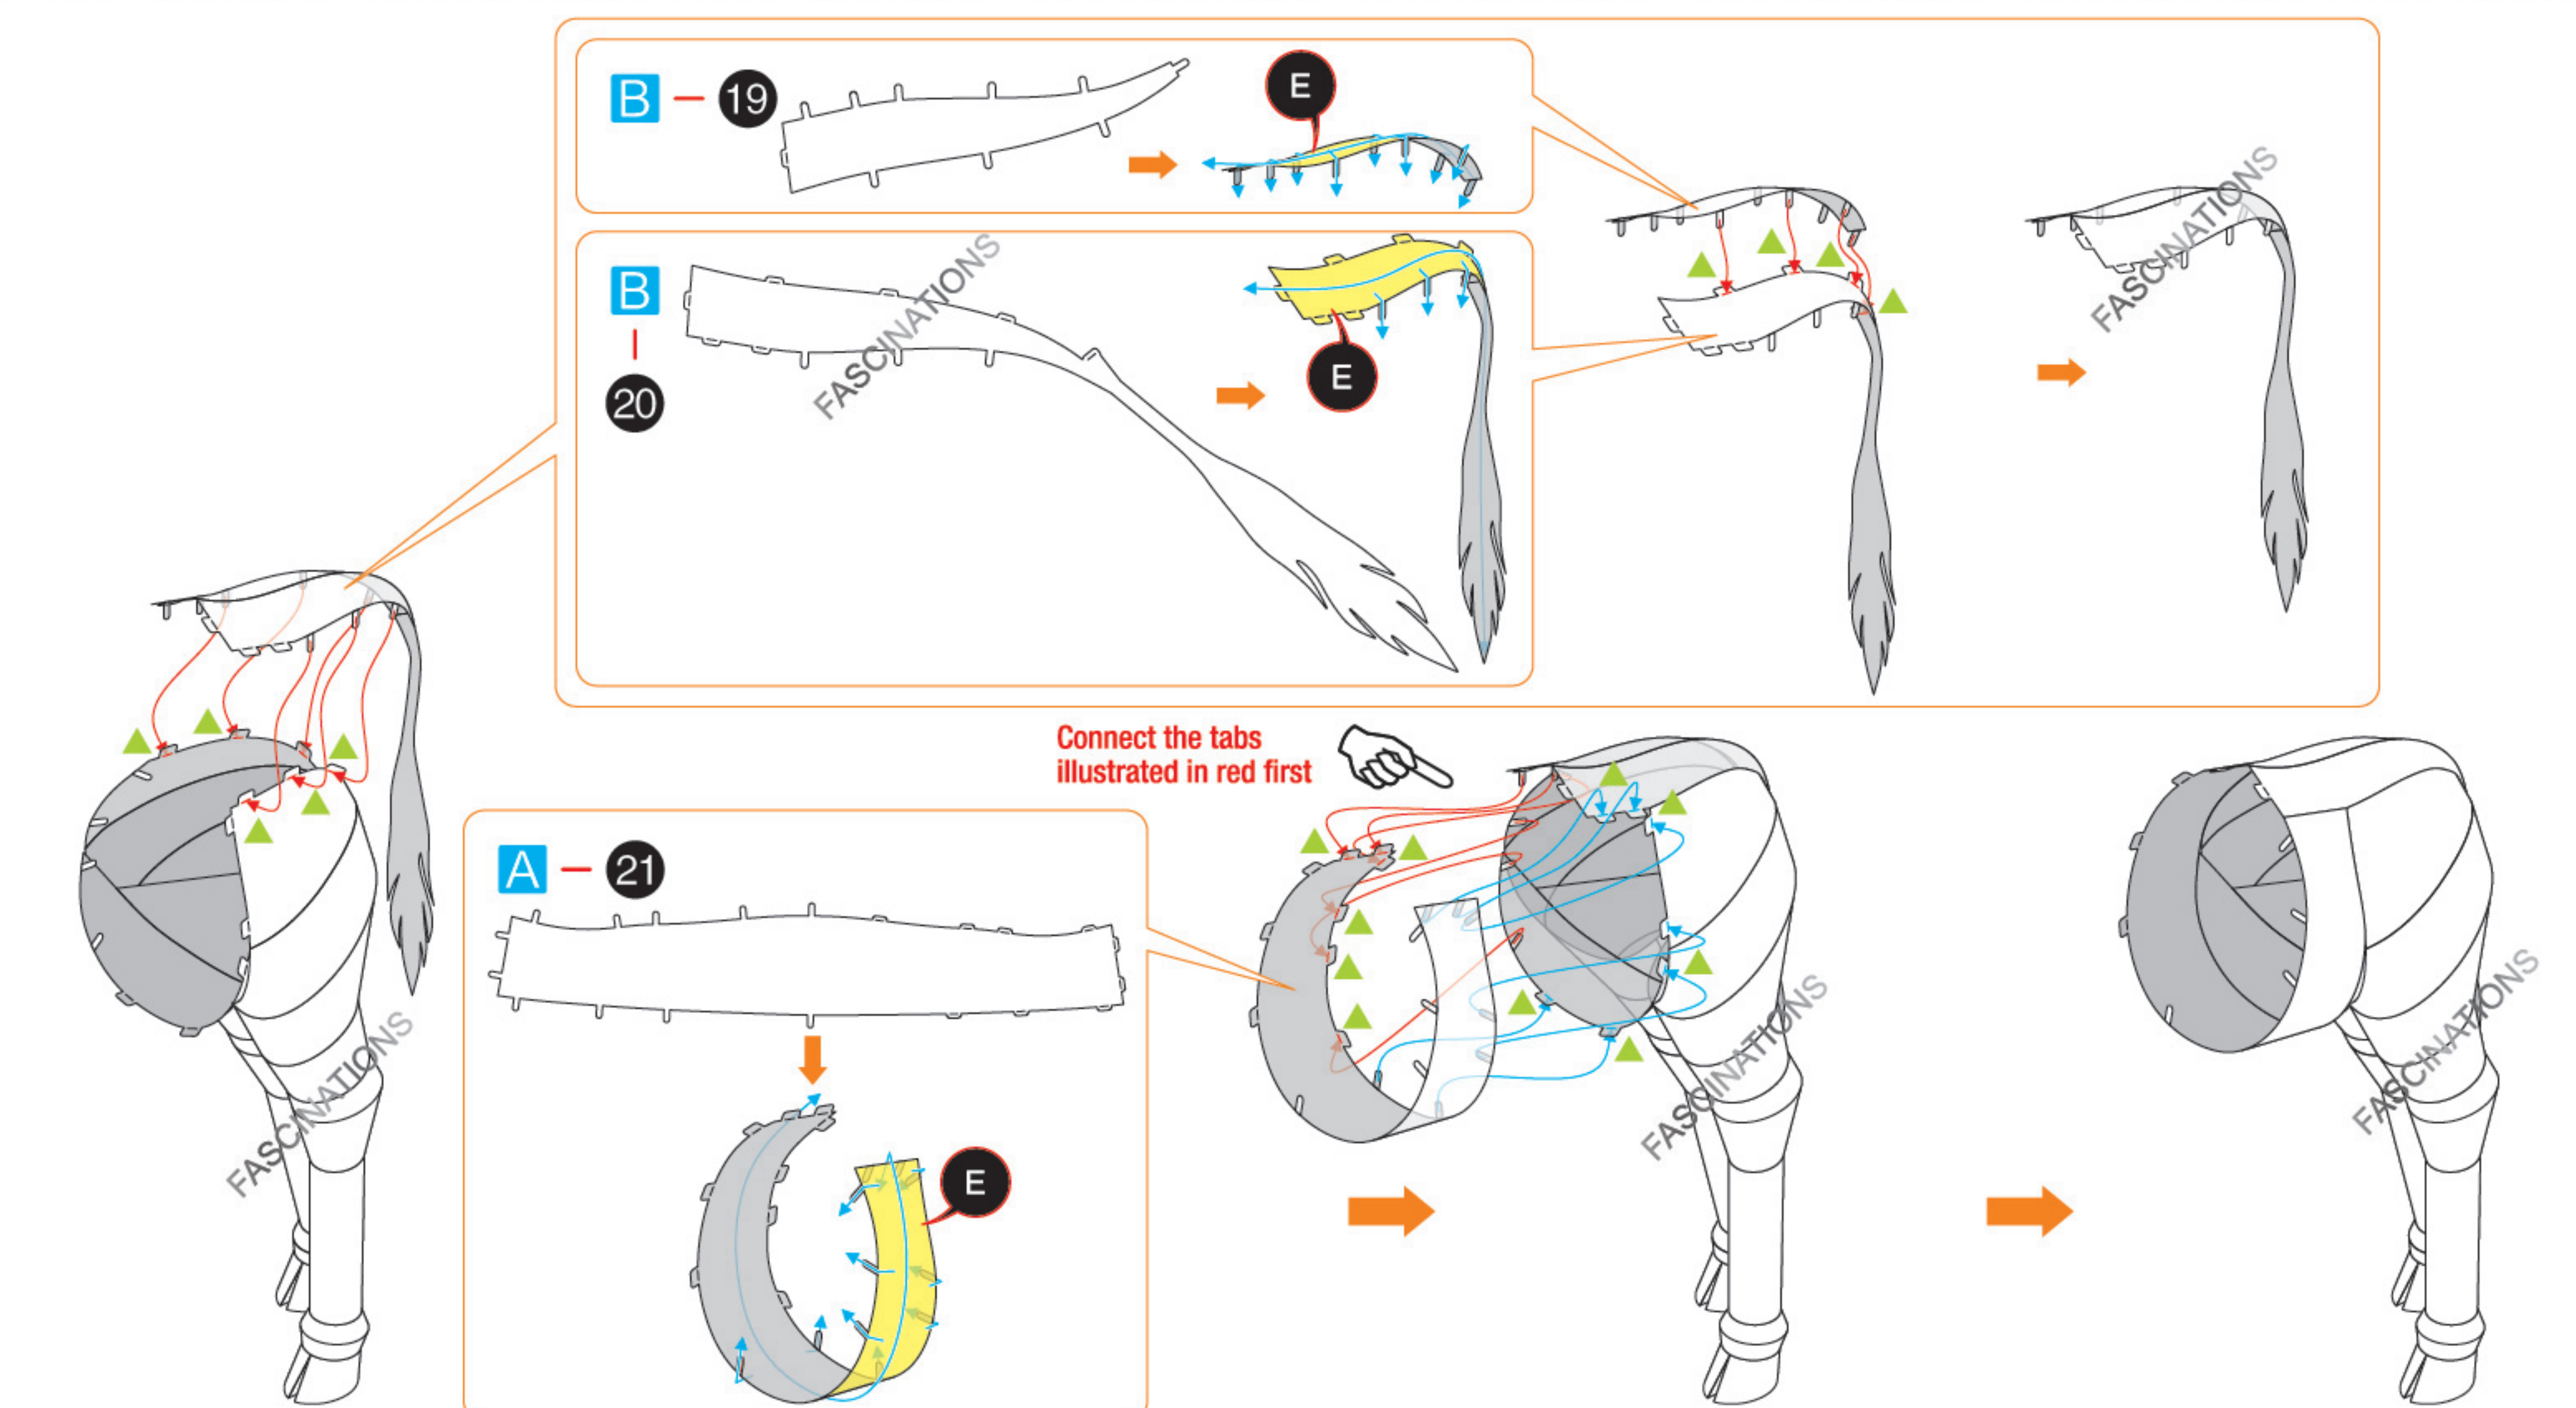
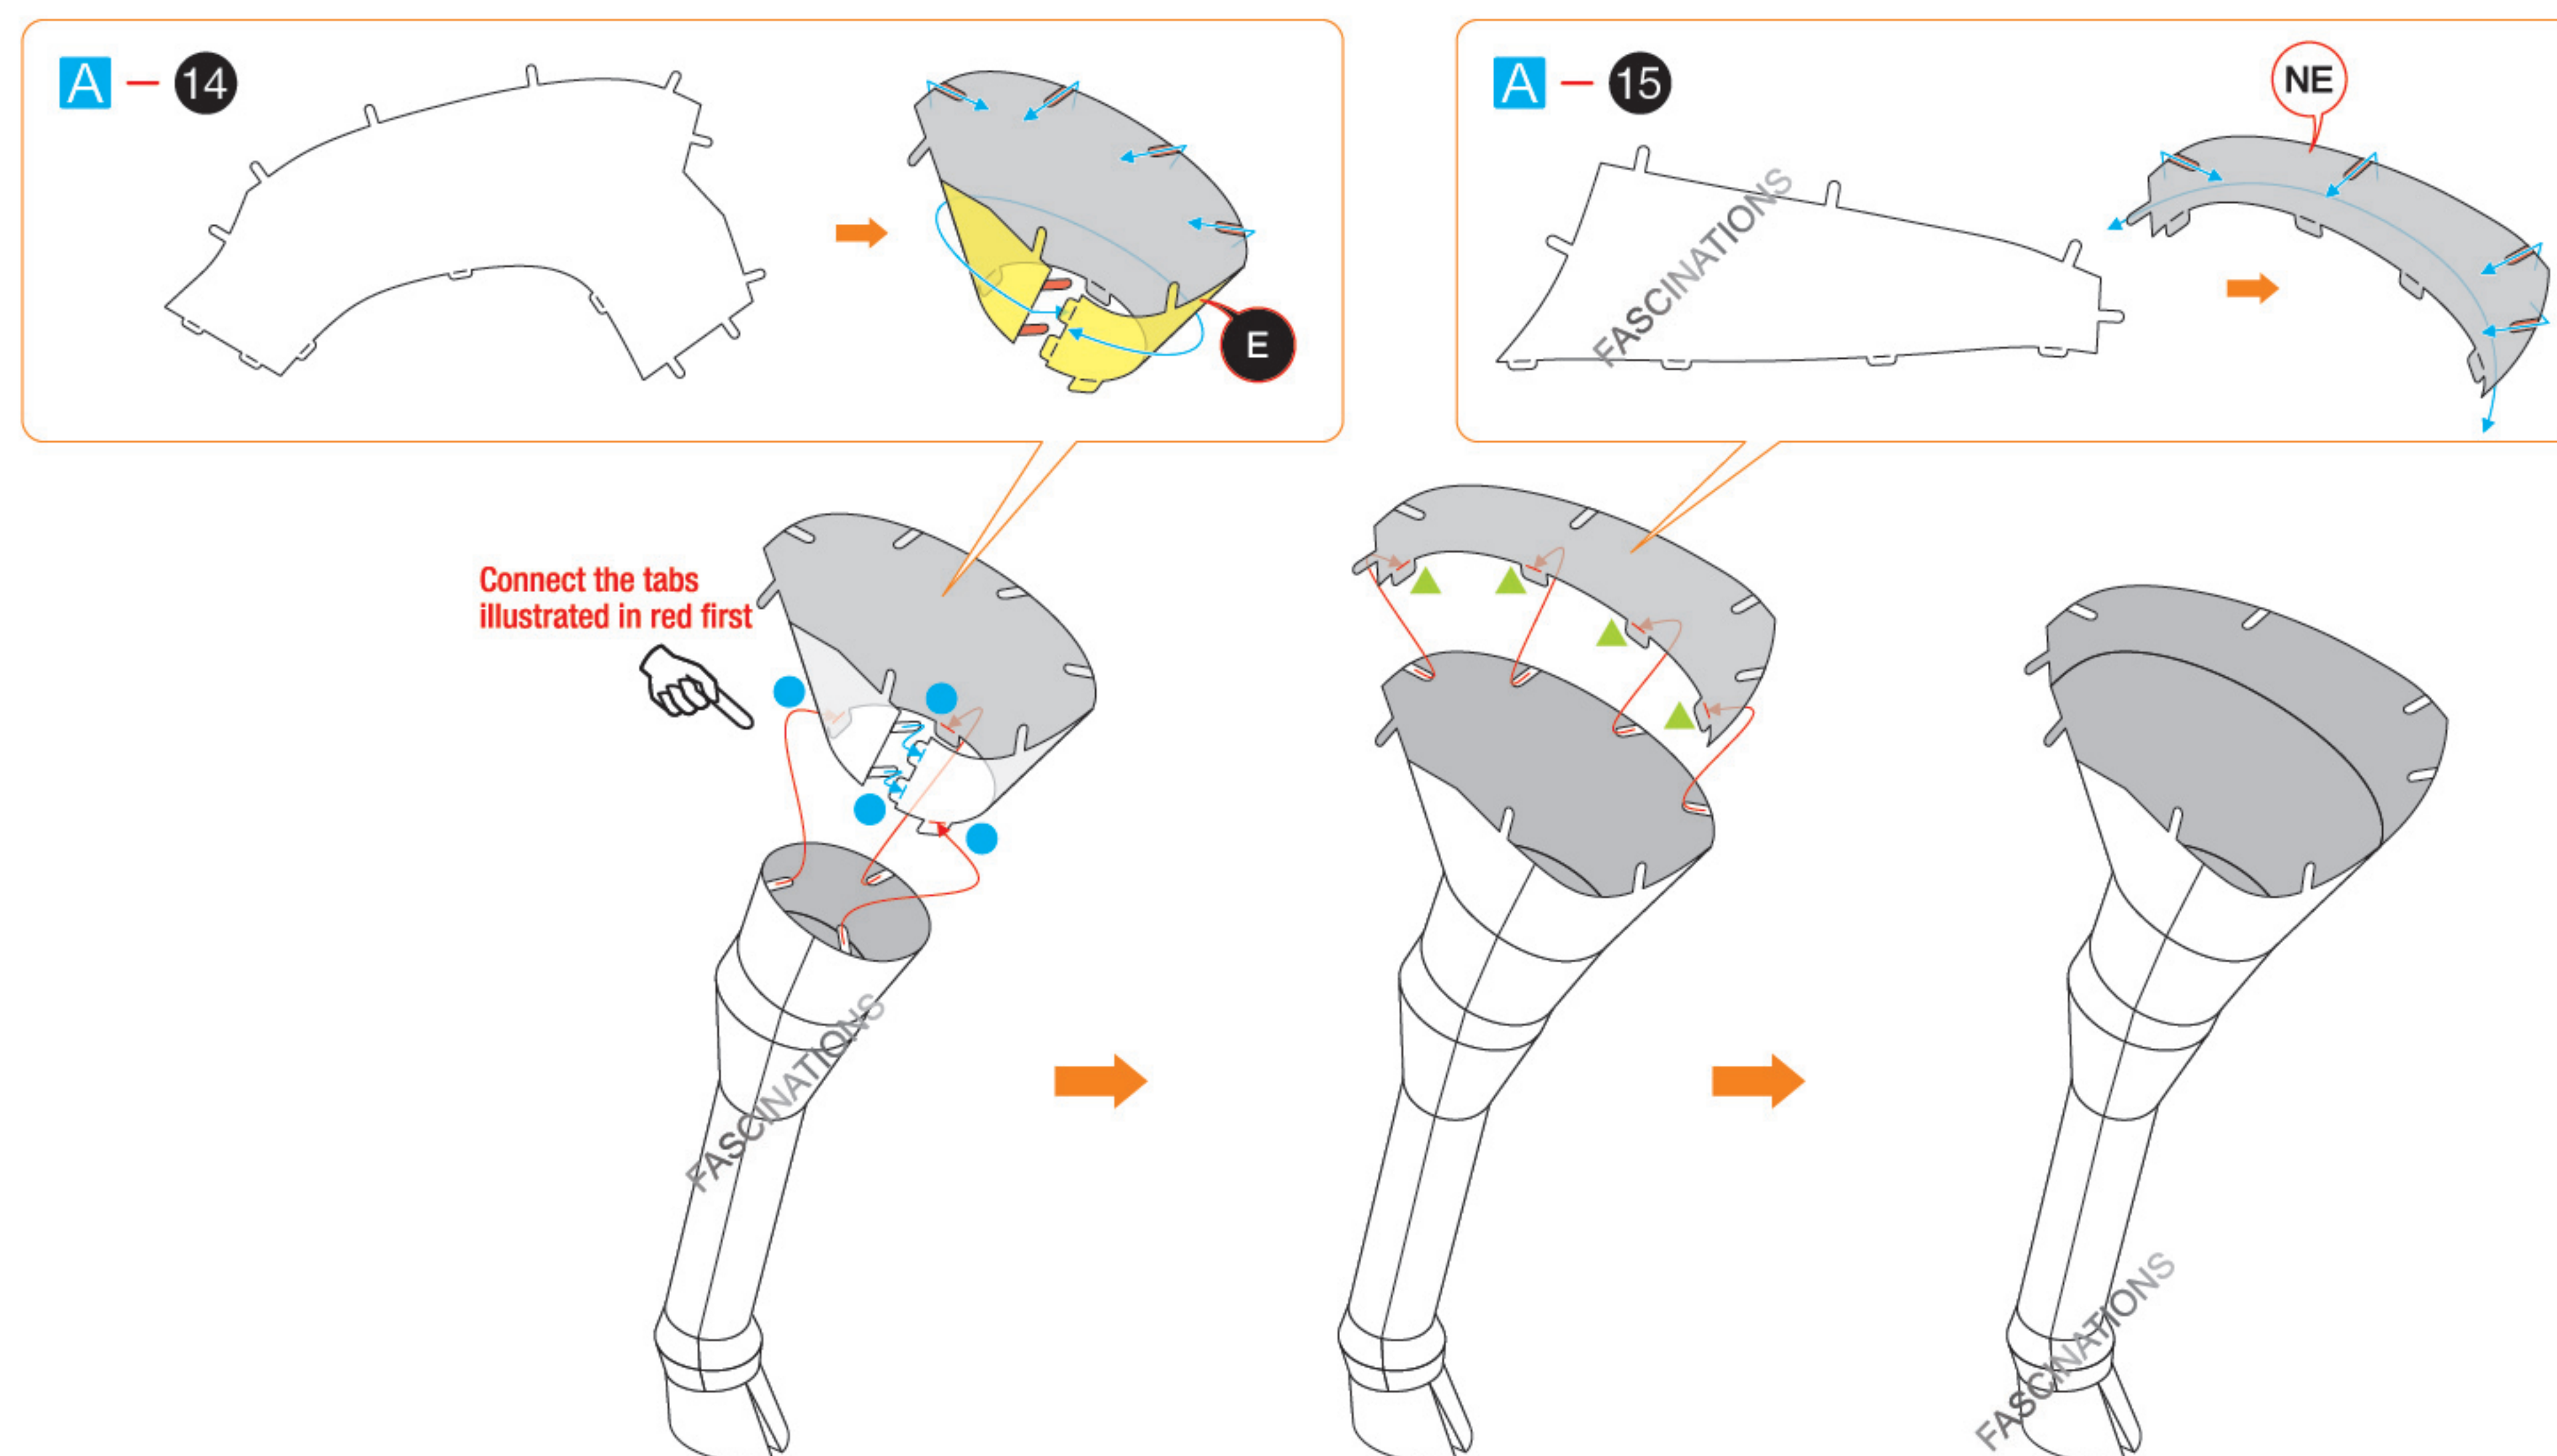
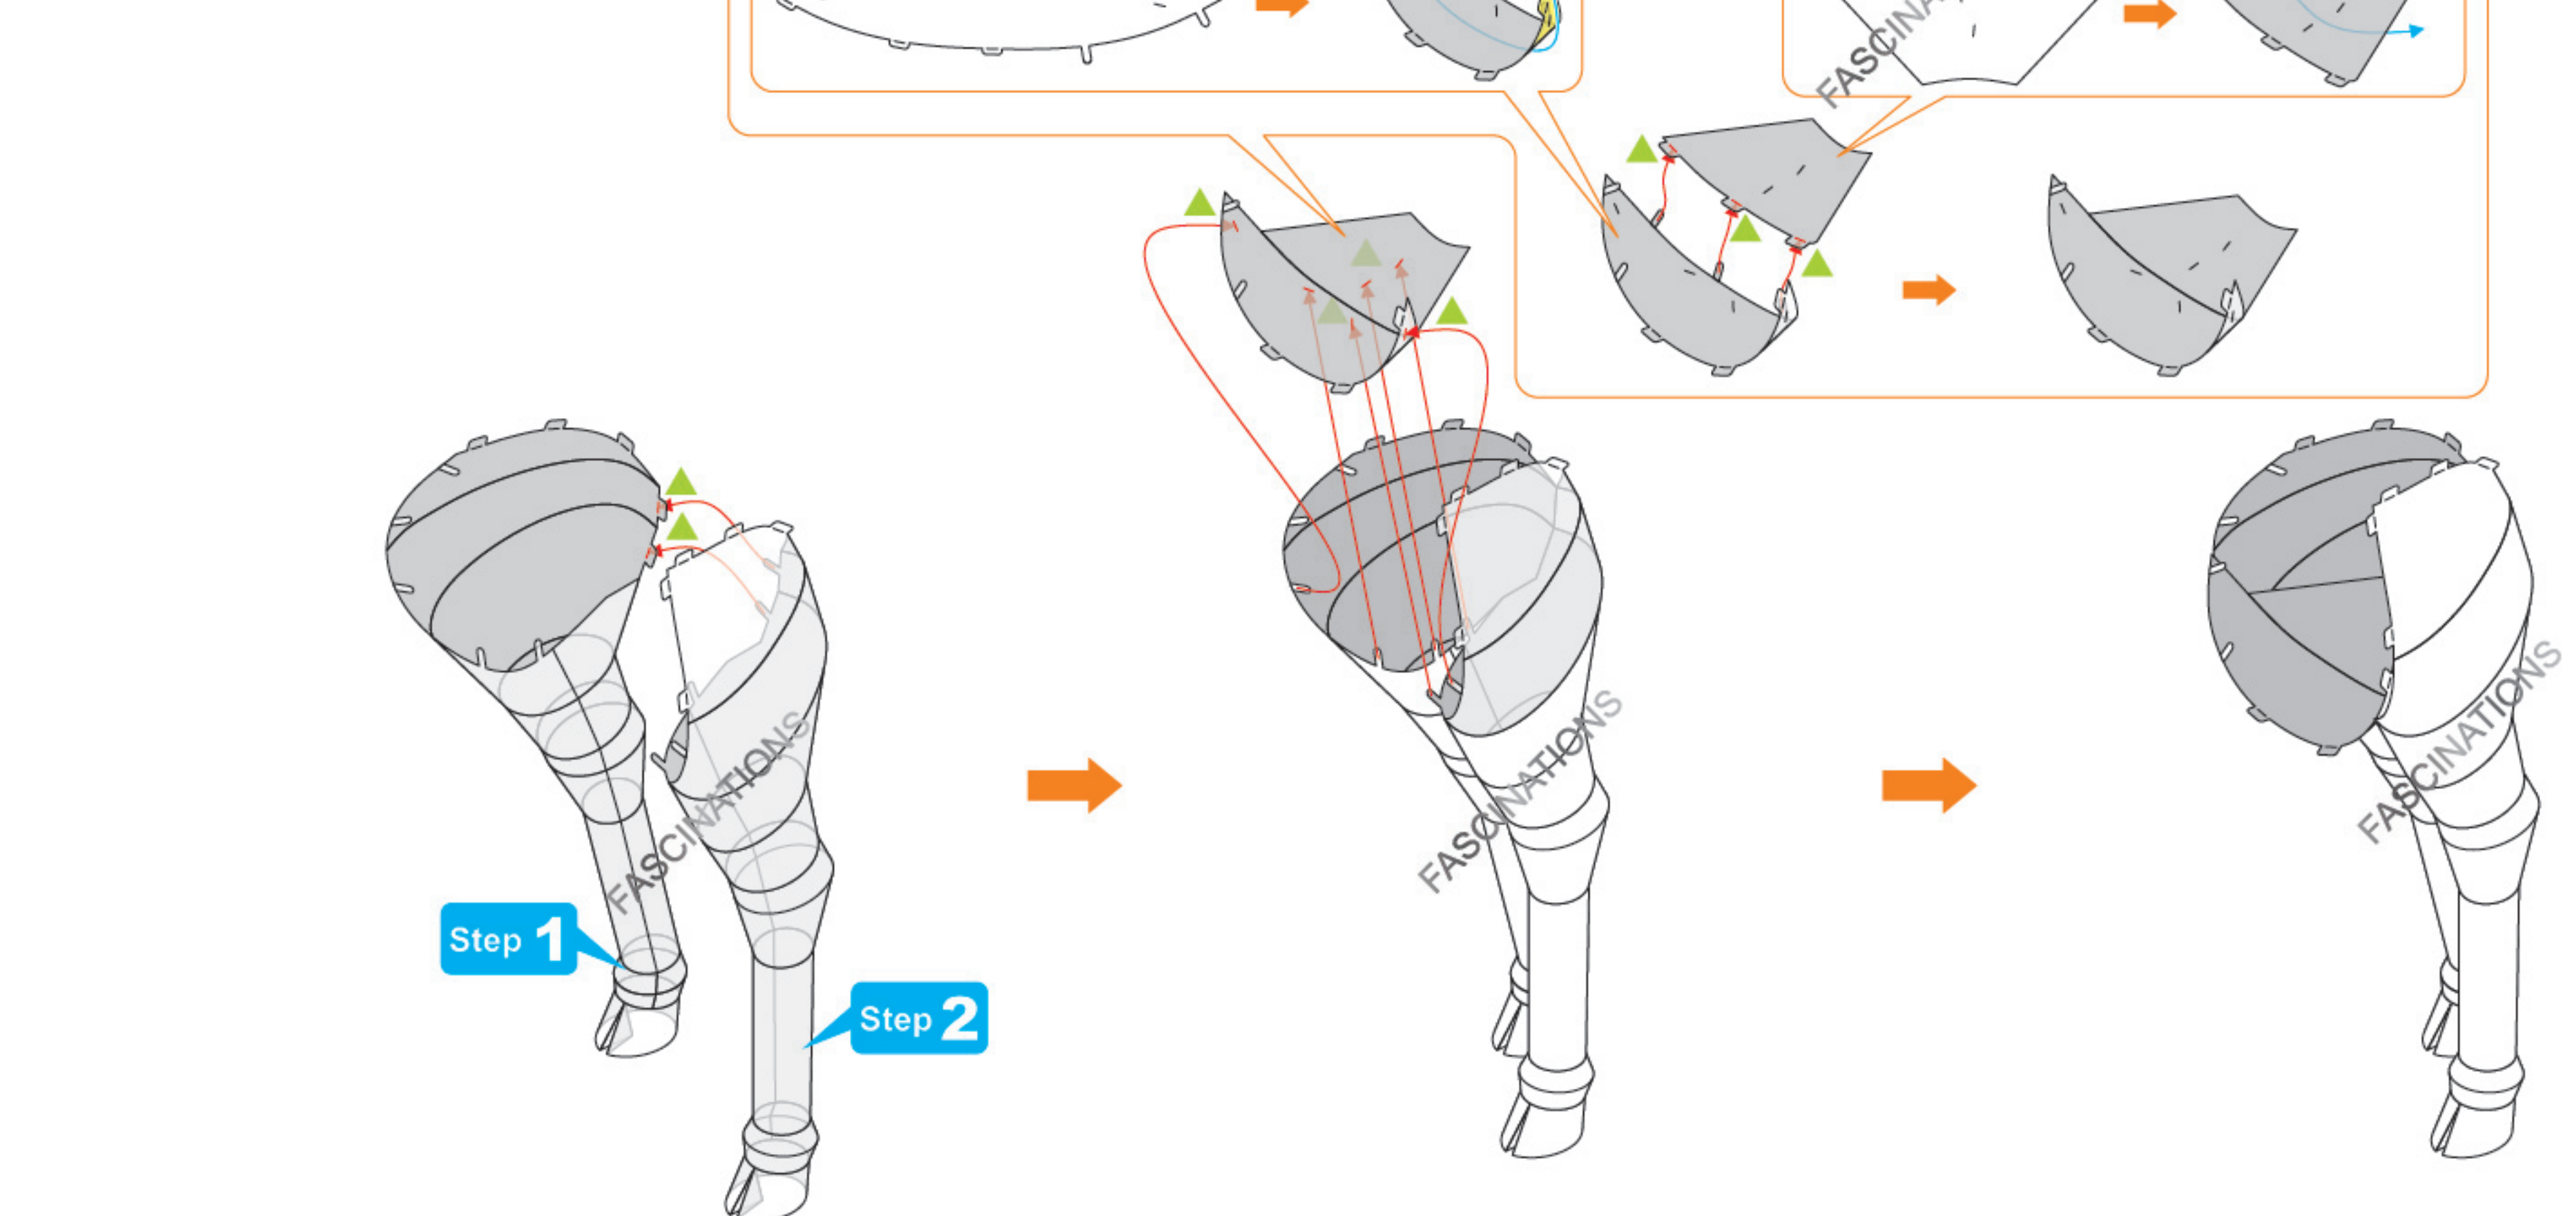




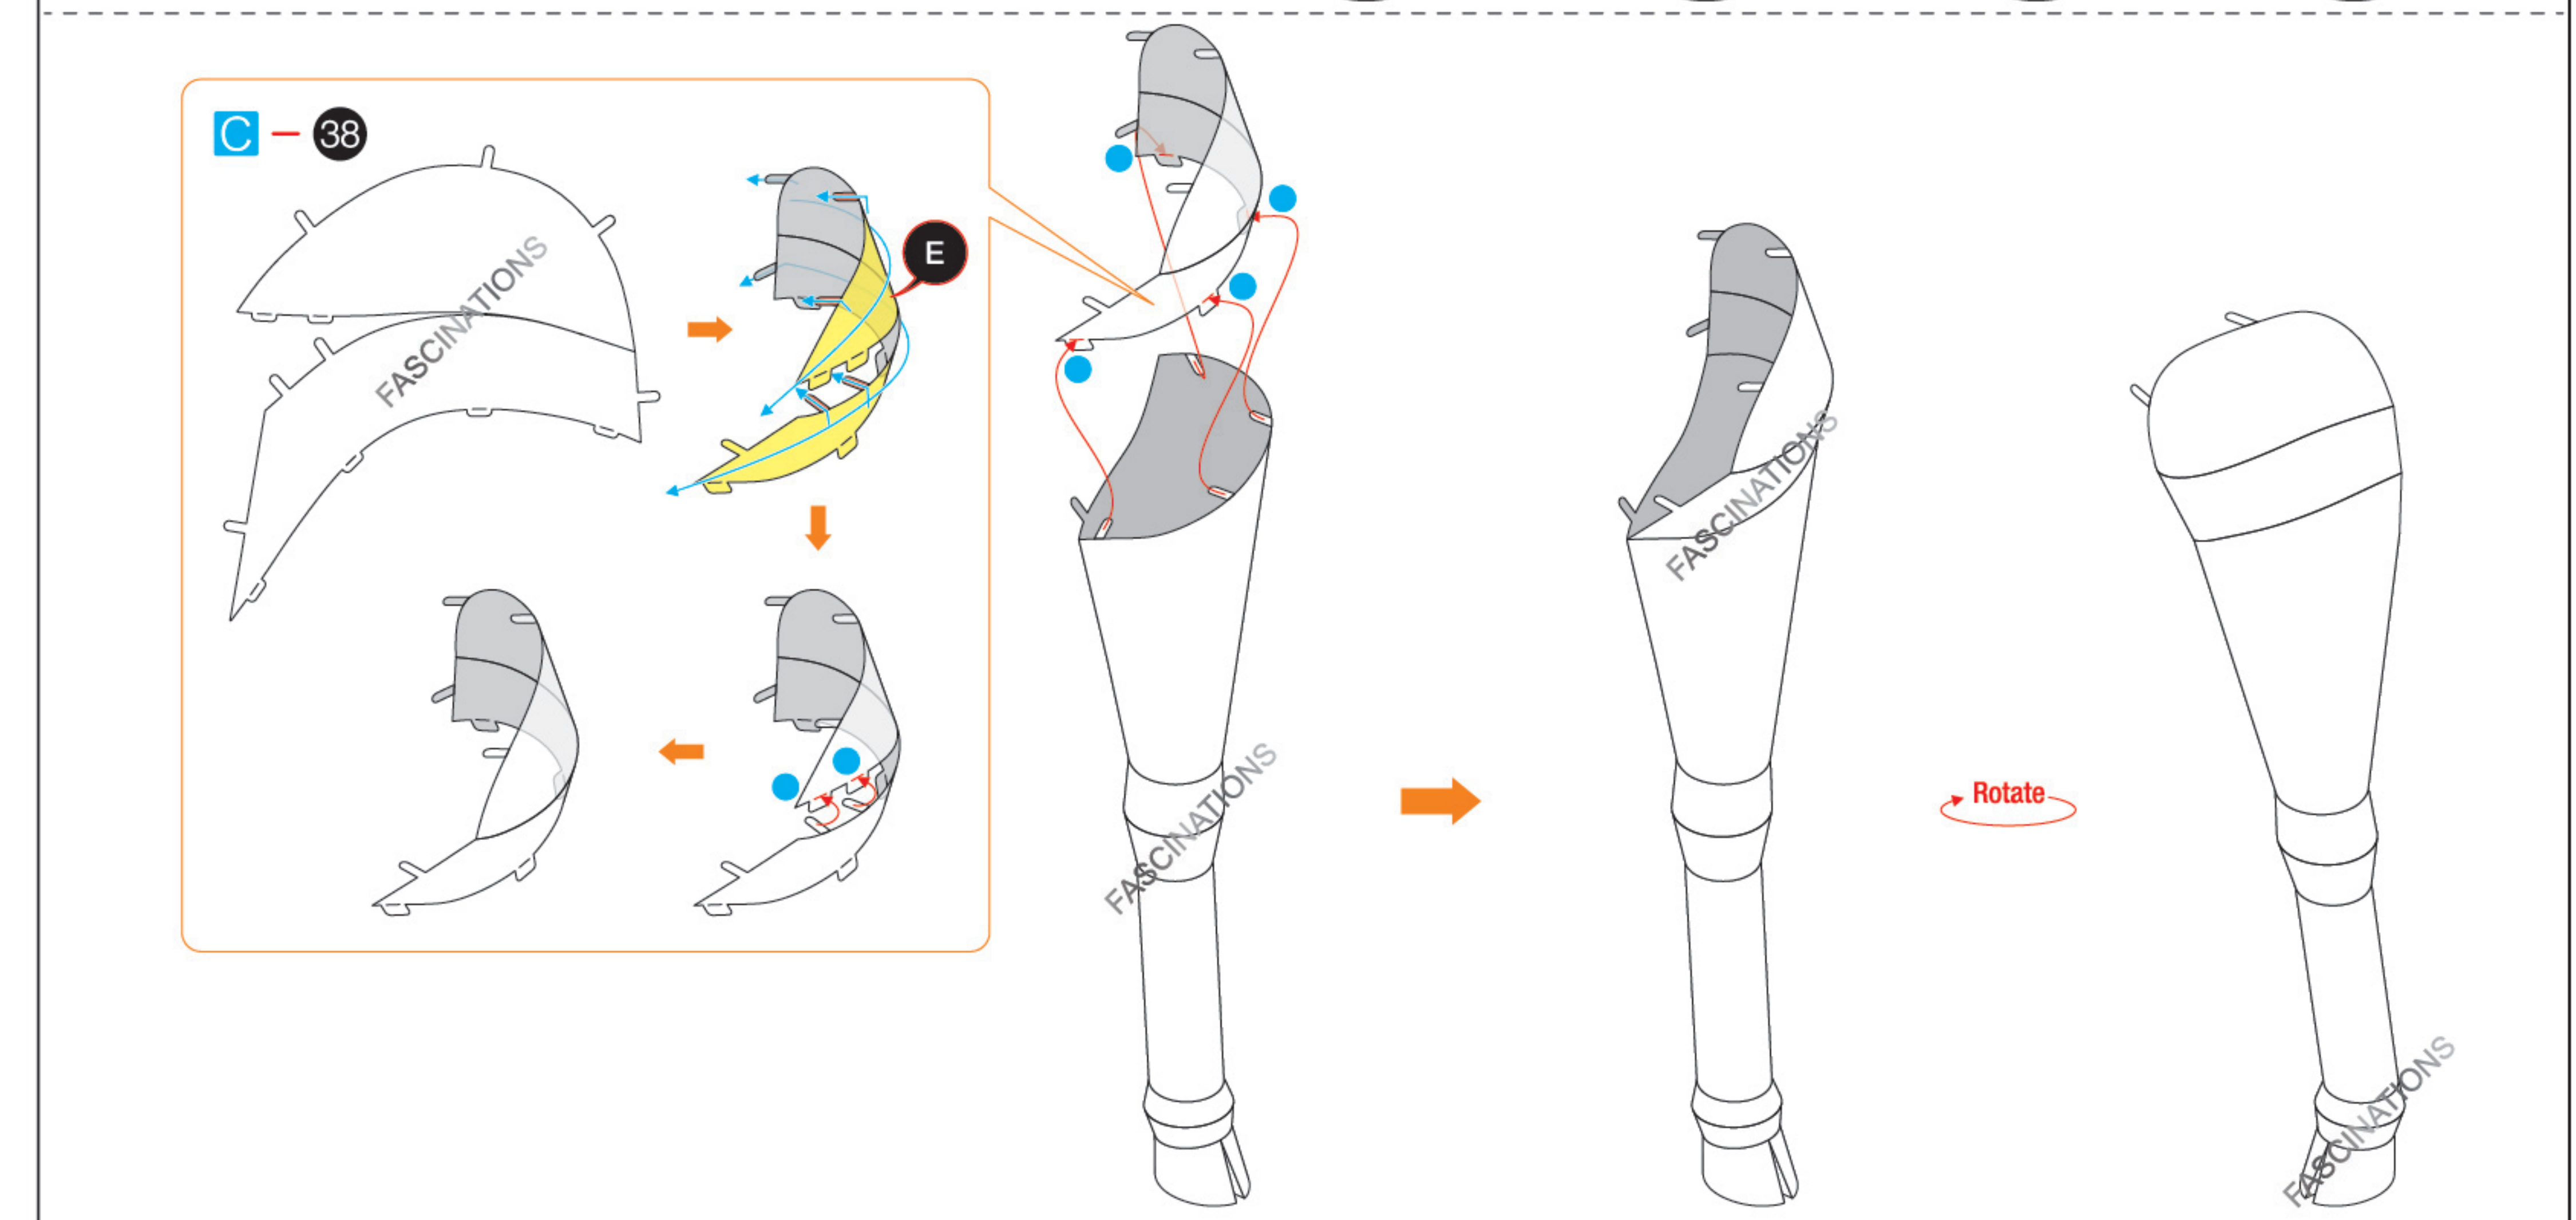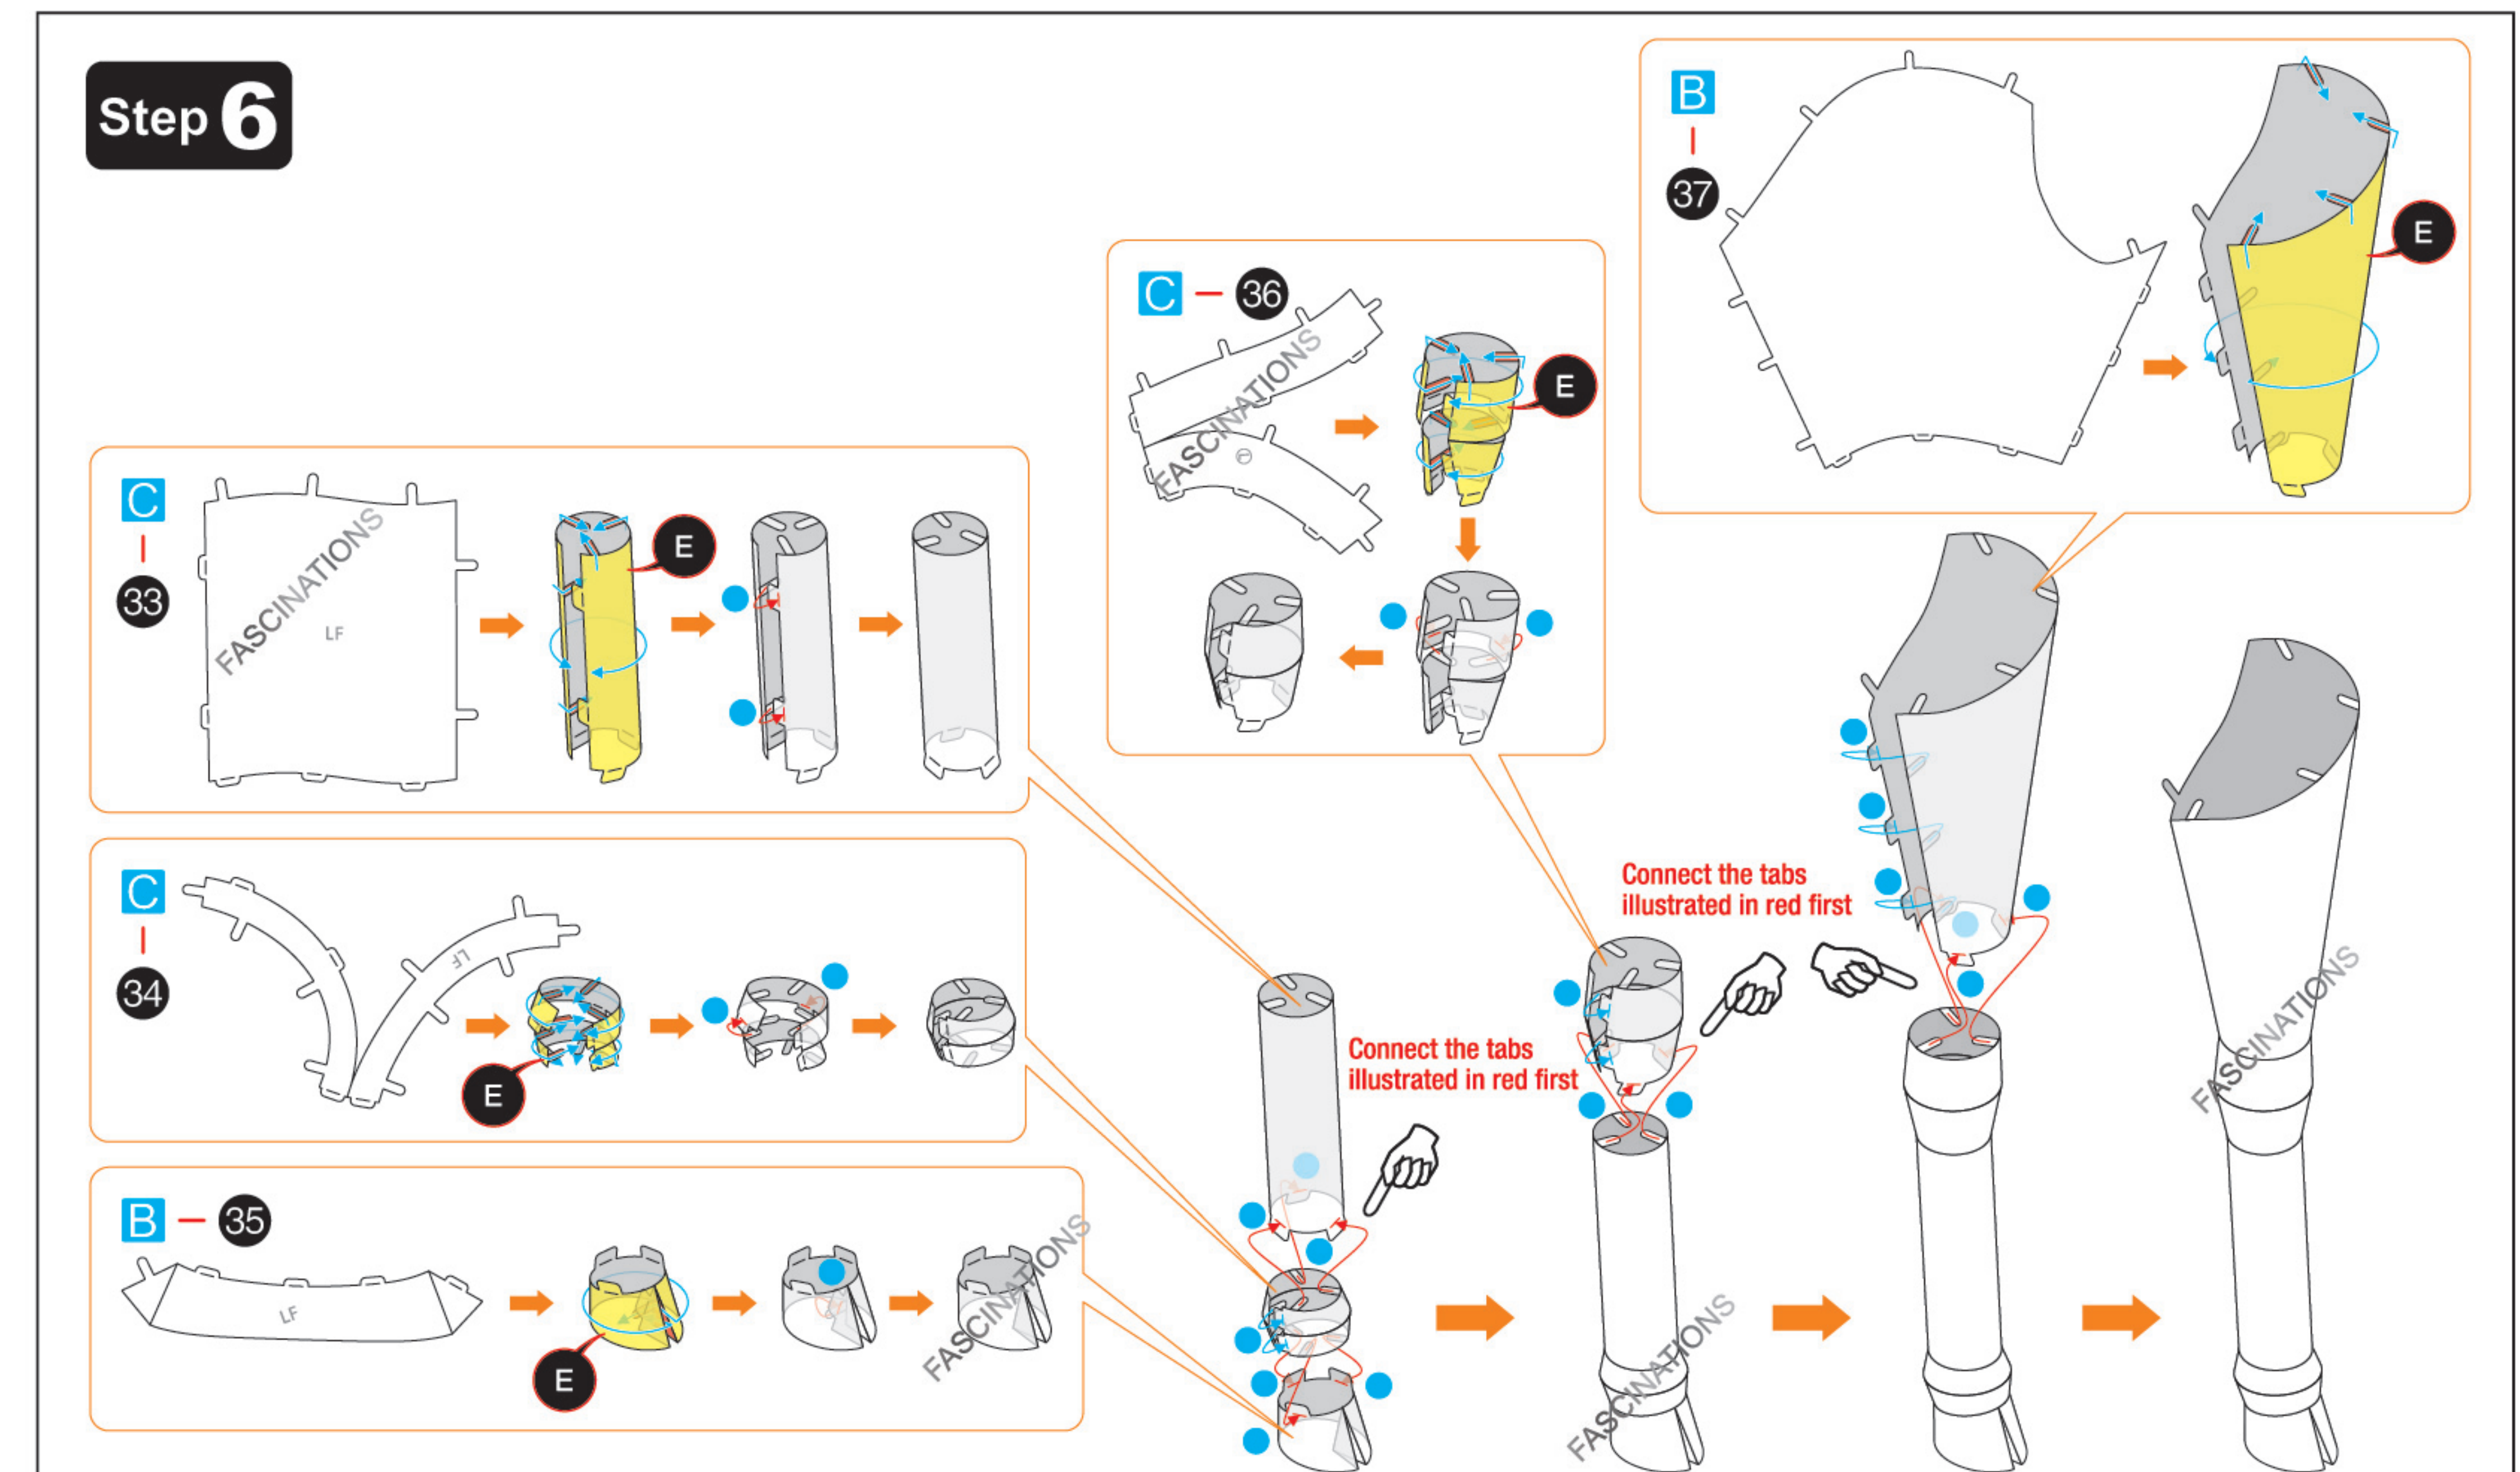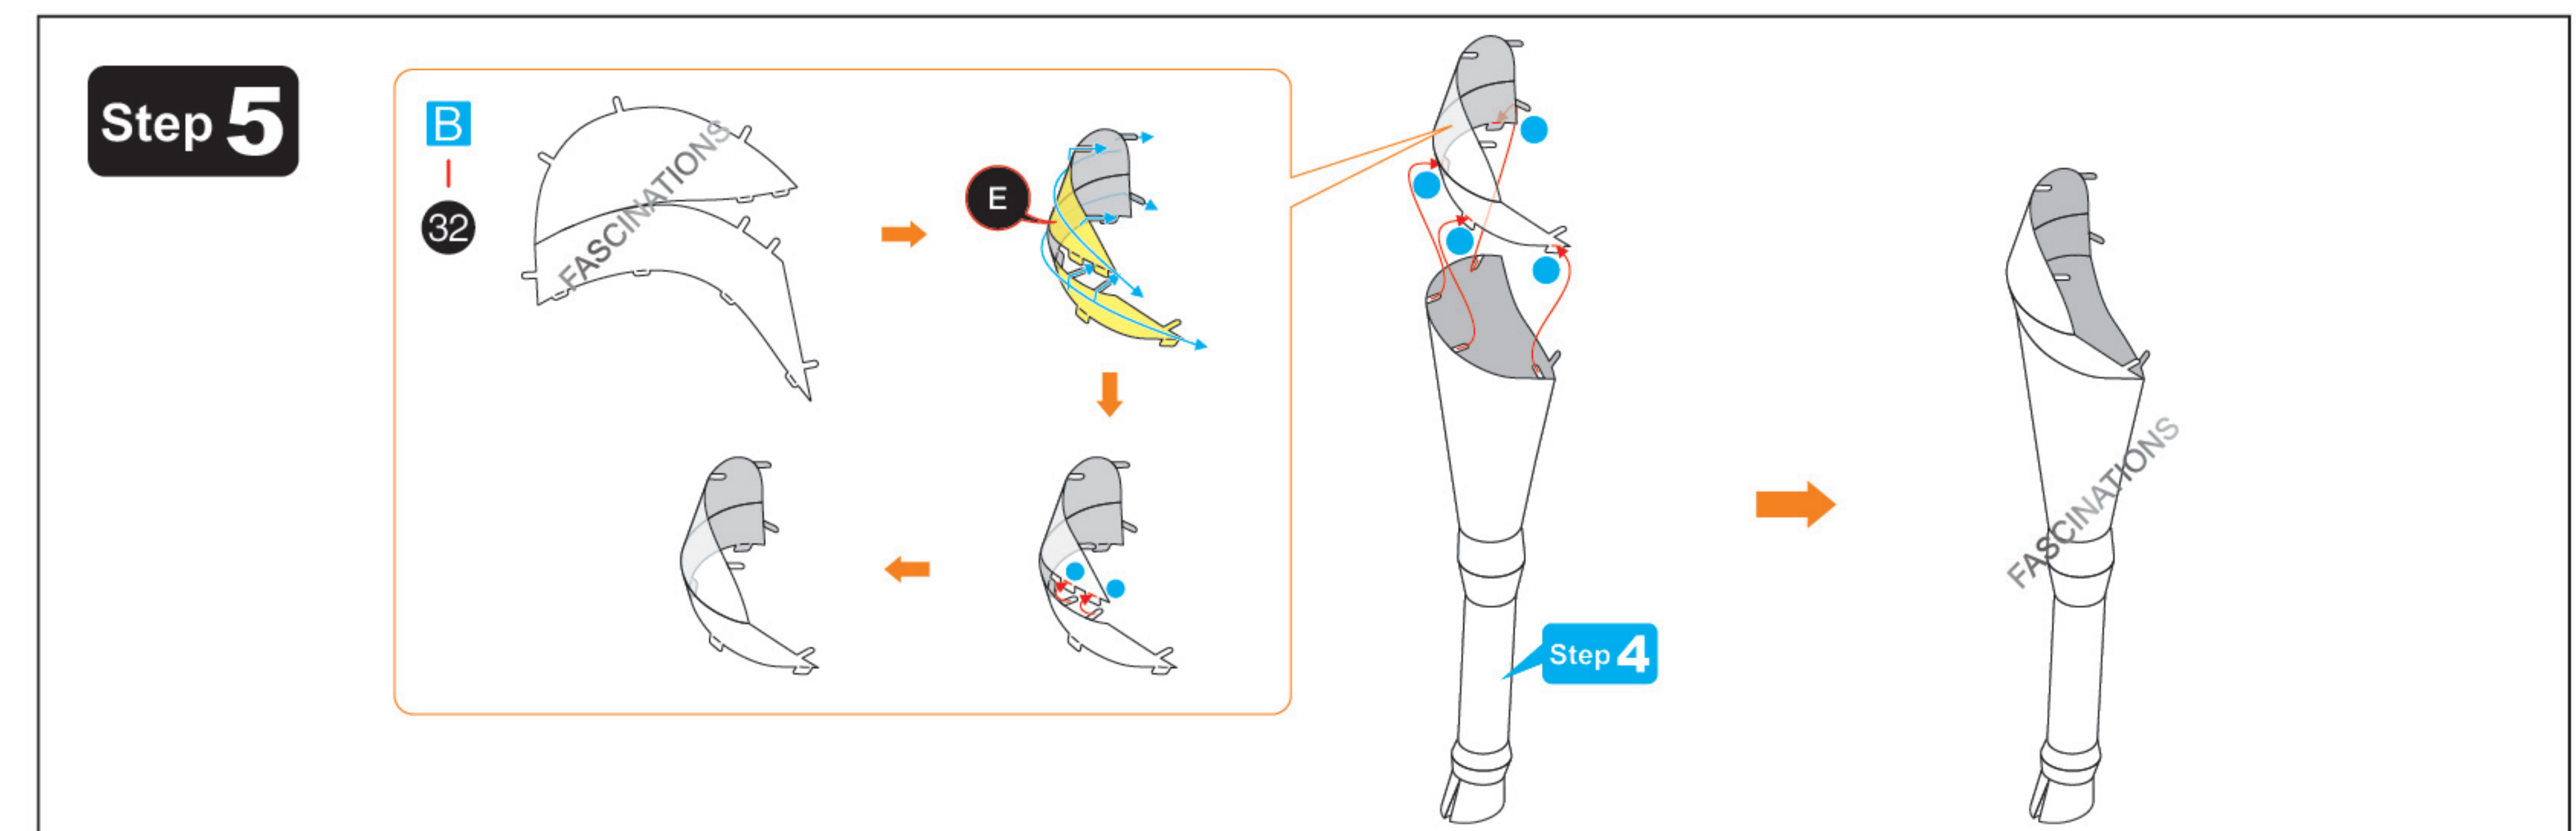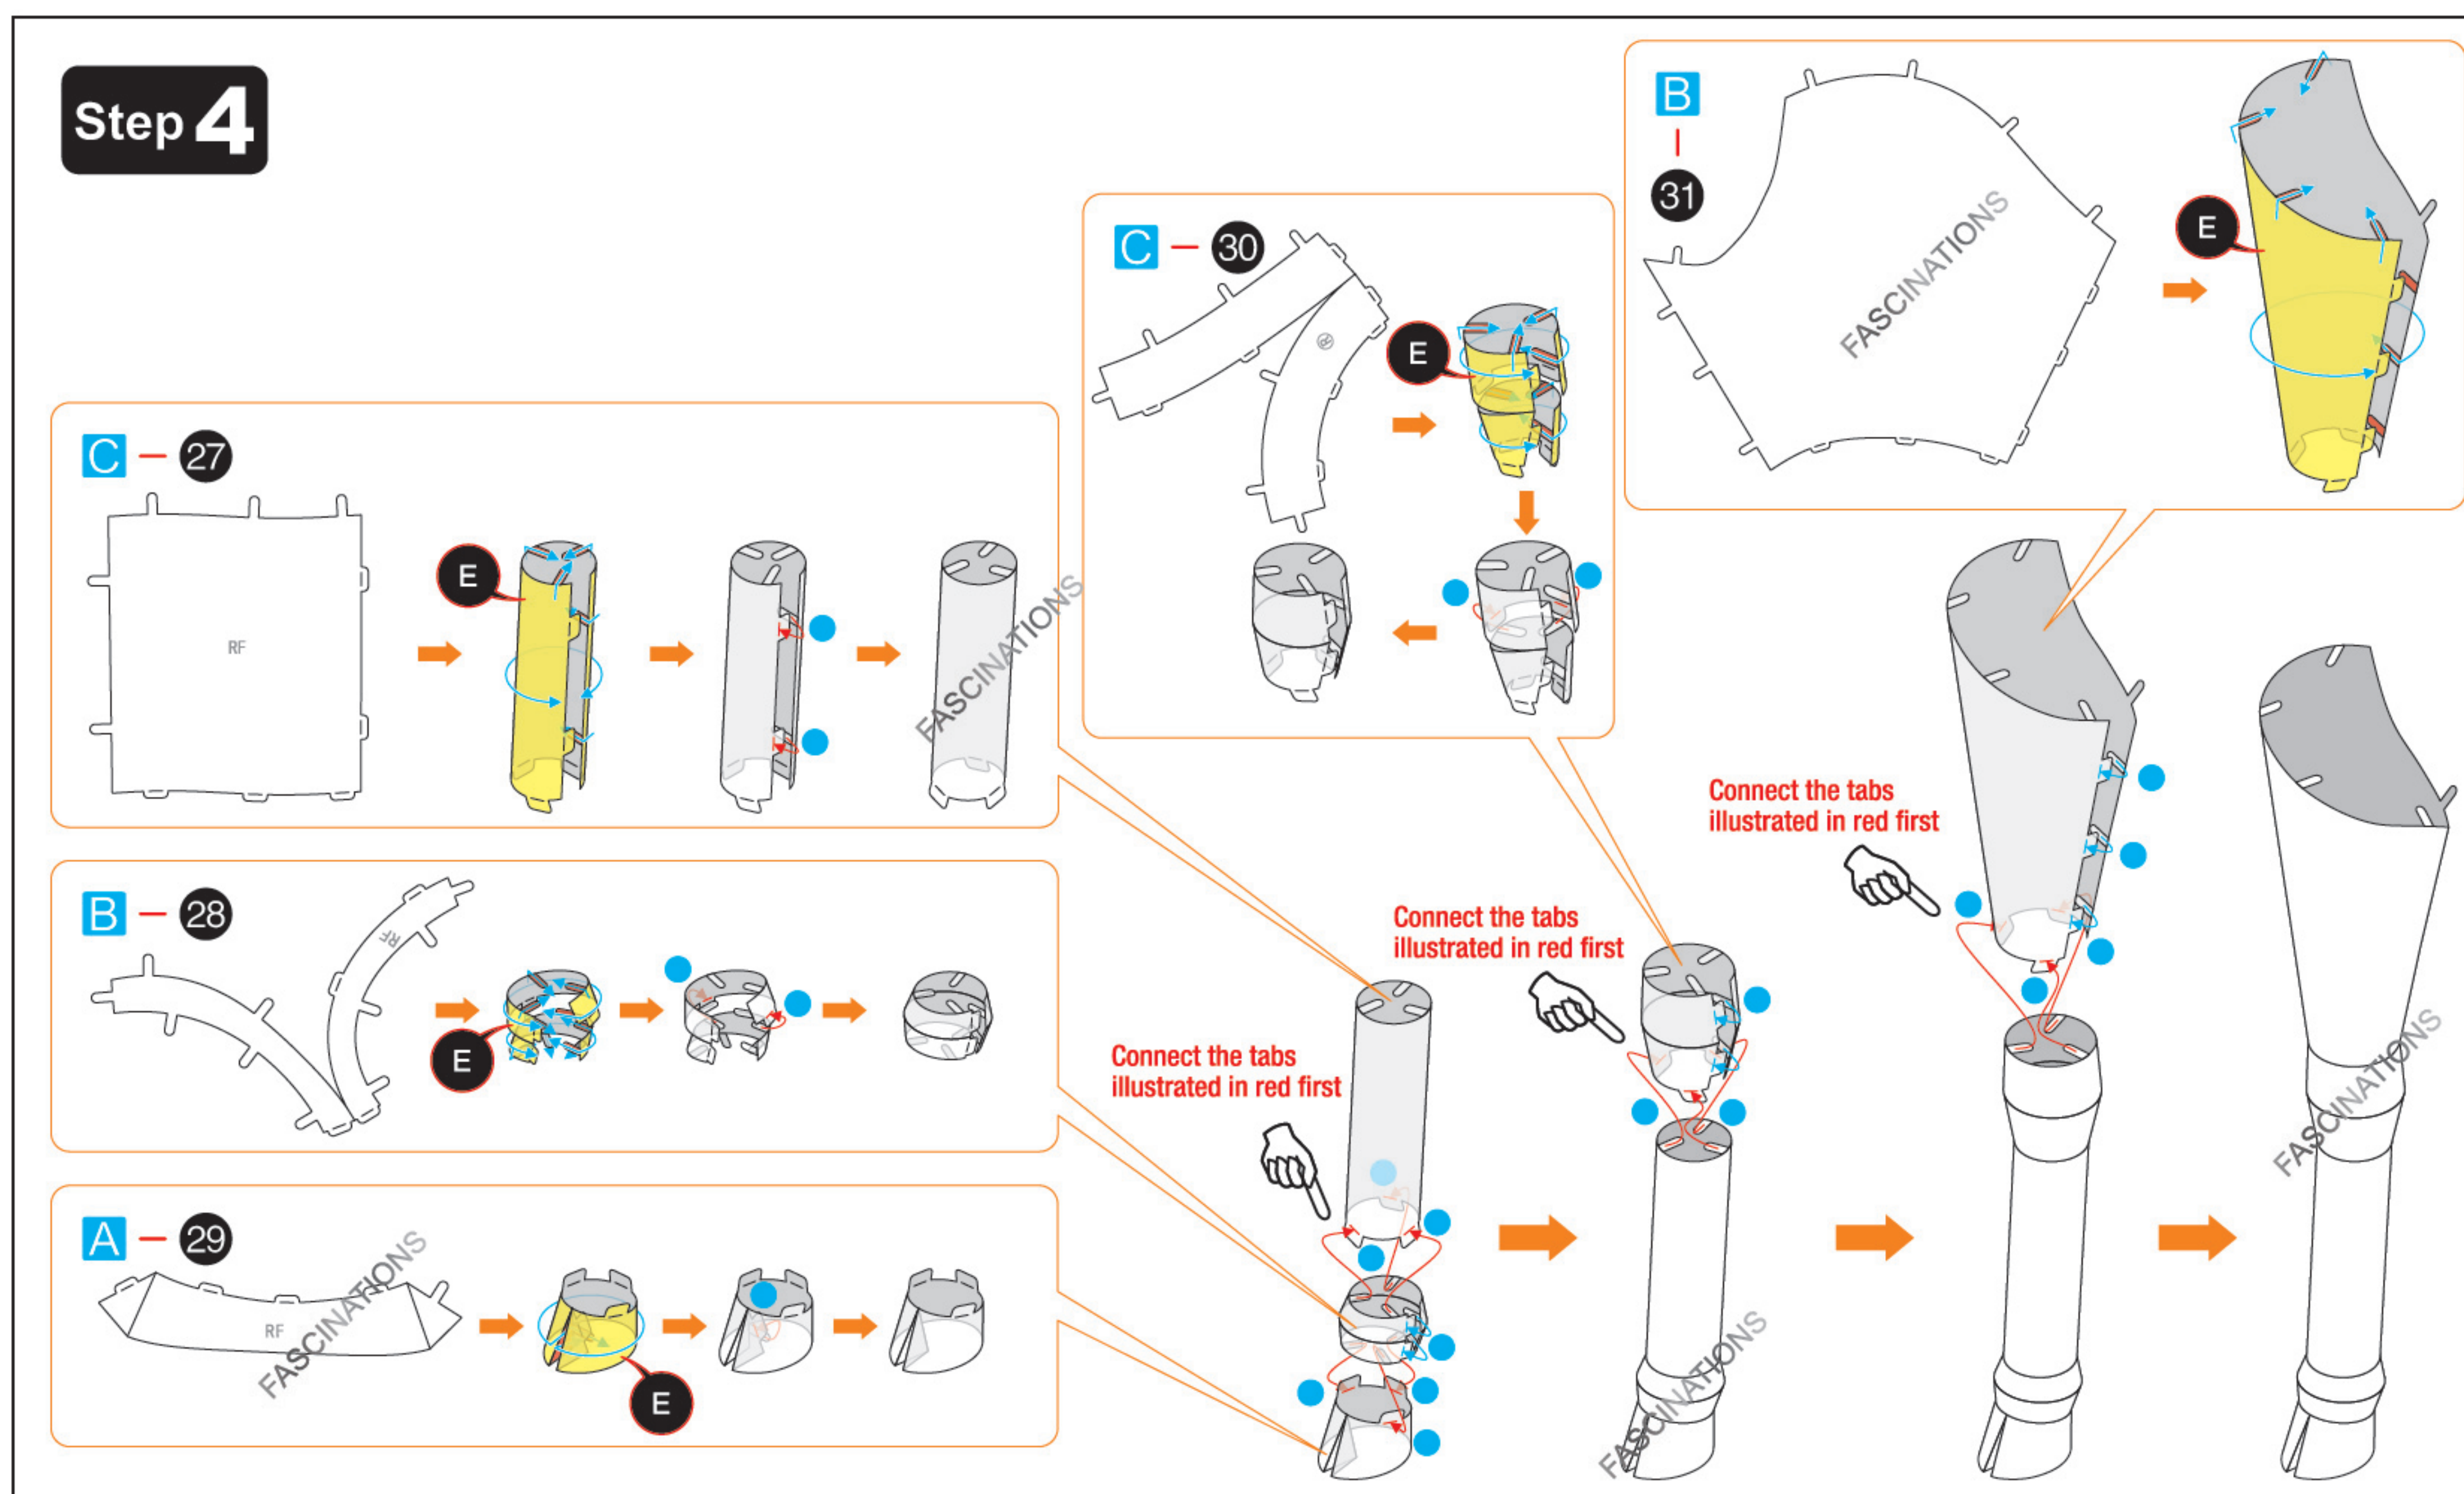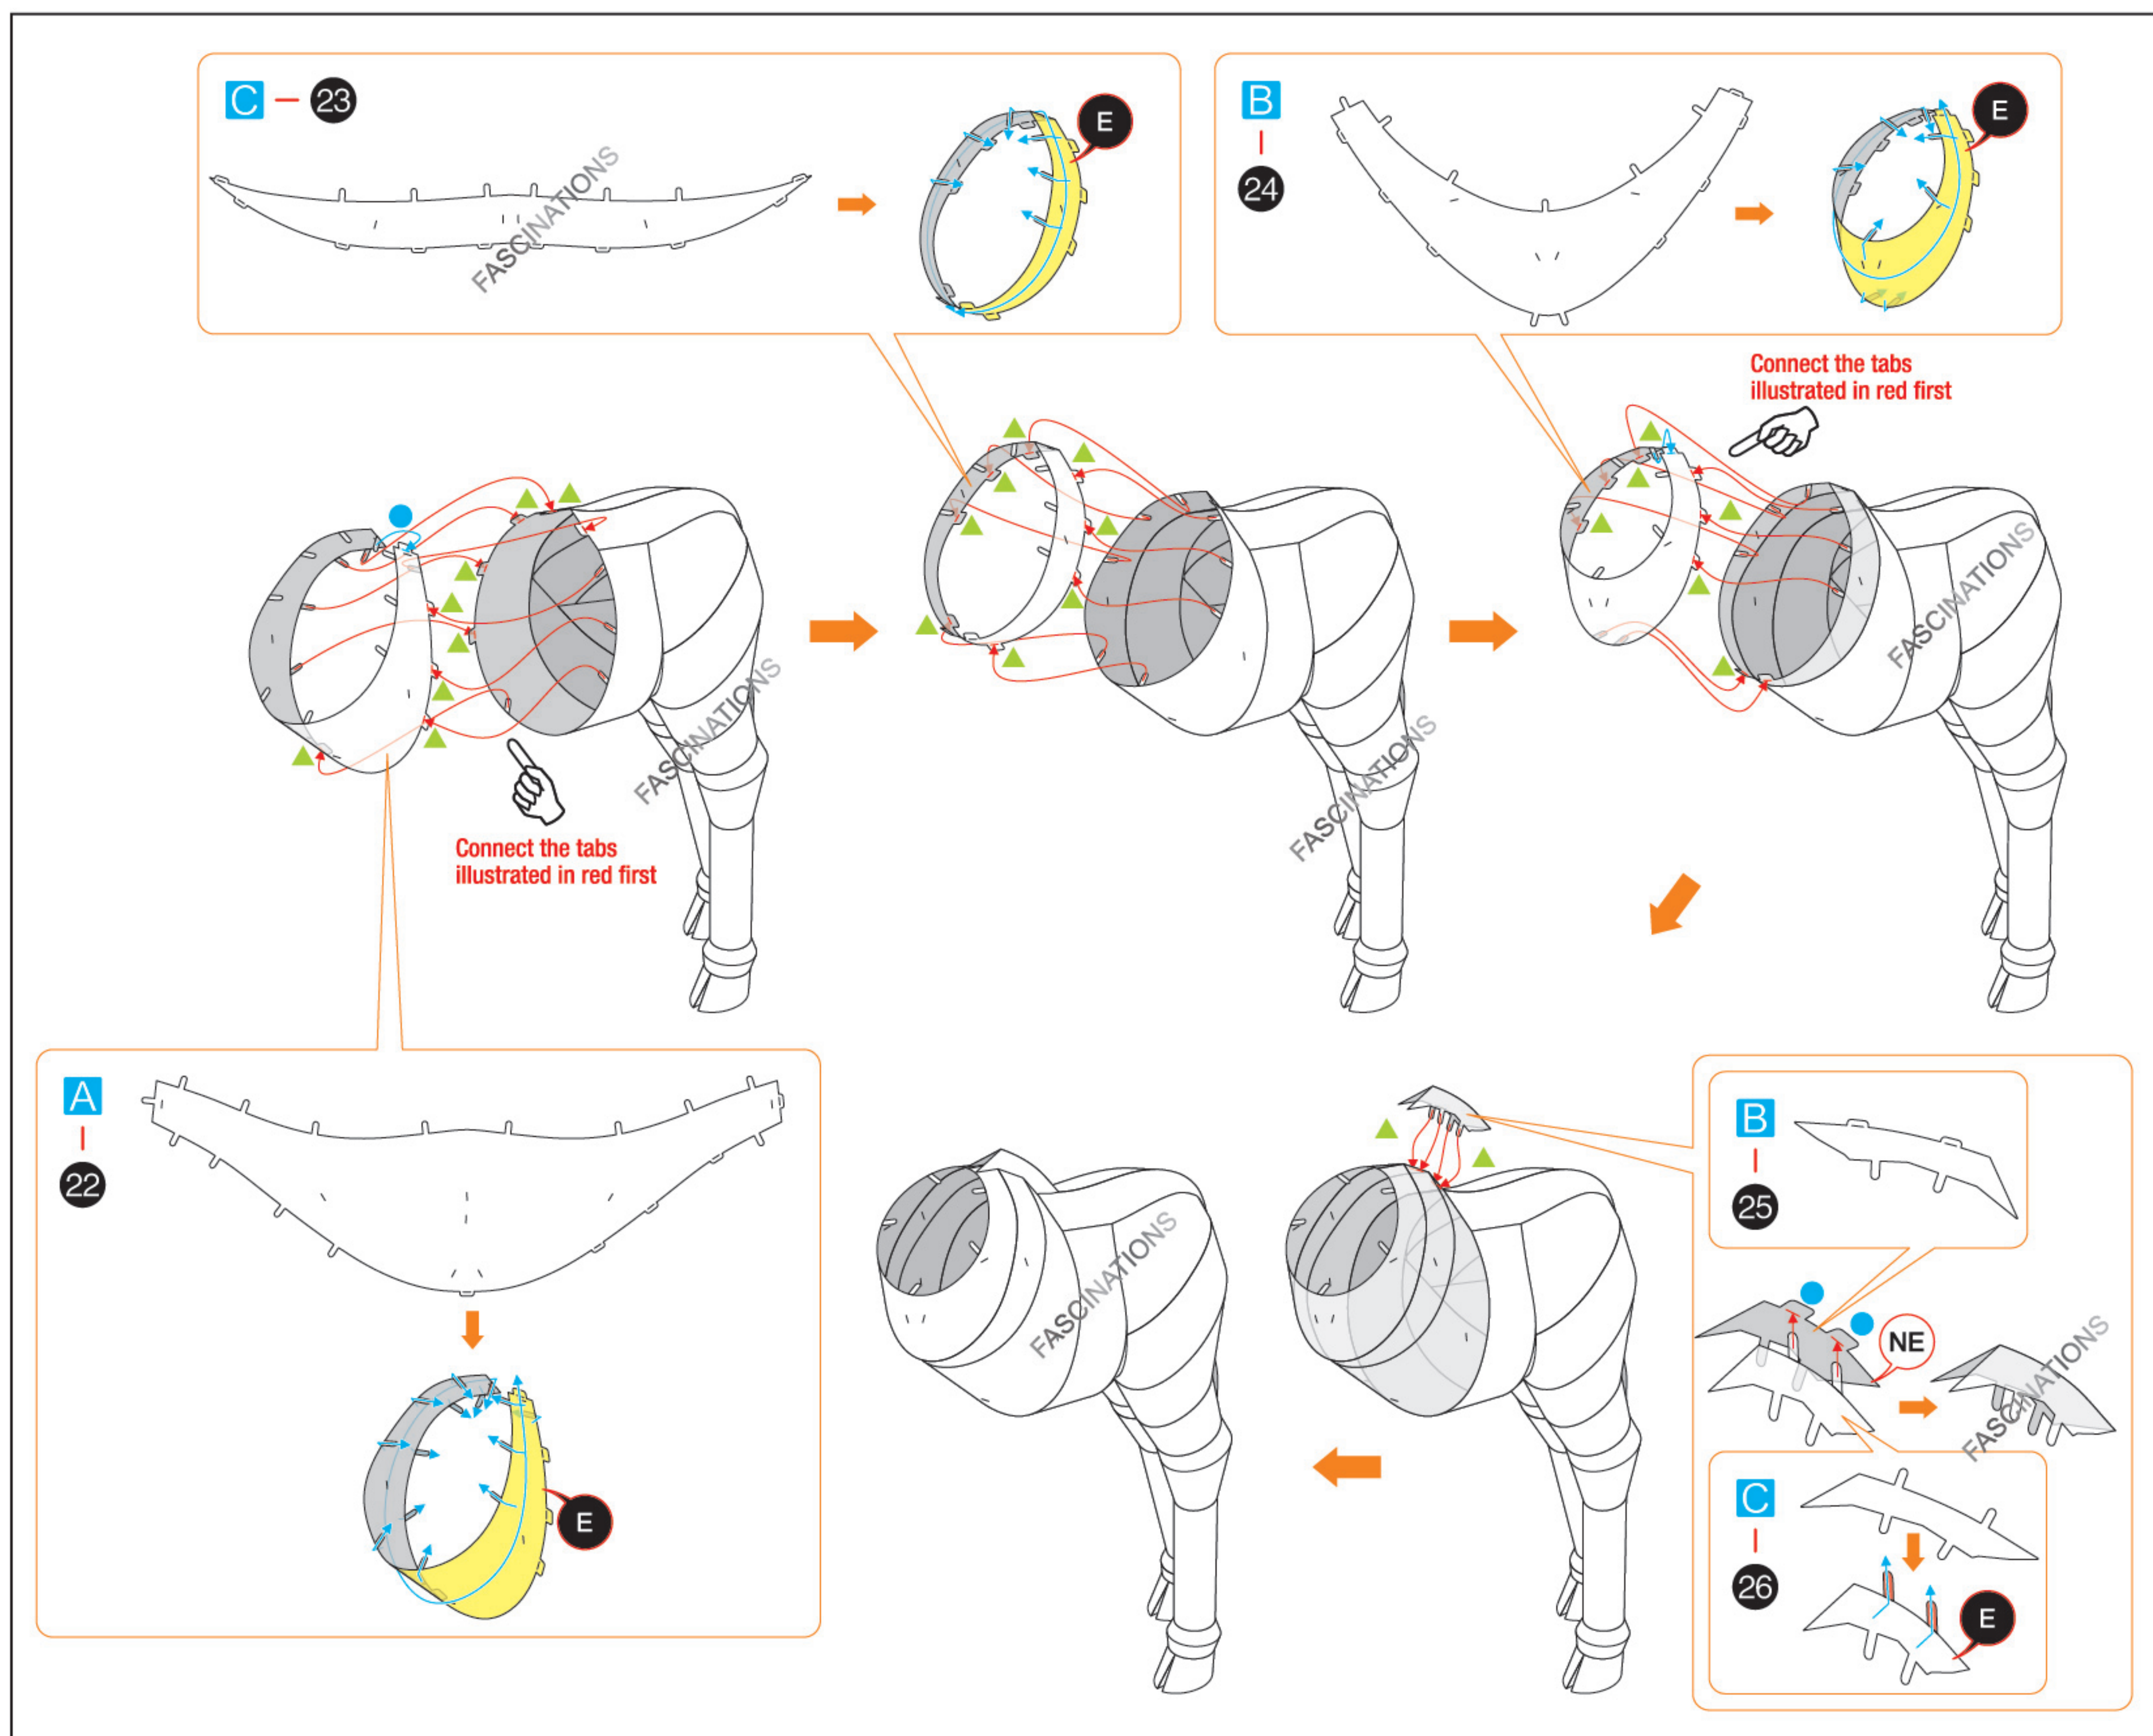





## Step 7

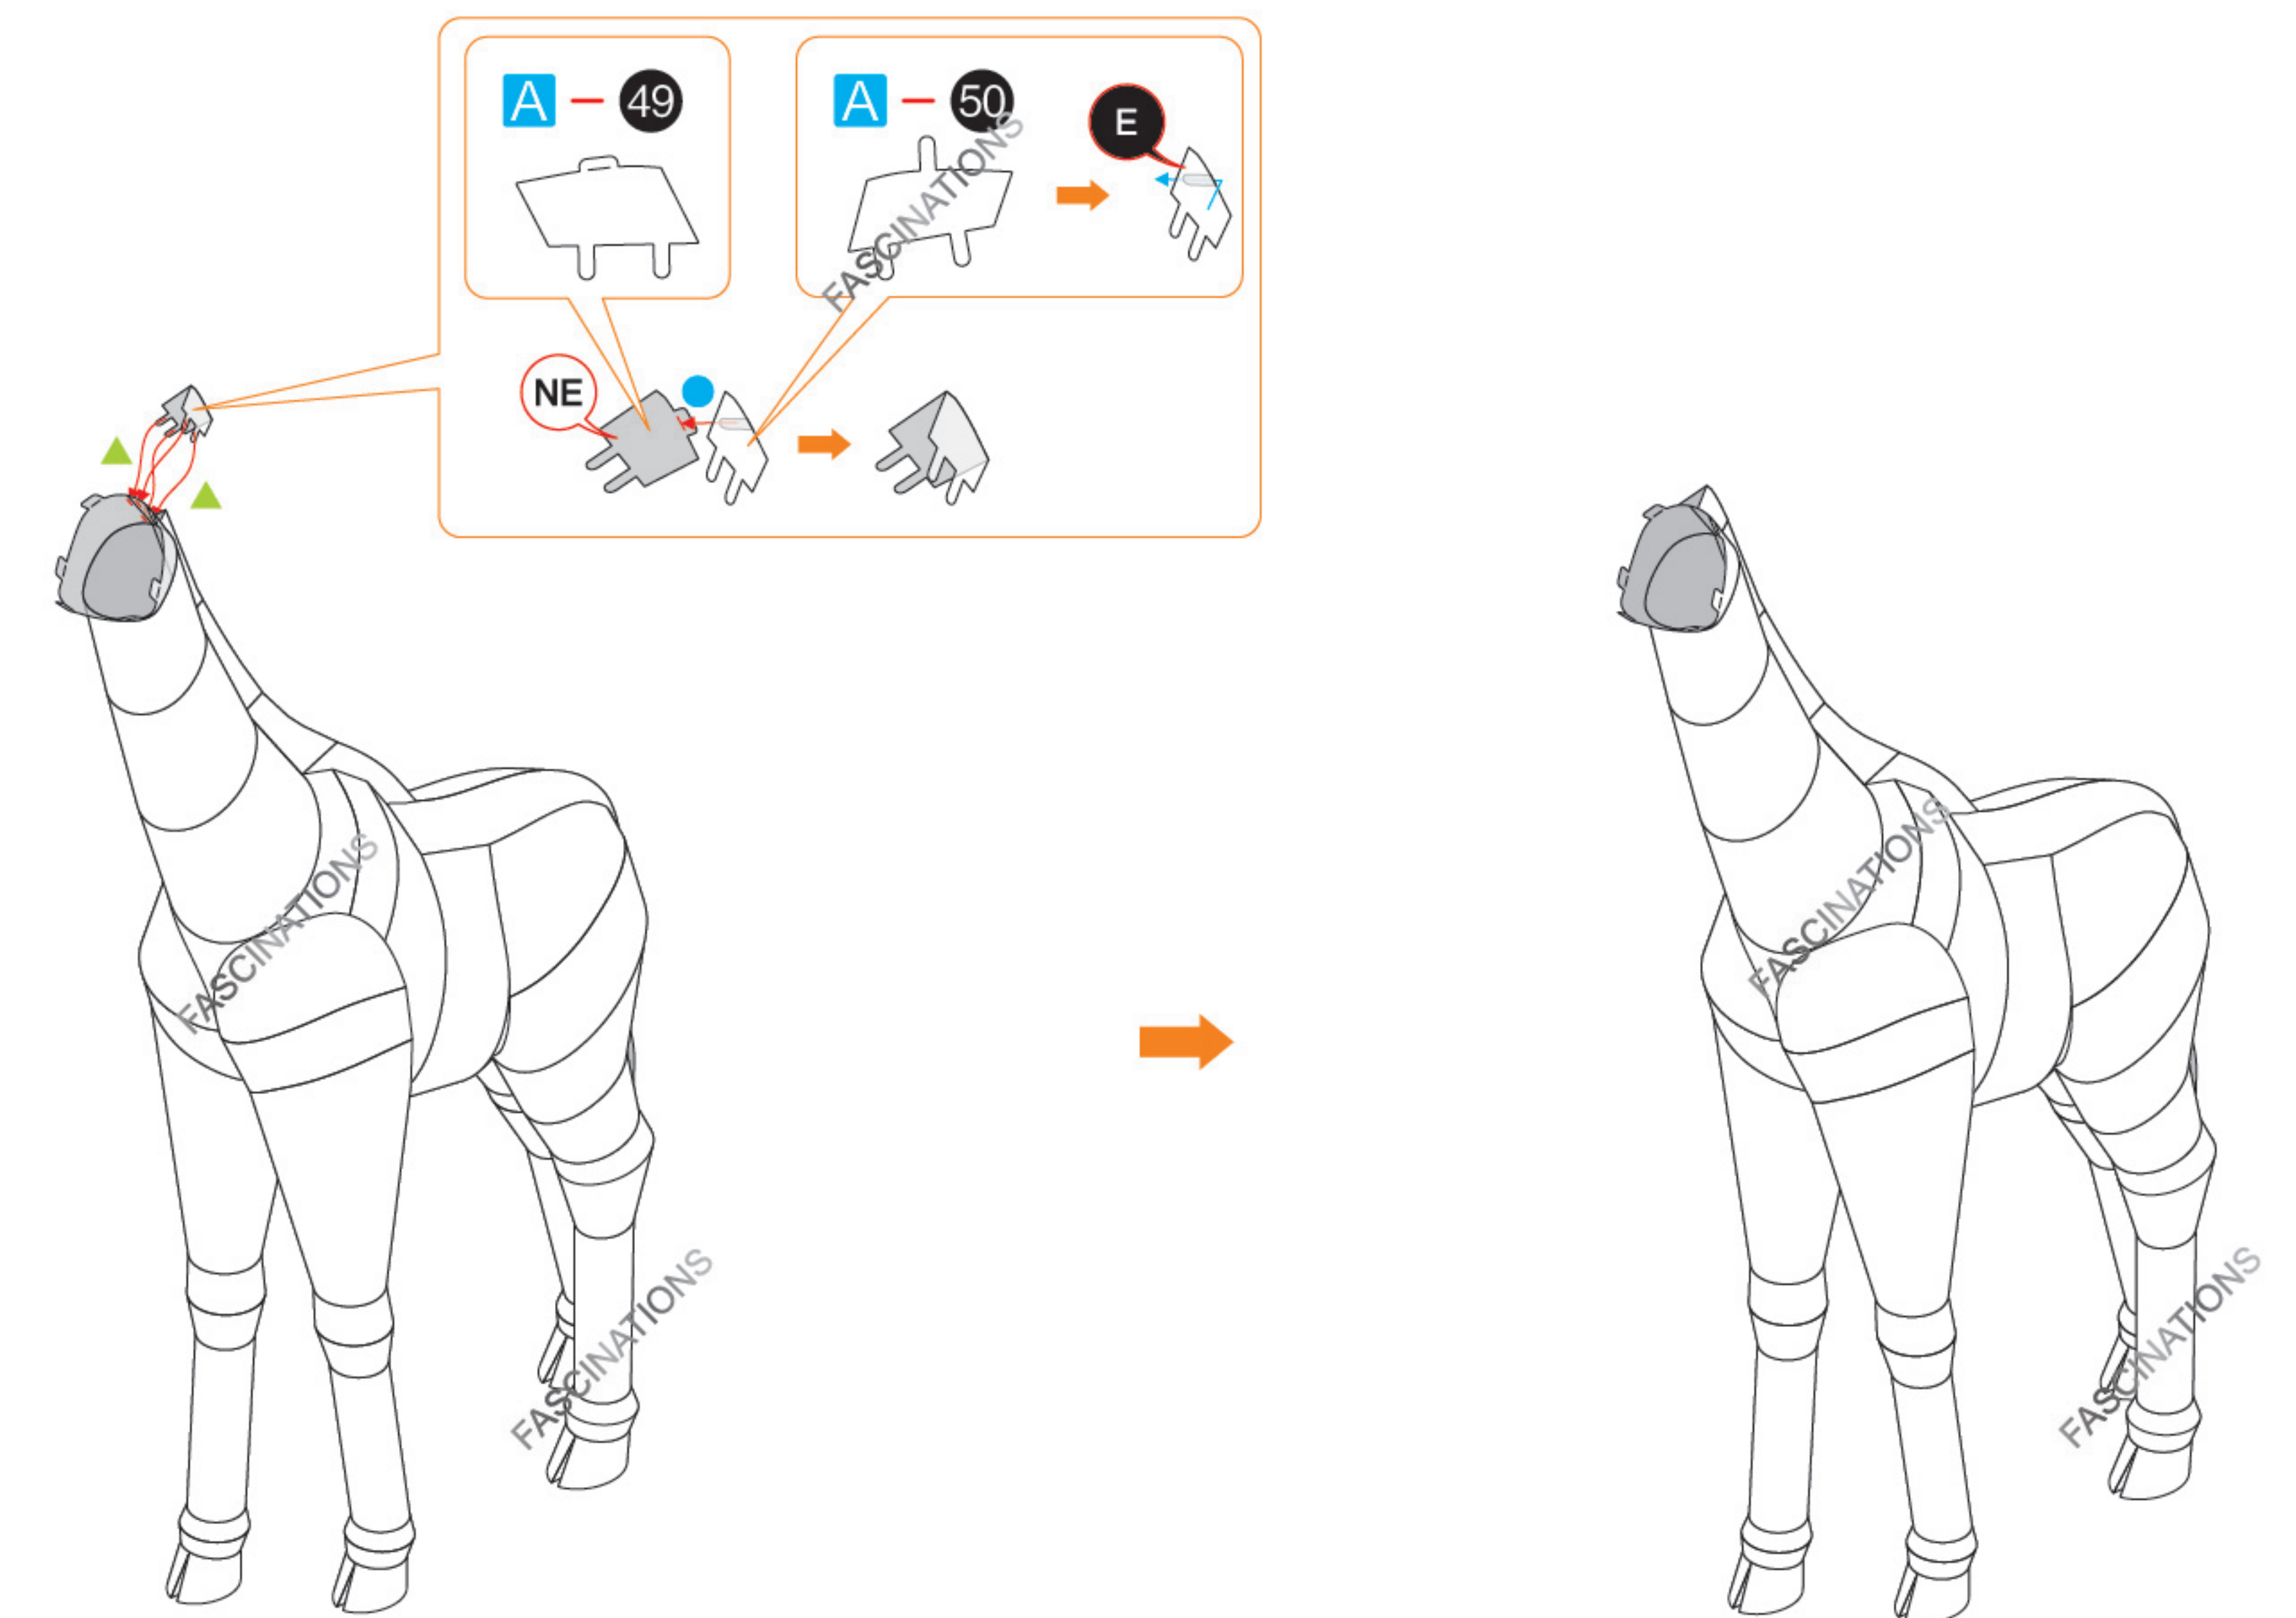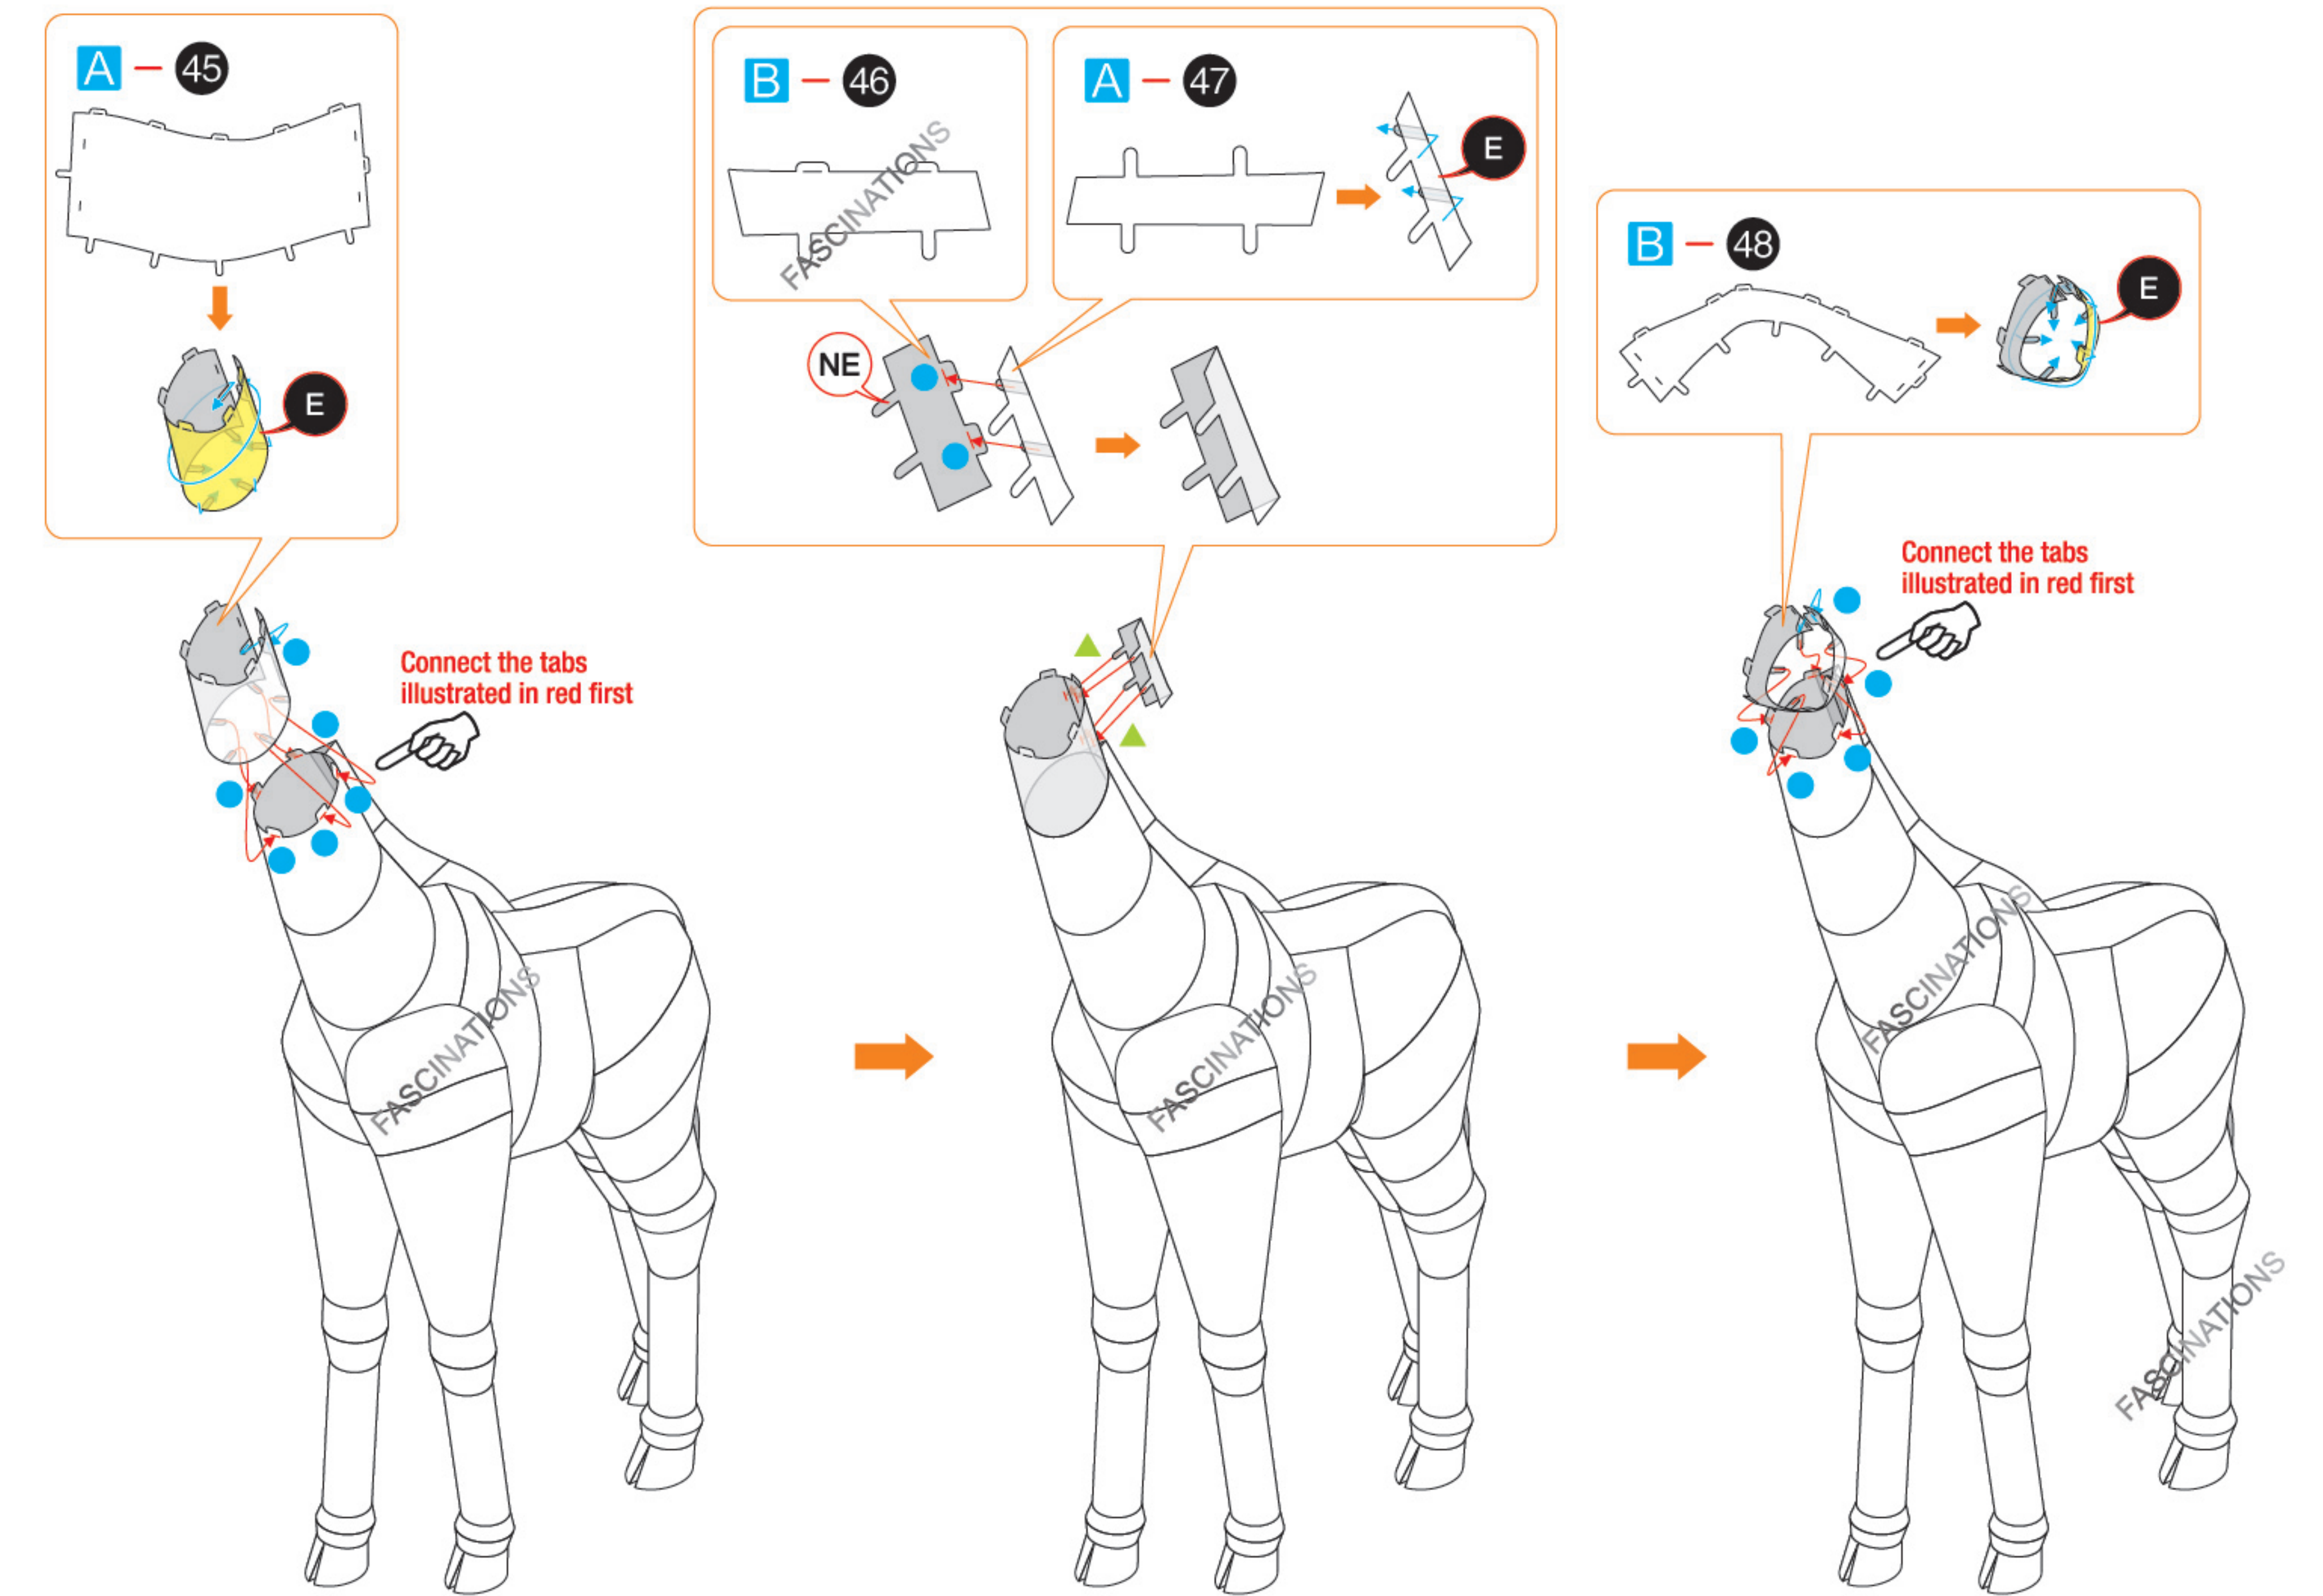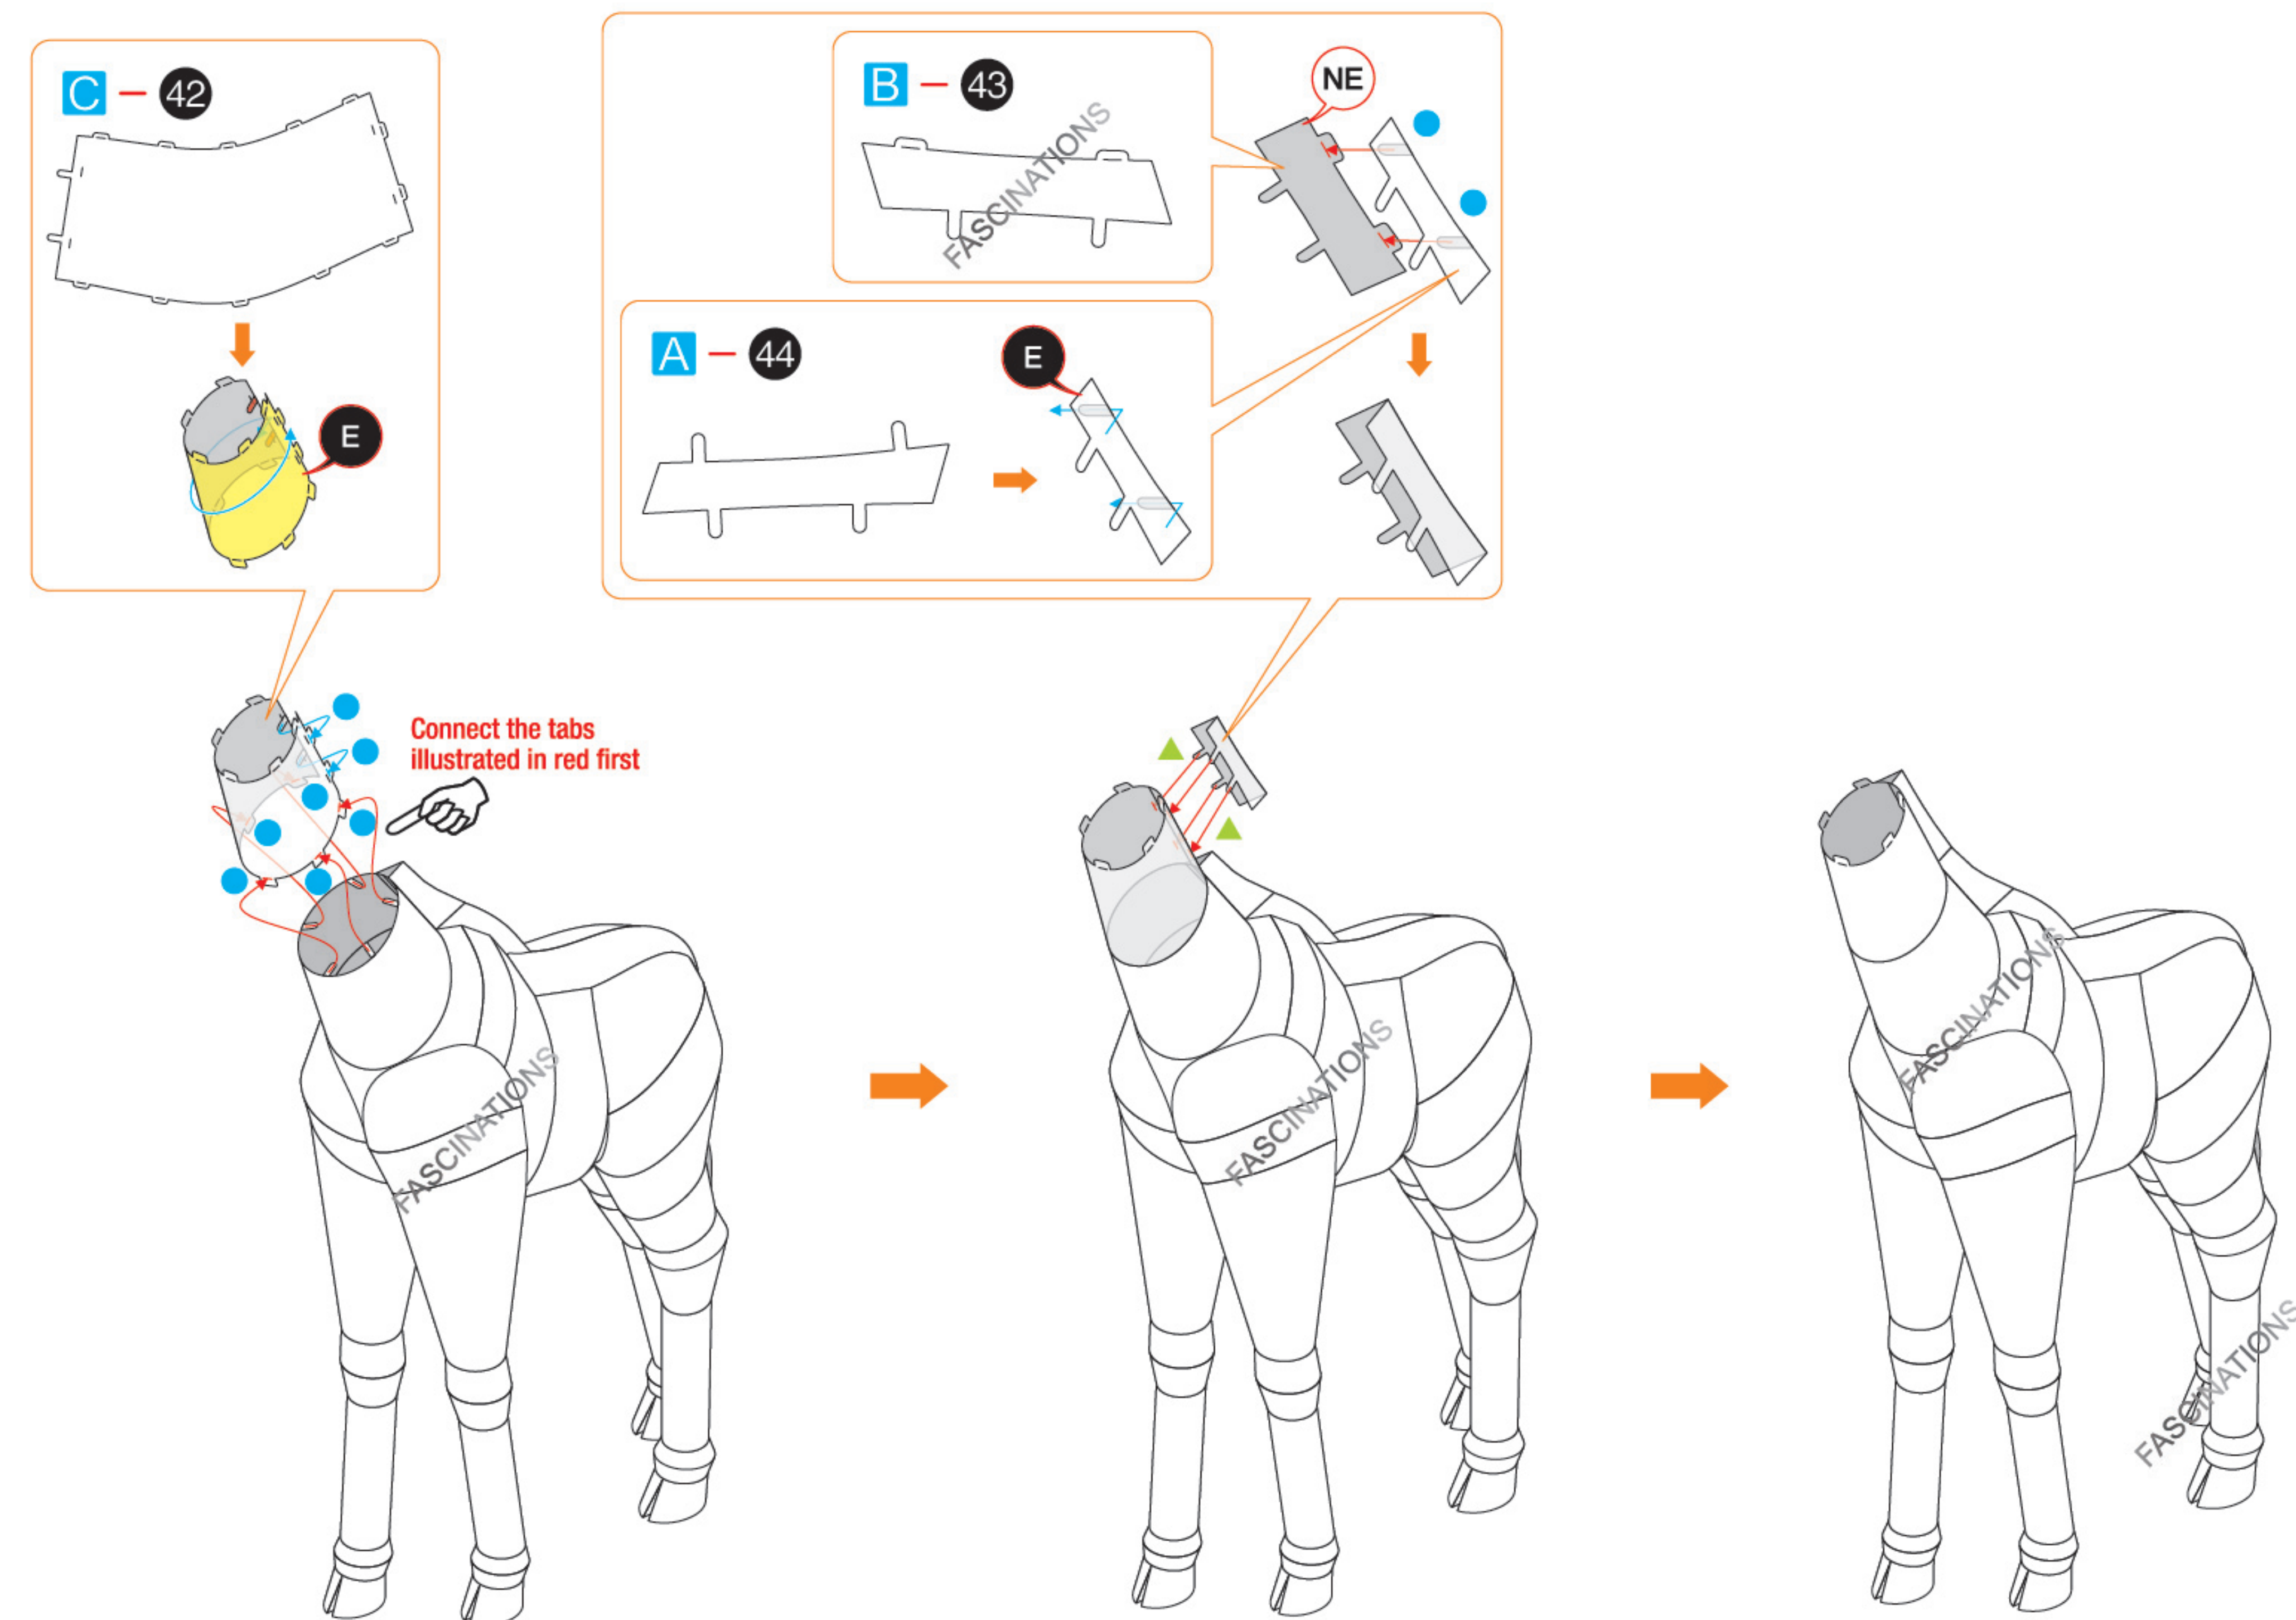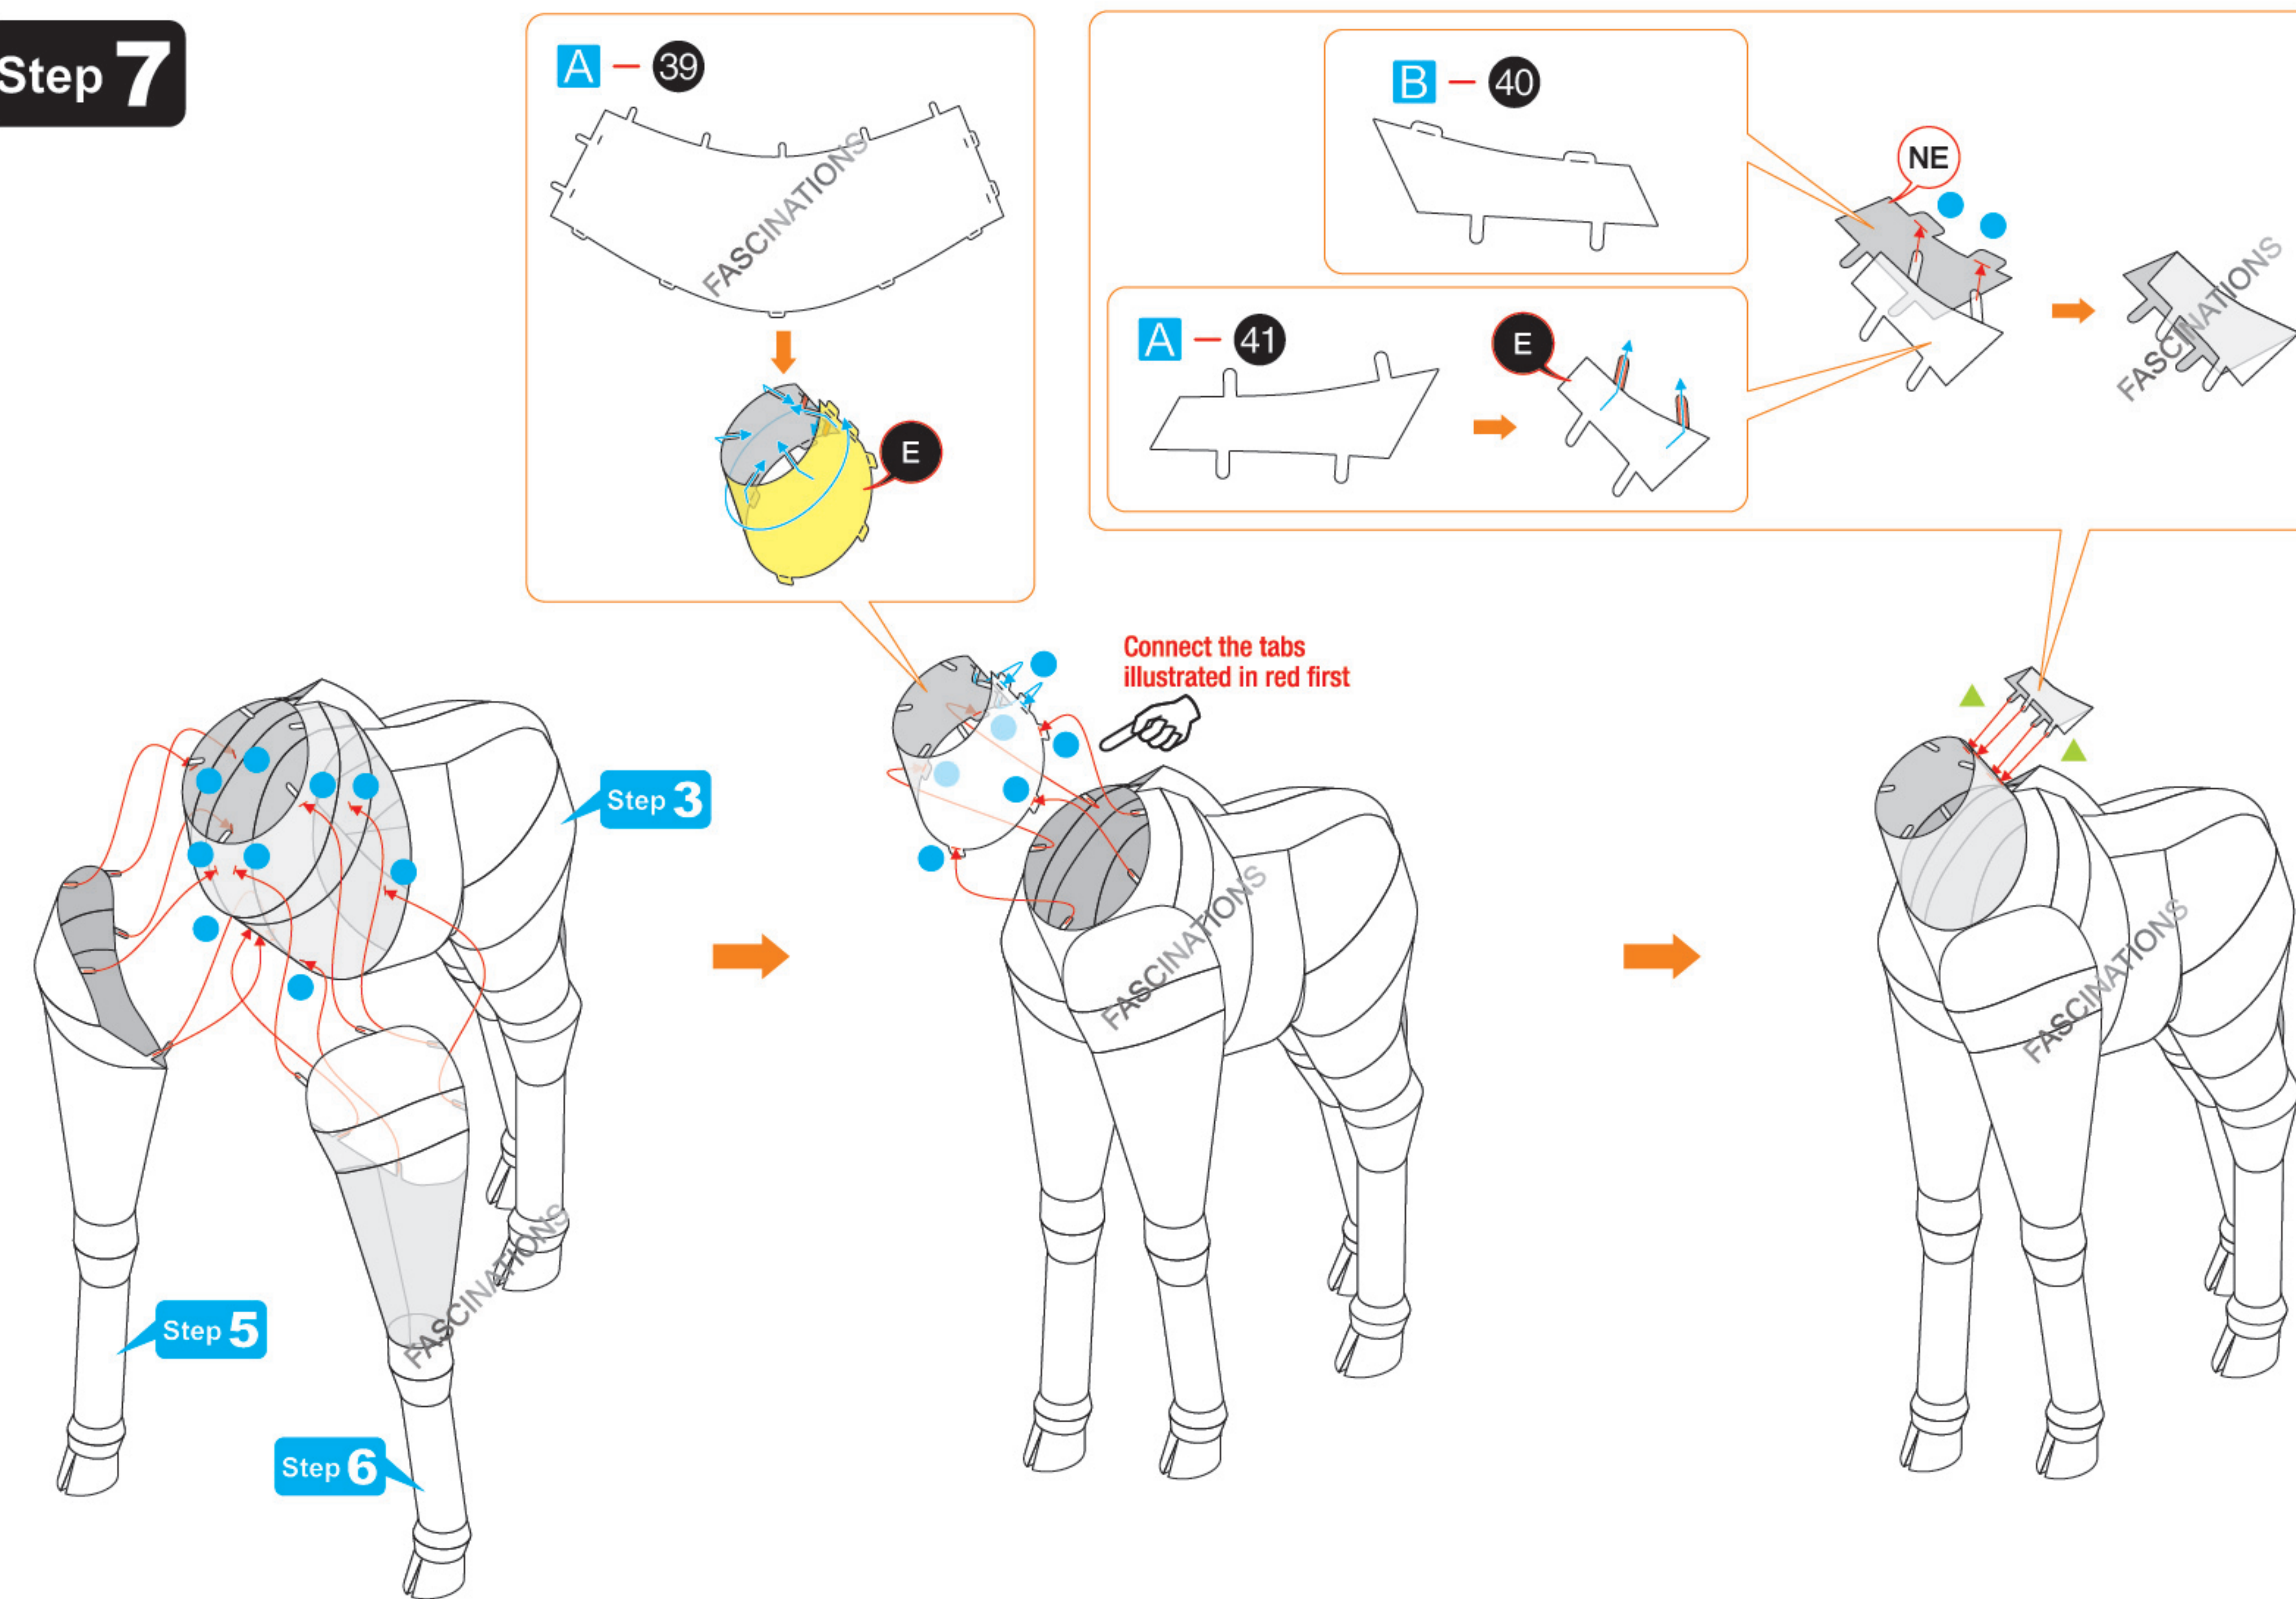





## Step 8

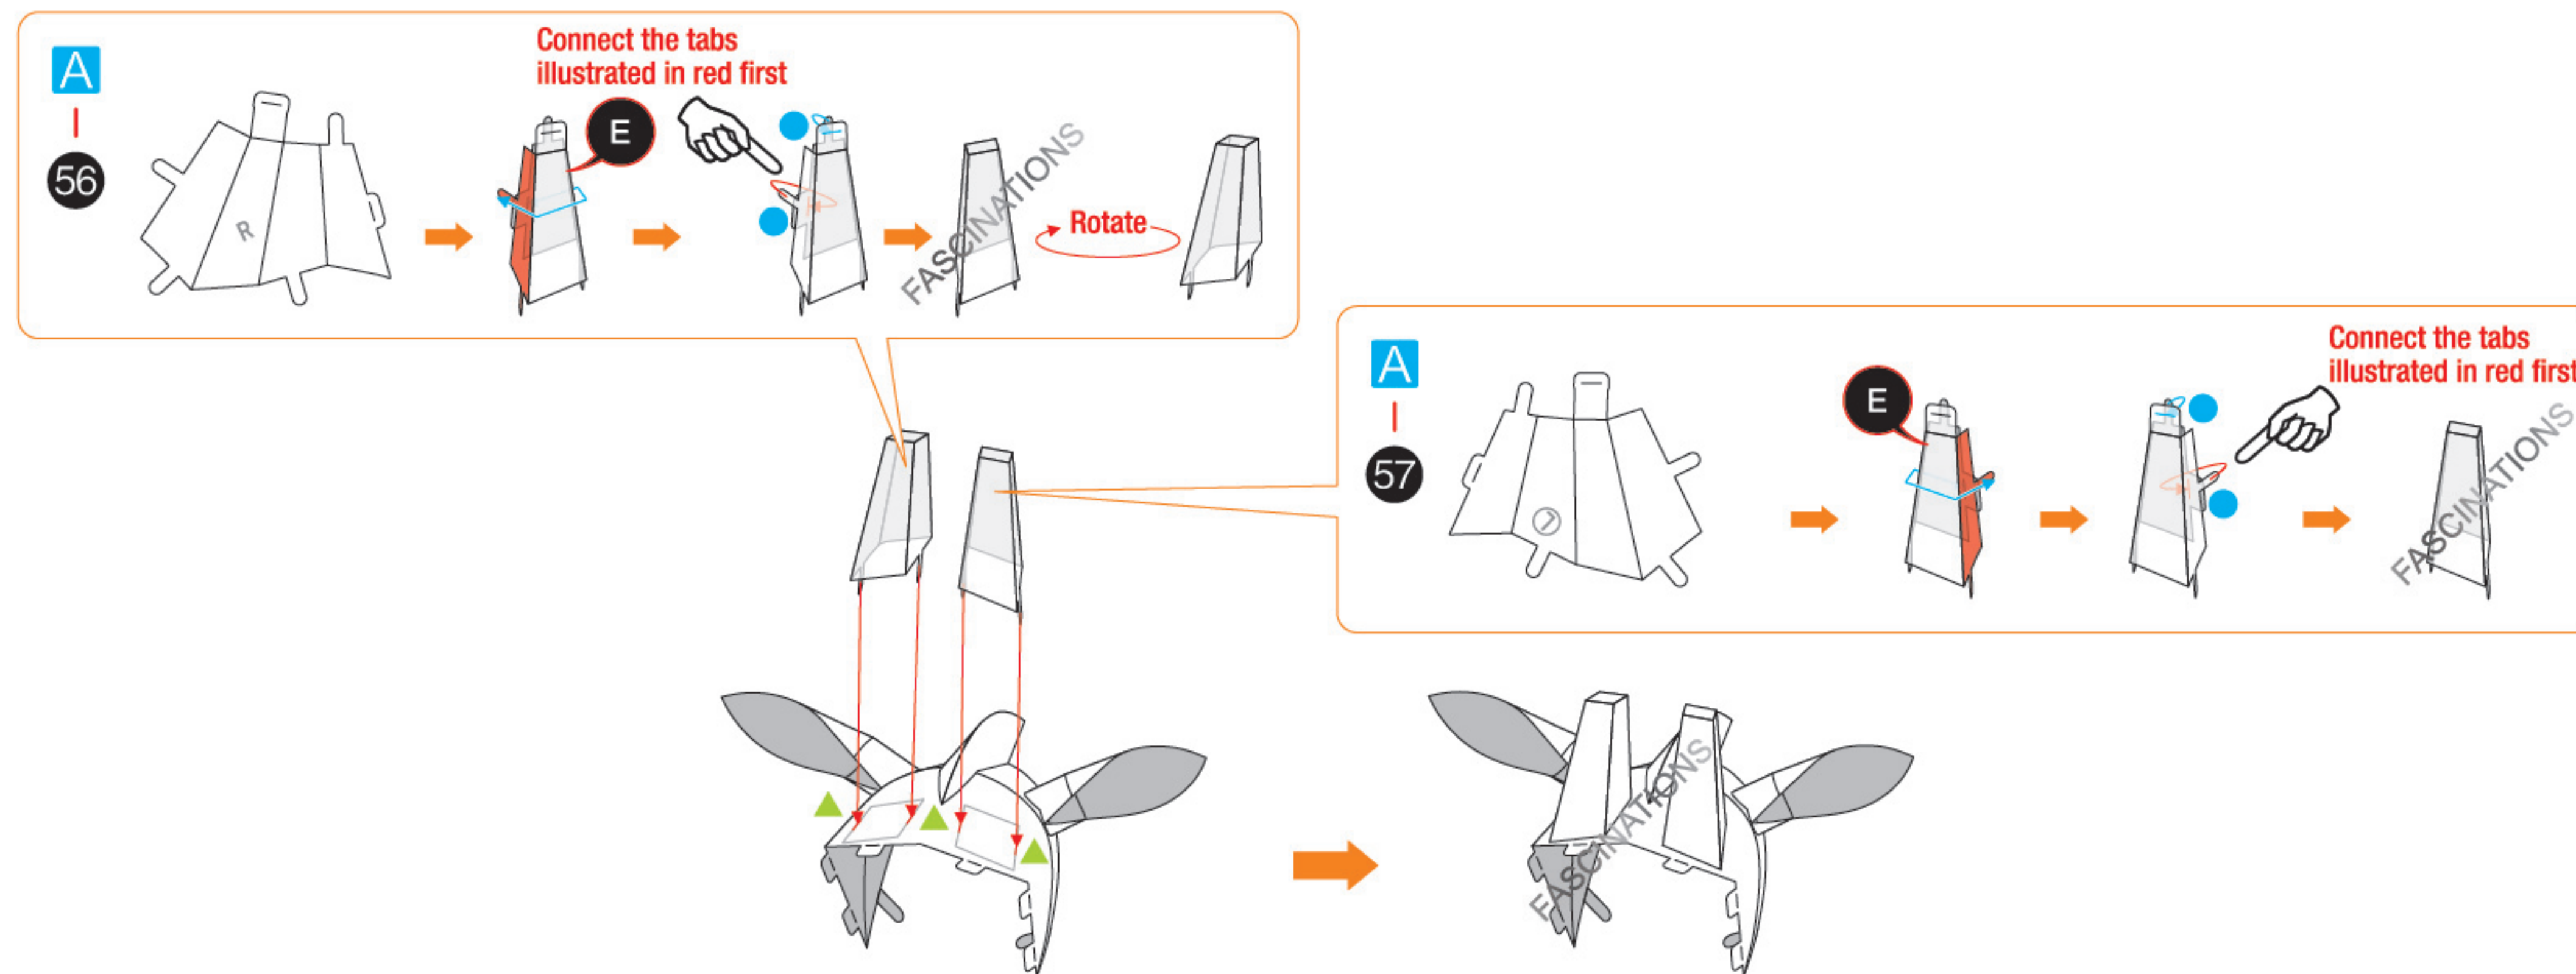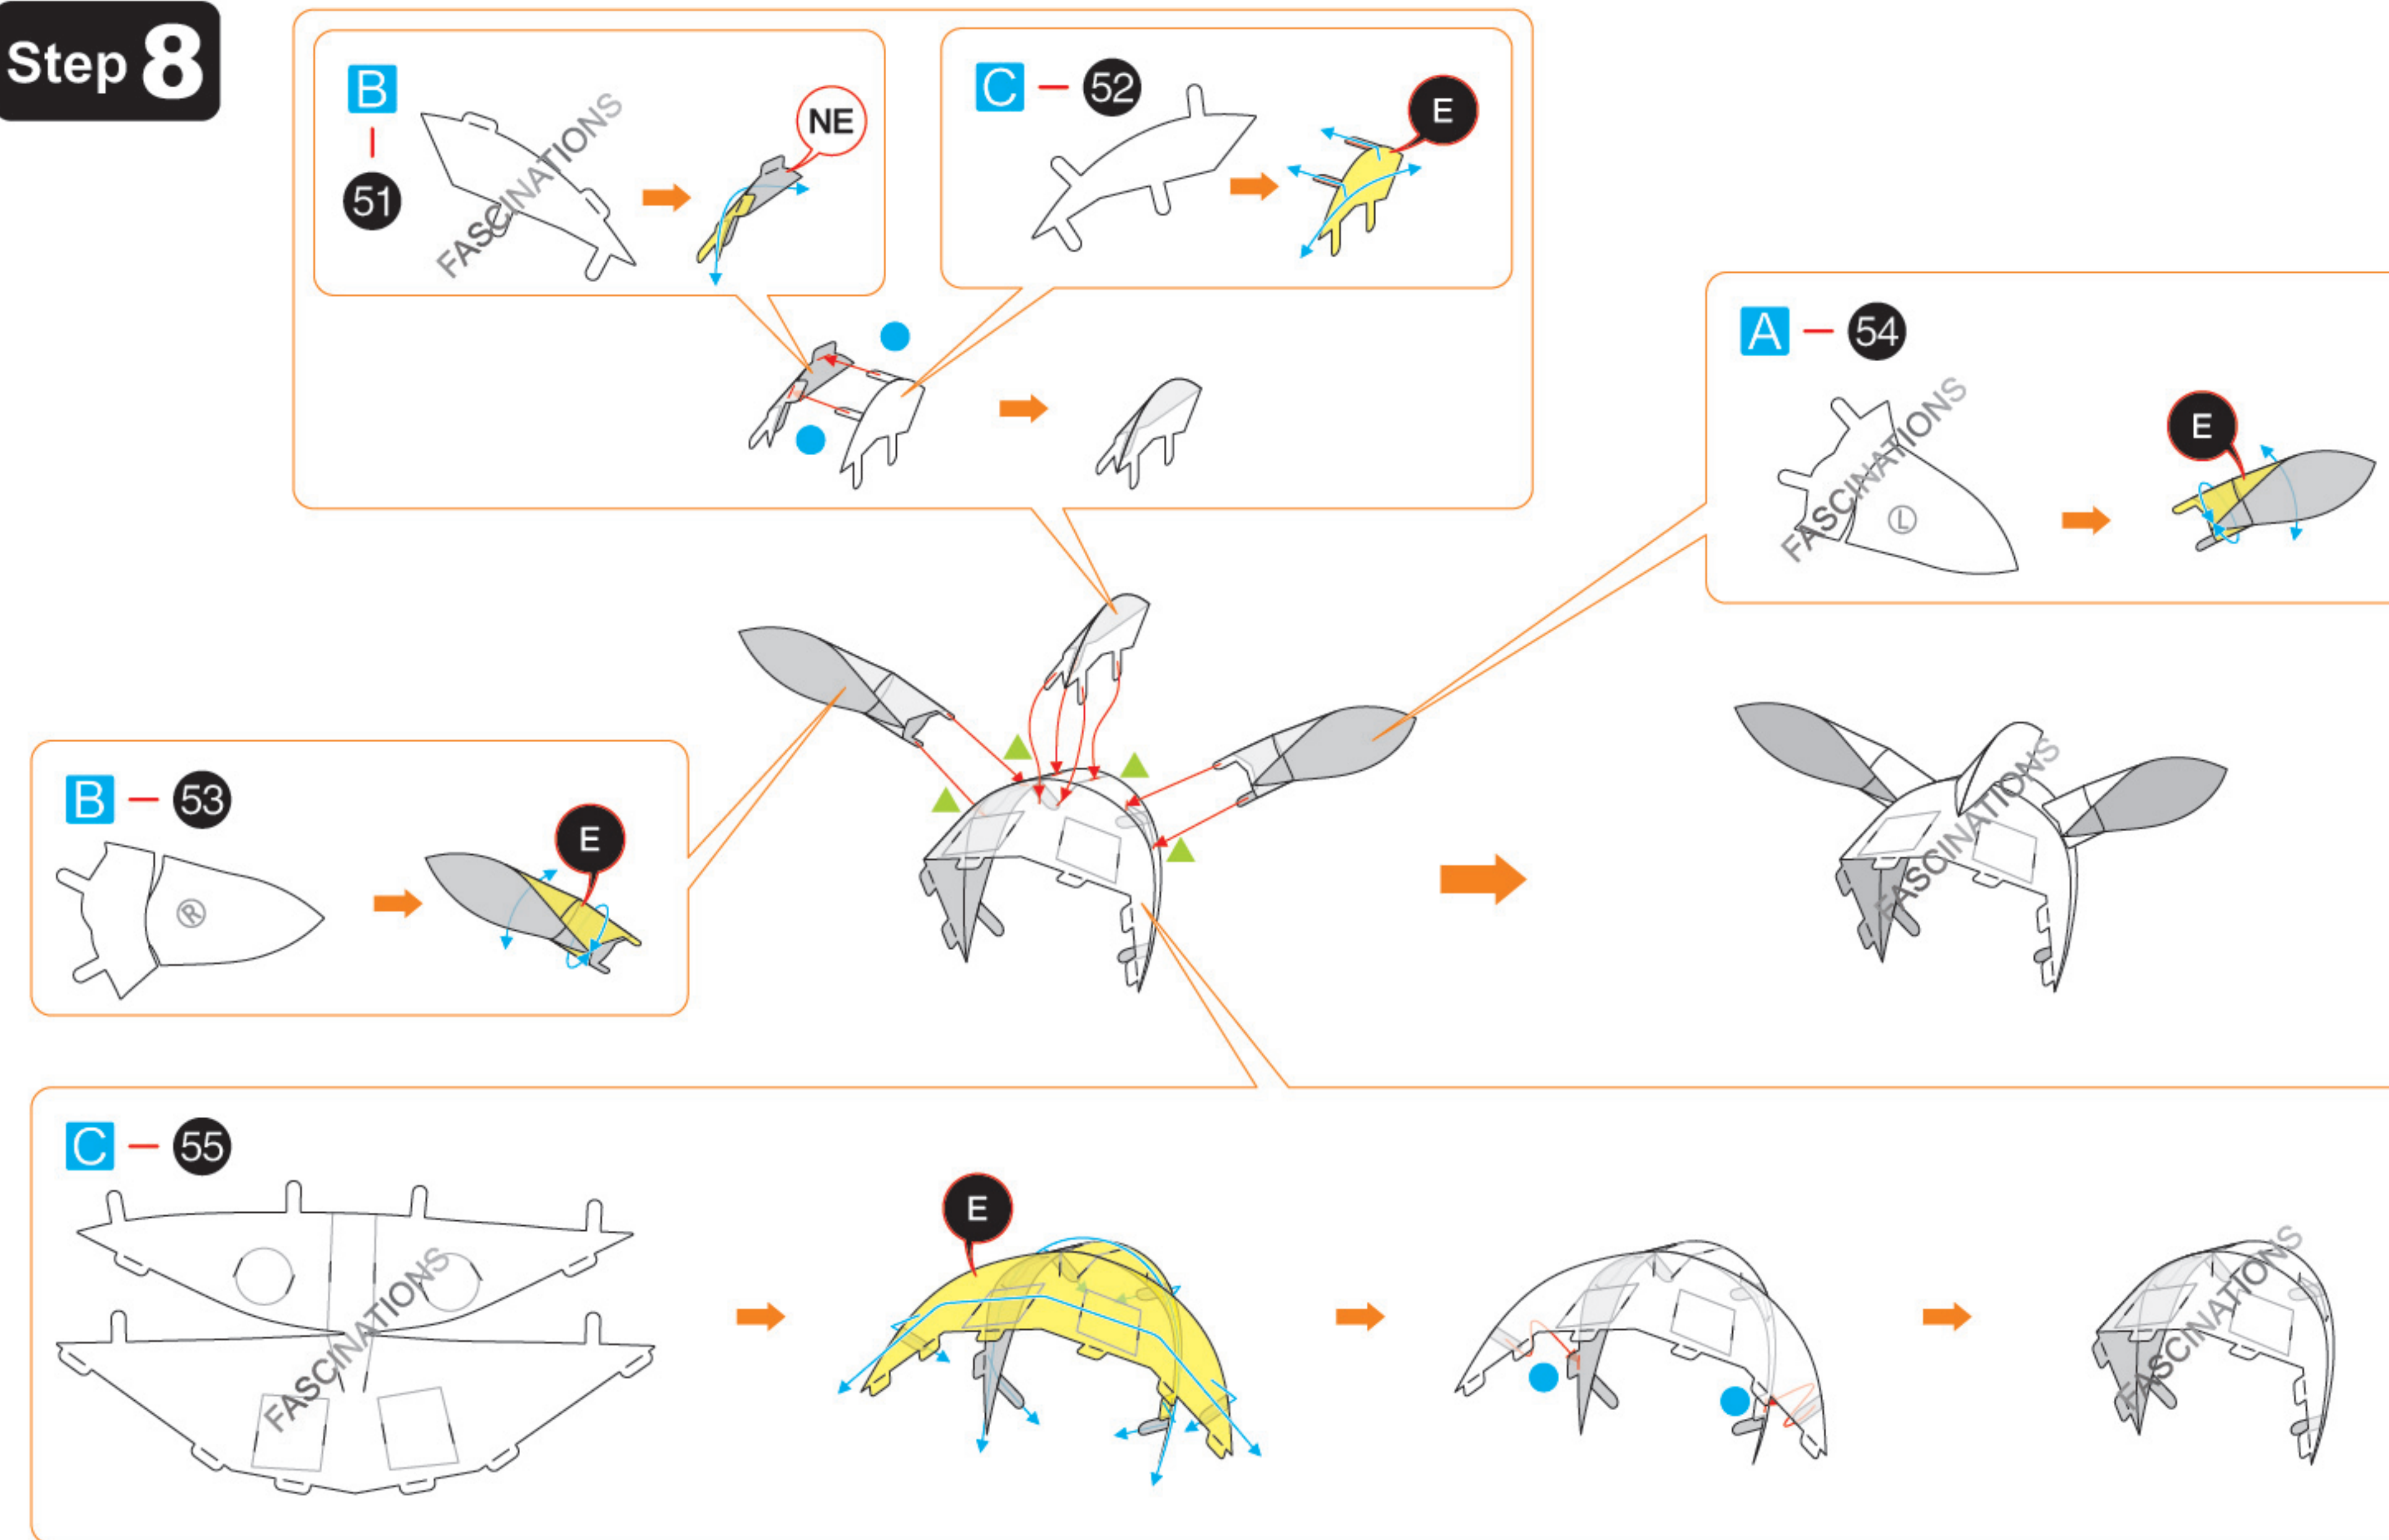

## Step 9

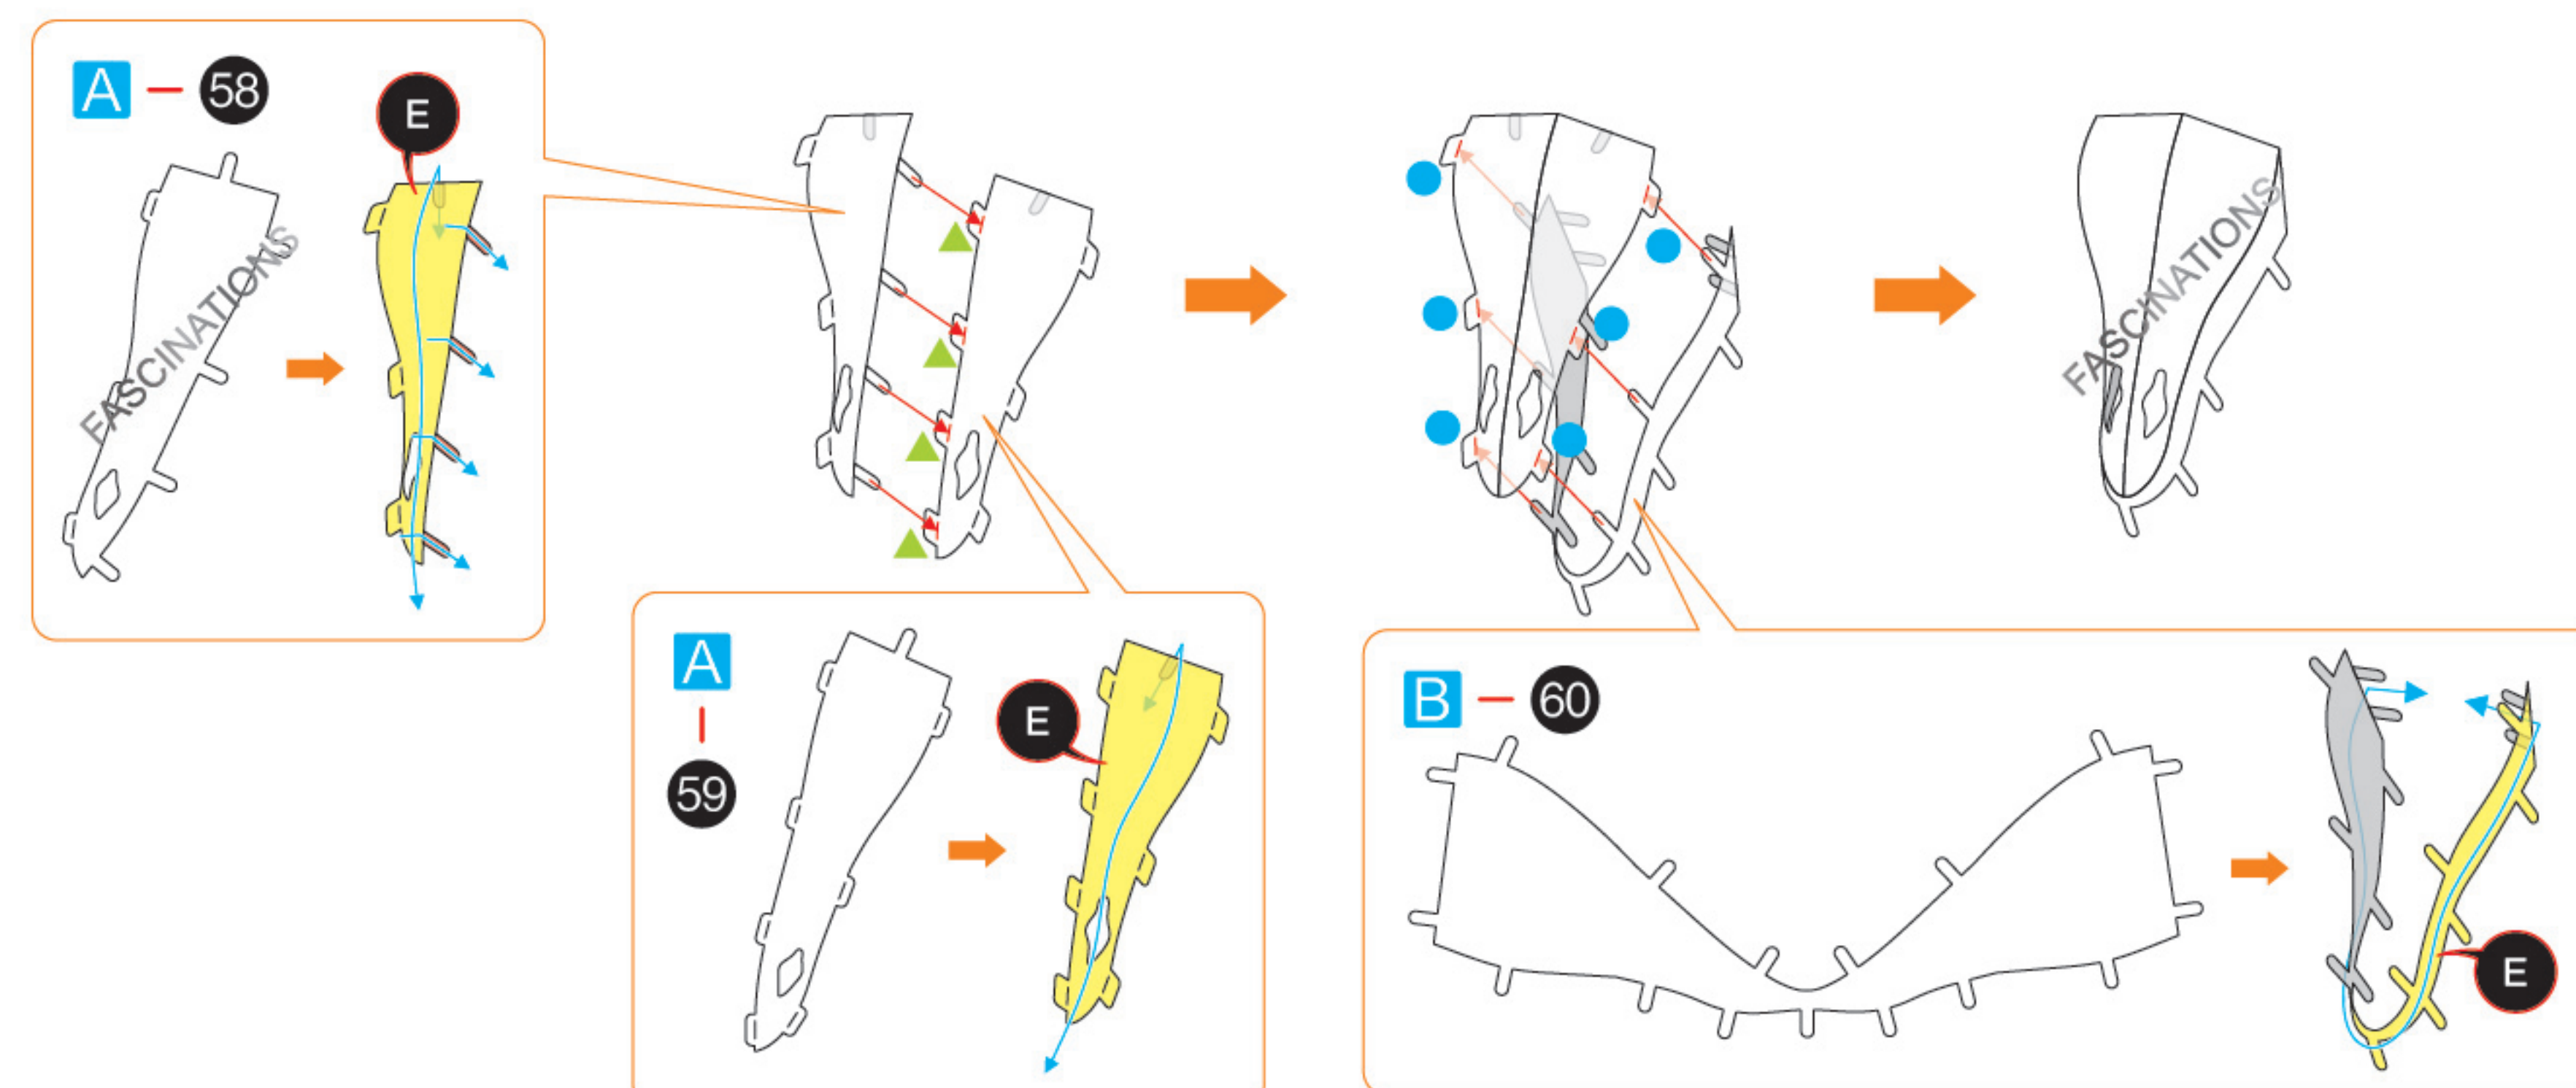


## Step 10

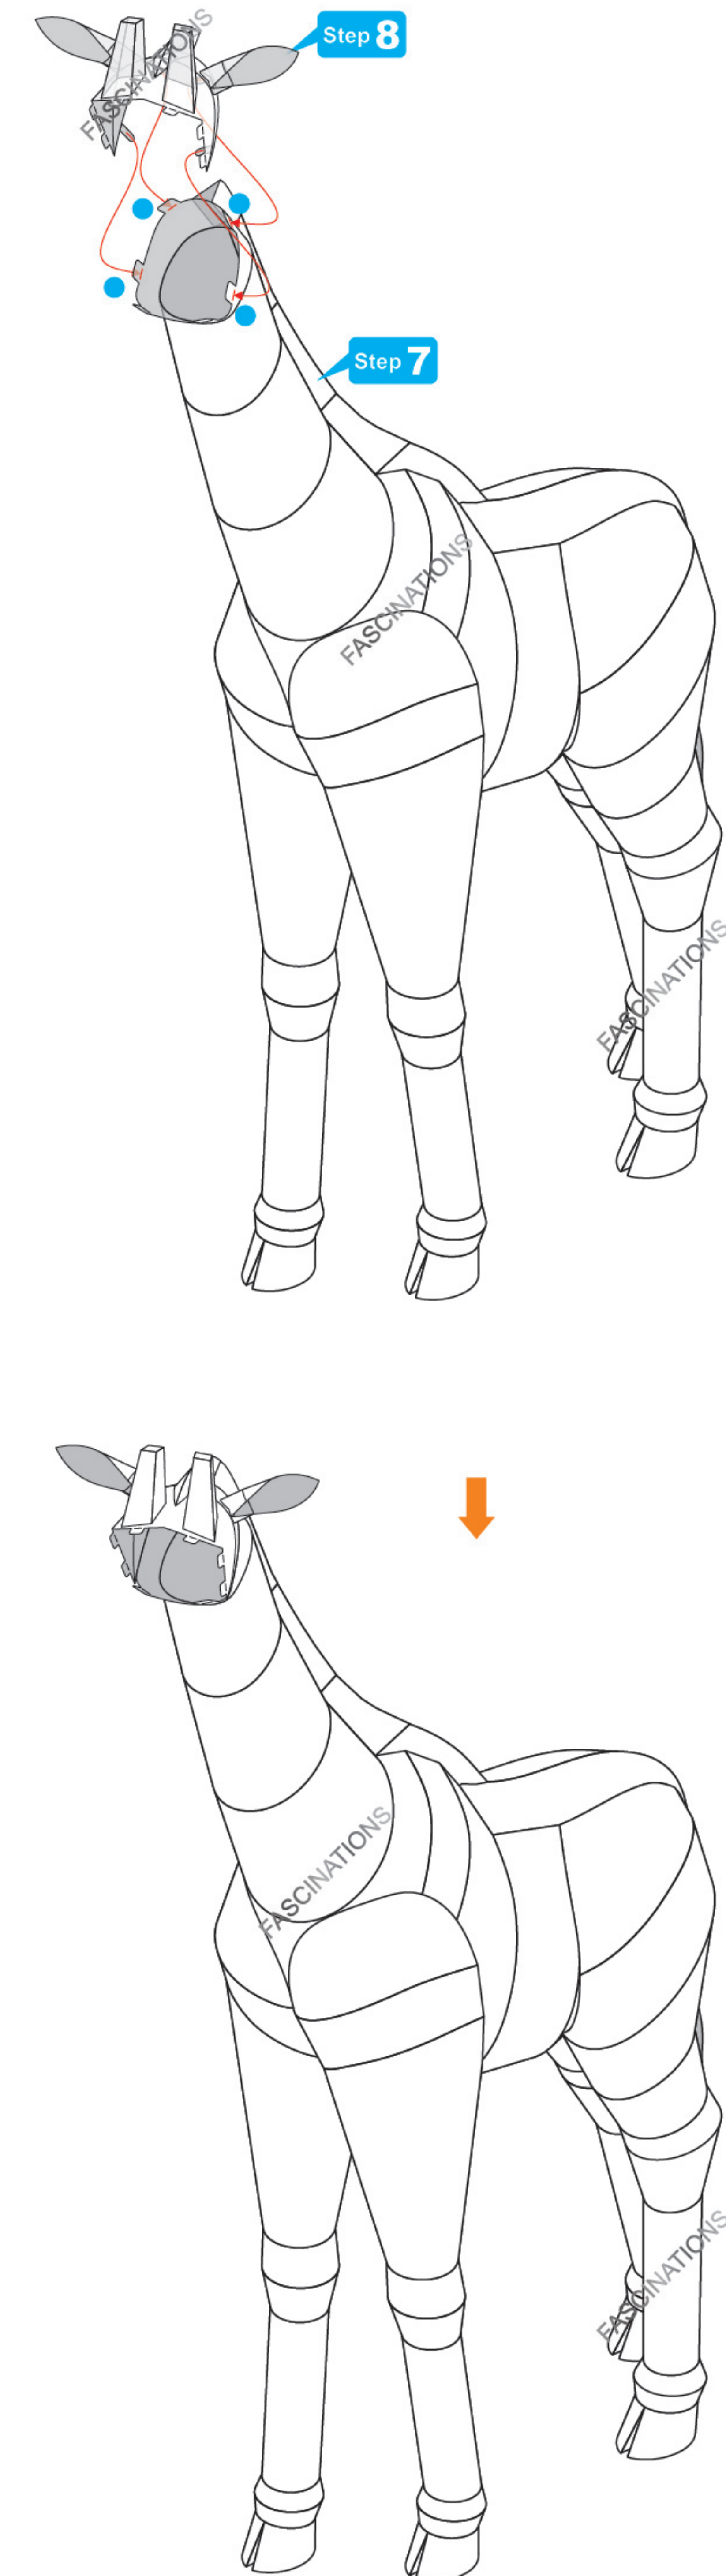



## Step 11

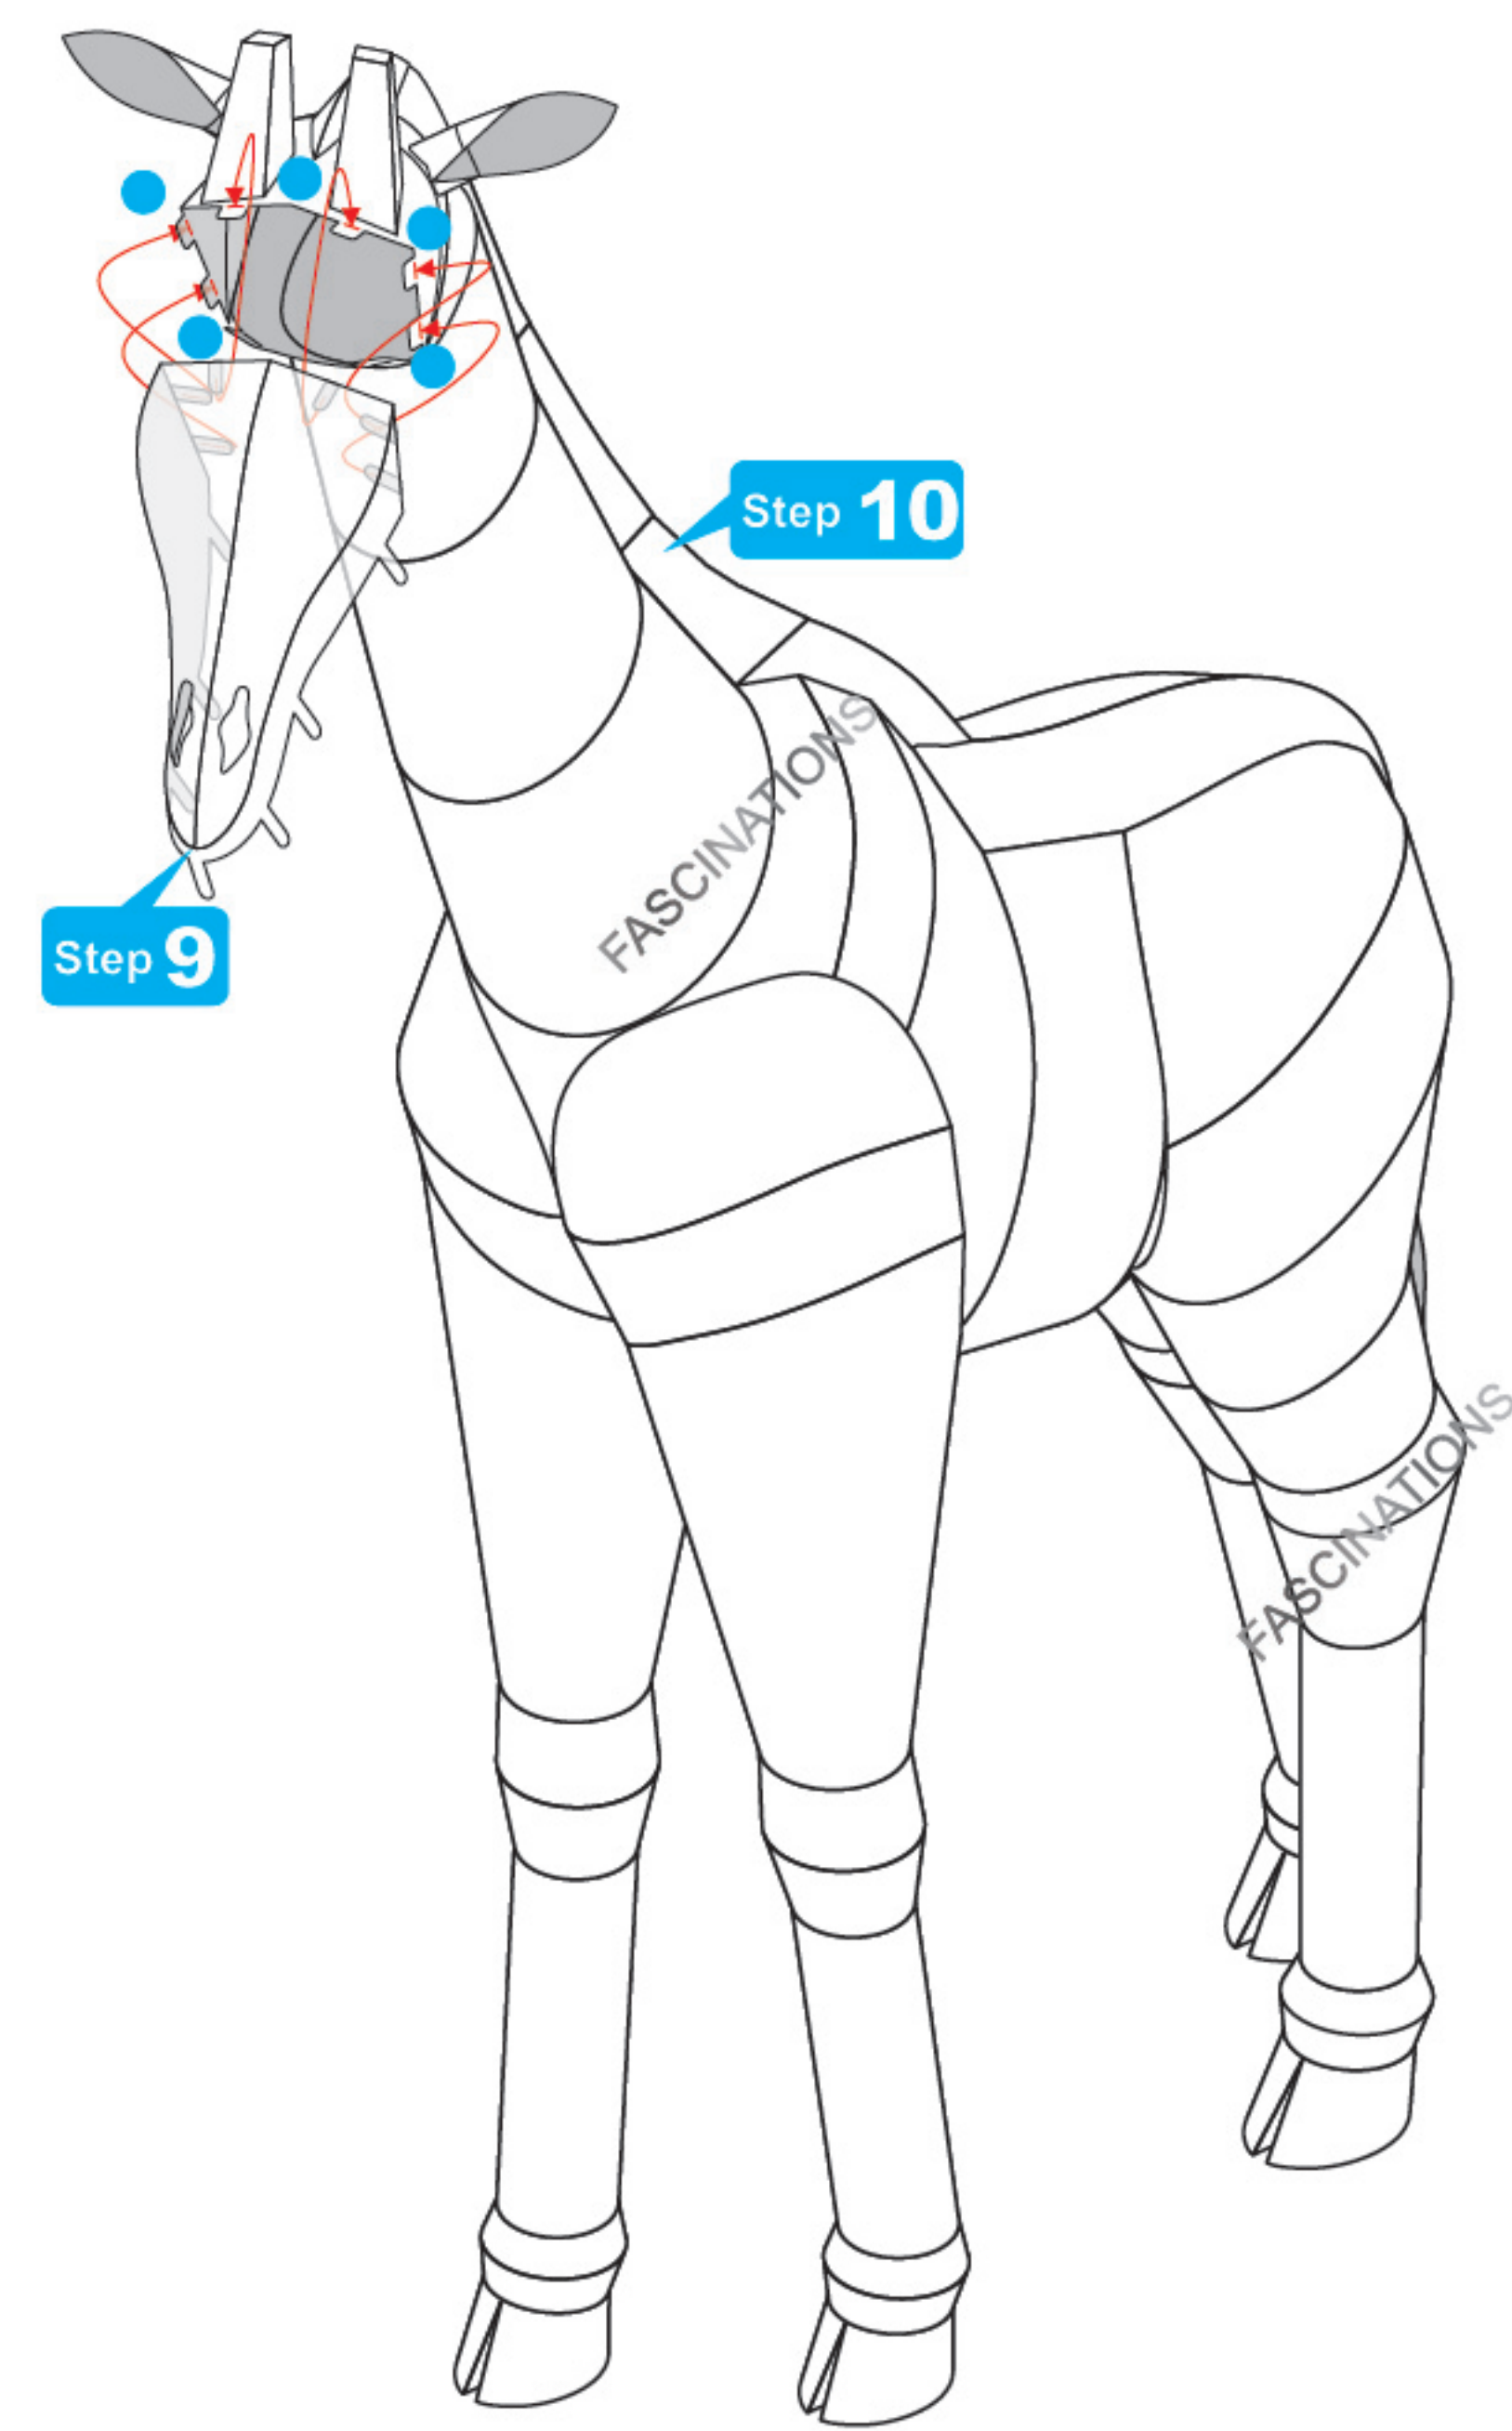

## Step 12

