



## METAL SHEETS

Parts with same color are duplicates


**A**

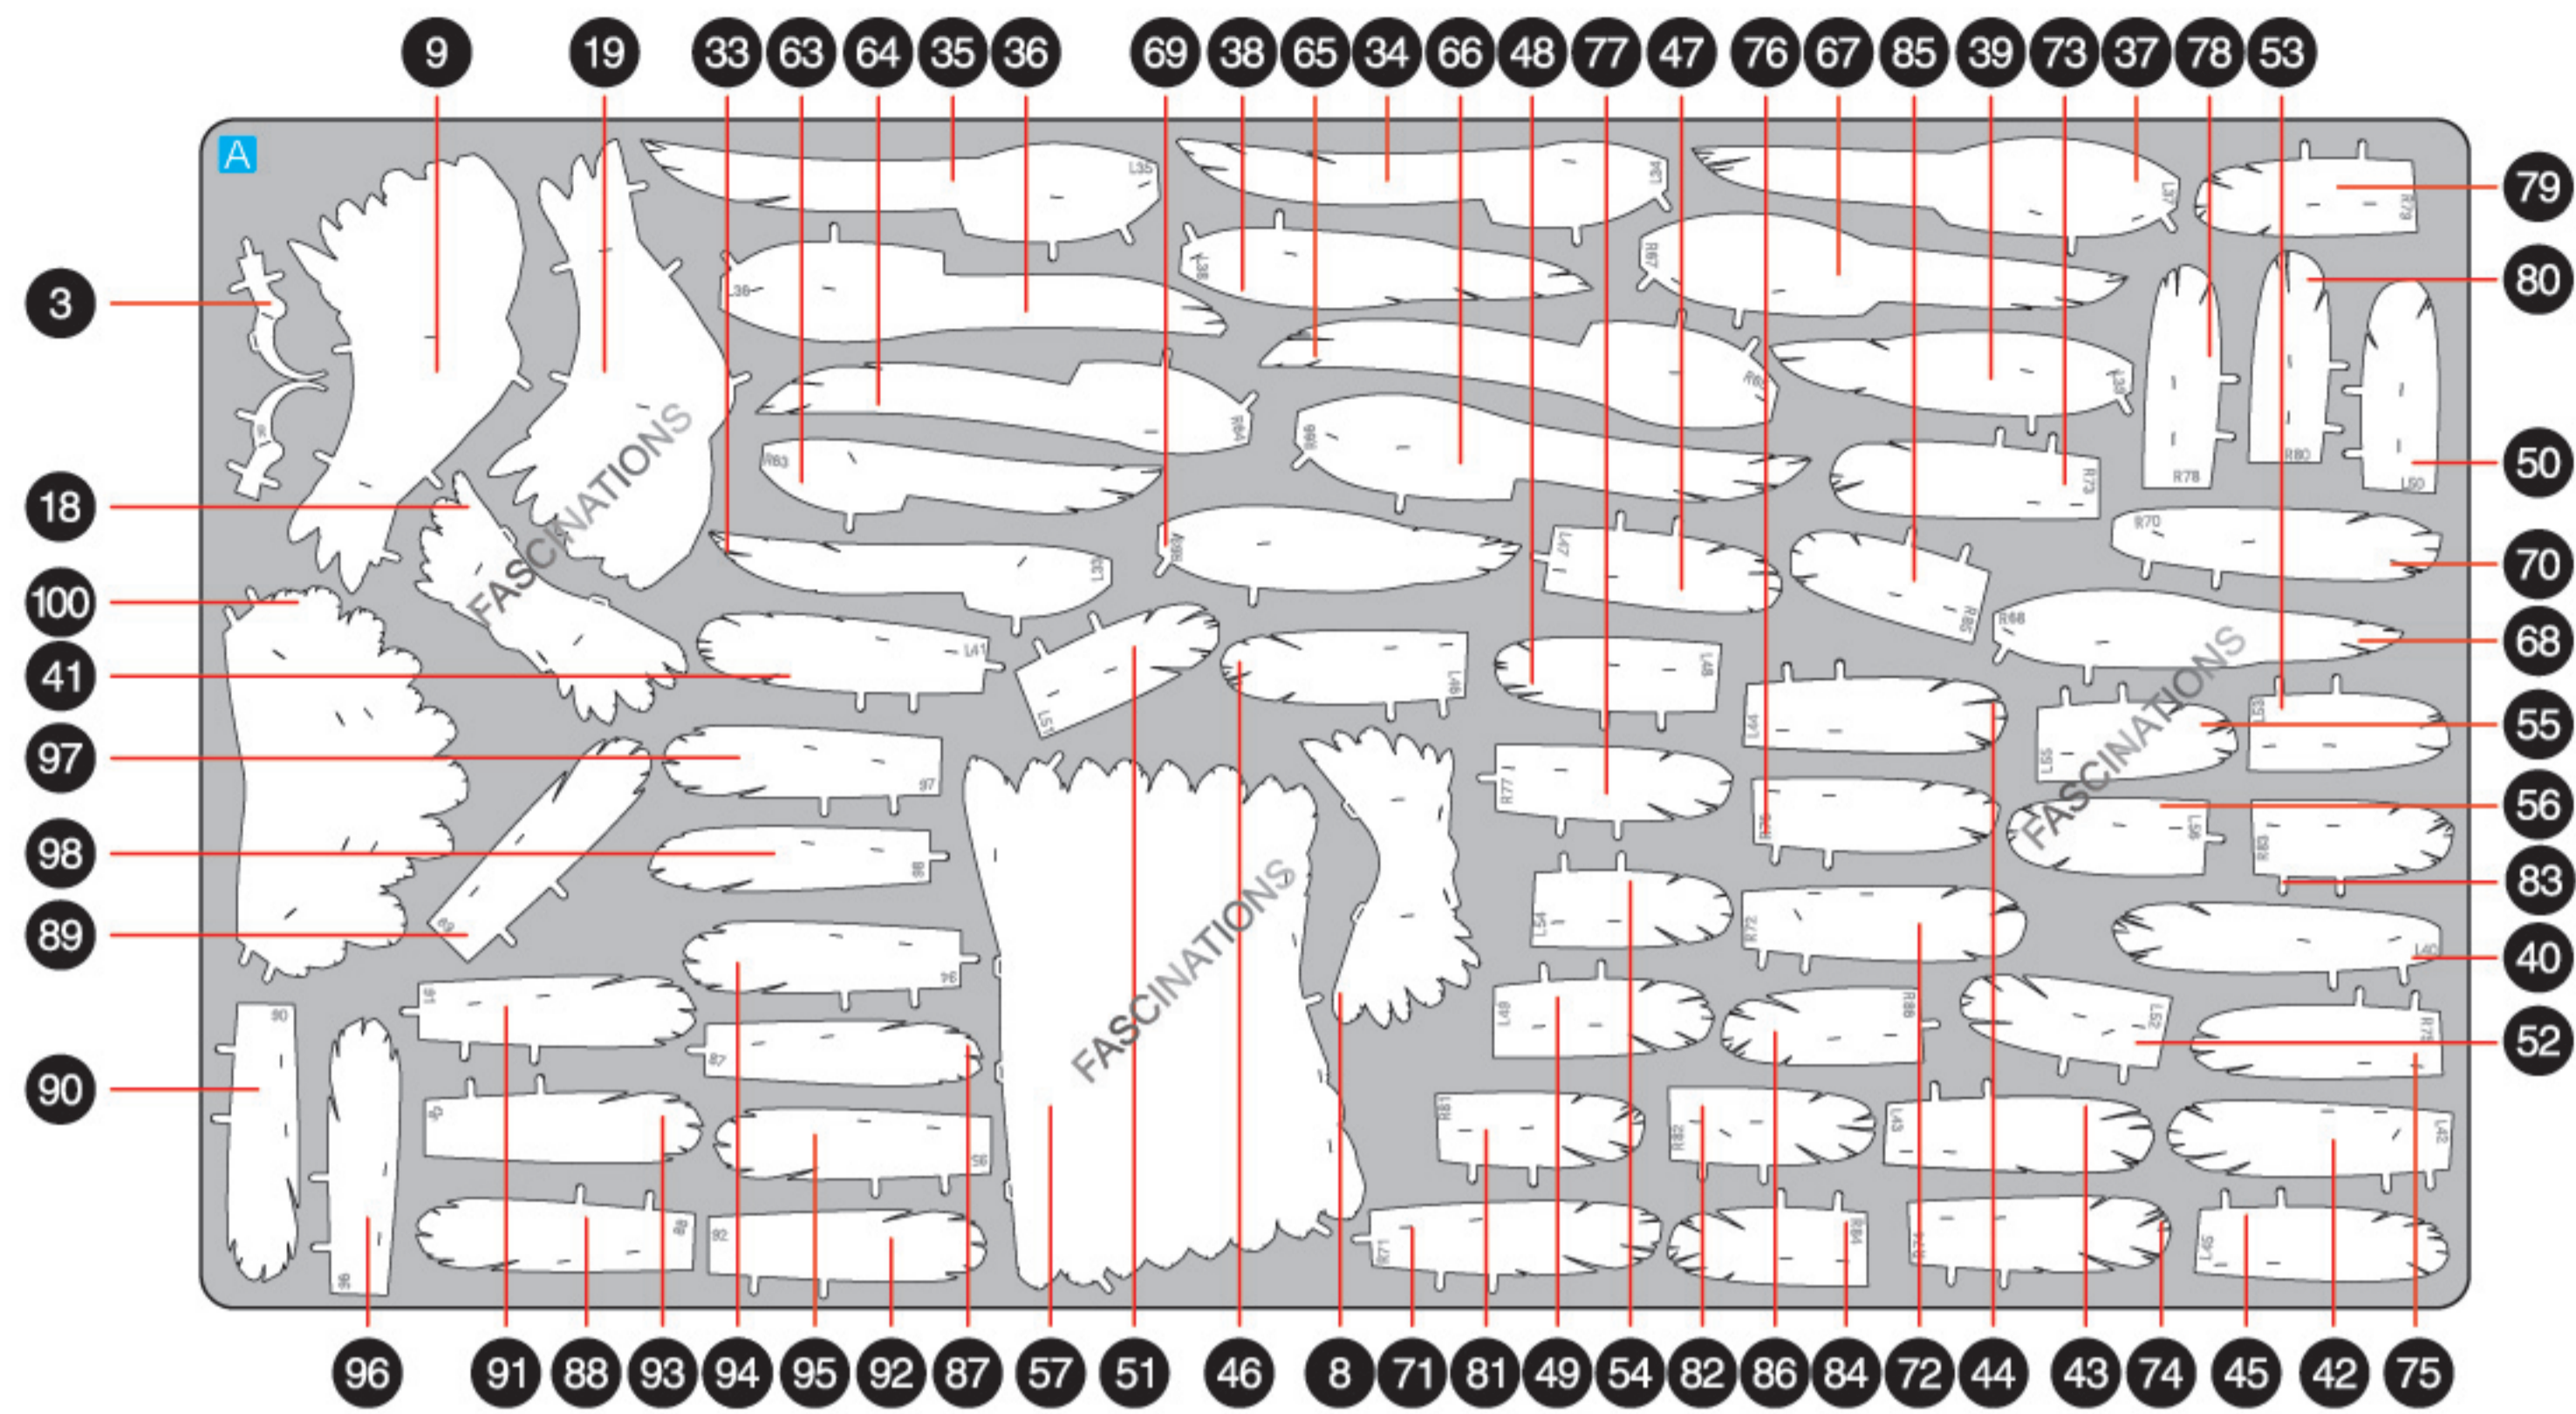

**B**

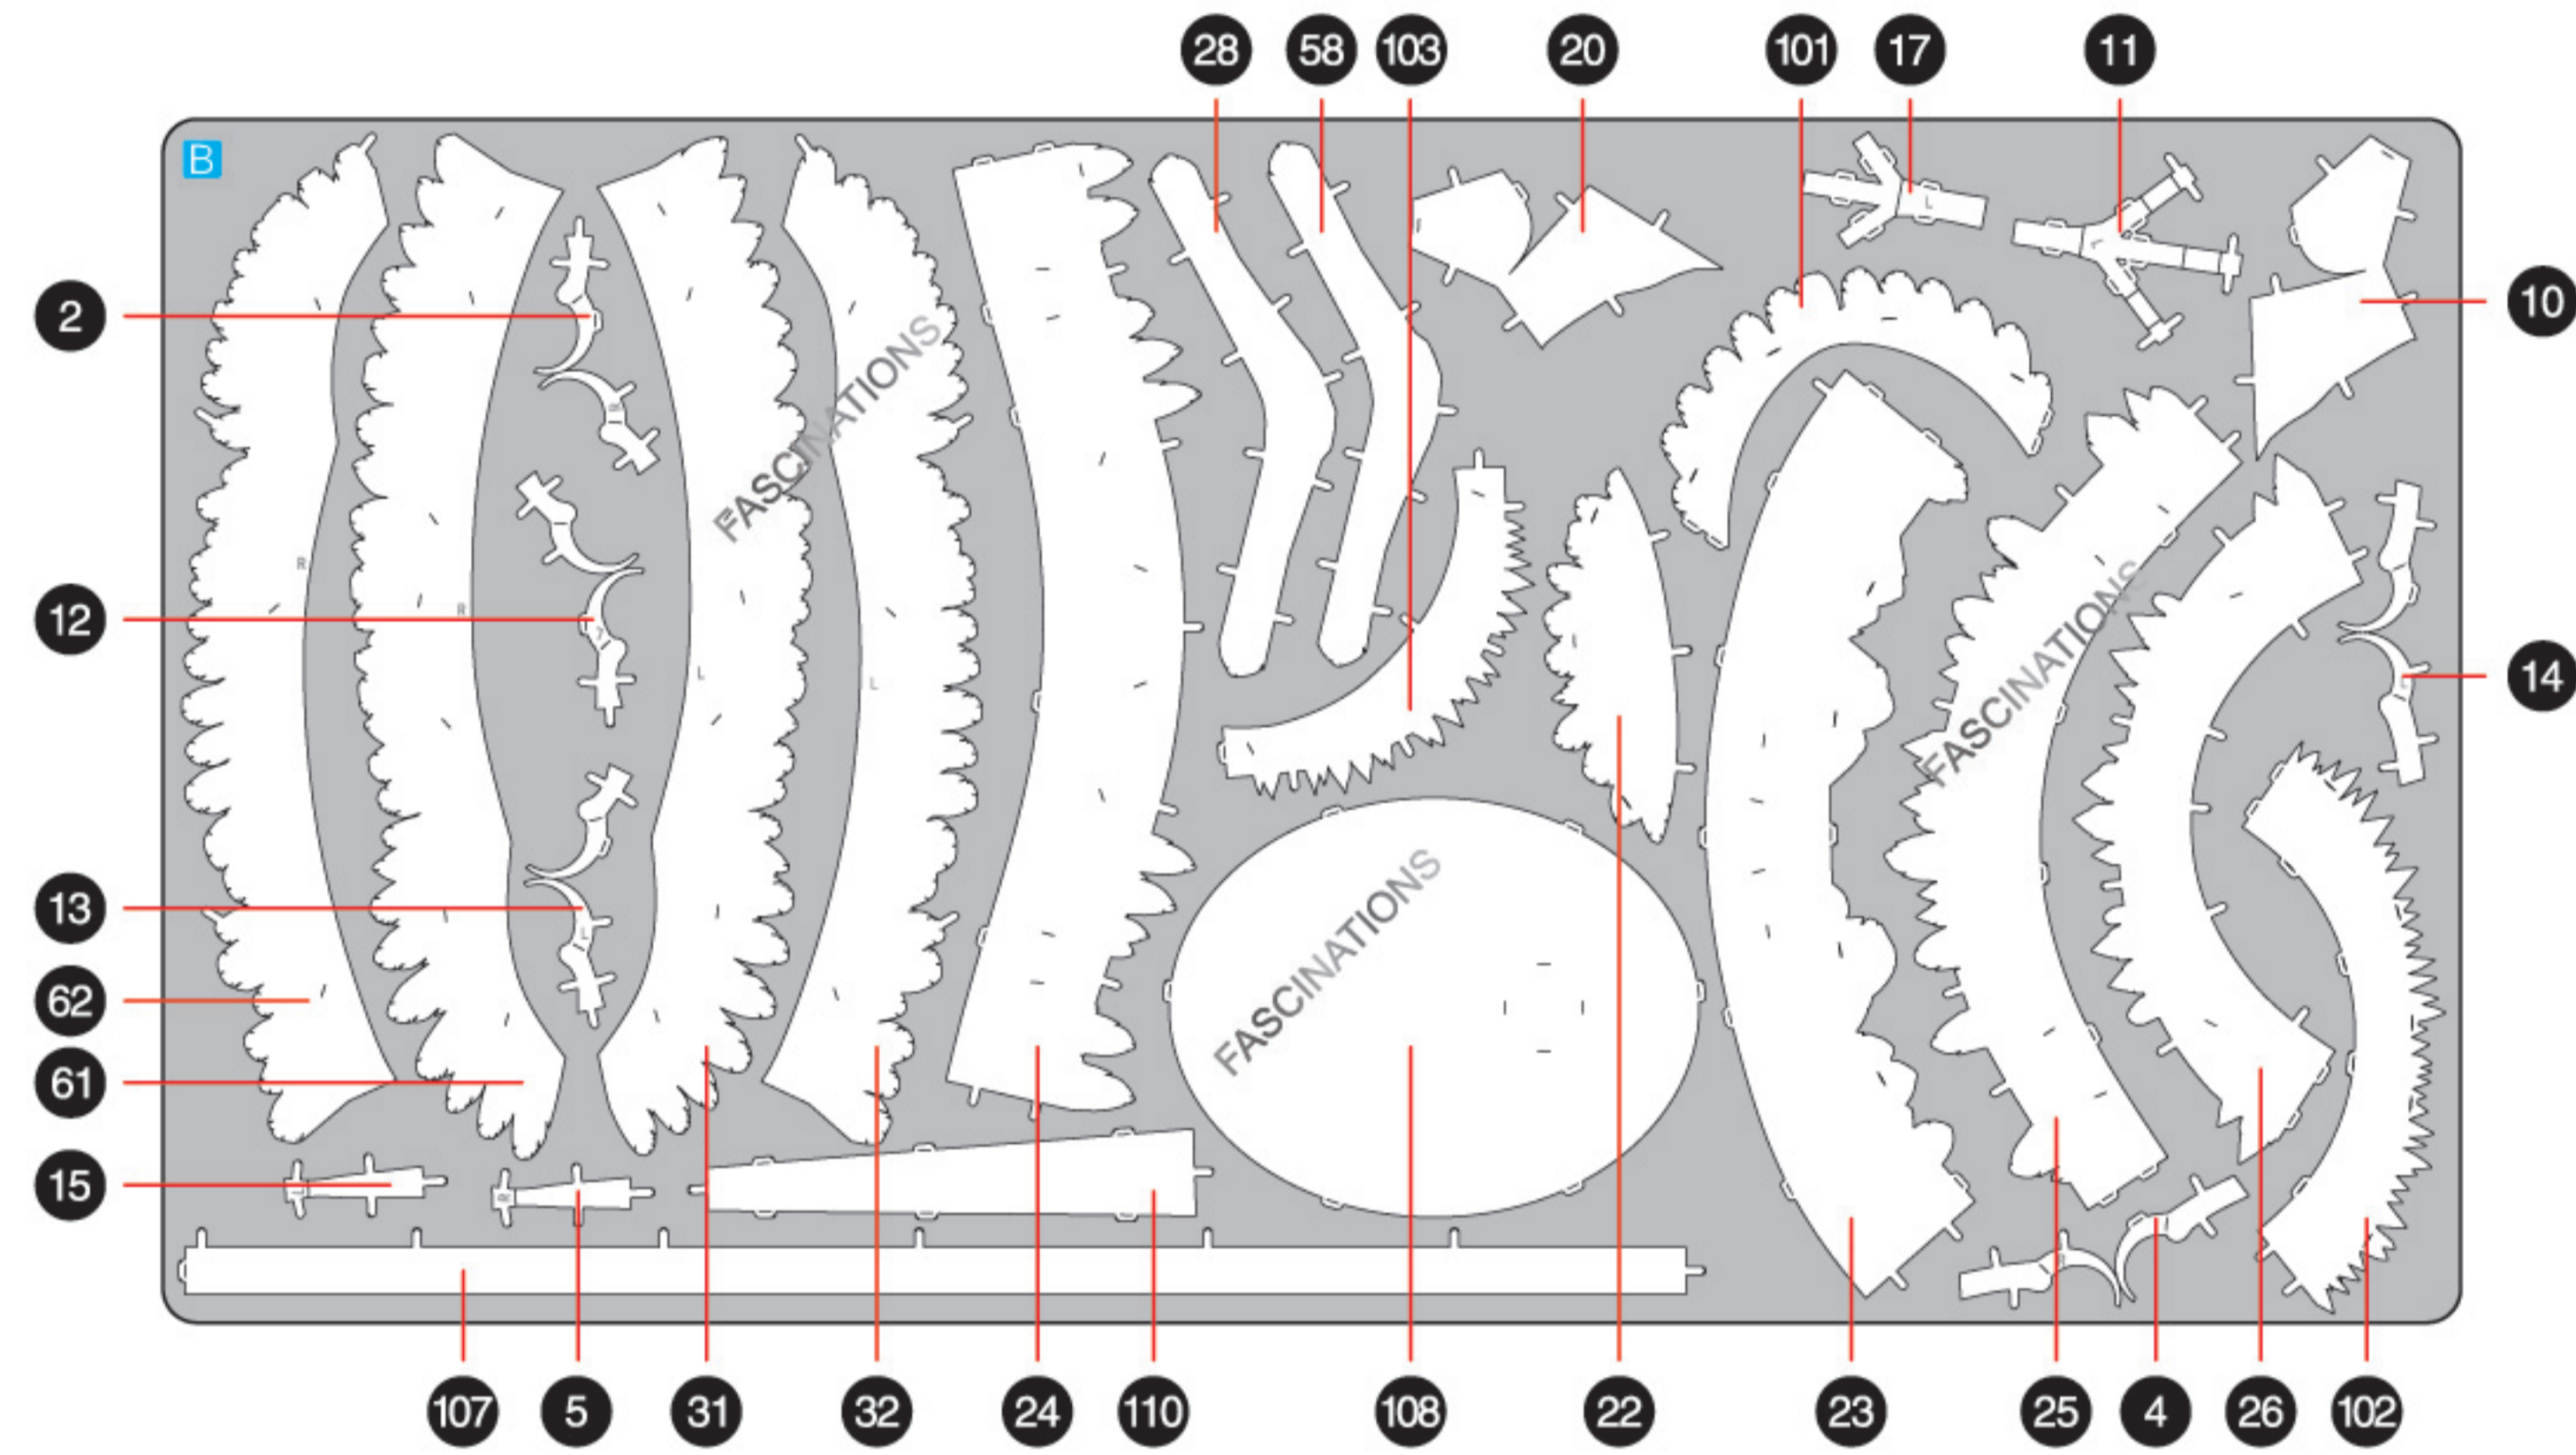

**C**

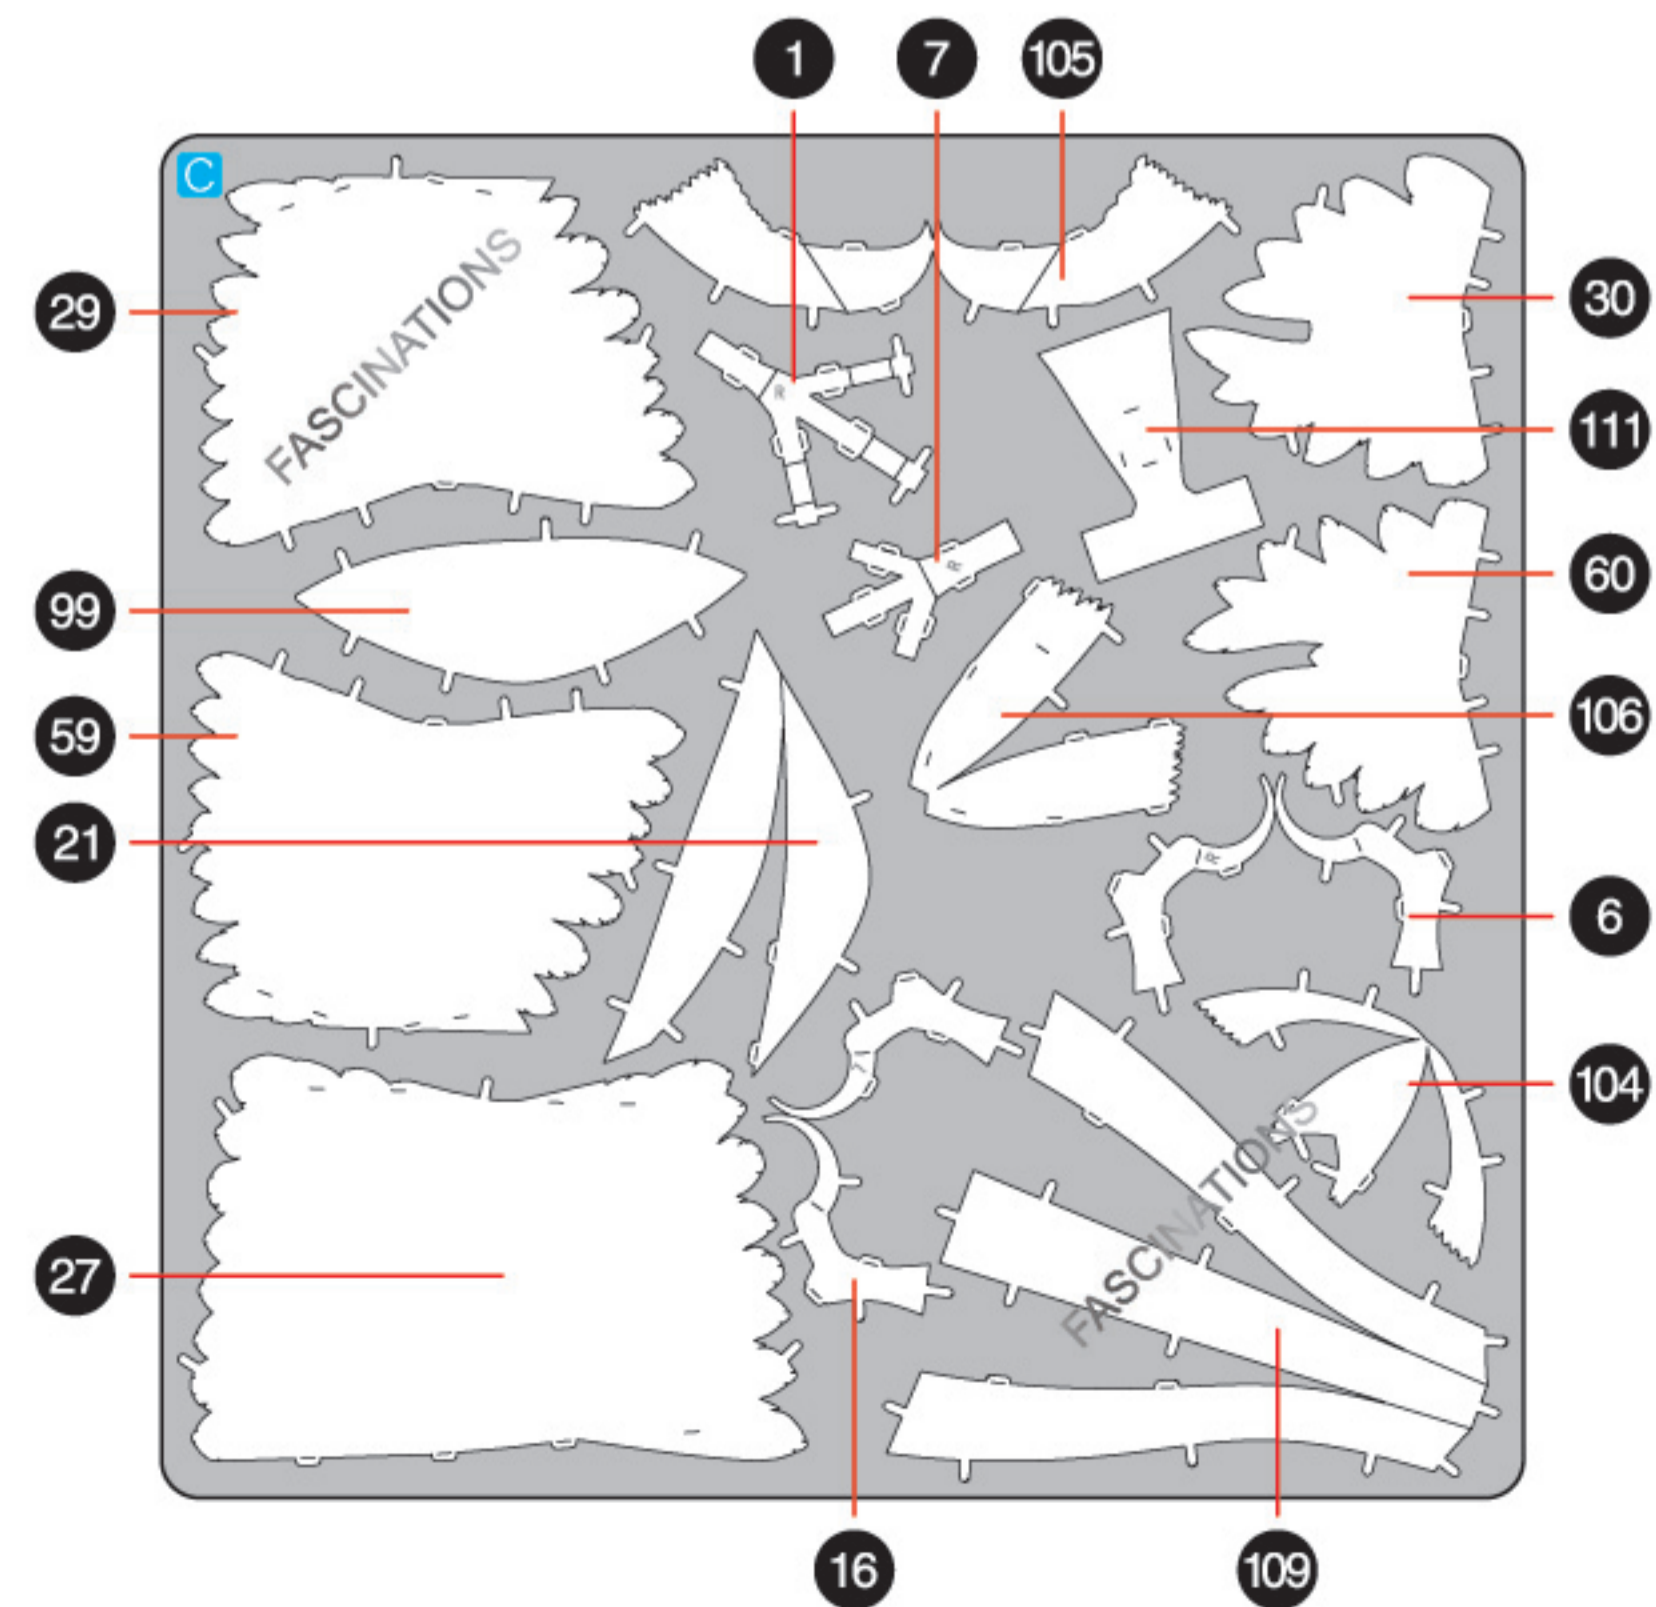

# Metal Earth

360°  
view




It is highly recommended that you visit [www.metalearth.com/360/PS2017](http://www.metalearth.com/360/PS2017) to see the completed model before assembling your own

## Premium Series


PS2017

AMERICAN BALD EAGLE

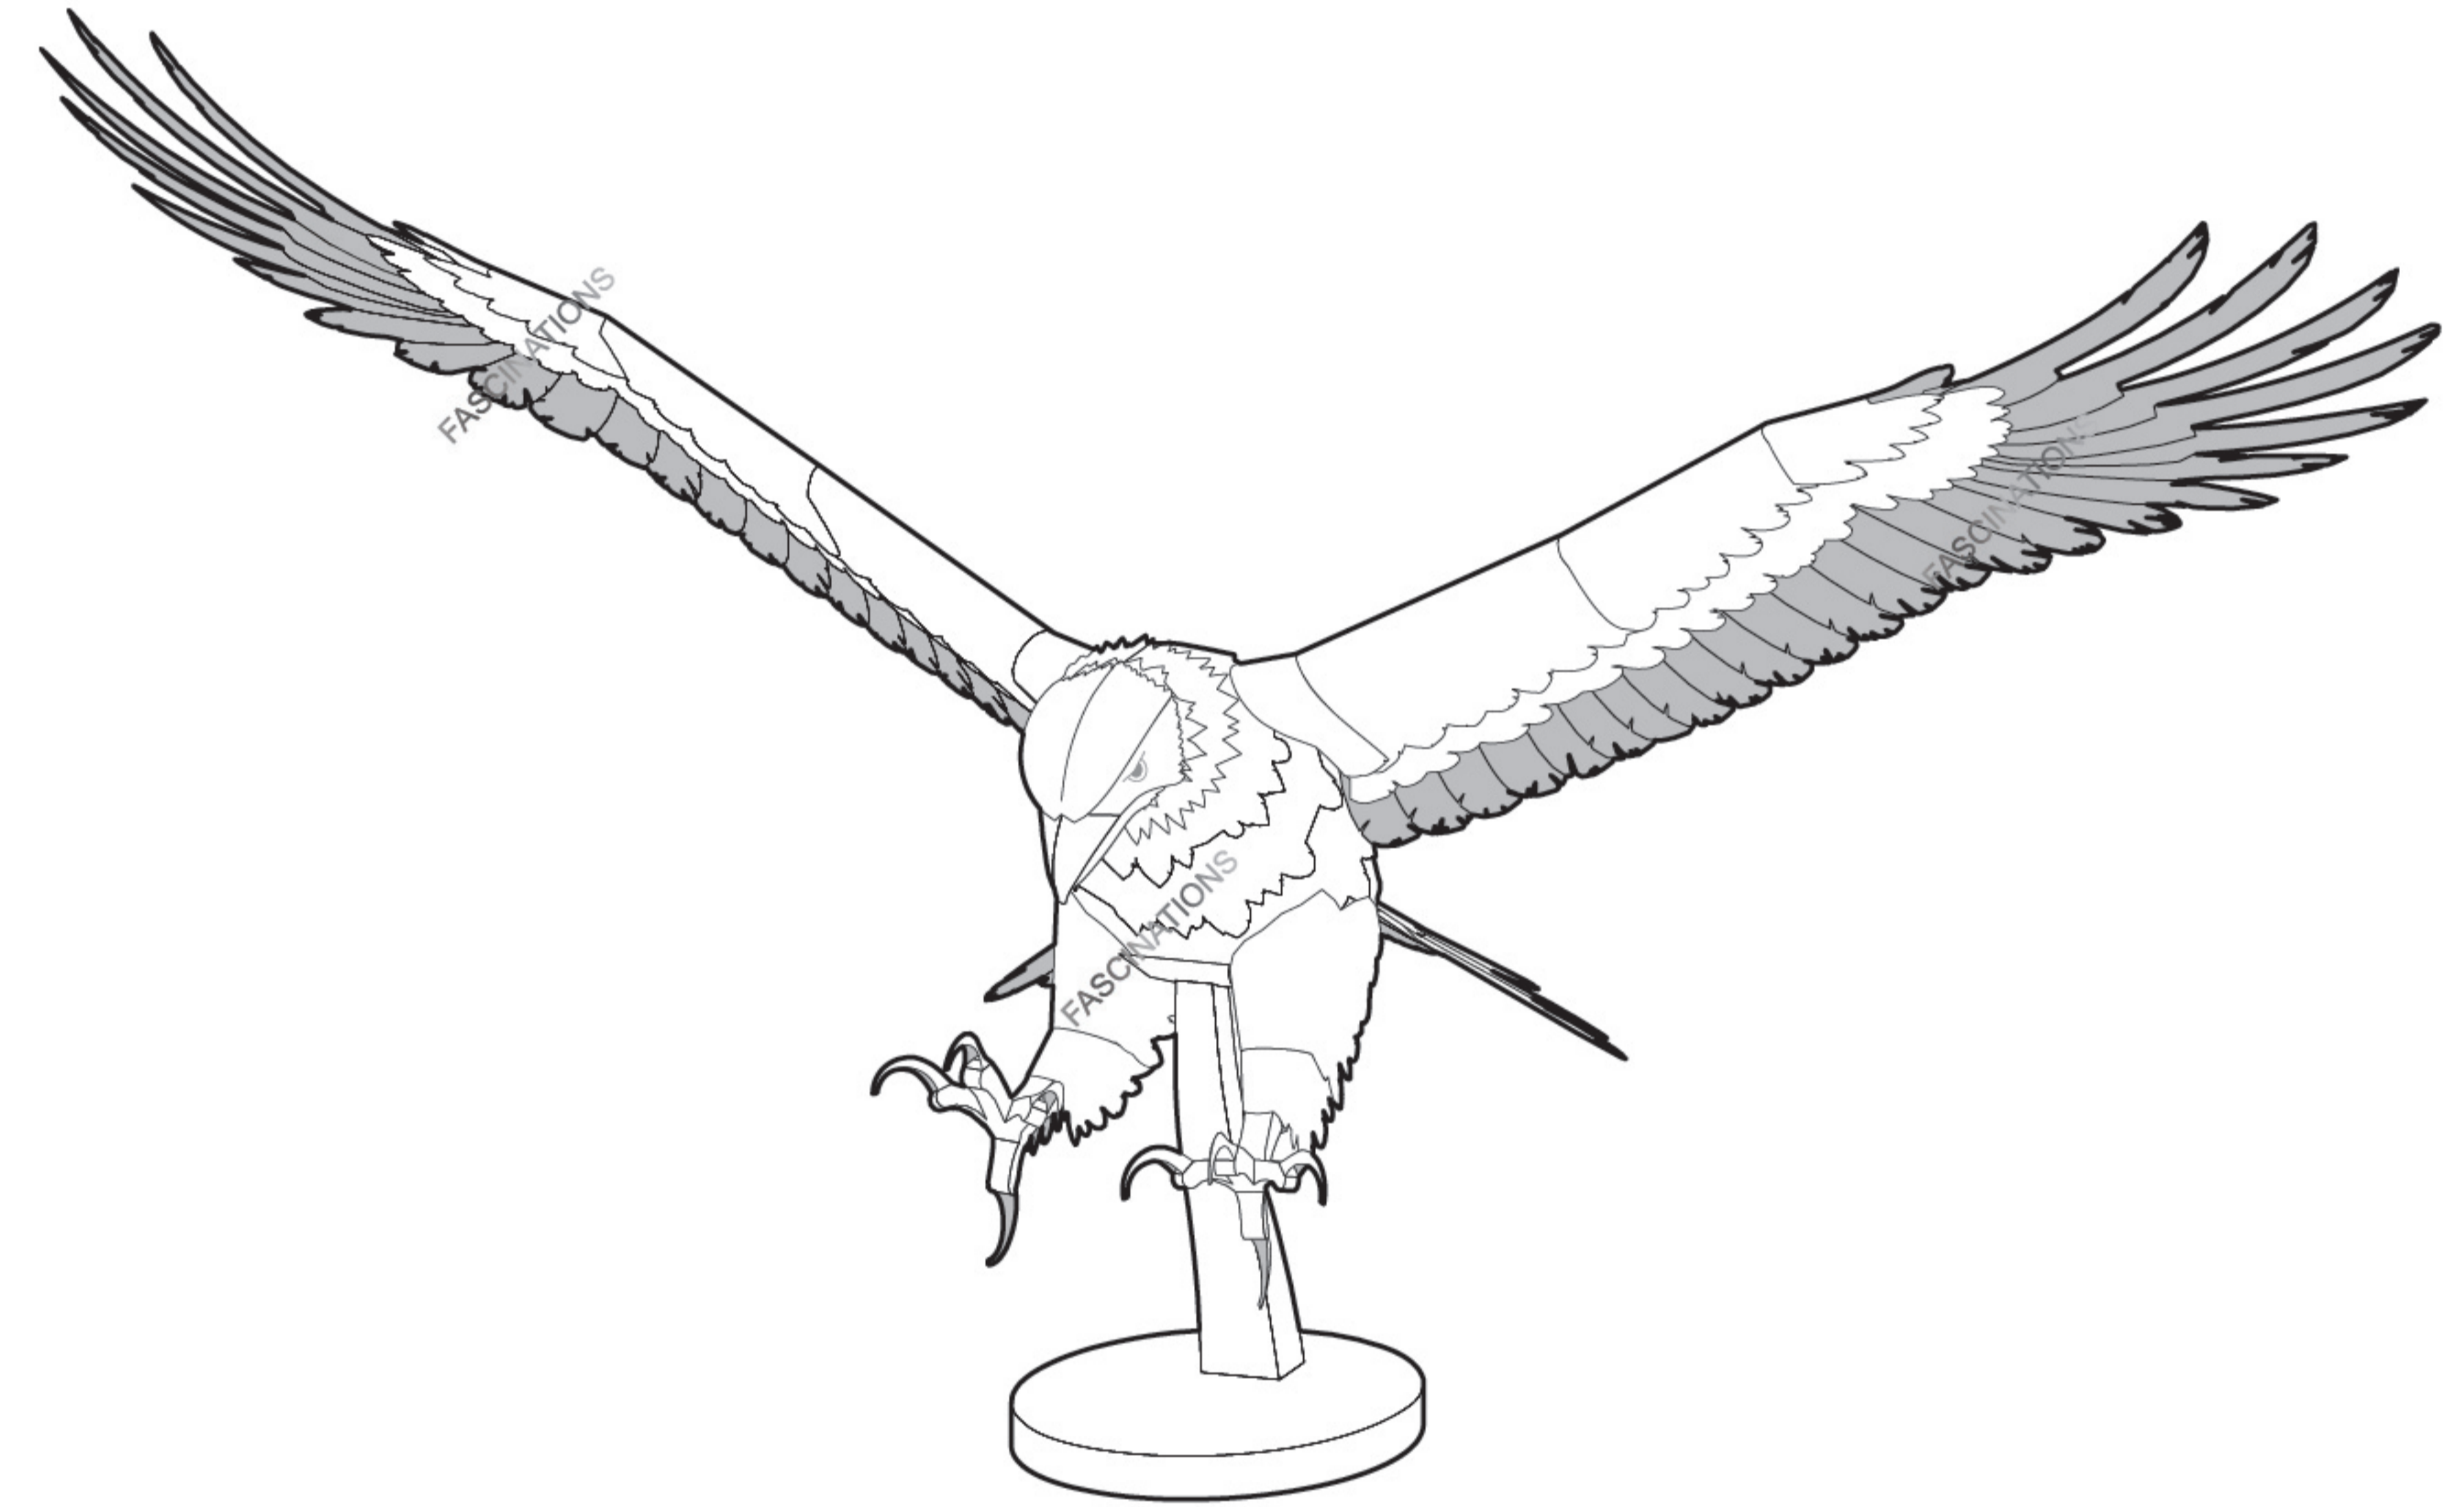


### TO CREATE THE BEST CONNECTIONS

**B** - 110

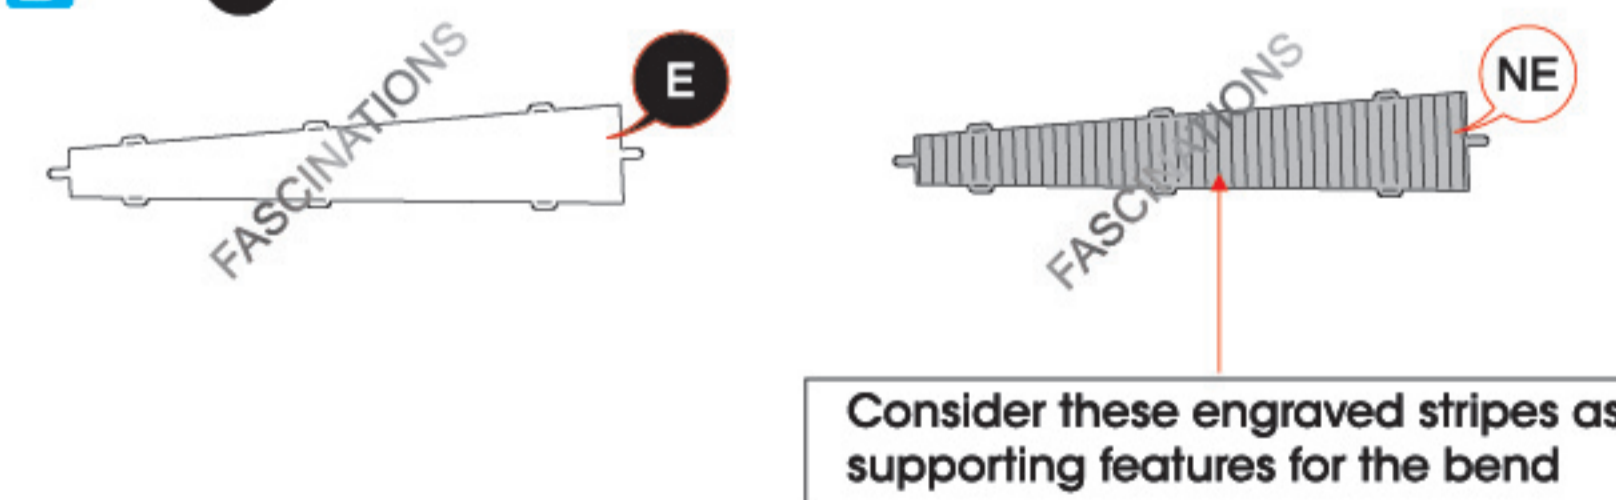

**C** - 109

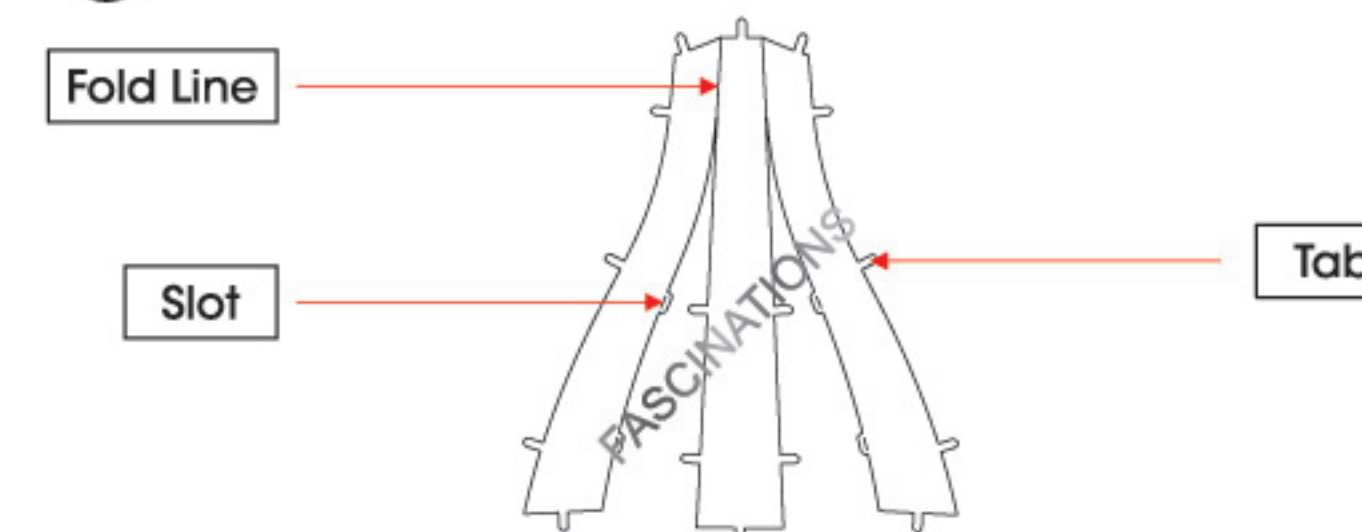

#### Legends:

- Engraved
- Non - engraved
- Attention point
- Insert tab and bend 90 degrees
- Insert tab and twist 90 degrees

#### Assembly tip:

If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish.

Yellow areas should be curled


Red areas should be folded




In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed.

#### Recommended tools:

- Wire cutters: helpful for taking parts from the metal sheets.

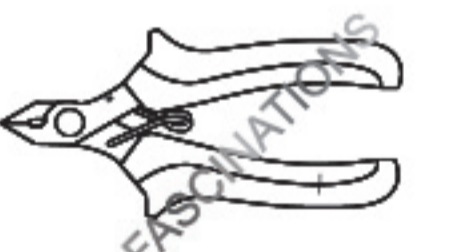


- Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.

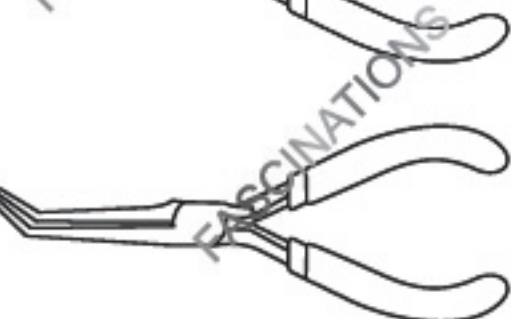


### Step 1

Tips: Look through the assembly flow before you start

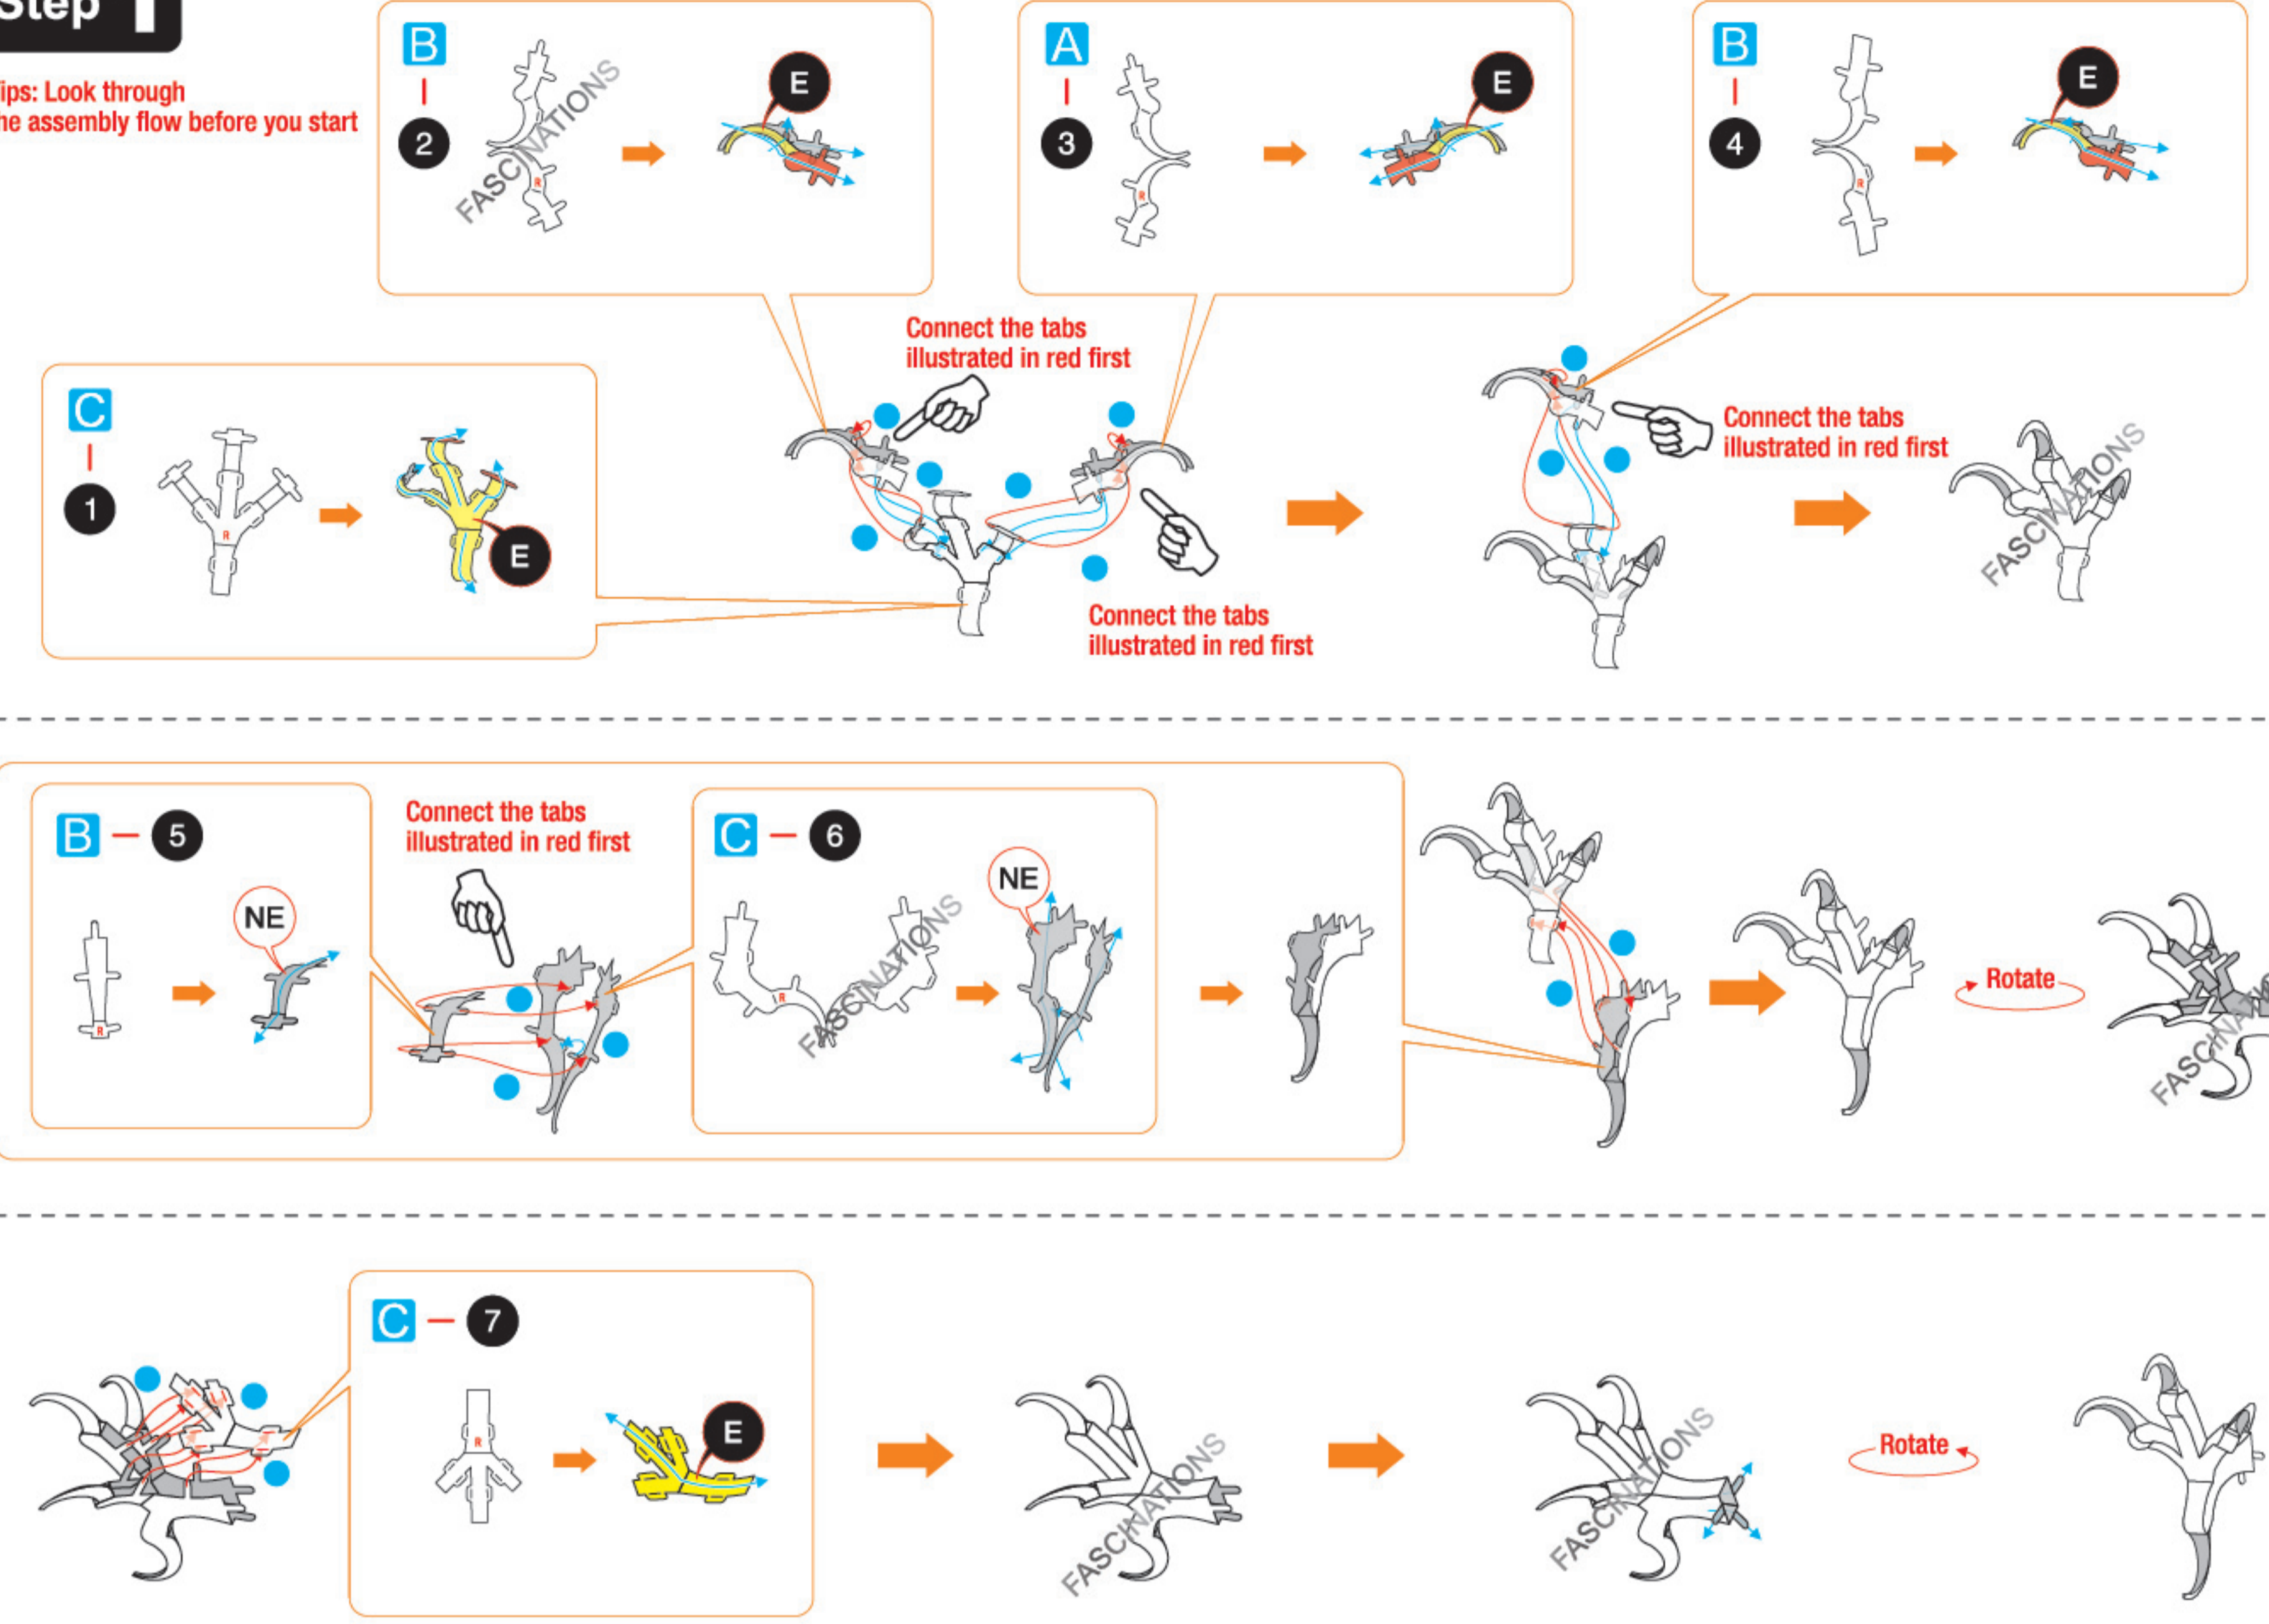


### Step 2

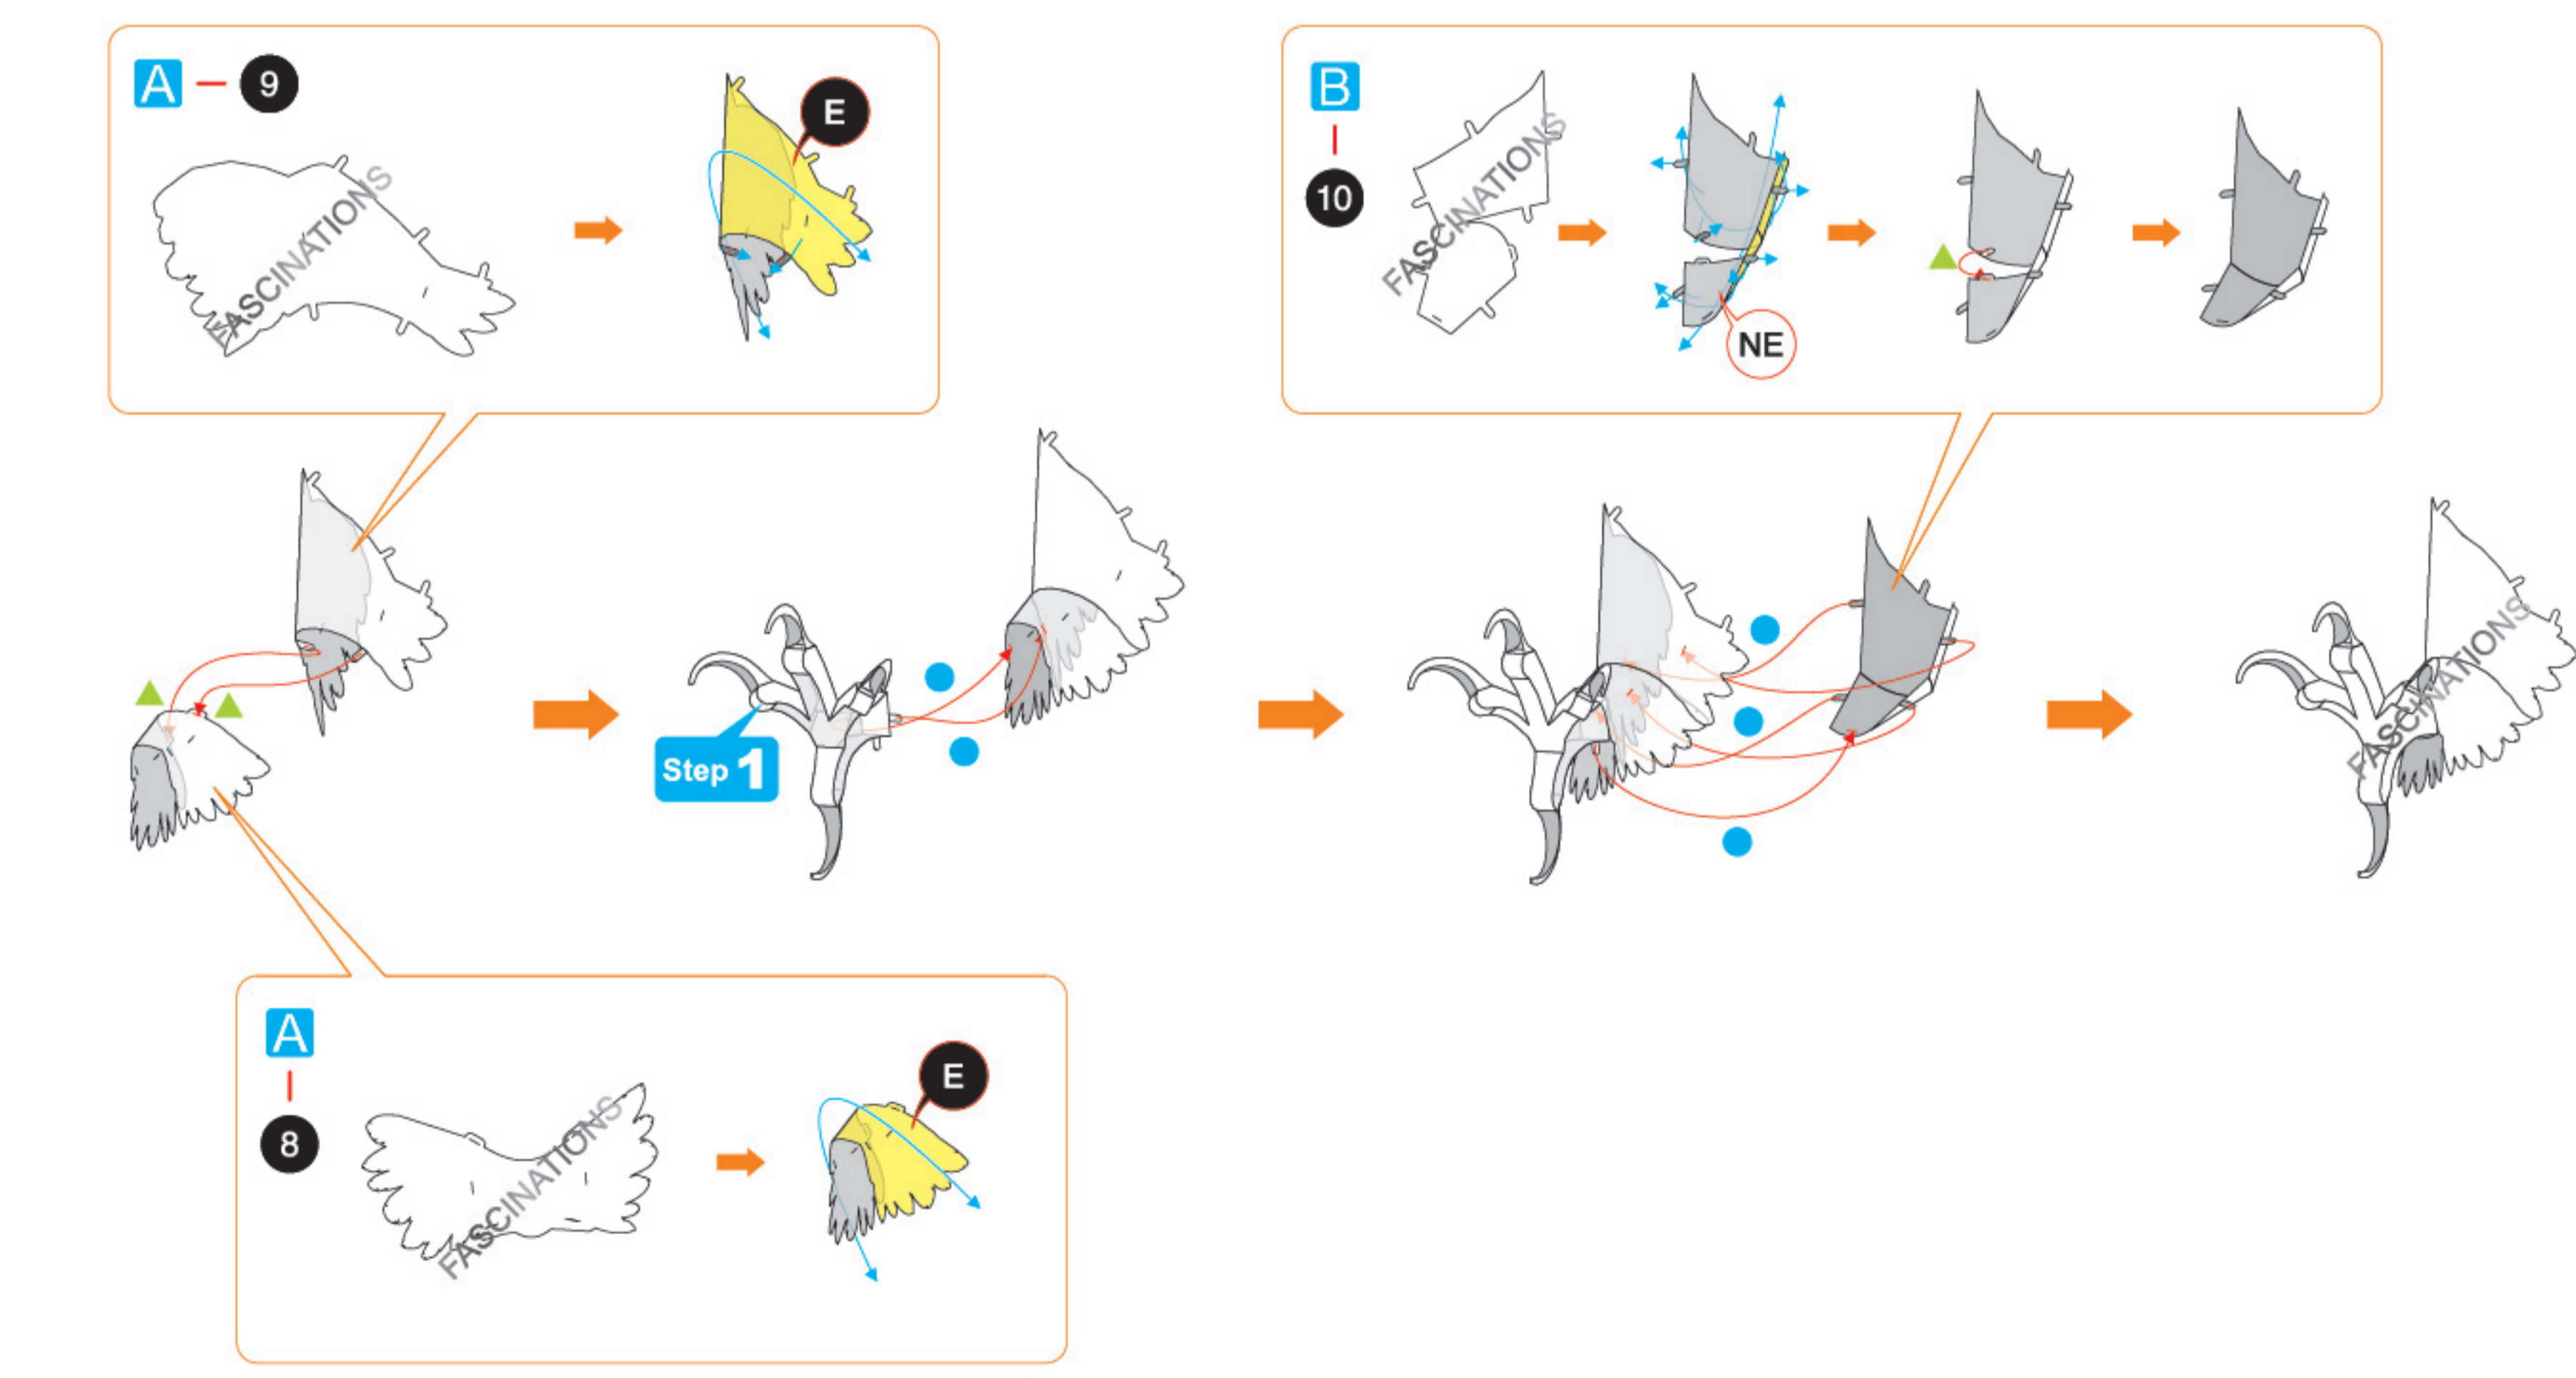


### Step 3



Tips: Look through the assembly flow before you start

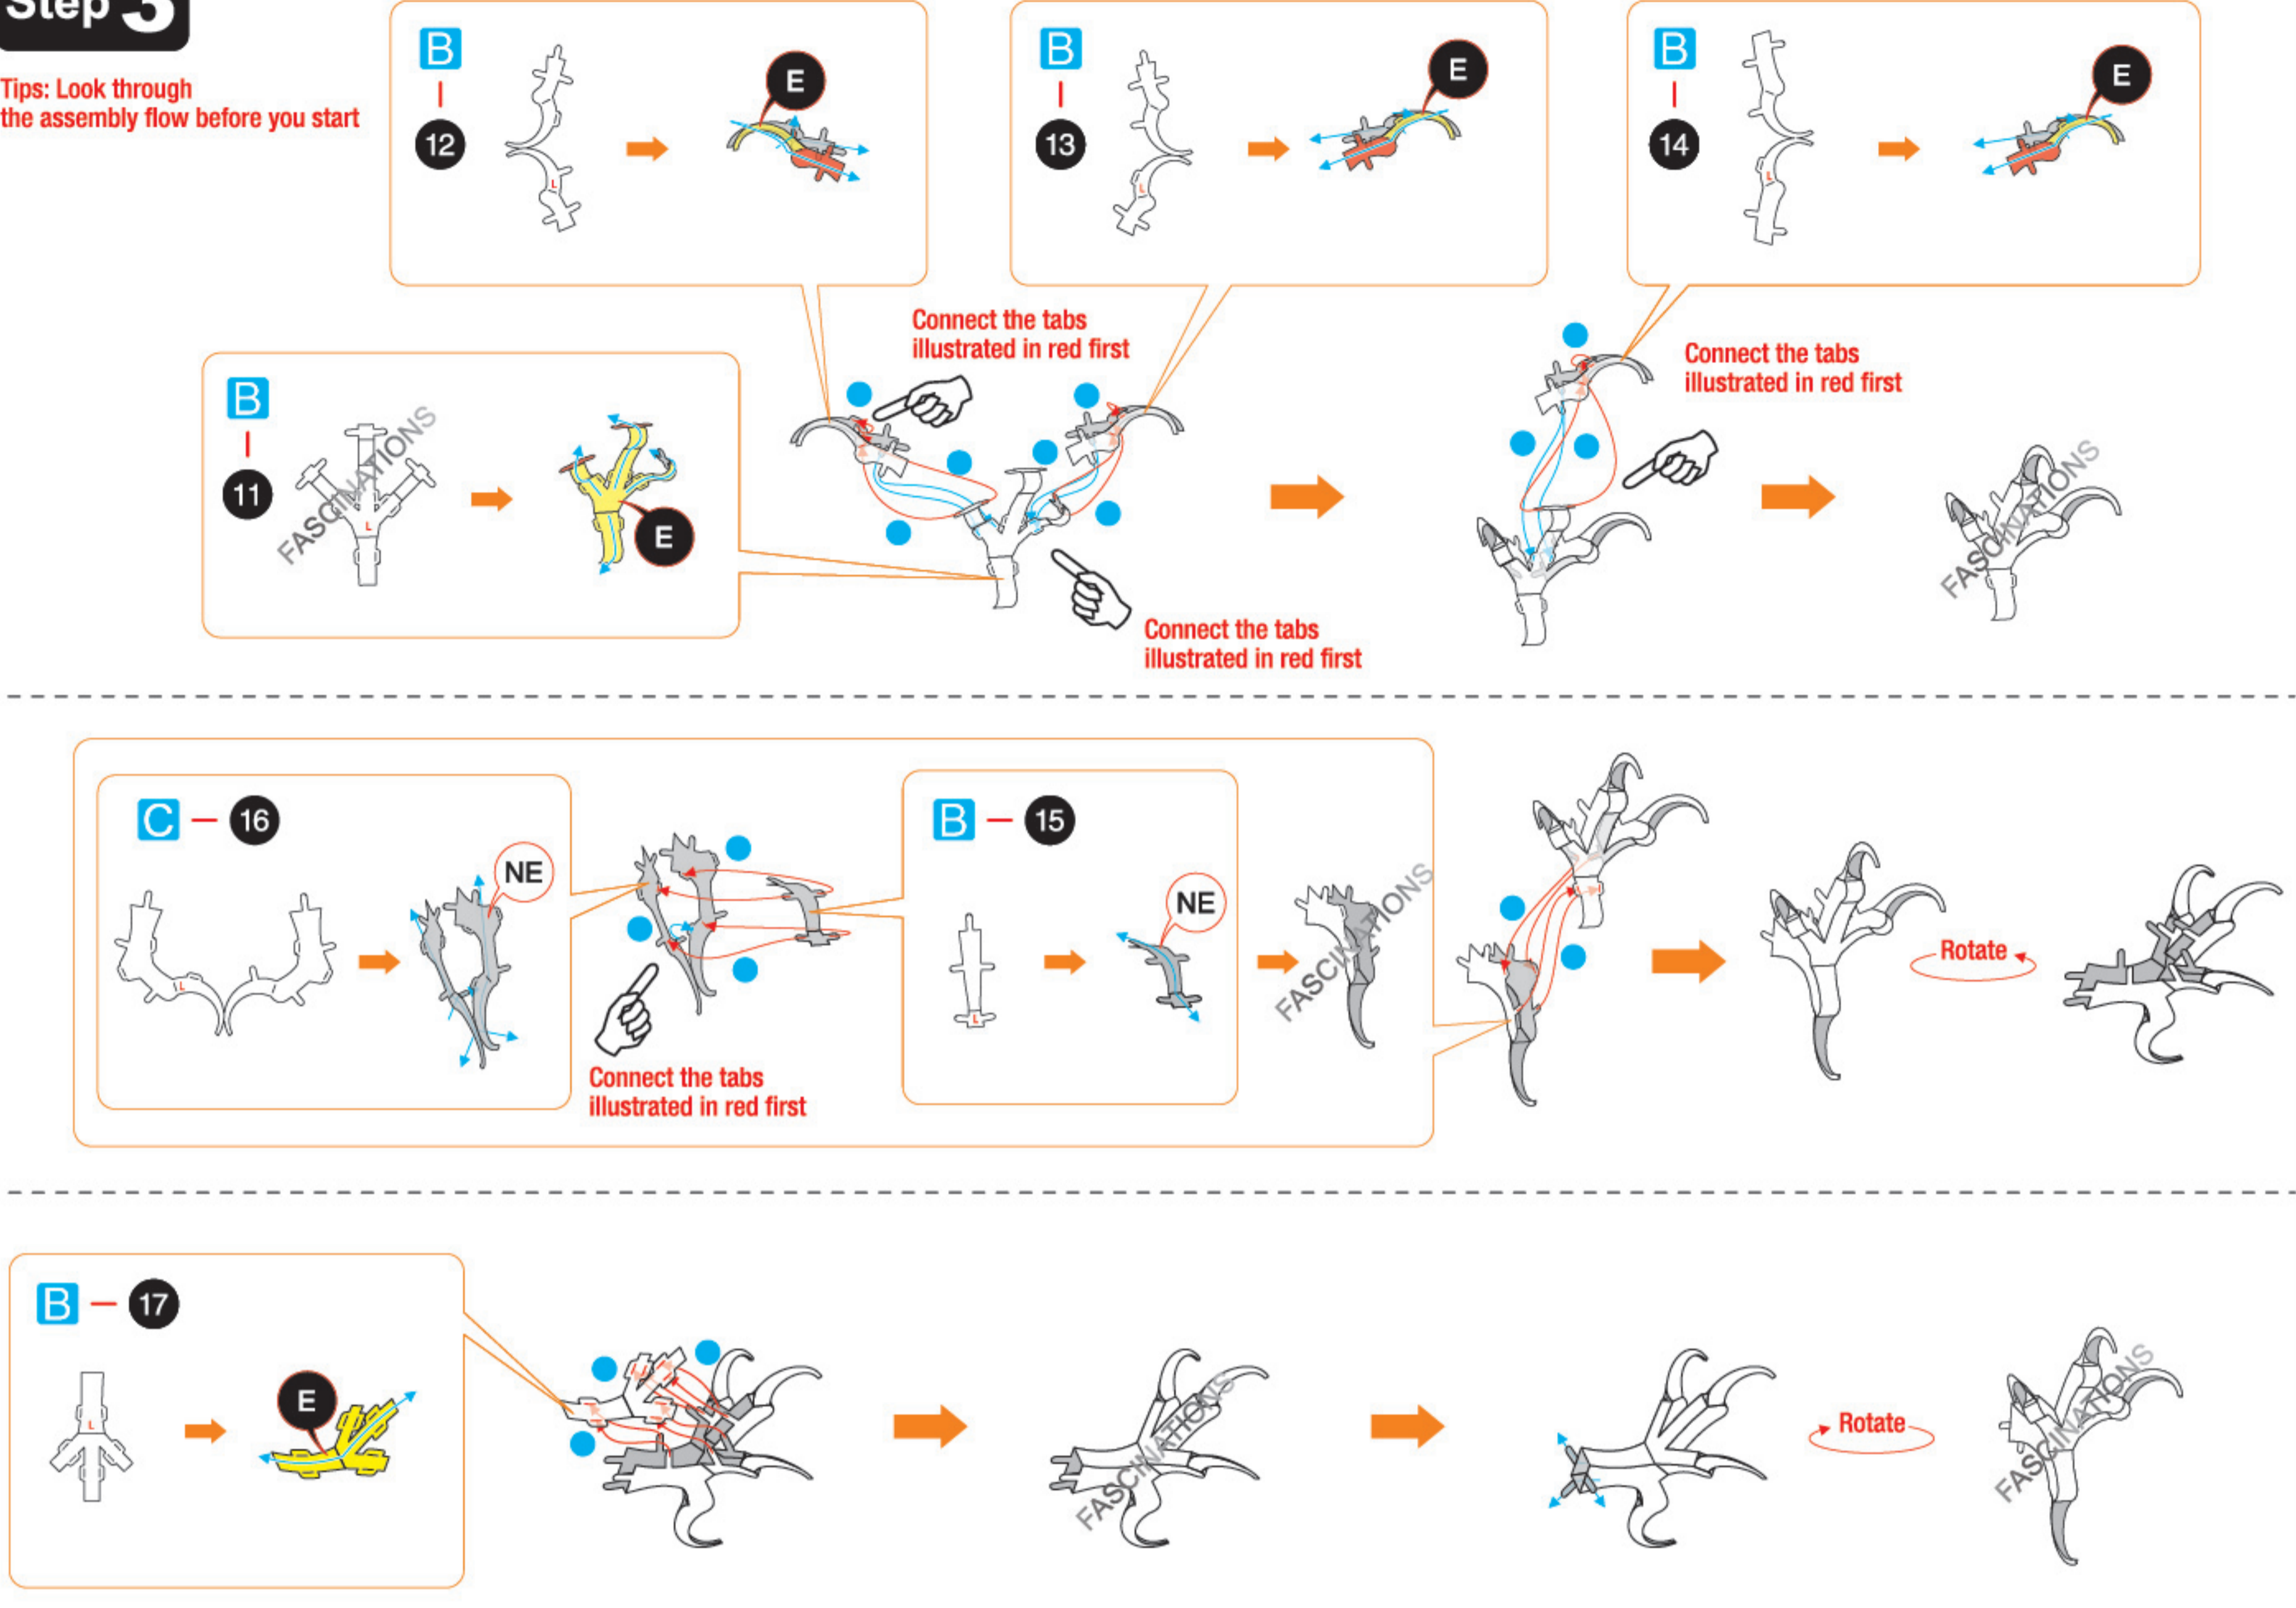



### Step 4

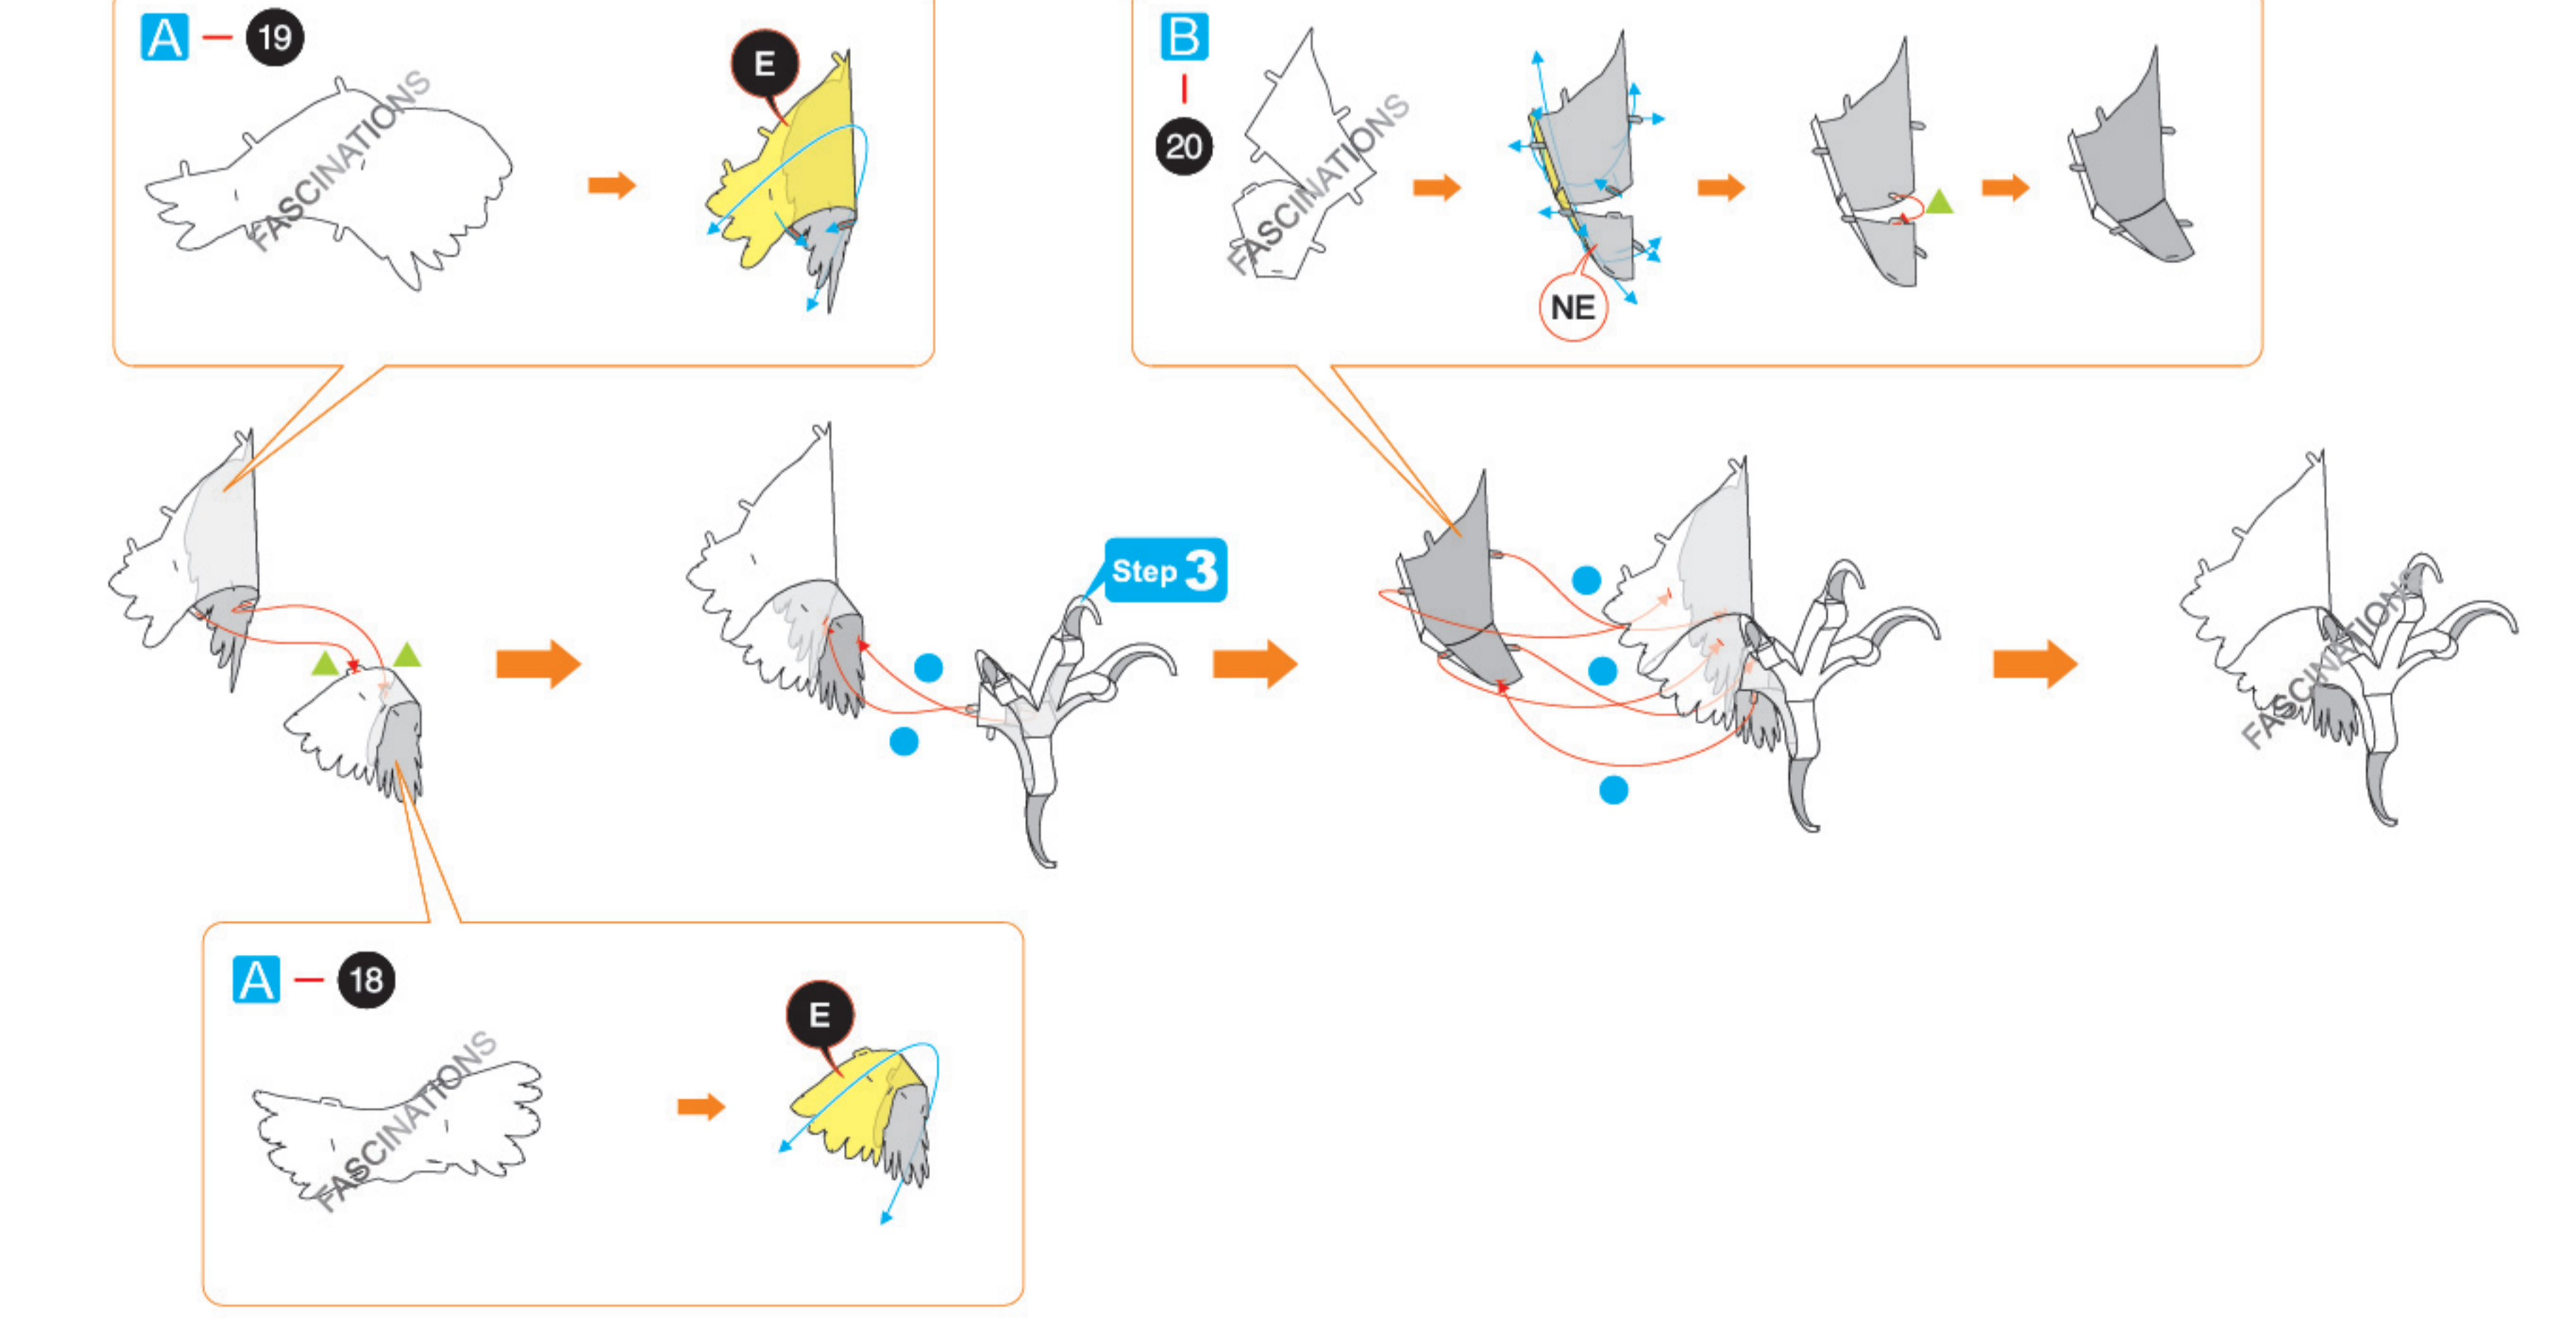


Step 5



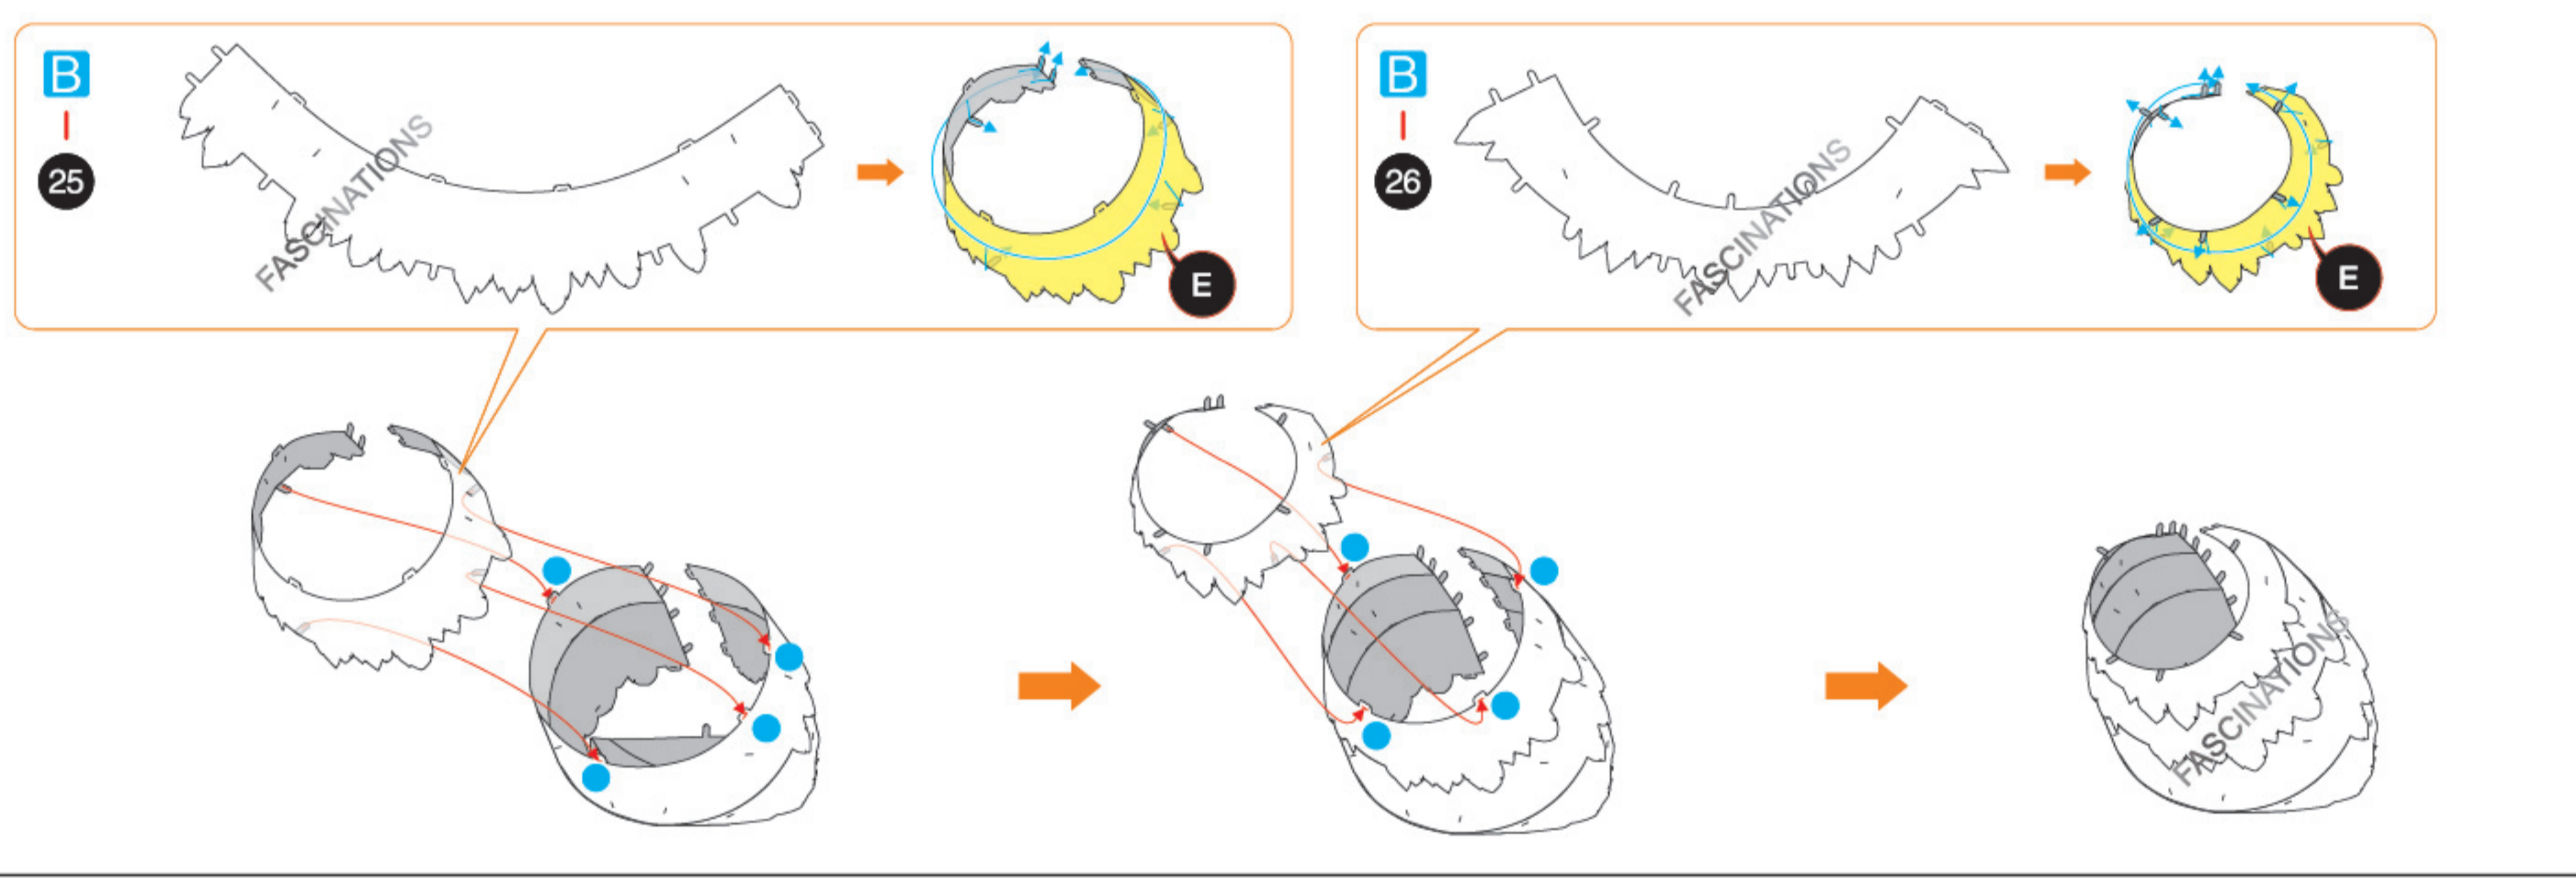
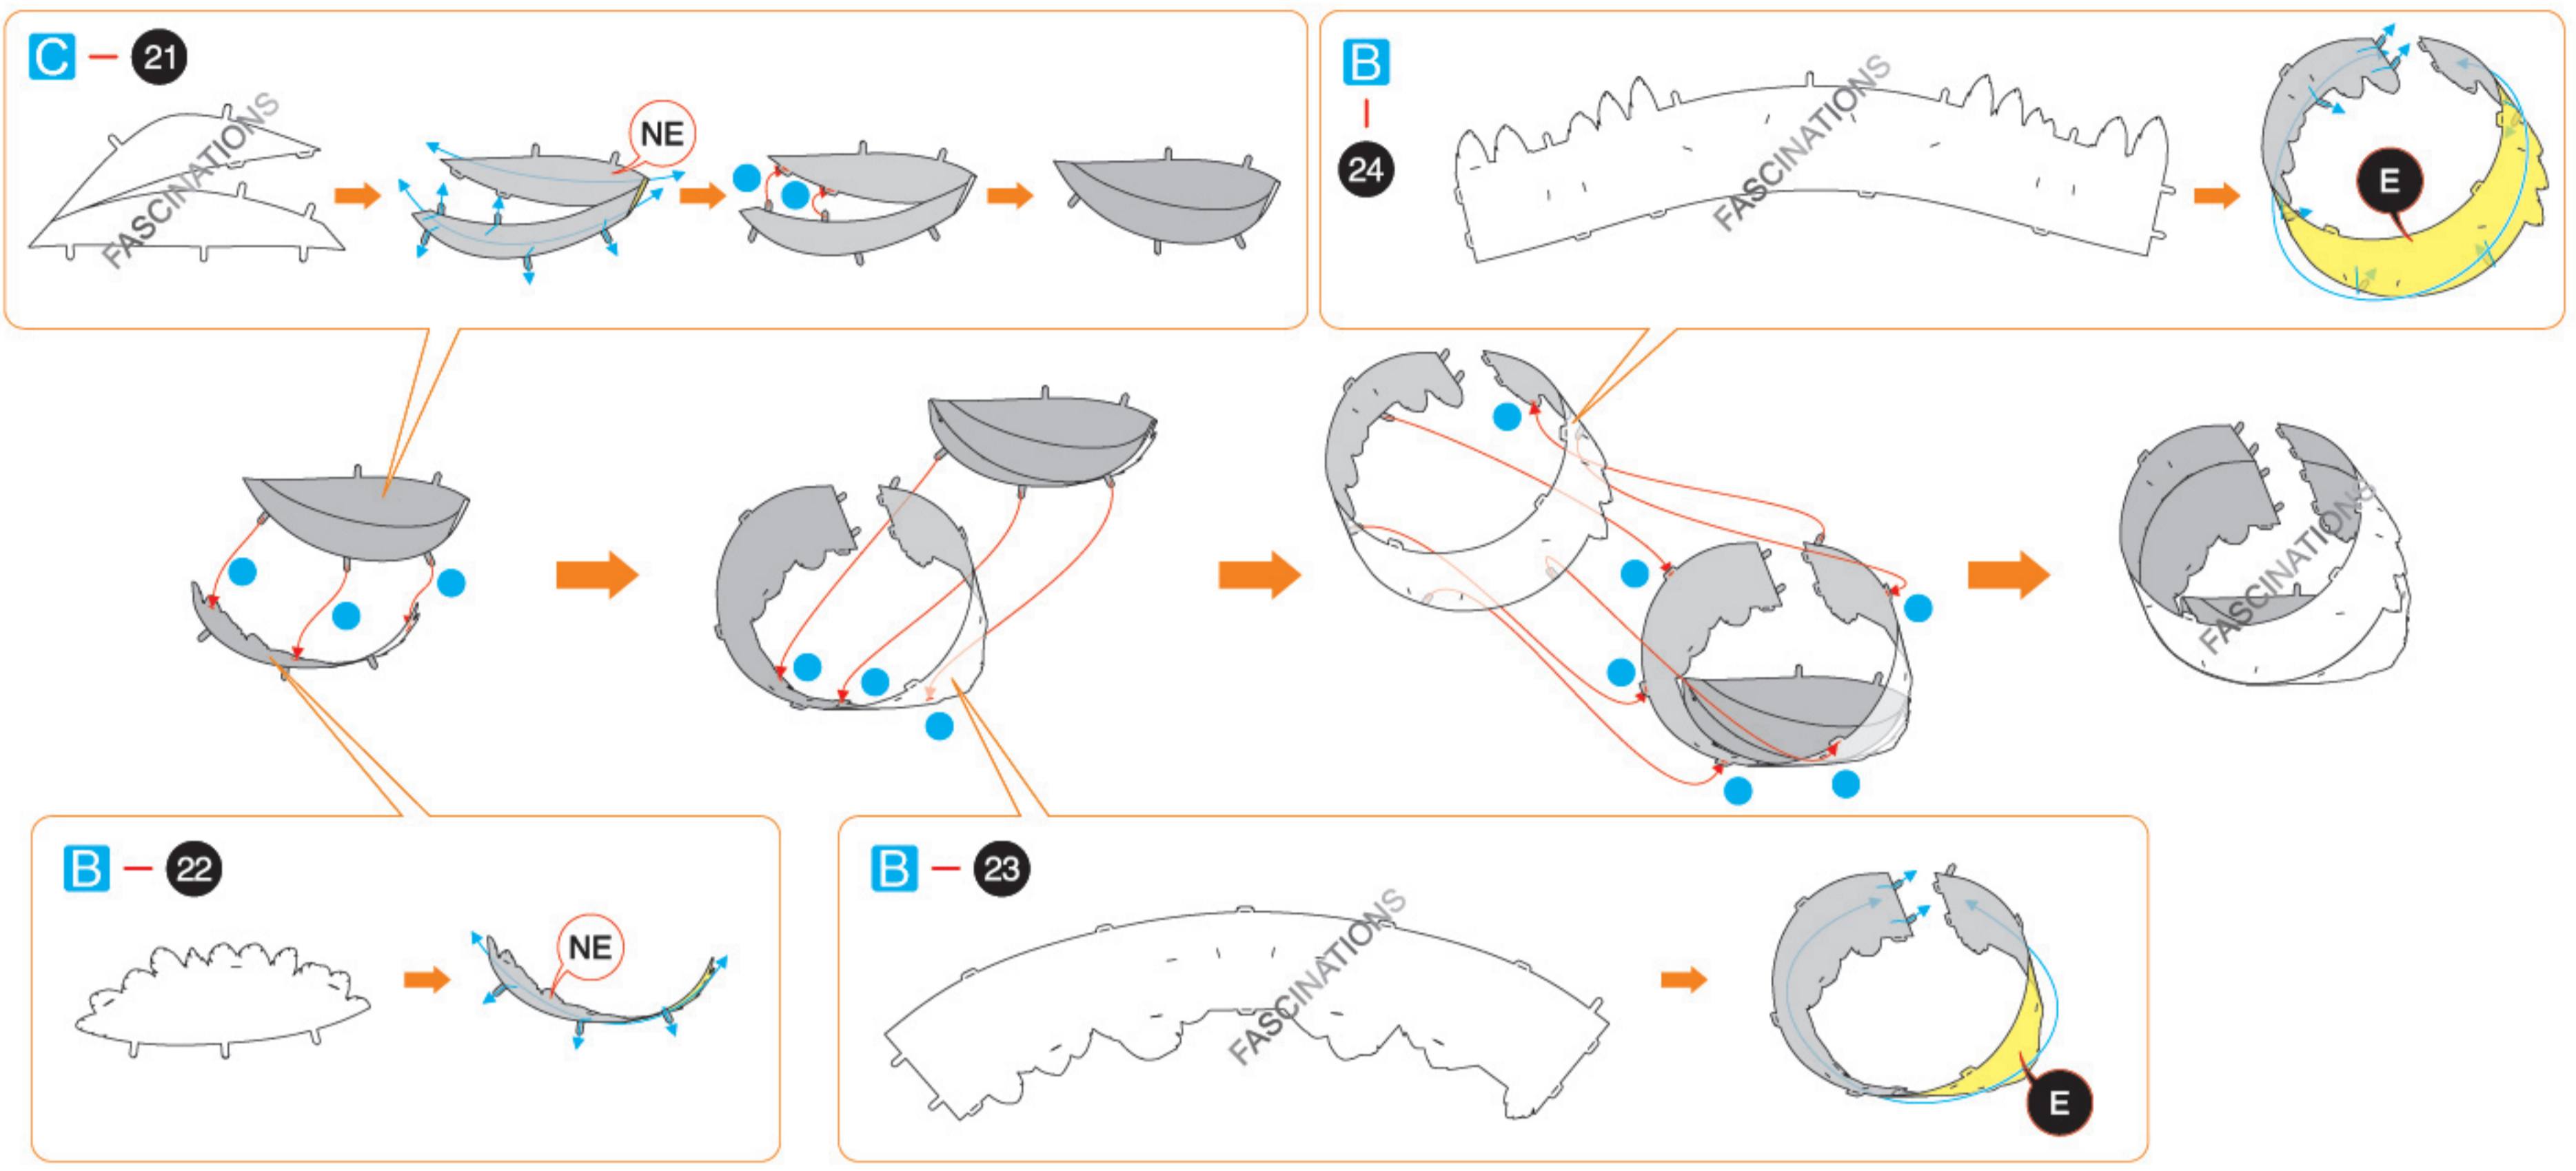




Step 6

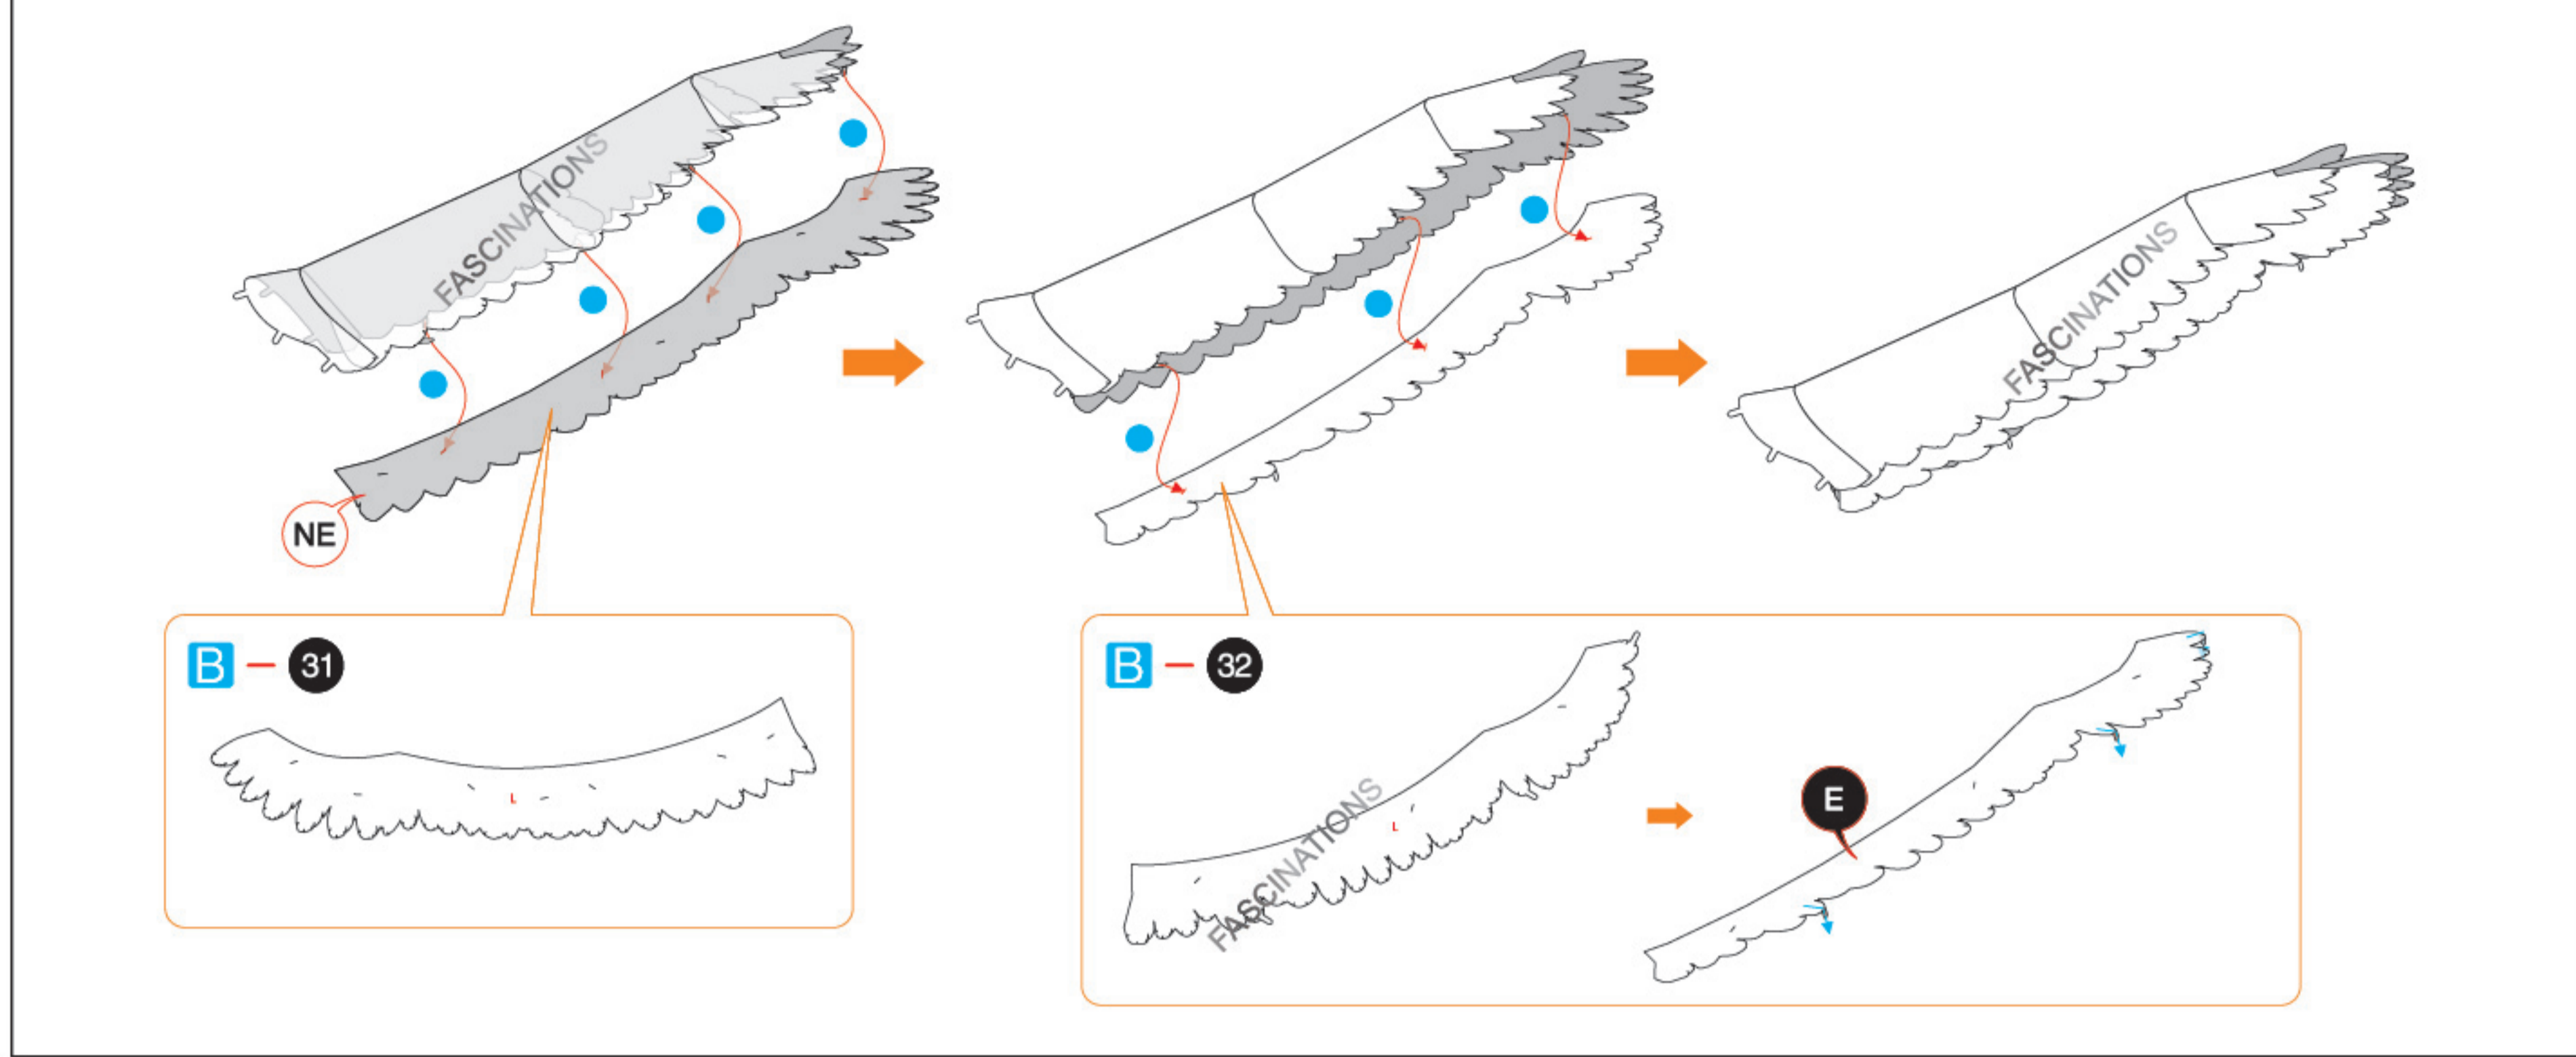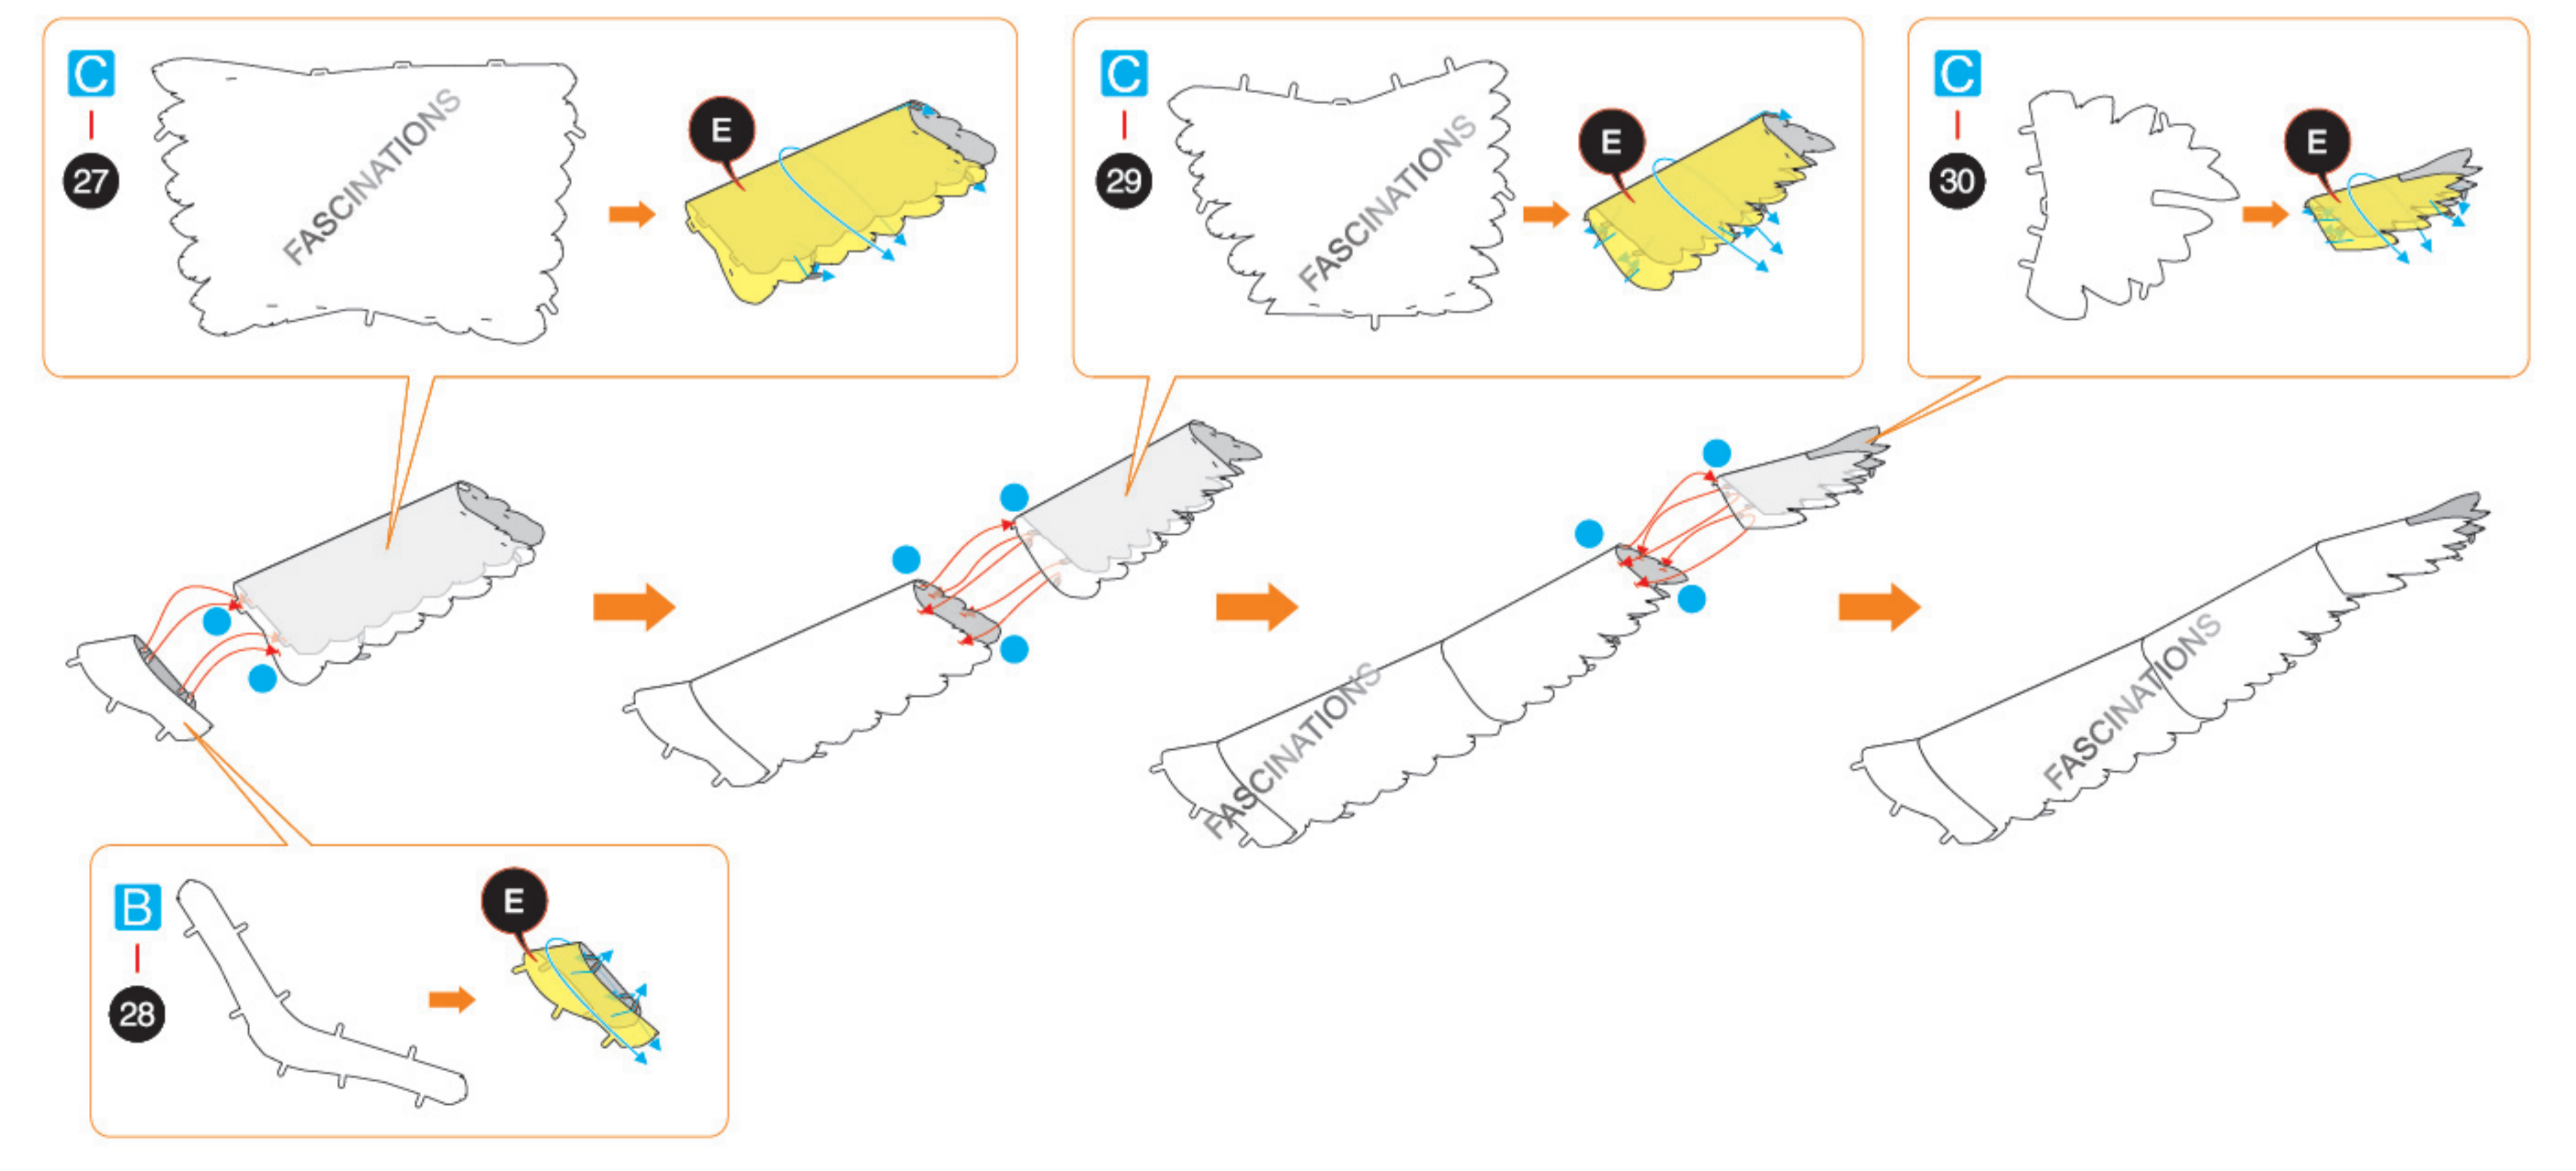

Step 7



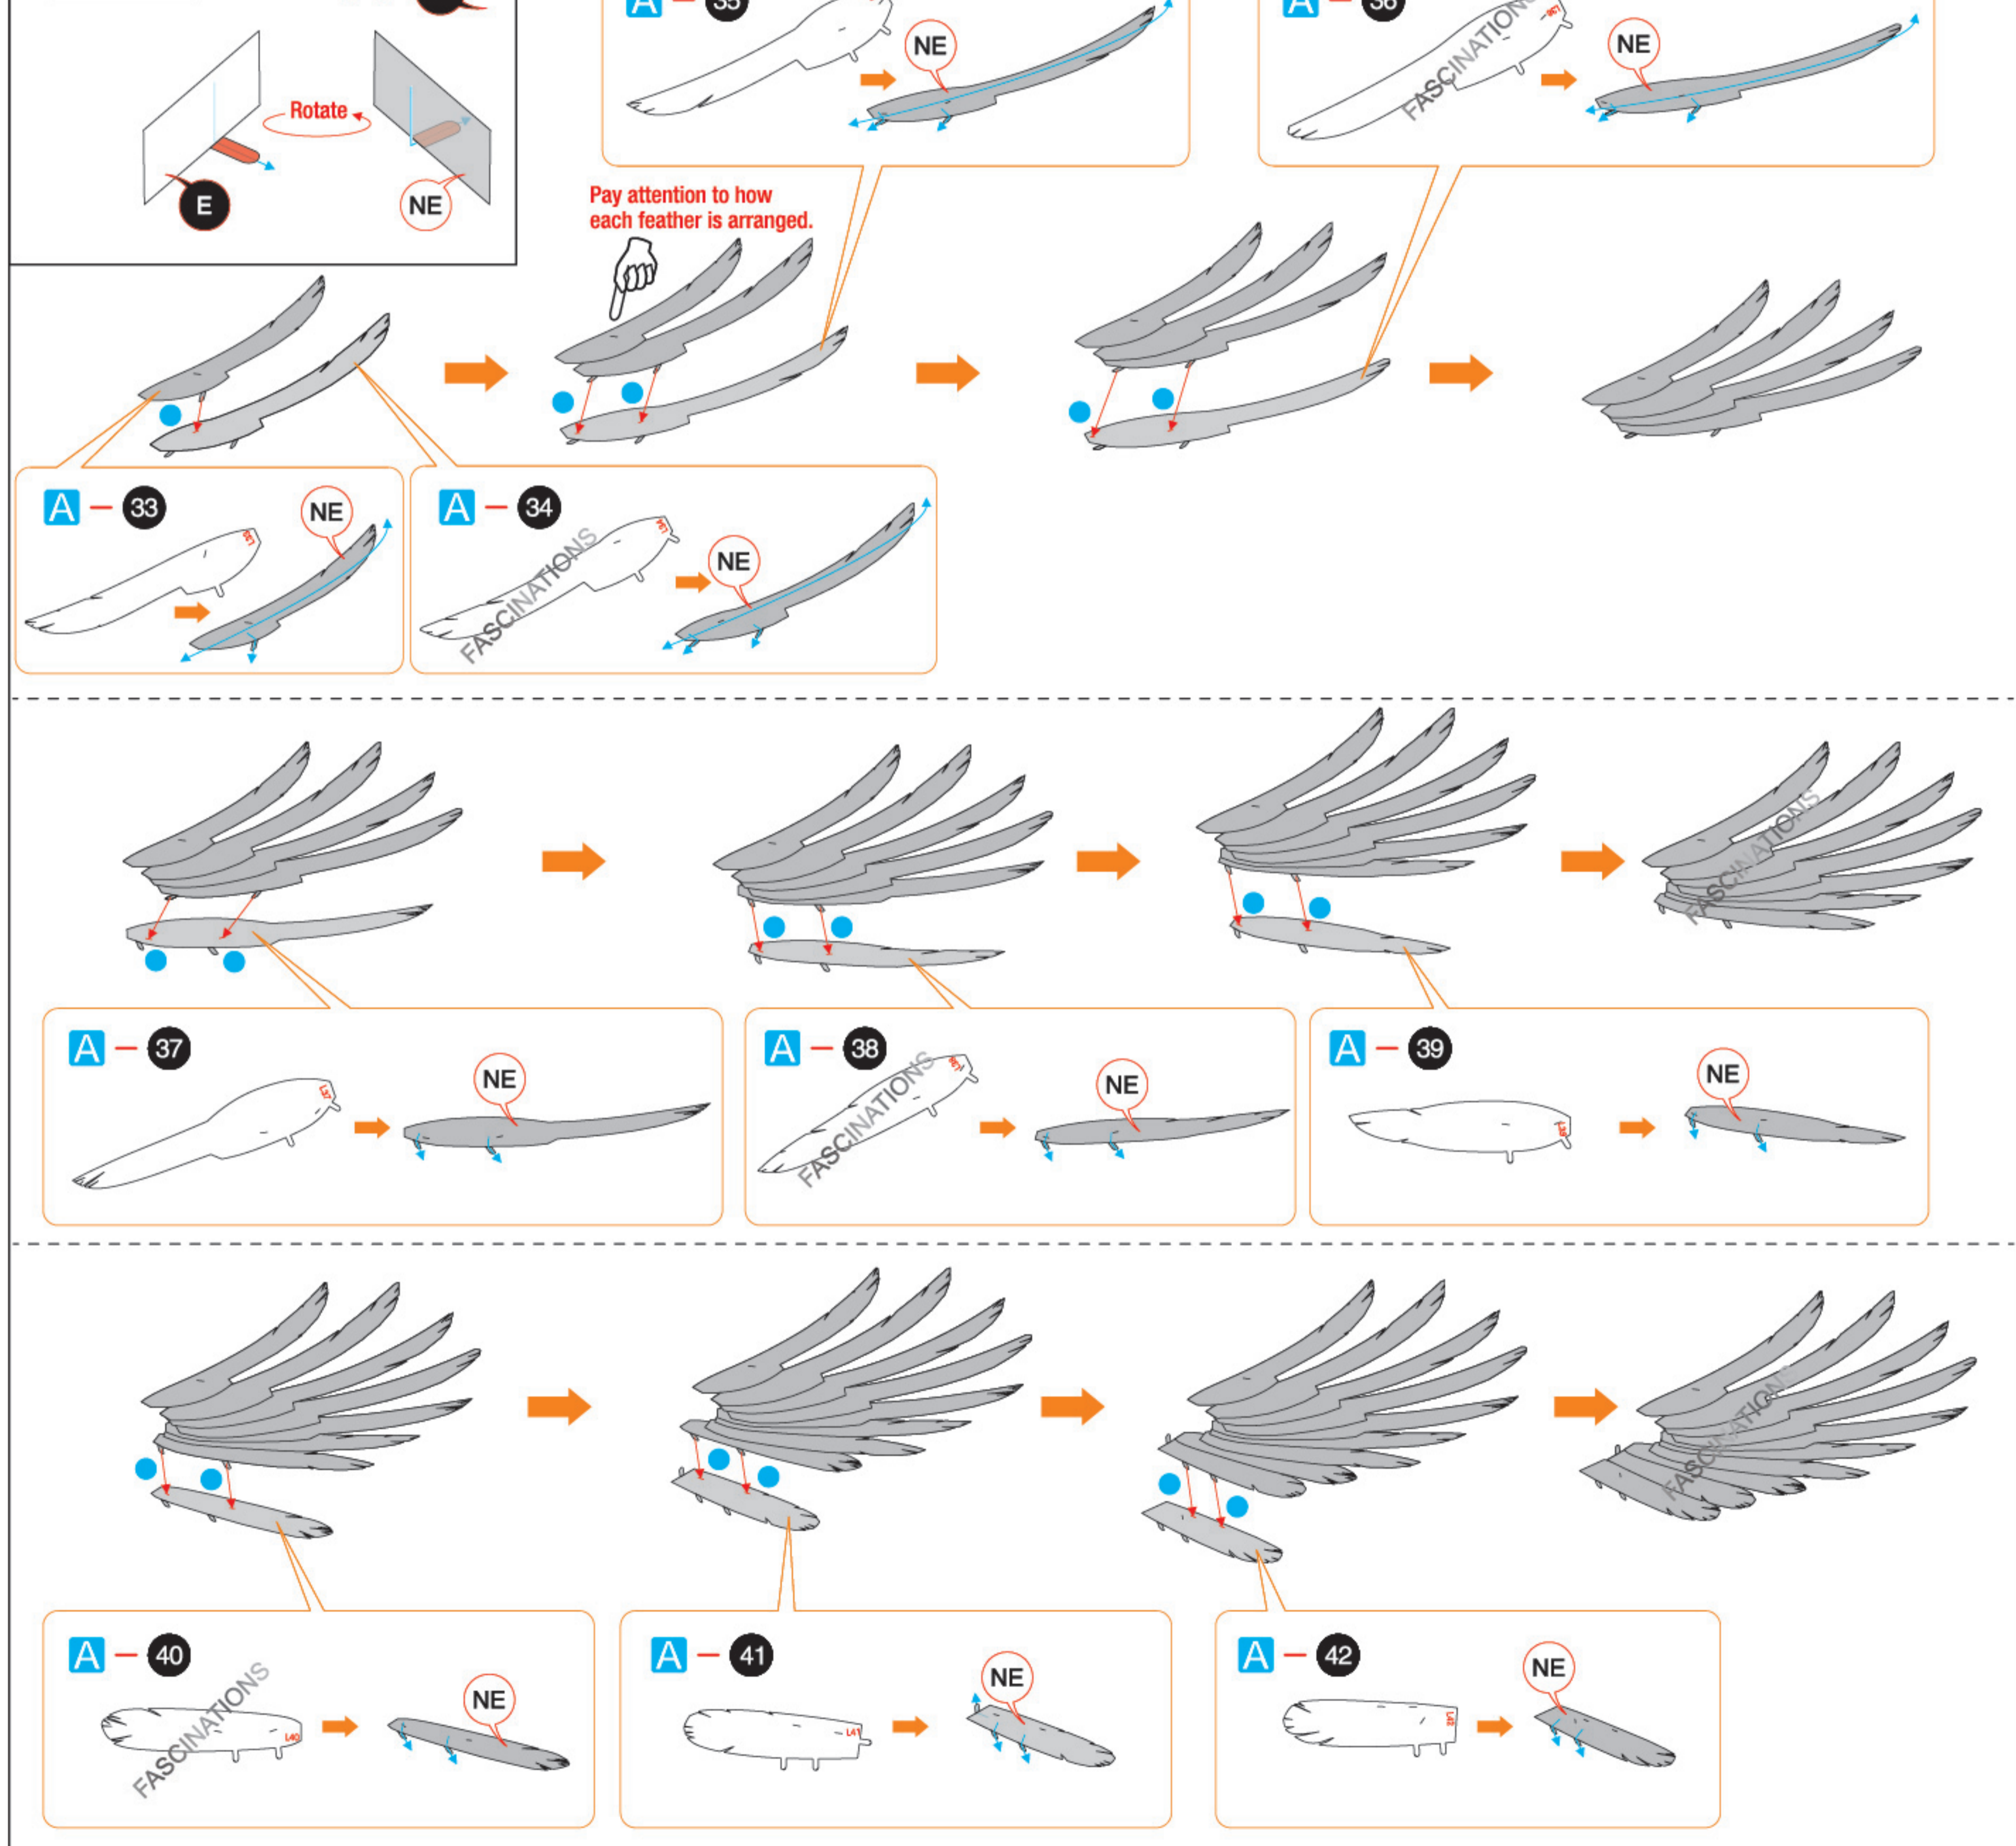


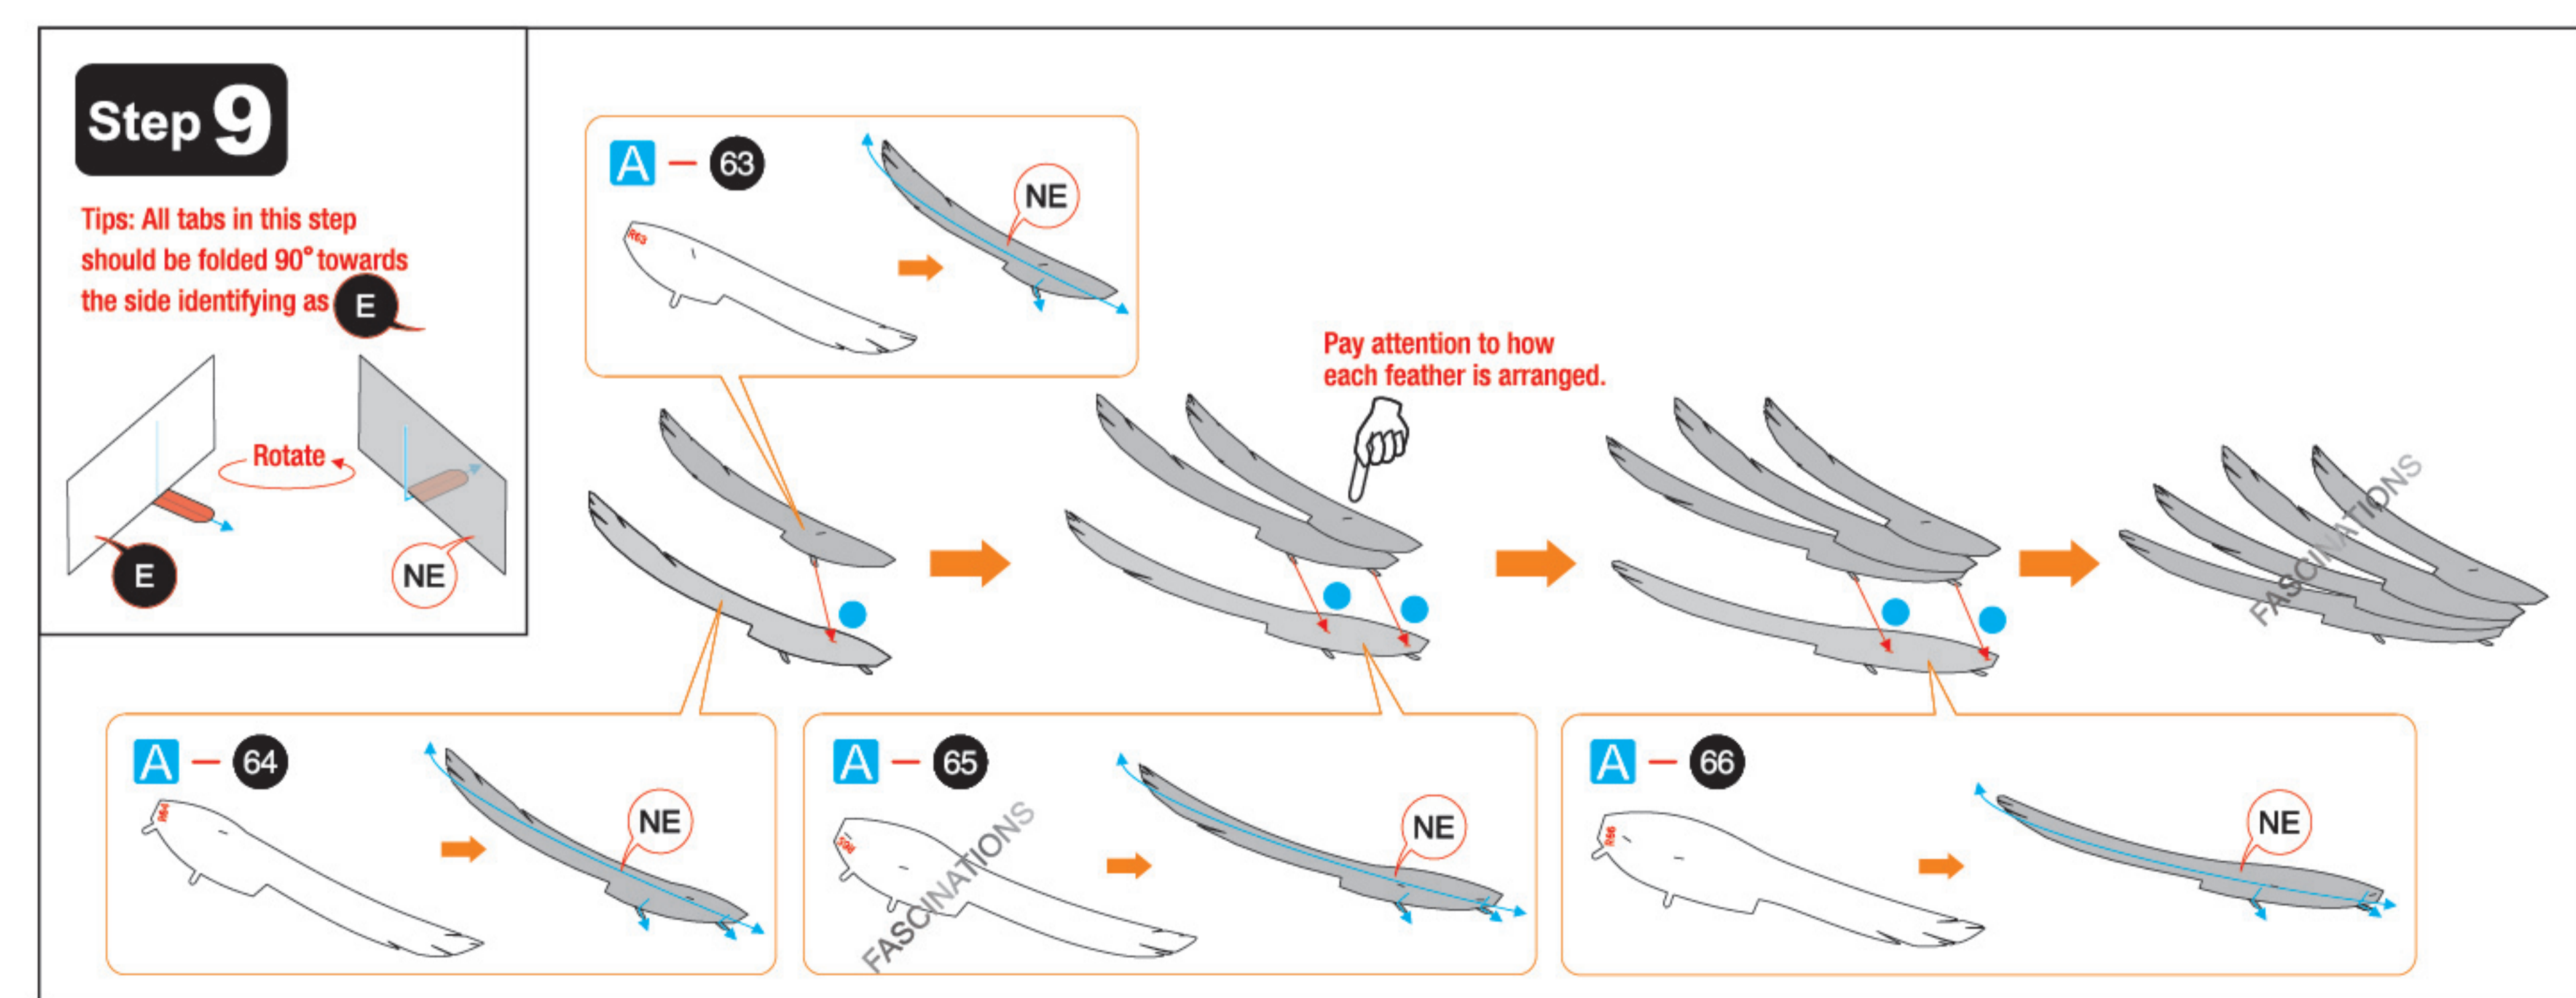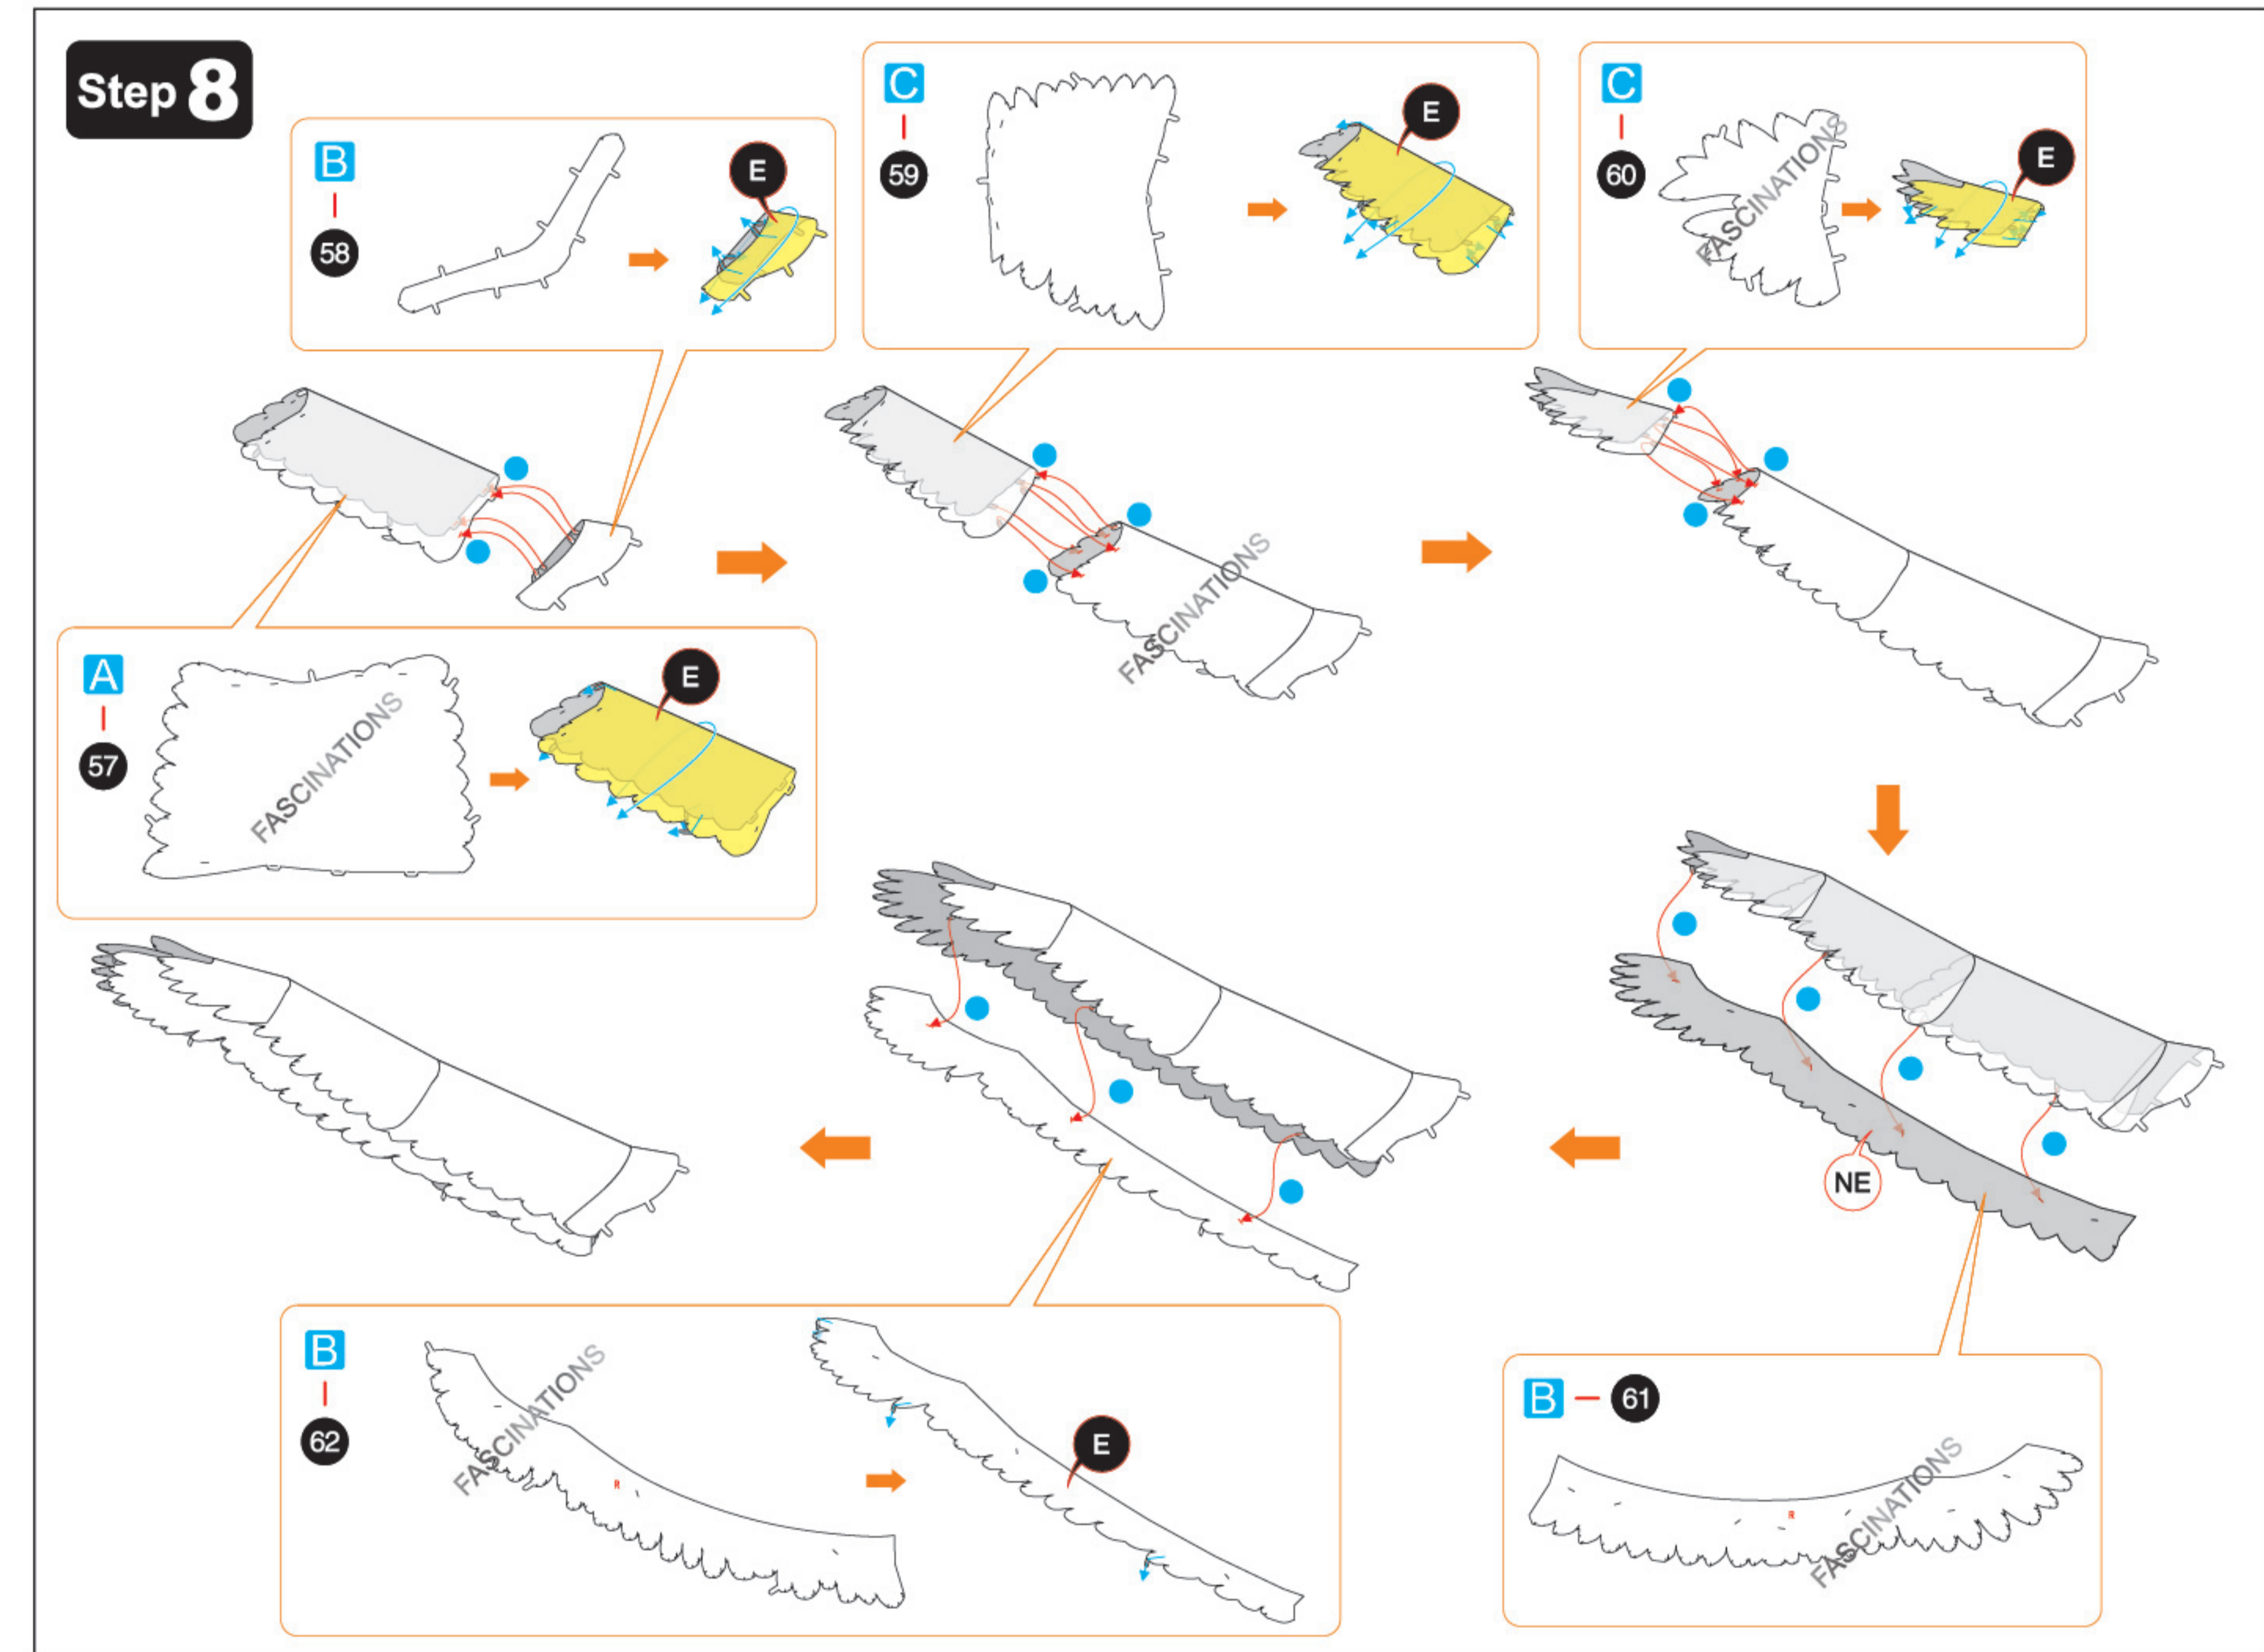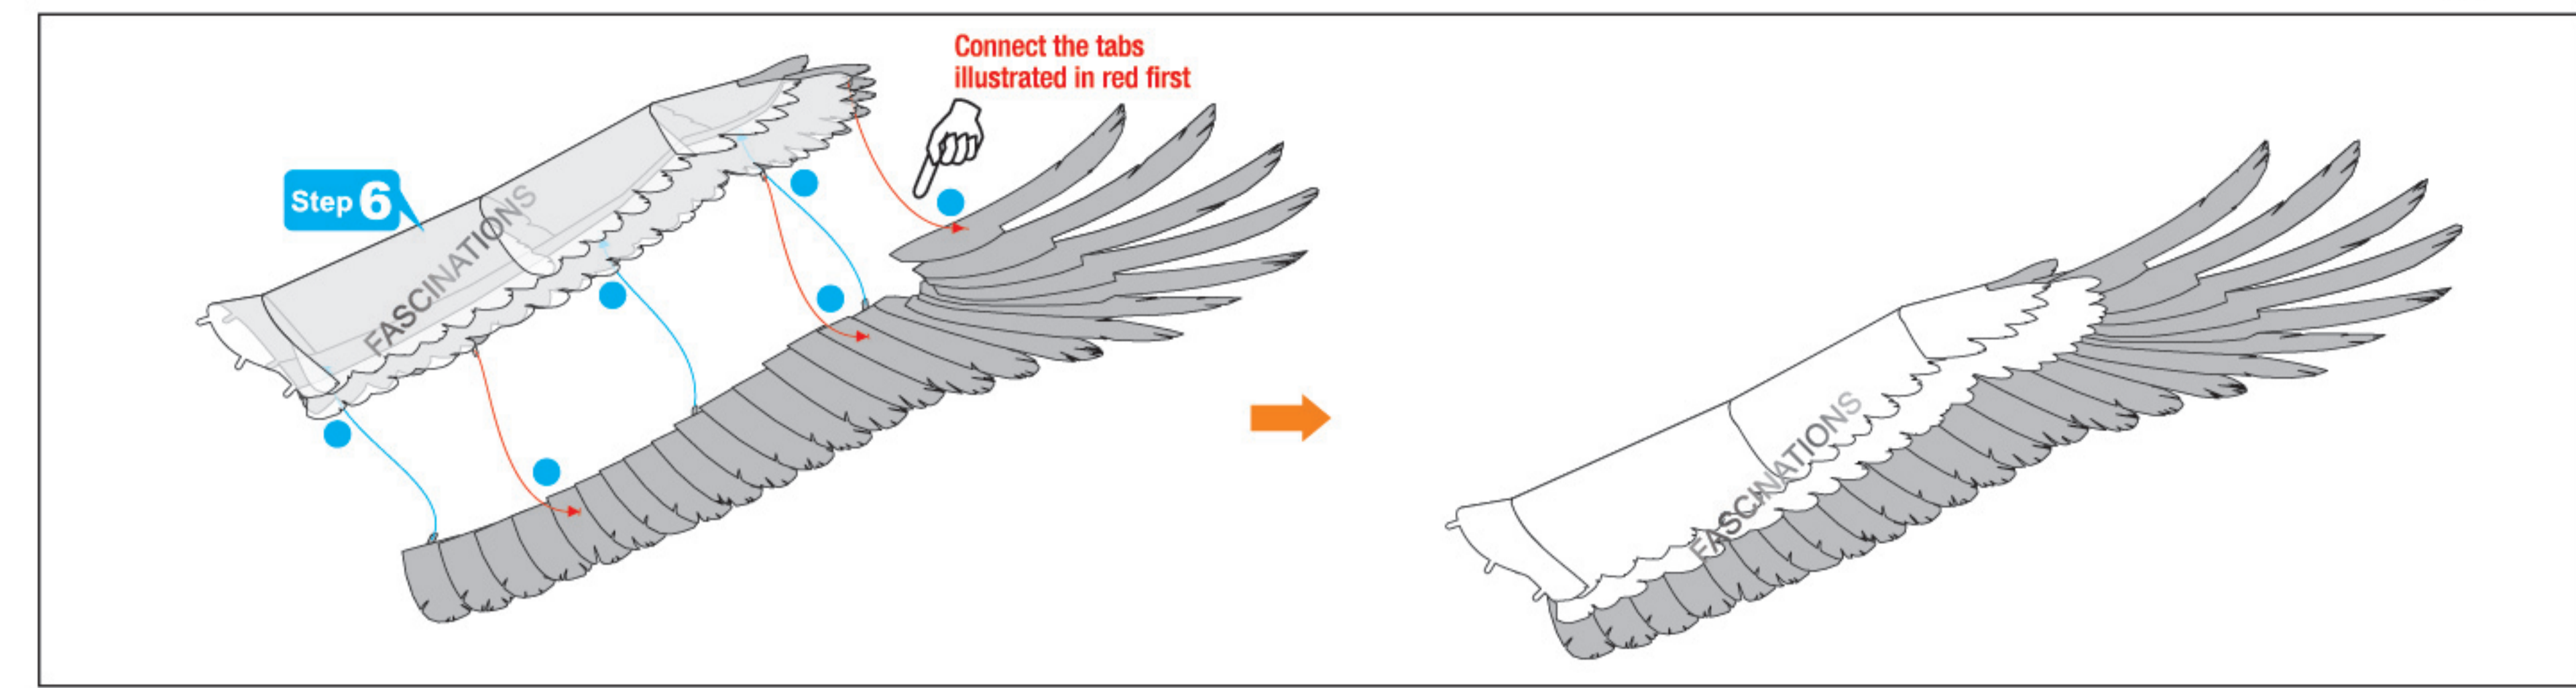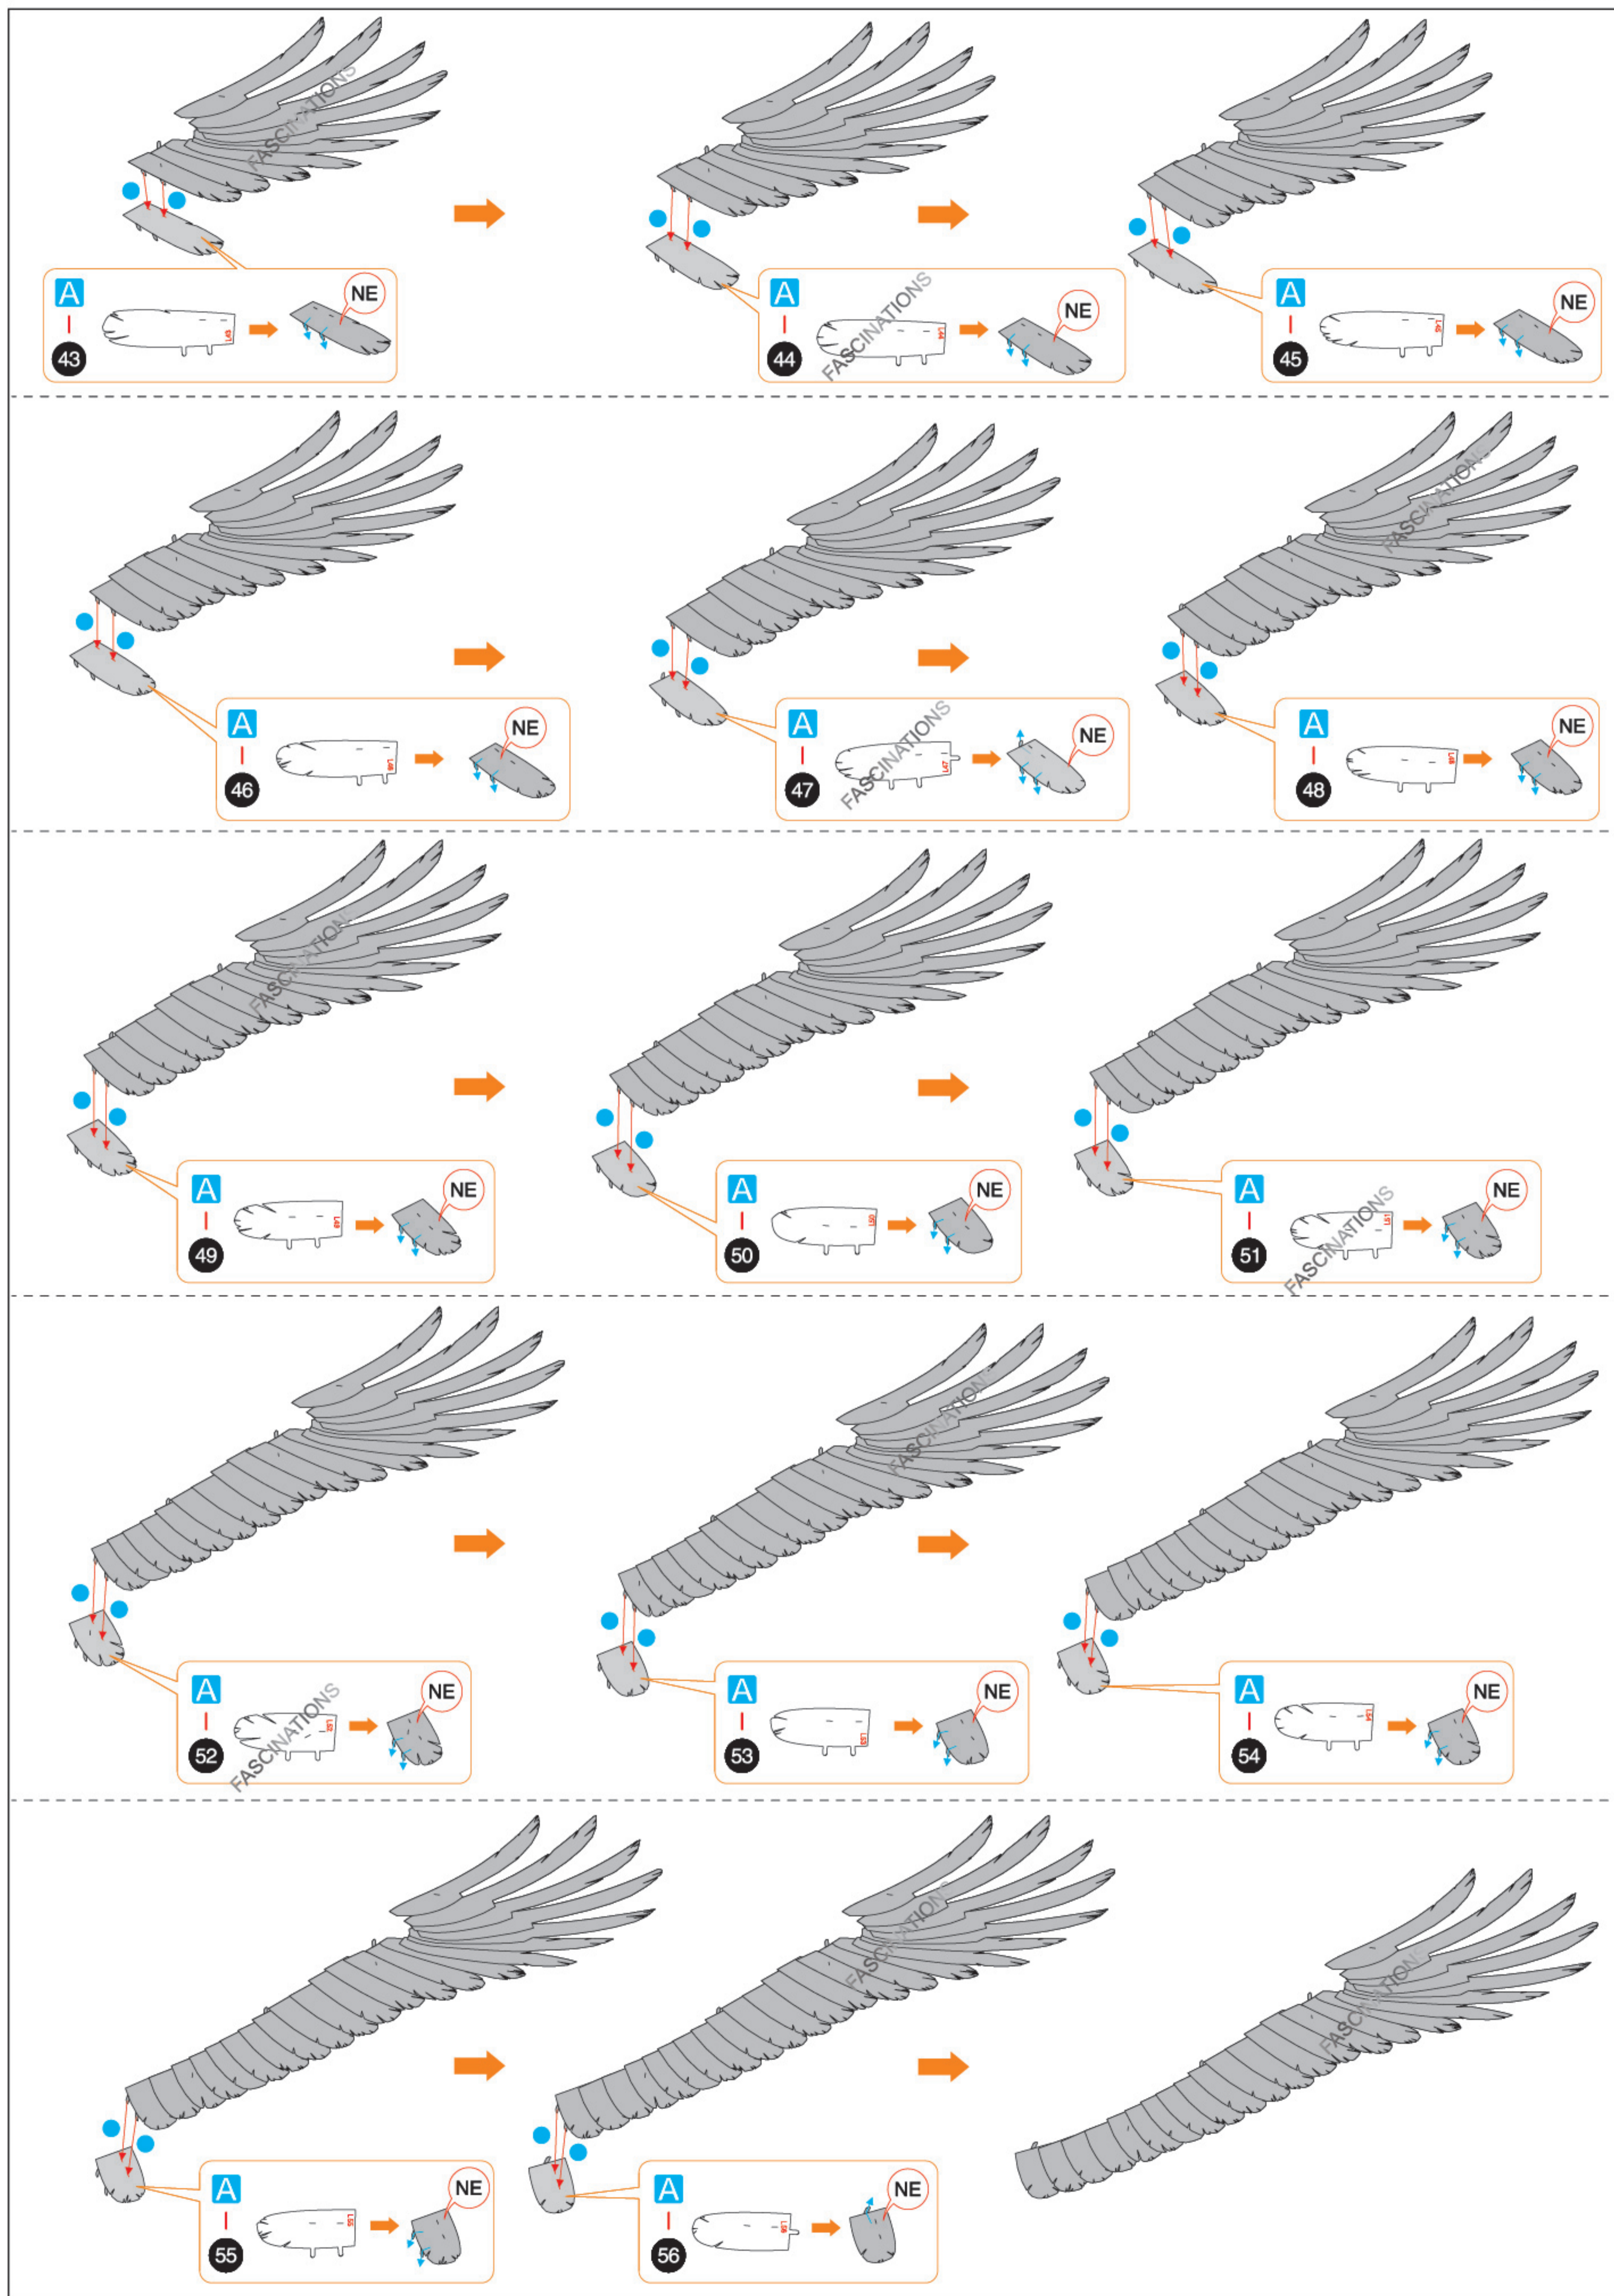

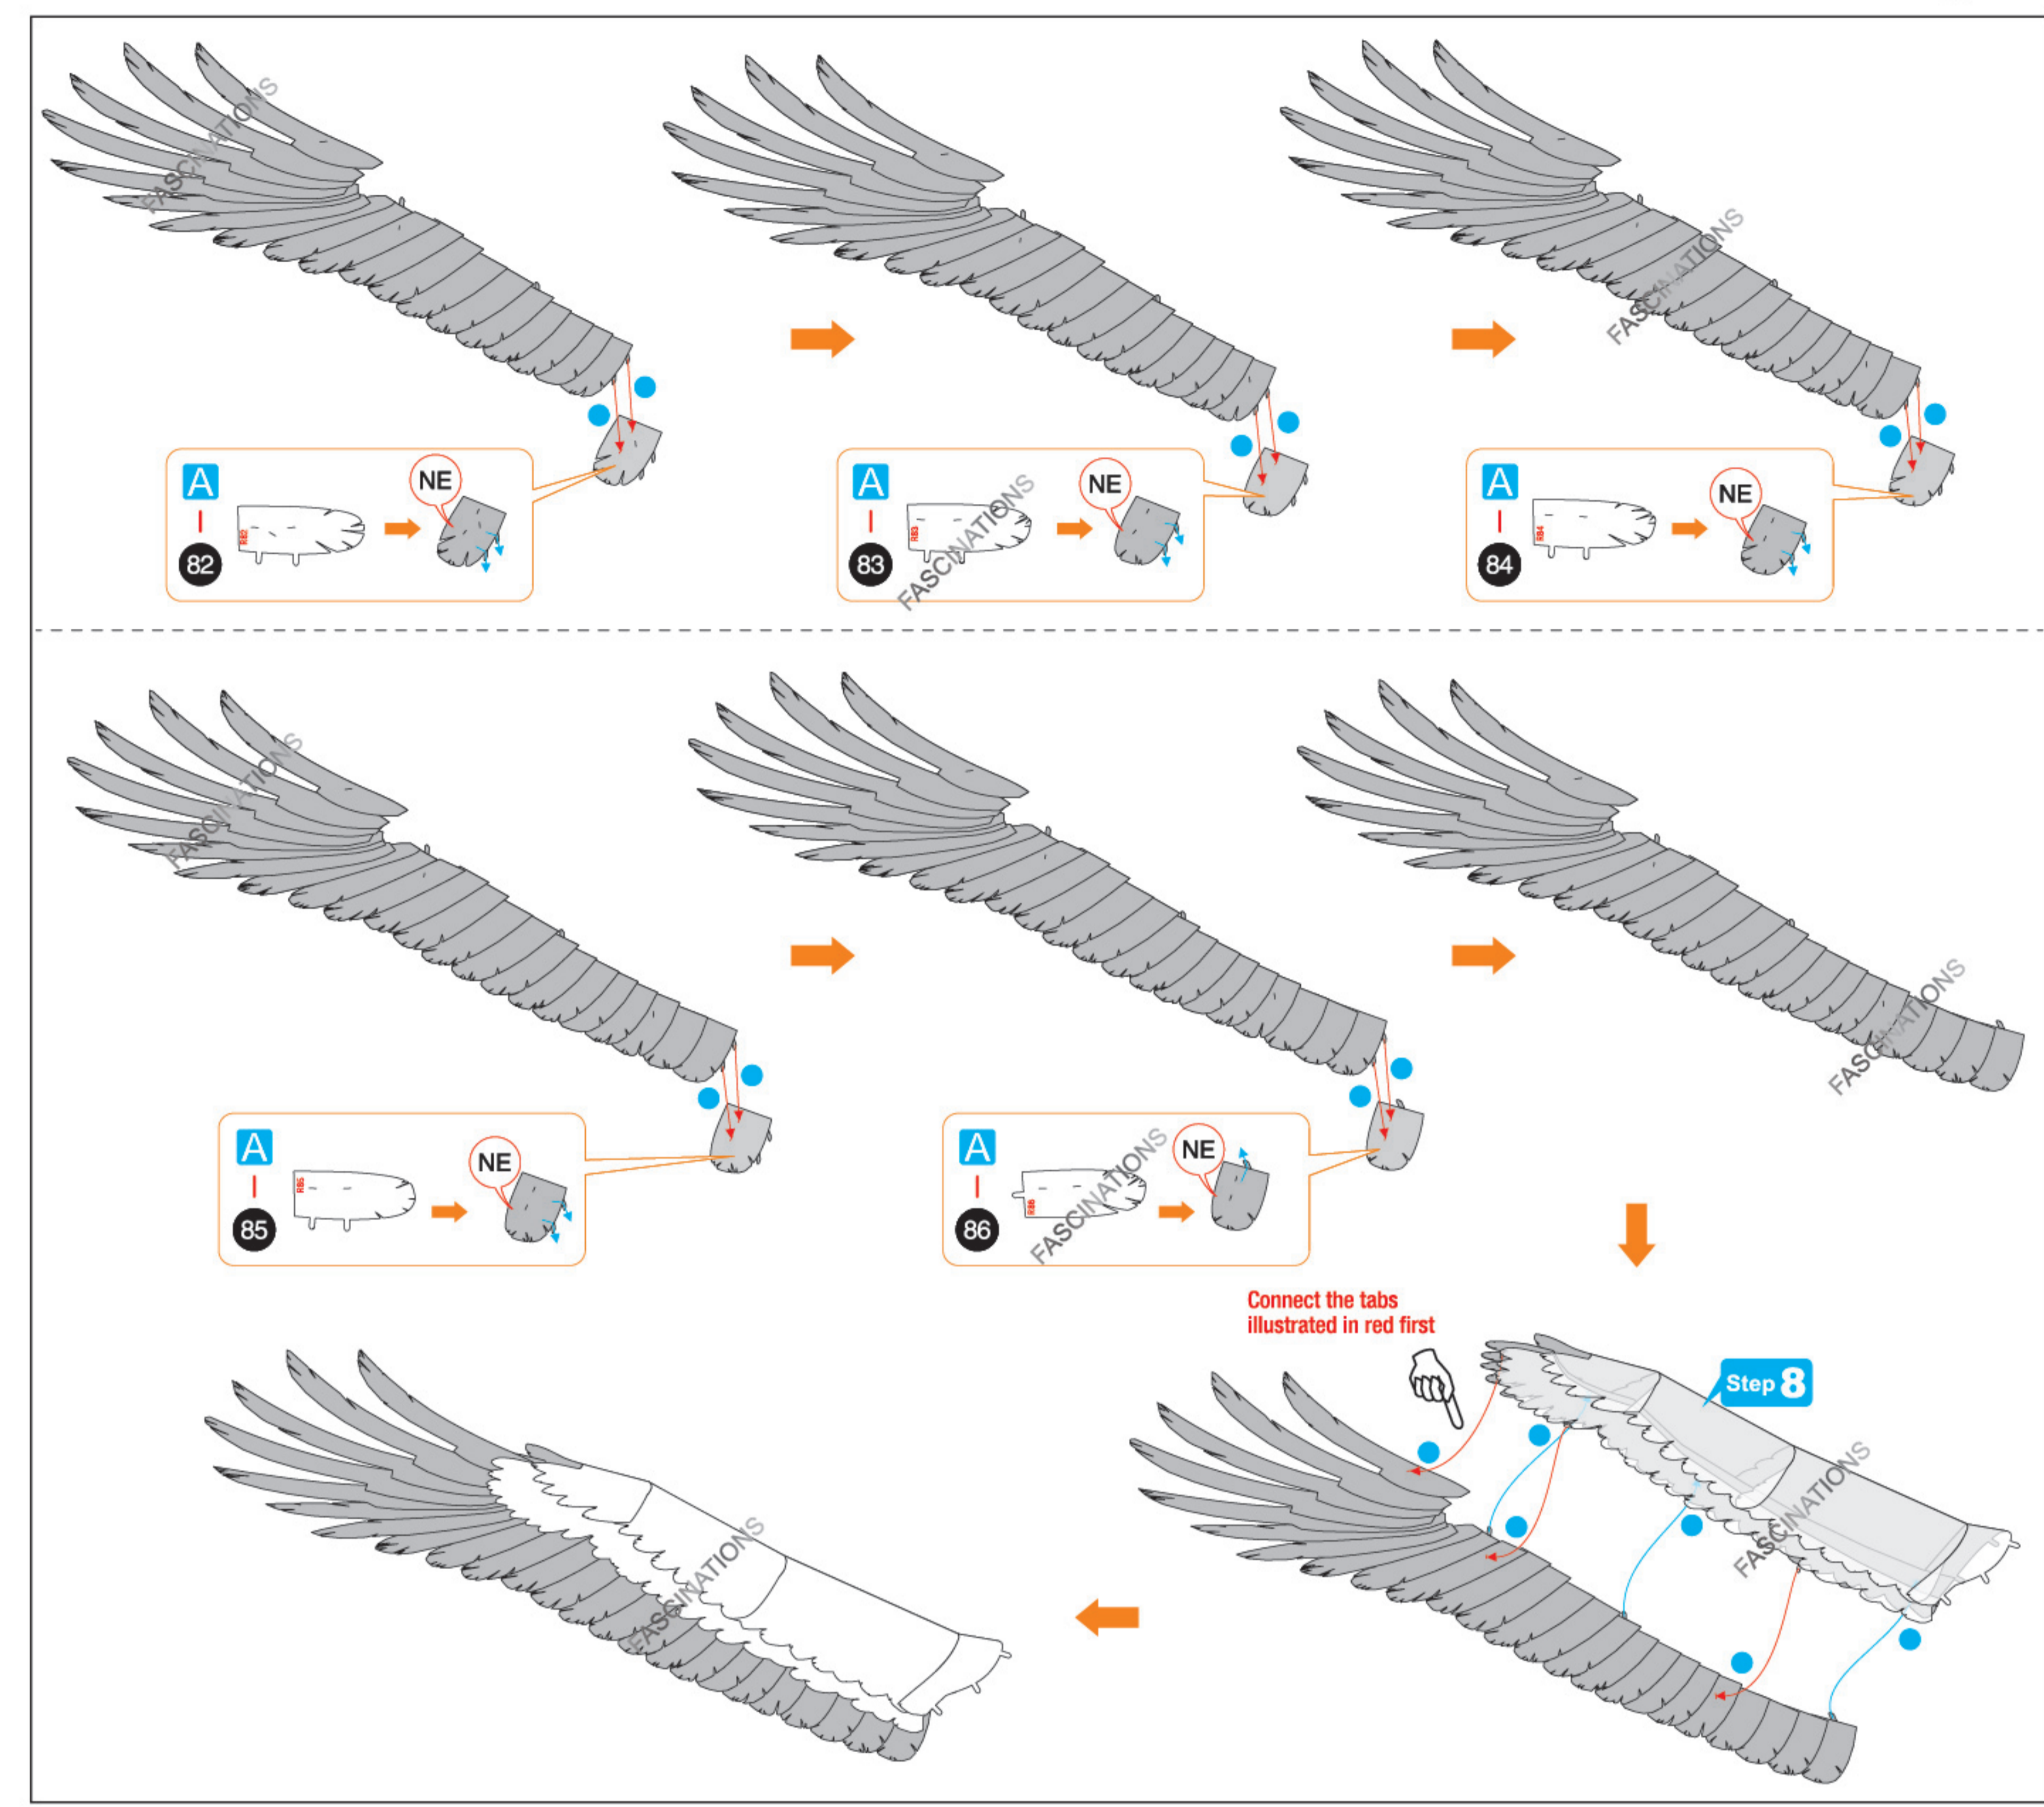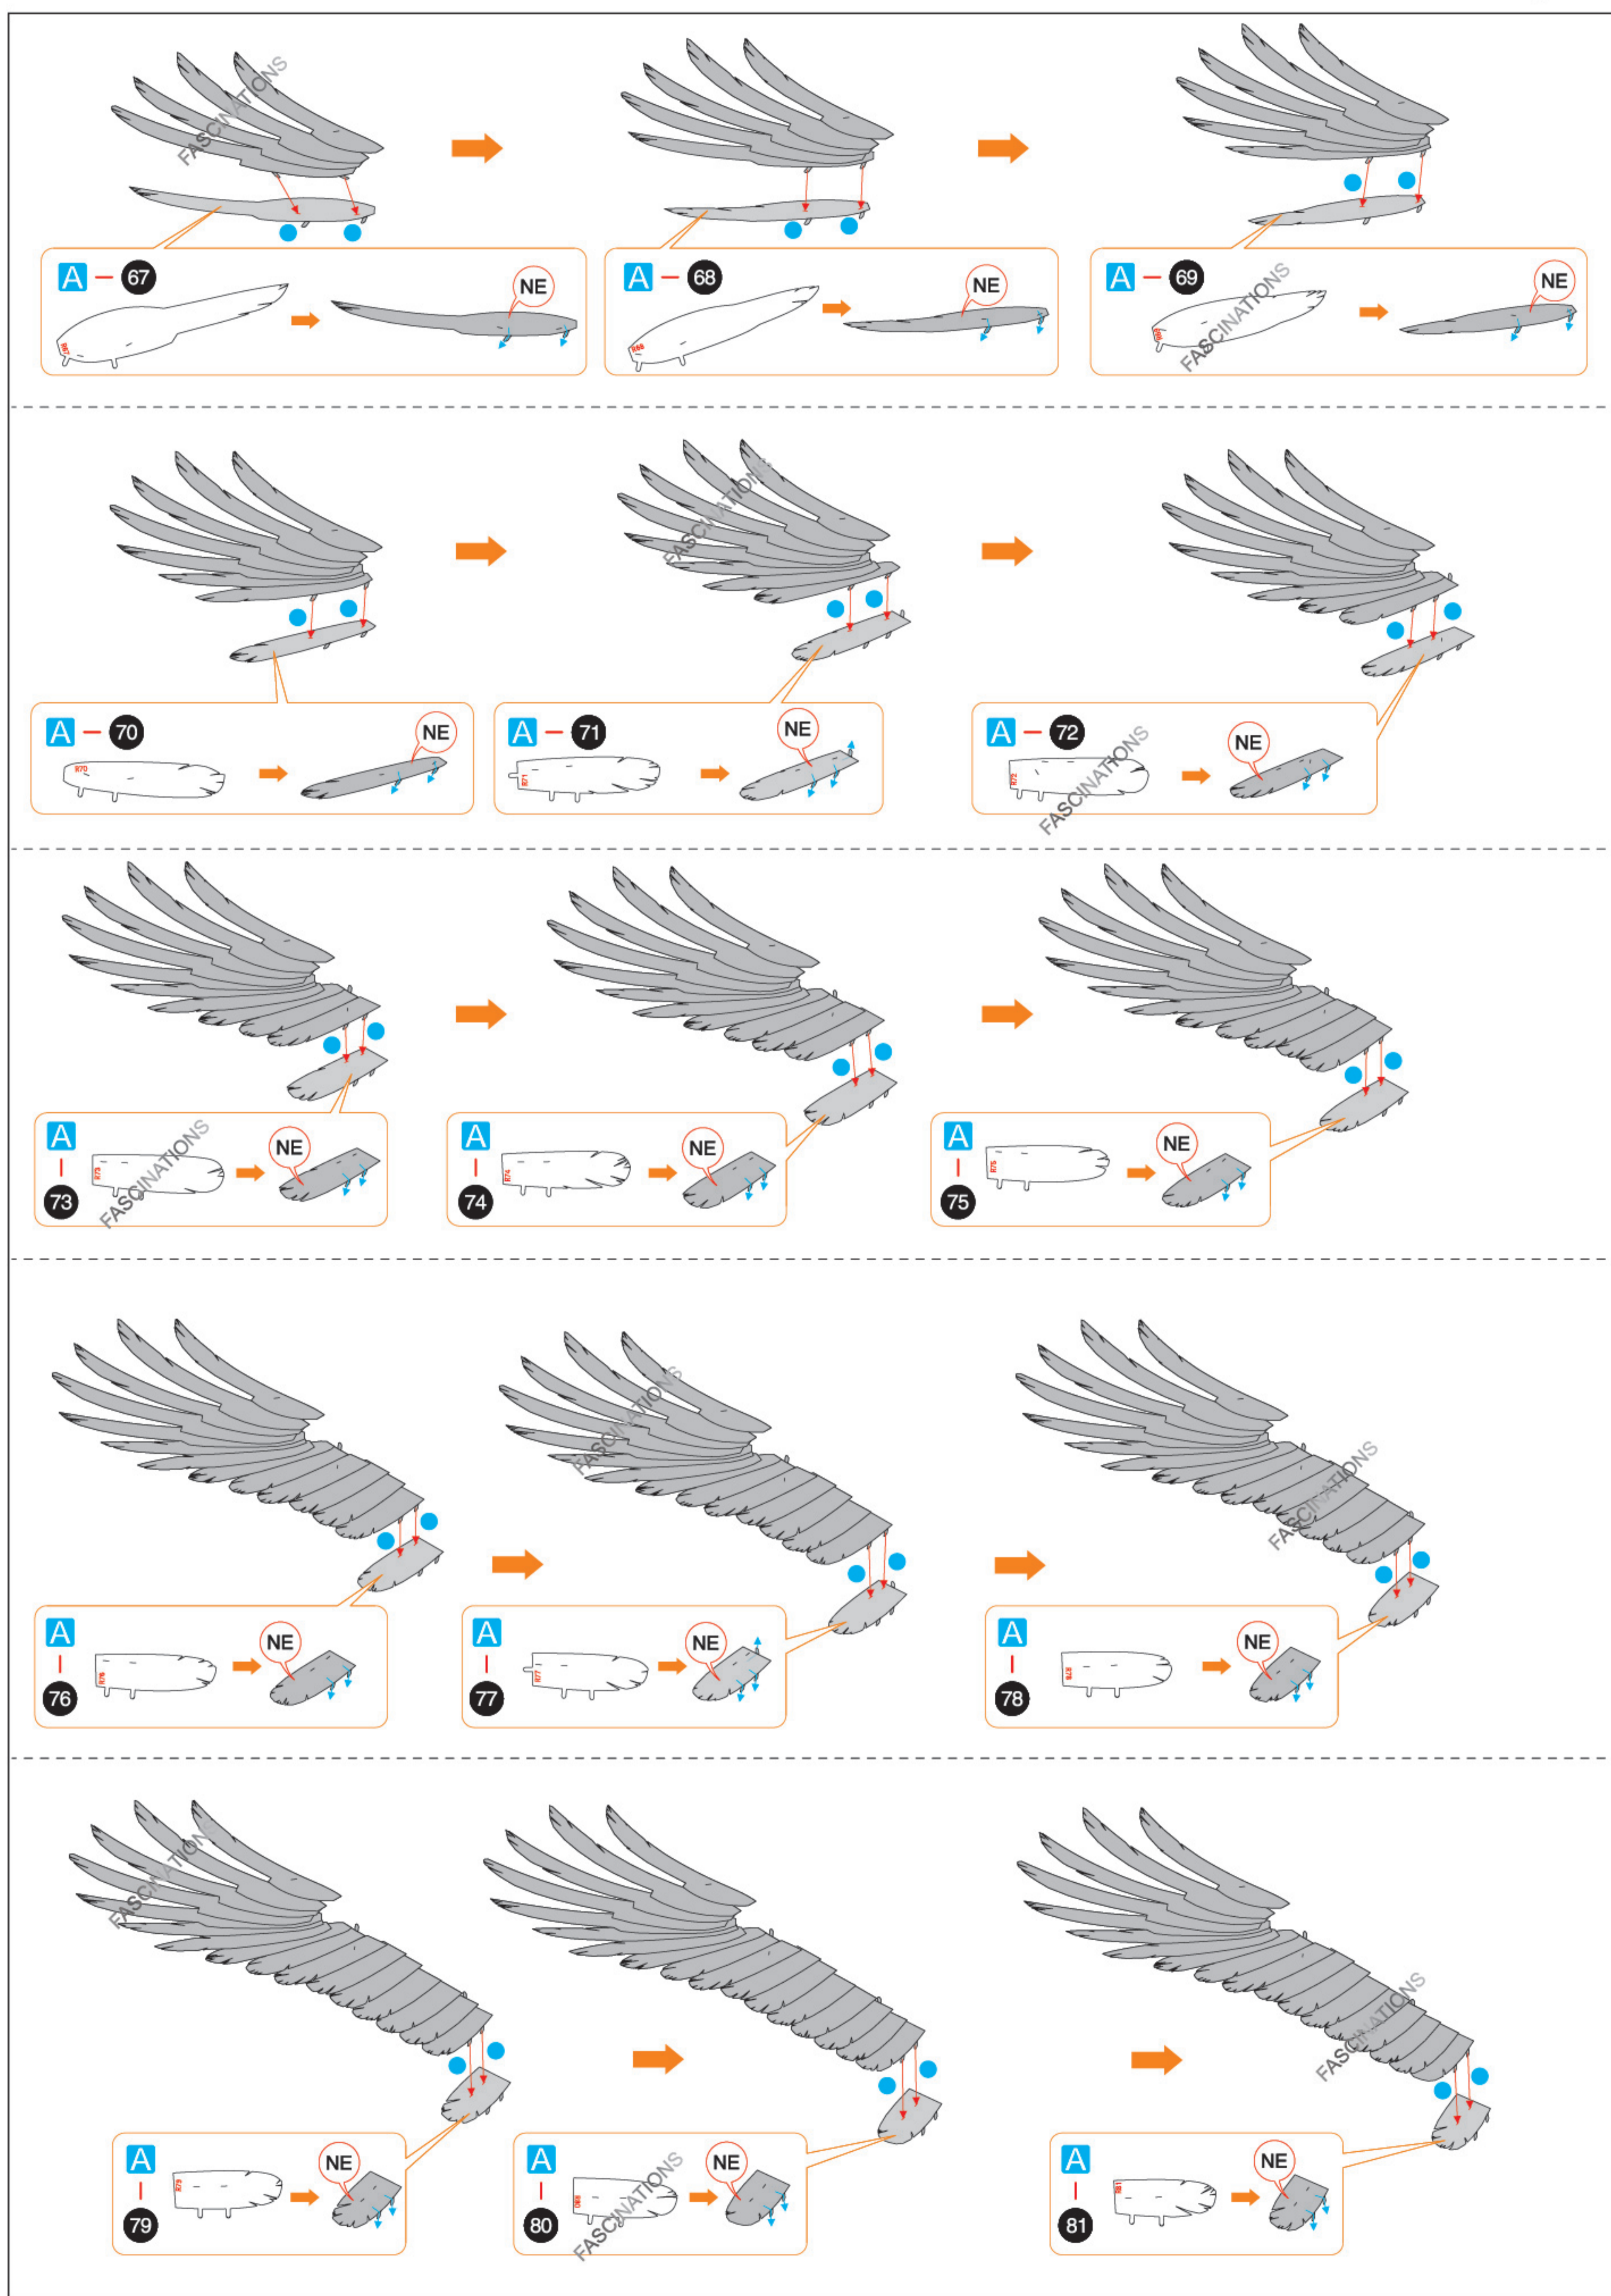


### Step 10


Tips: All tabs in this step should be folded 90° towards the side identifying as NE

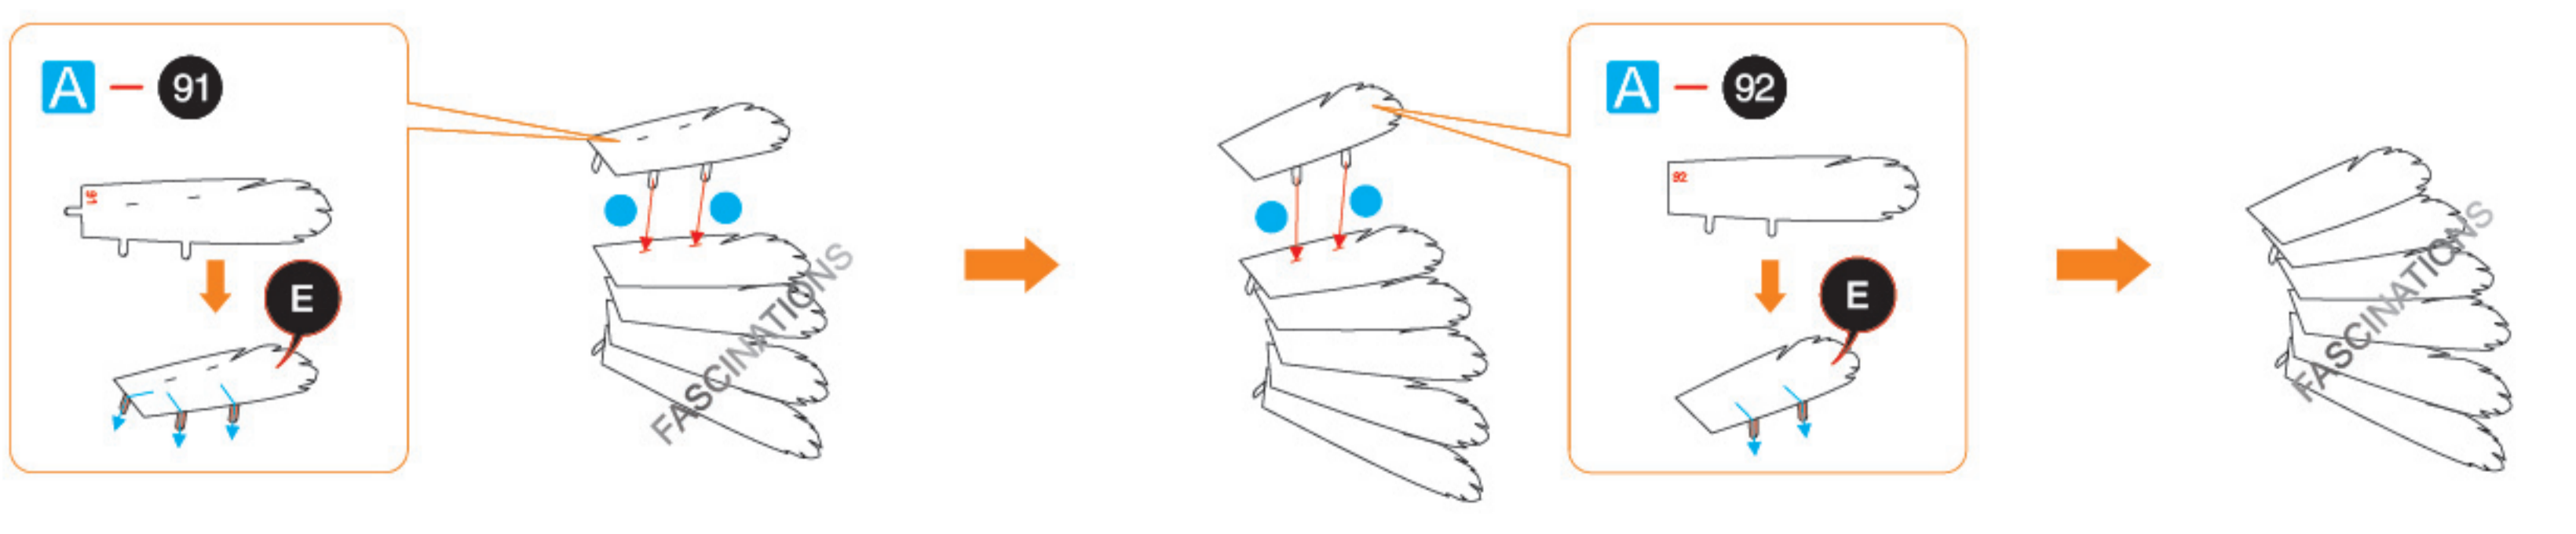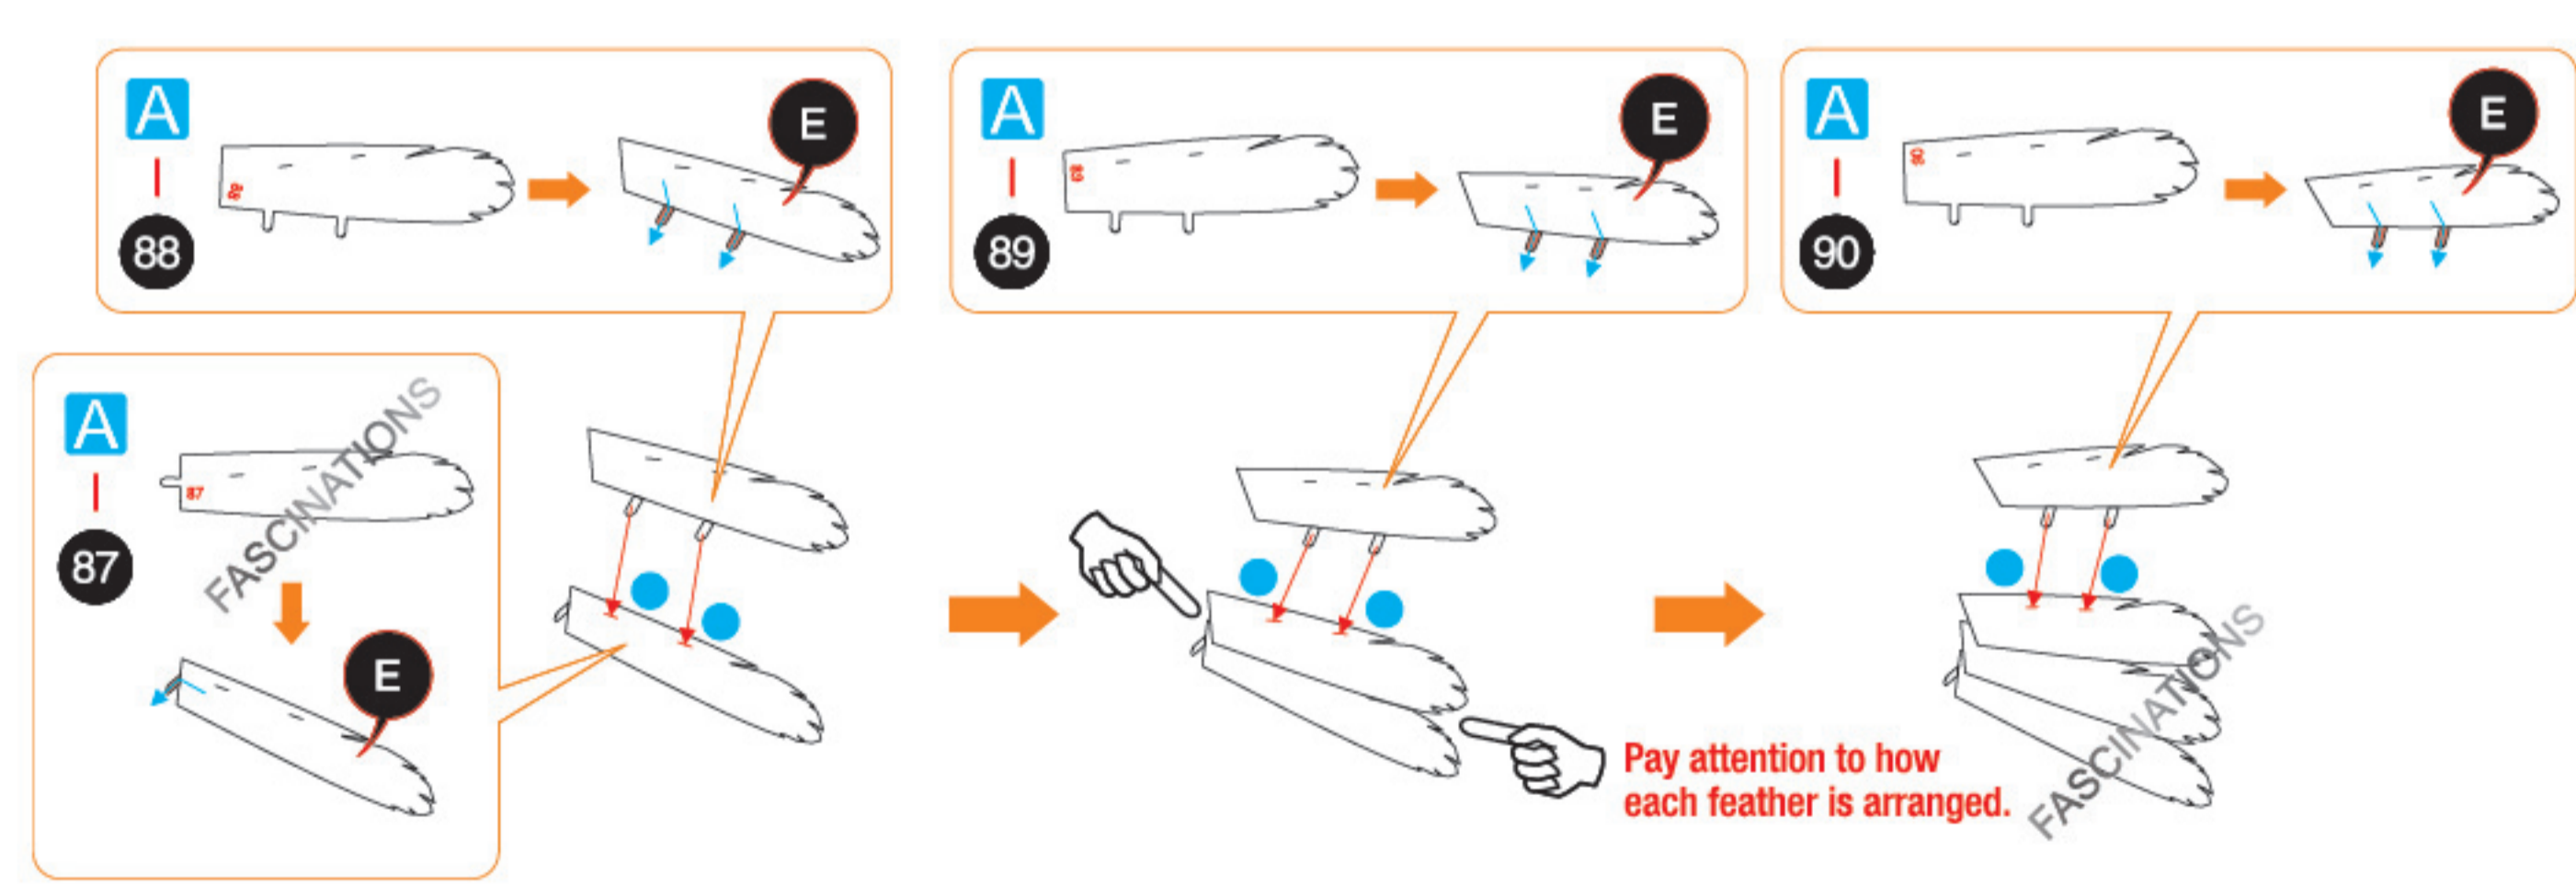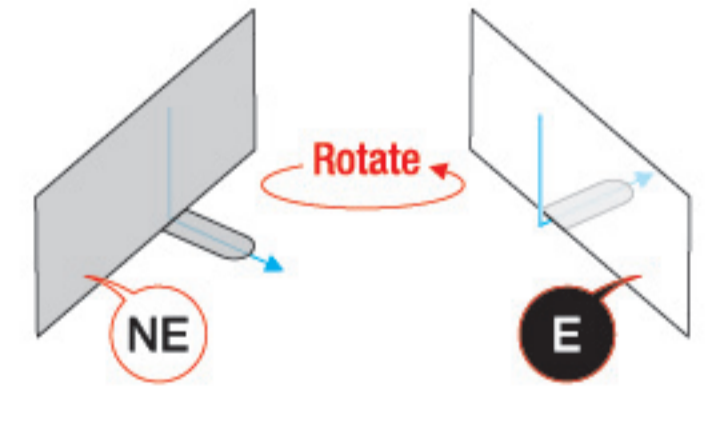



Step 11


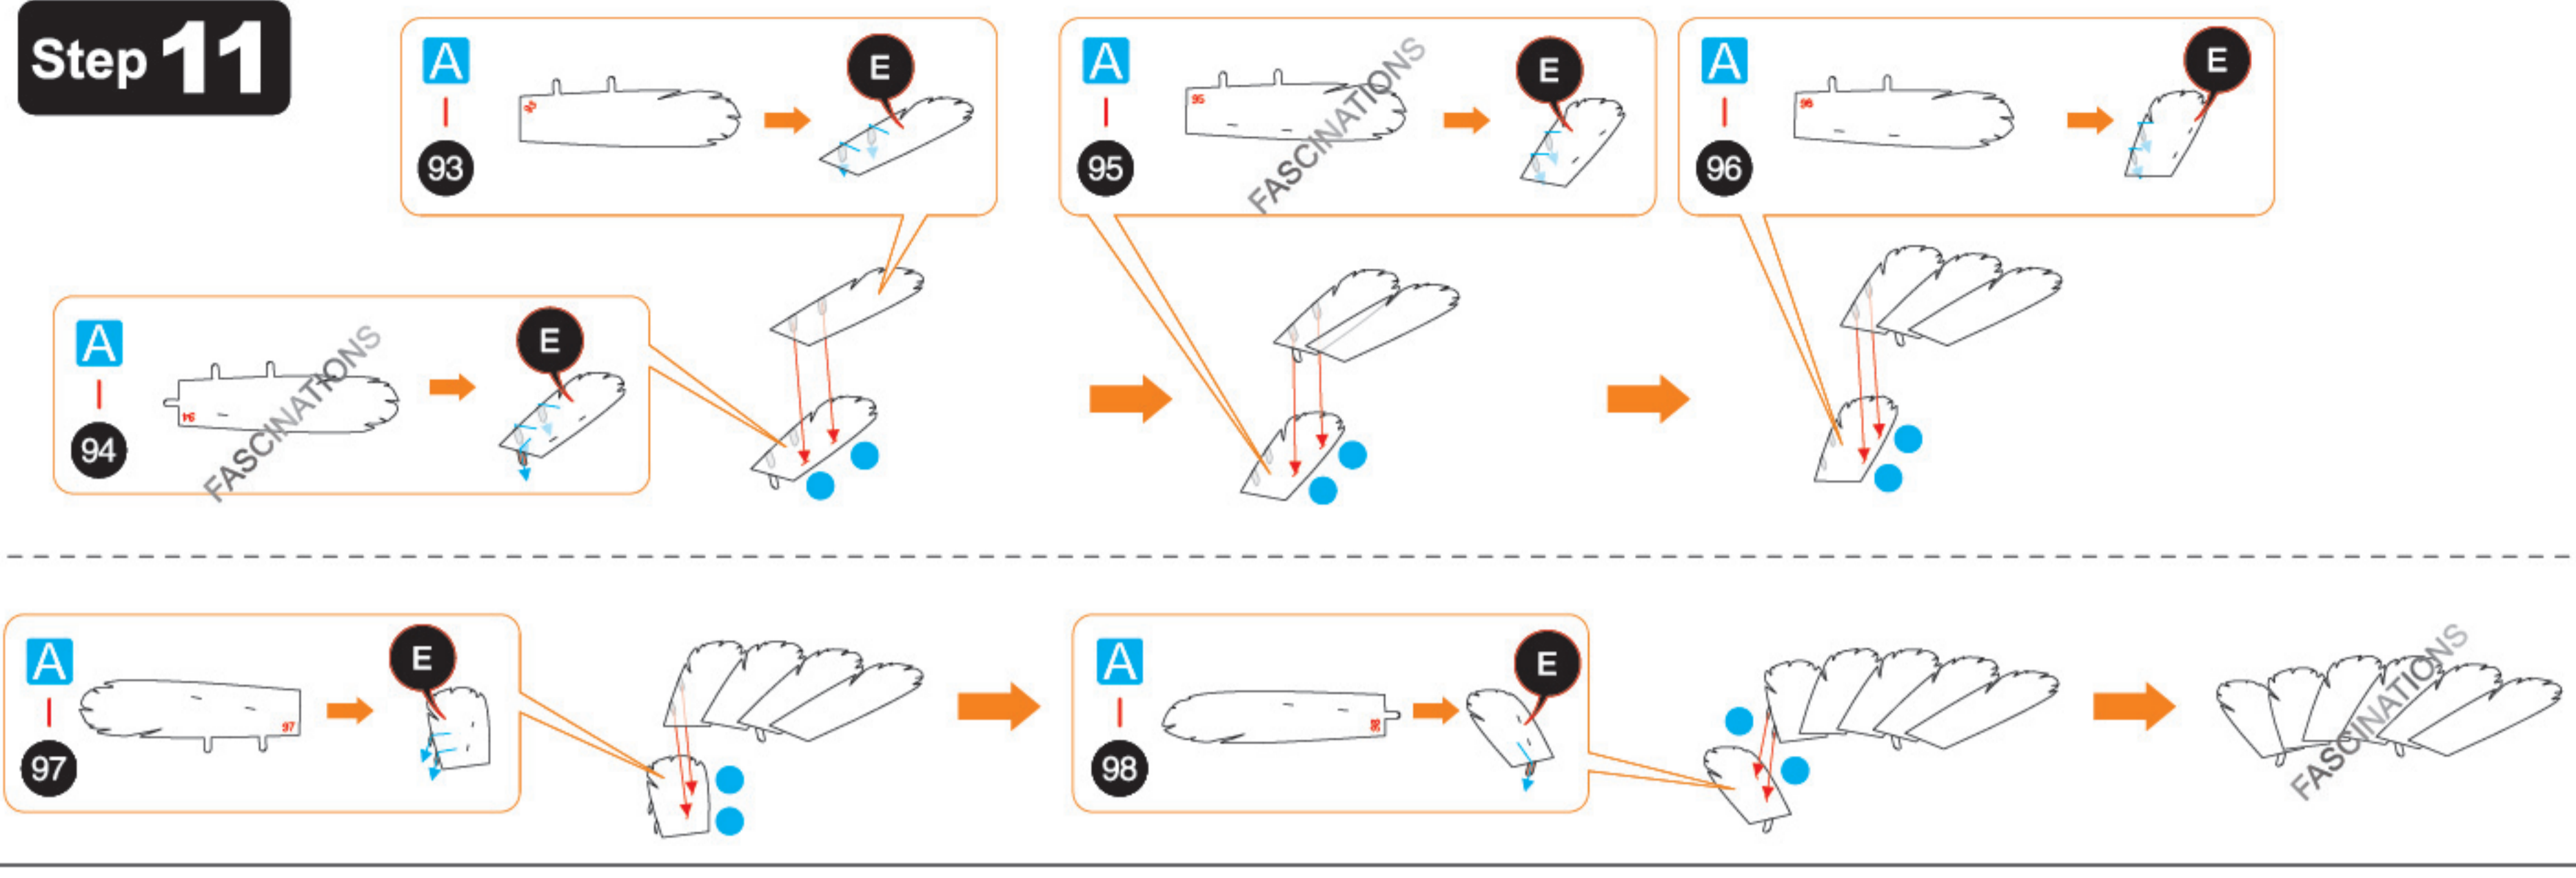








Step 12

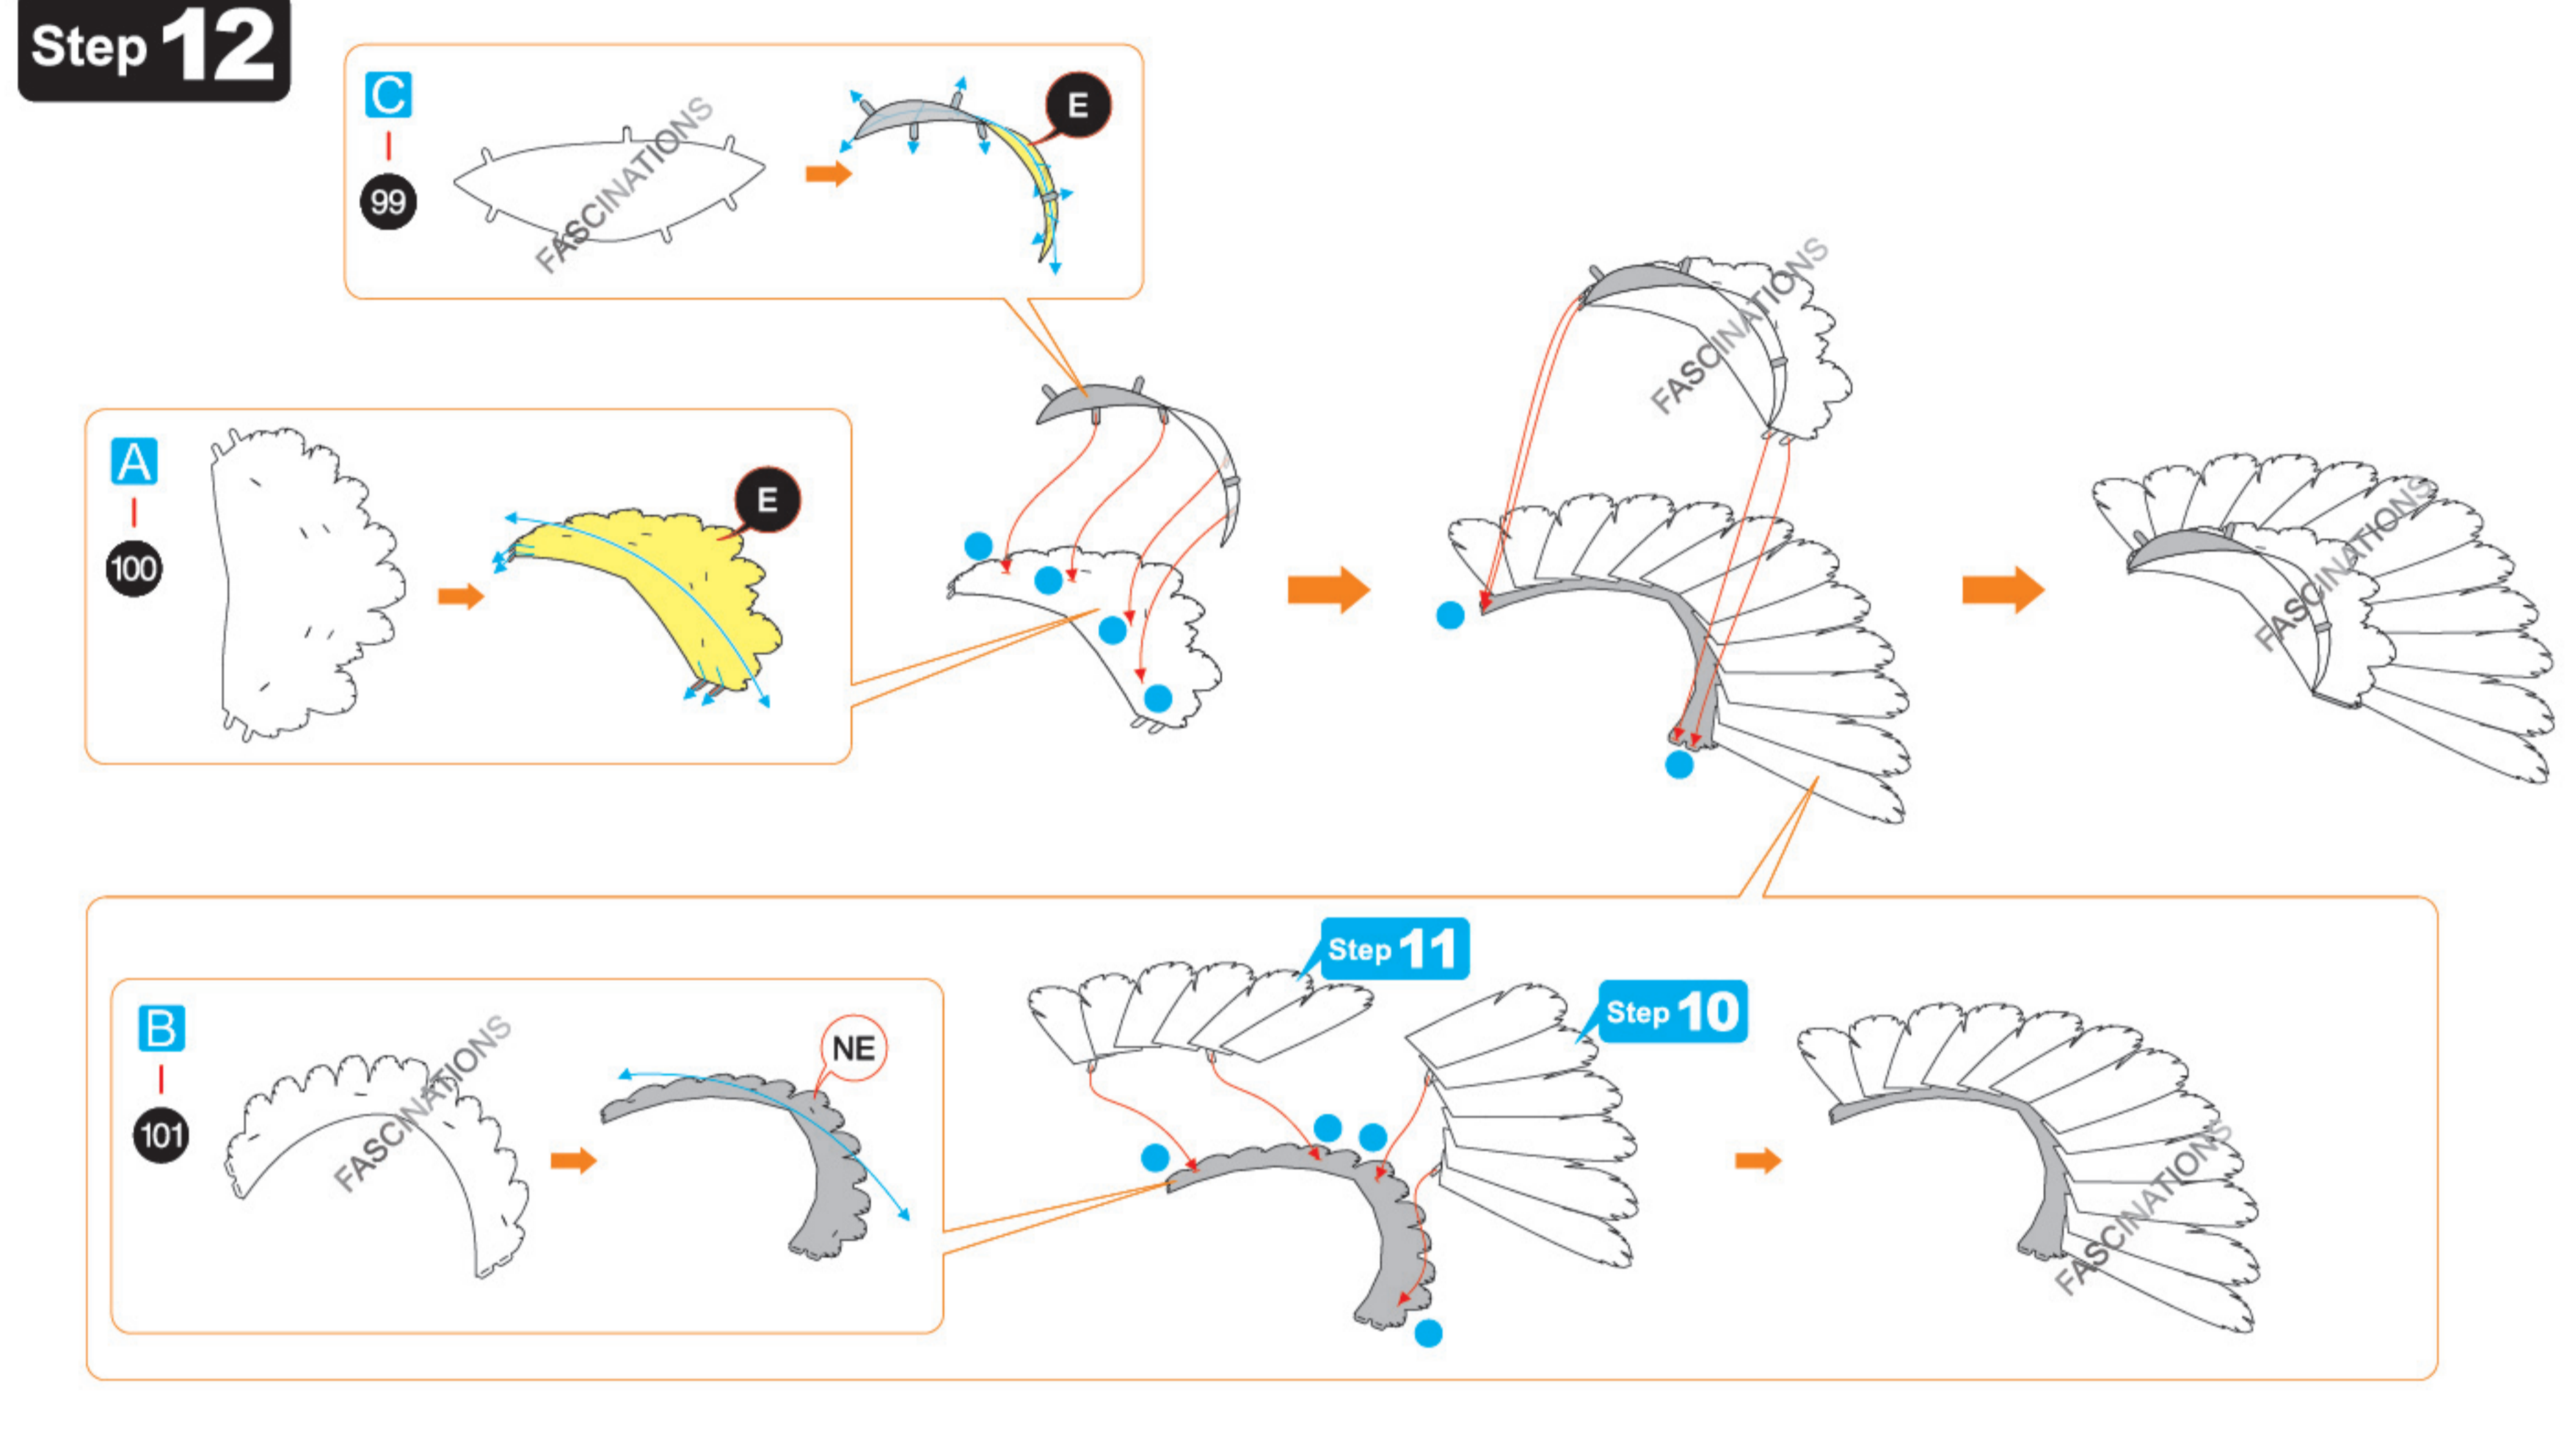

Step 13

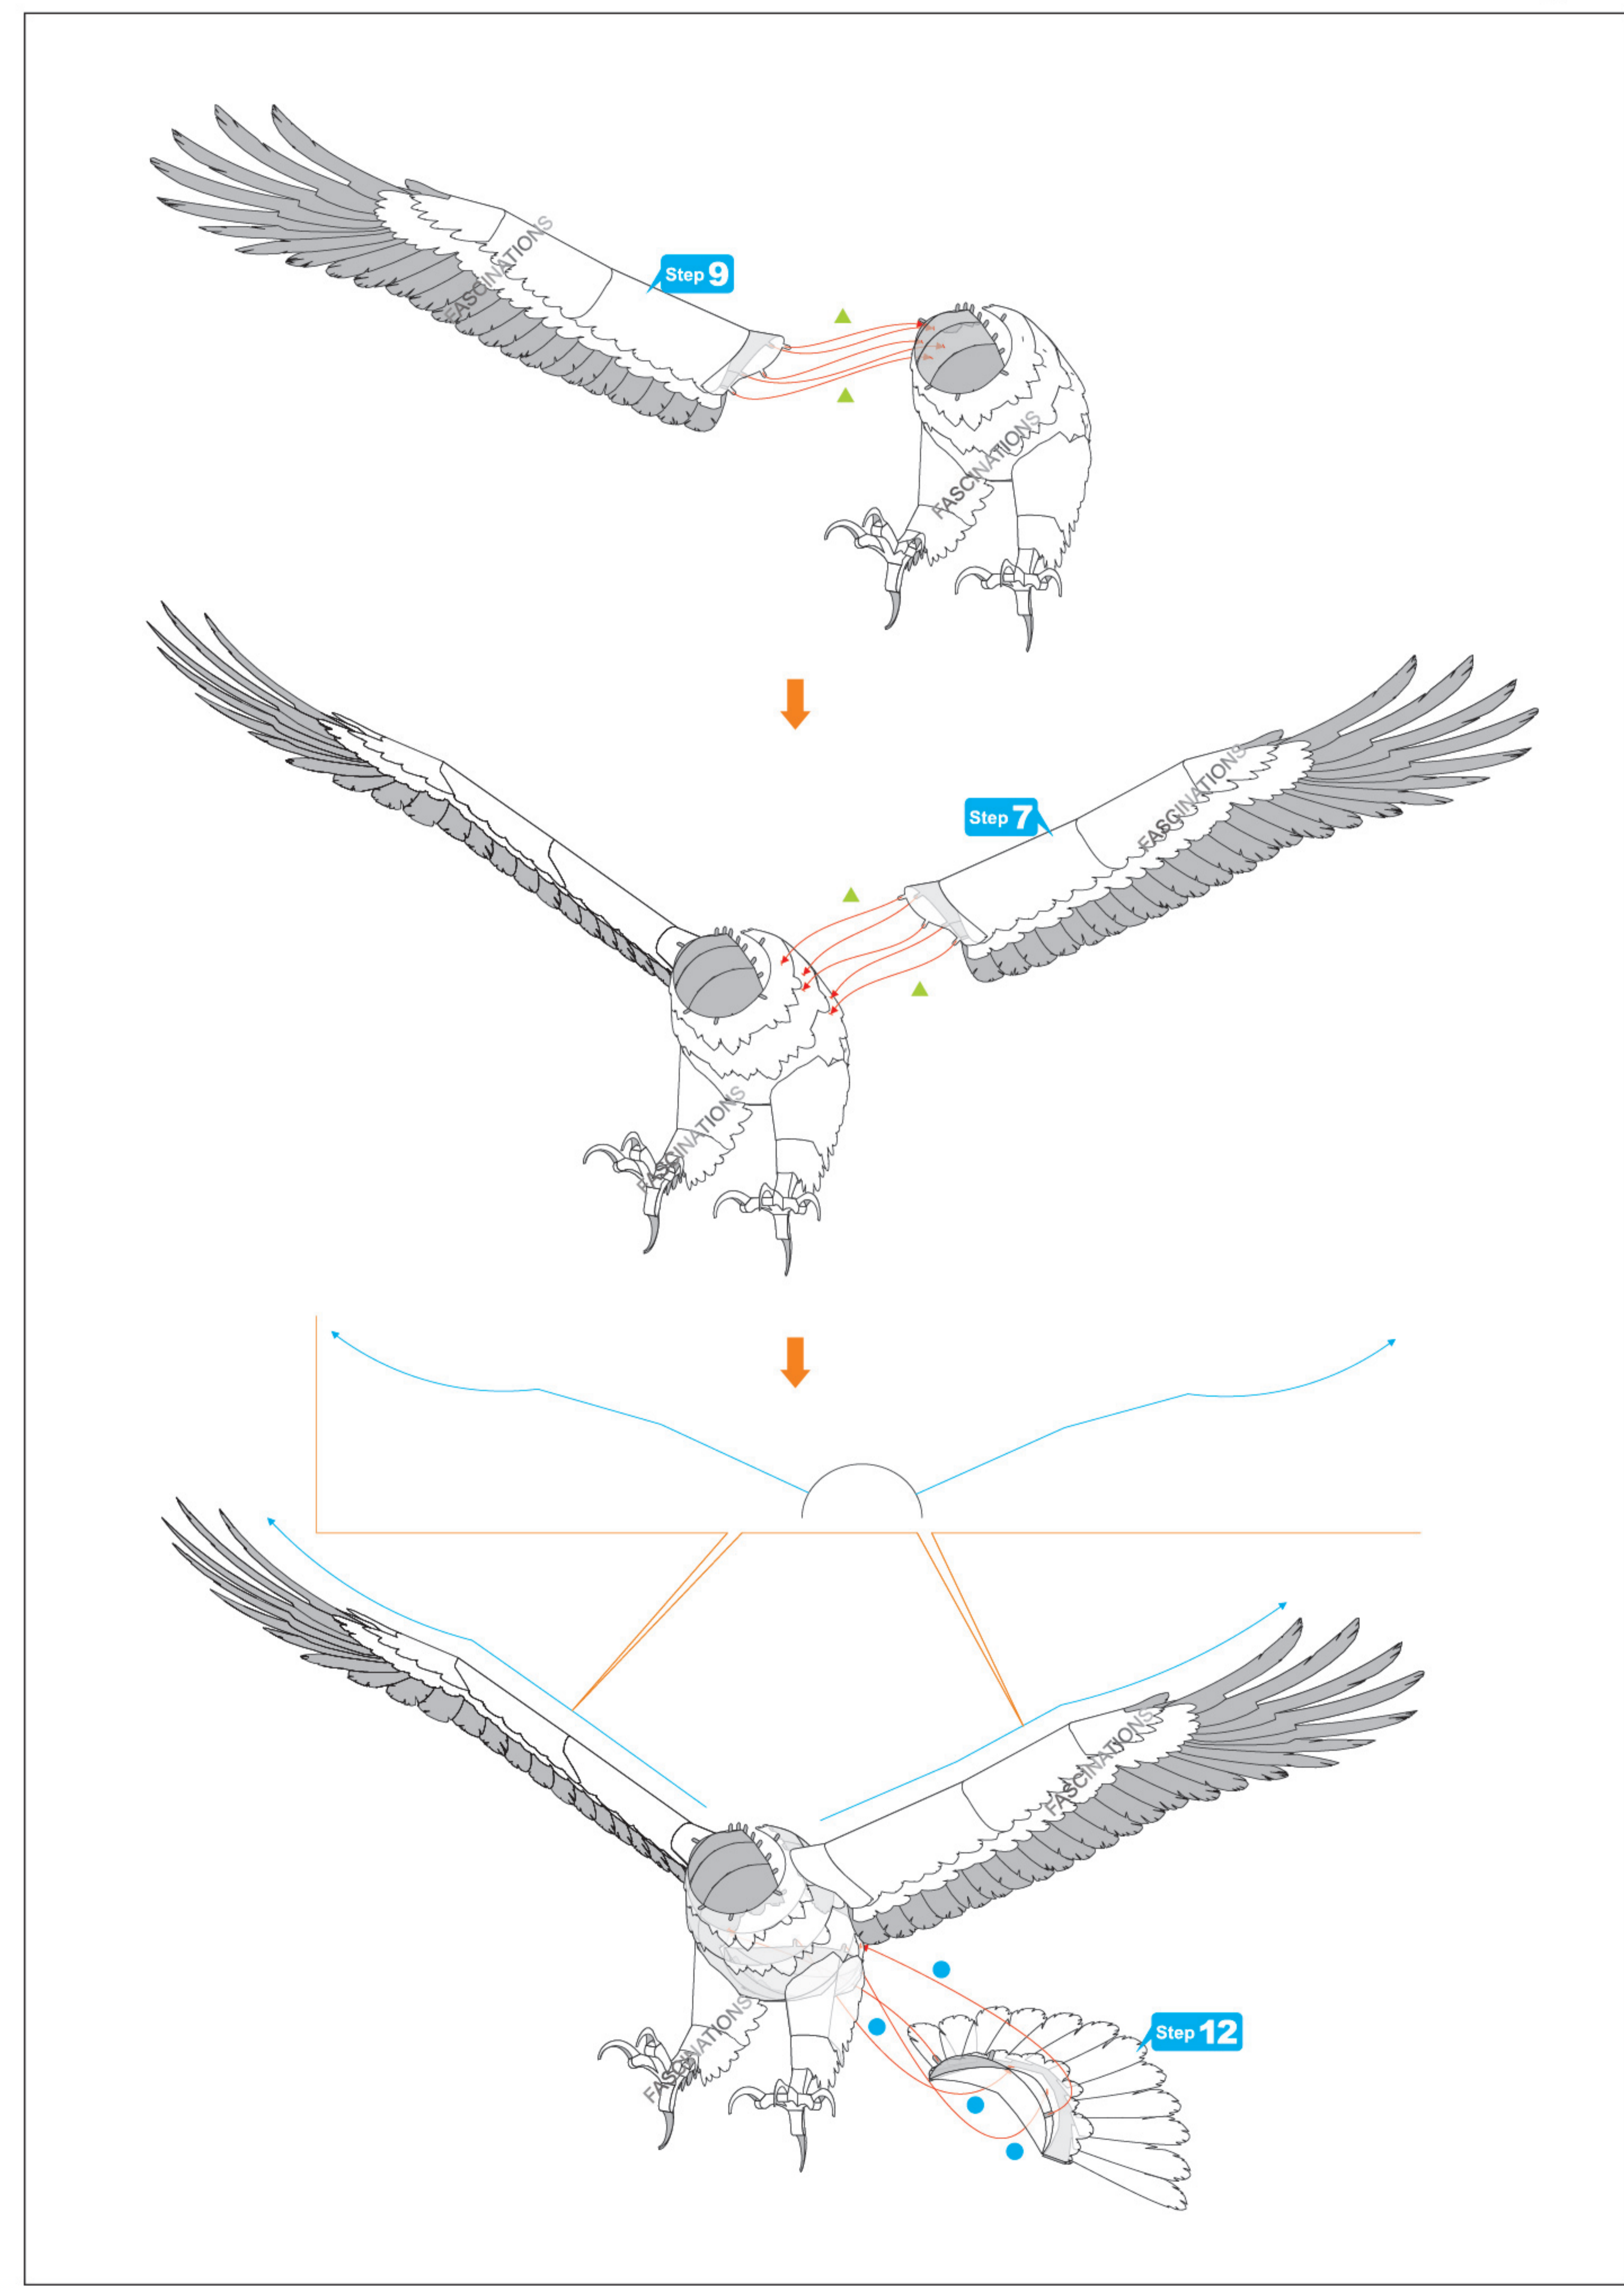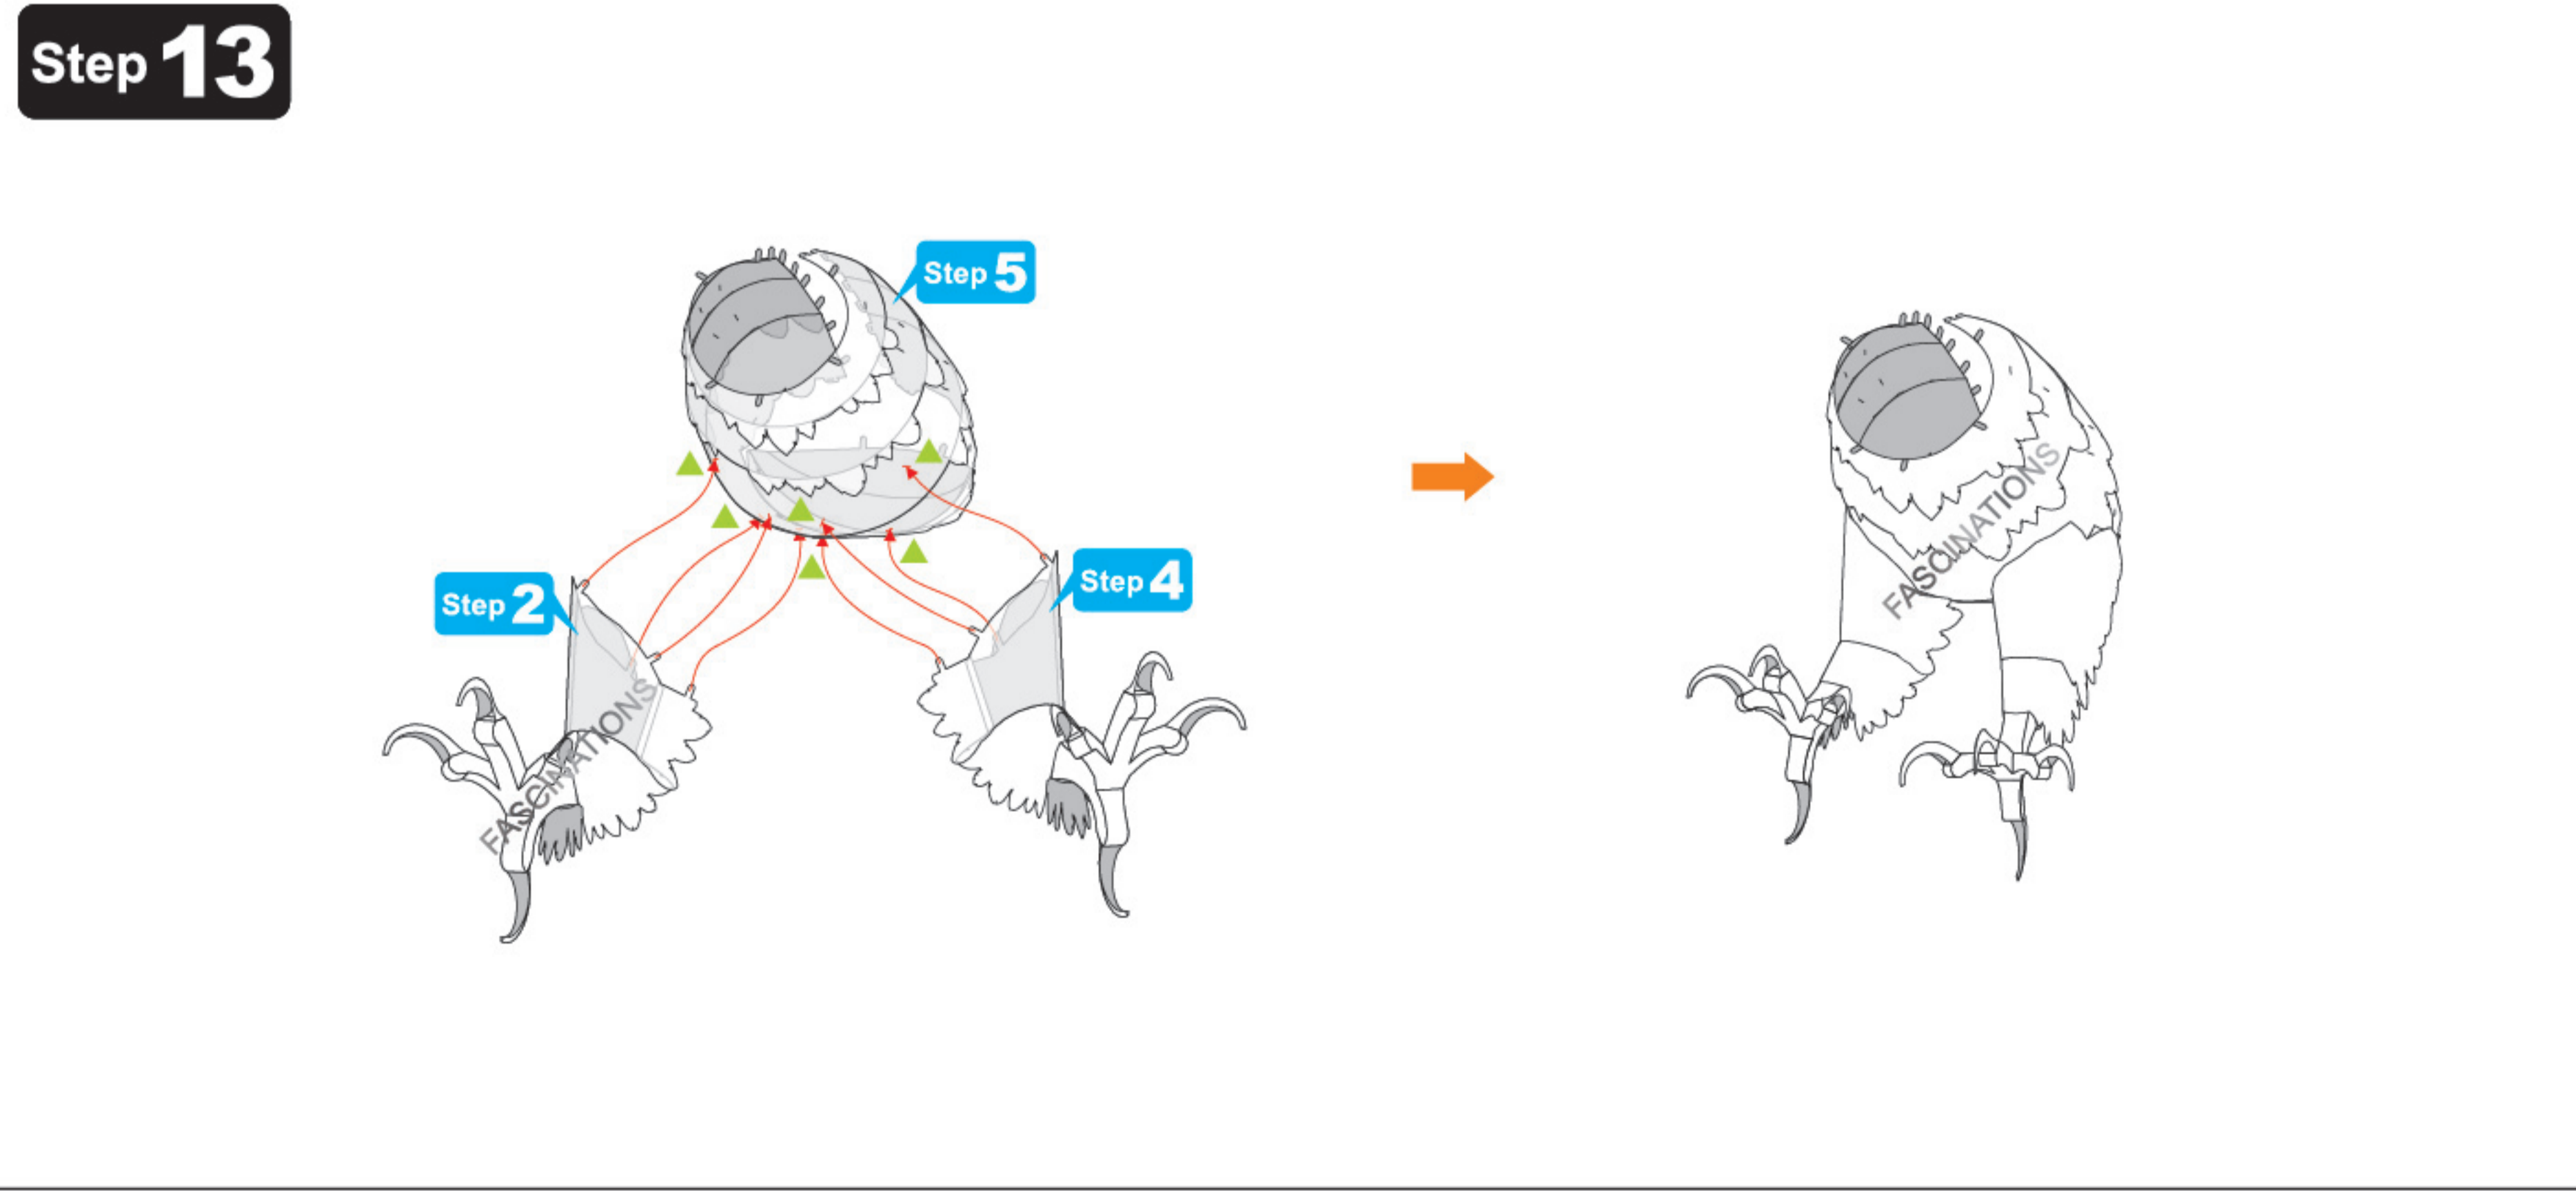

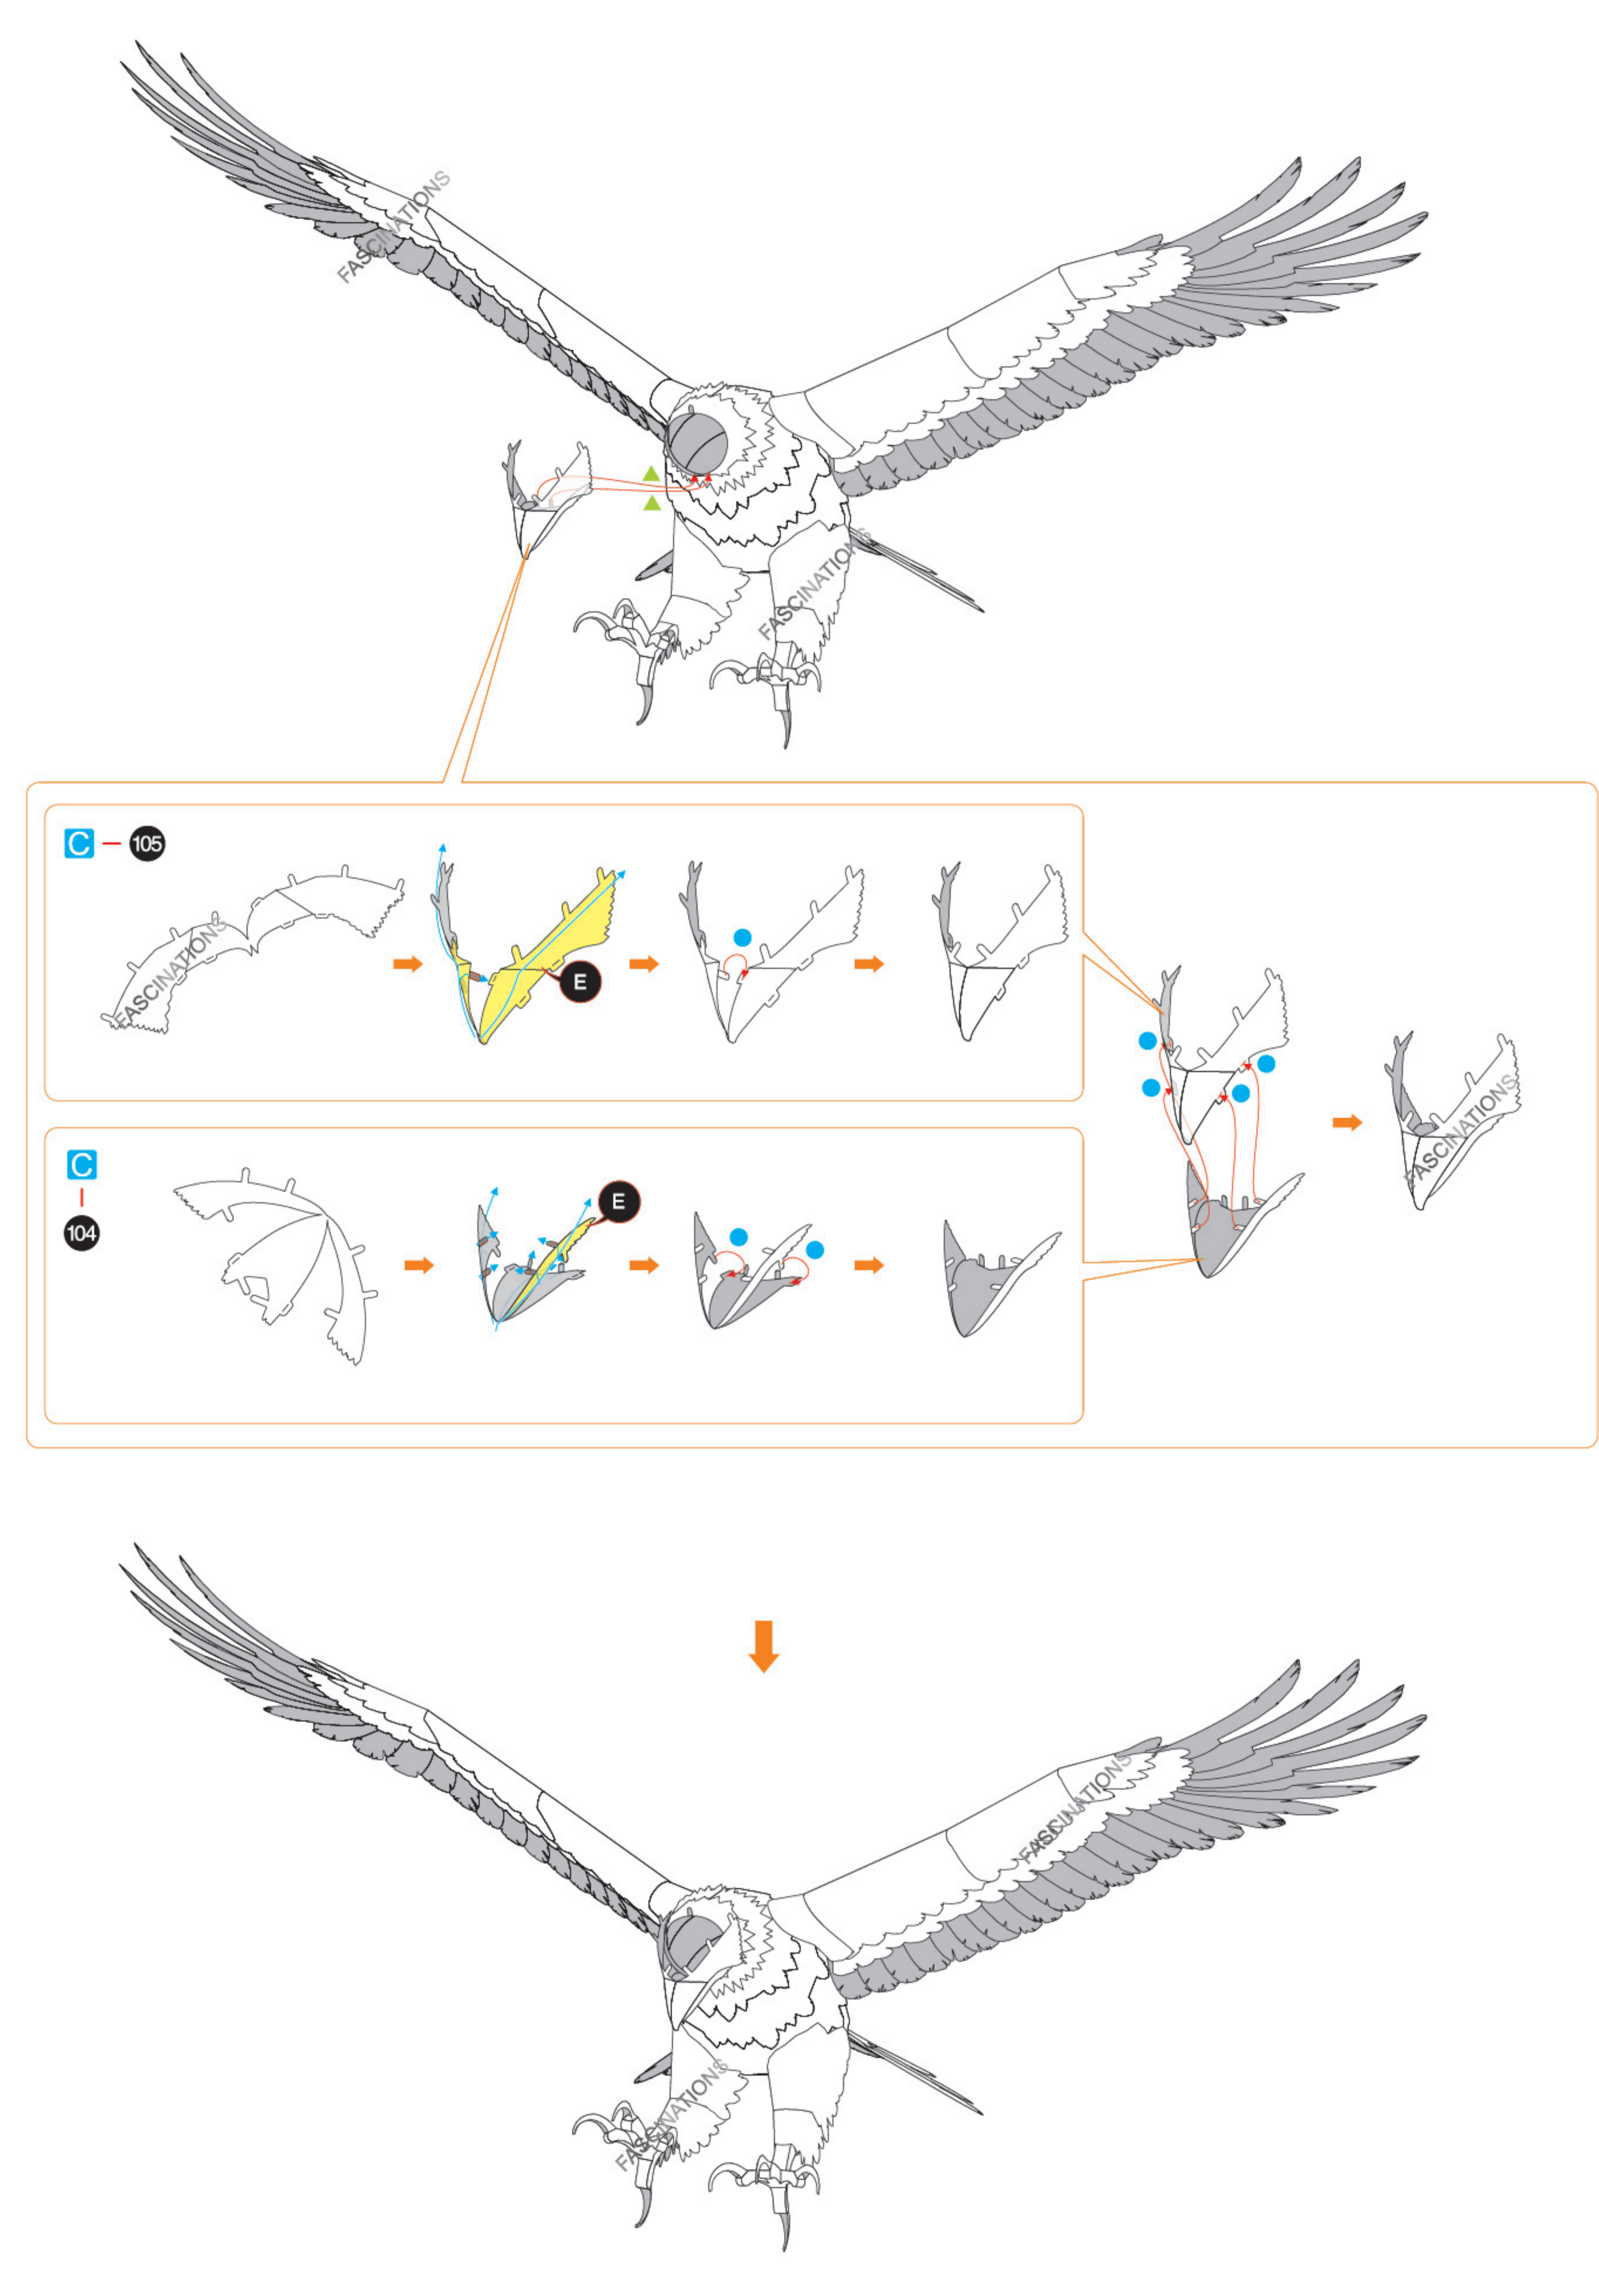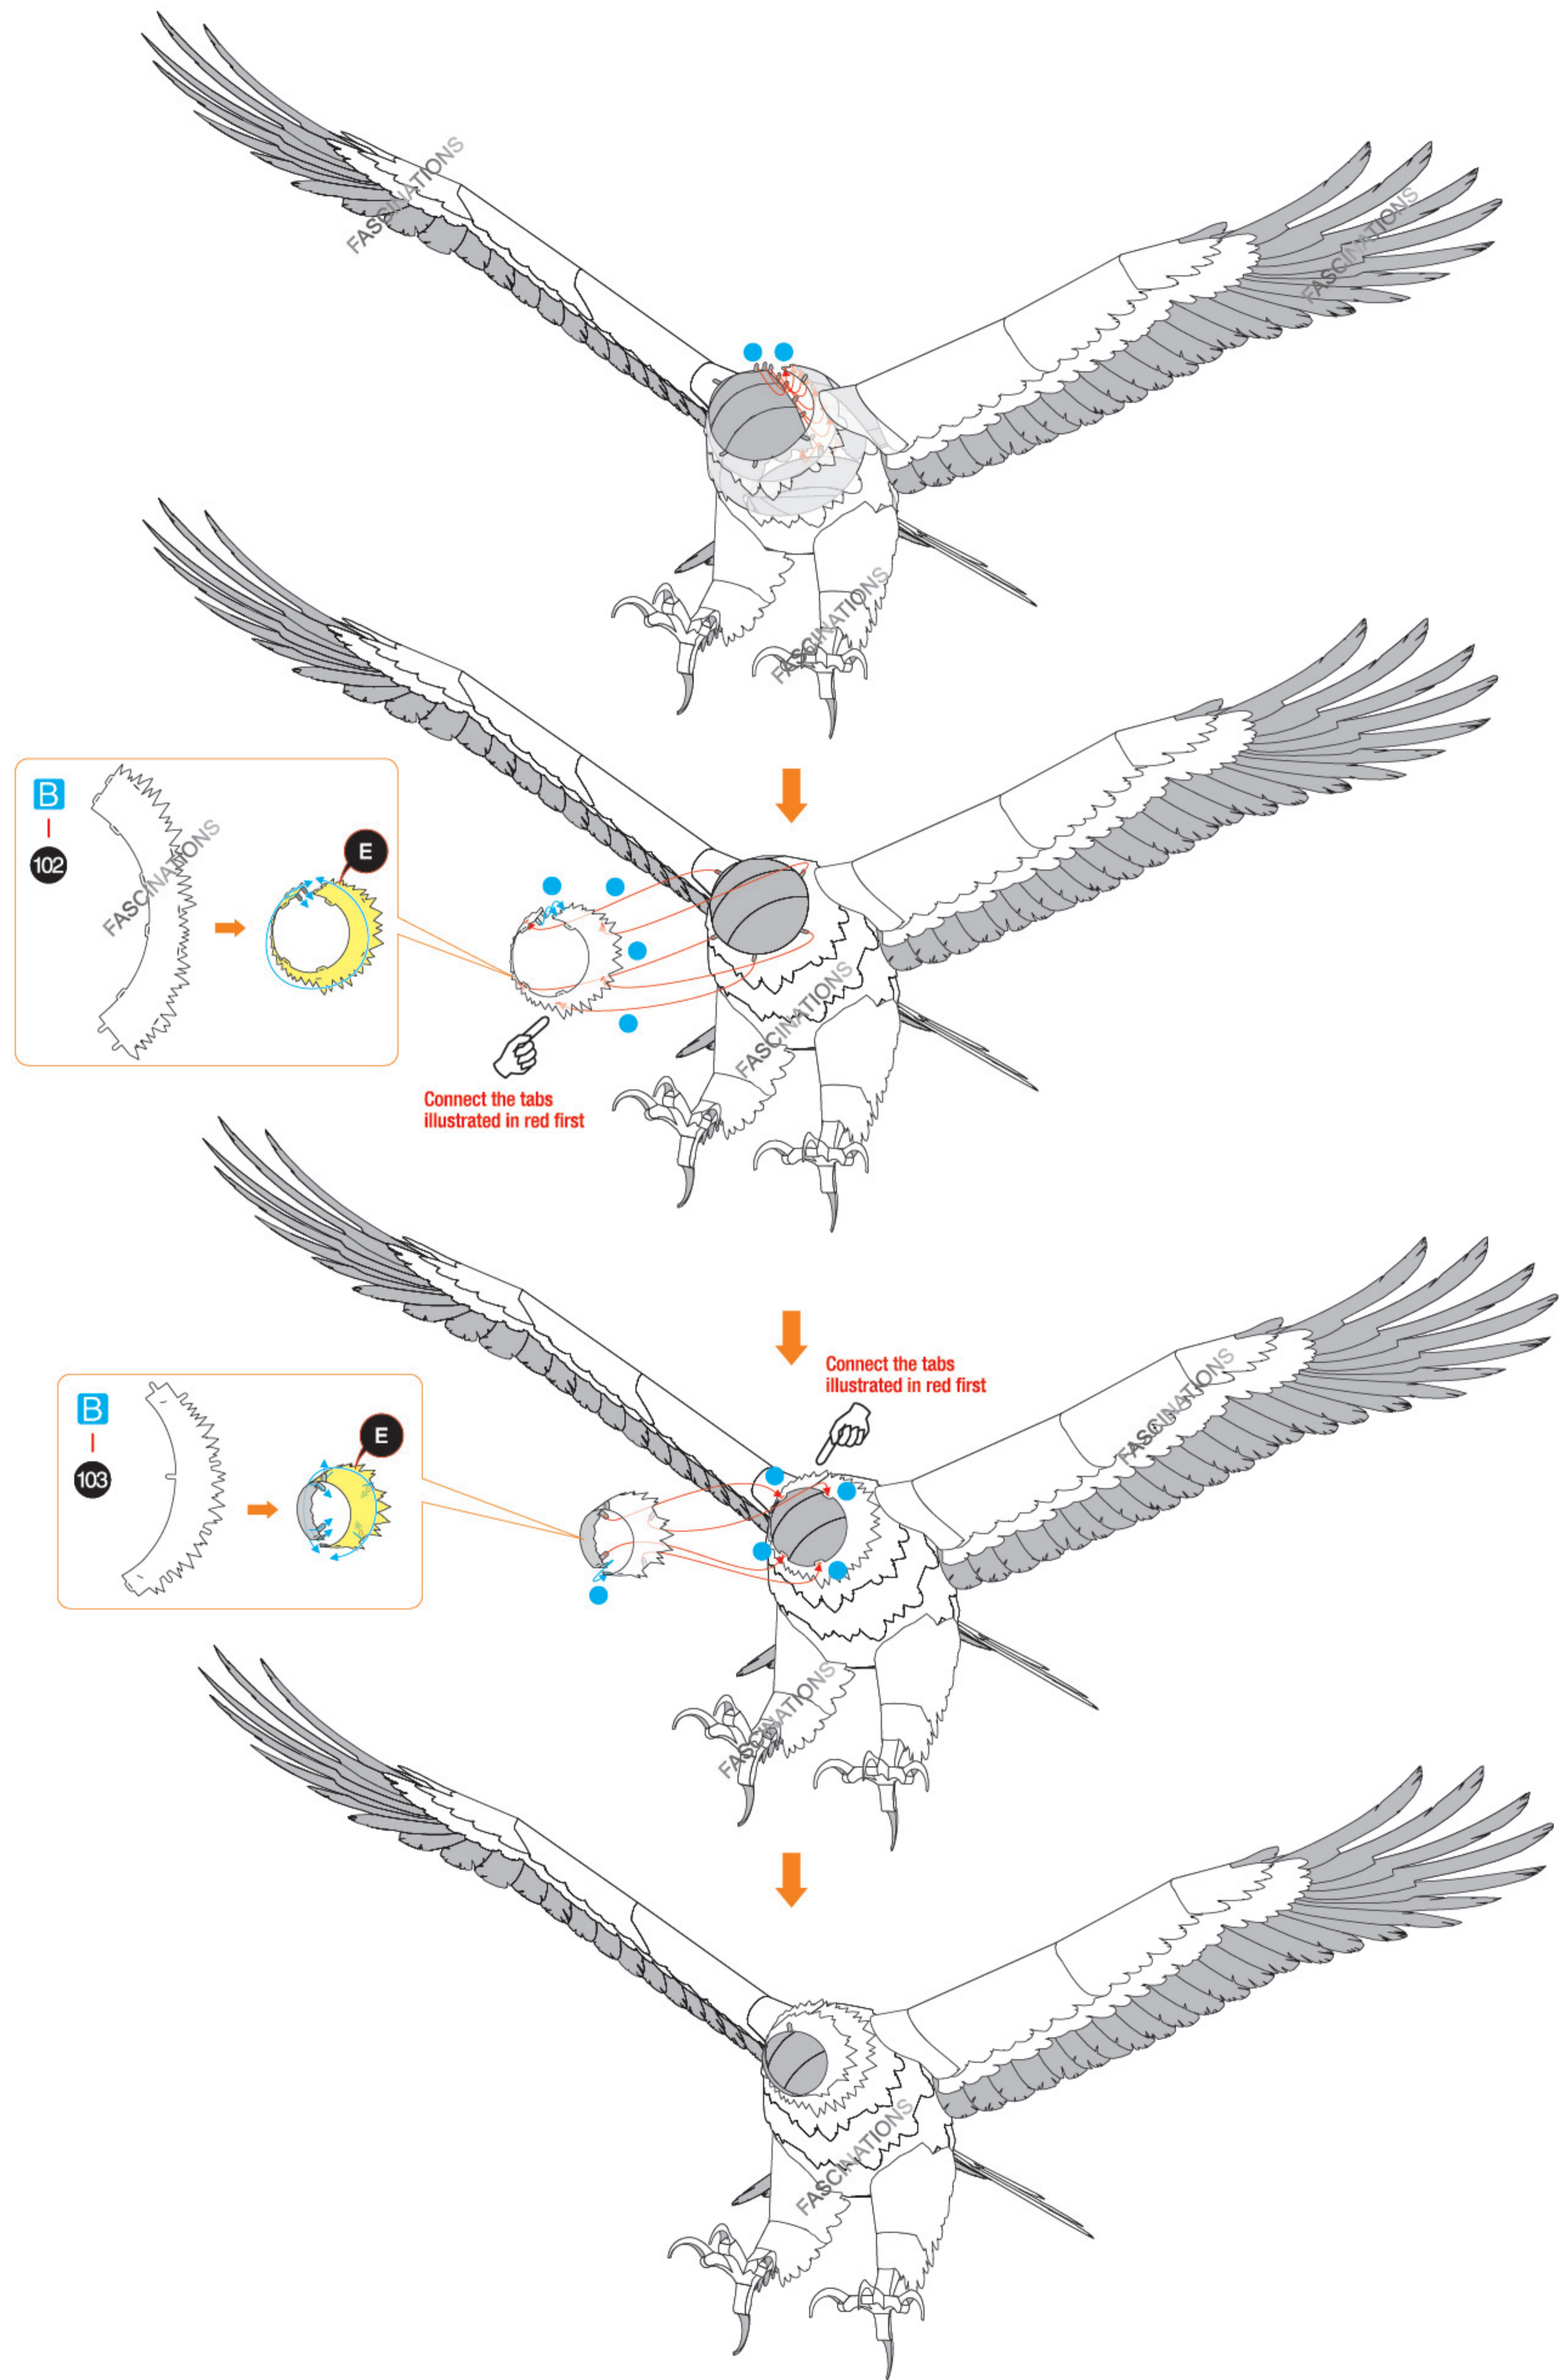

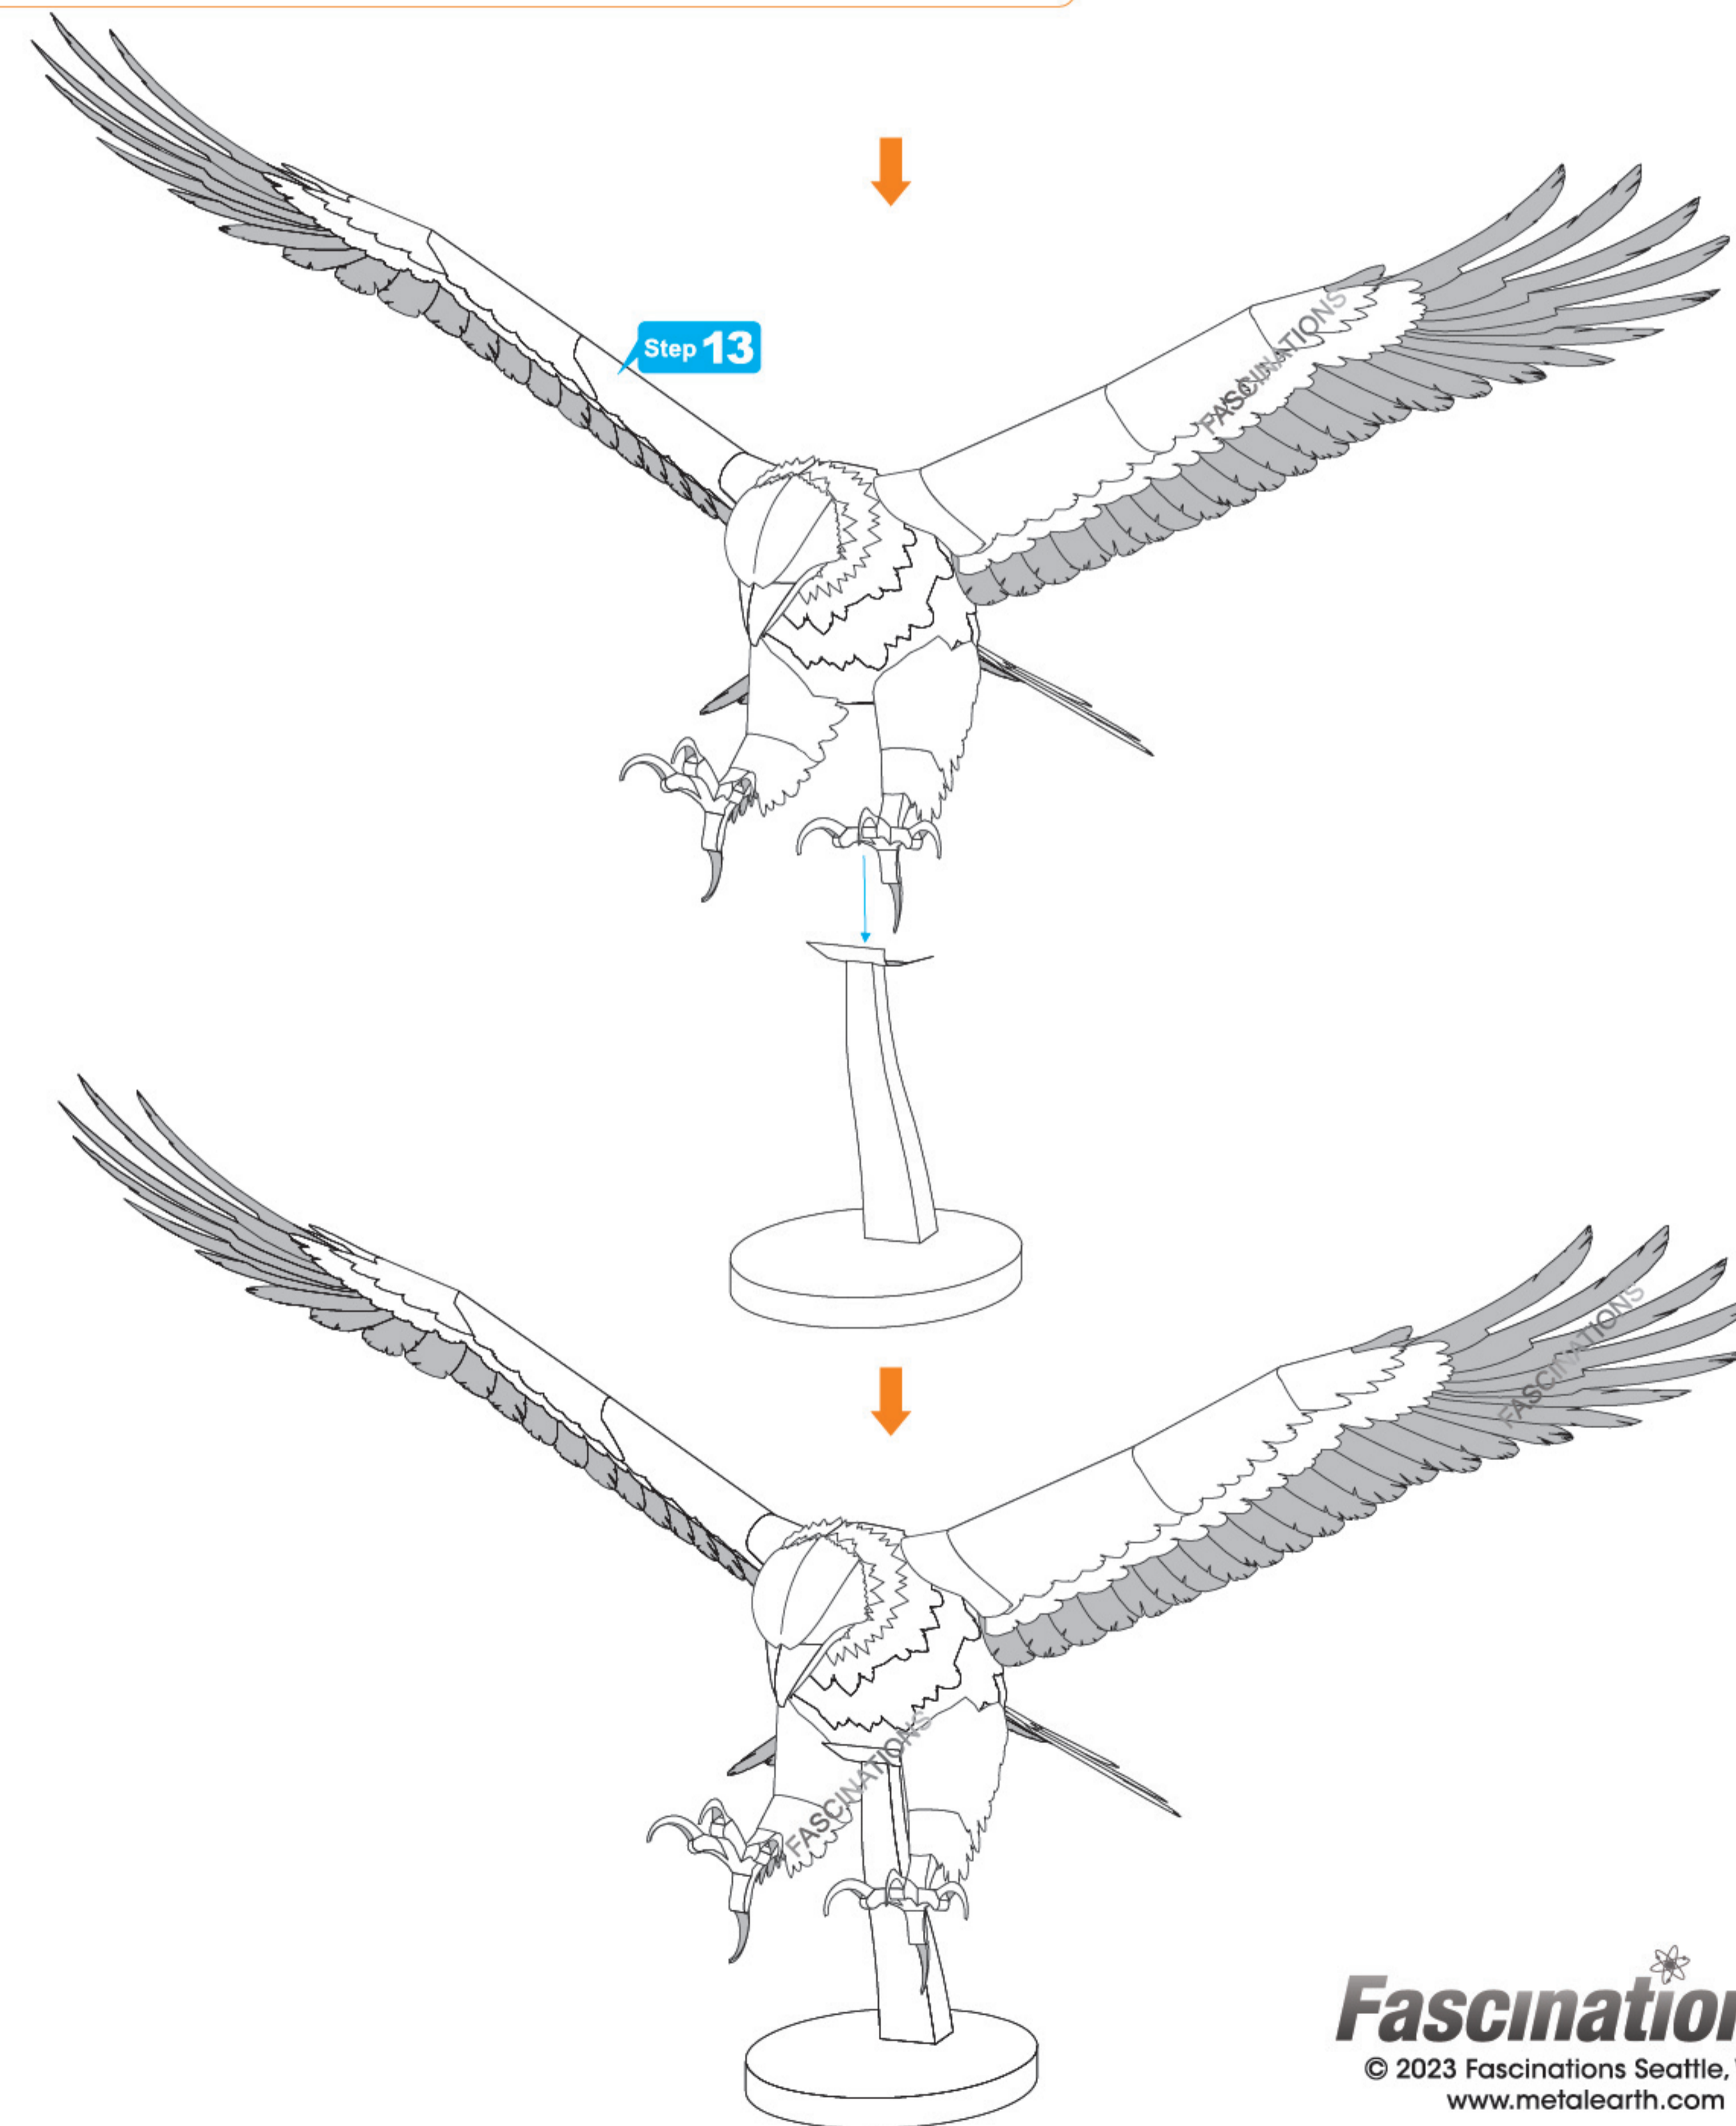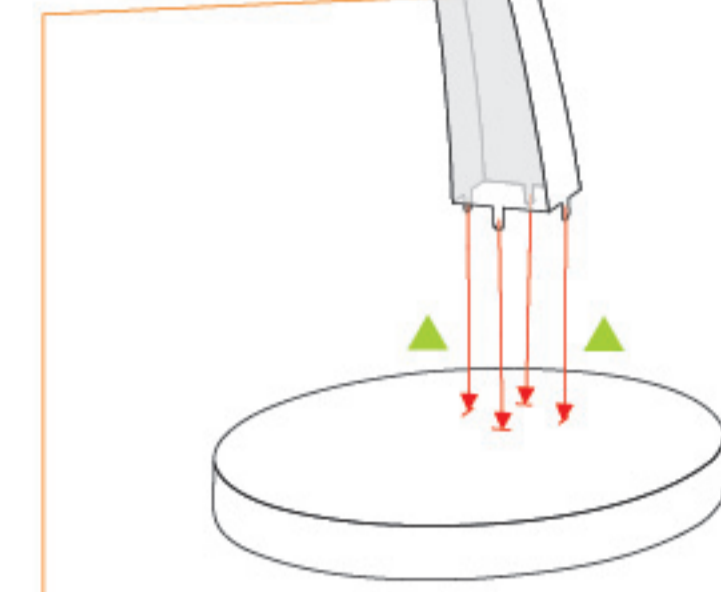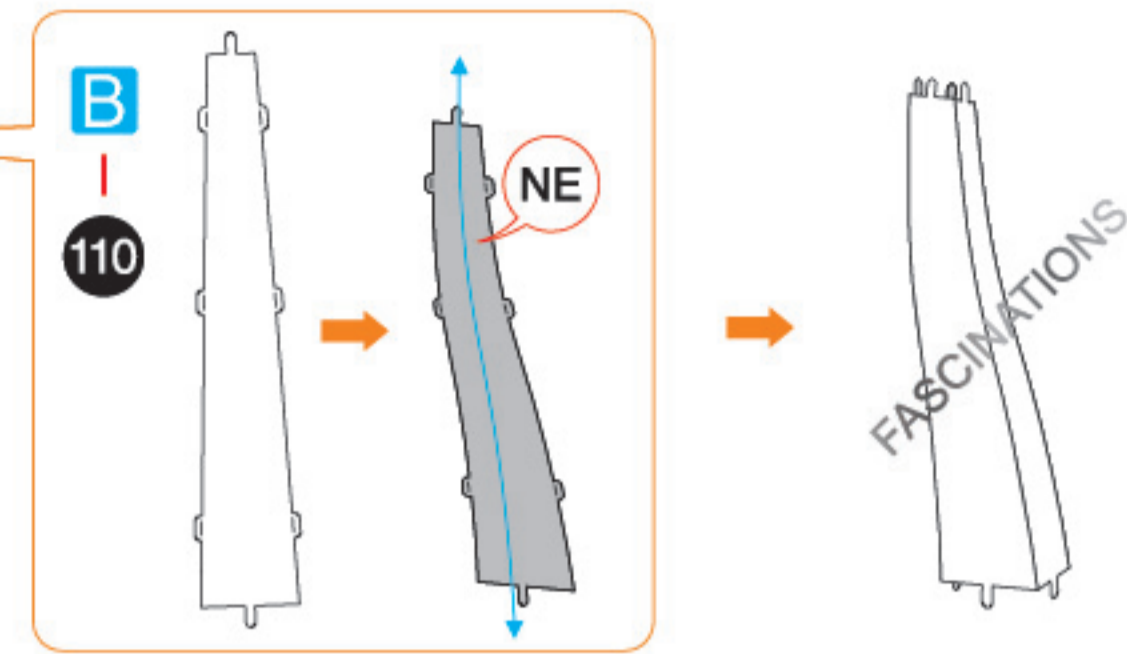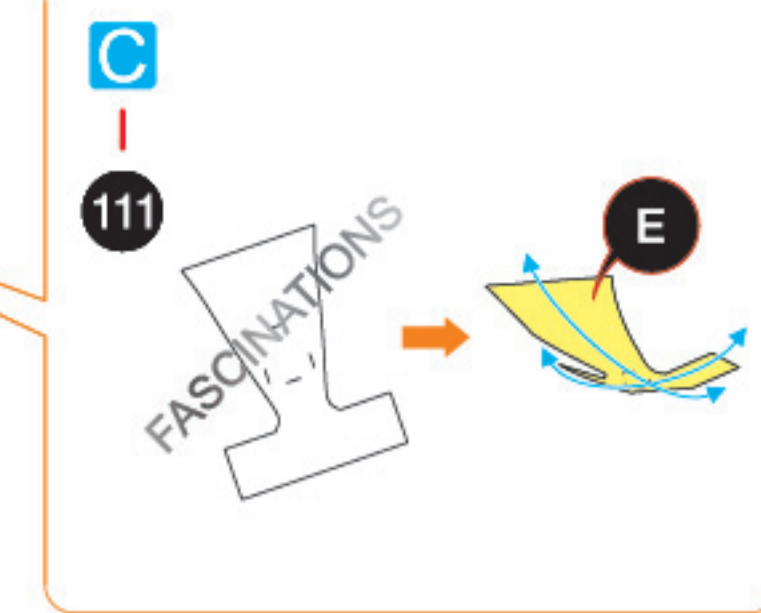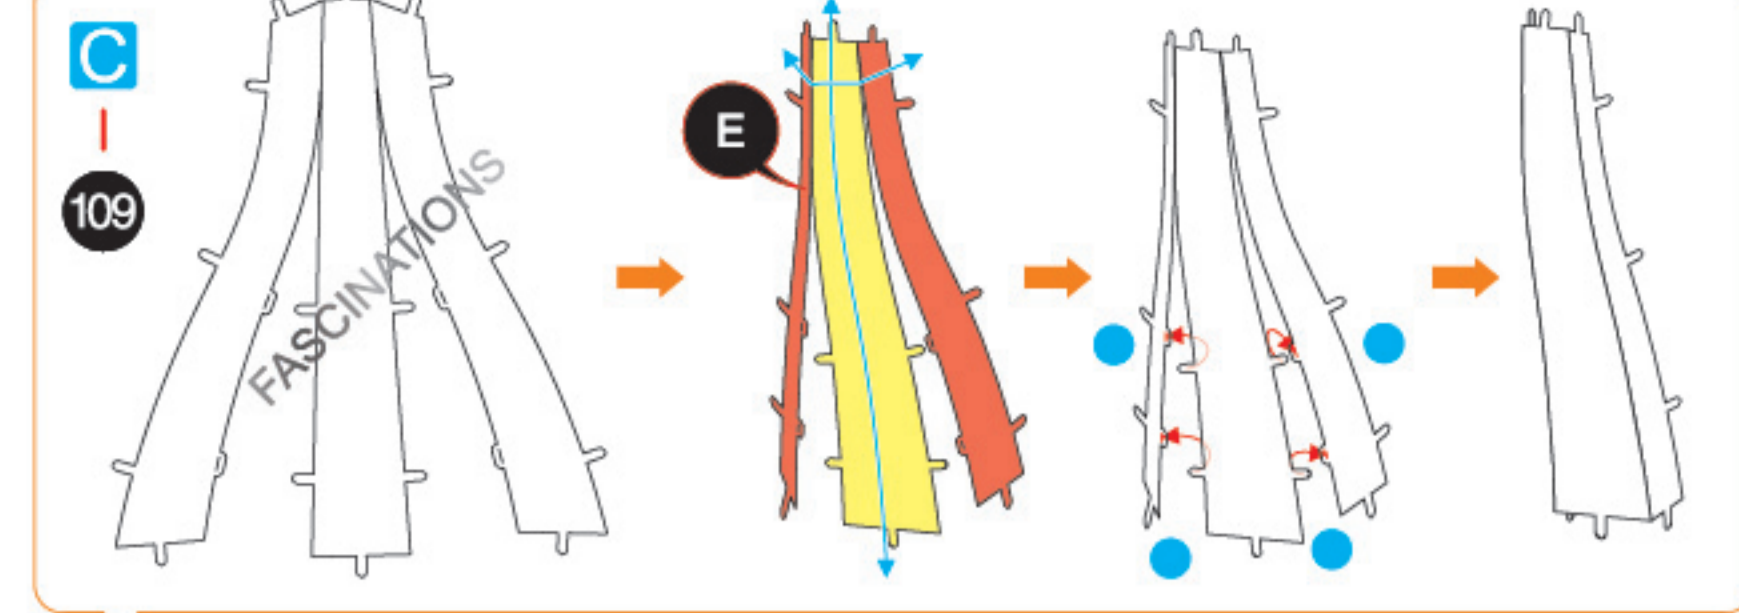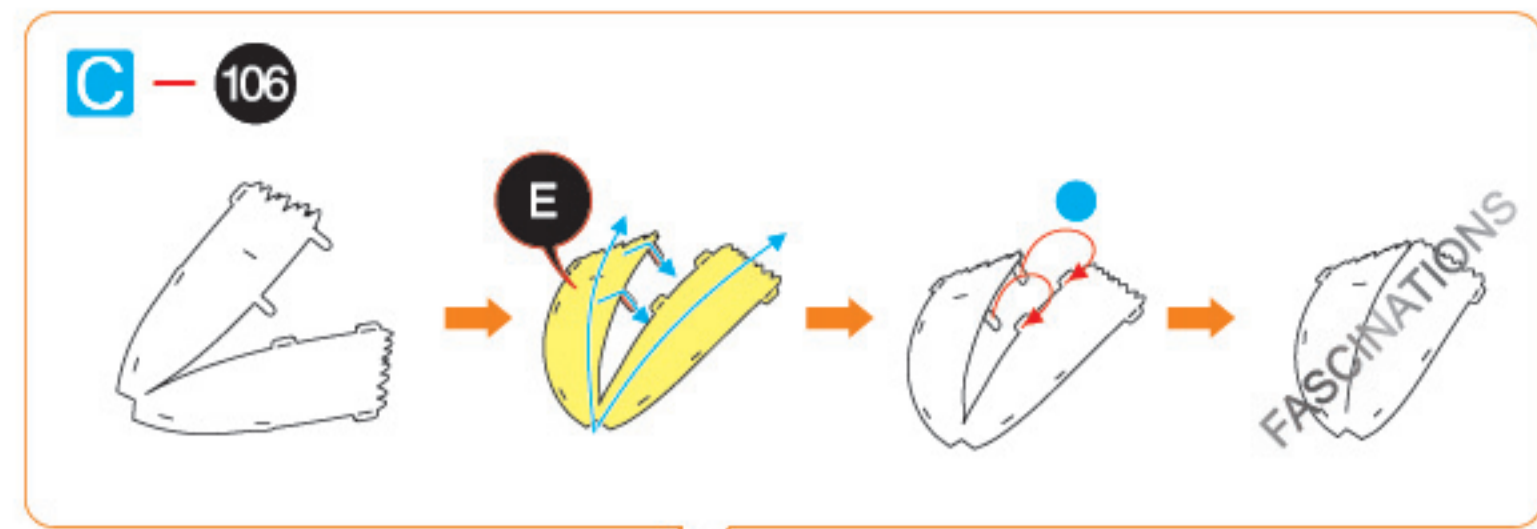

**Step 14**

