



## NIMBUS 2000™ ME1031

It is highly recommended that you visit  
[www.metalearth.com/360/ME1031](http://www.metalearth.com/360/ME1031)  
to see the completed model before assembling your own

360°  
view



### TO CREATE THE BEST CONNECTIONS

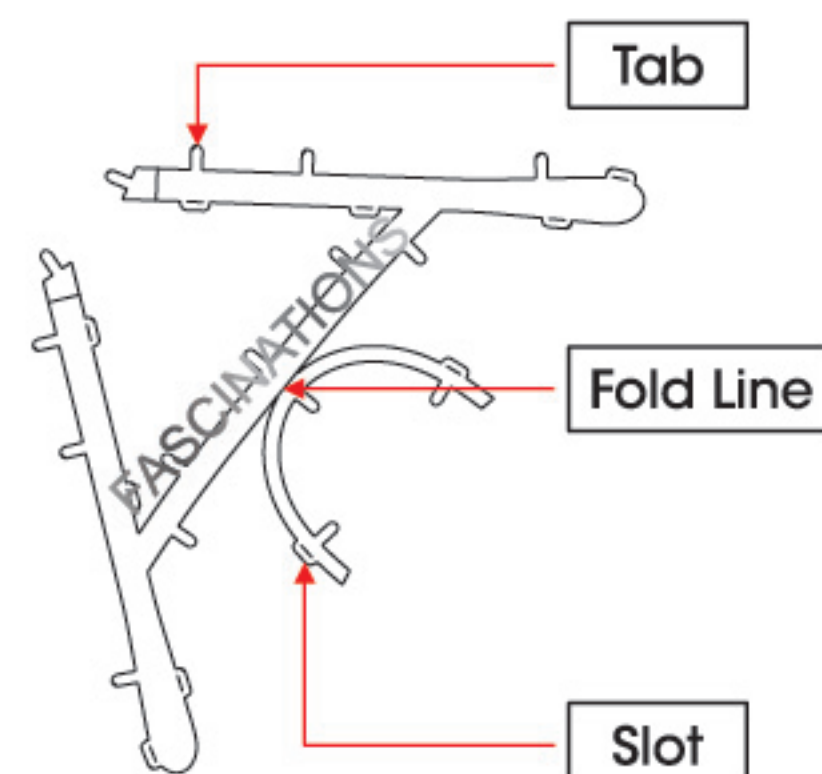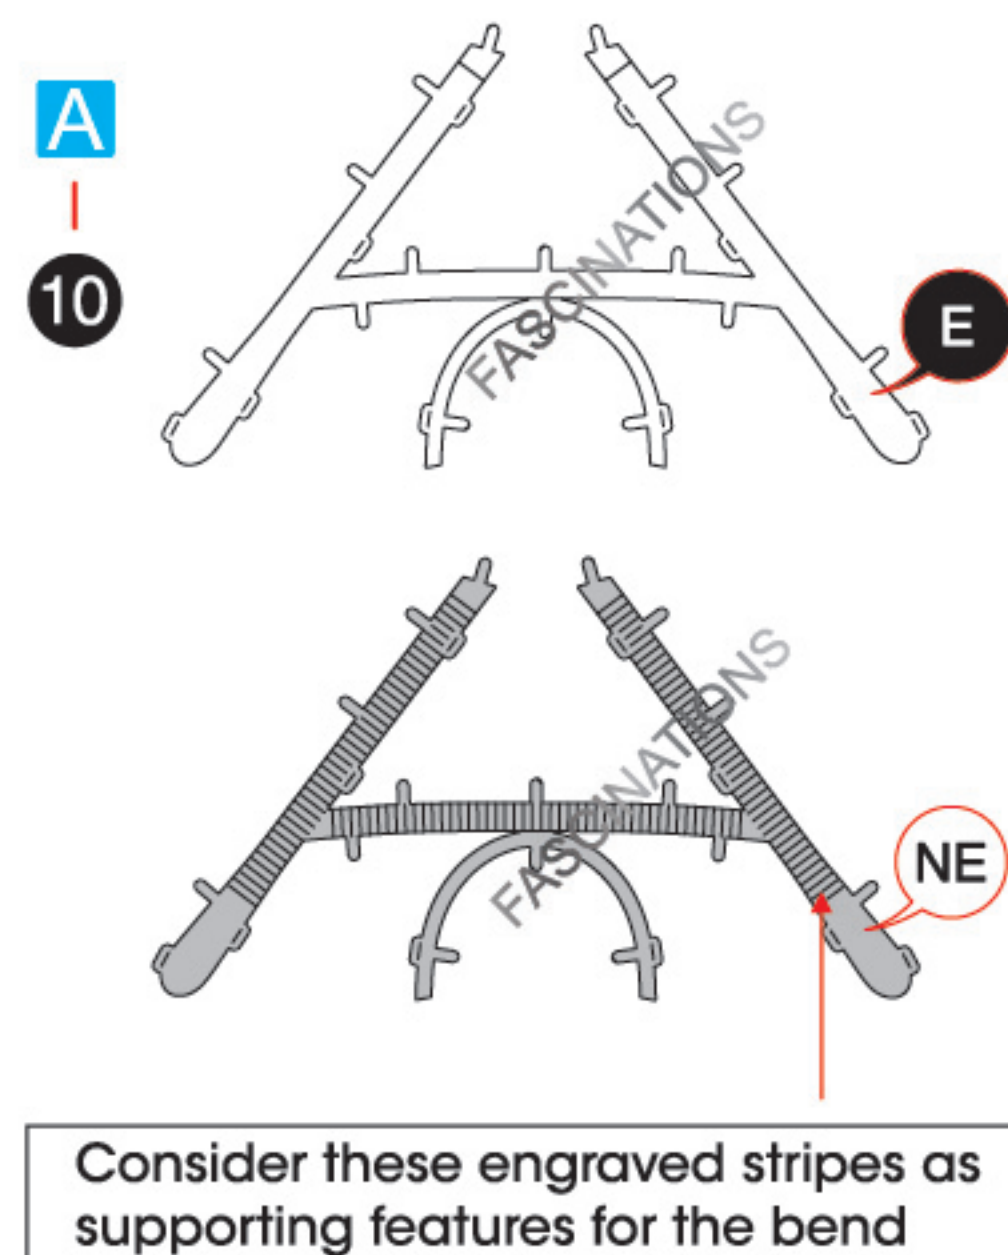

#### Legends:

- E** Engraved/ Color side
- NE** Non - engraved/ Silver side
- Attention point
- Insert tab and bend 90 degrees
- Insert tab and twist 90 degrees


#### Assembly tip:

If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish.



- Yellow areas should be curled
- Red areas should be folded

#### Recommended tools:

- Wire cutters: helpful for taking parts from the metal sheets.

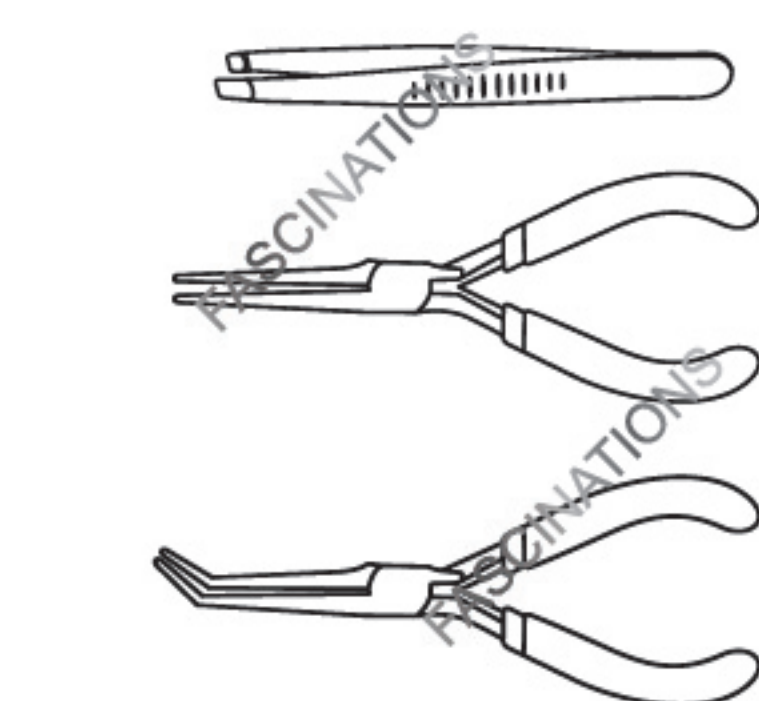

### METAL SHEETS

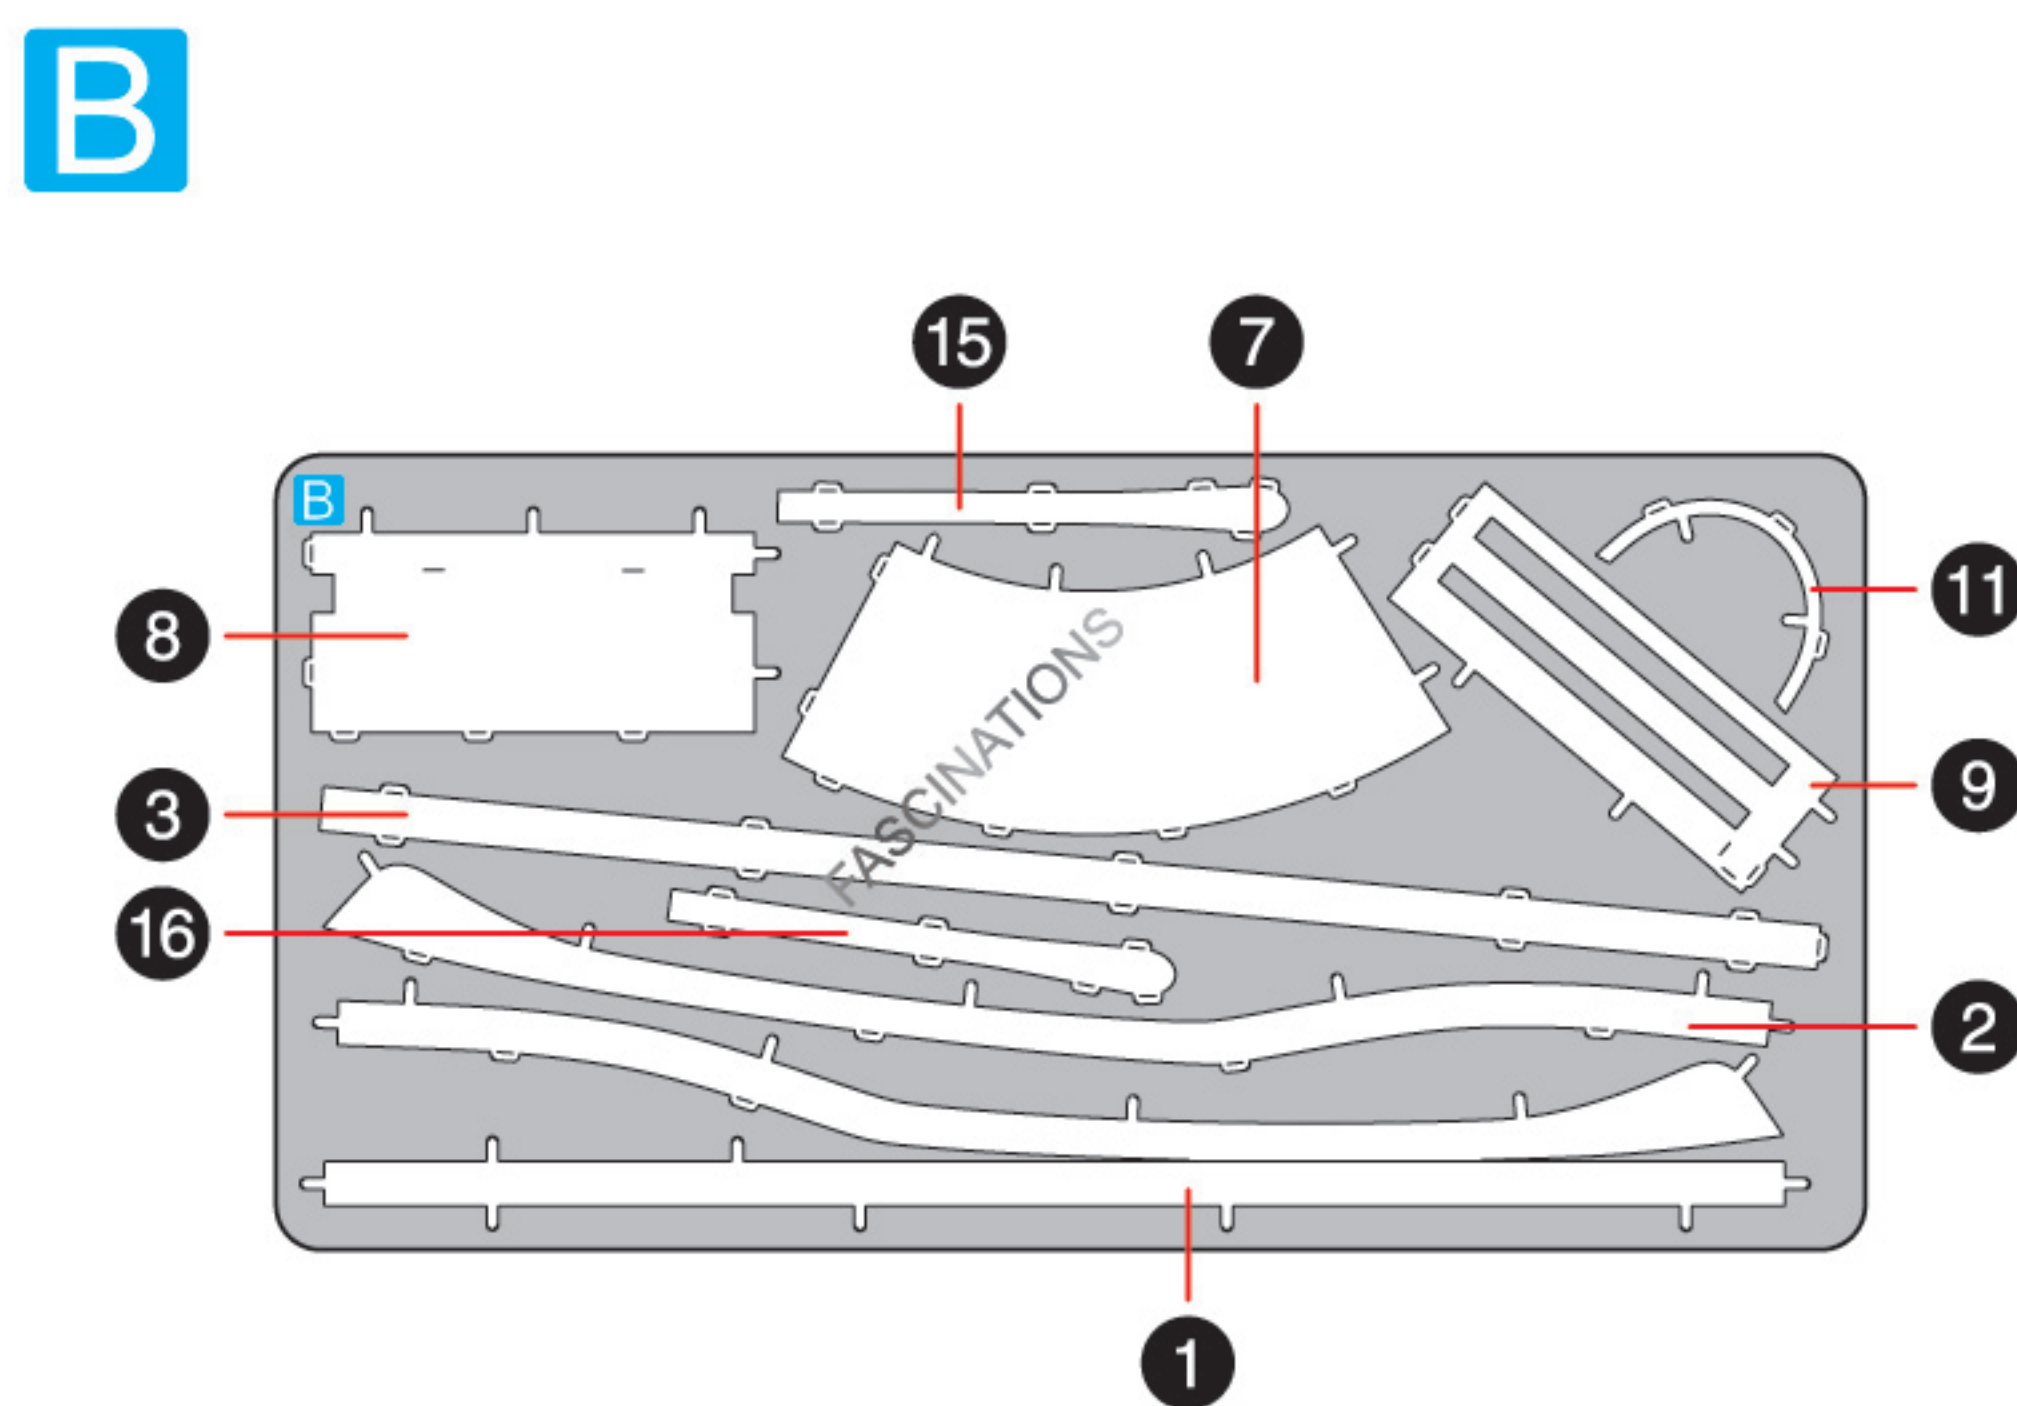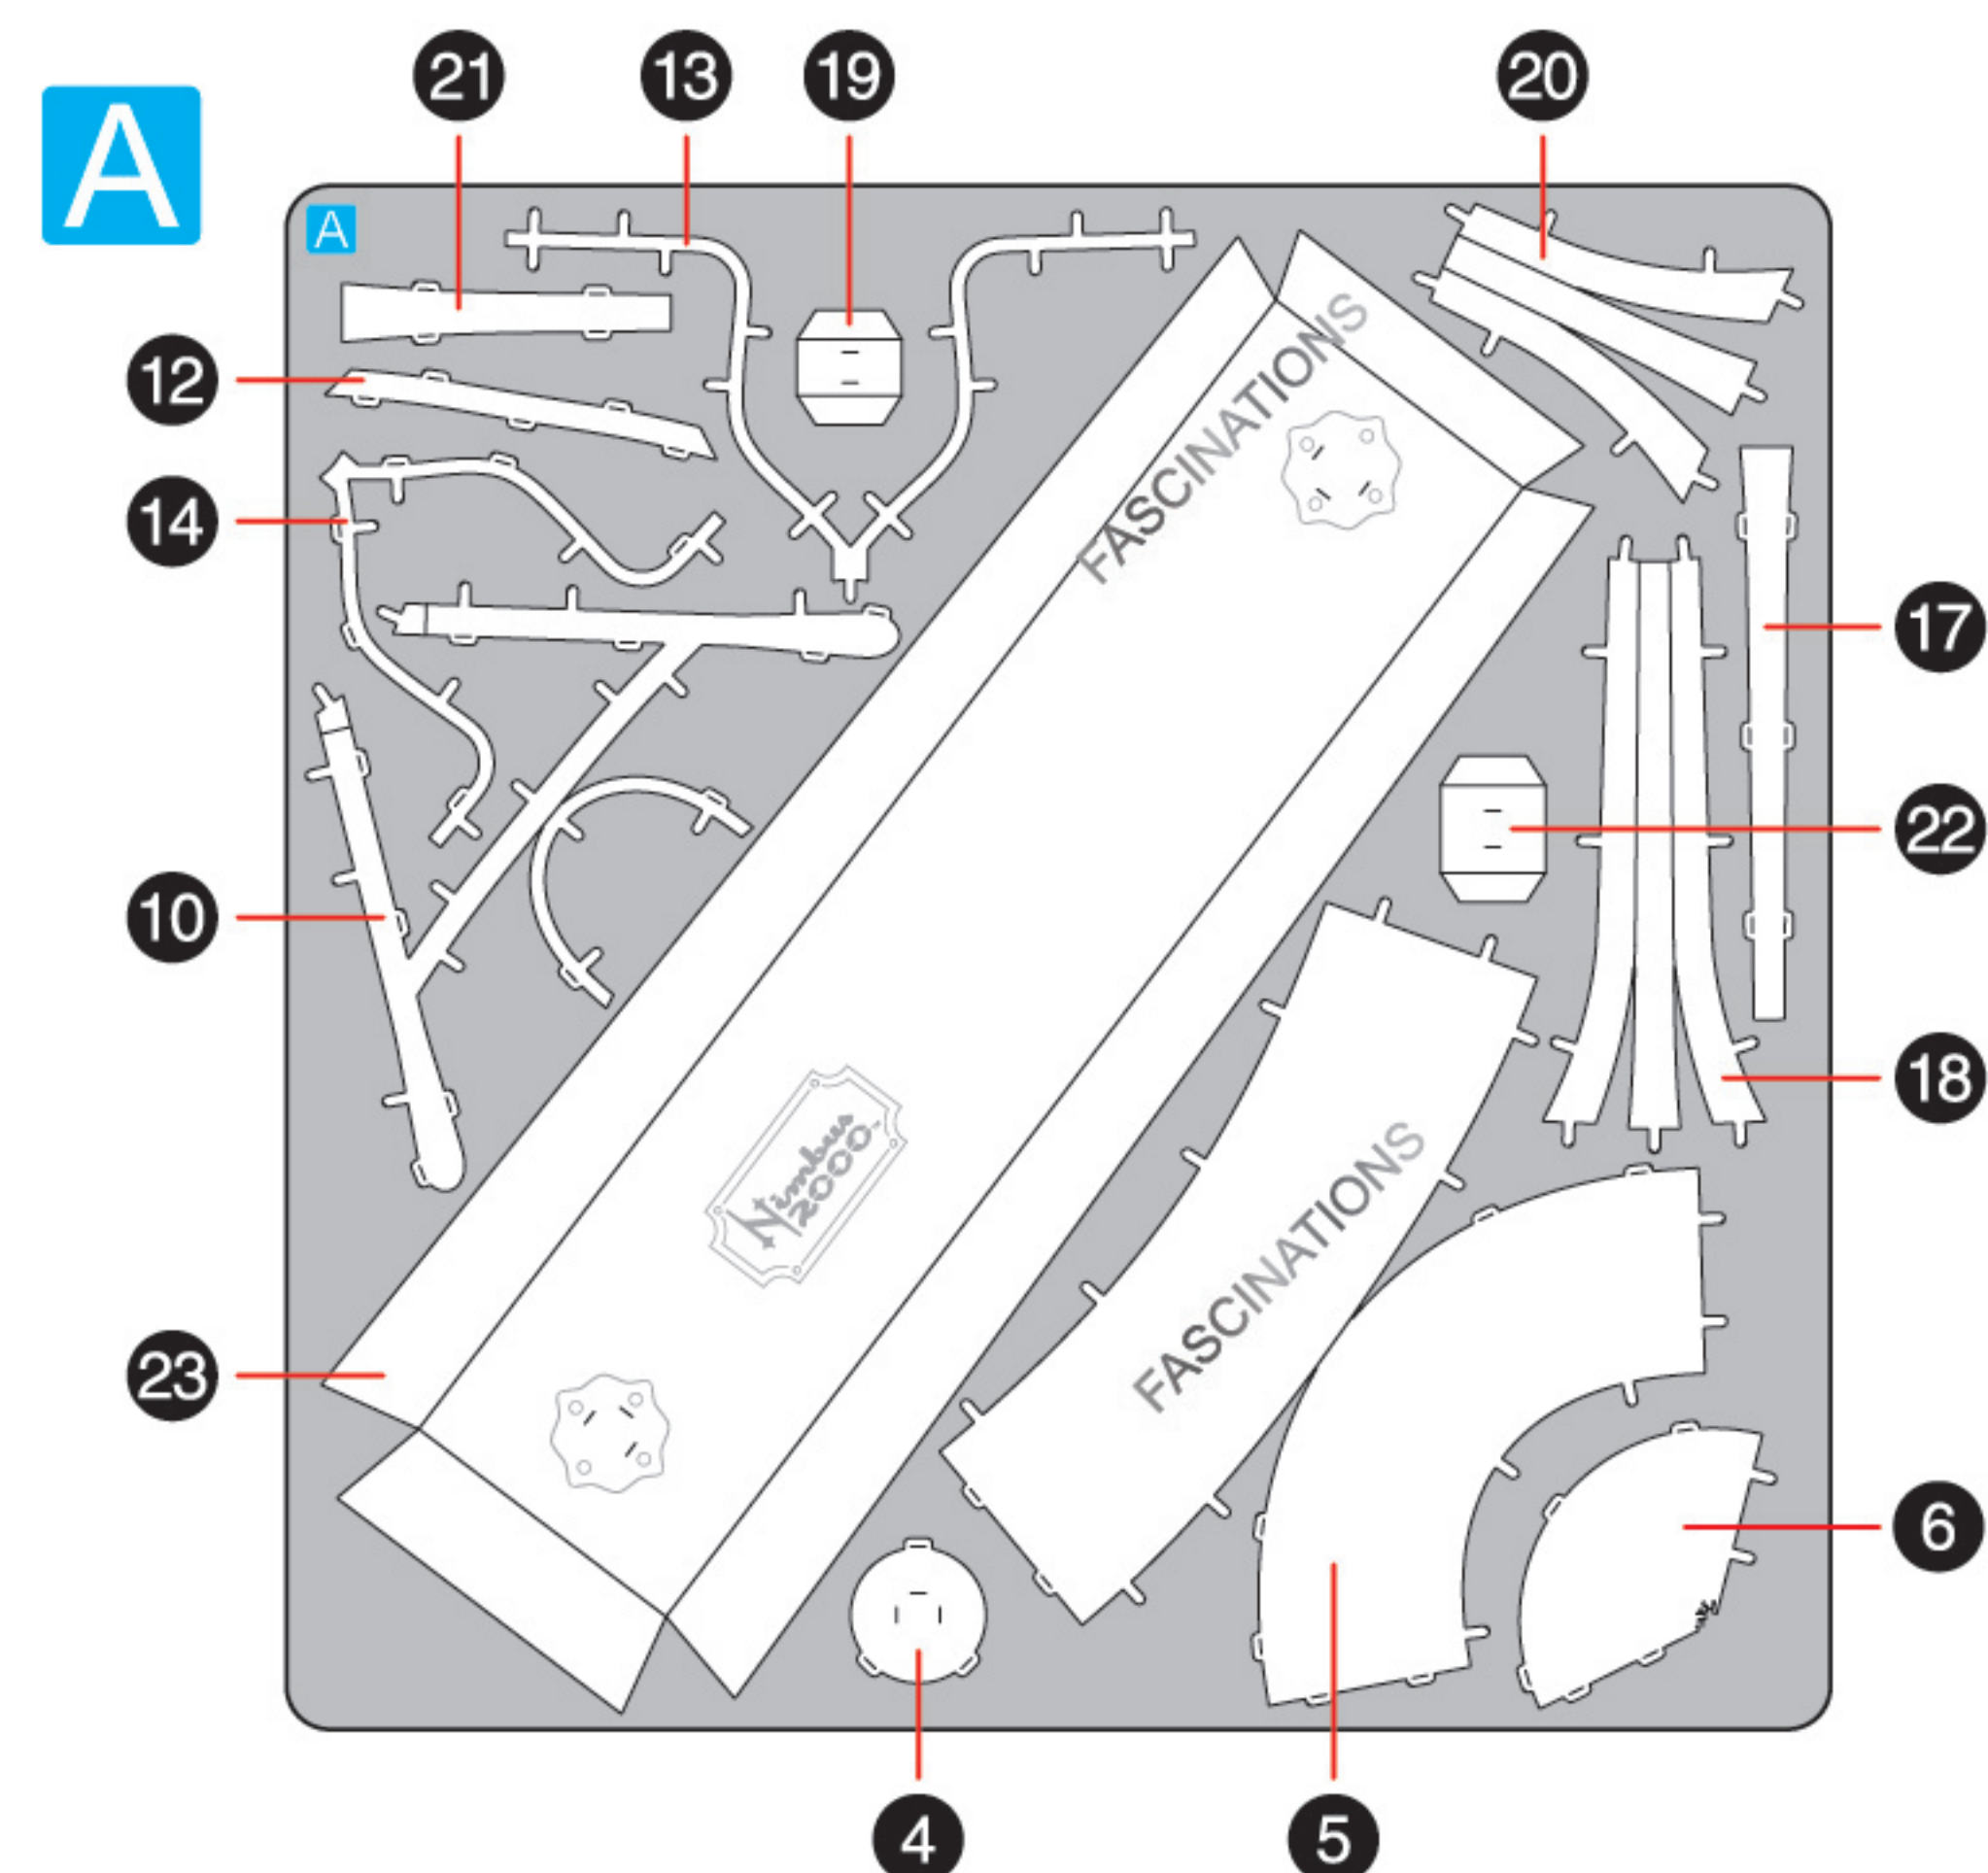

In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed.




Go to [www.metalearth.com/360/ME1031](http://www.metalearth.com/360/ME1031) to see the zoomable PDF version of this instruction sheet


### ASSEMBLY FLOW CHART

#### Step 1




**B**  
1

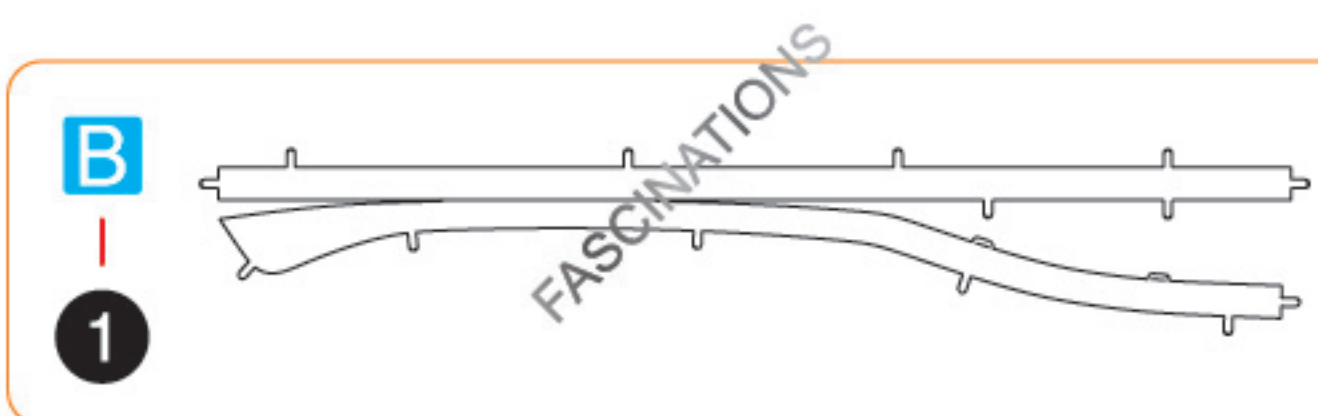


**B**  
2

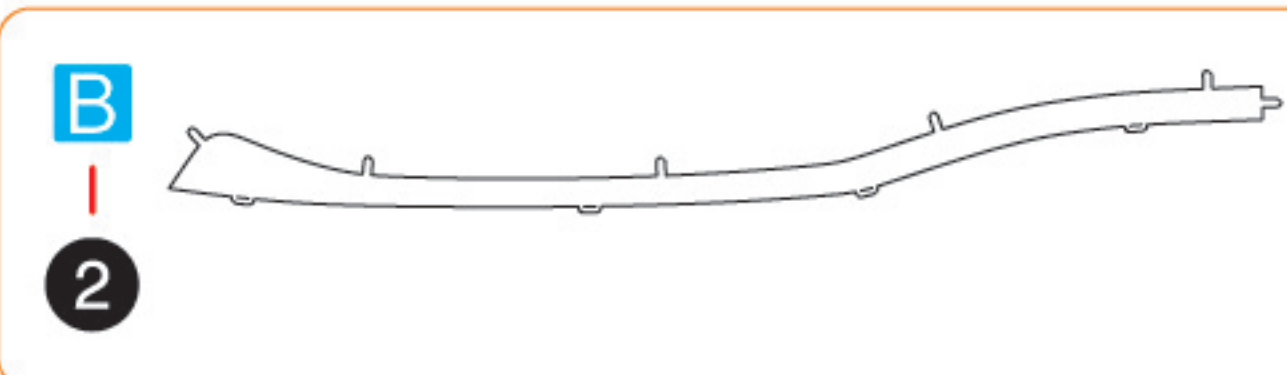

**E**

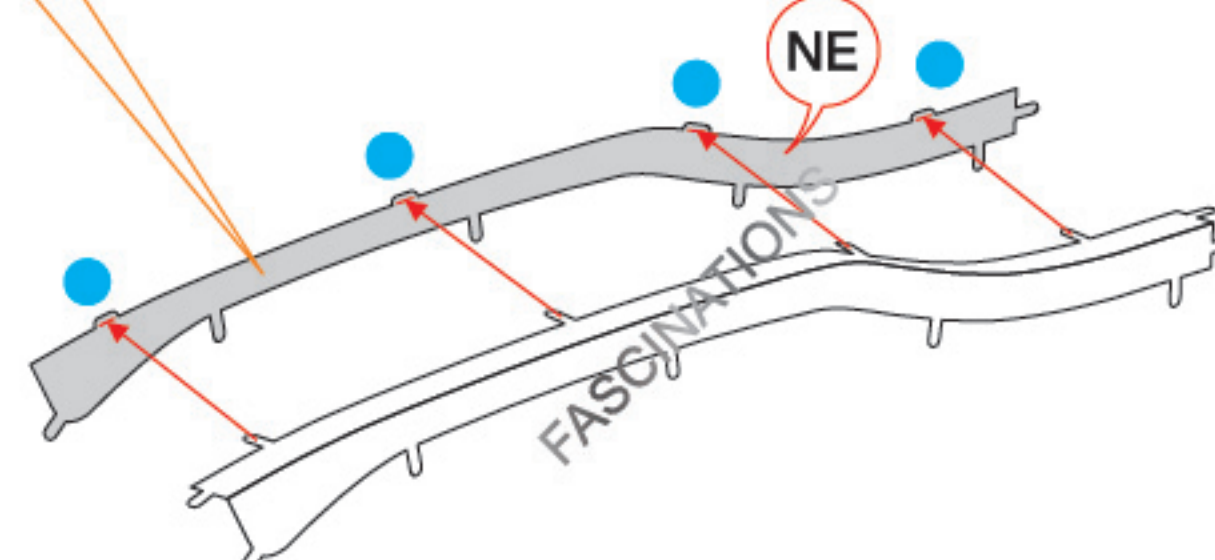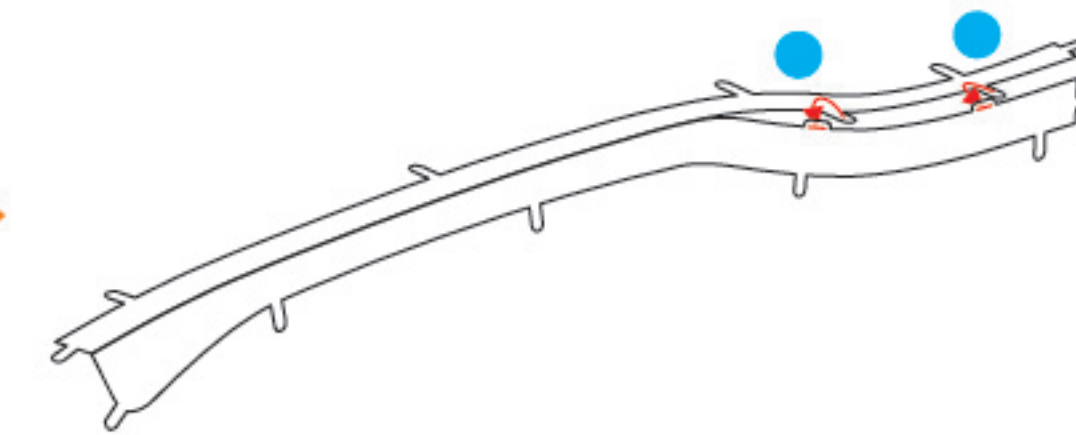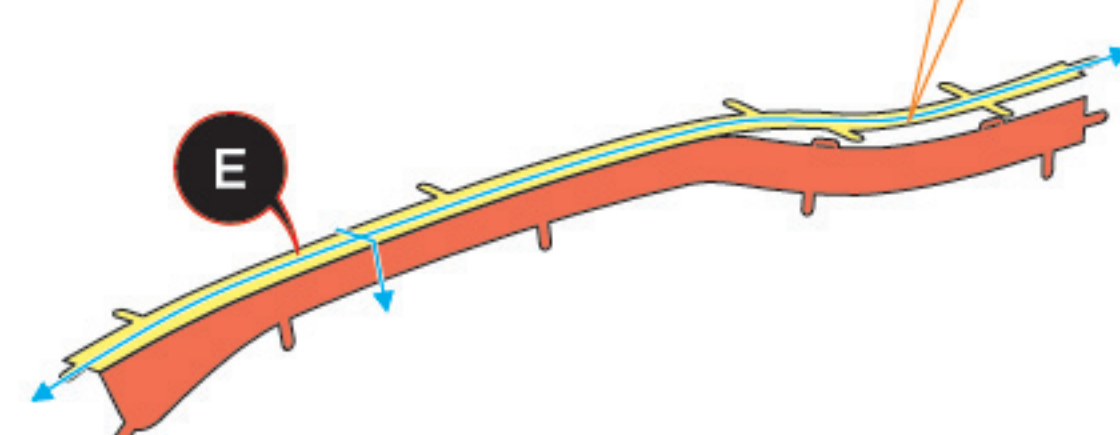


Connect the tabs illustrated in red first


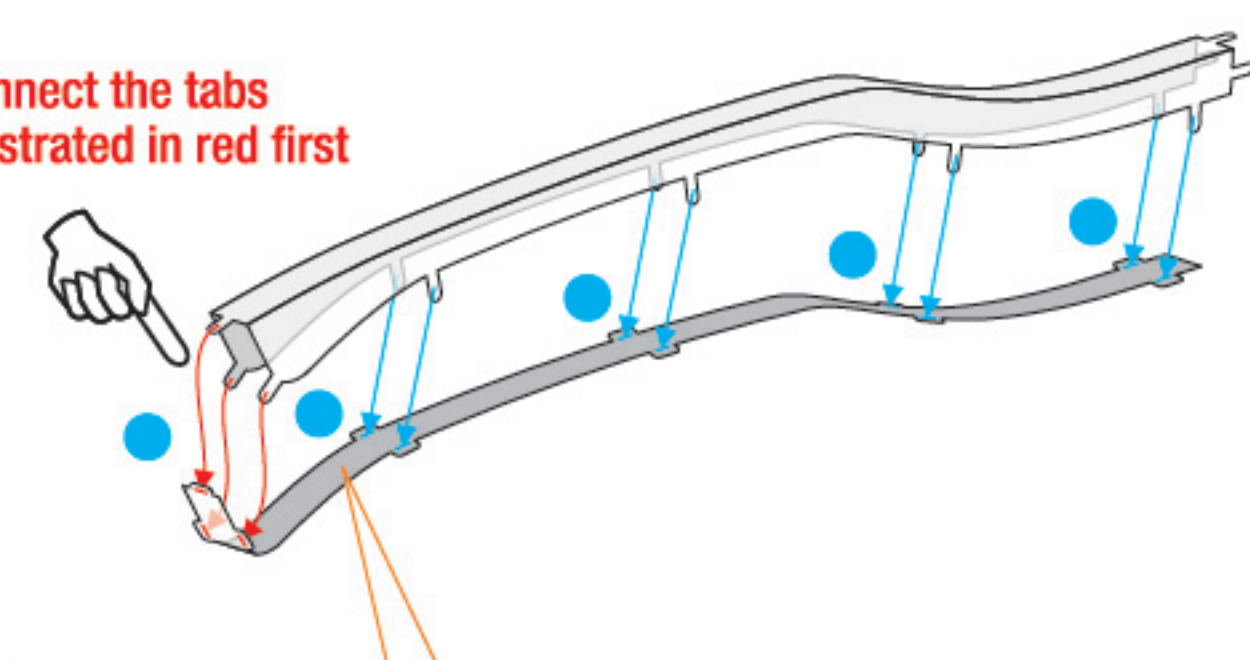


**E**

**A**  
4


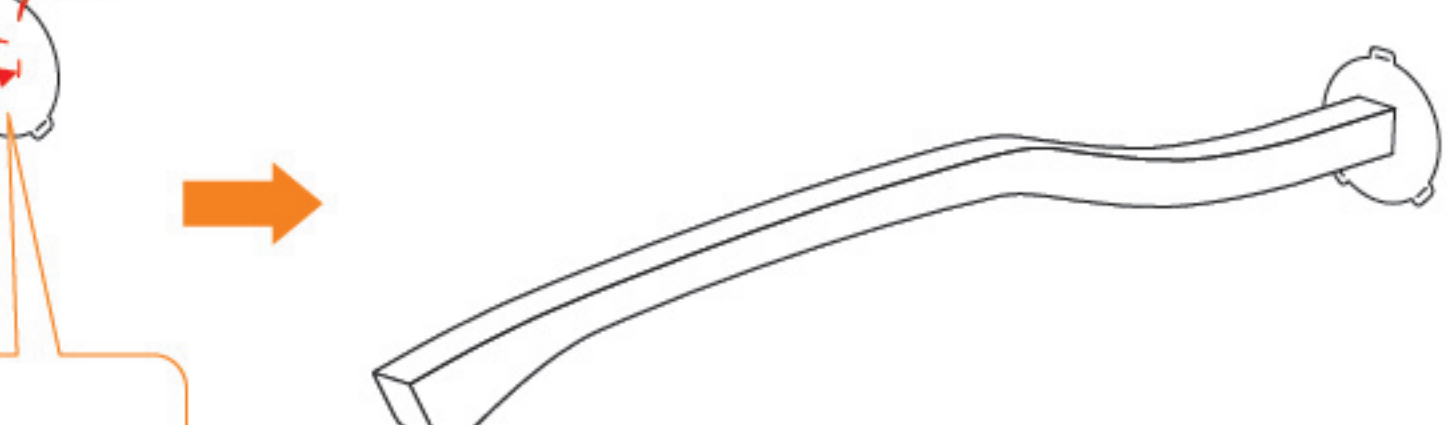


**B**  
3

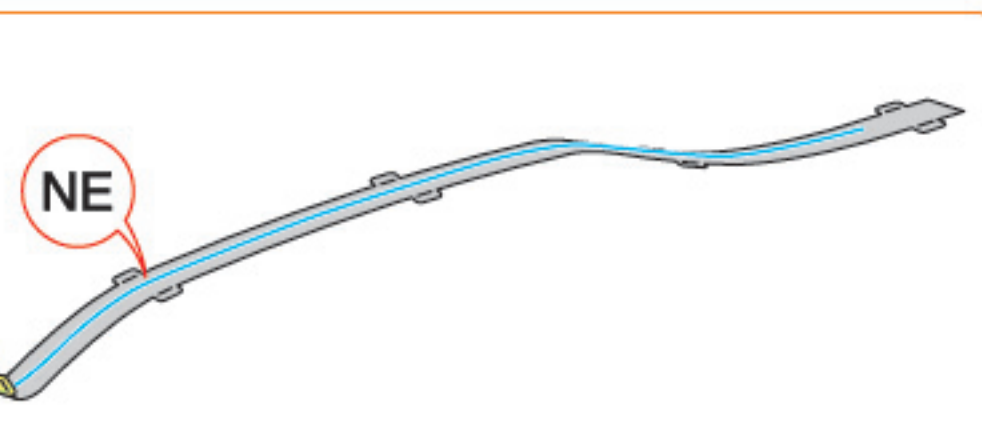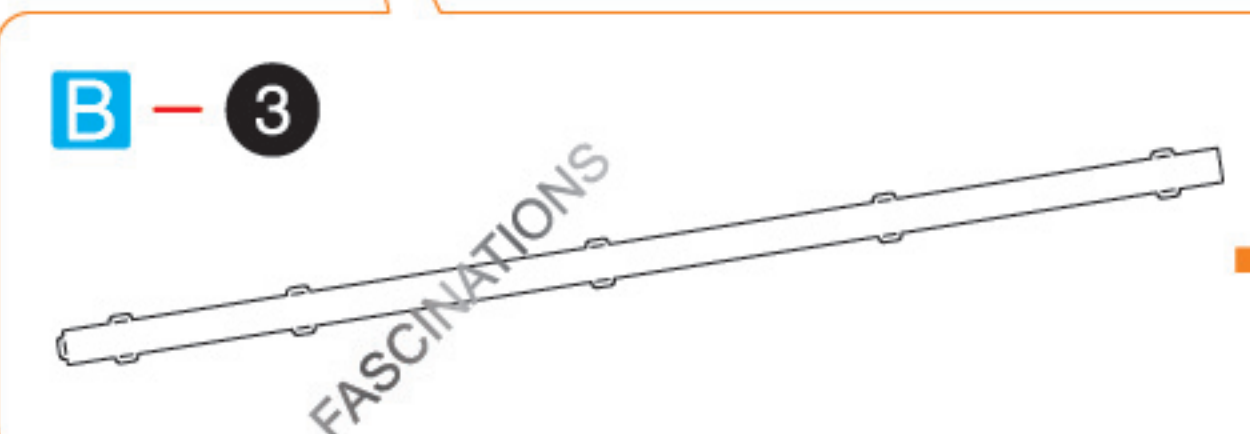


#### Step 2


**A**  
5

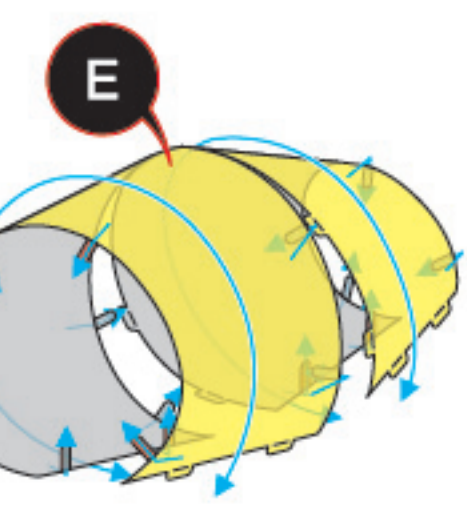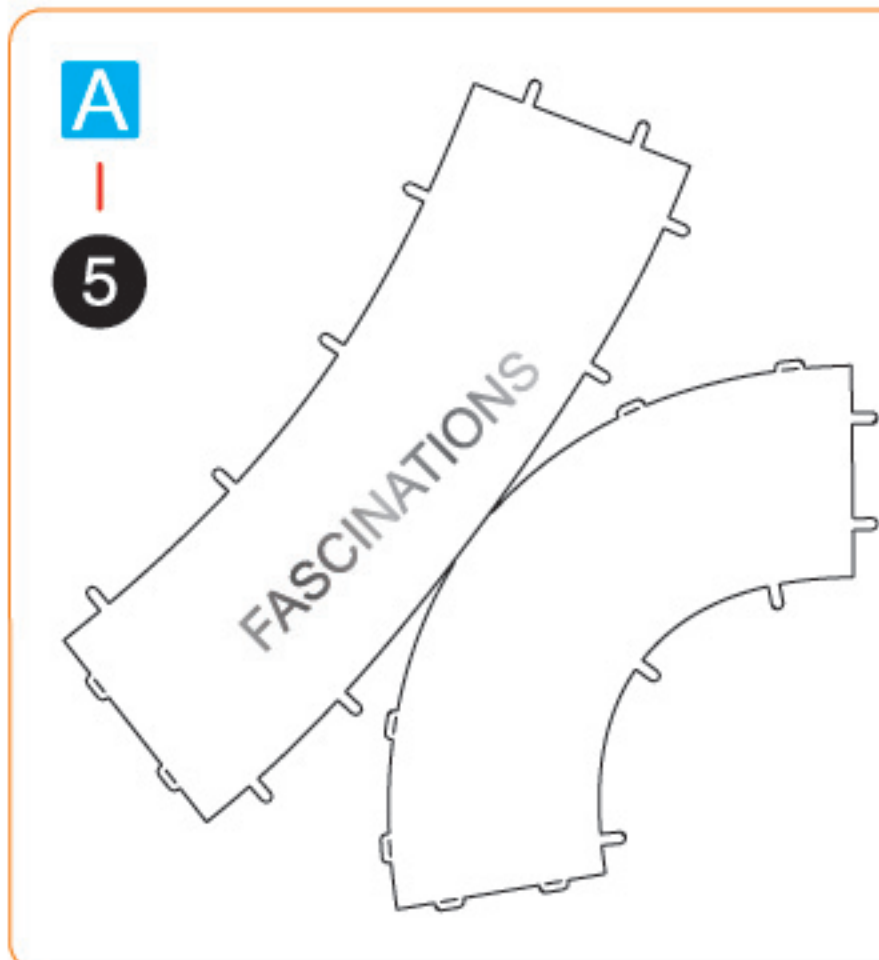



Connect the tabs illustrated in red first

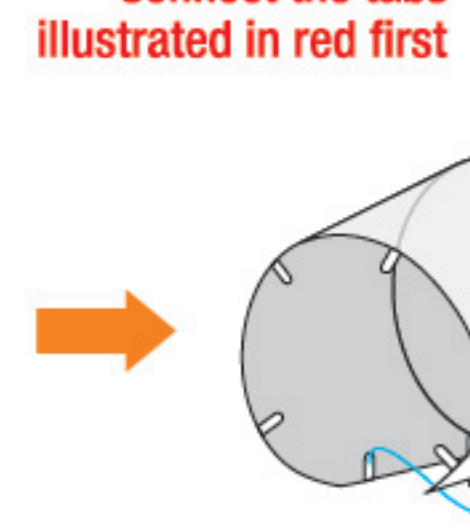


**A**  
6

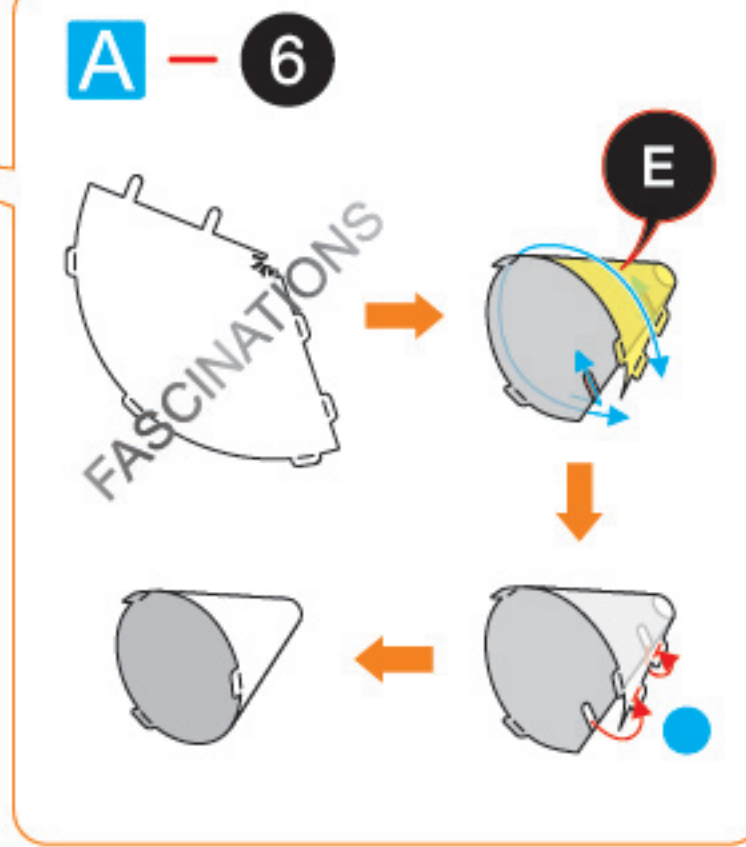

**B**  
7

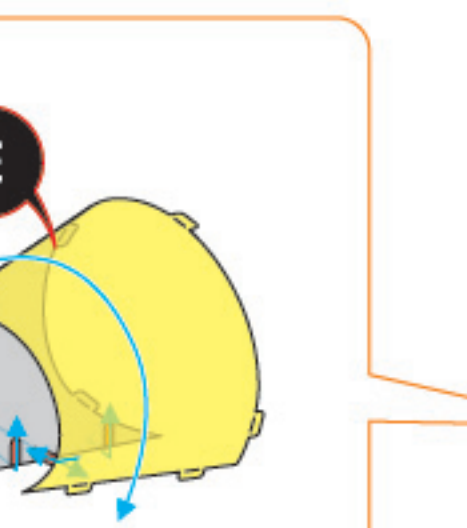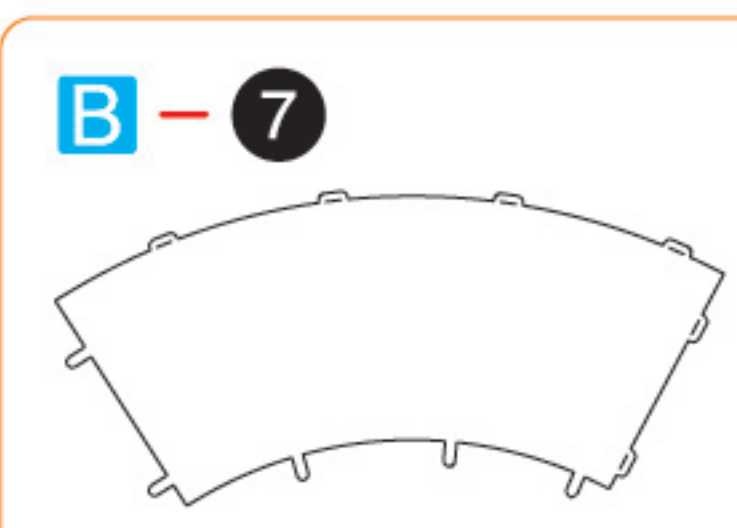


Connect the tabs illustrated in red first

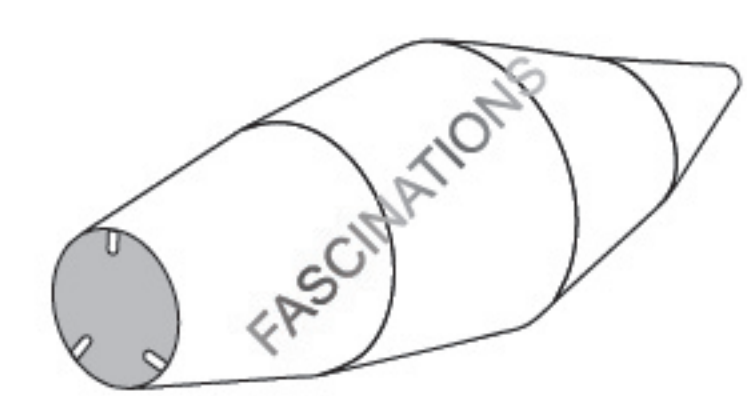


#### Step 3

**B**  
8

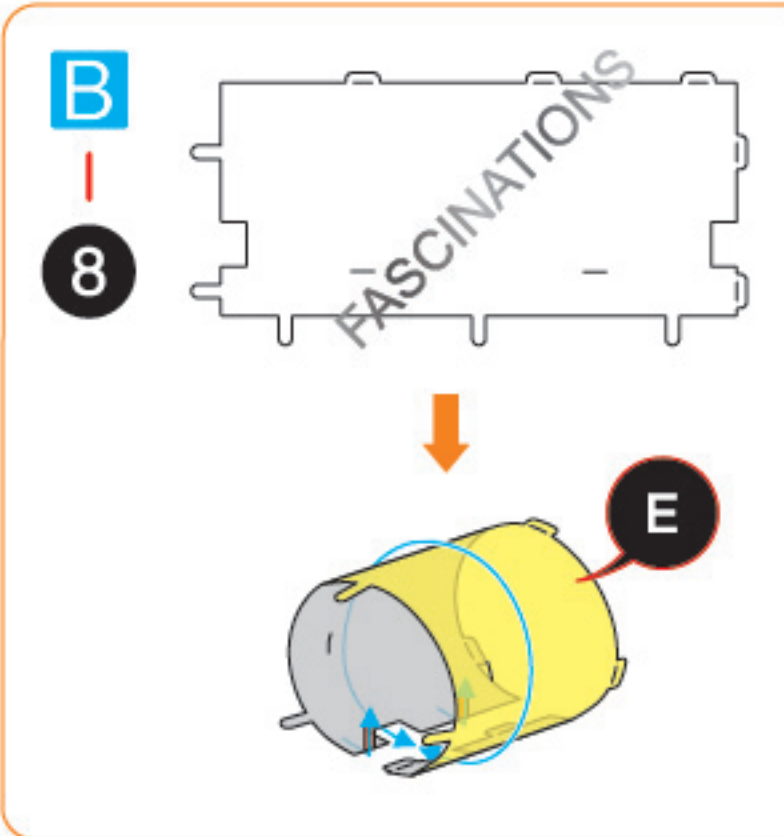



Step 2

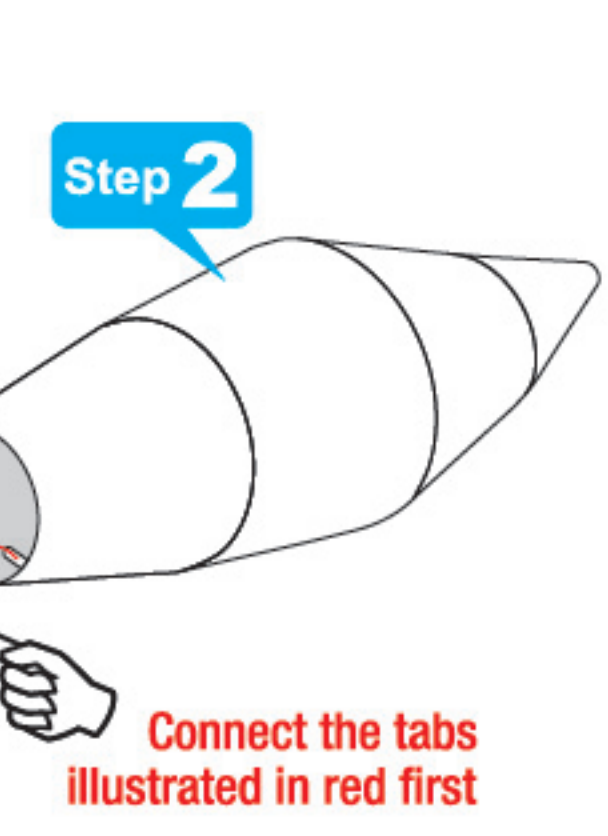

Connect the tabs illustrated in red first




**B**  
9

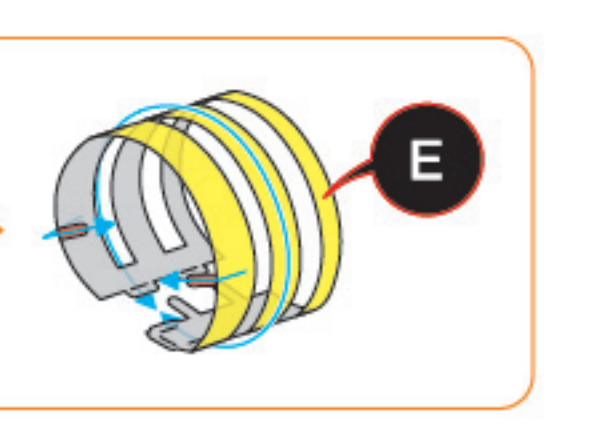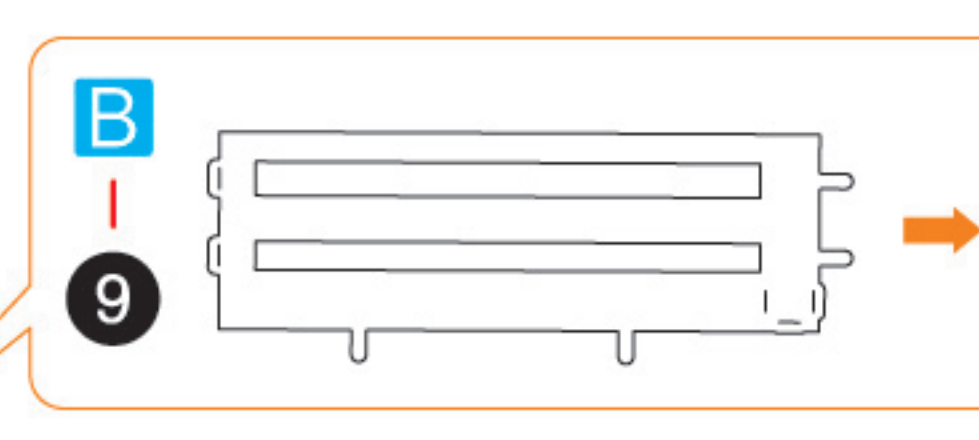




## Step 4


**Tips:** Look through the assembly flow before you start

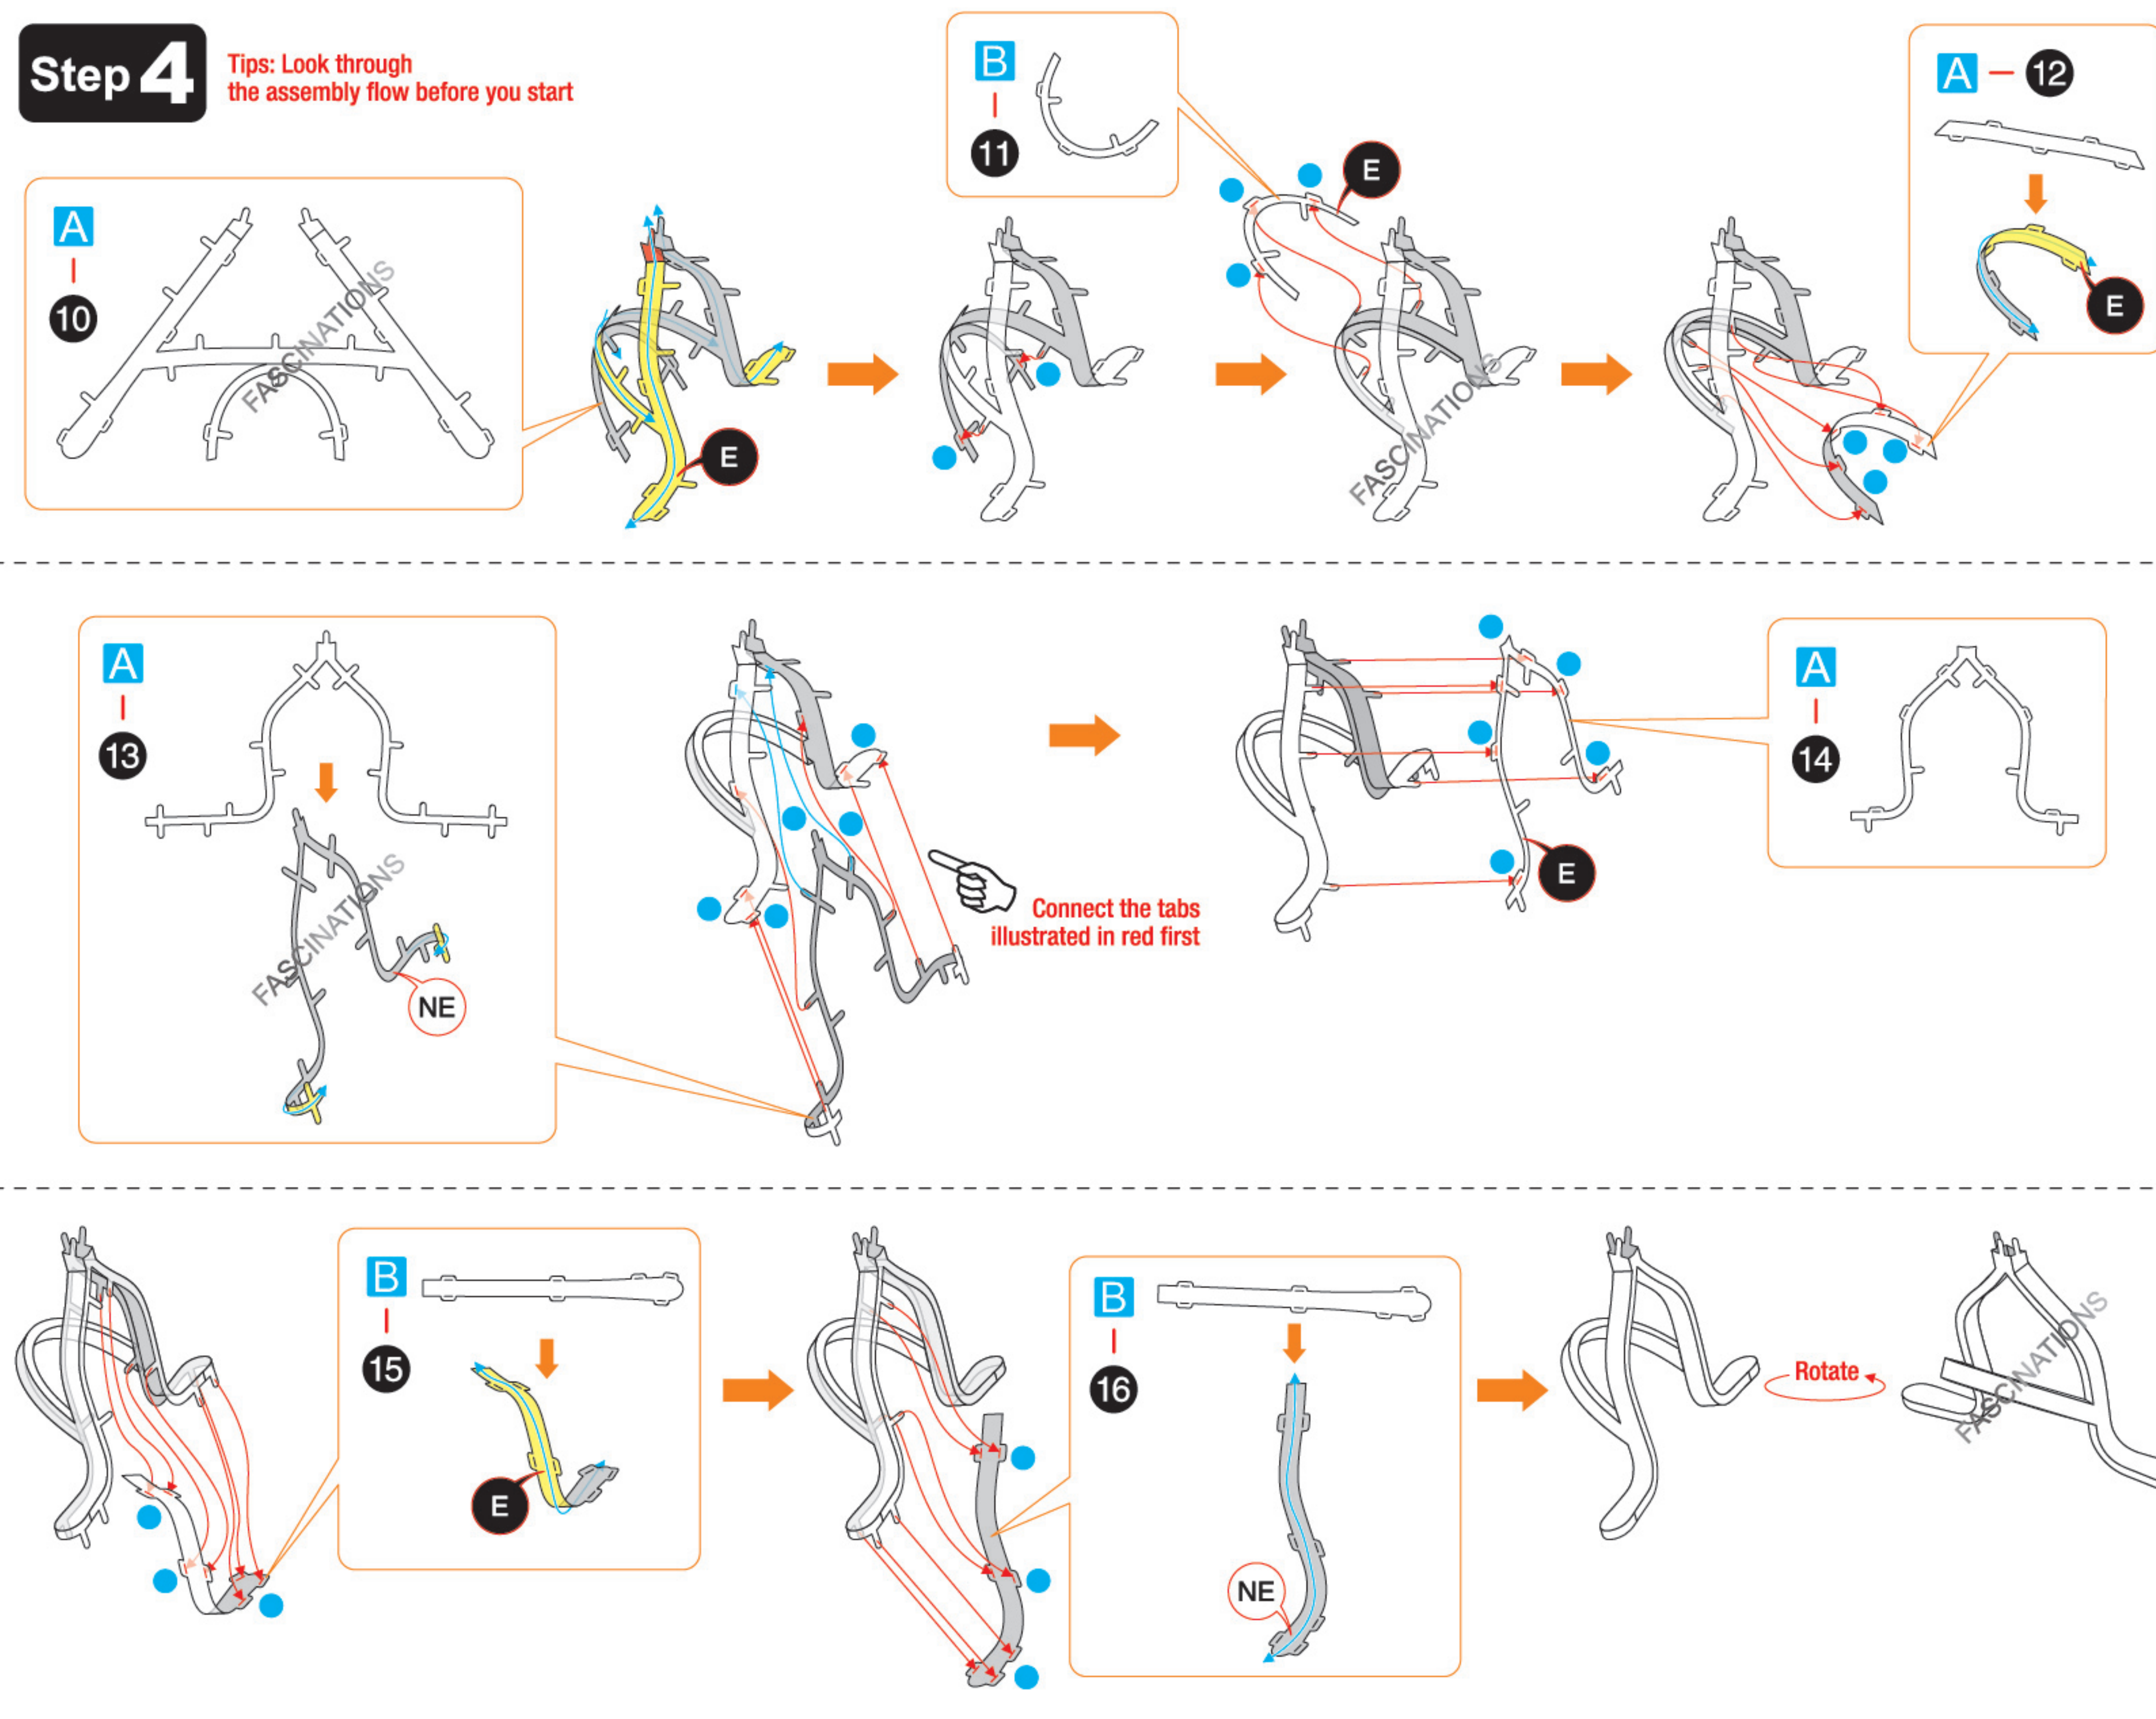


## Step 5

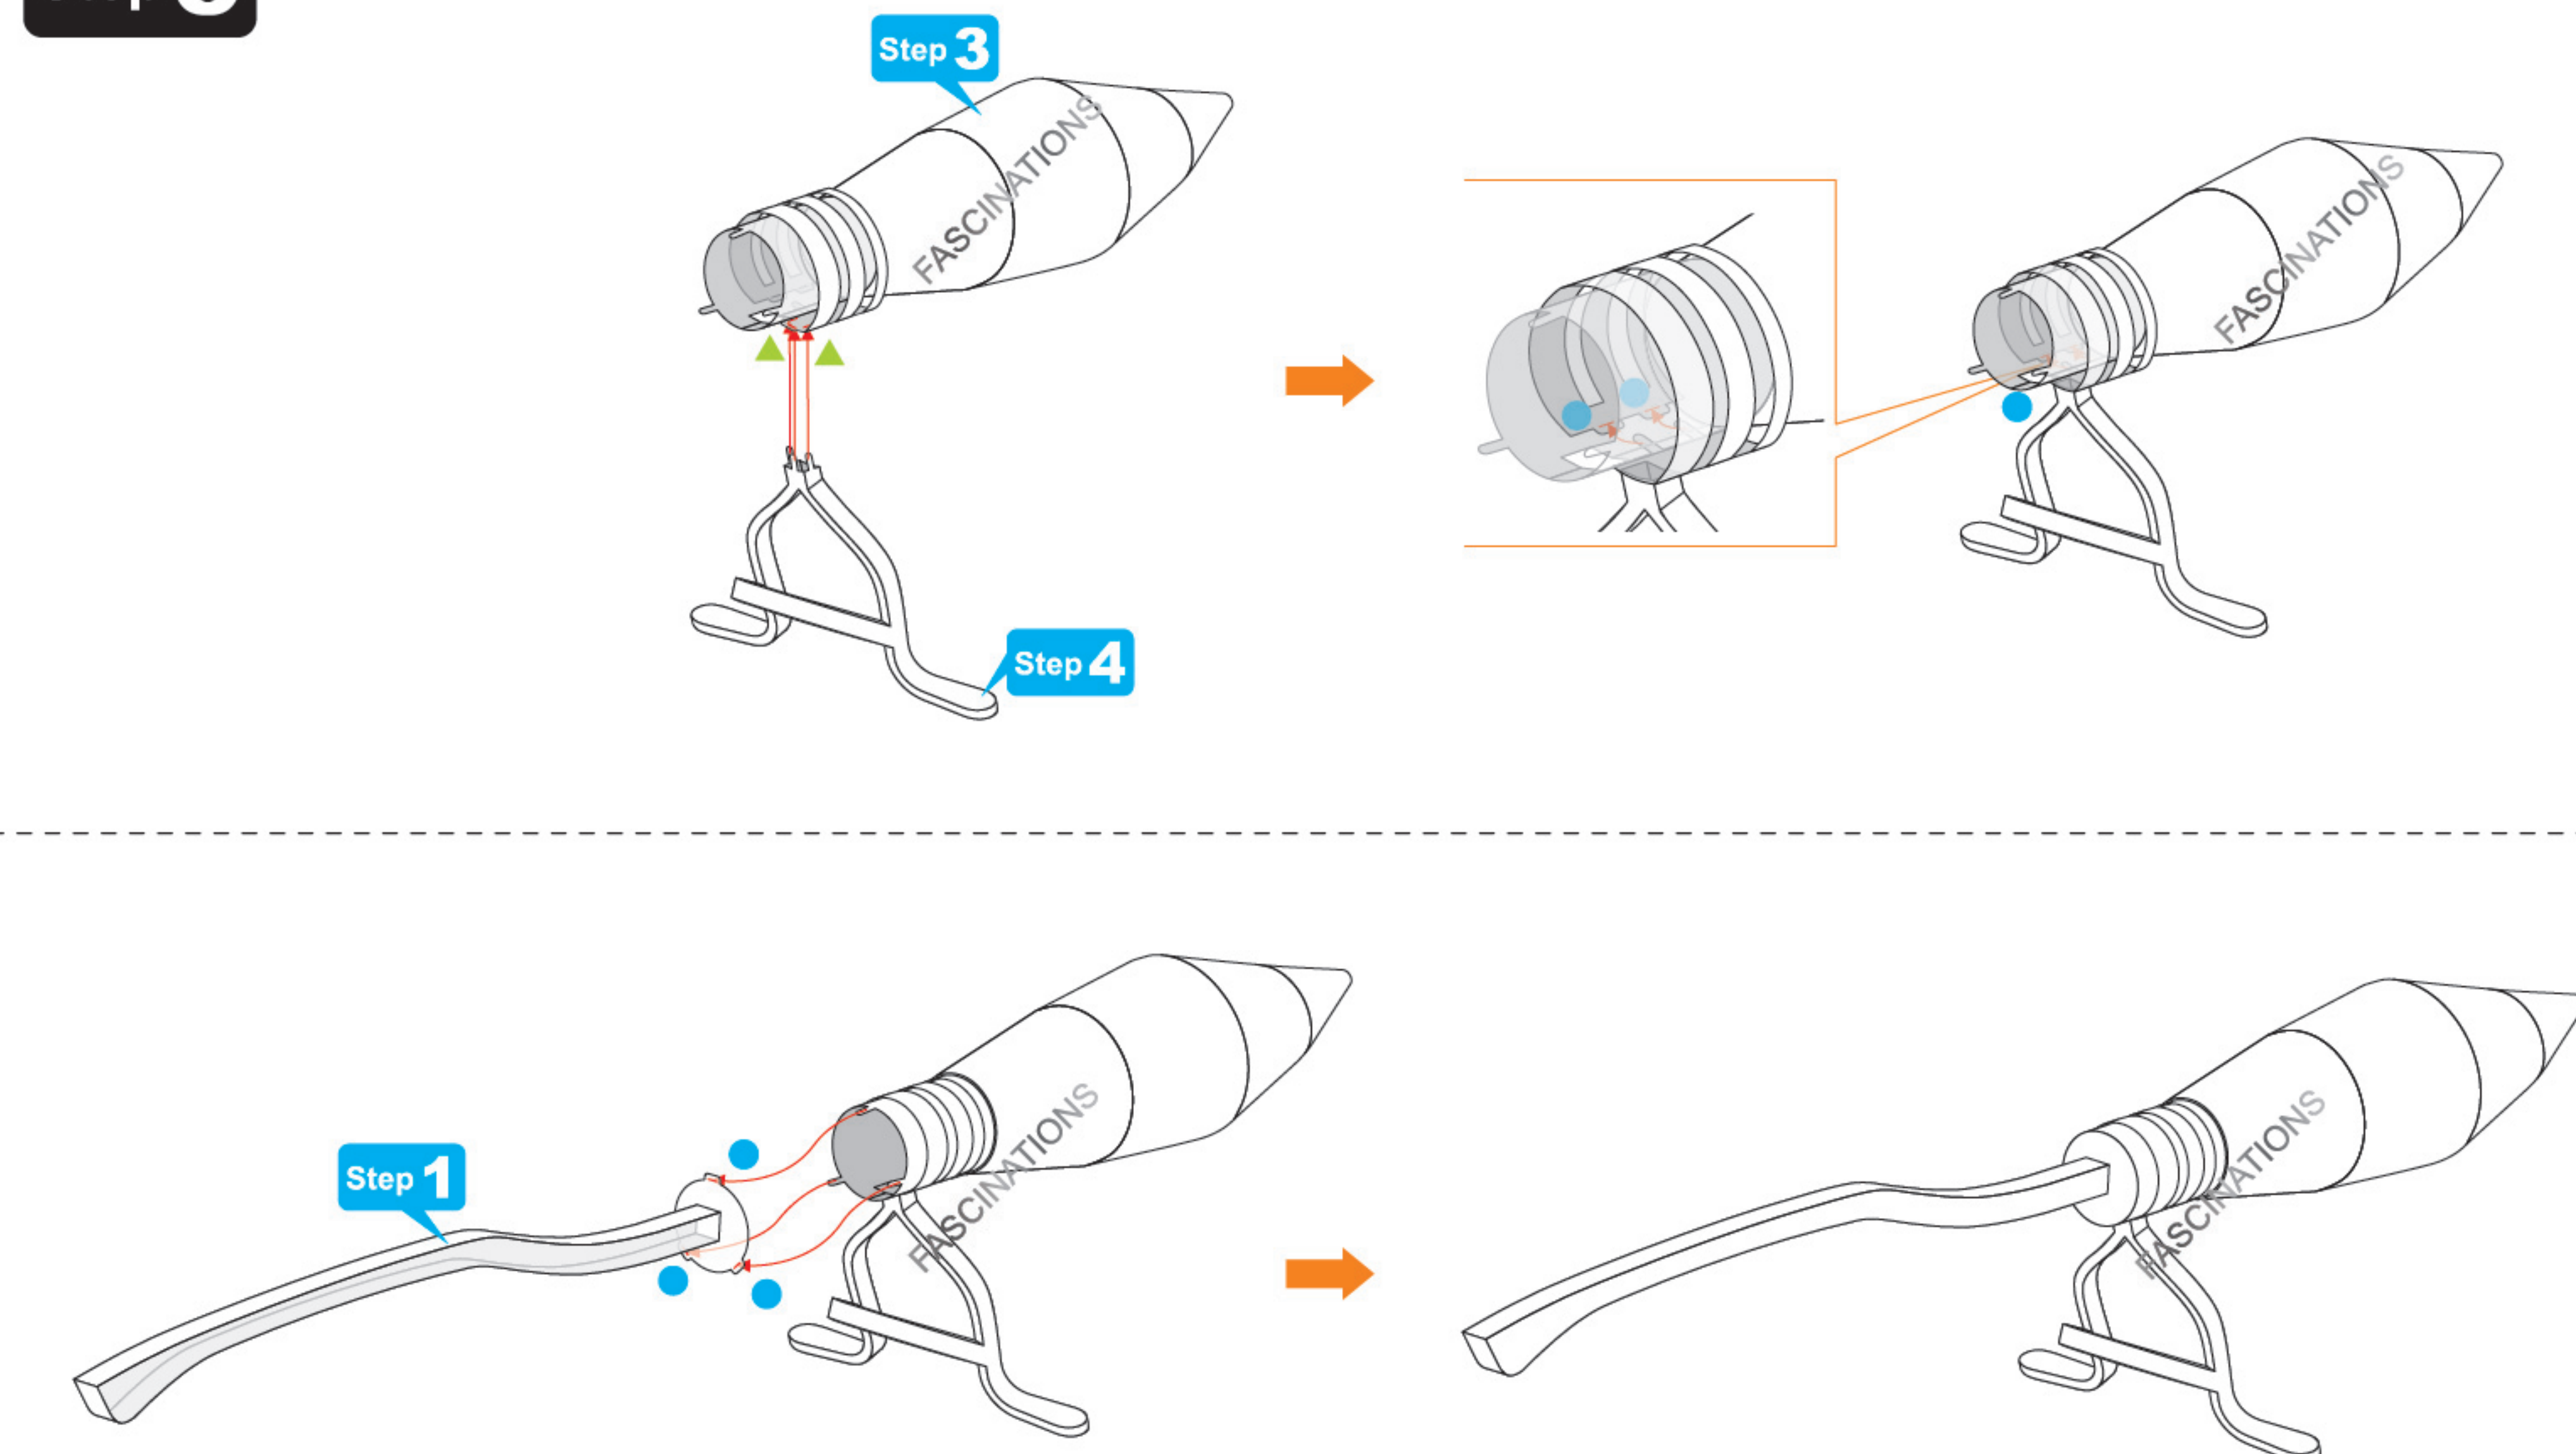


## Step 6

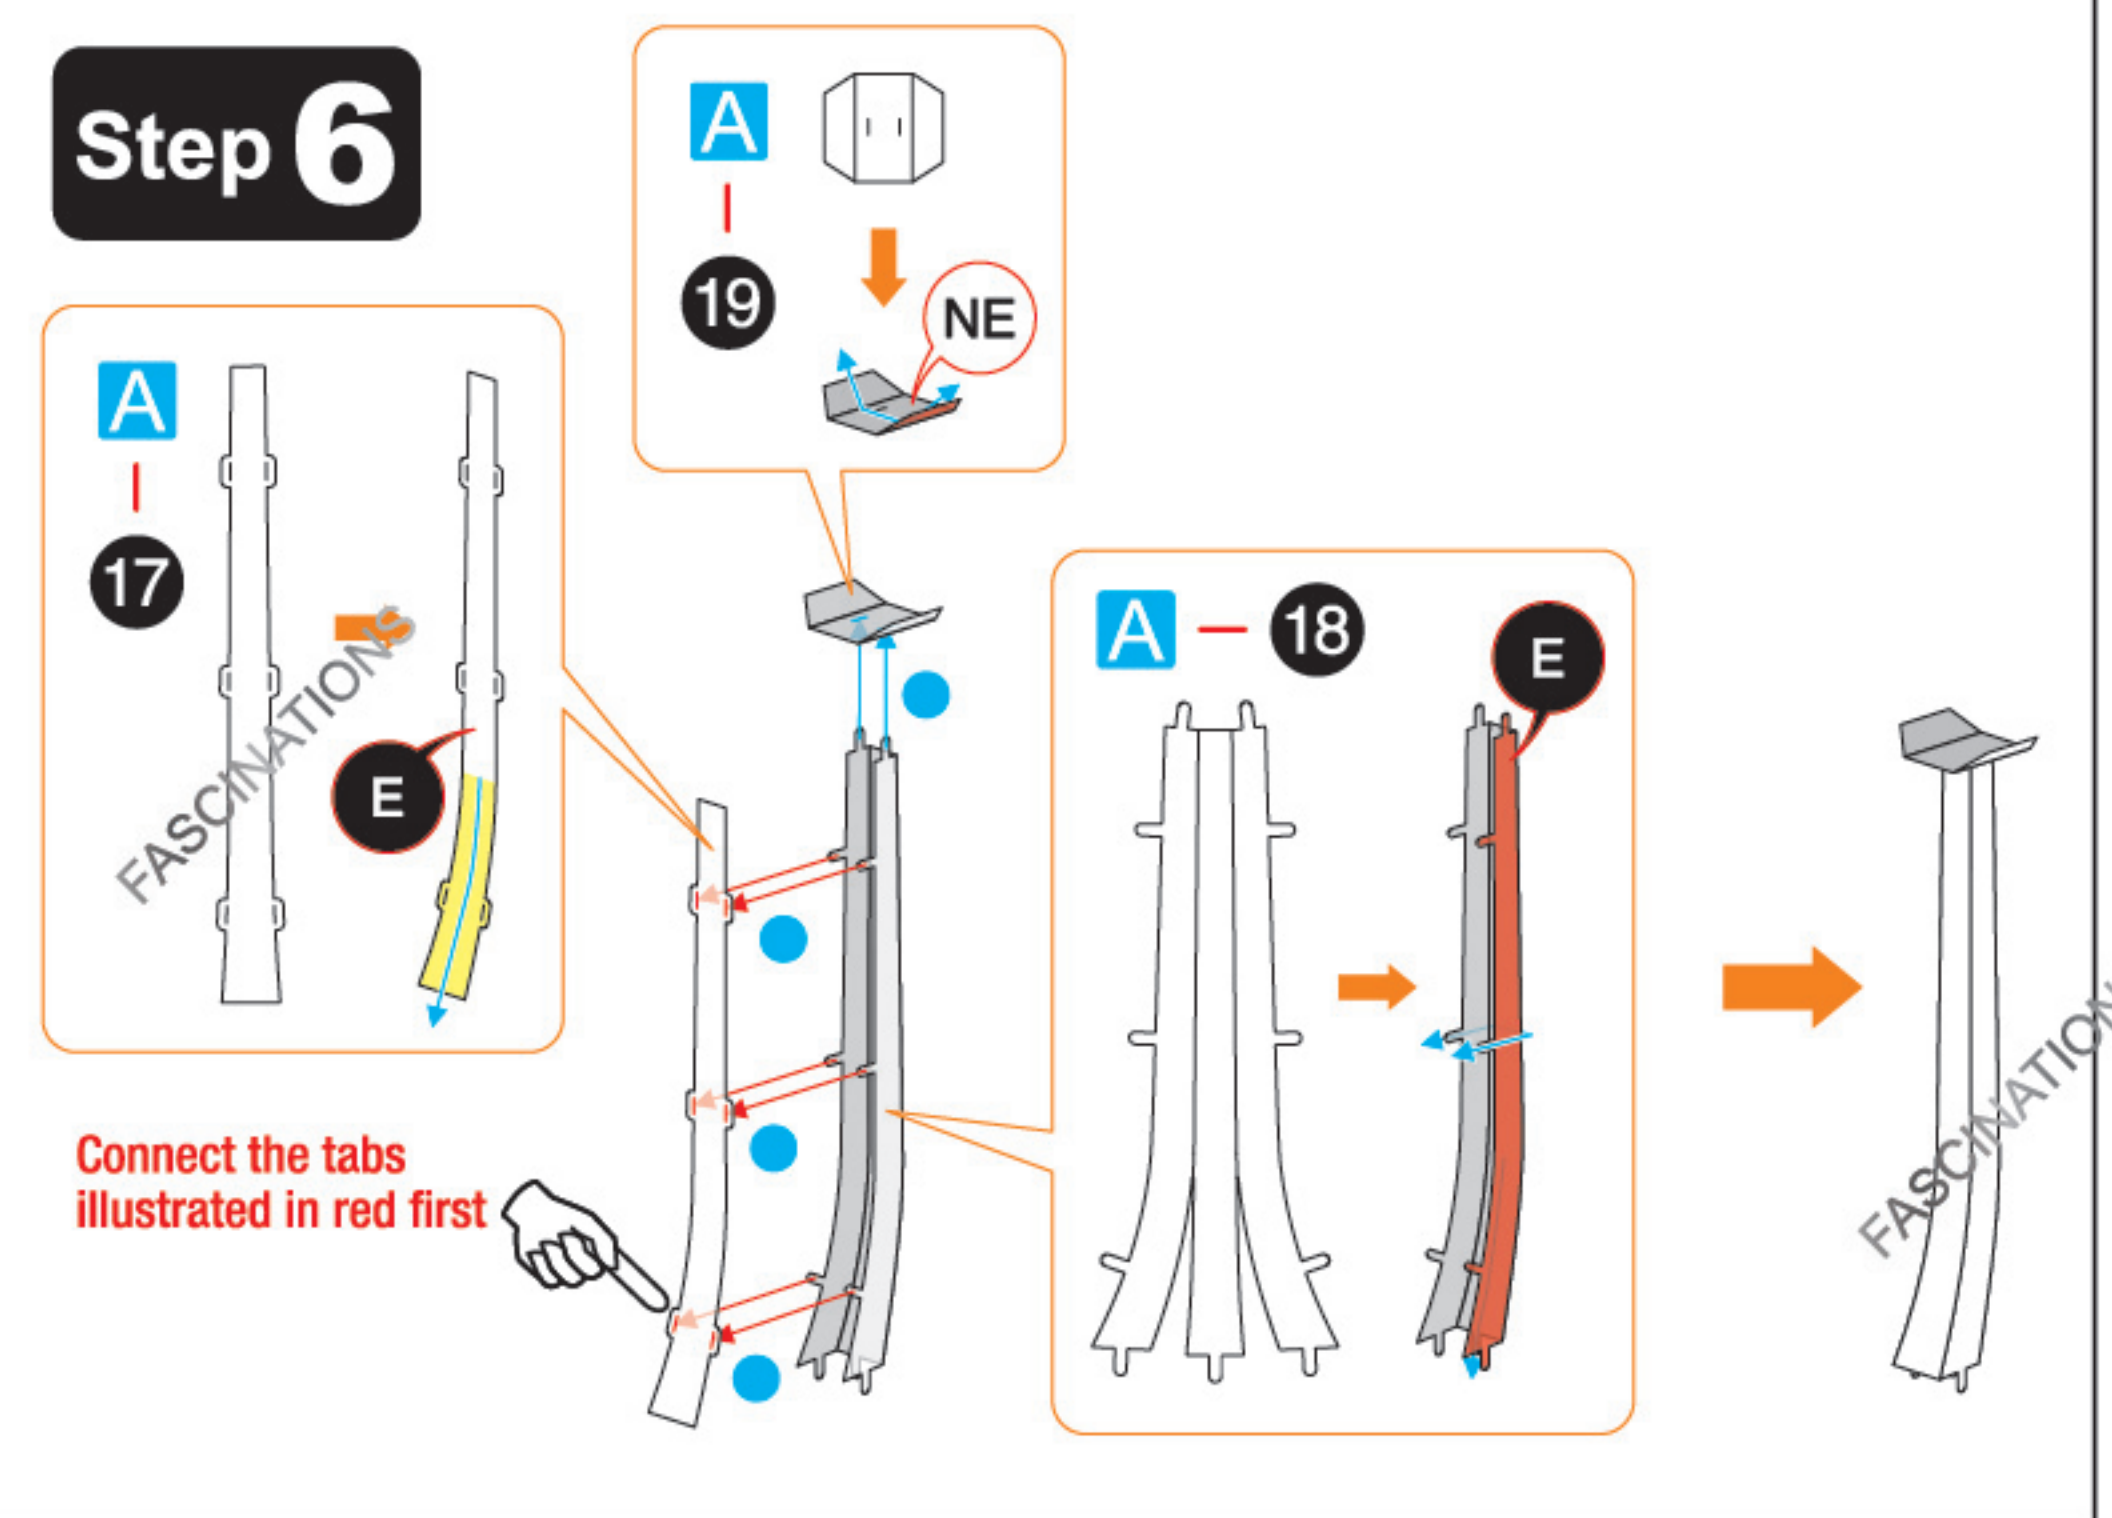

## Step 7

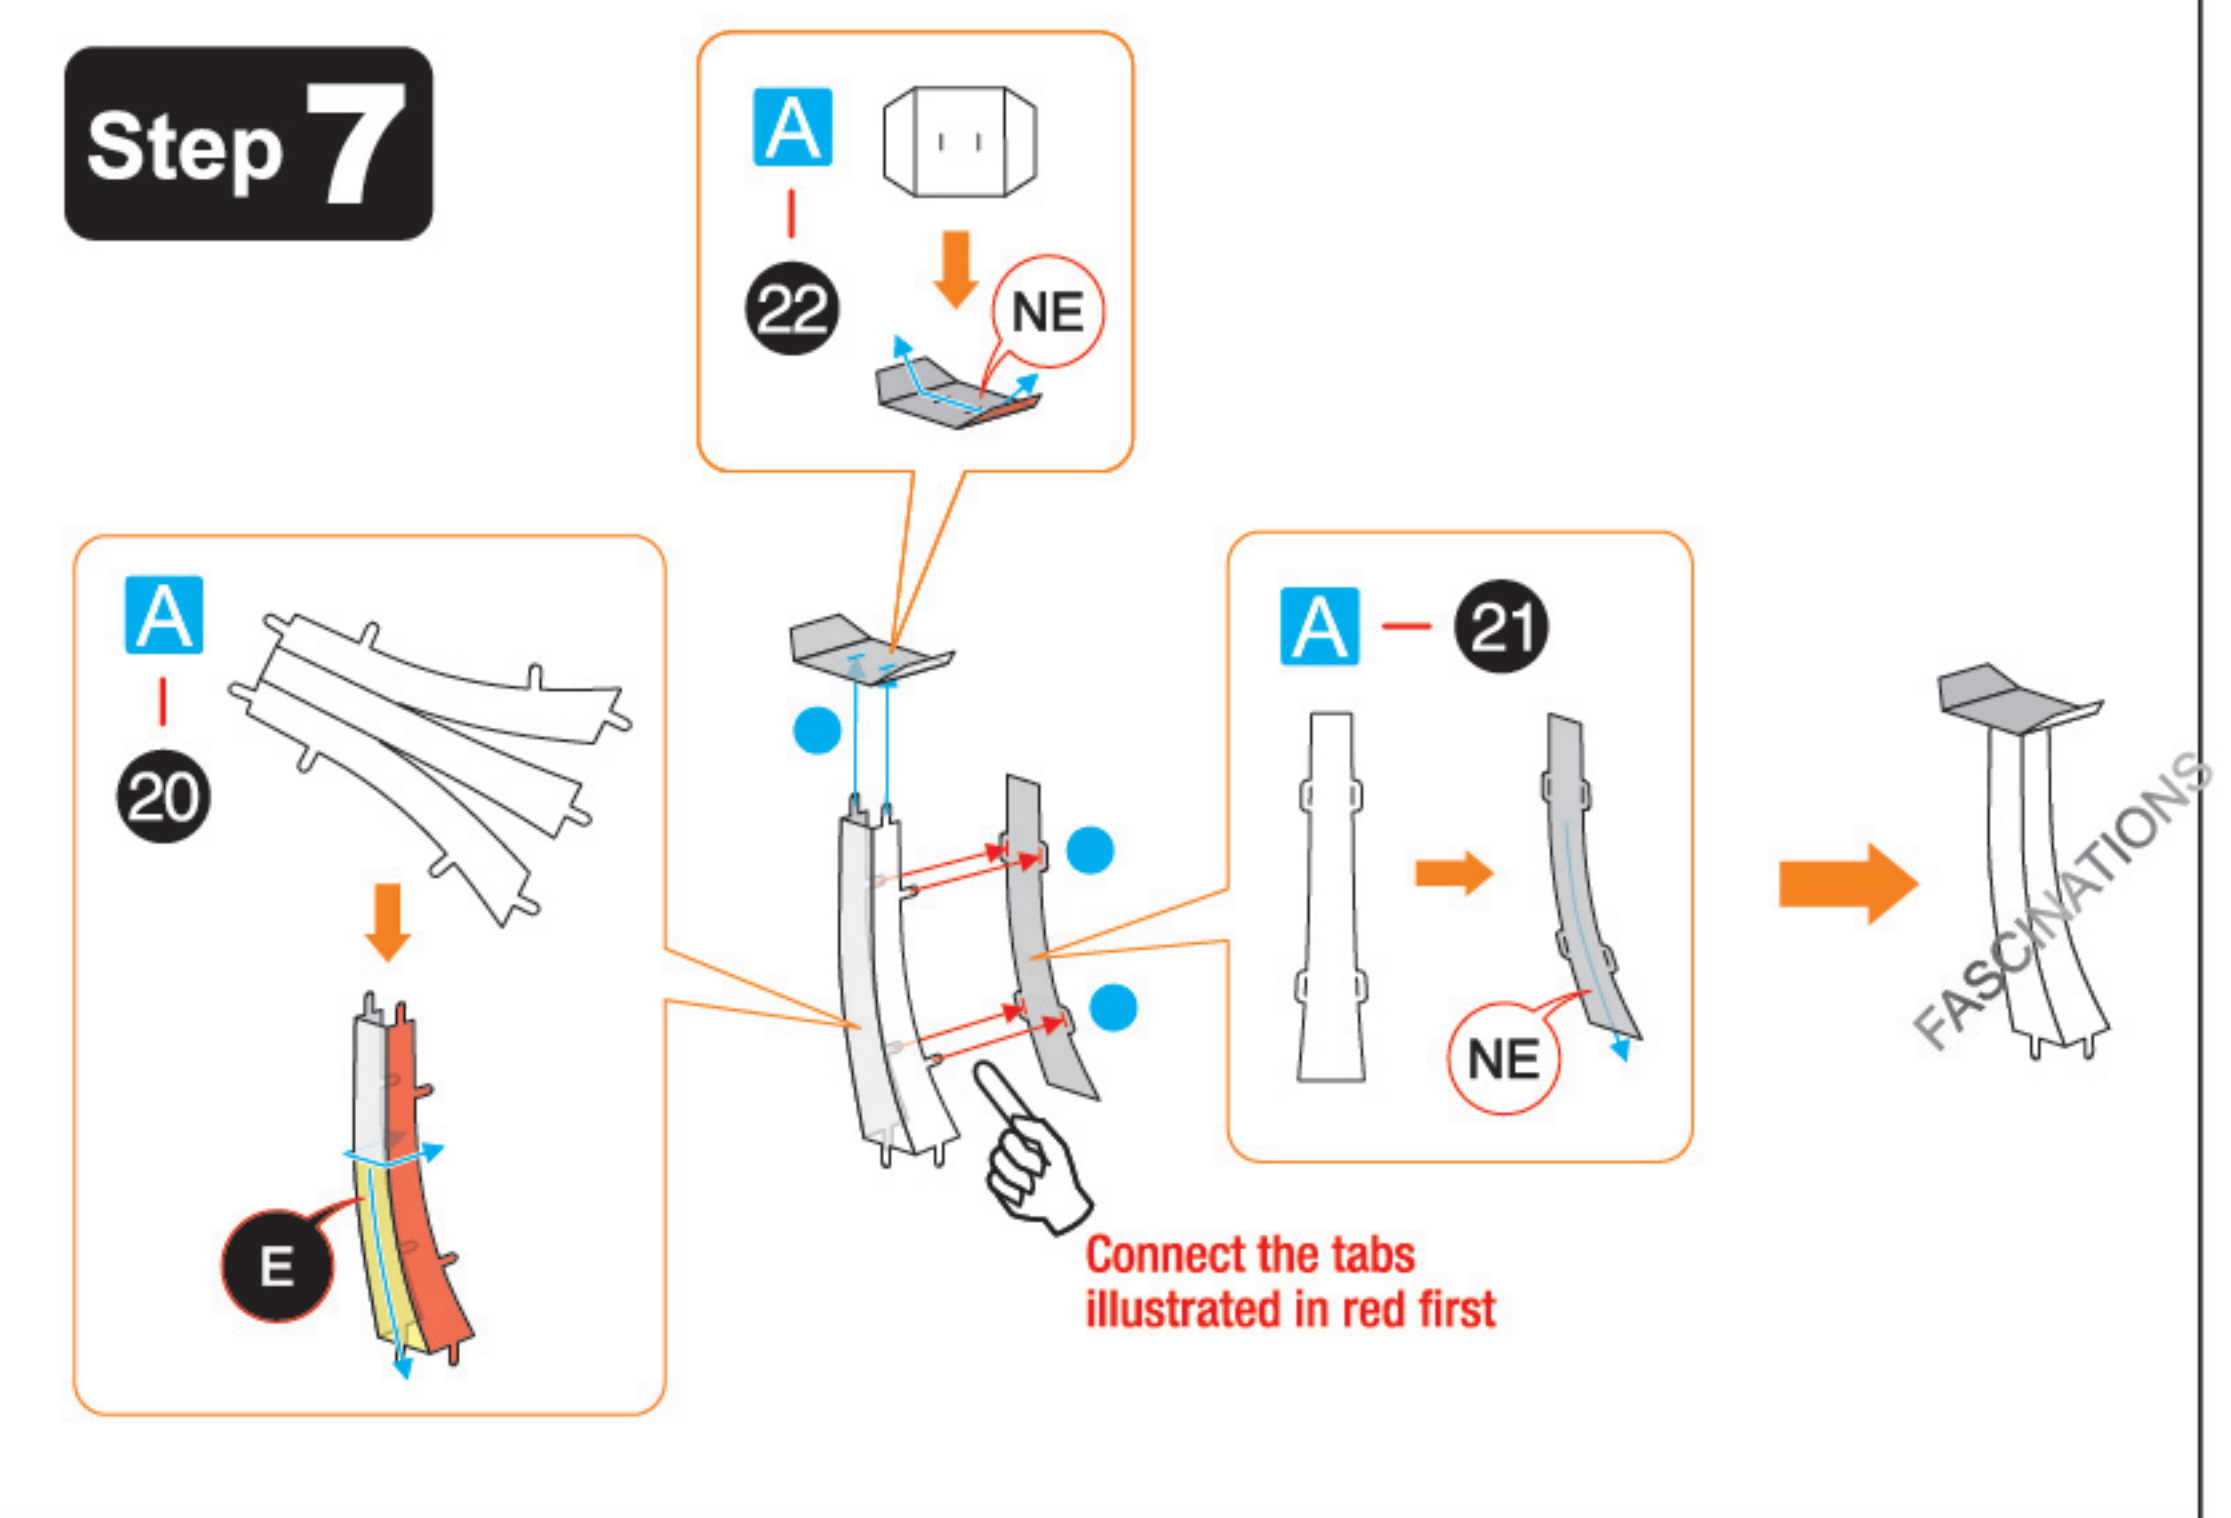

## Step 8

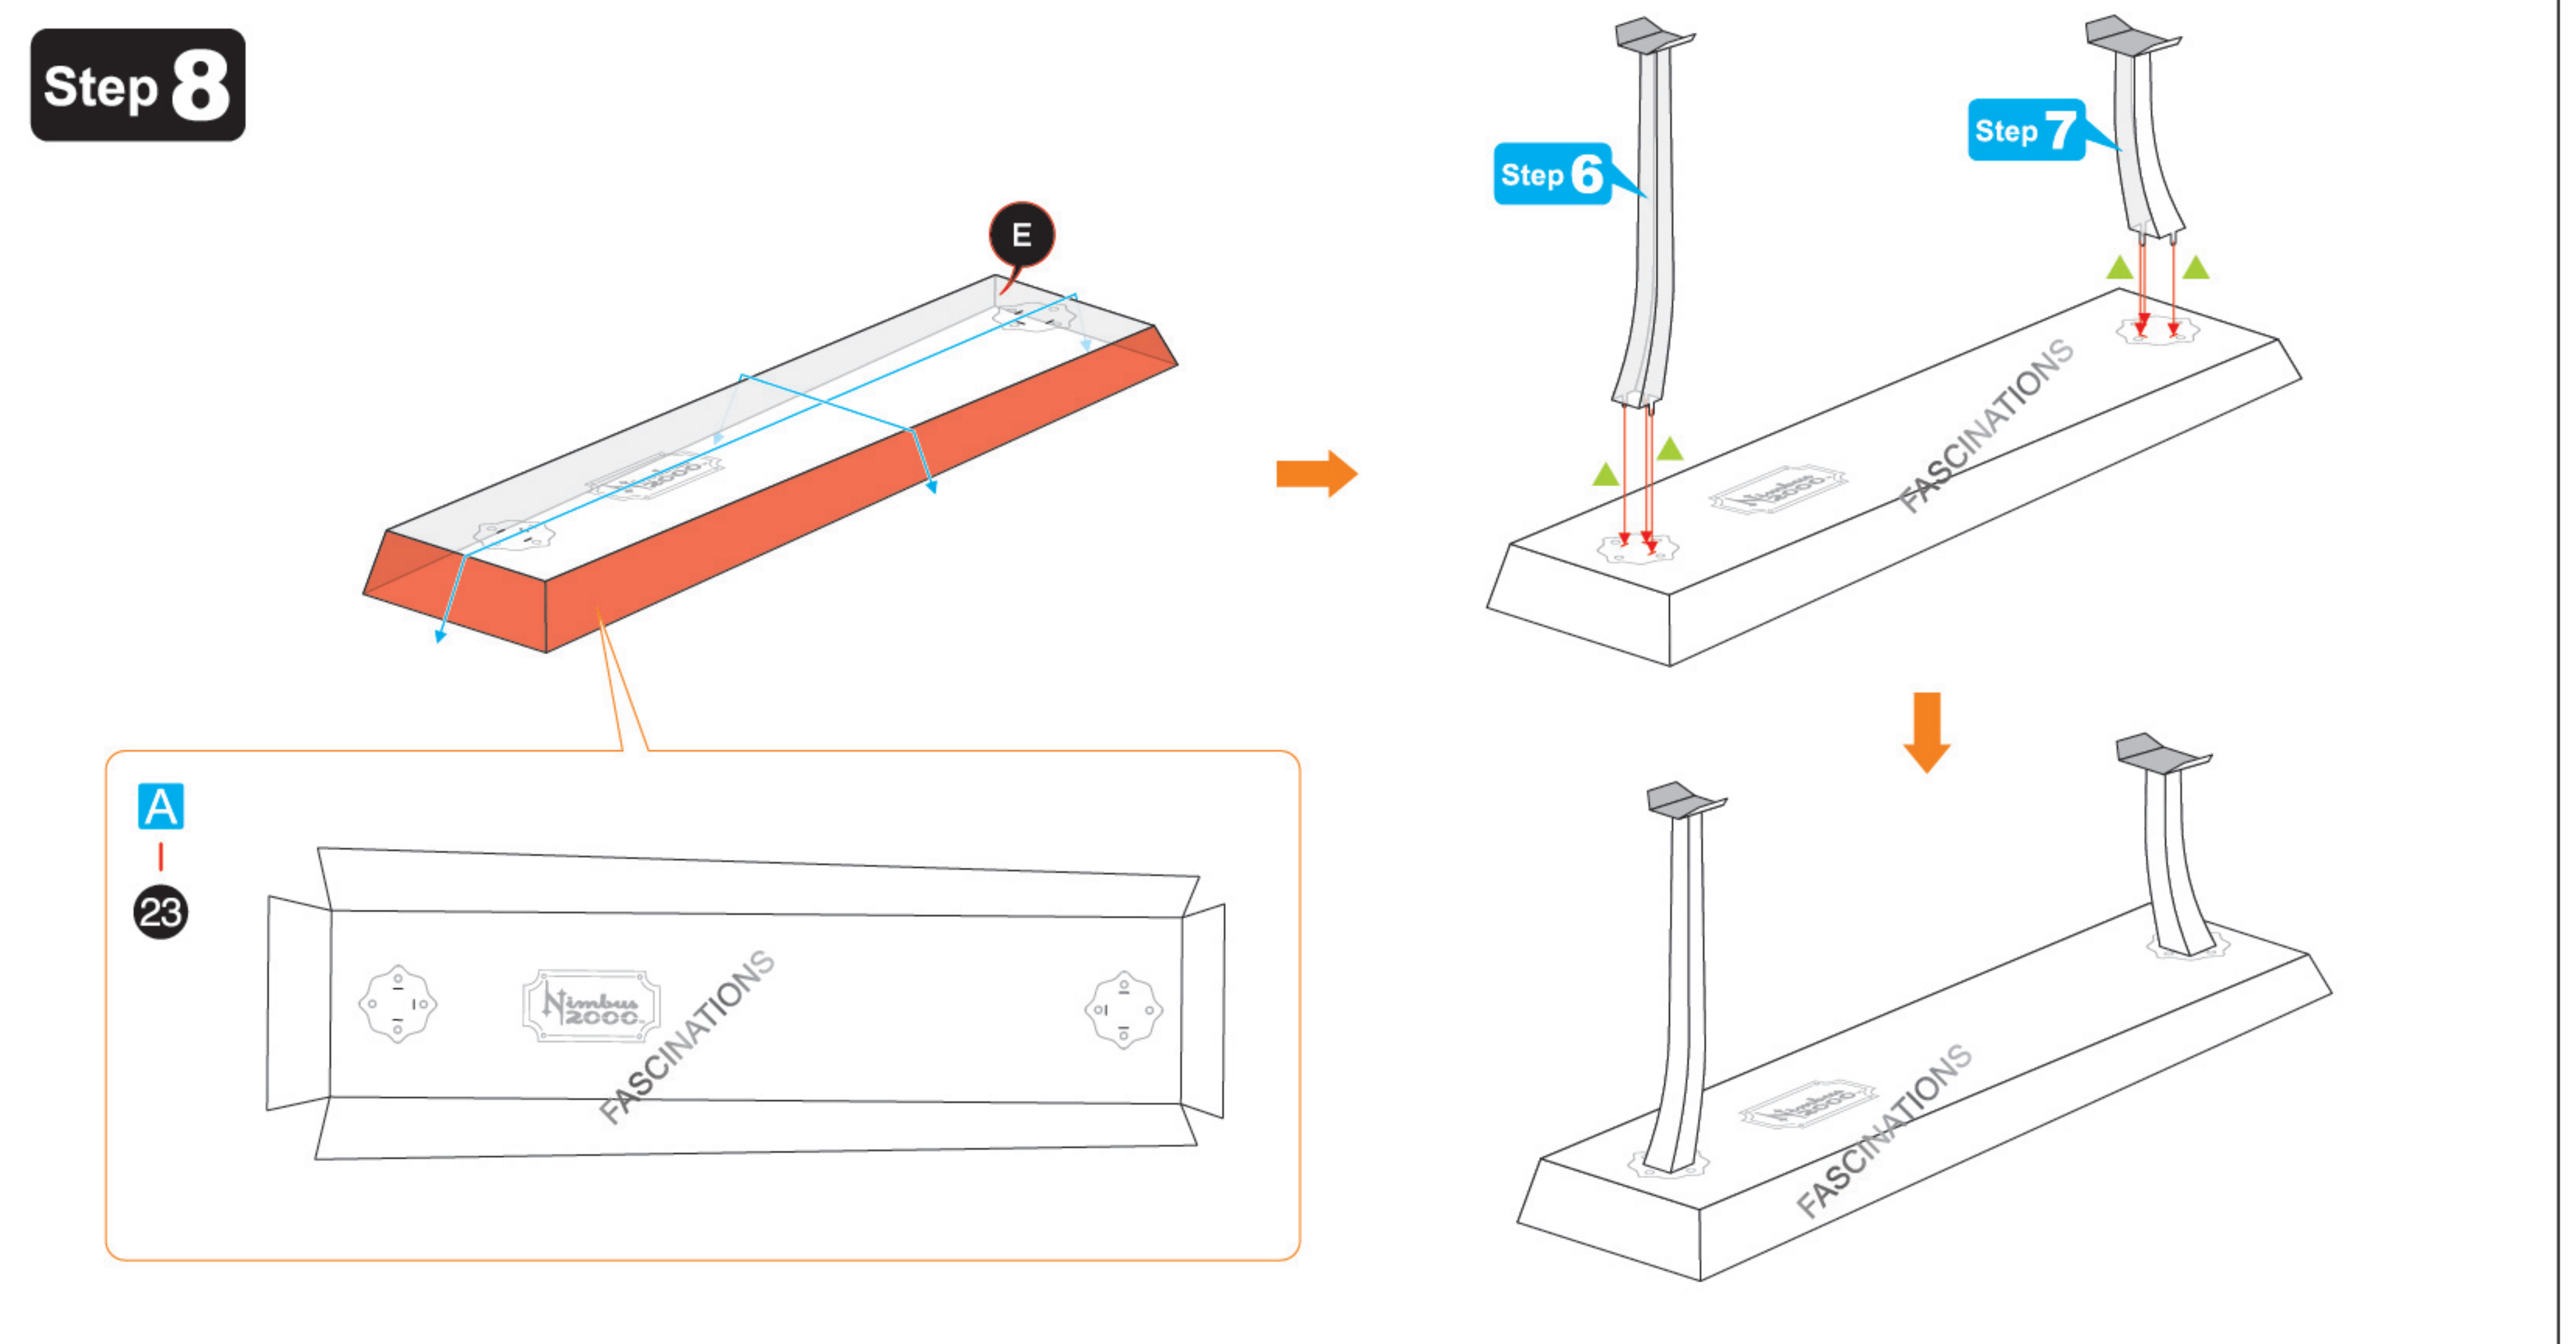

## Step 9

