

OFFICIAL
LICENSED PRODUCT

1970 CHEVY CHEVELLE ME1026







360°
view

It is highly recommended that you visit
www.metalearth.com/360/ME1026
to see the completed model before assembling your own

METAL SHEETS

Parts with same color are duplicates

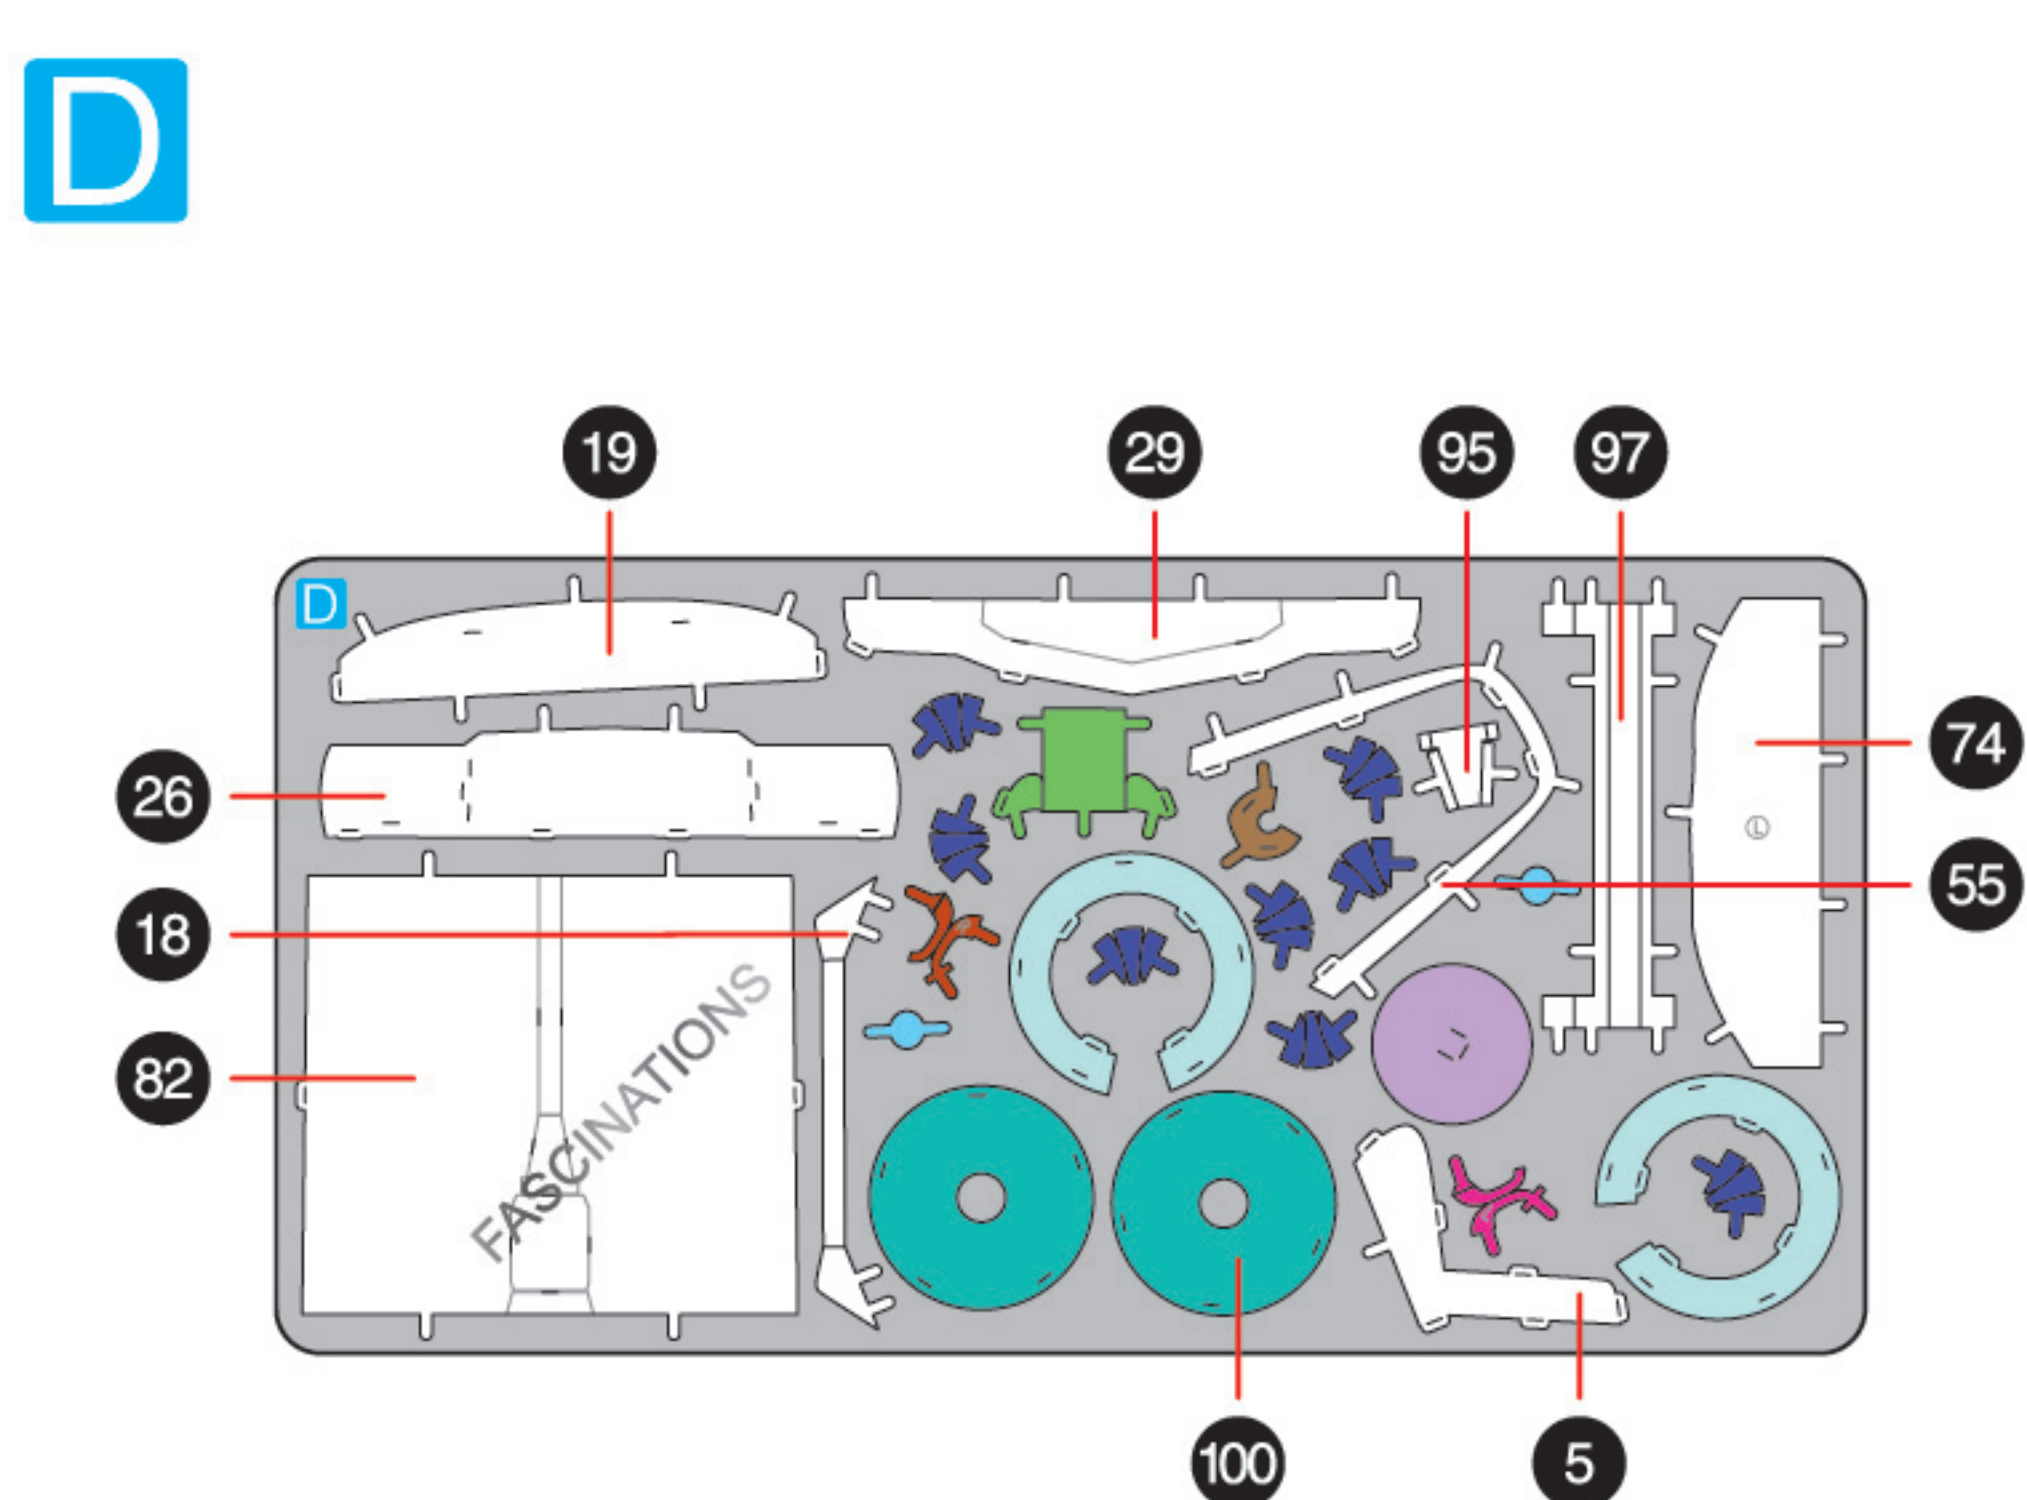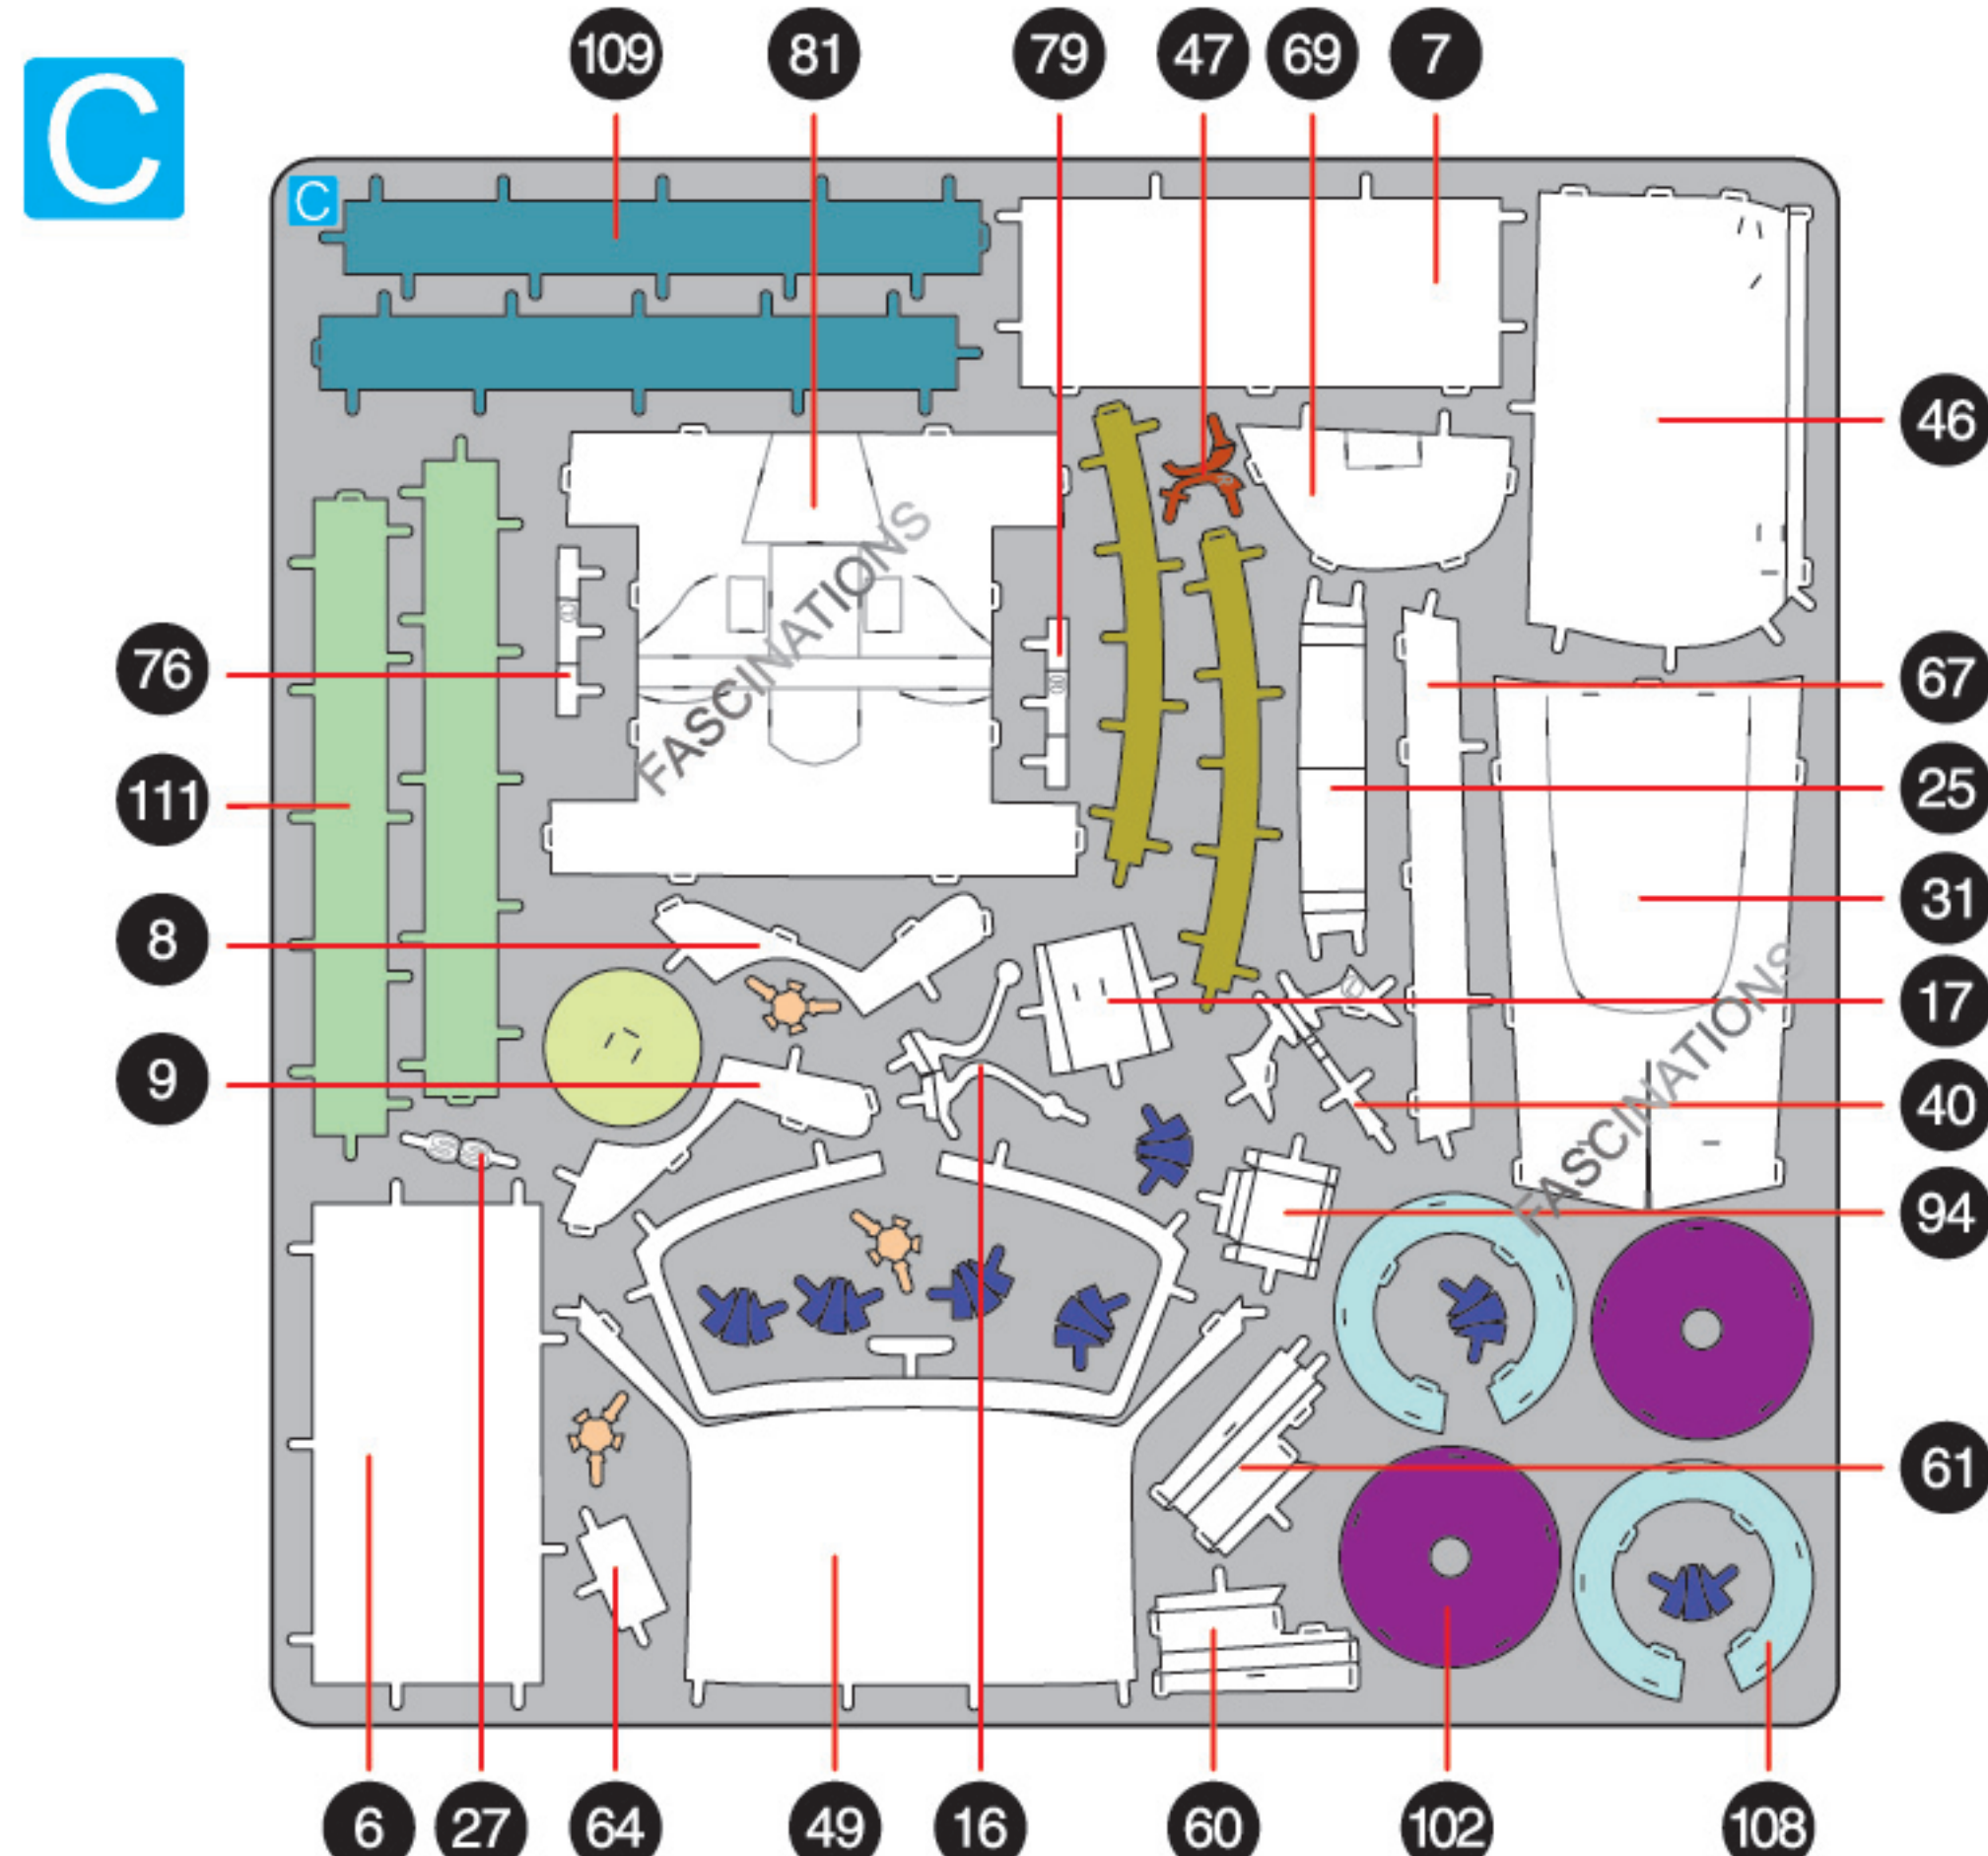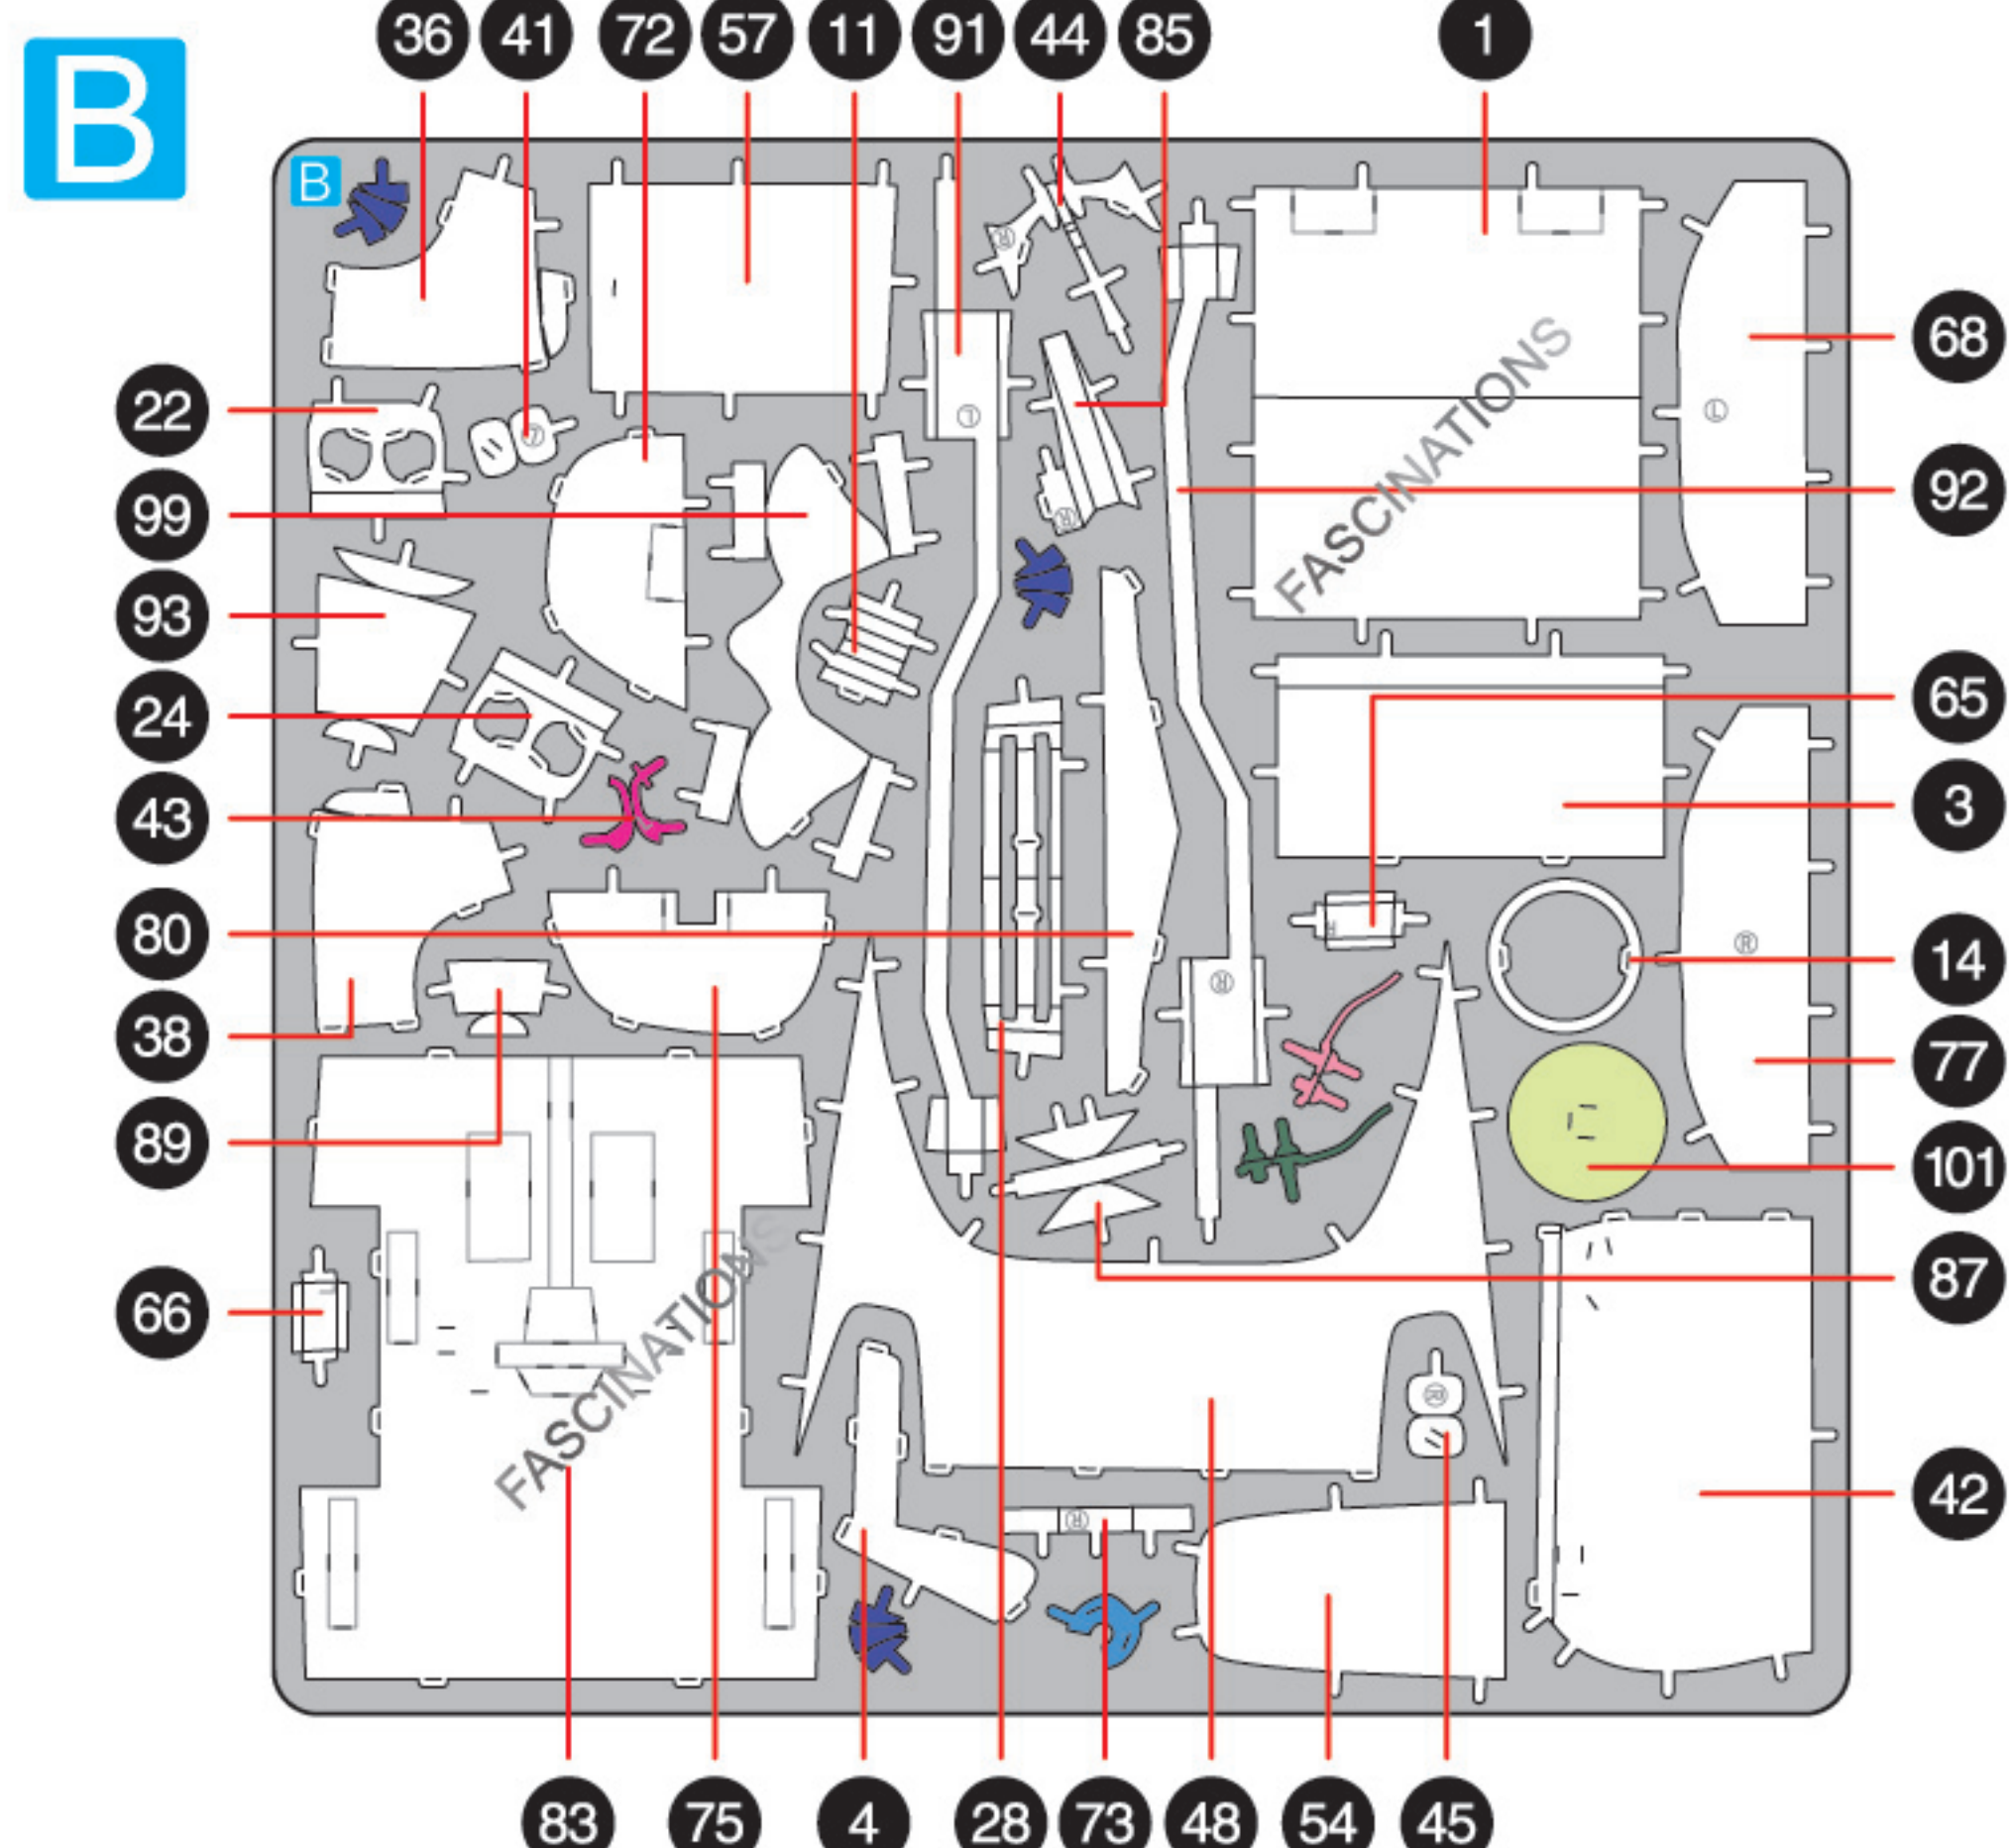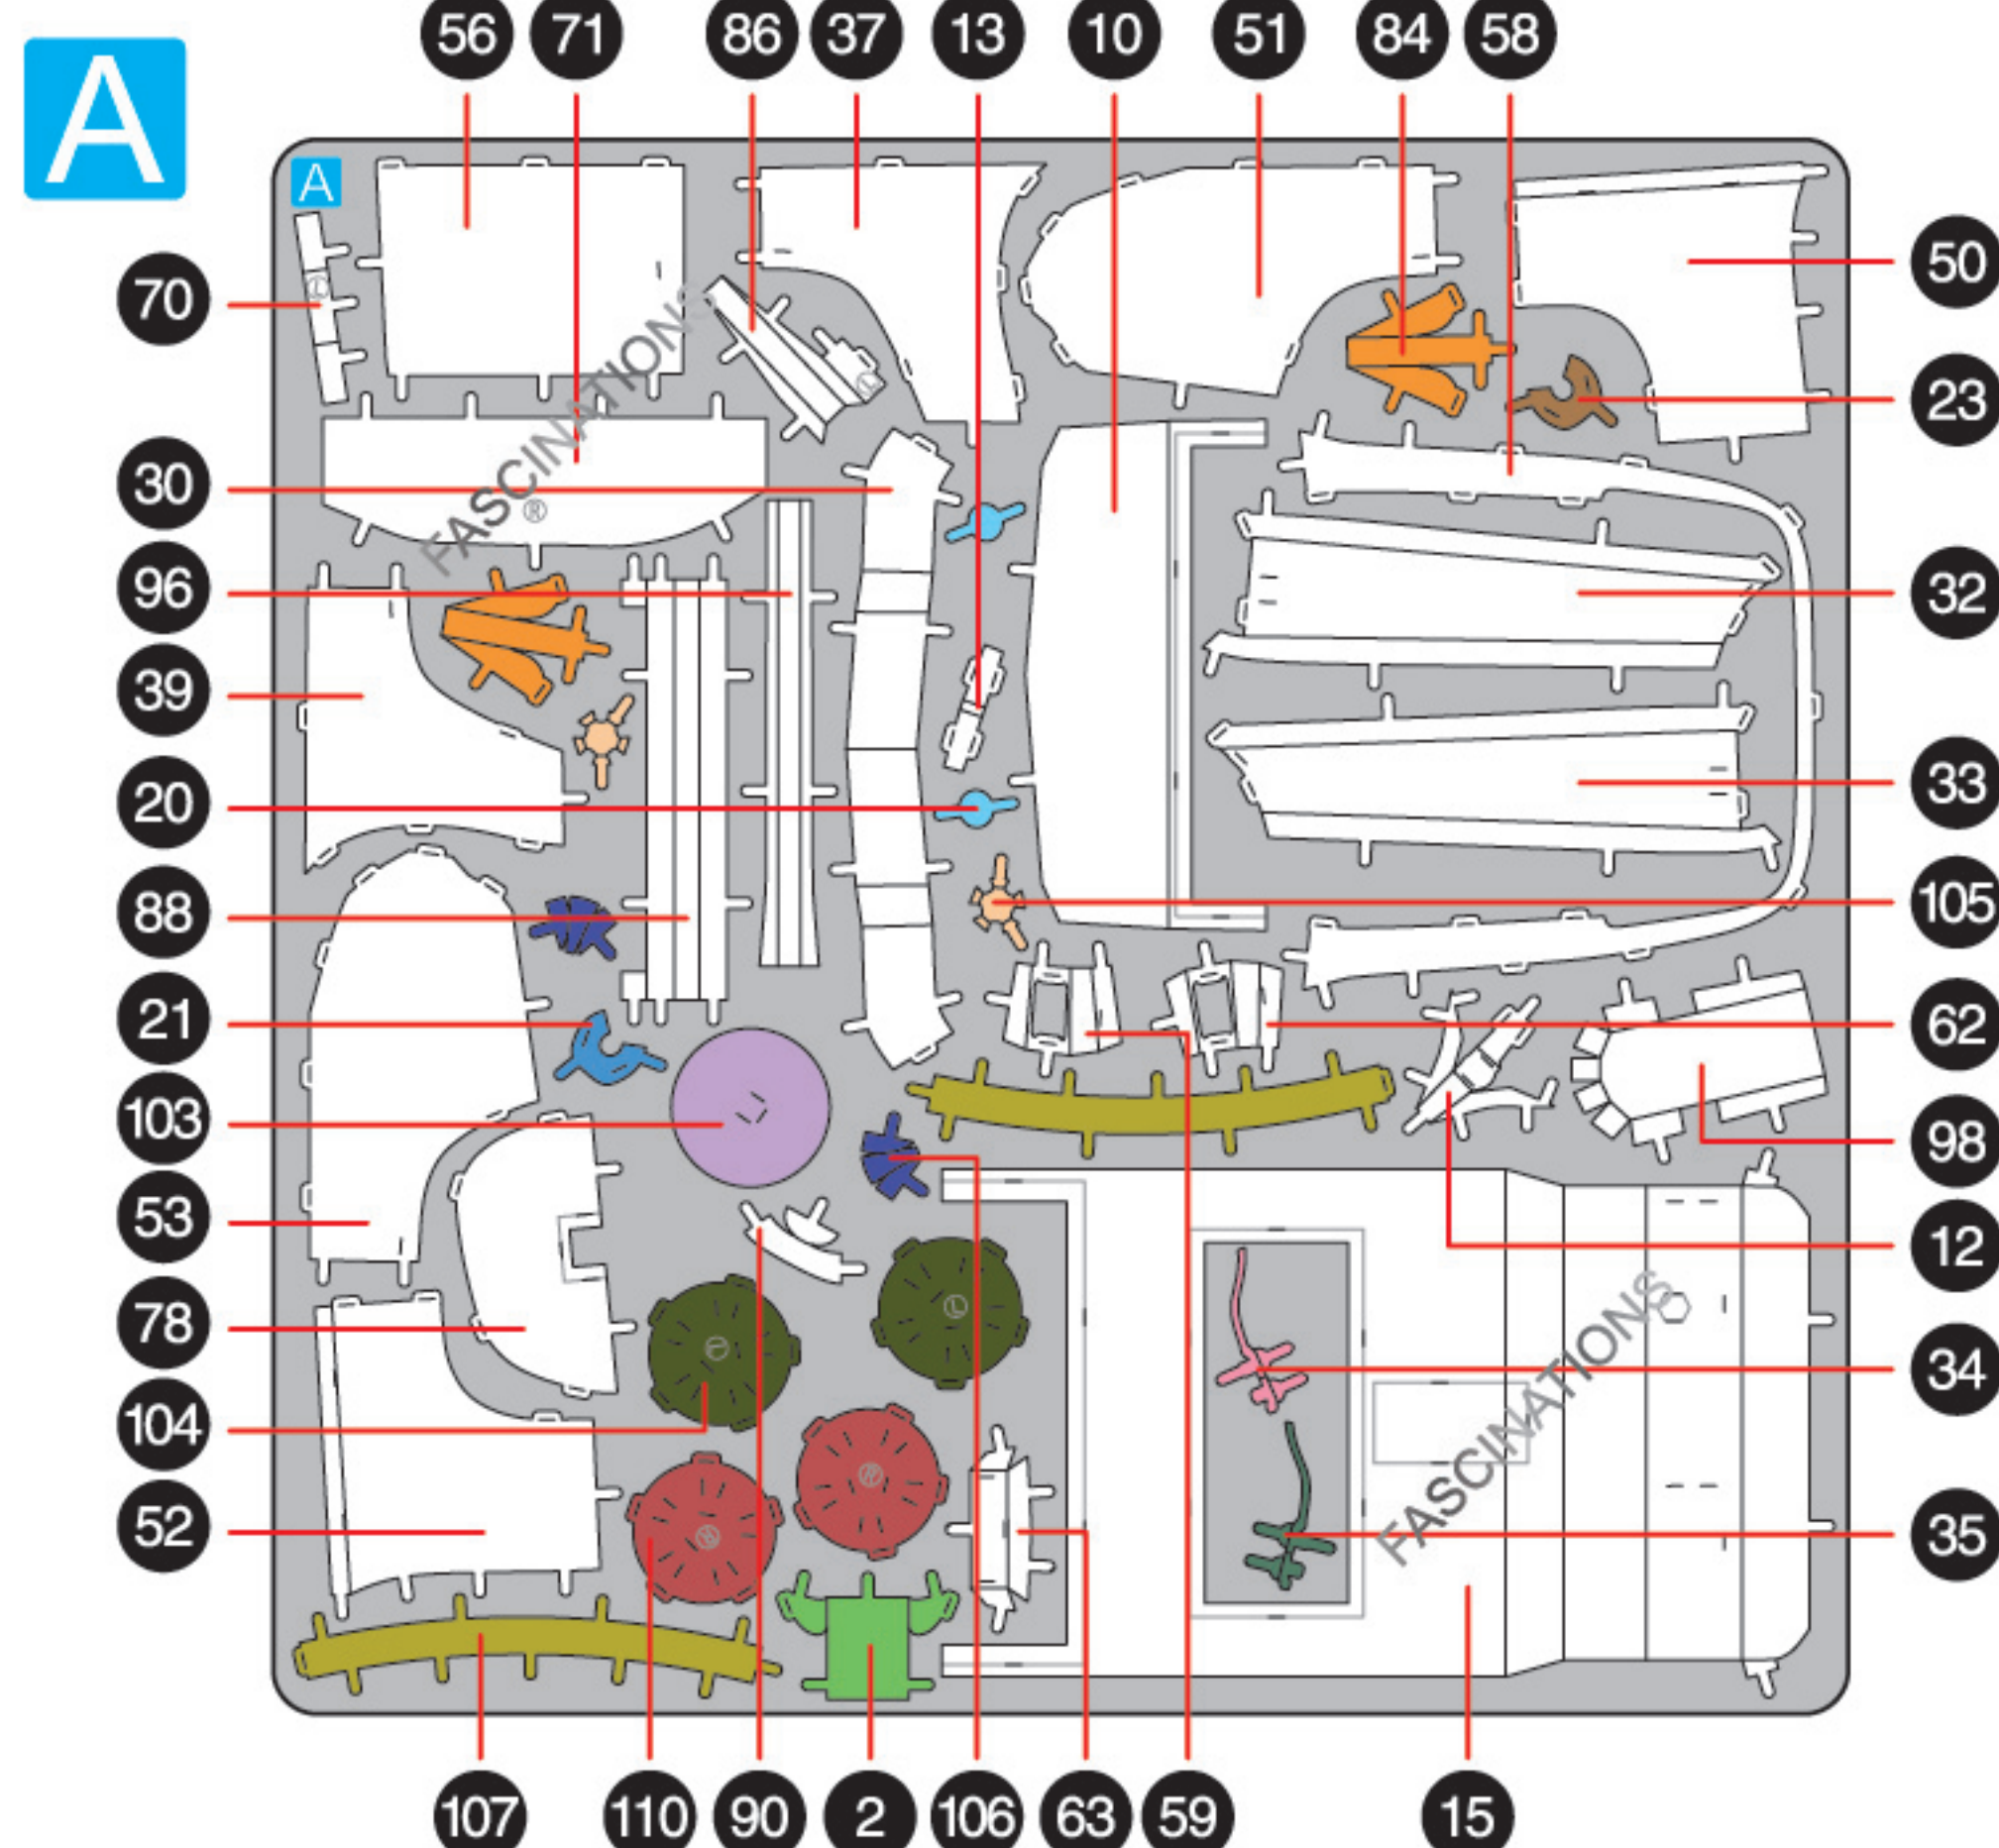


In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed.



Go to www.metalearth.com/360/ME1026 to see the zoomable PDF version of this instruction sheet

TO CREATE THE BEST CONNECTIONS

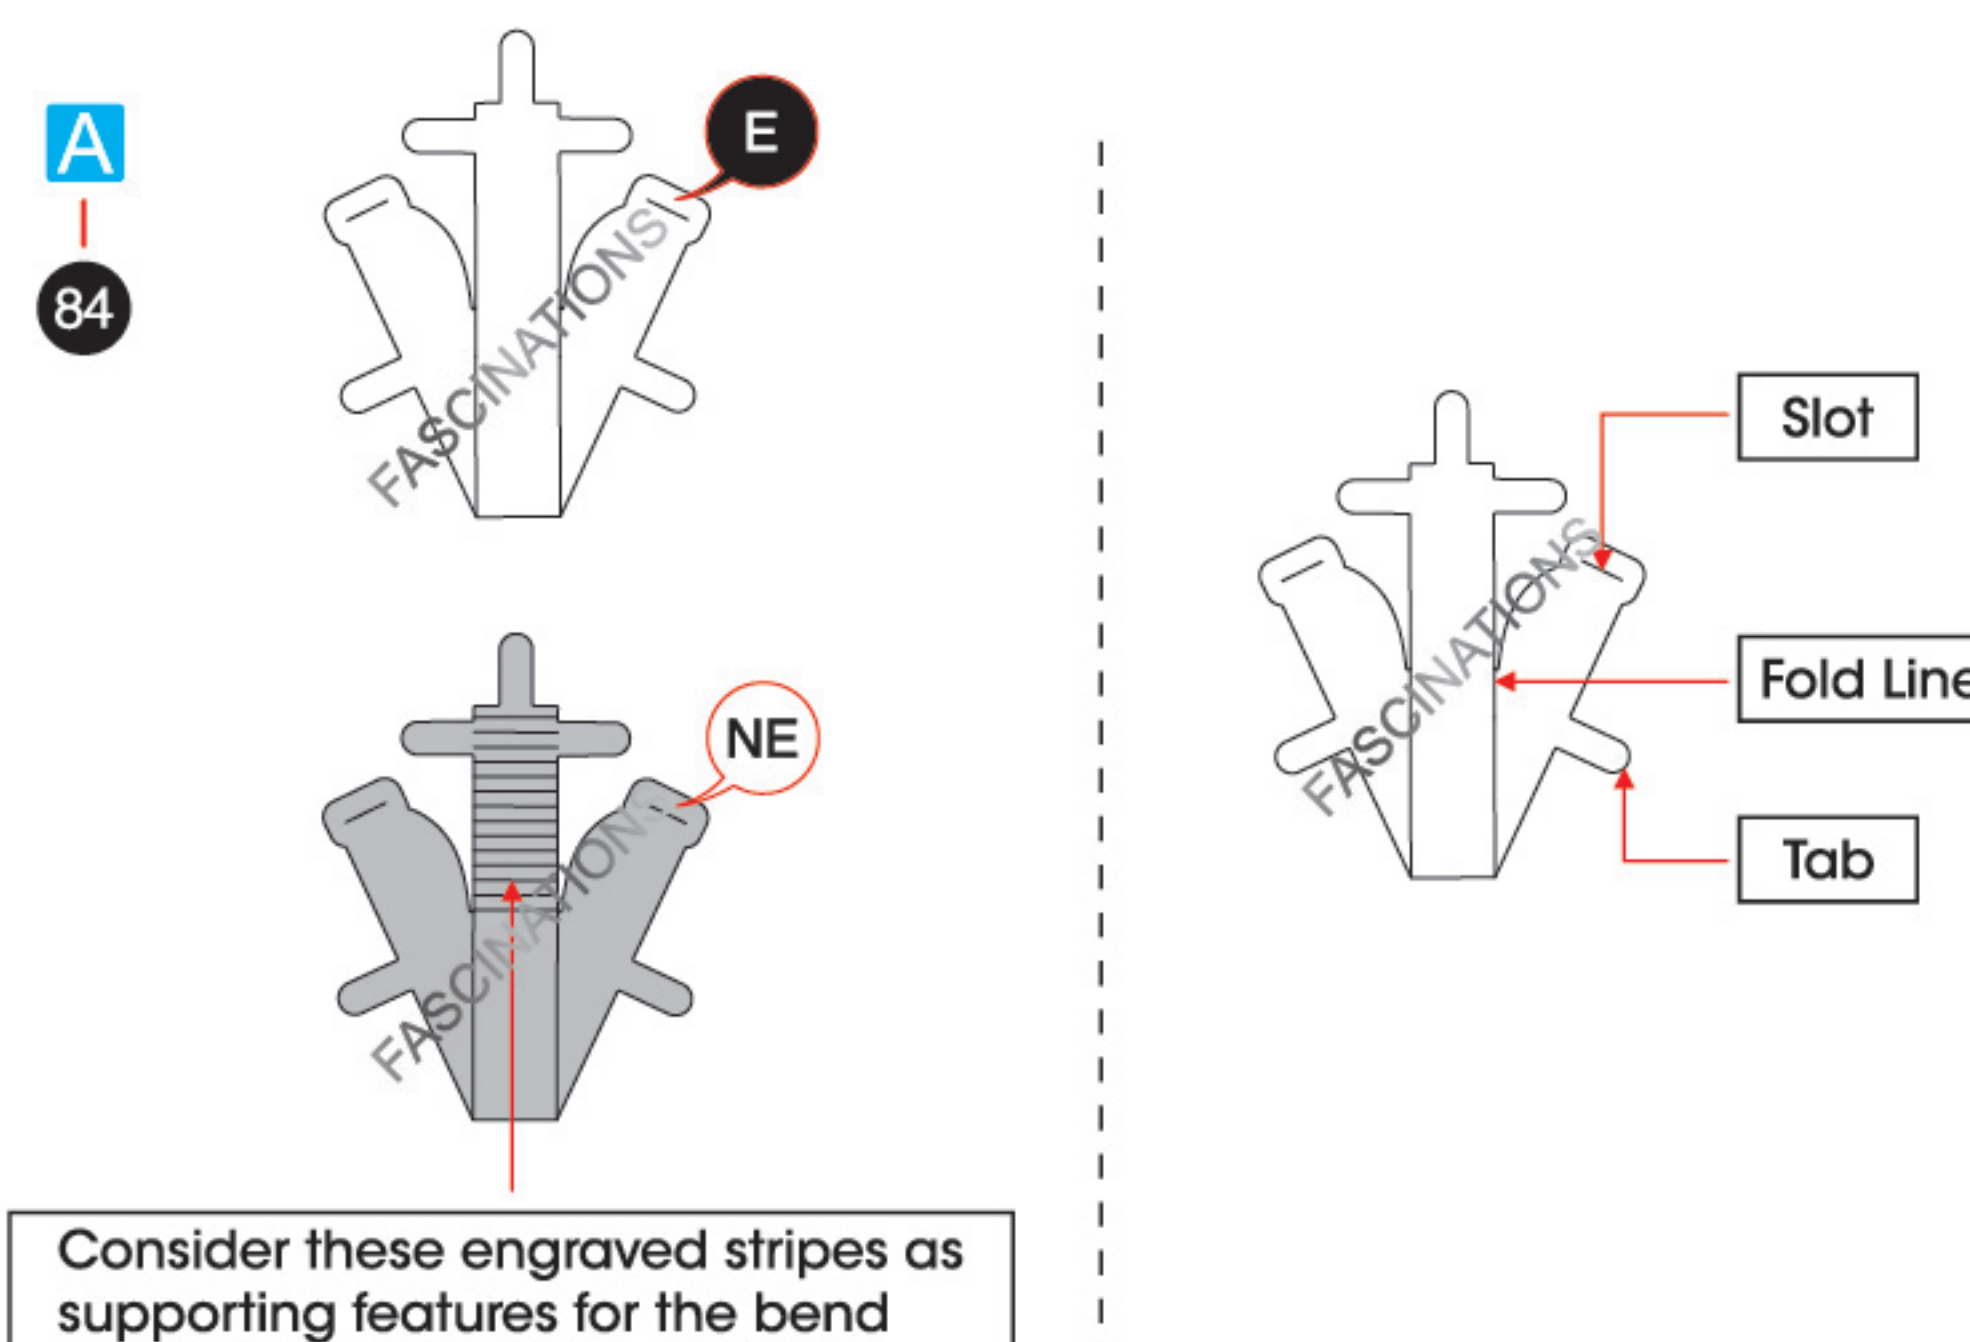

Legends:

- E** Engraved/ Color side
- NE** Non - engraved/ Silver side
- Attention point
- Insert tab and bend 90 degrees
- Insert tab and twist 90 degrees

Recommended tools:

- Wire cutters: helpful for taking parts from the metal sheets.

- Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.


Assembly tip:

If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish.


- Yellow areas should be curled
- Red areas should be folded










ASSEMBLY FLOW CHART

Step 1


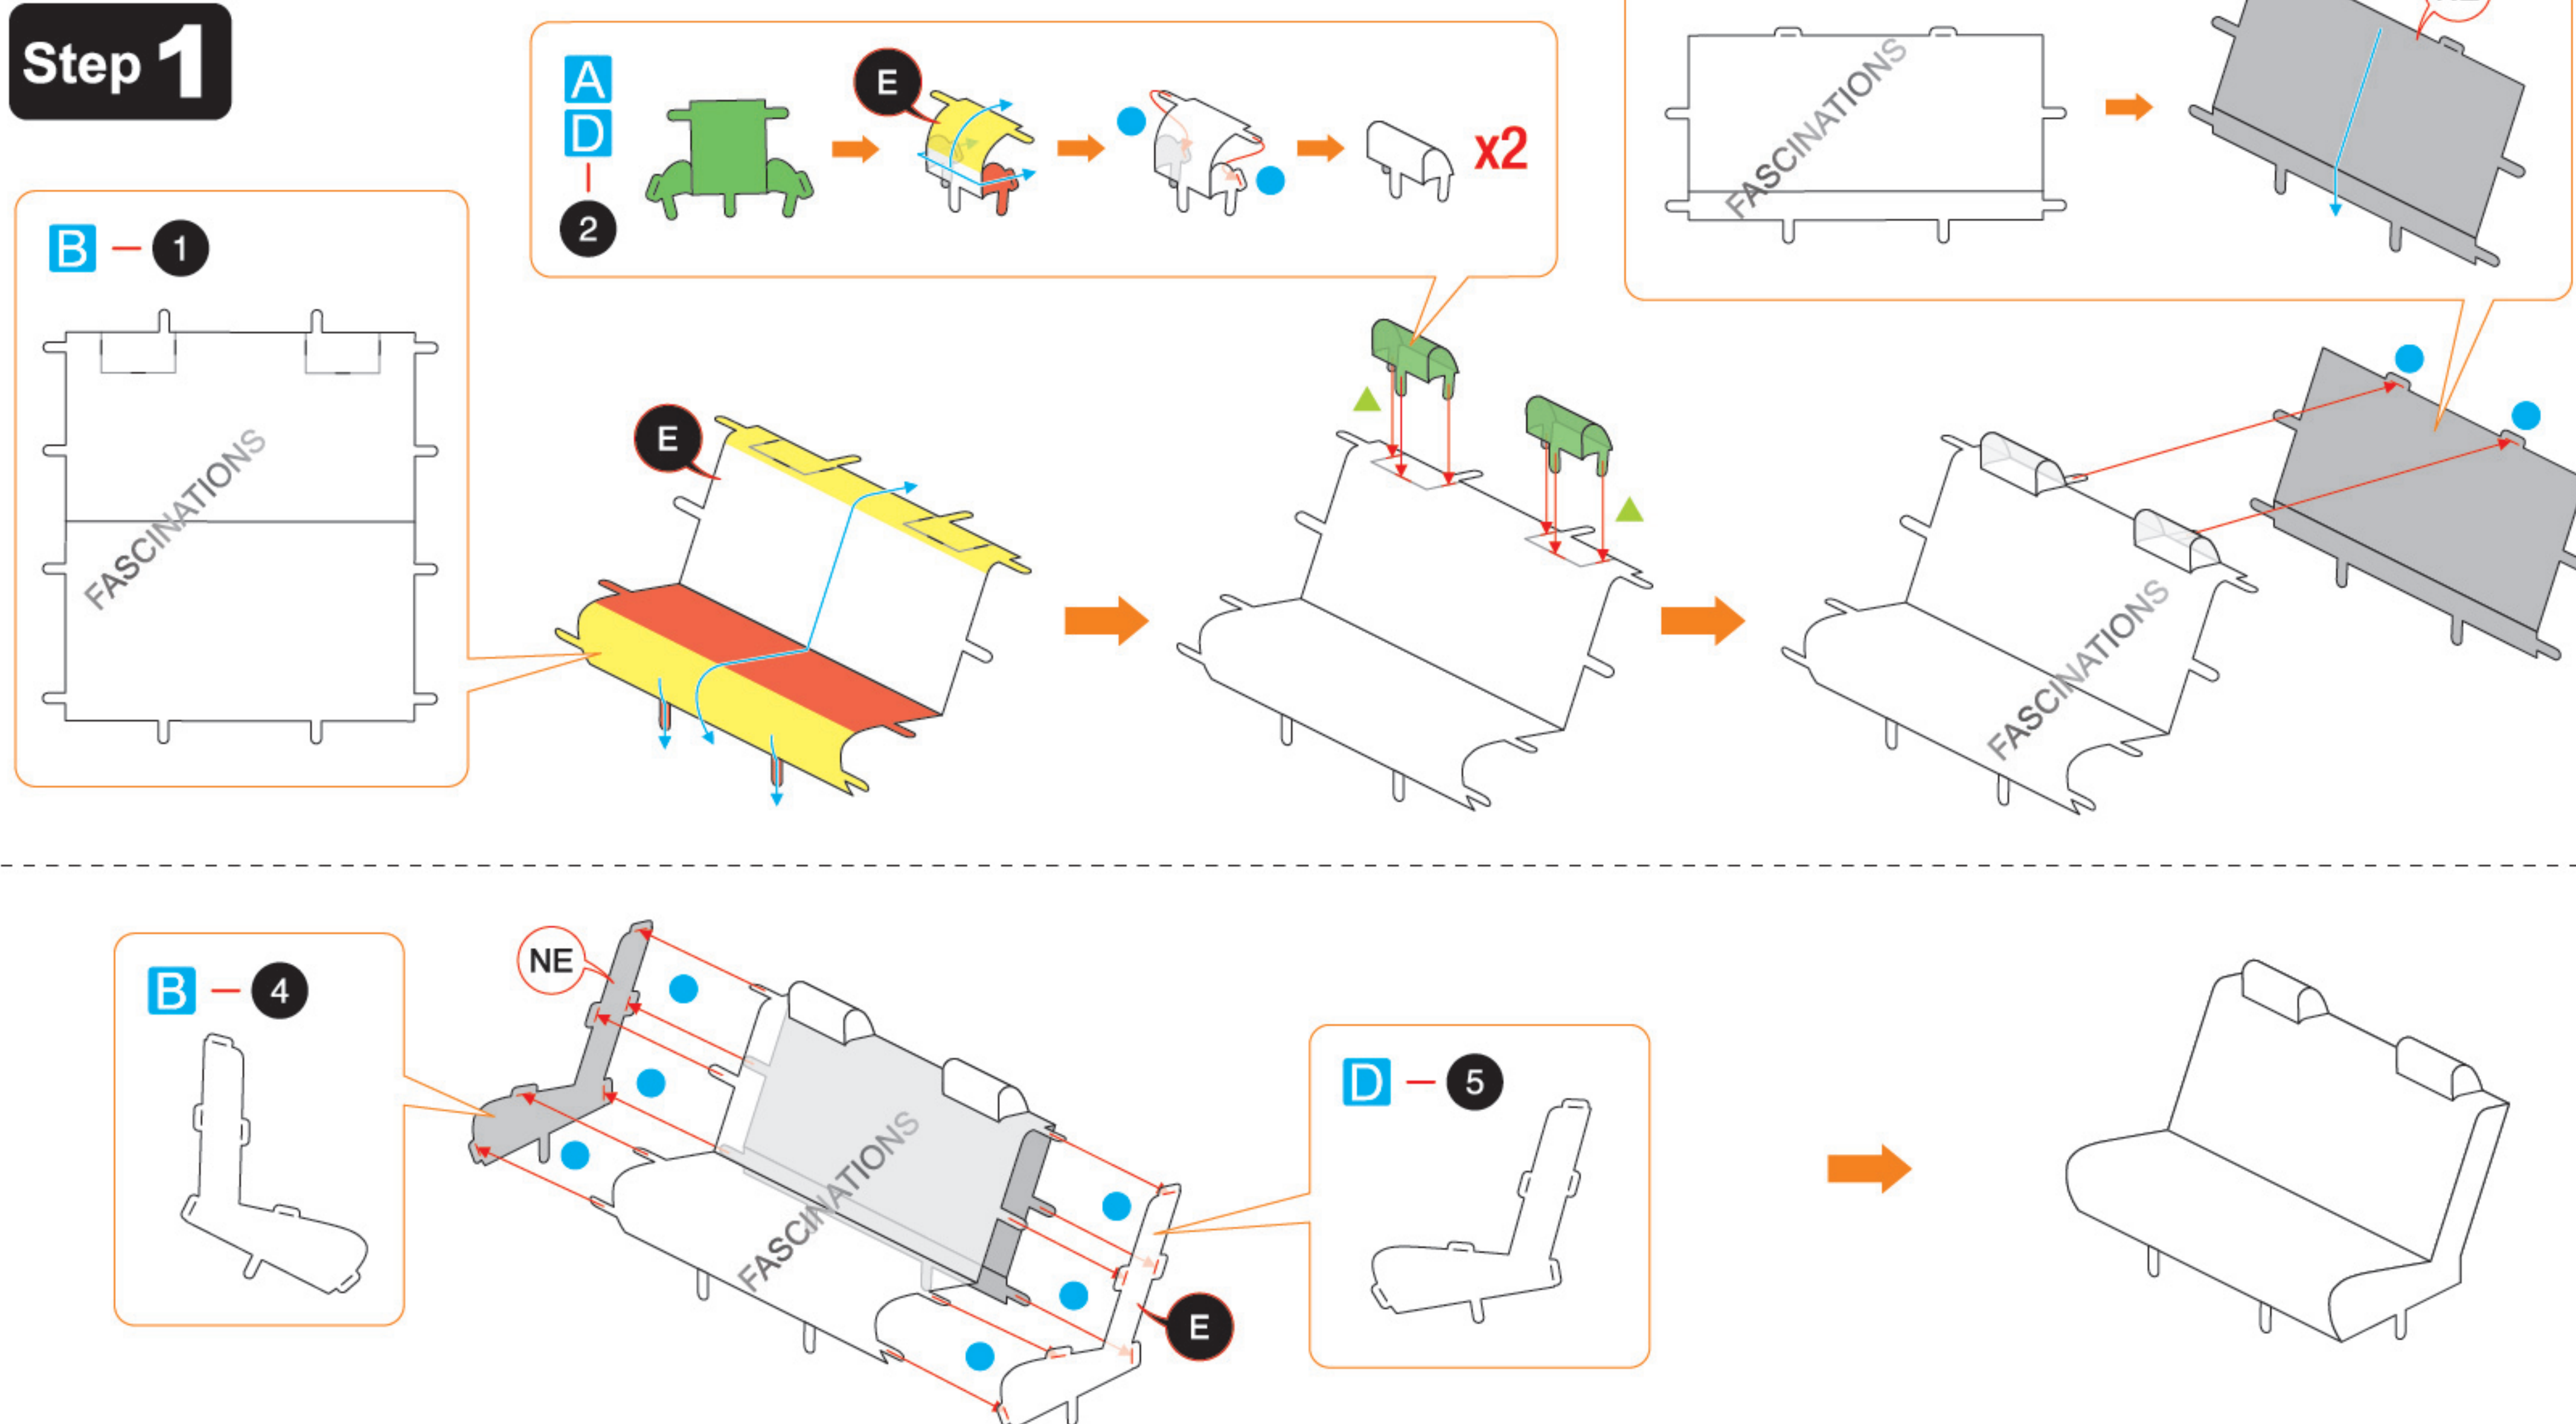


Step 2

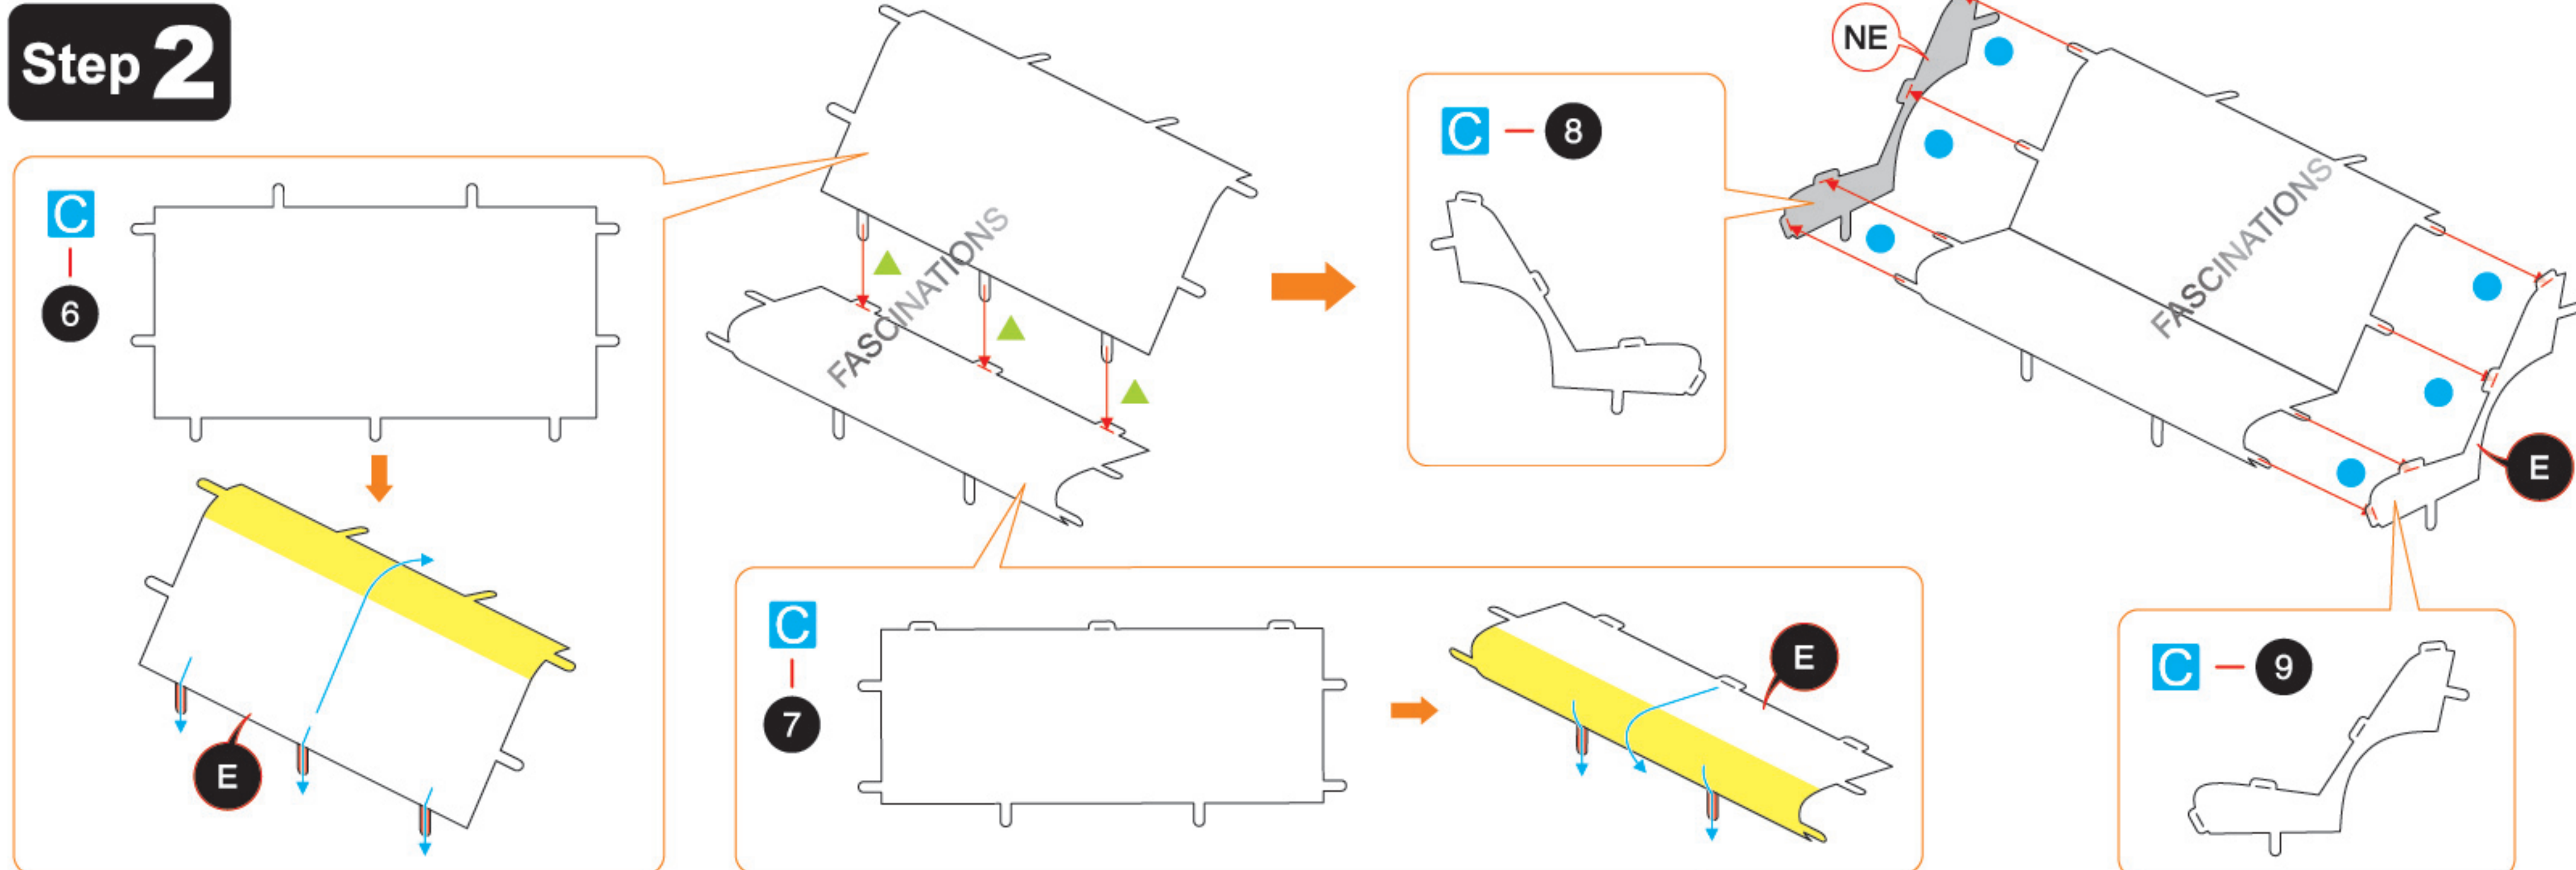


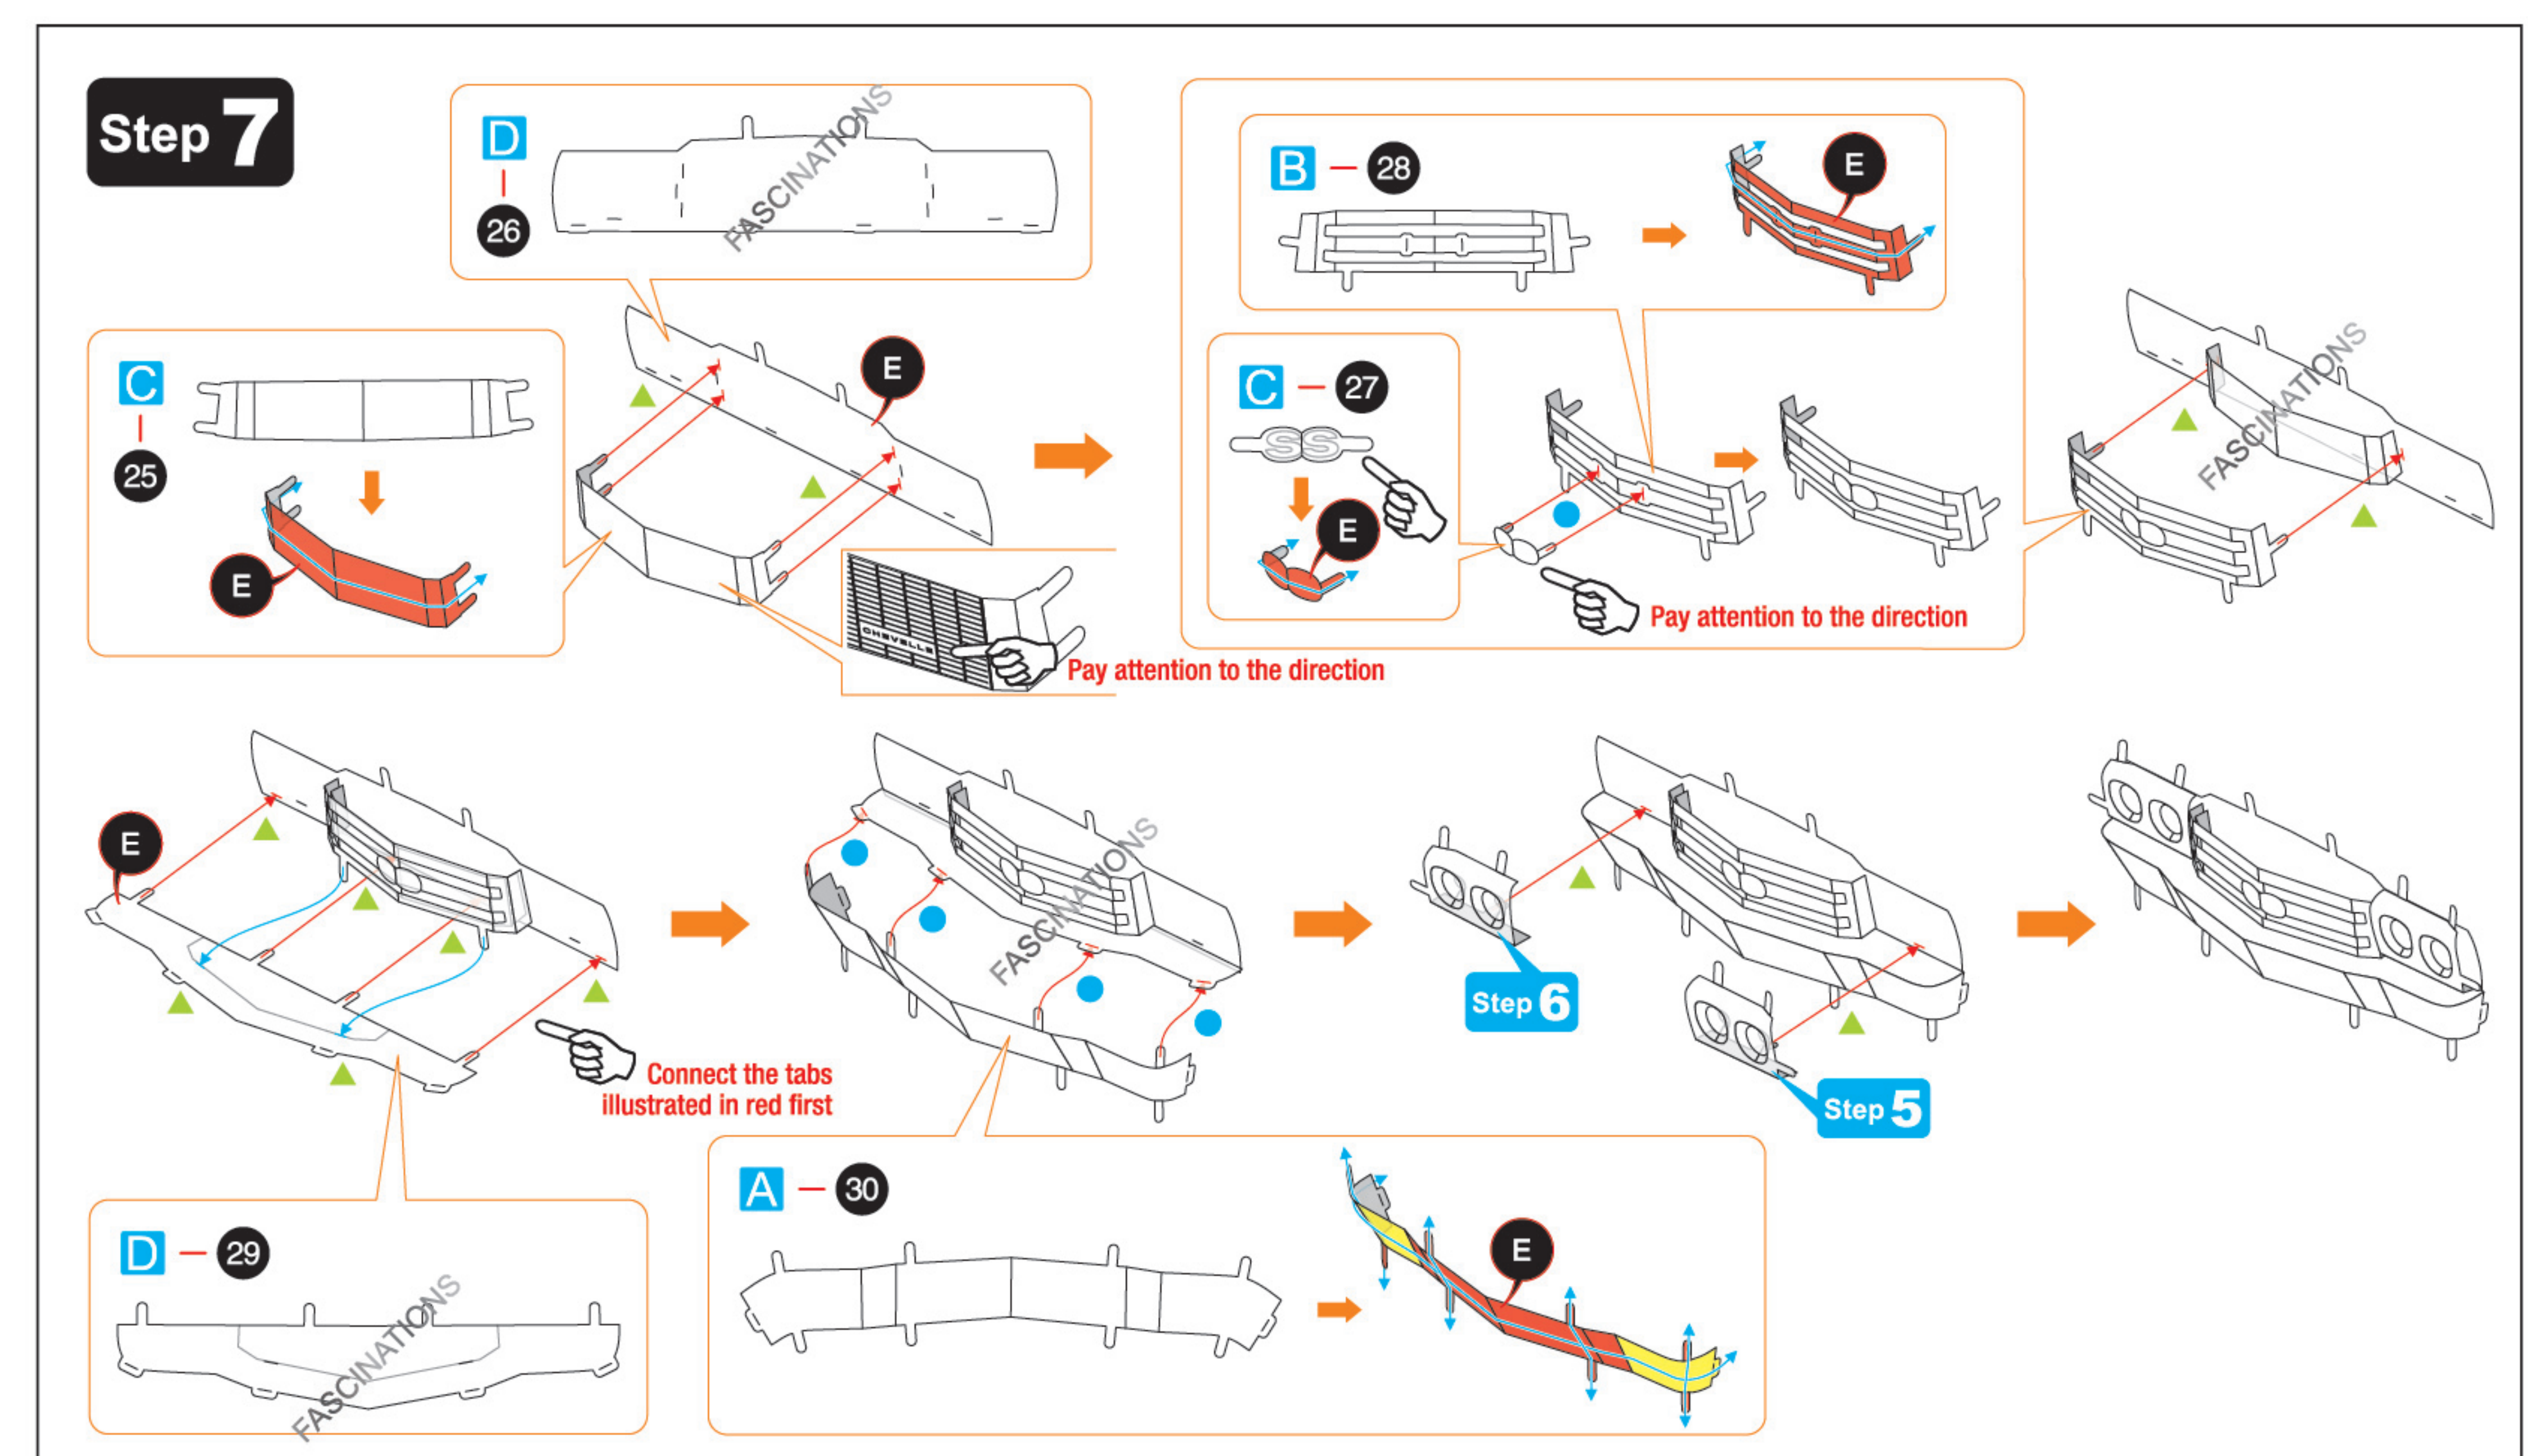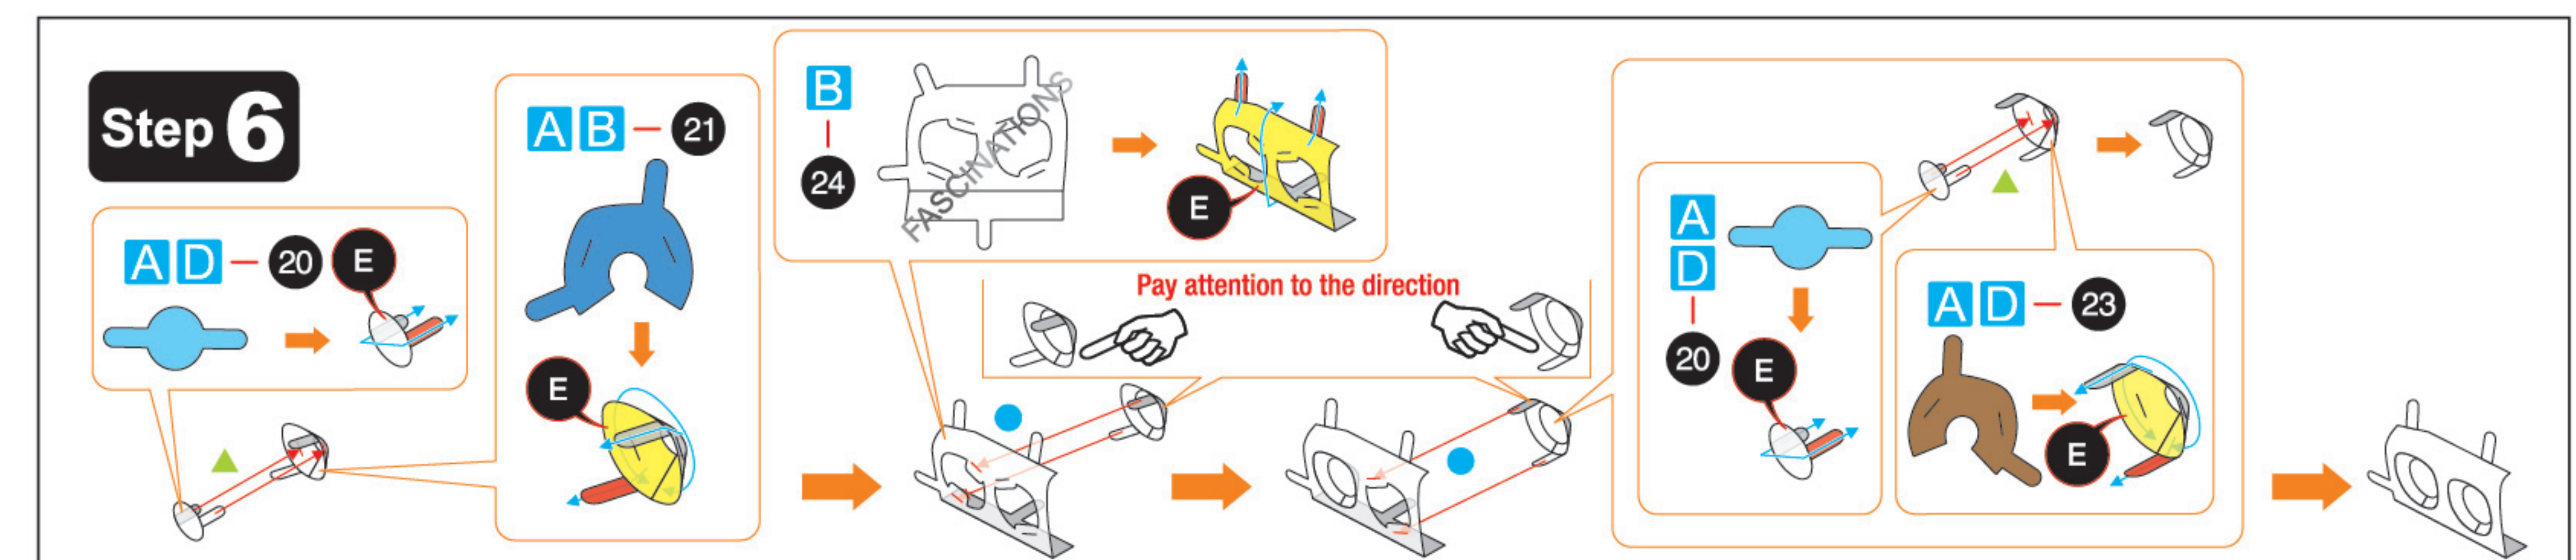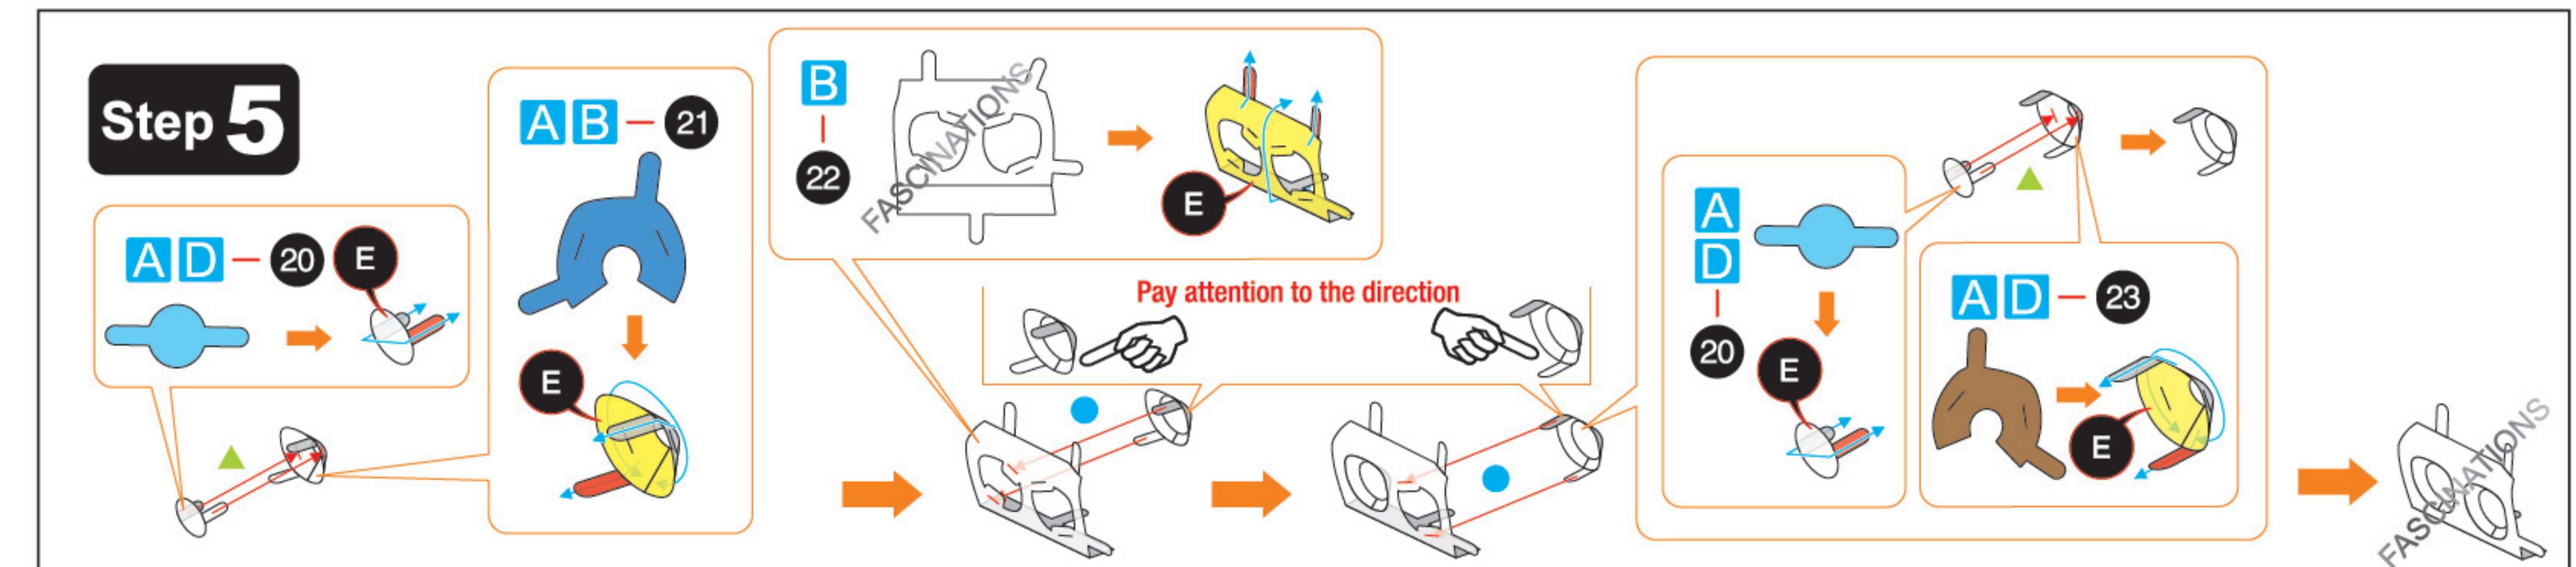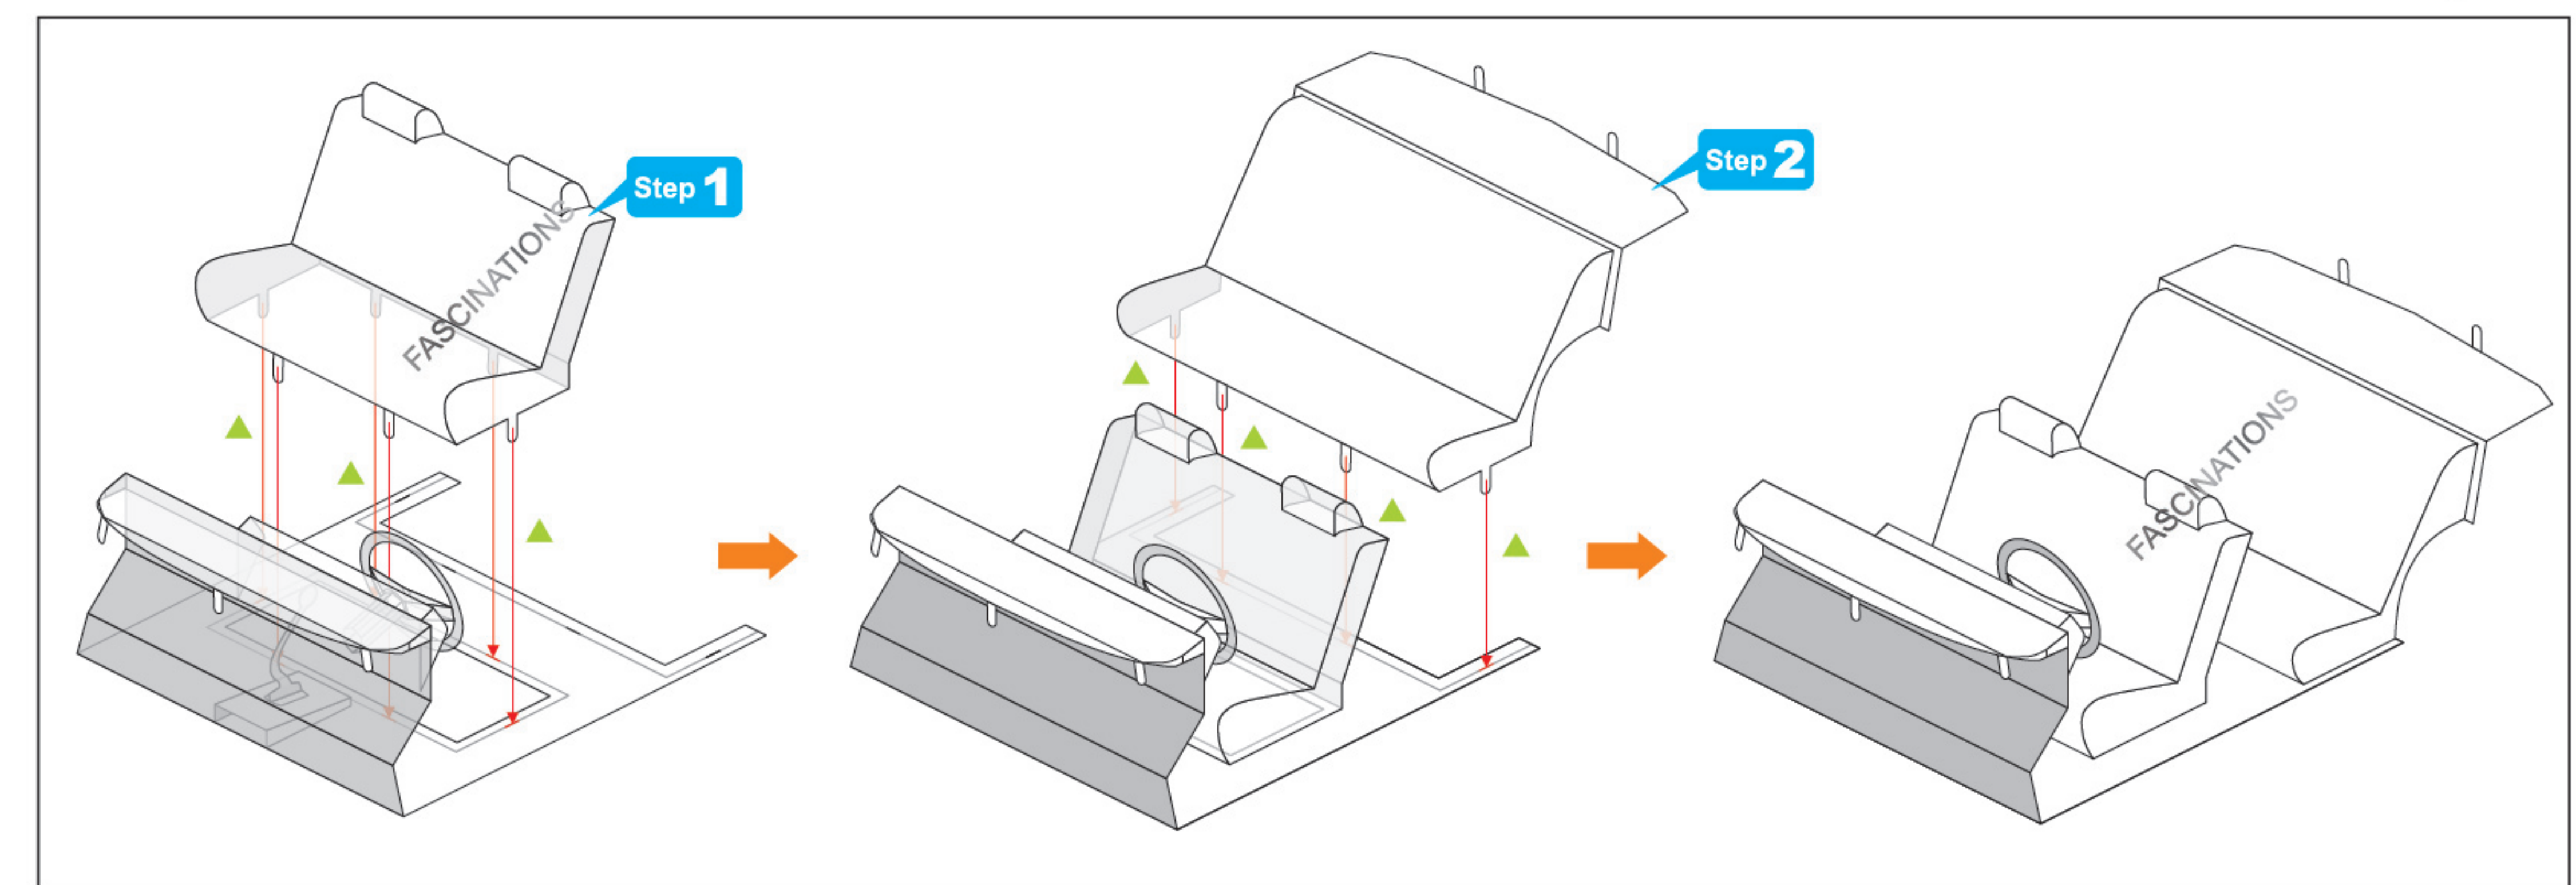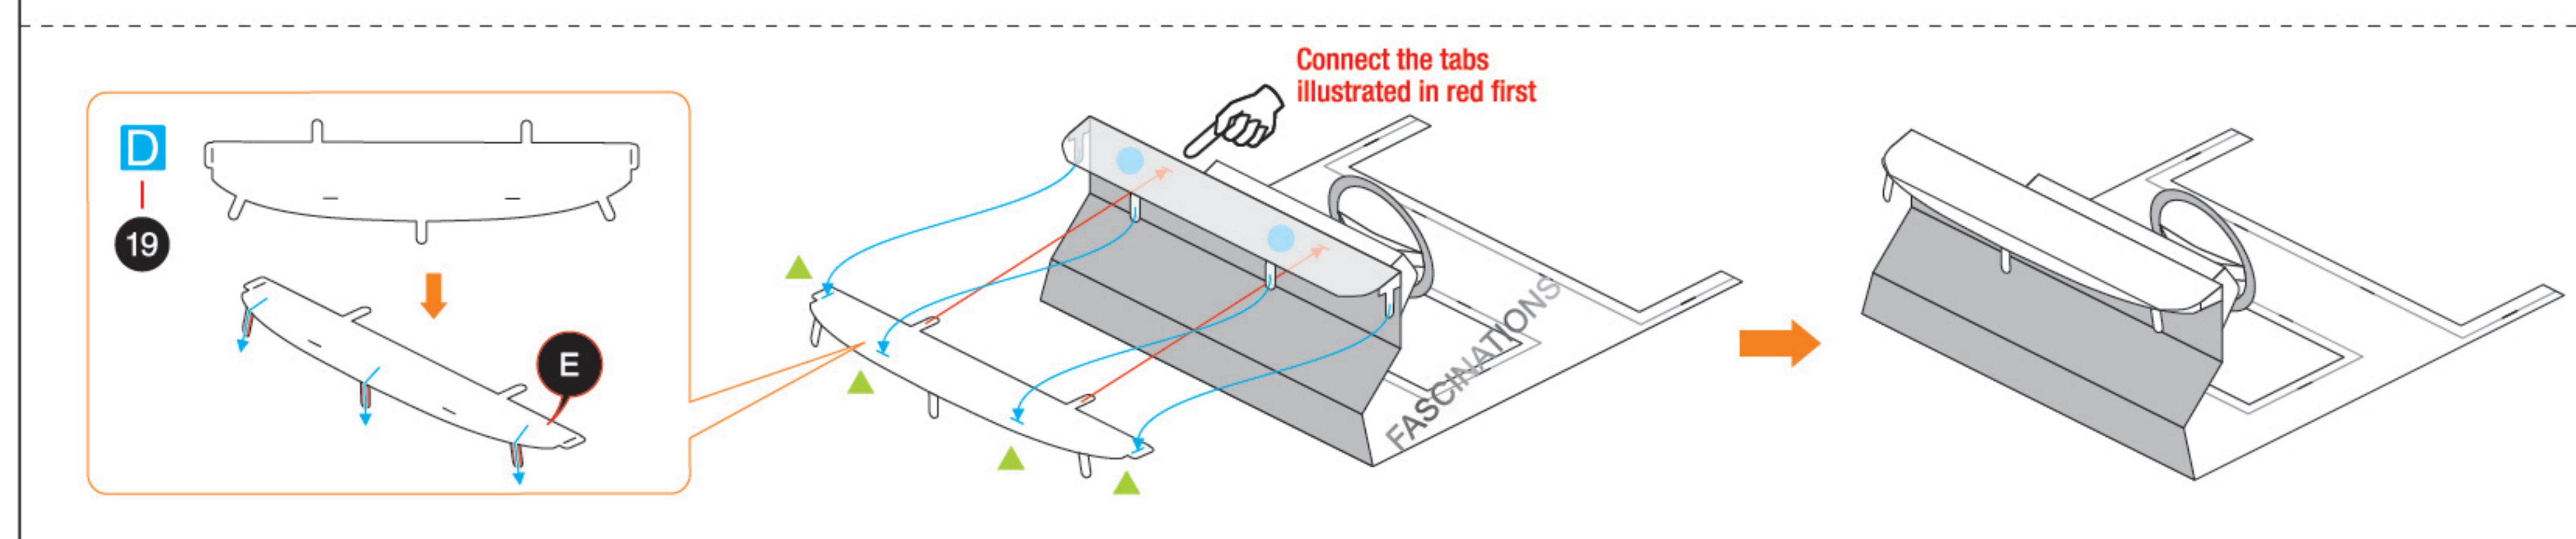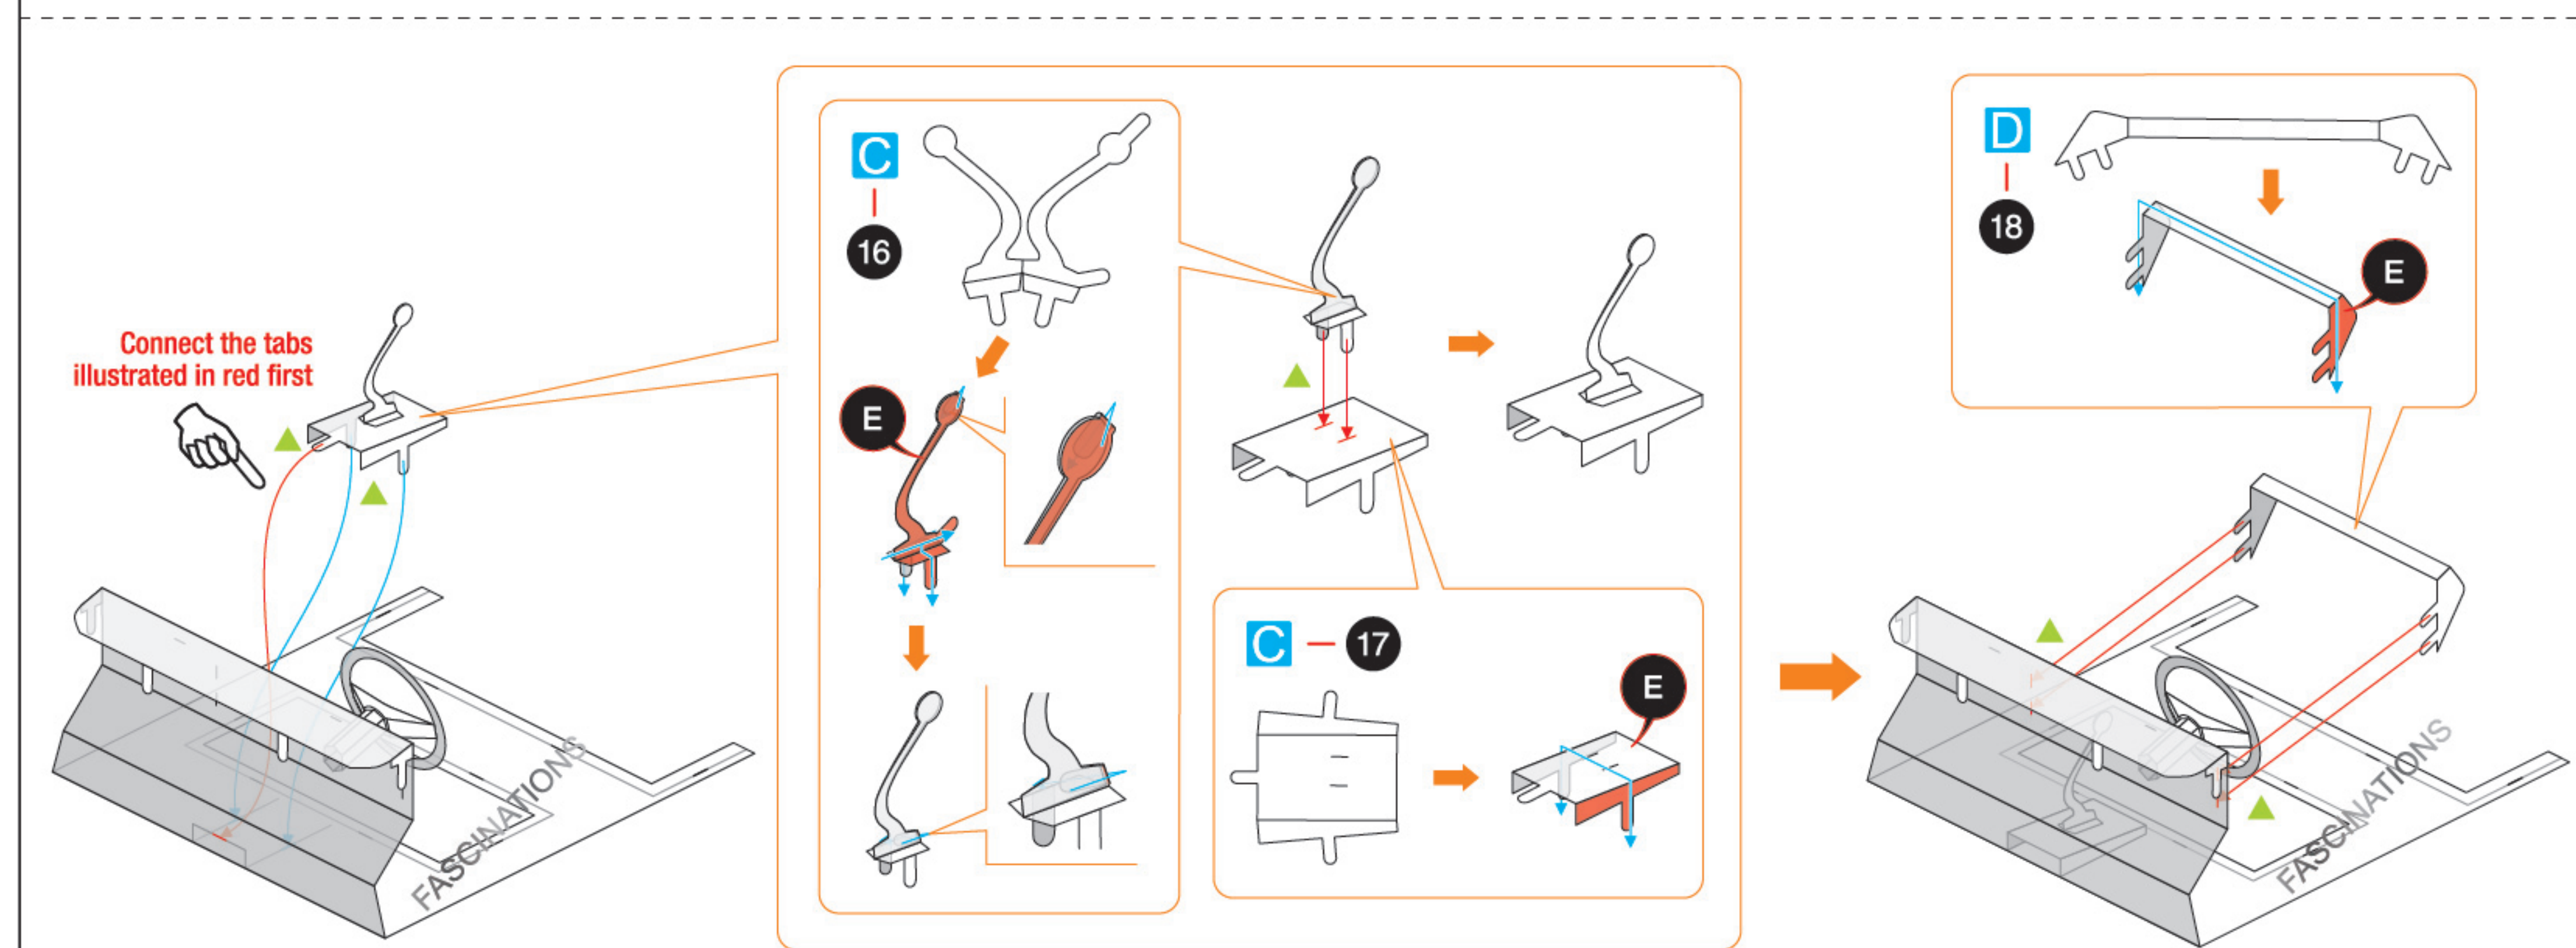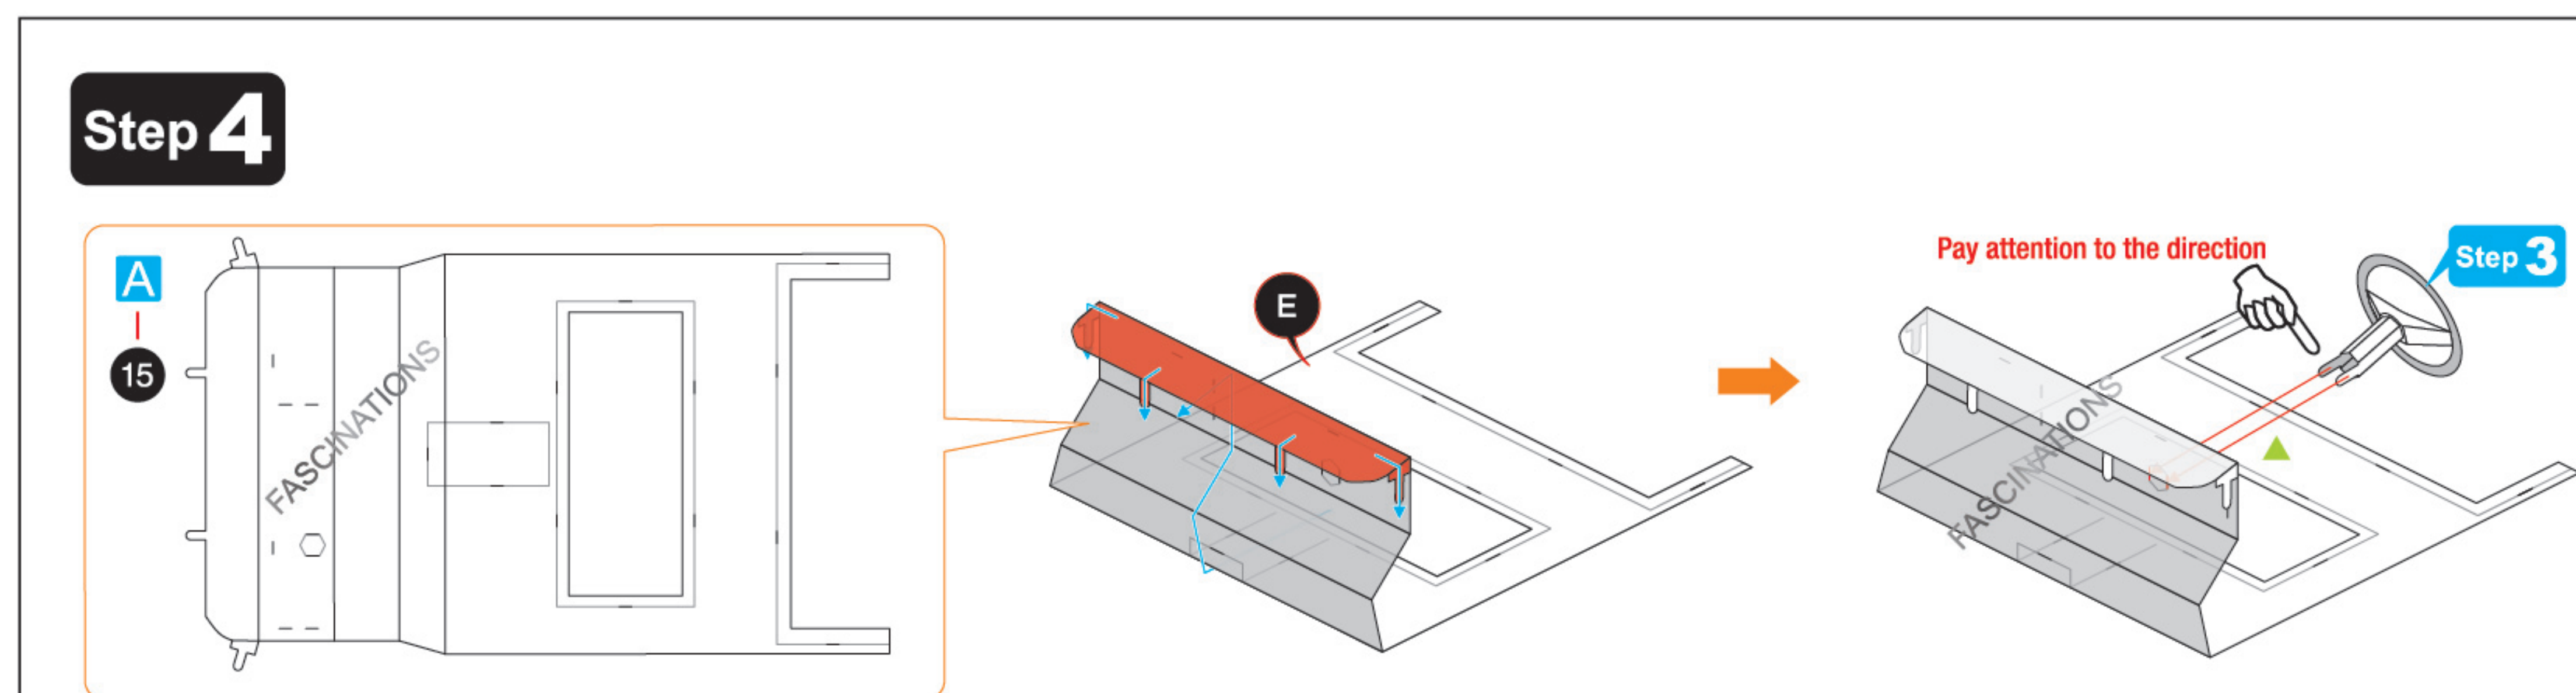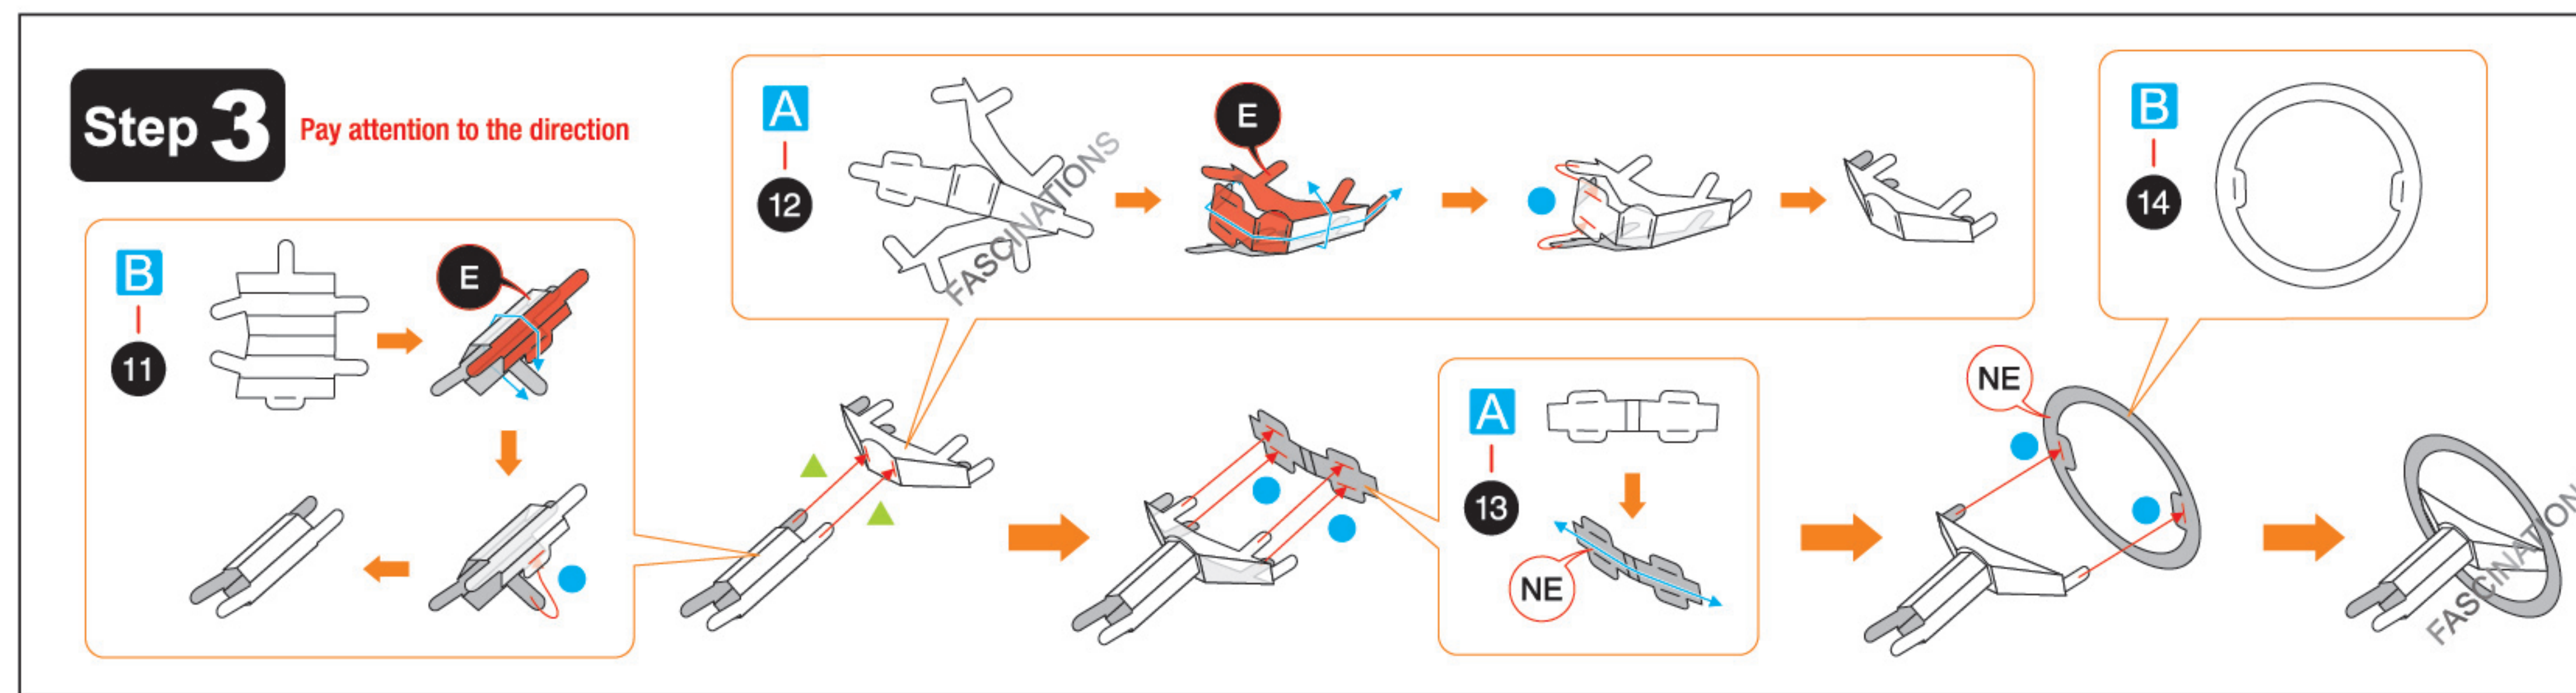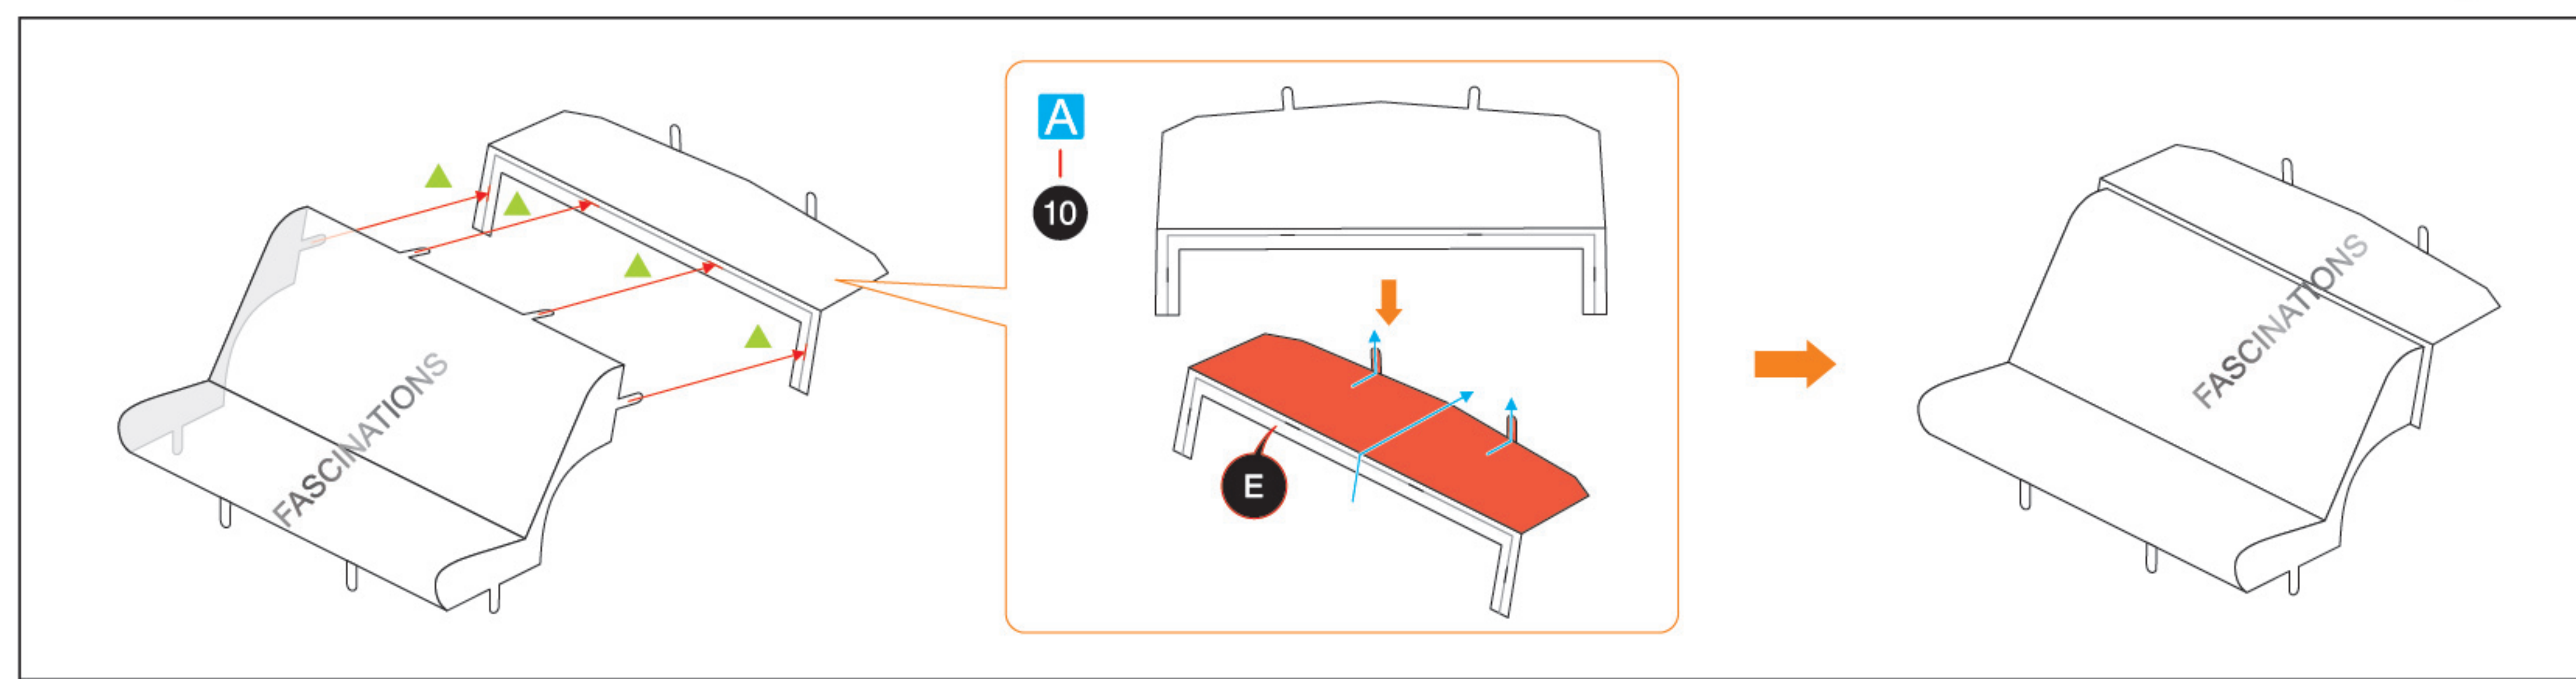


Step 8

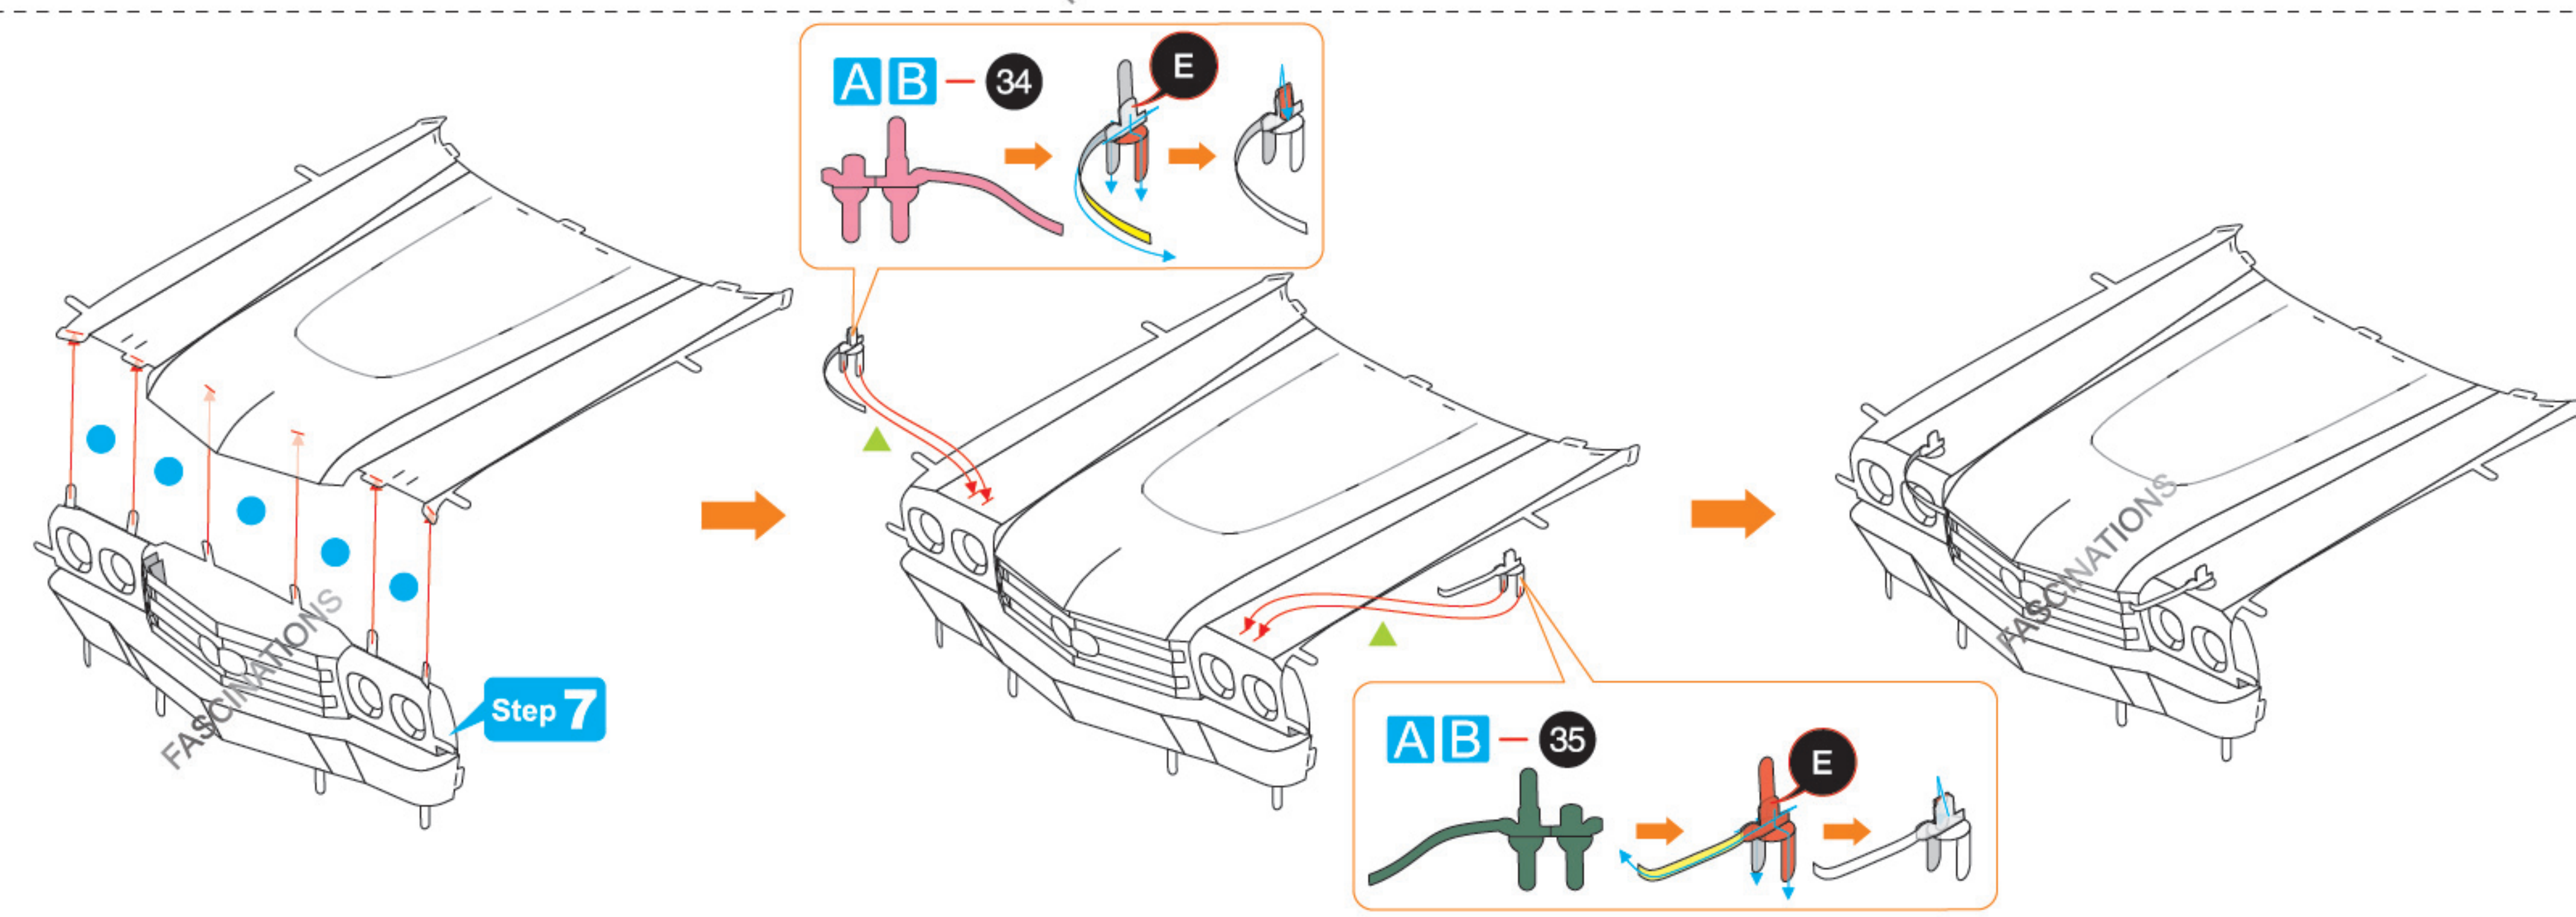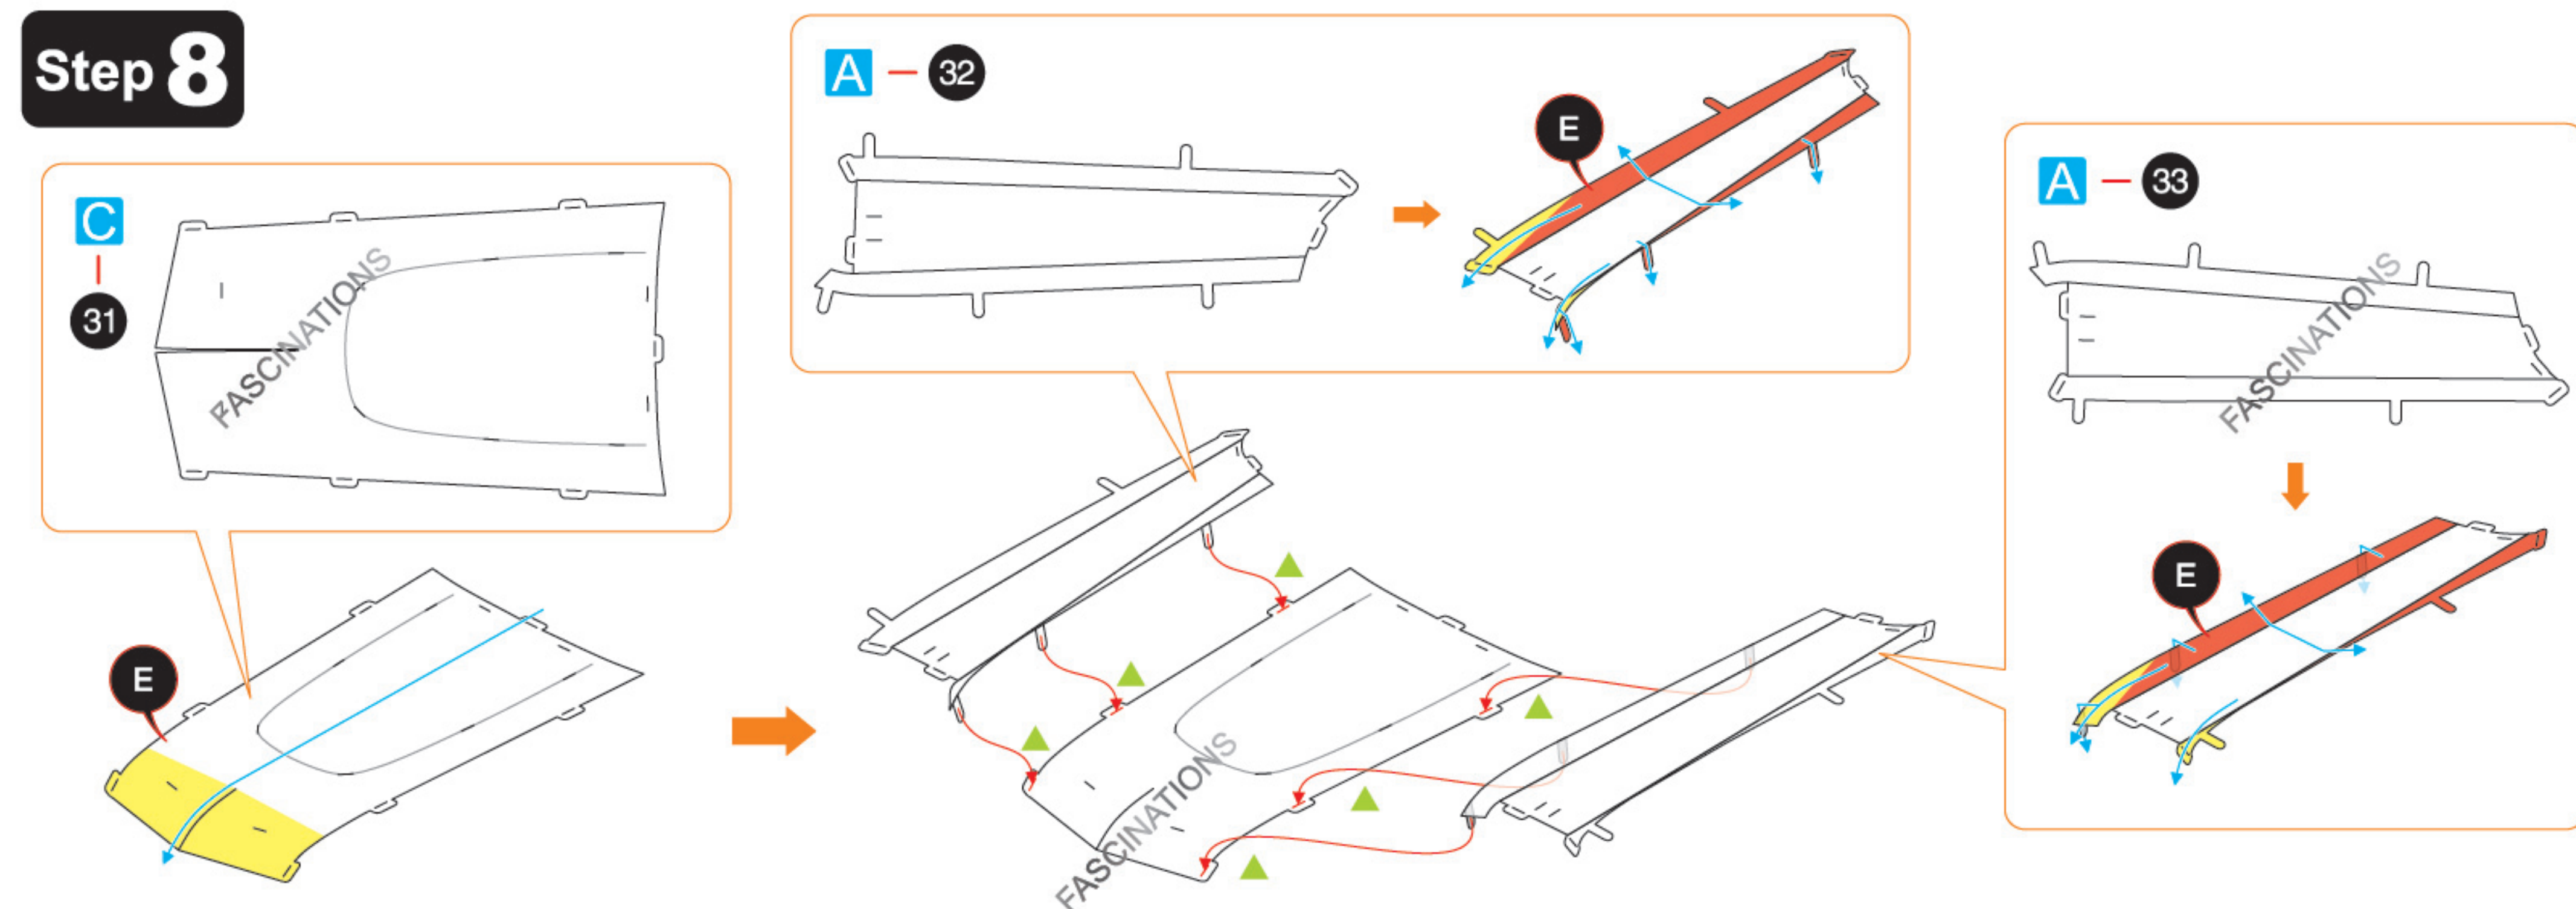


Step 9

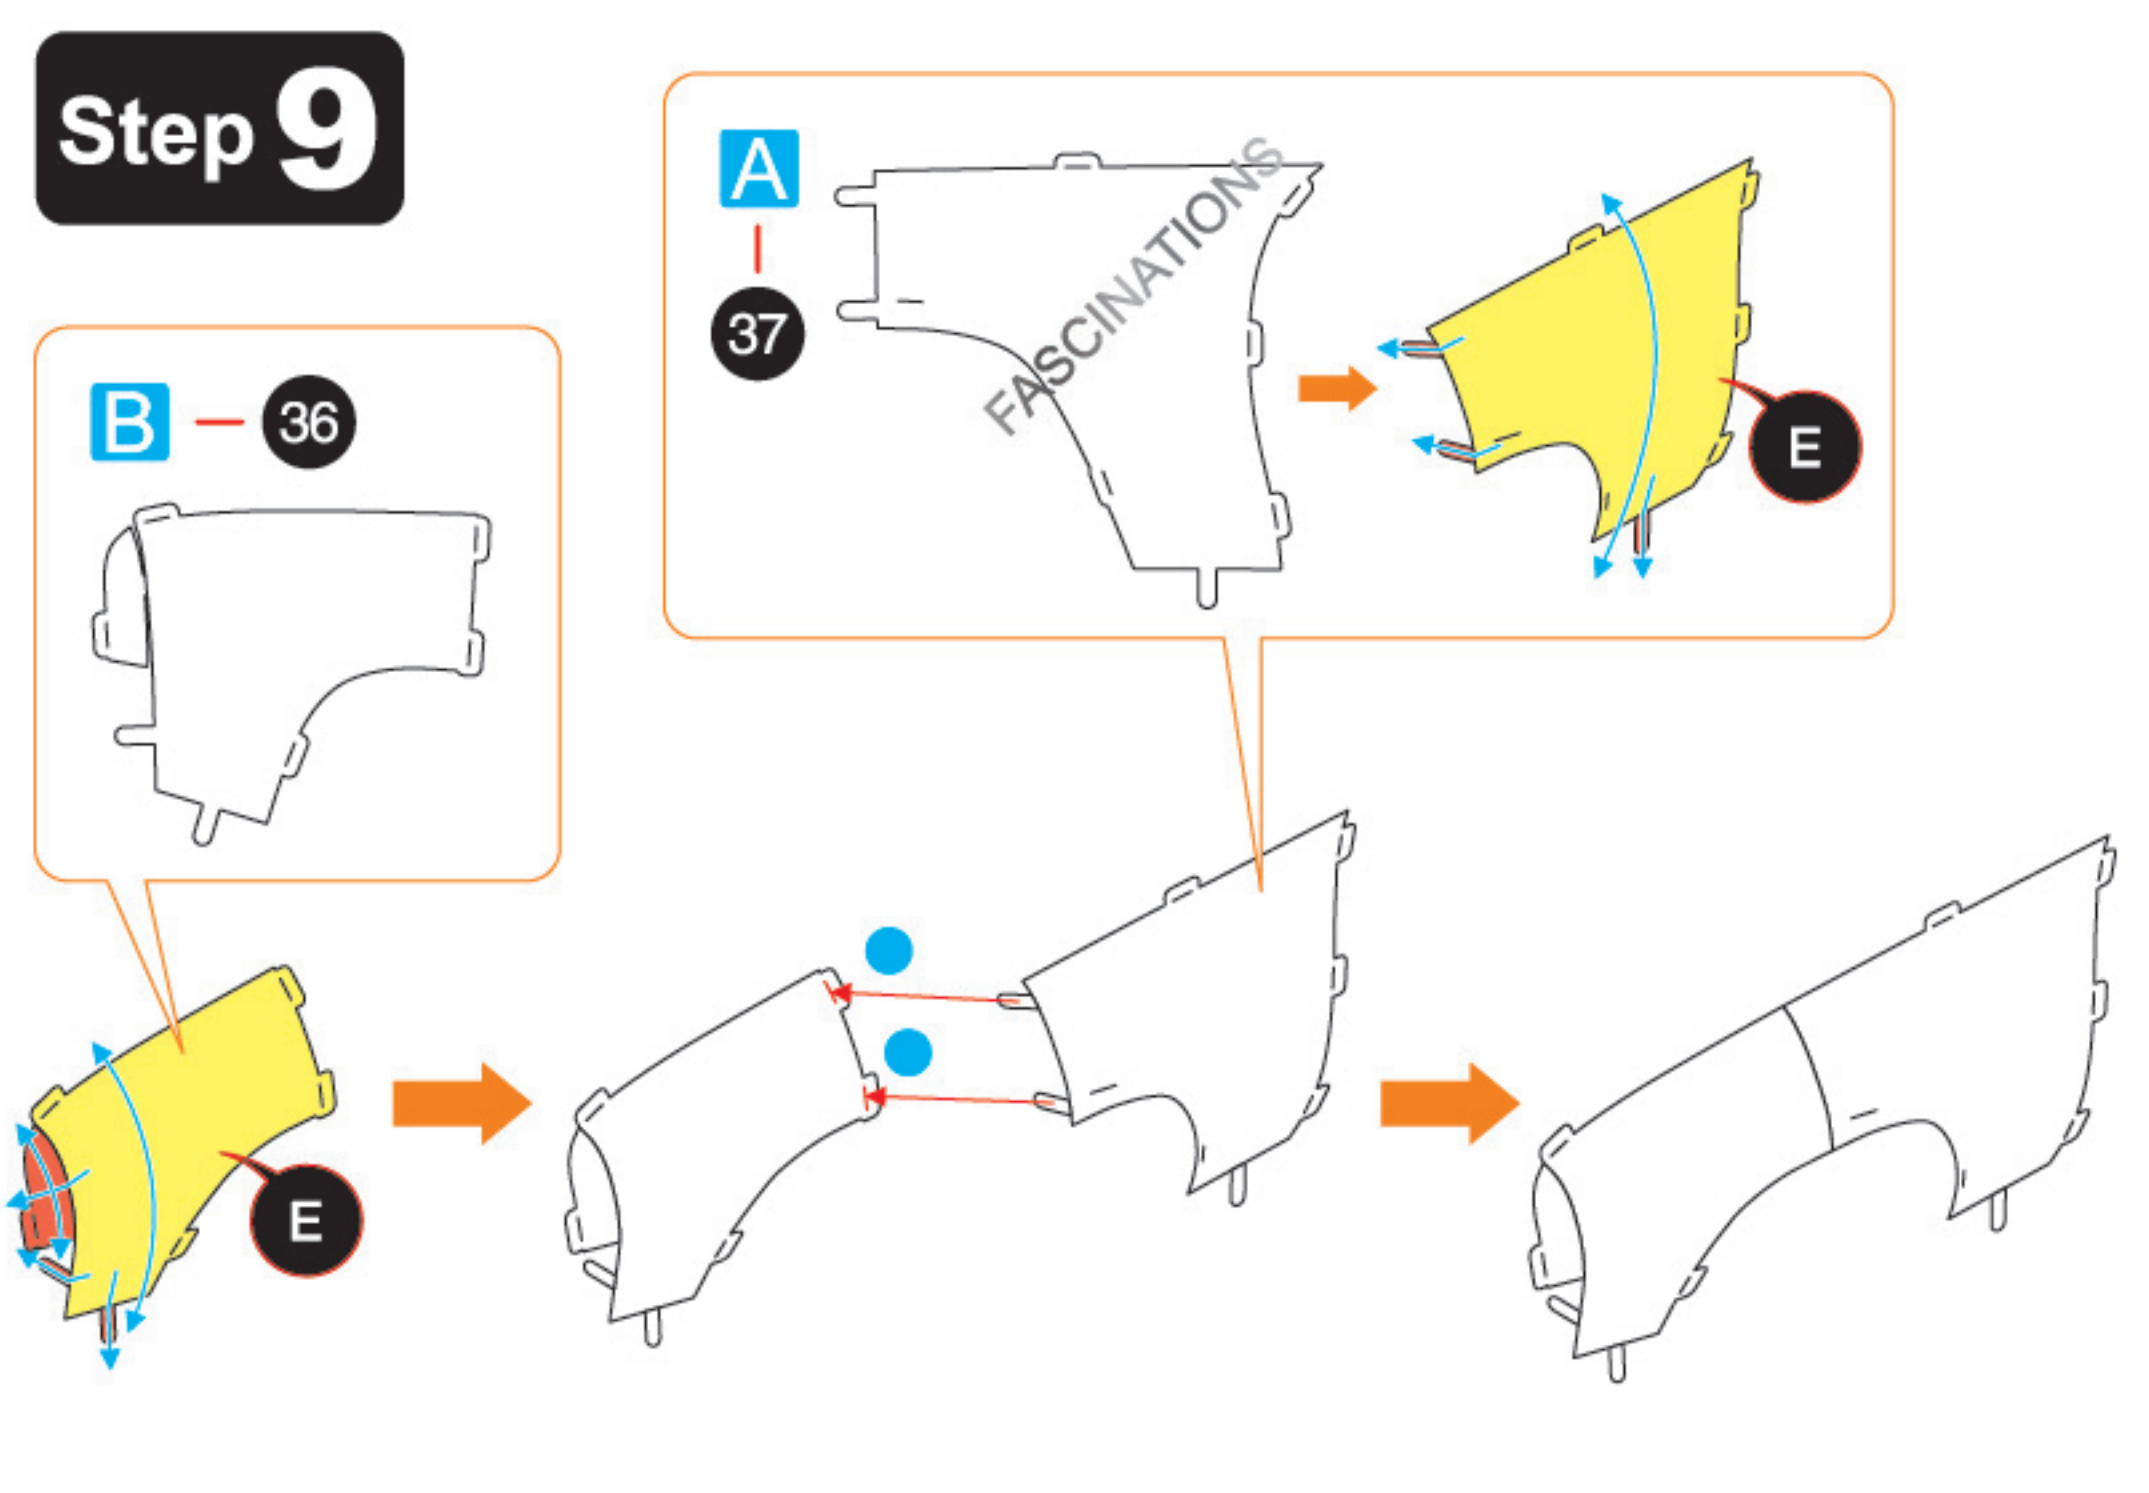


Step 10

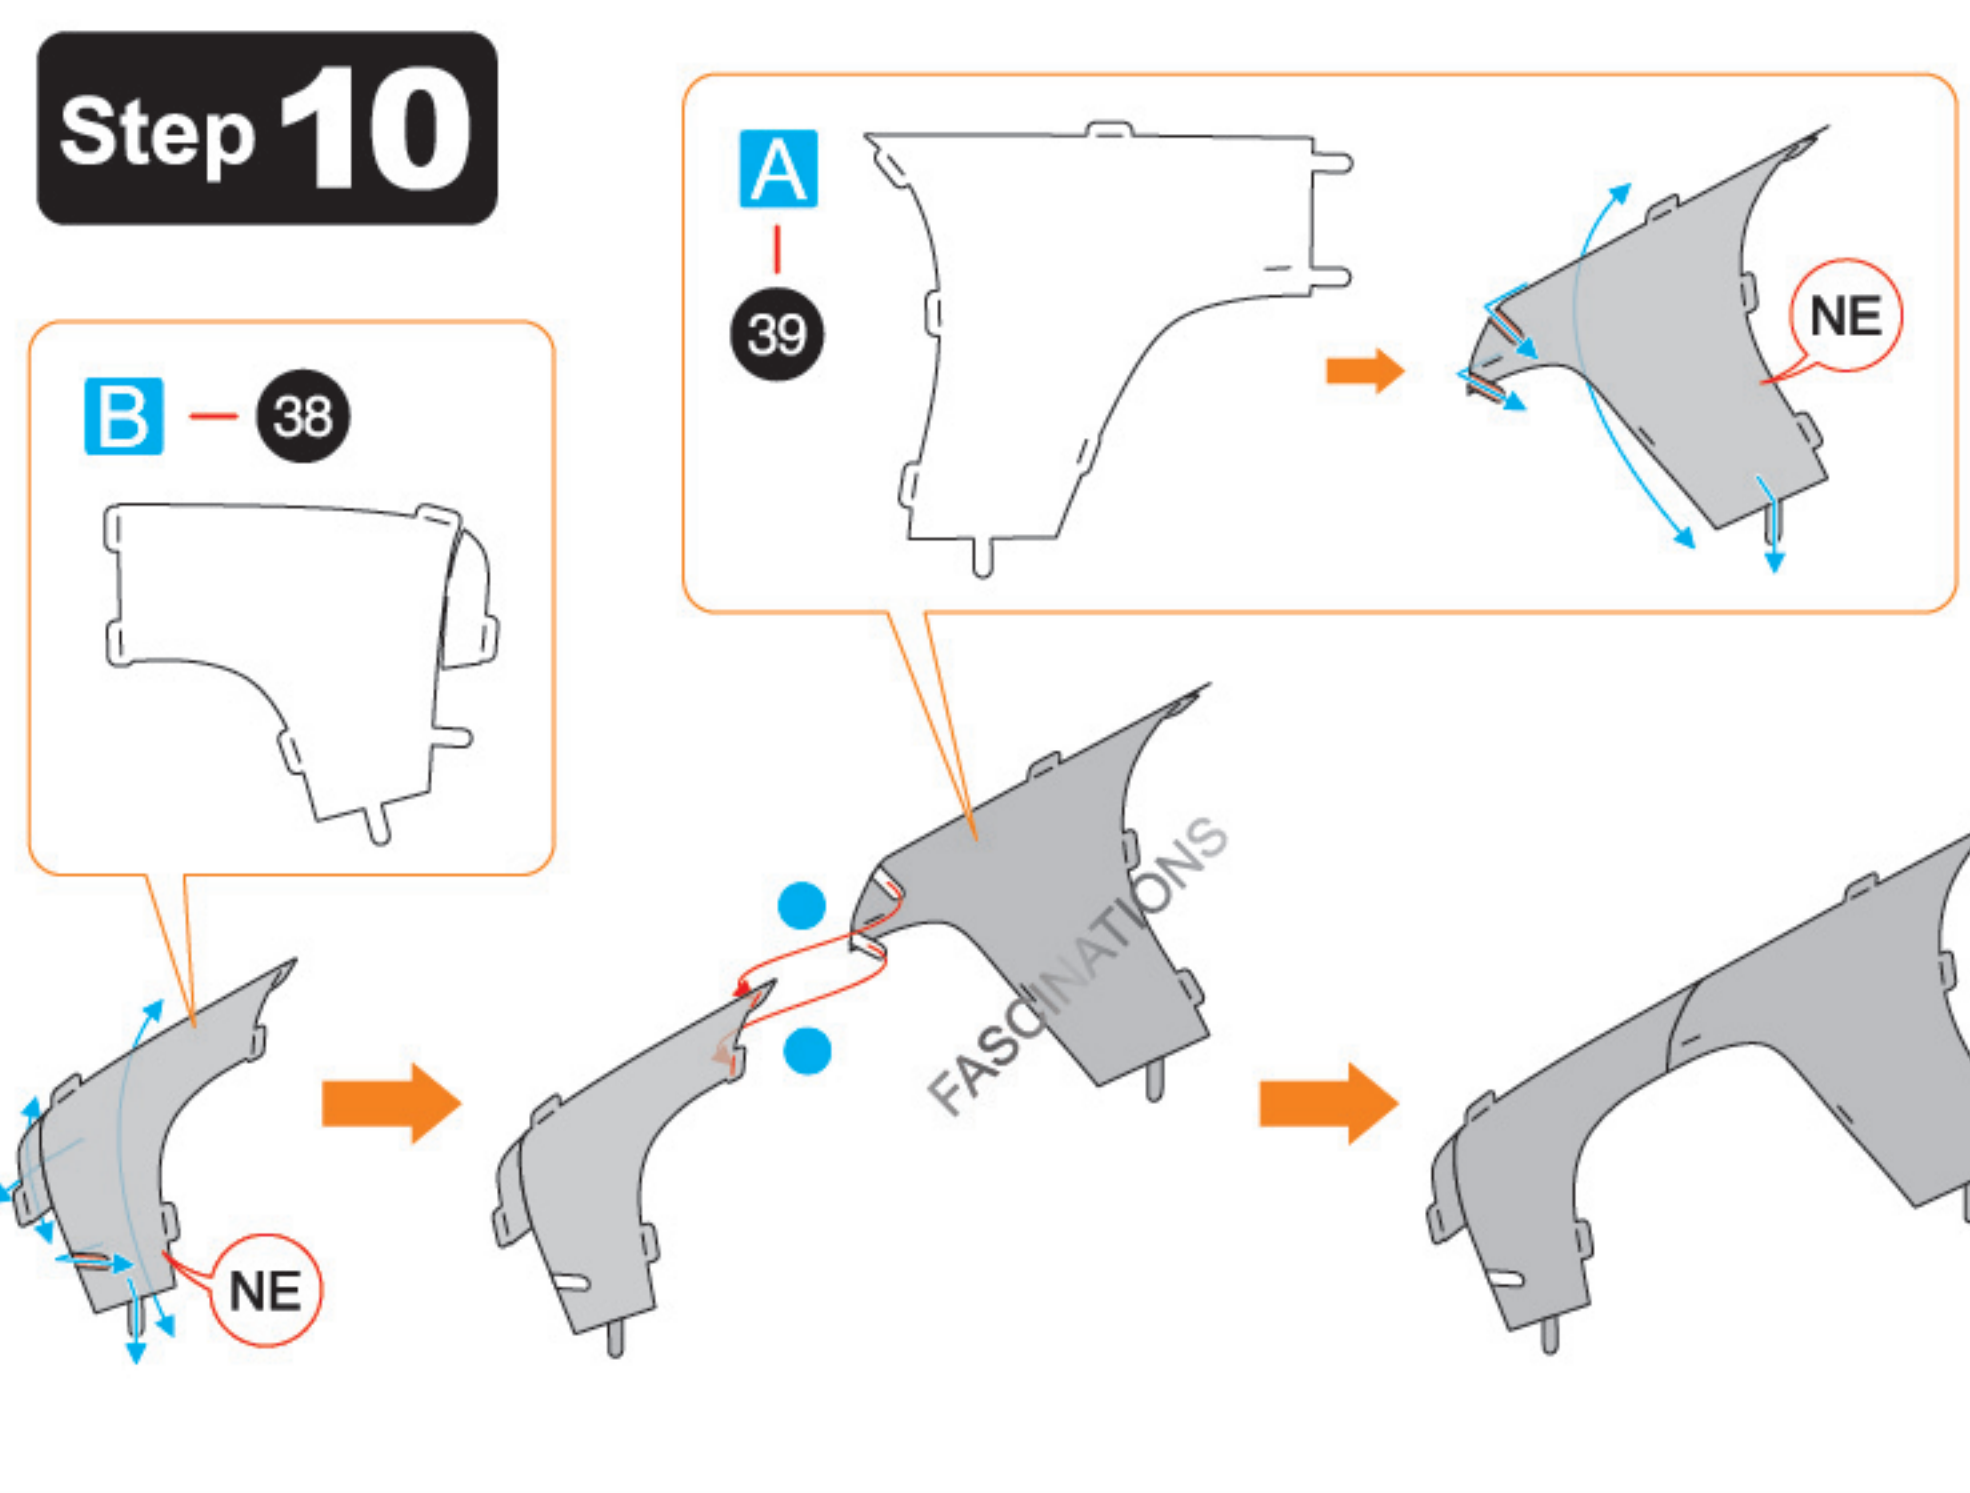


Step 11

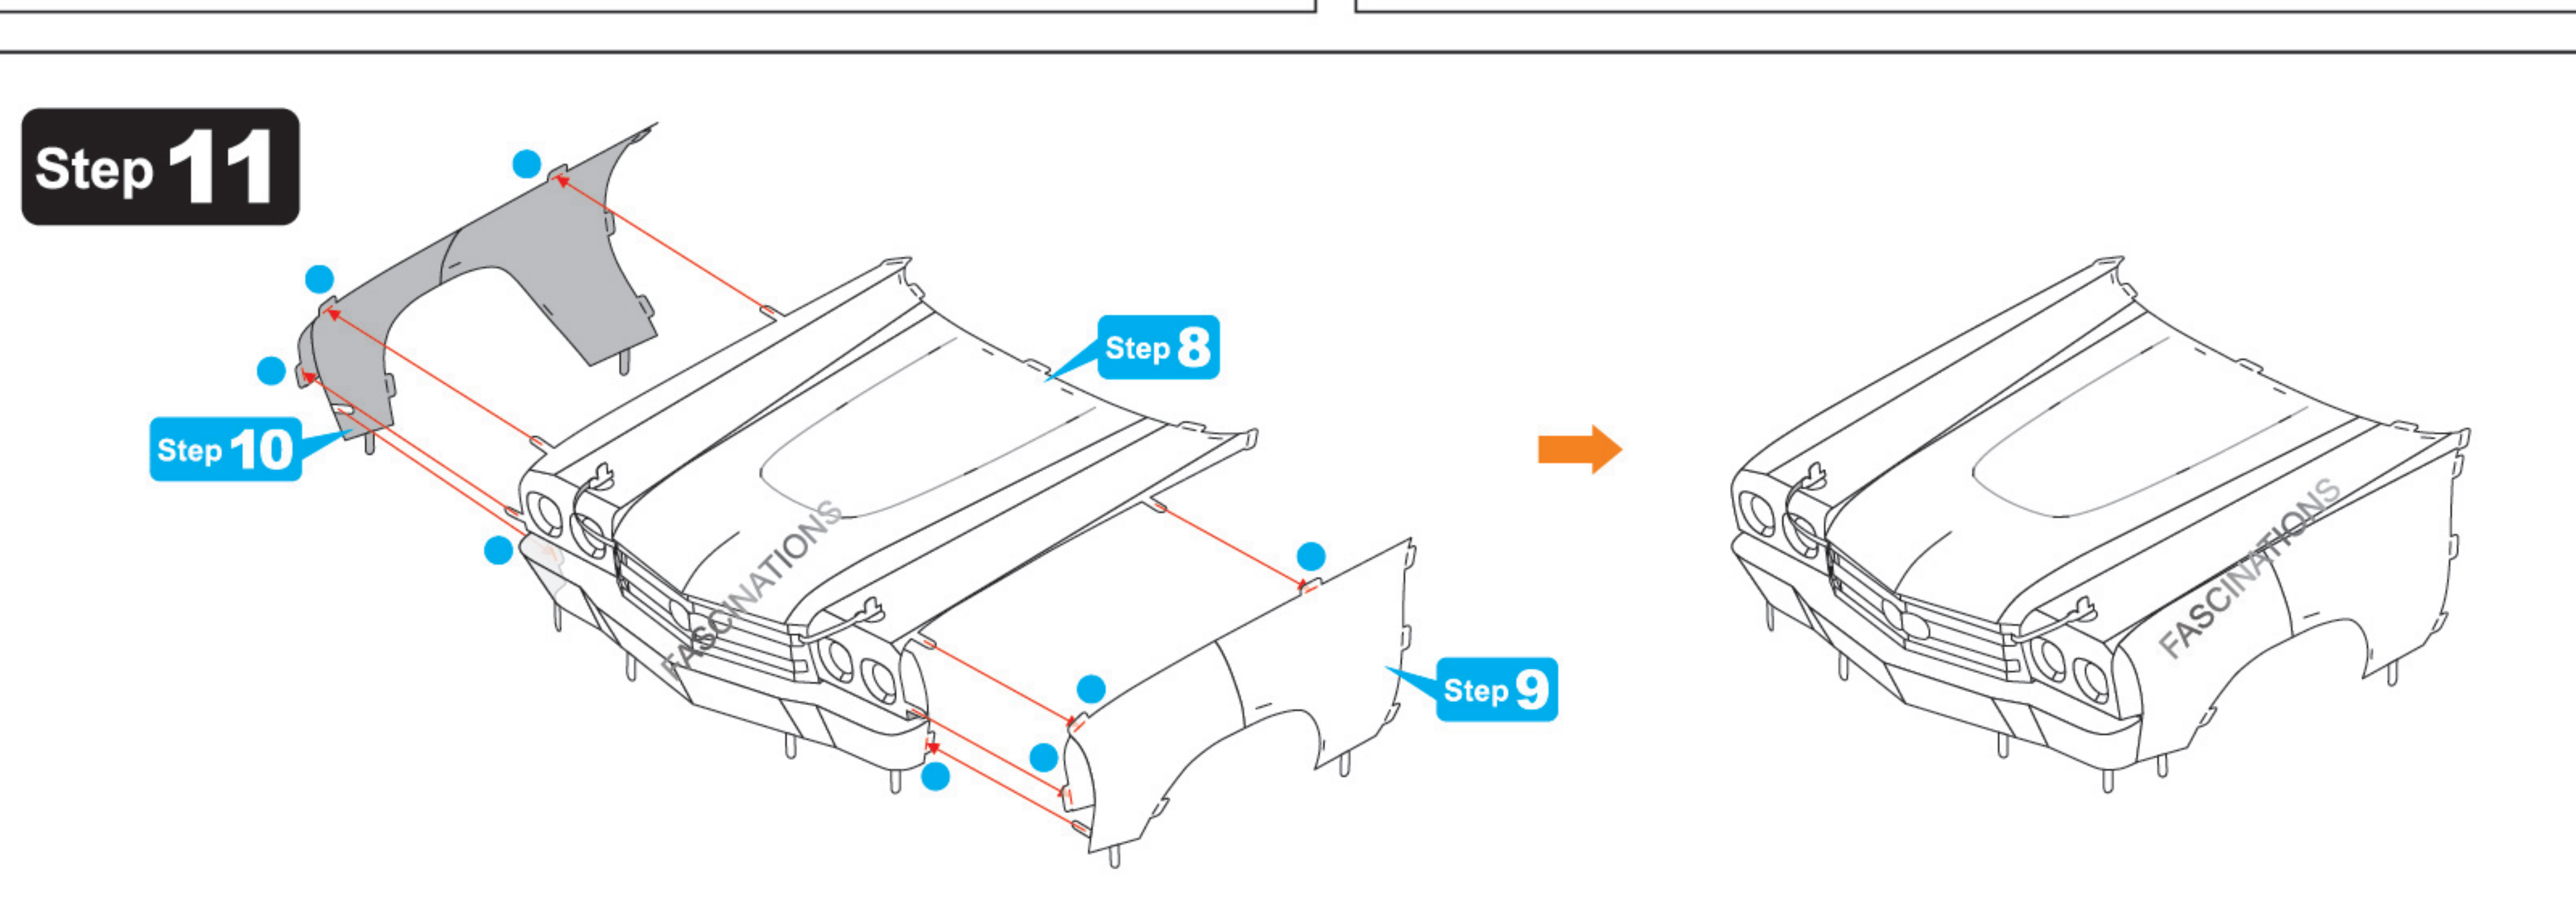


Step 12

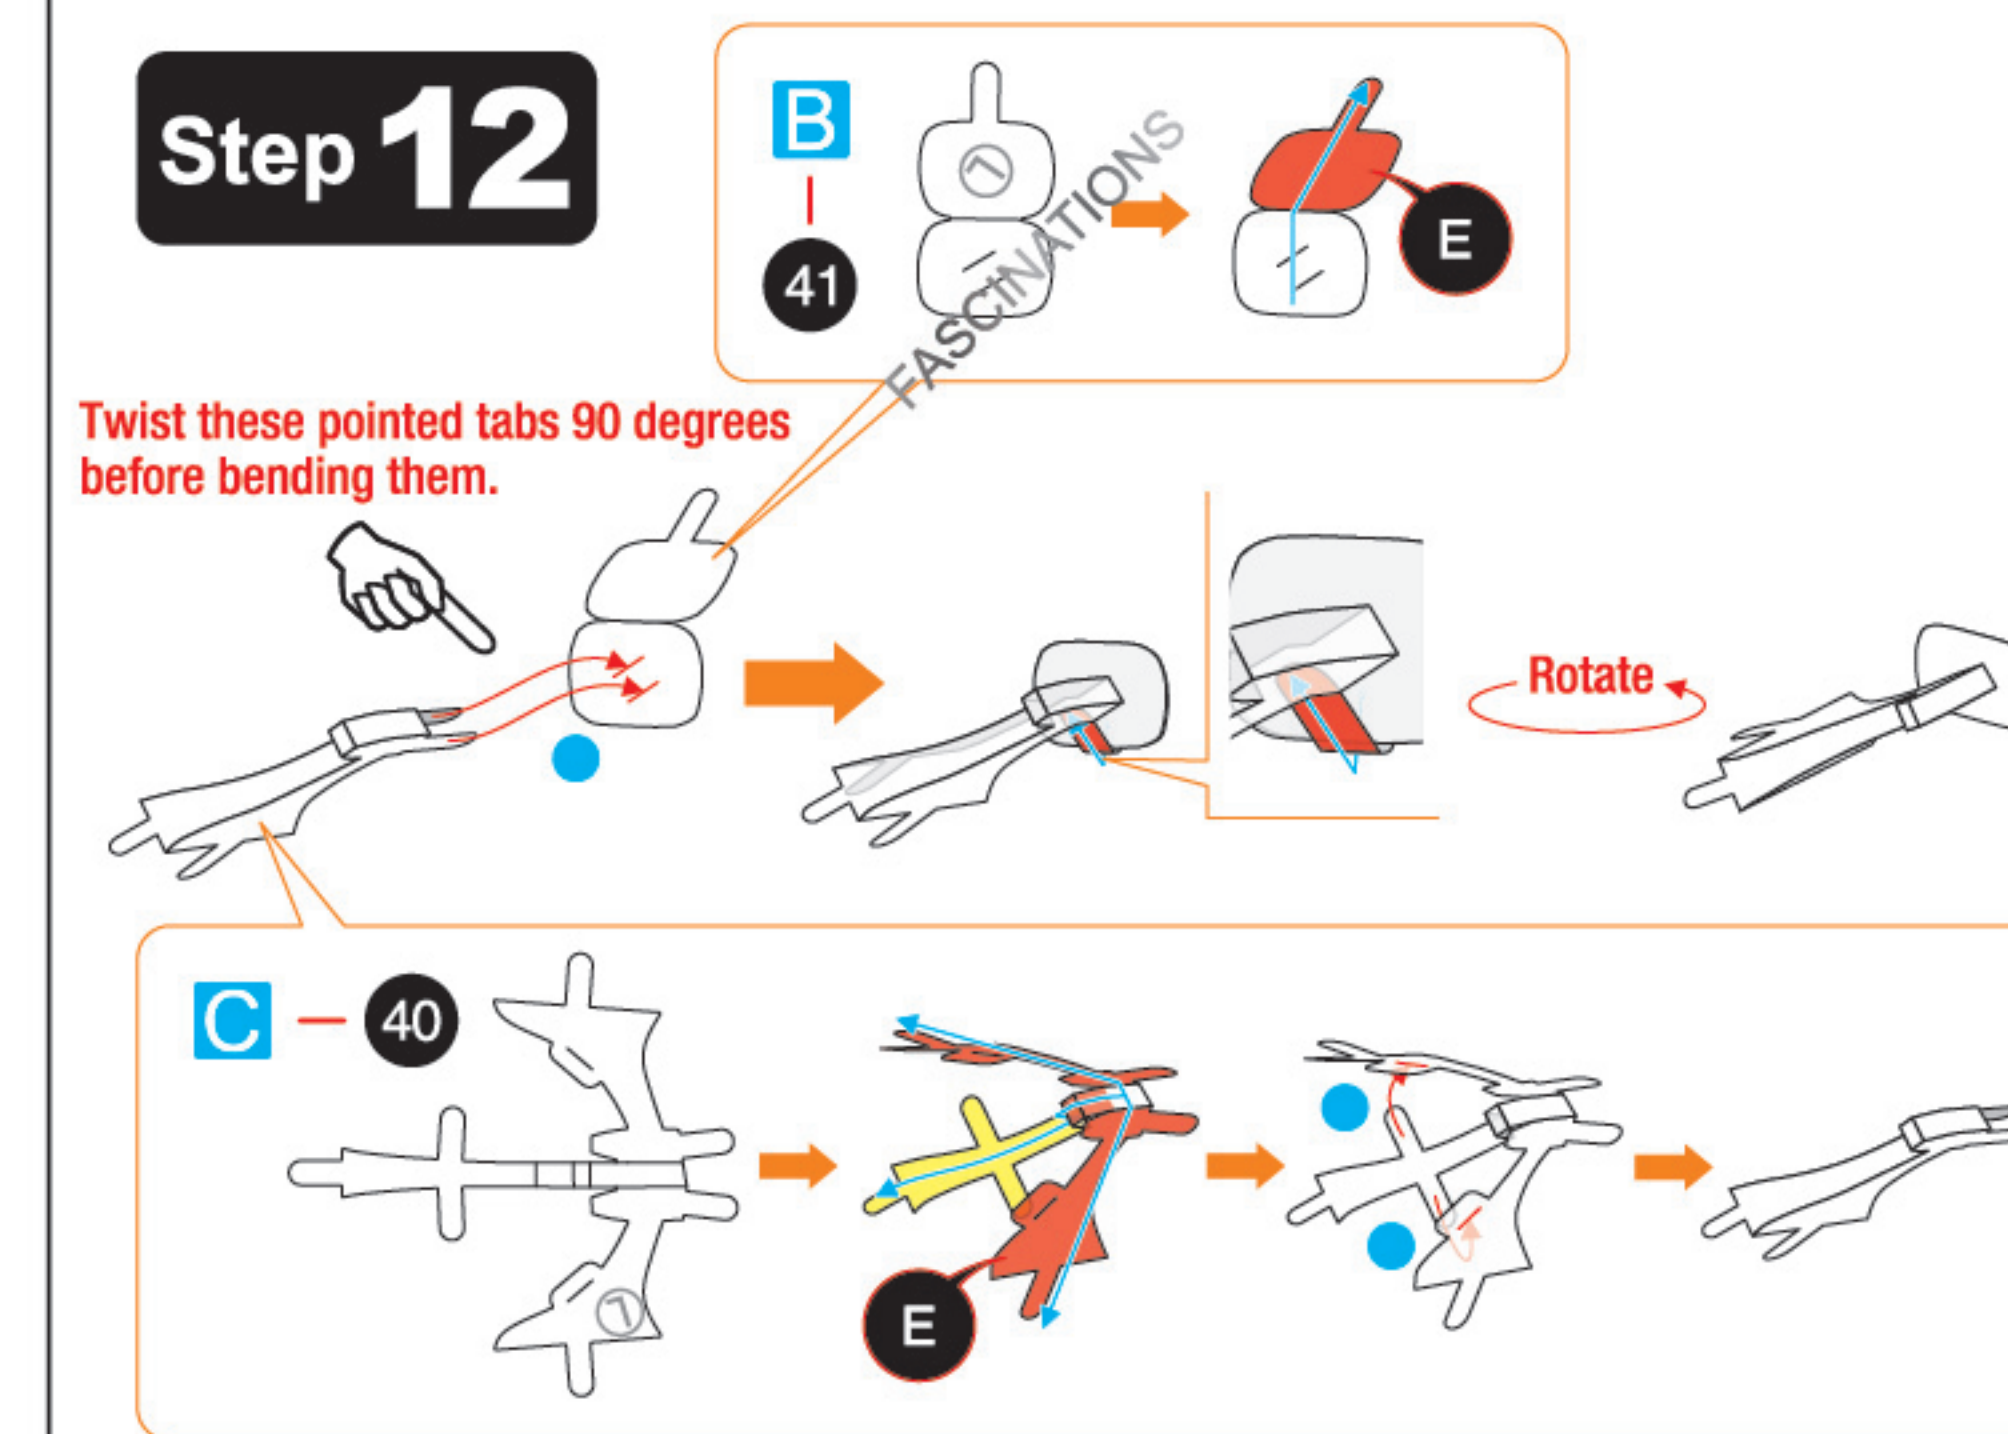


Step 13

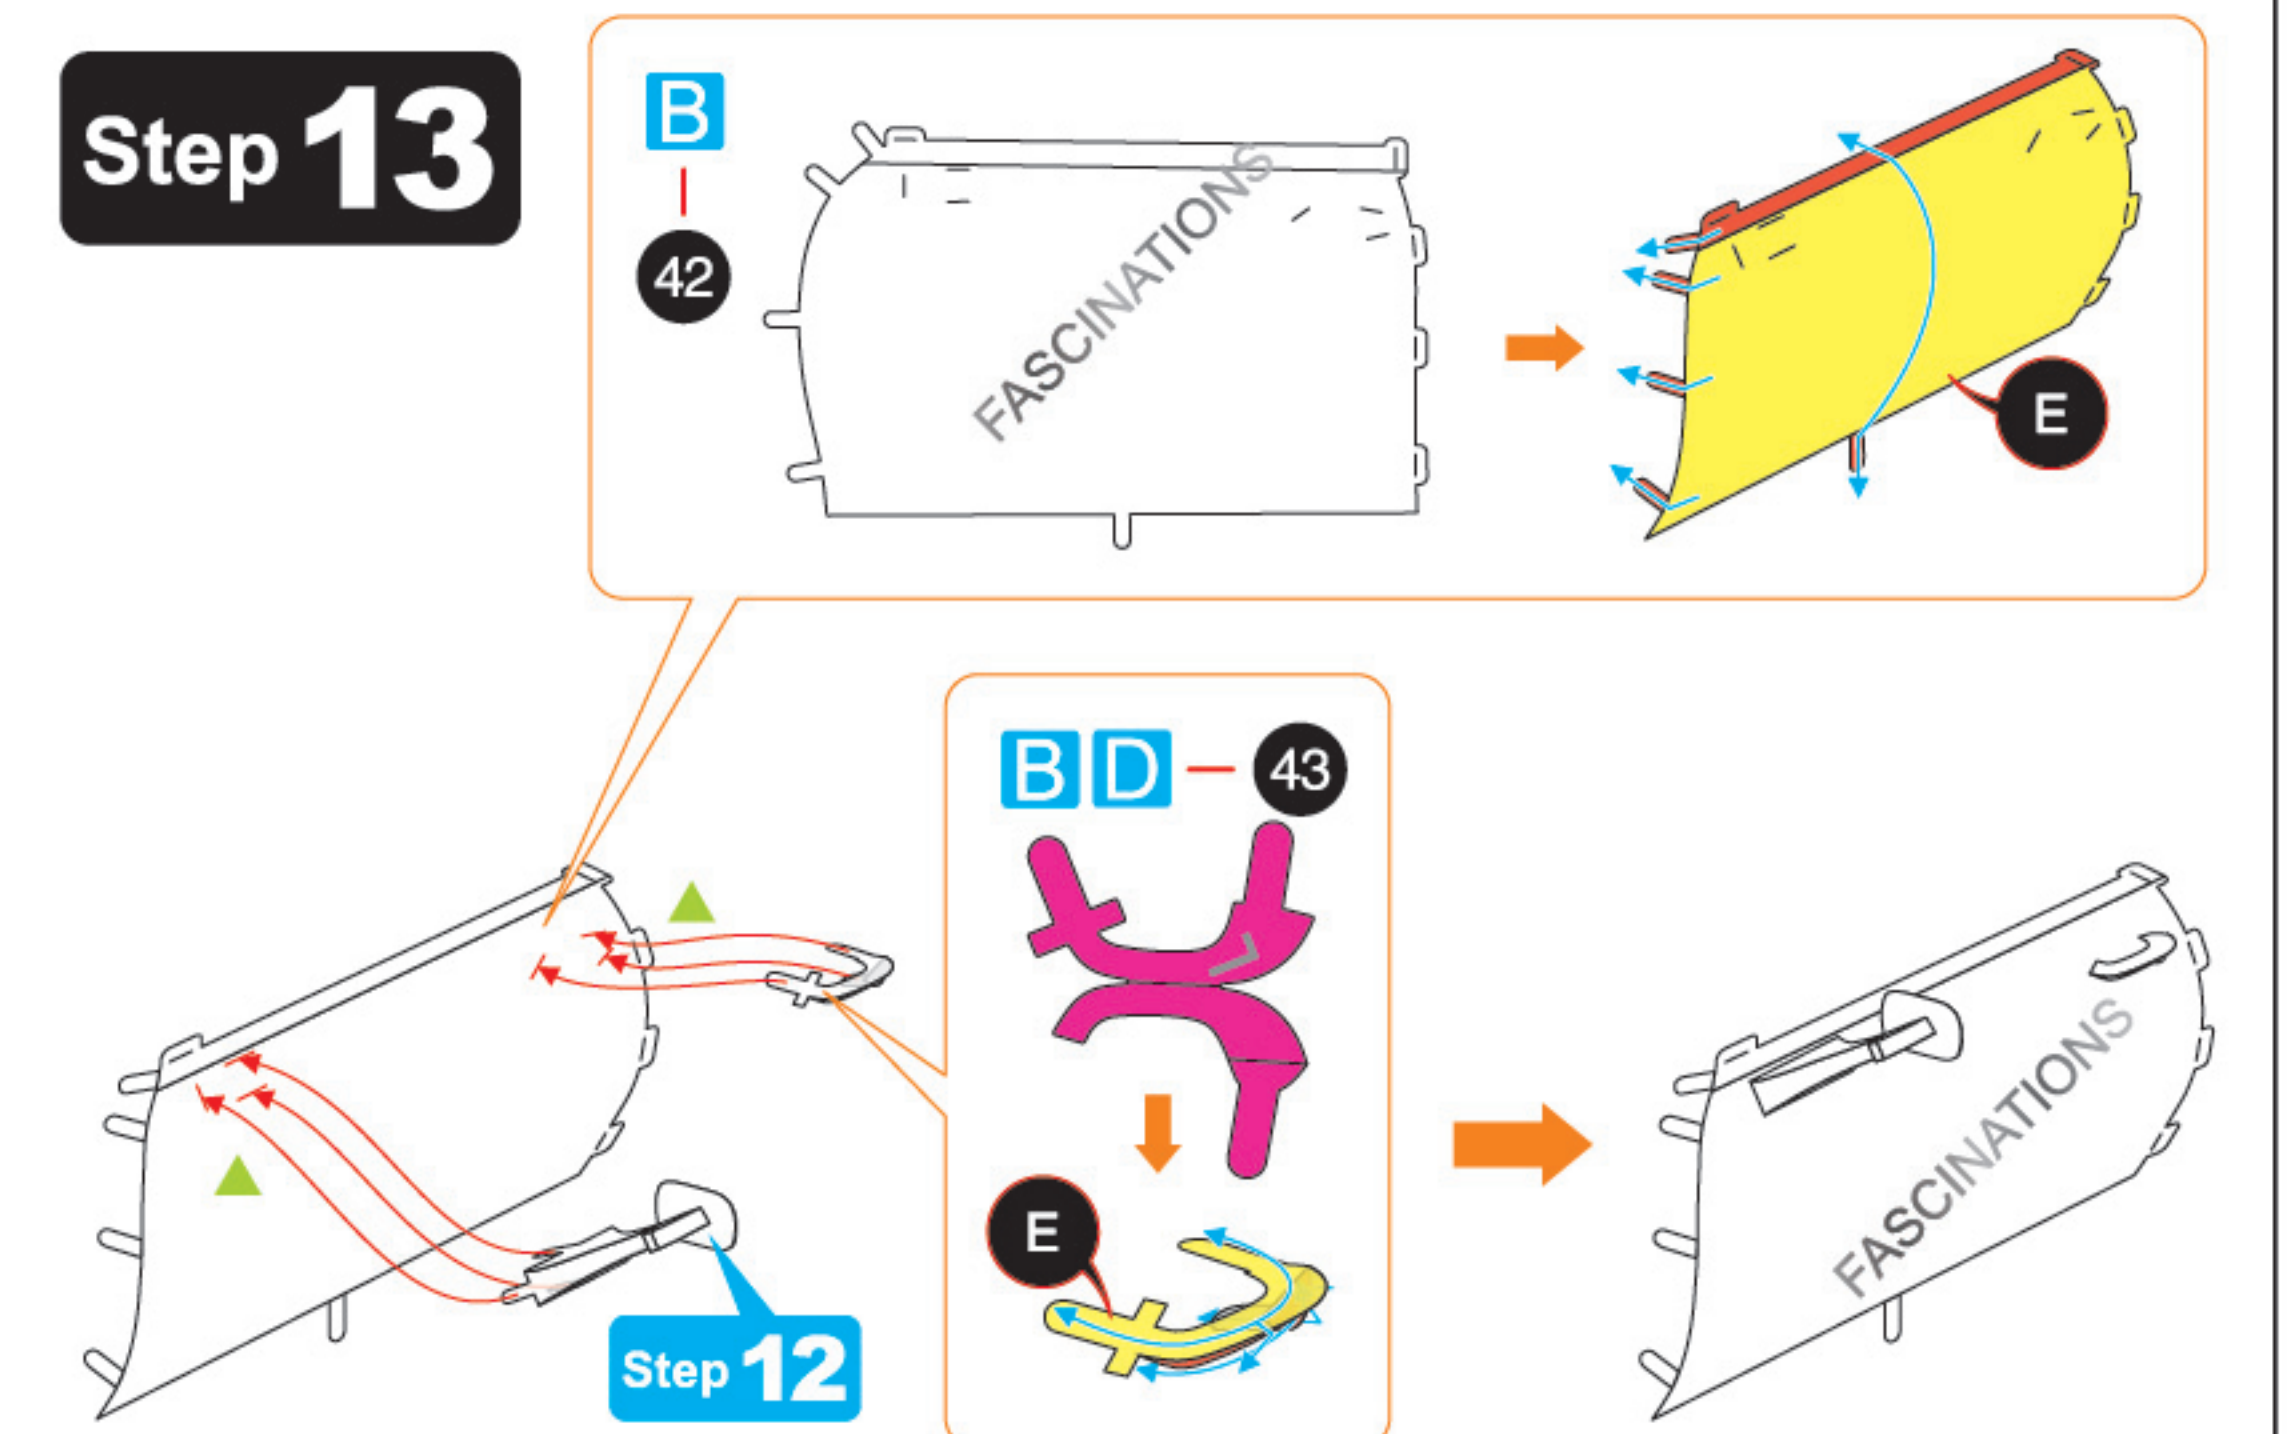


Step 14

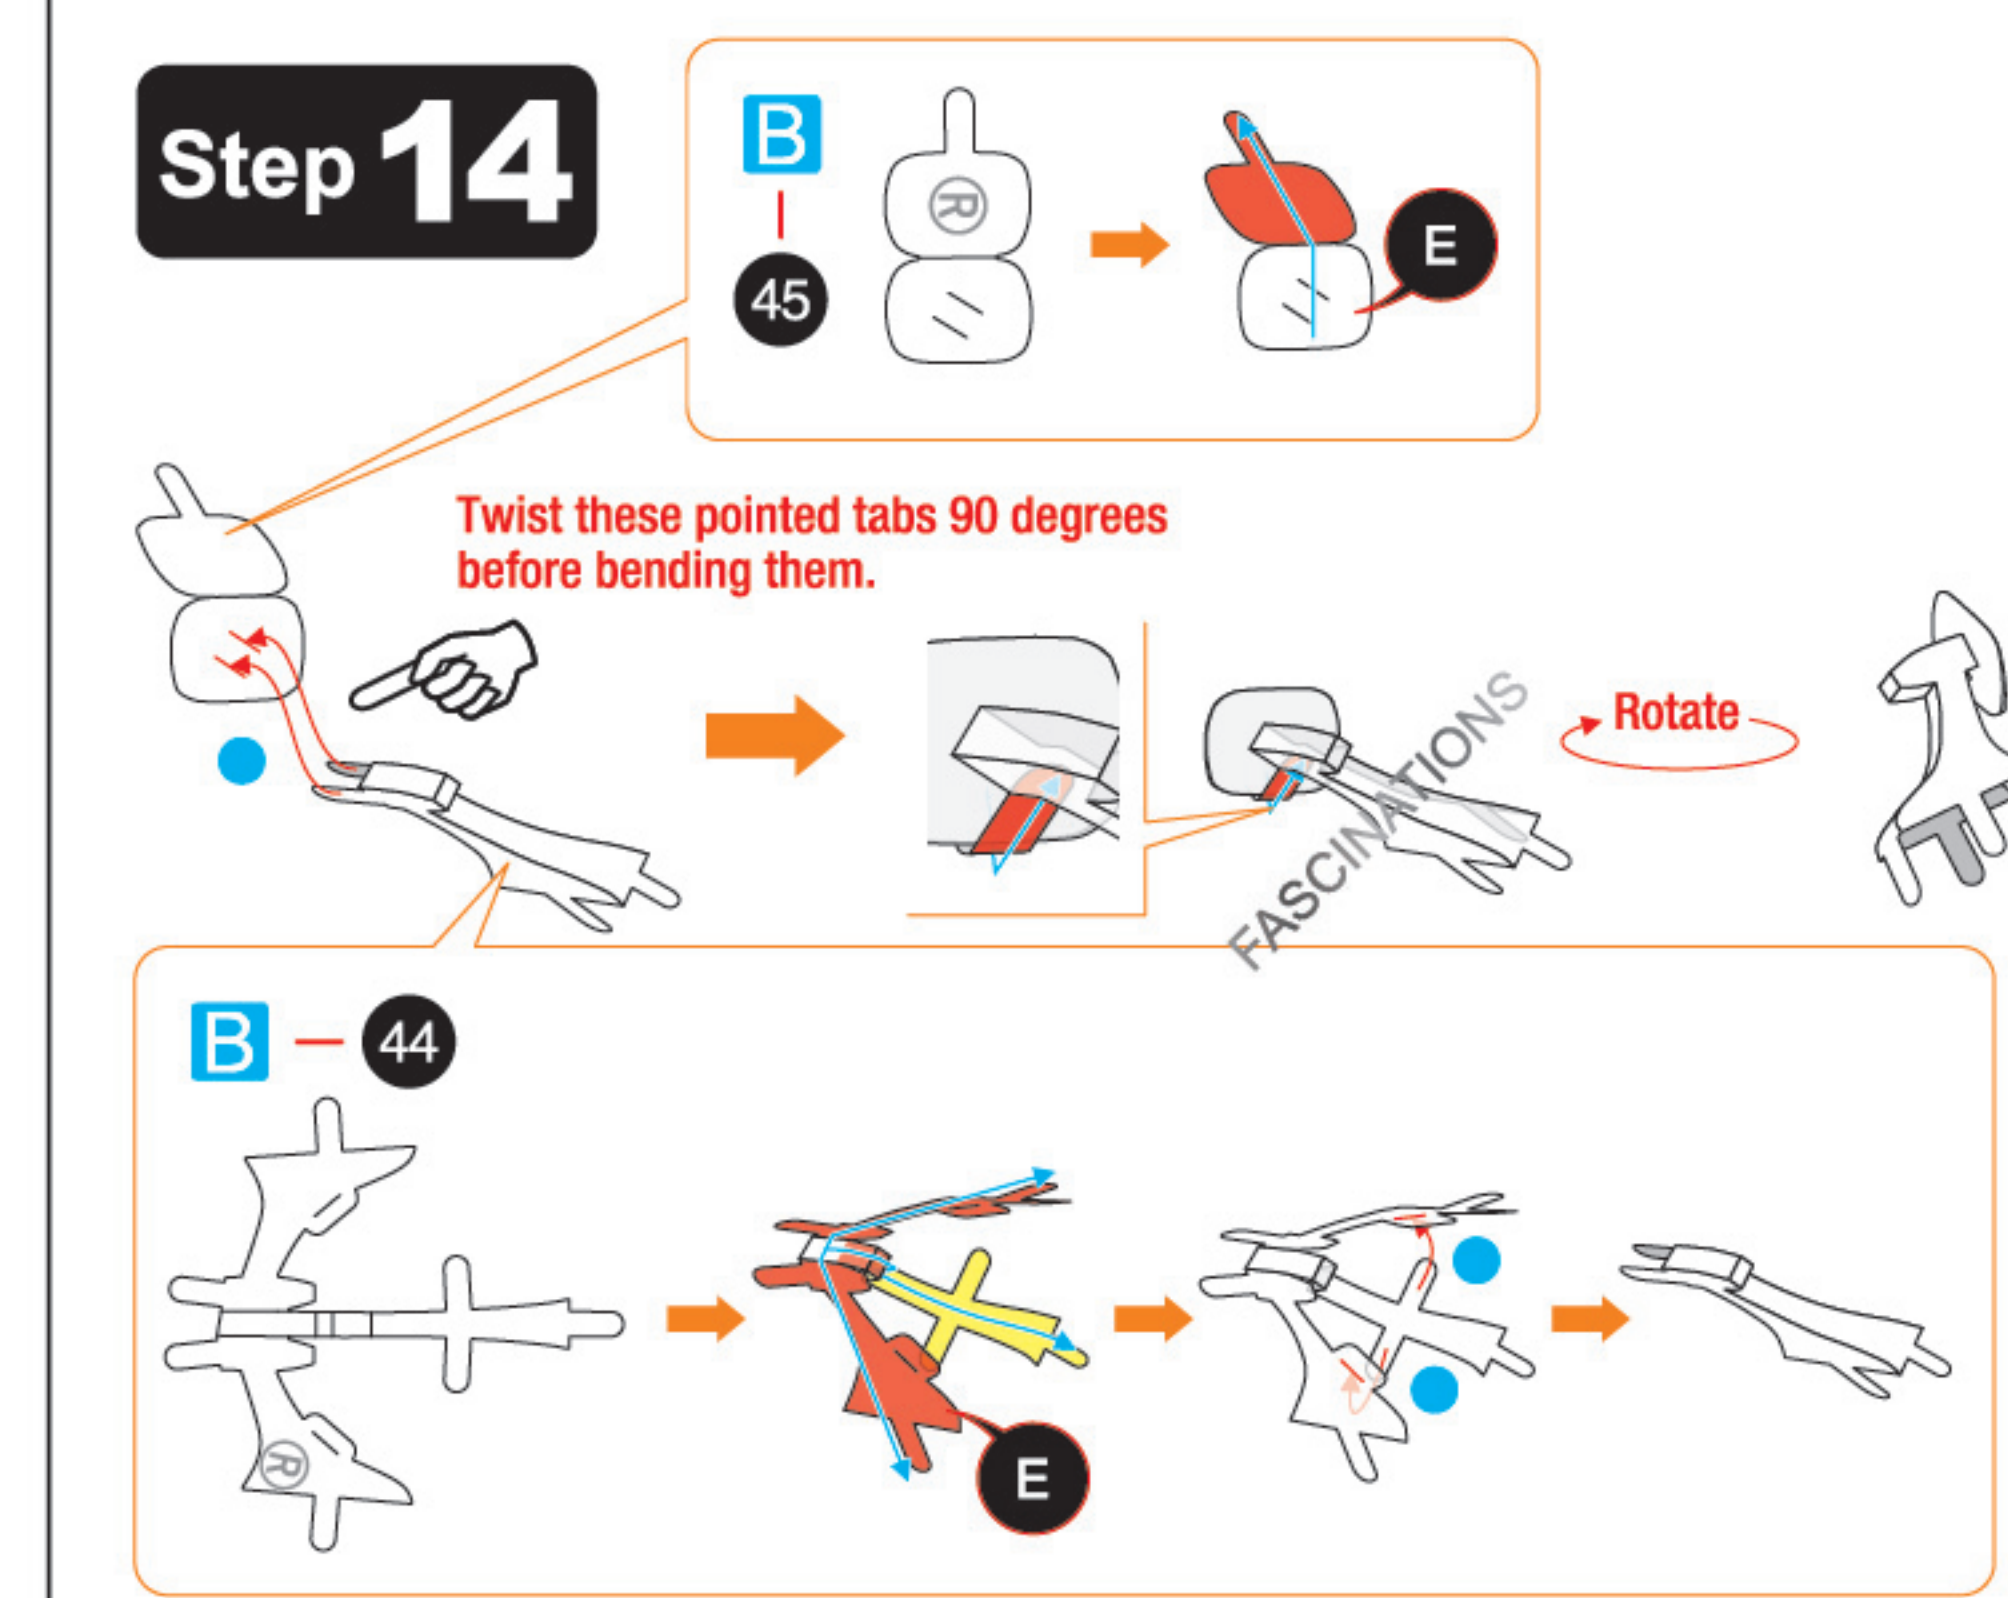


Step 15

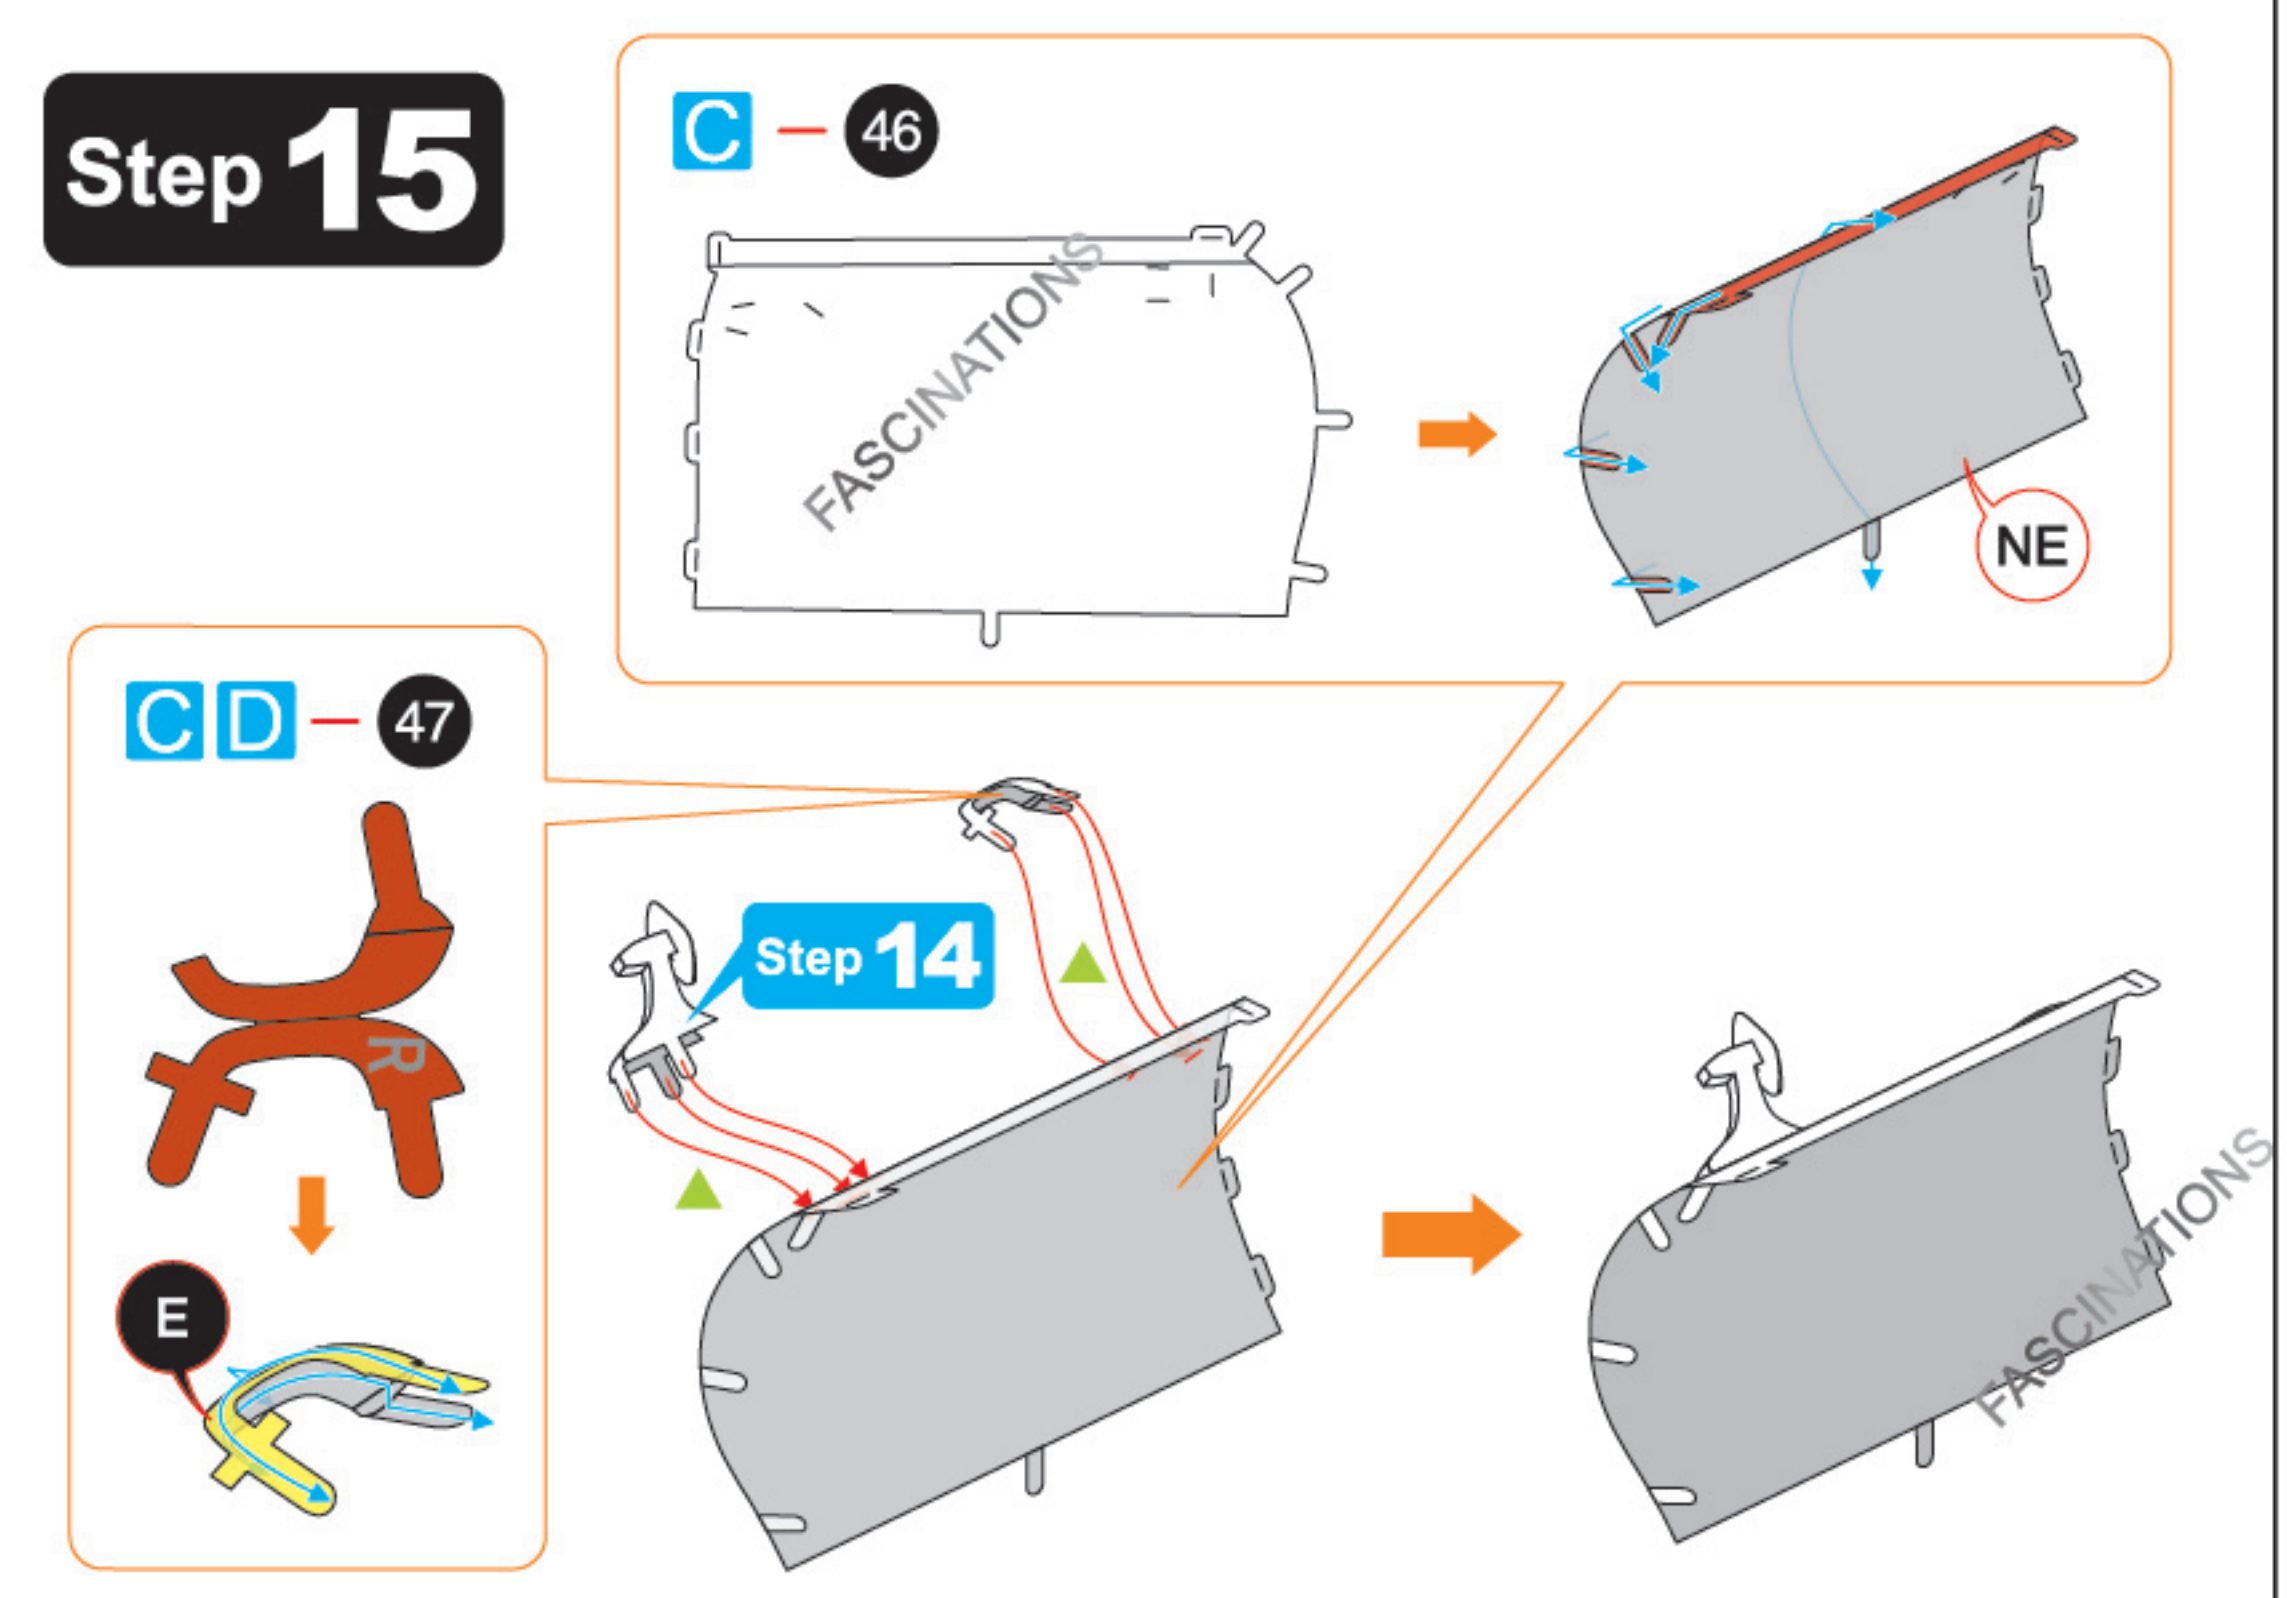


Step 16

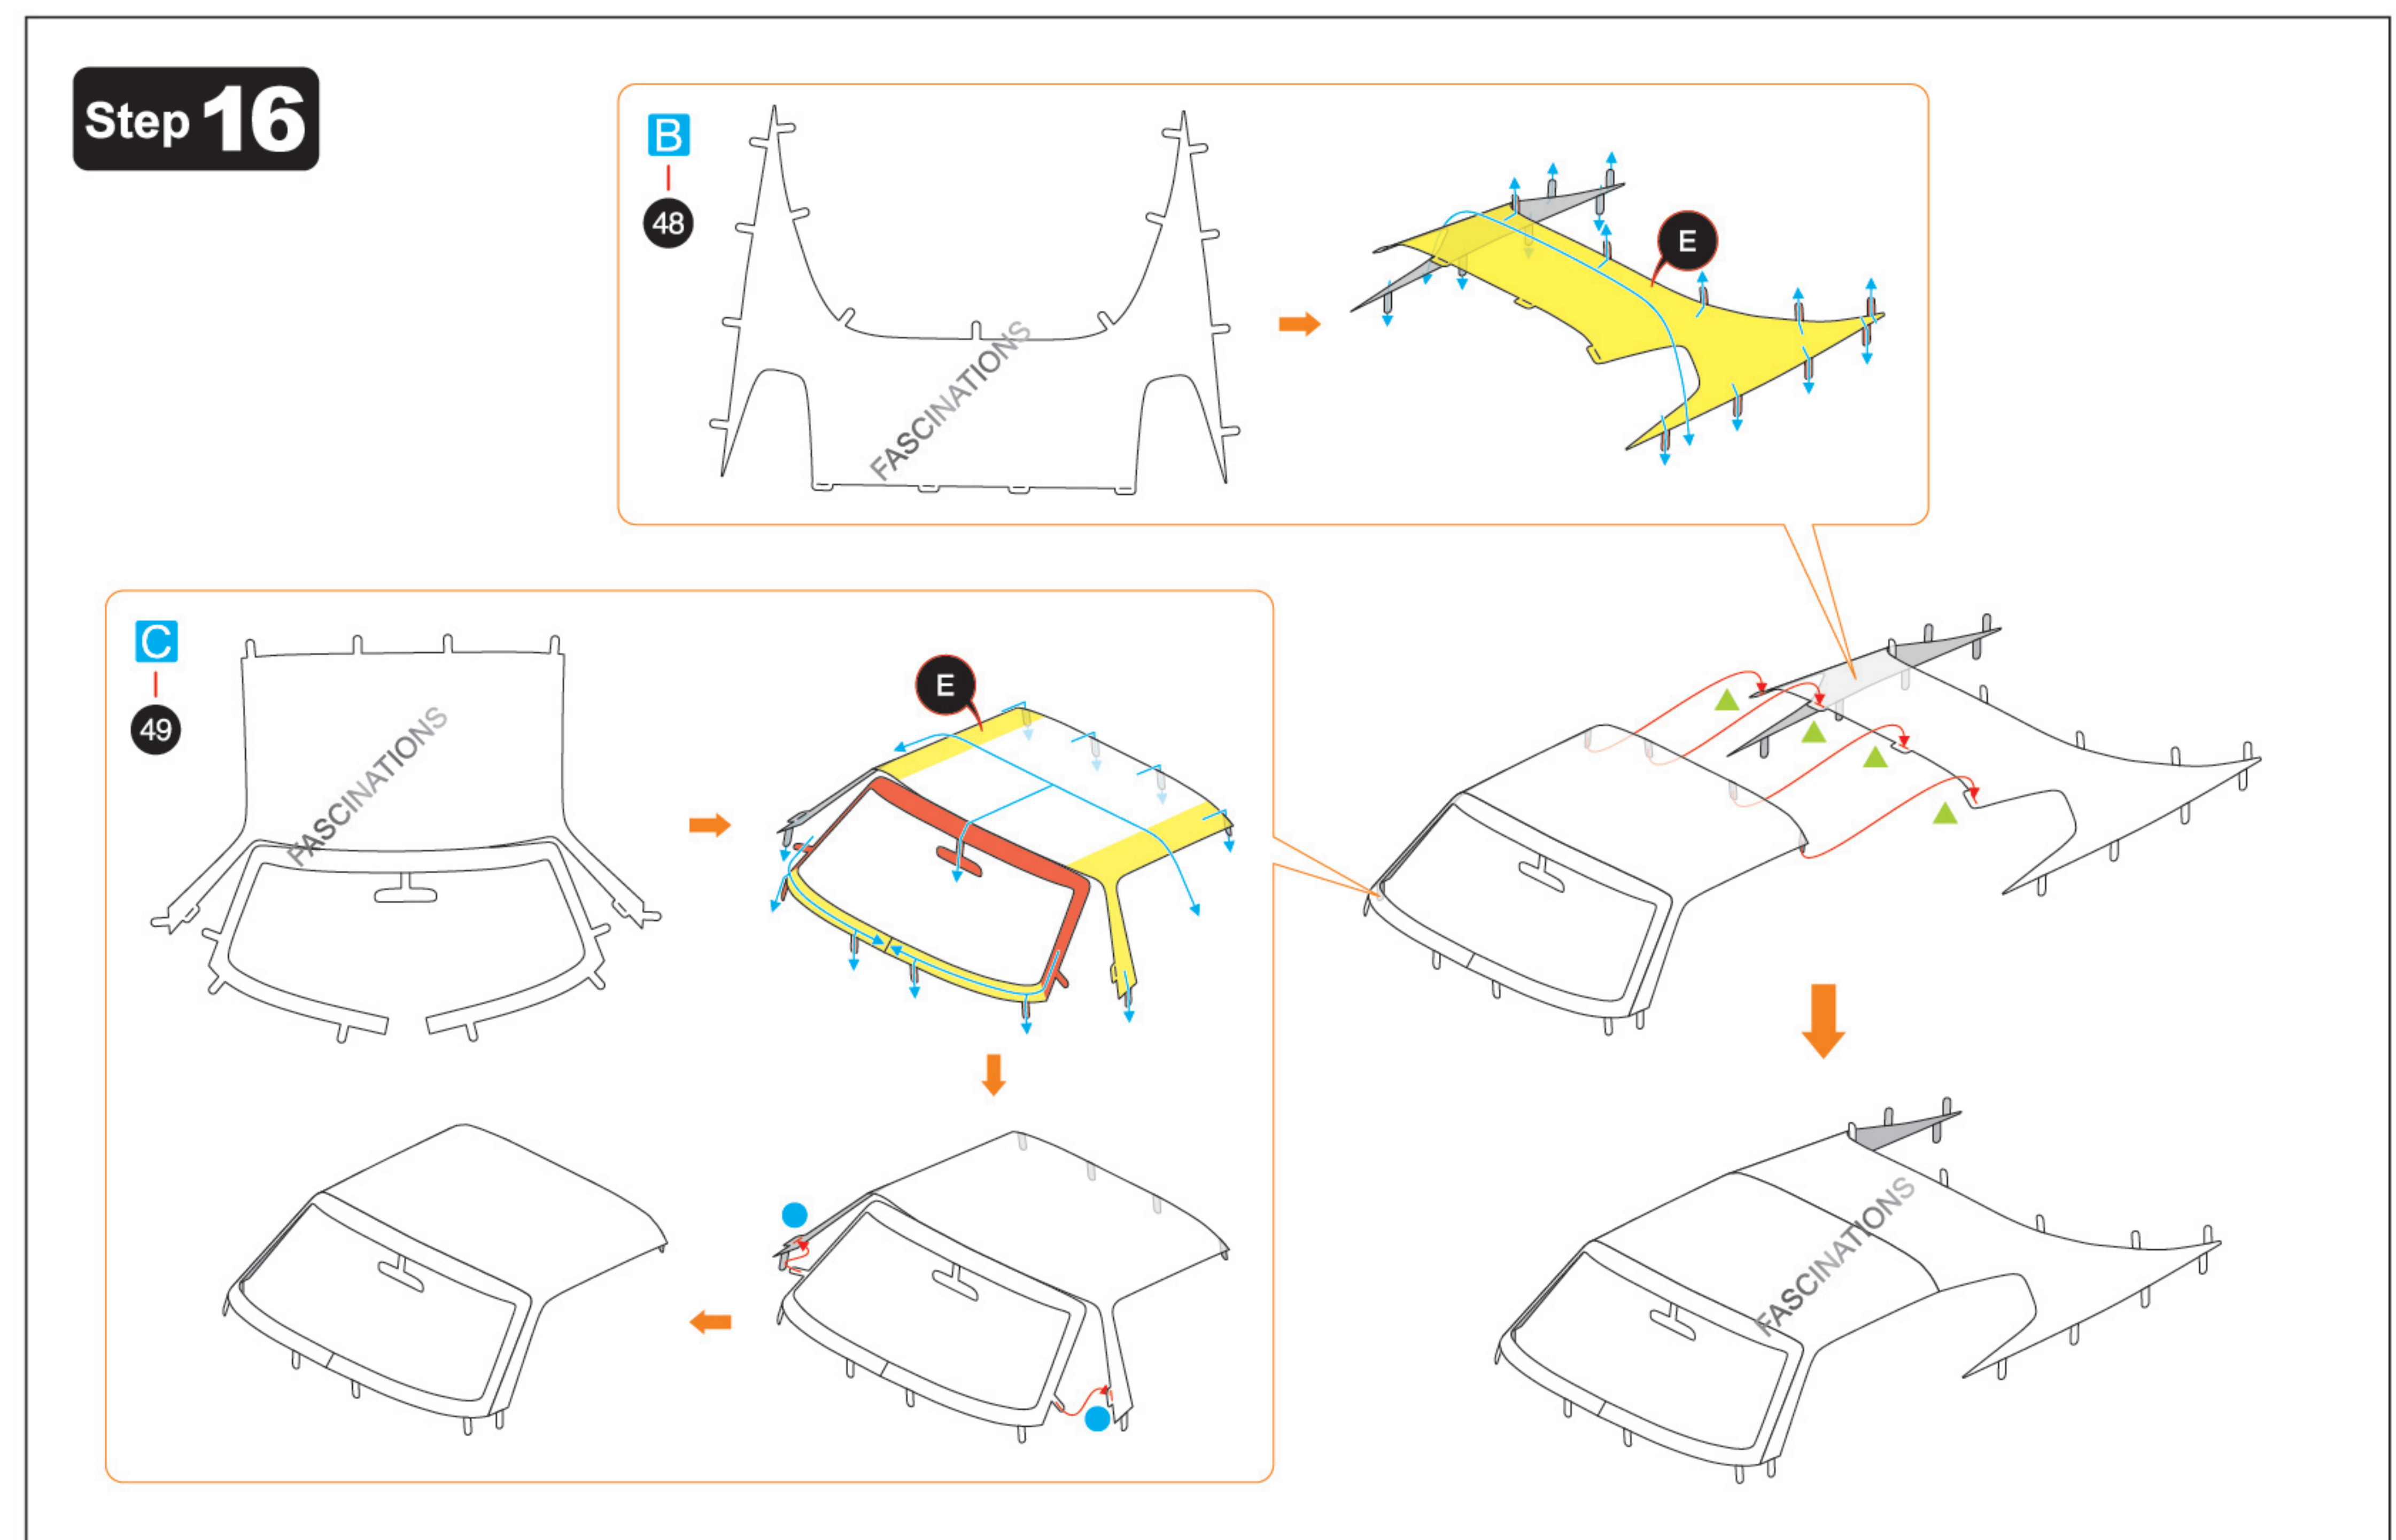


Step 17

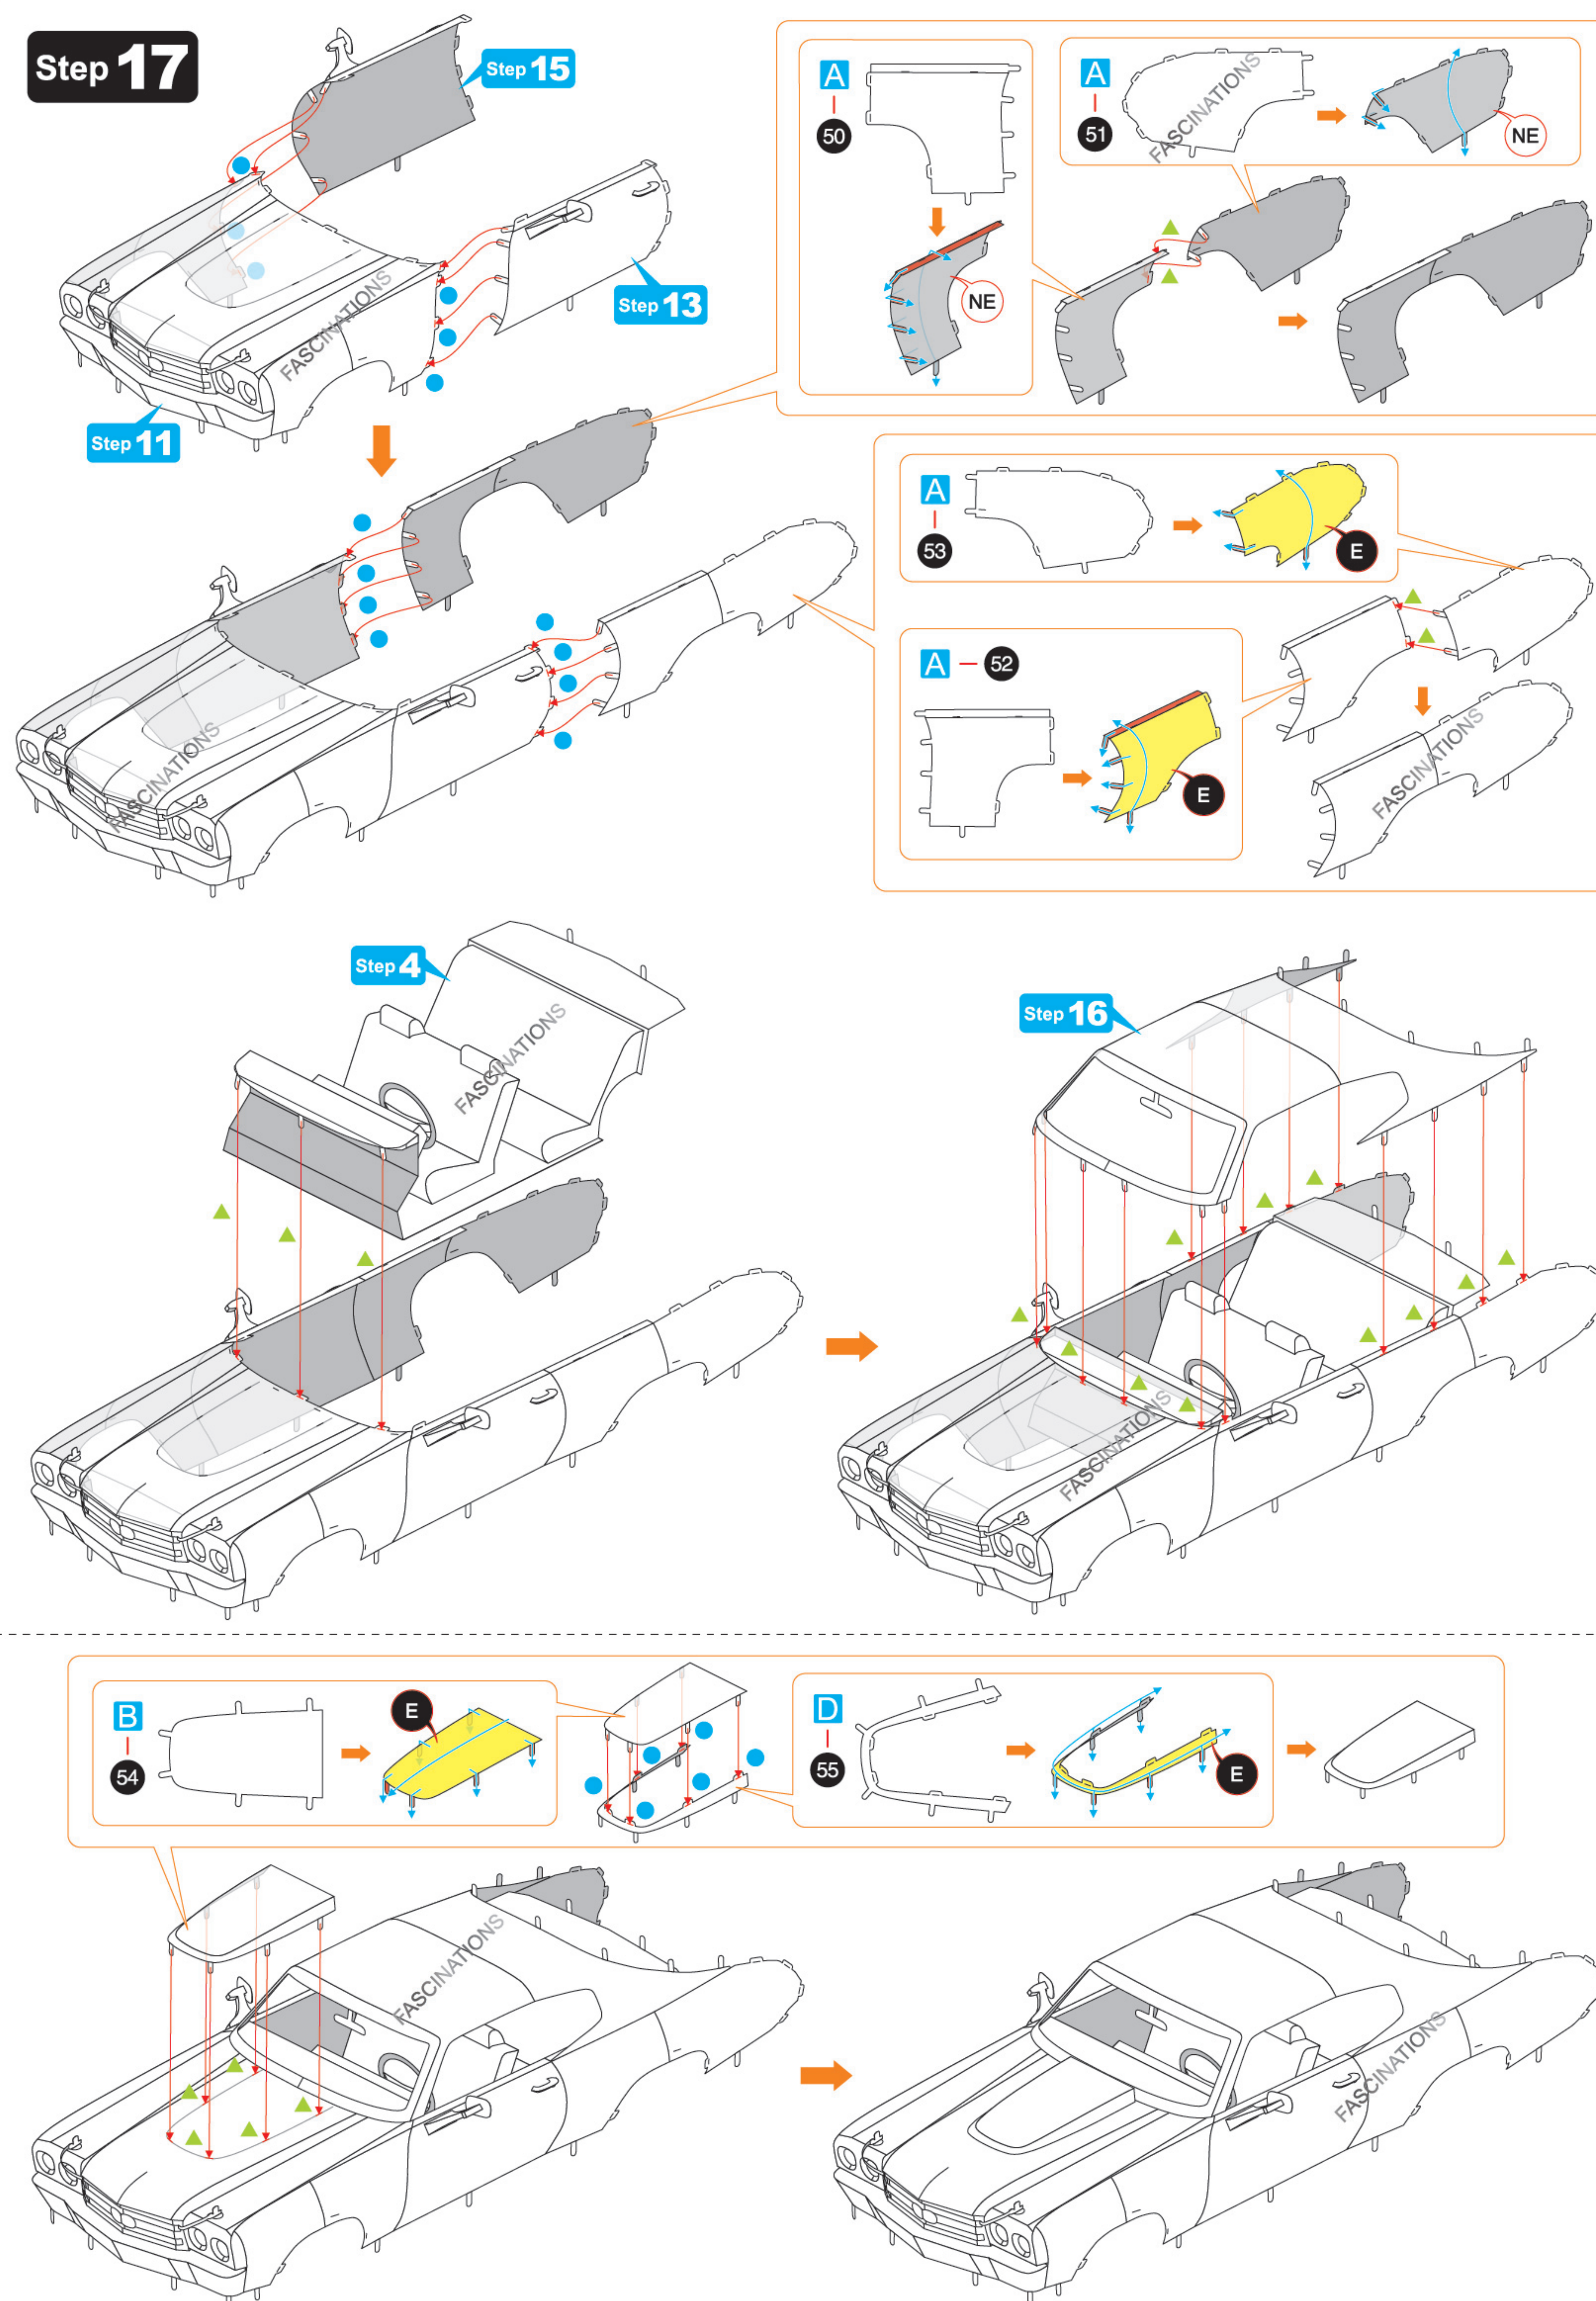


Step 18

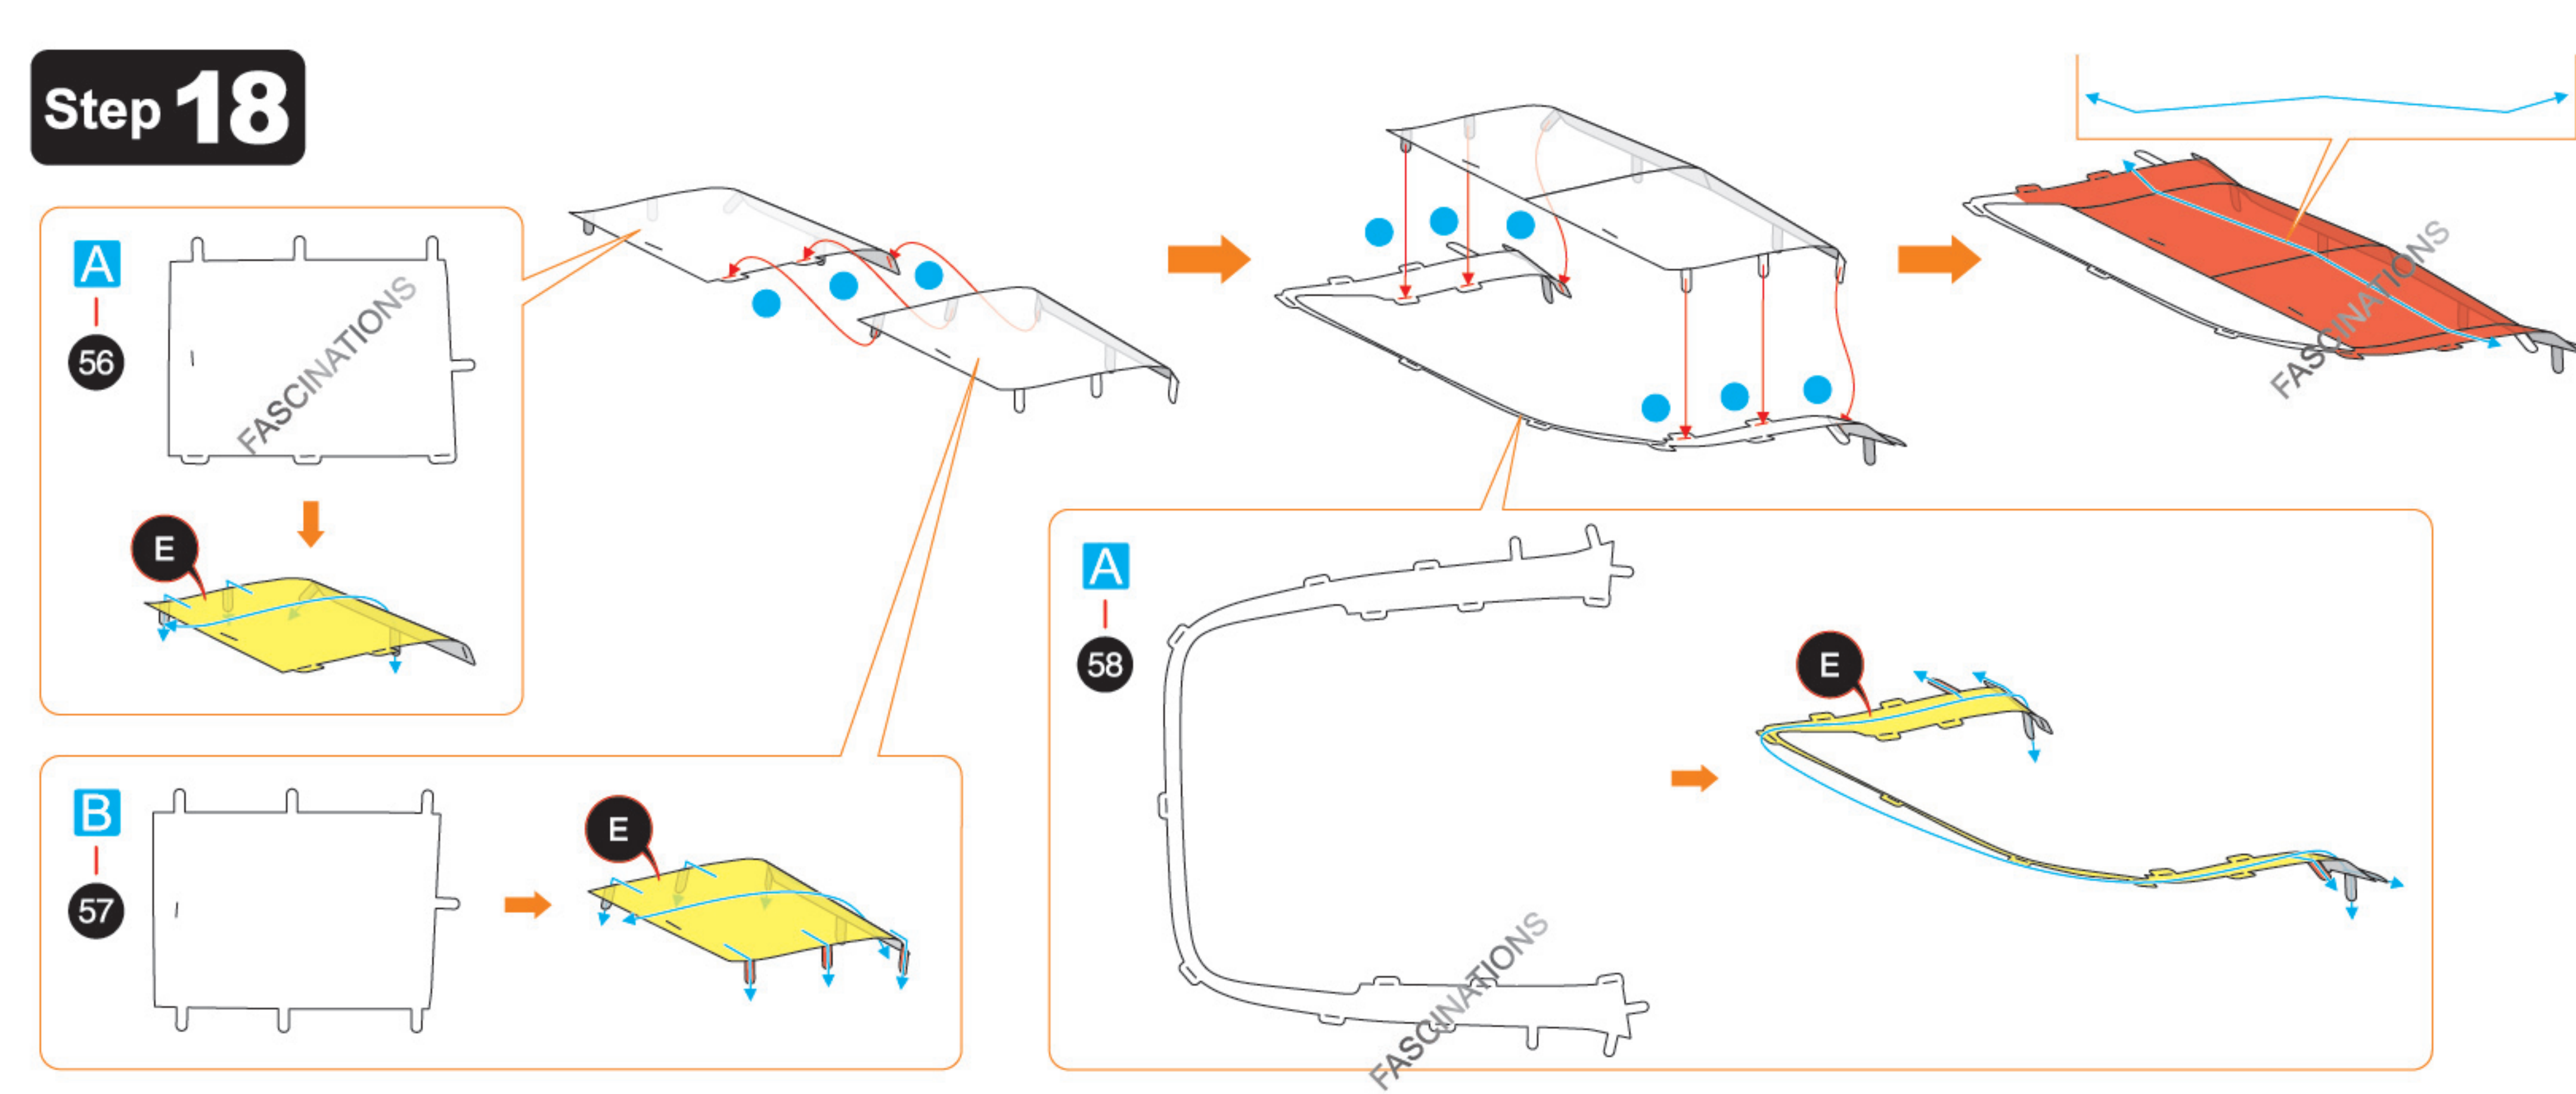


Step 19

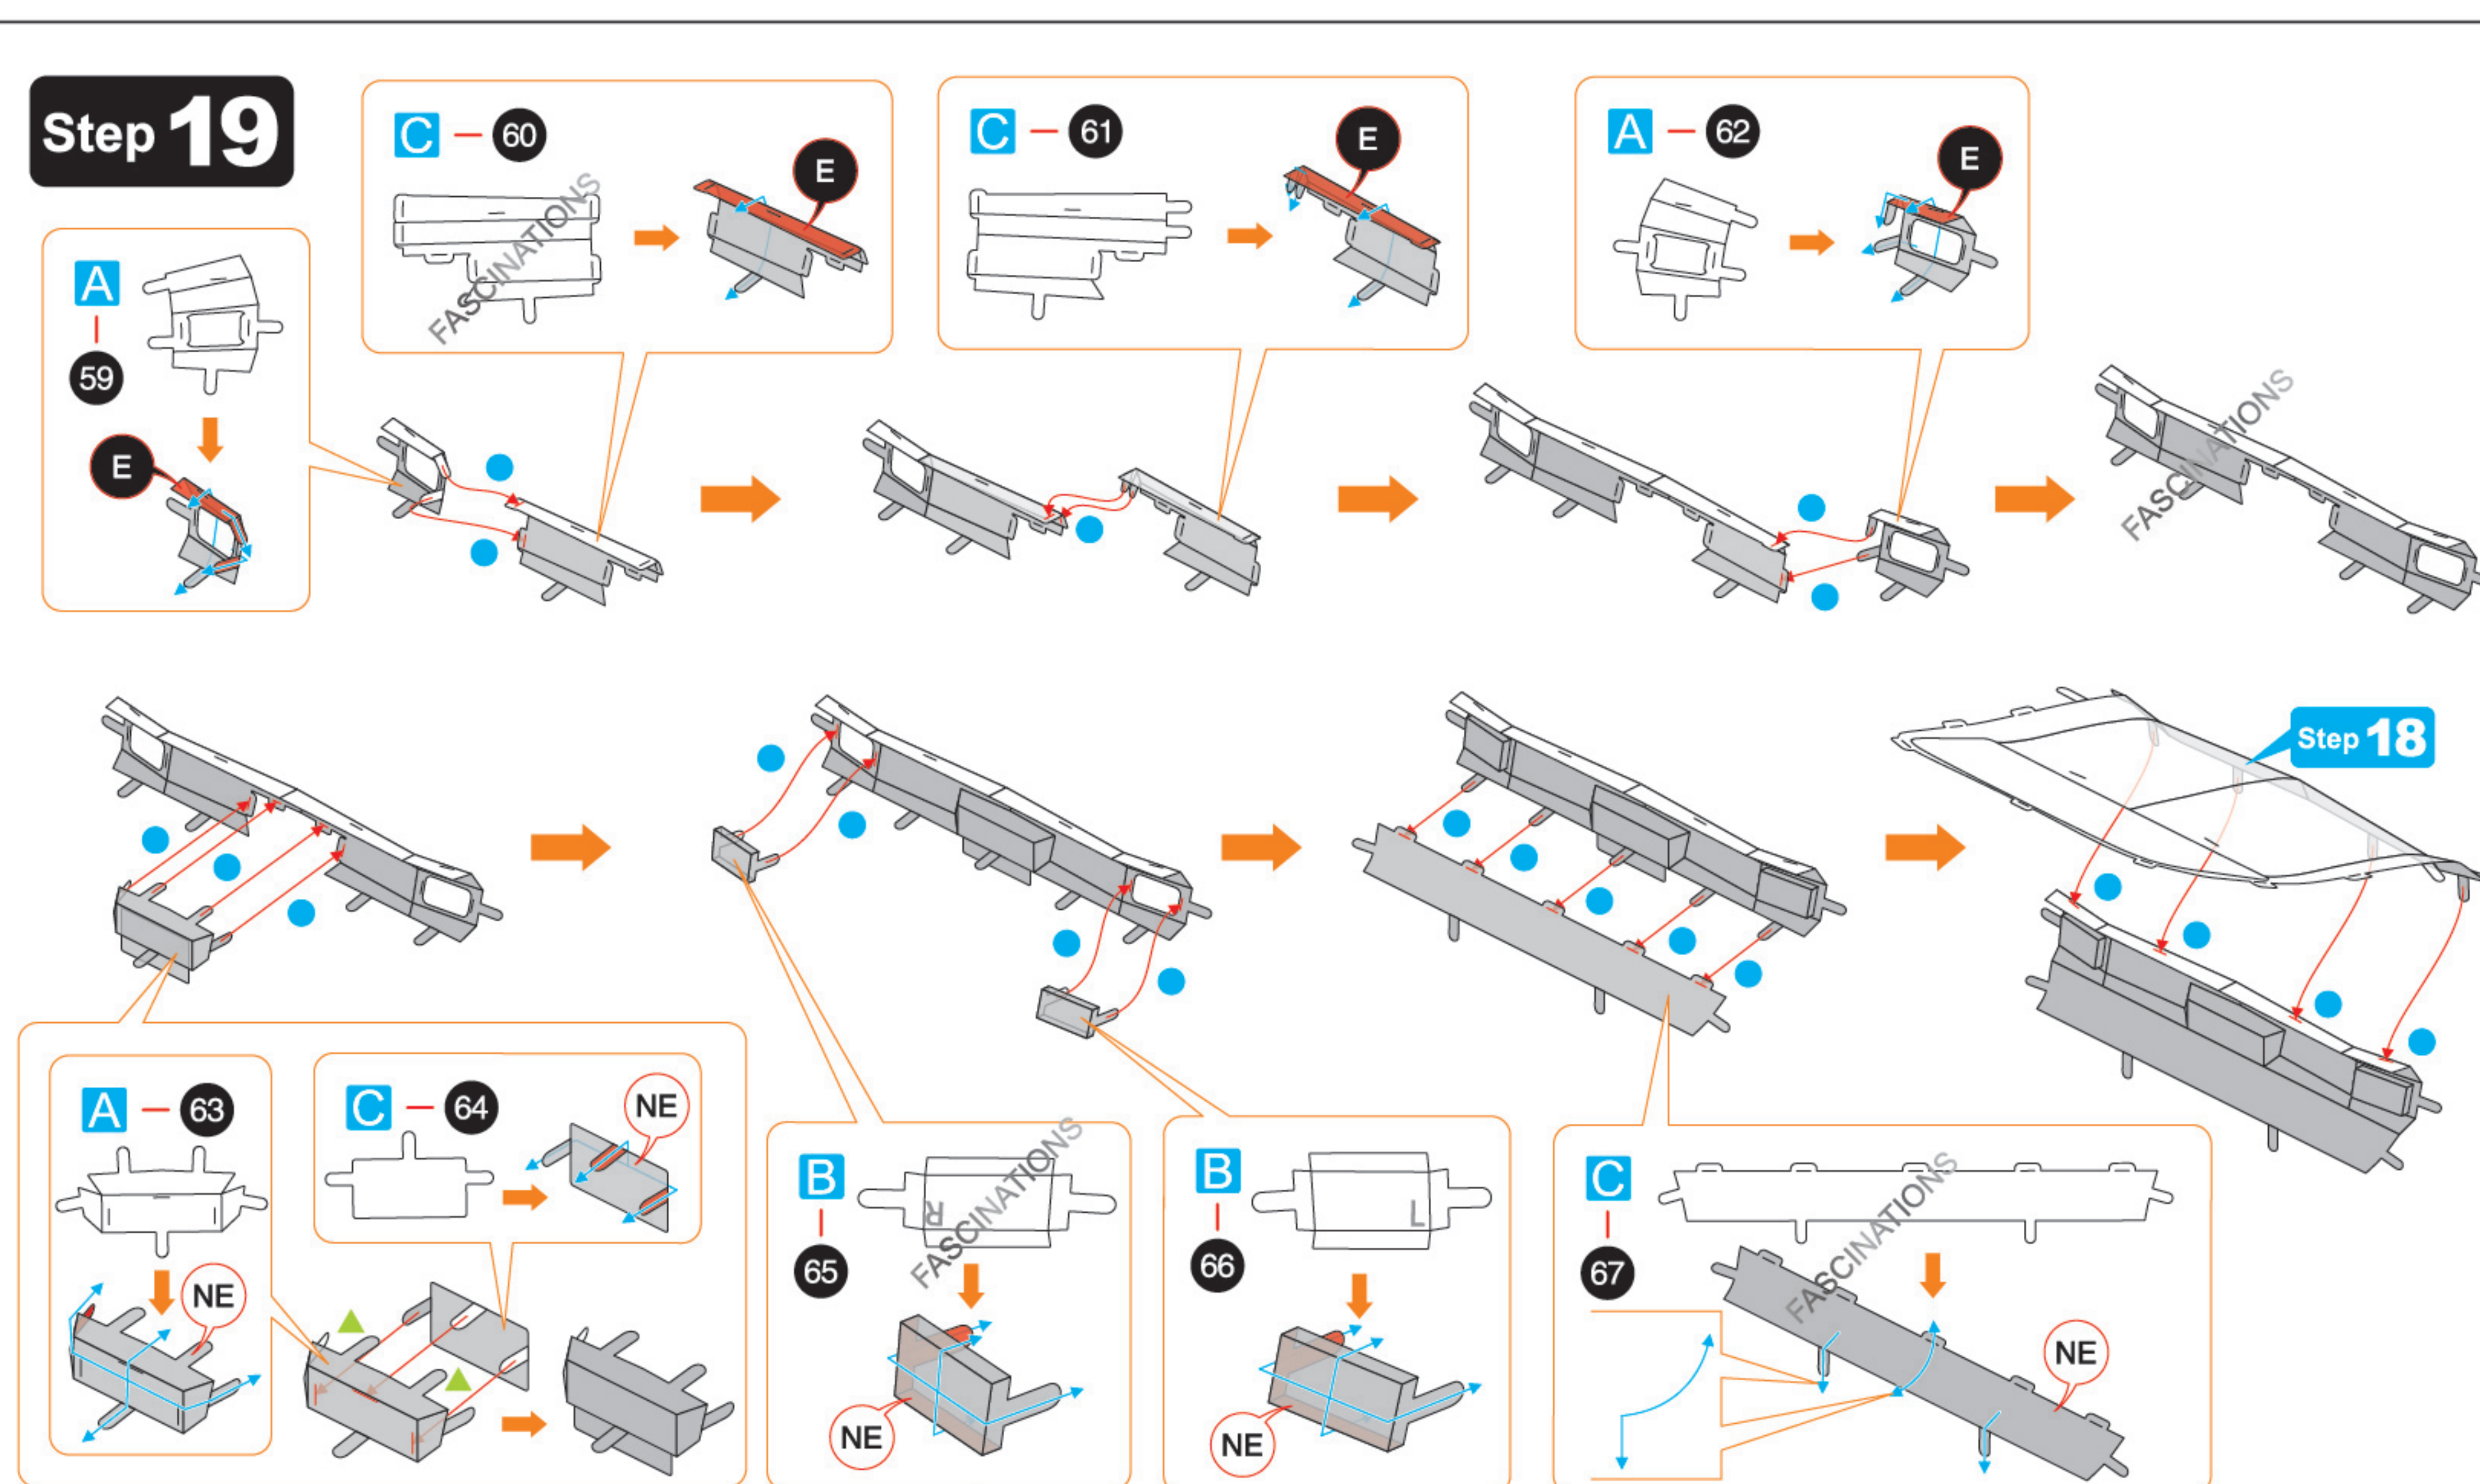


Step 17

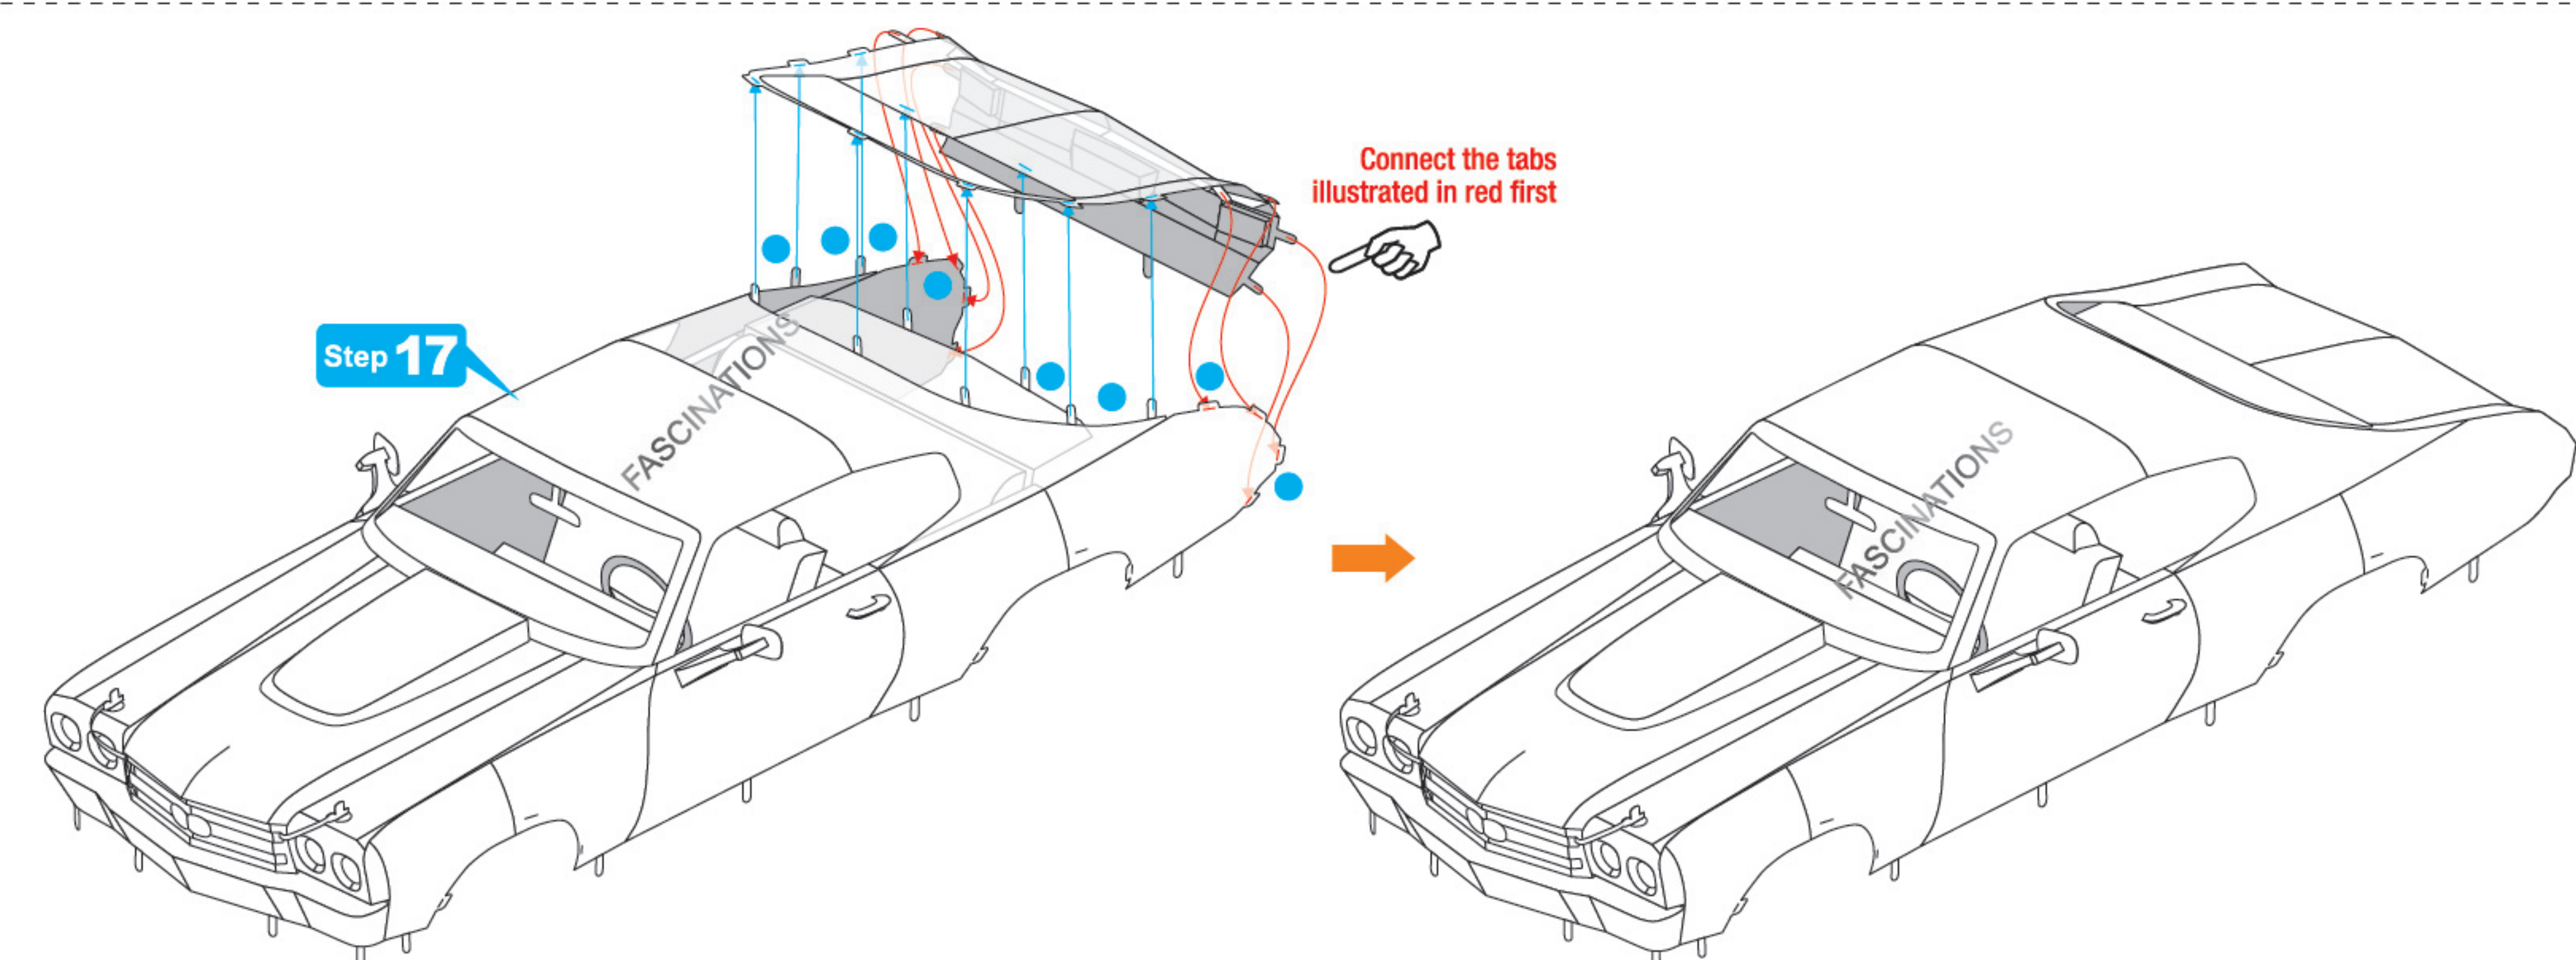


Step 20

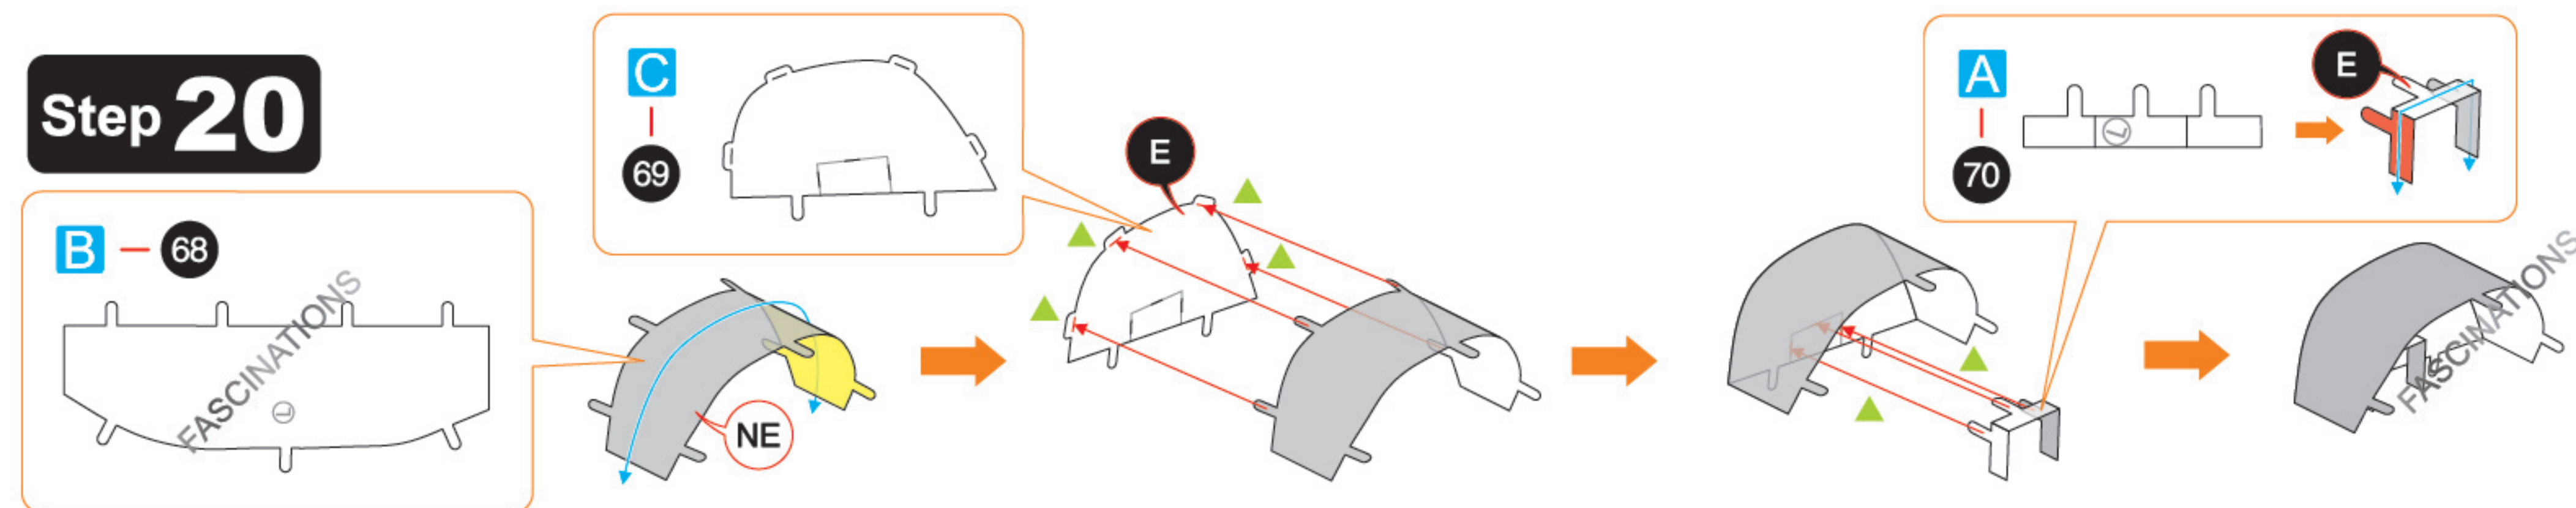


Step 21

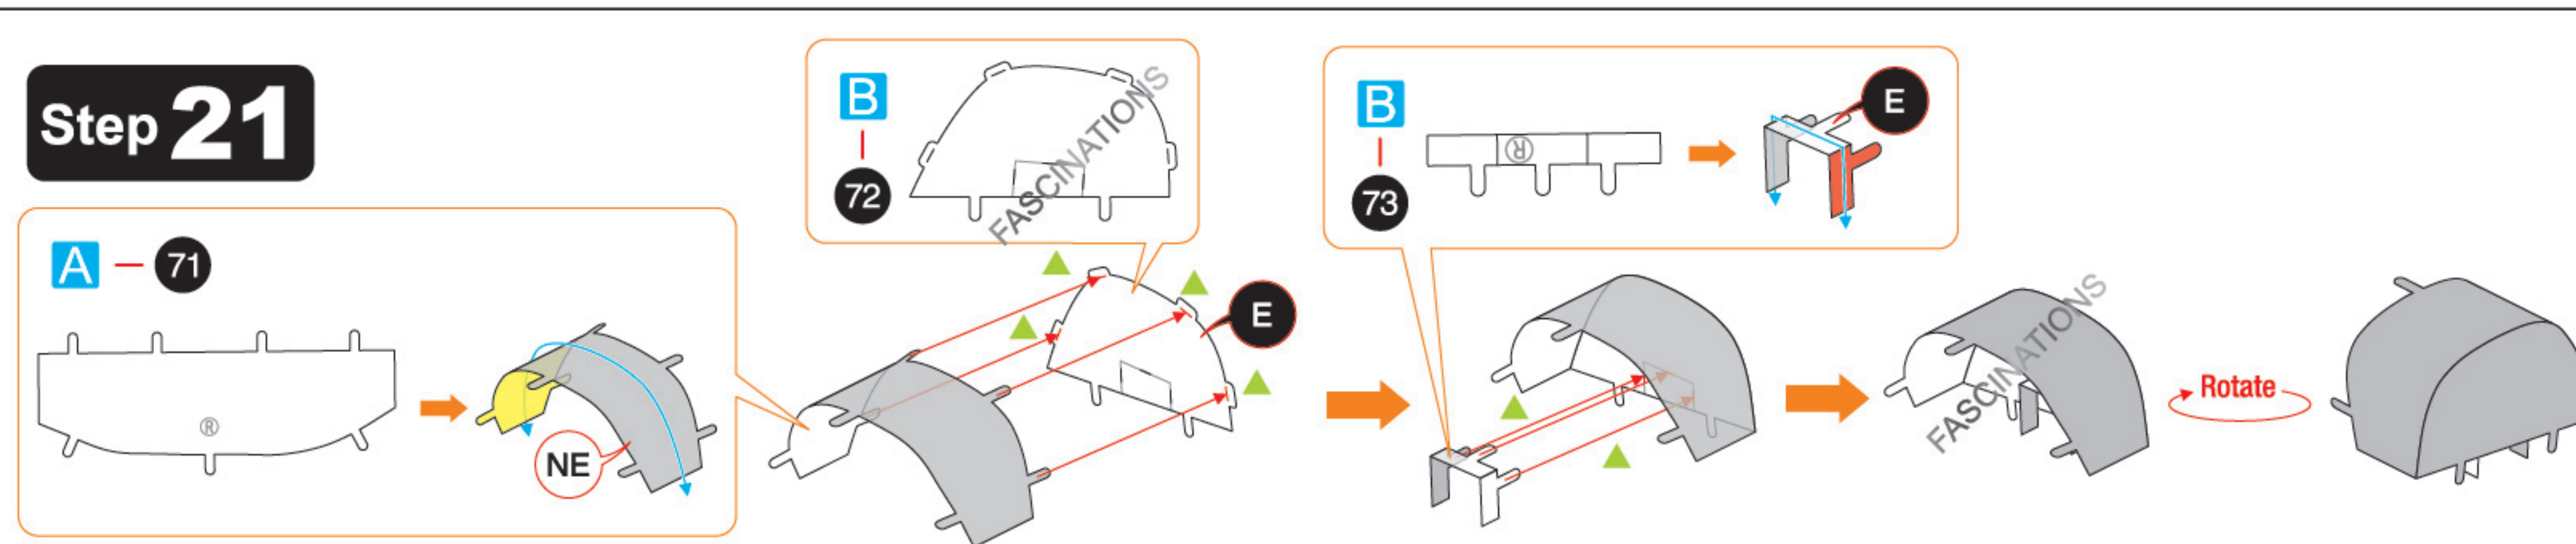


Step 22

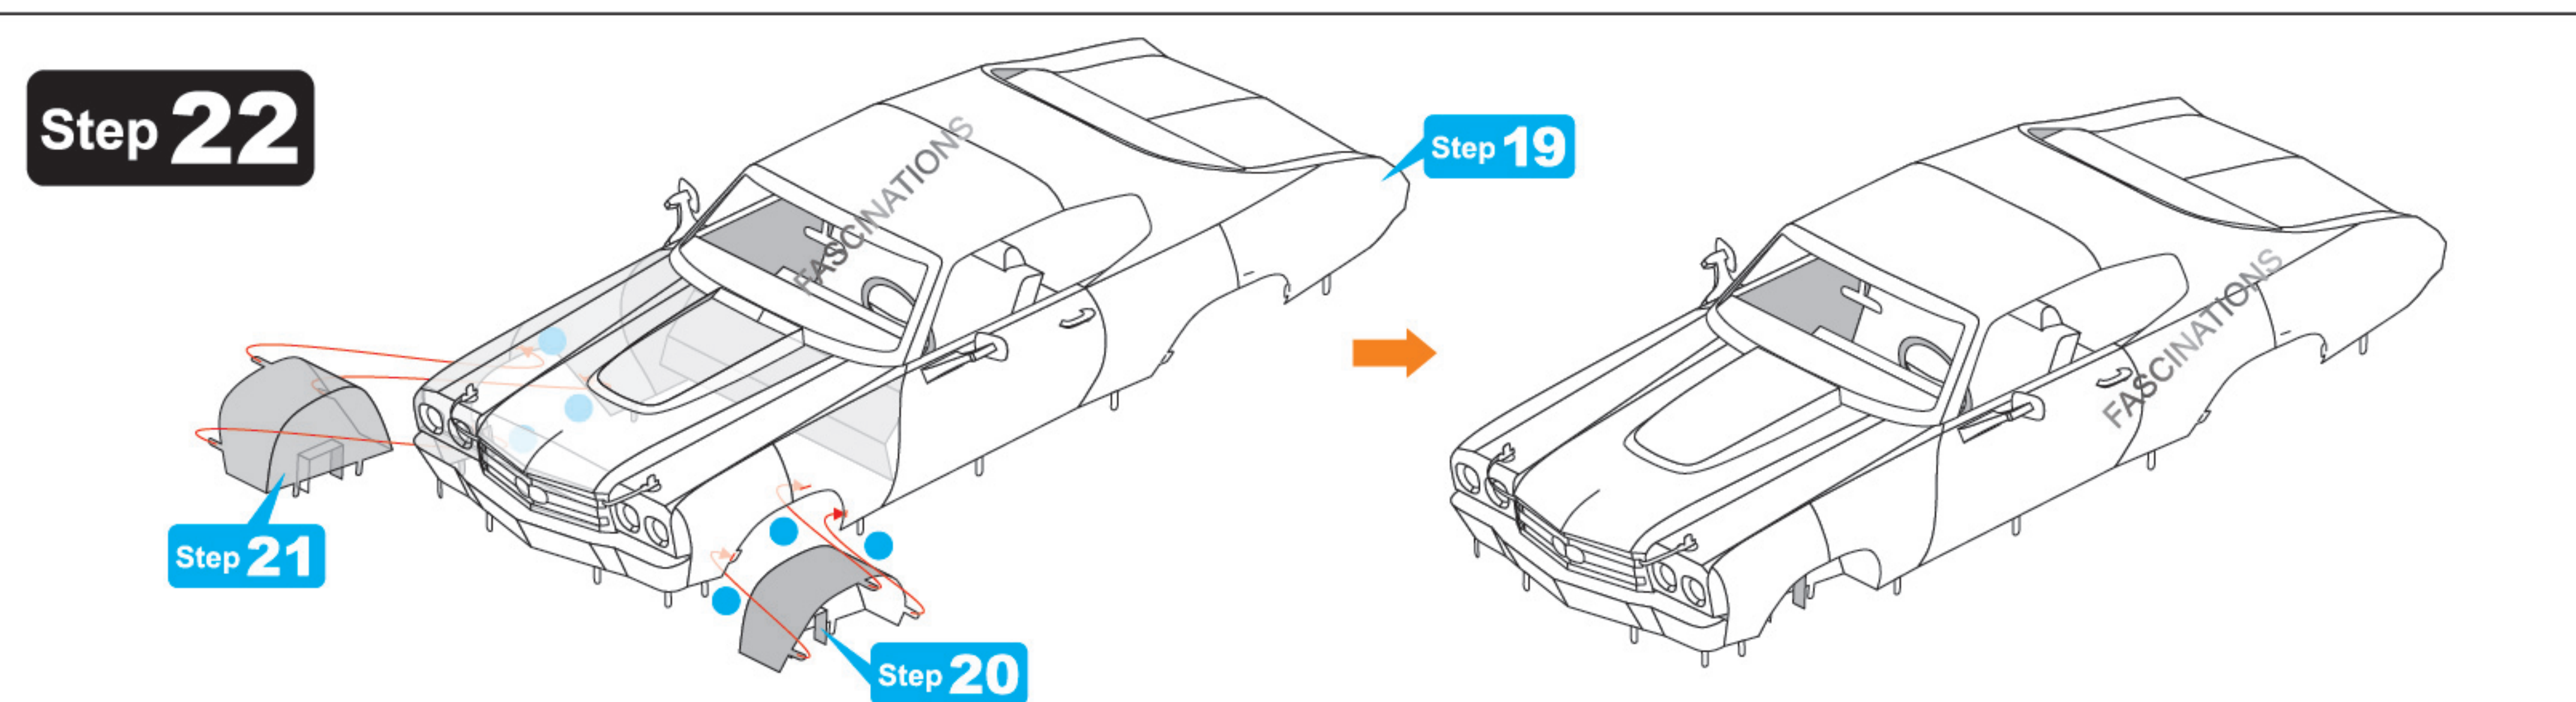


Step 23

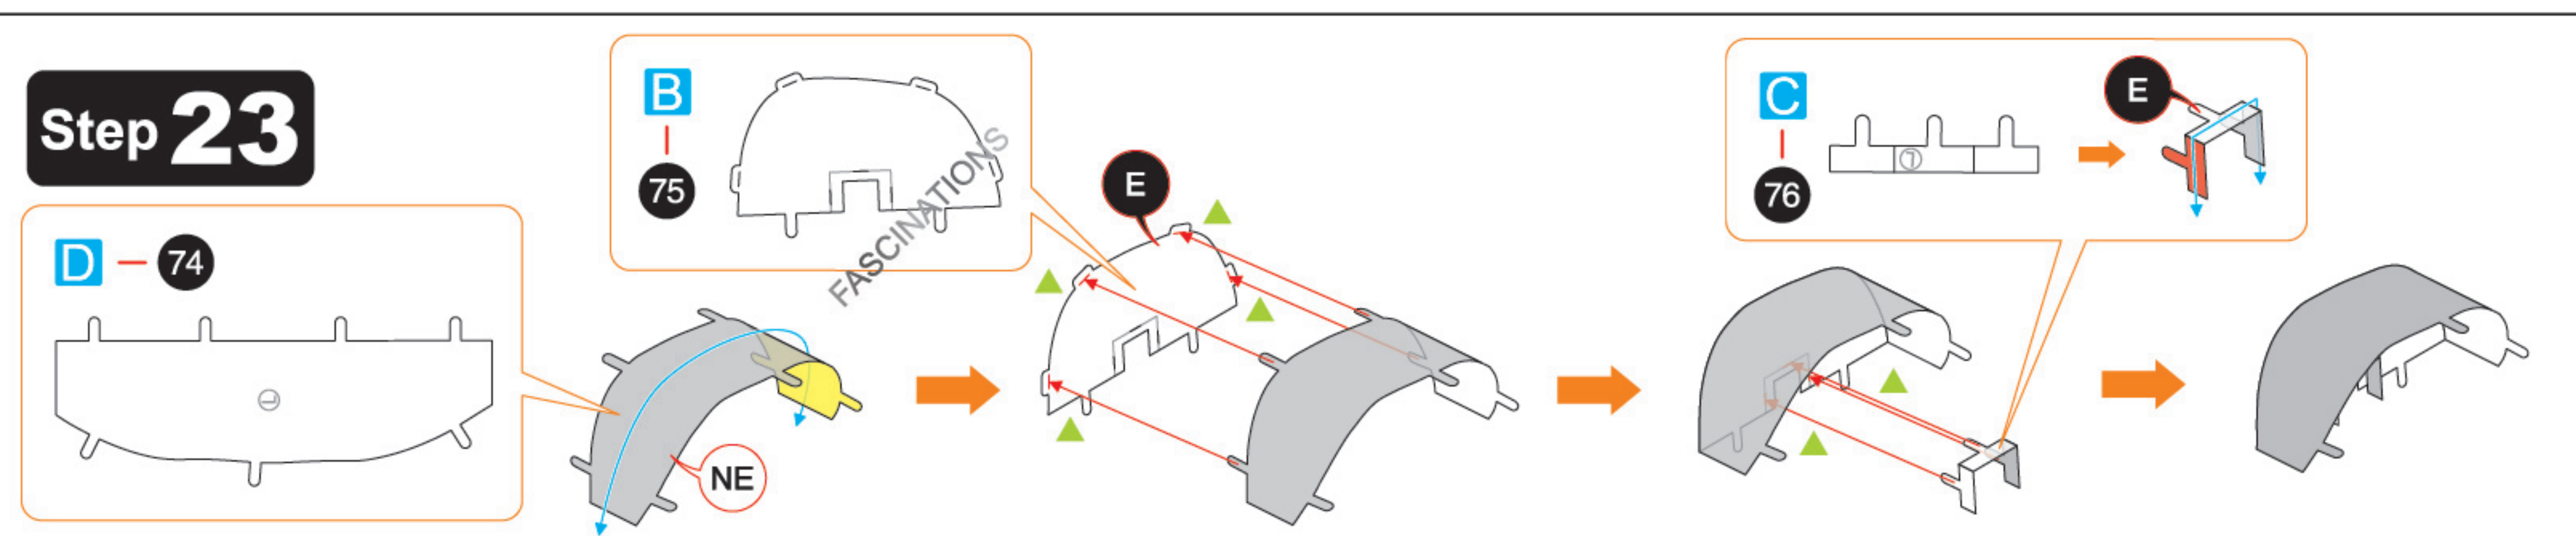

Step 24

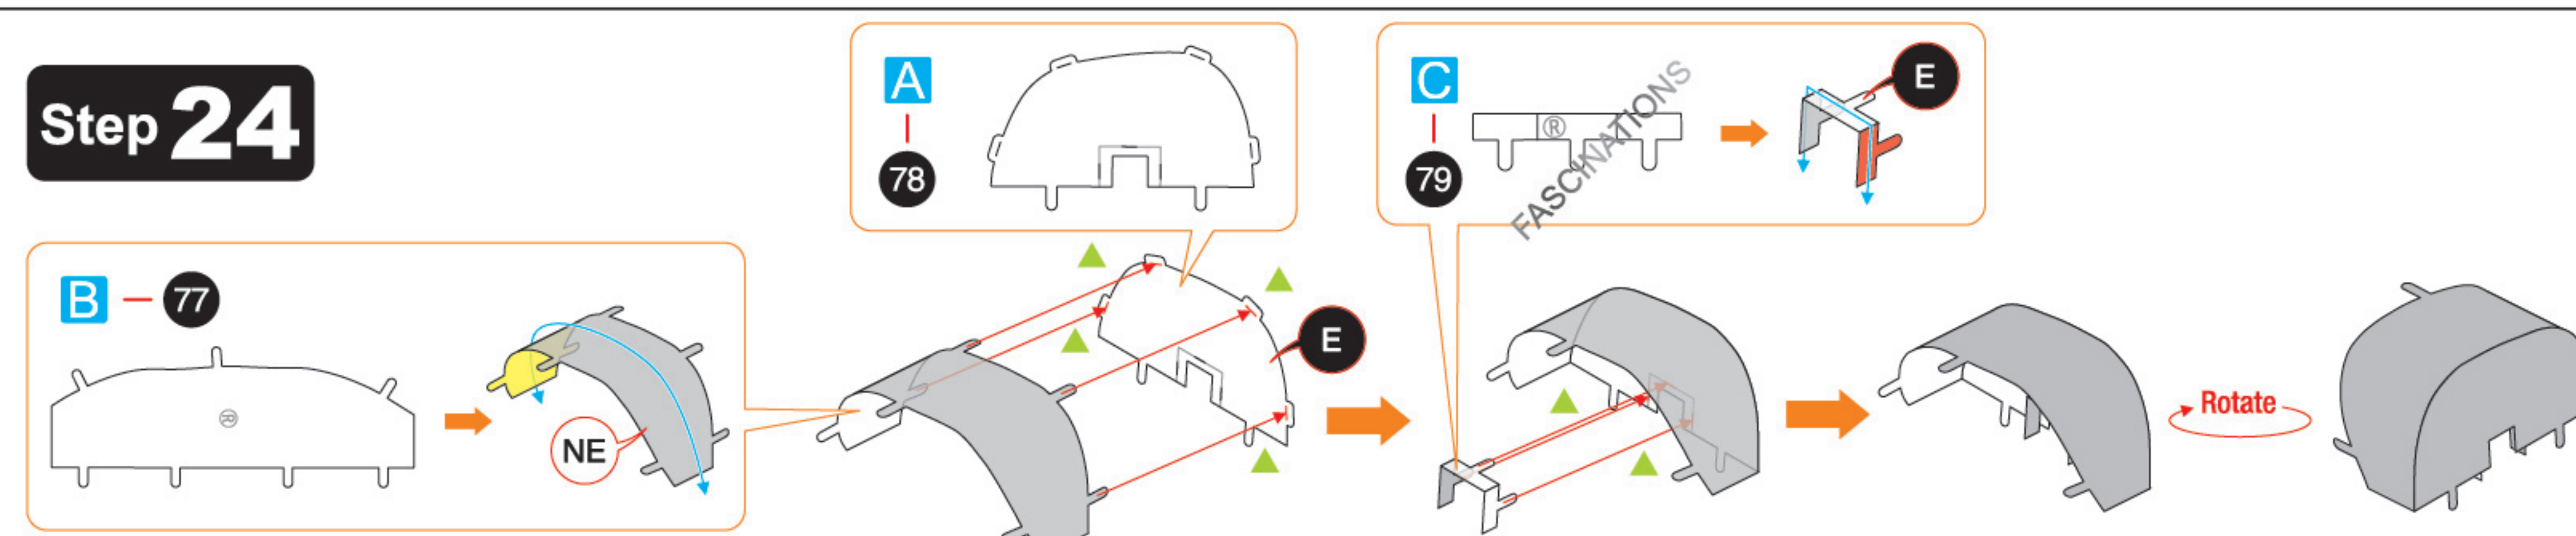

Step 25

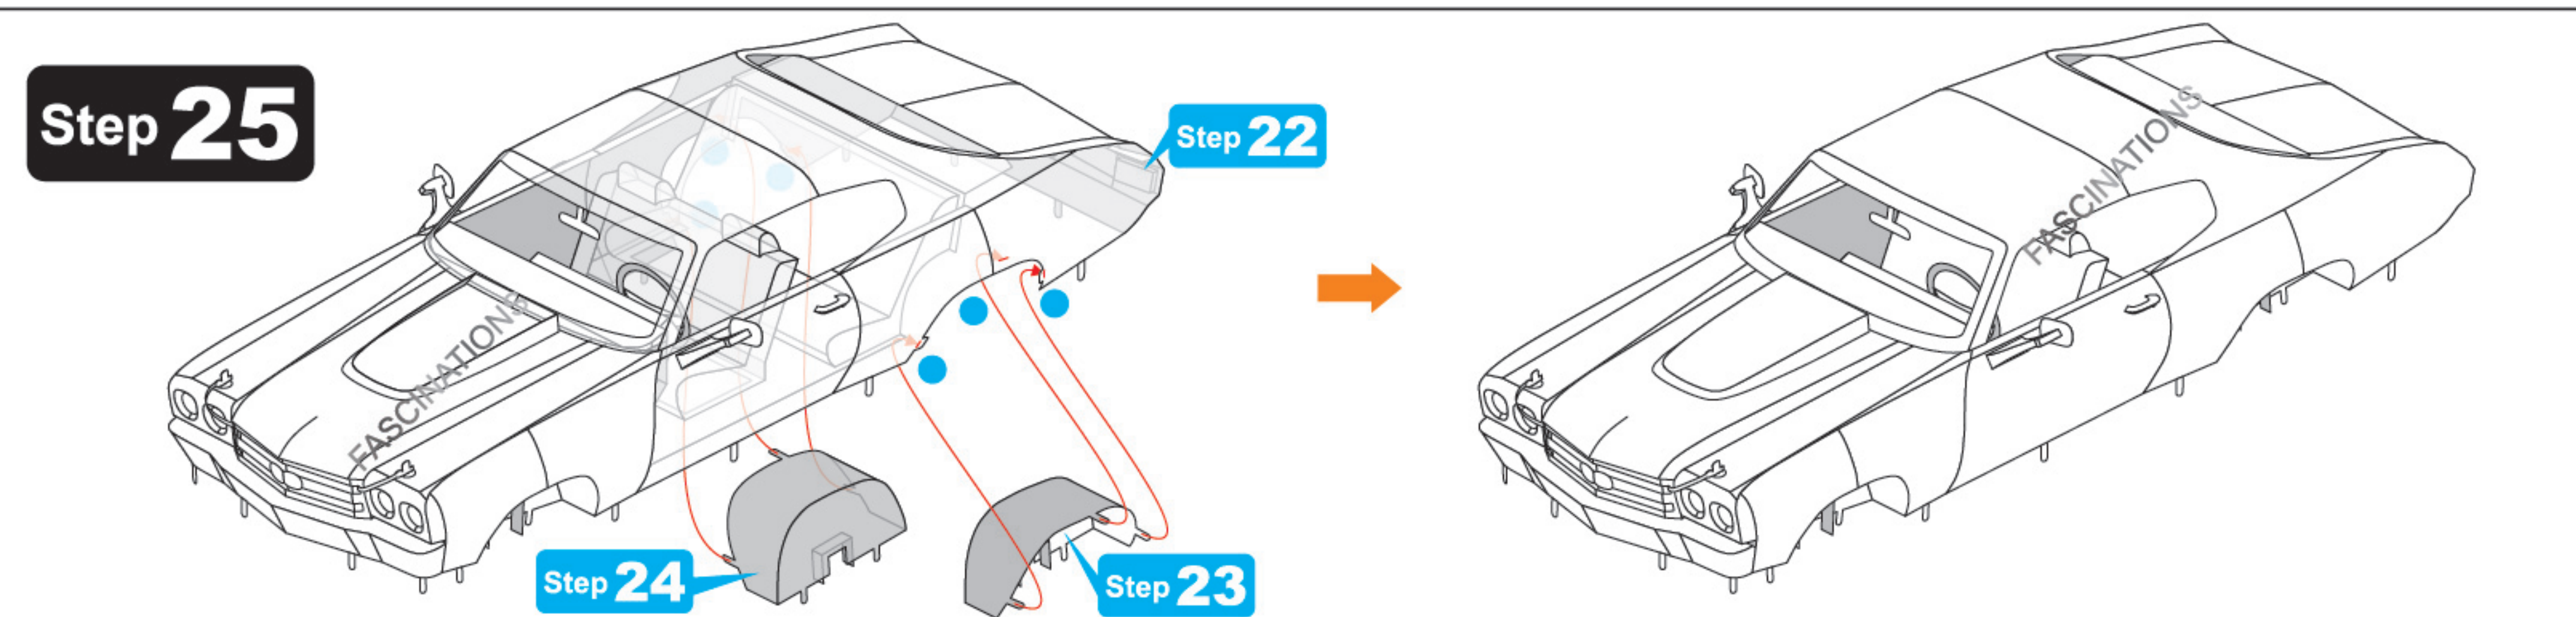

Step 26

