



LOCKHEED® SR-71® BLACKBIRD® ME1034

It is highly recommended that you visit
www.metal-earth.com/360/ME1034
to see the completed model before assembling your own

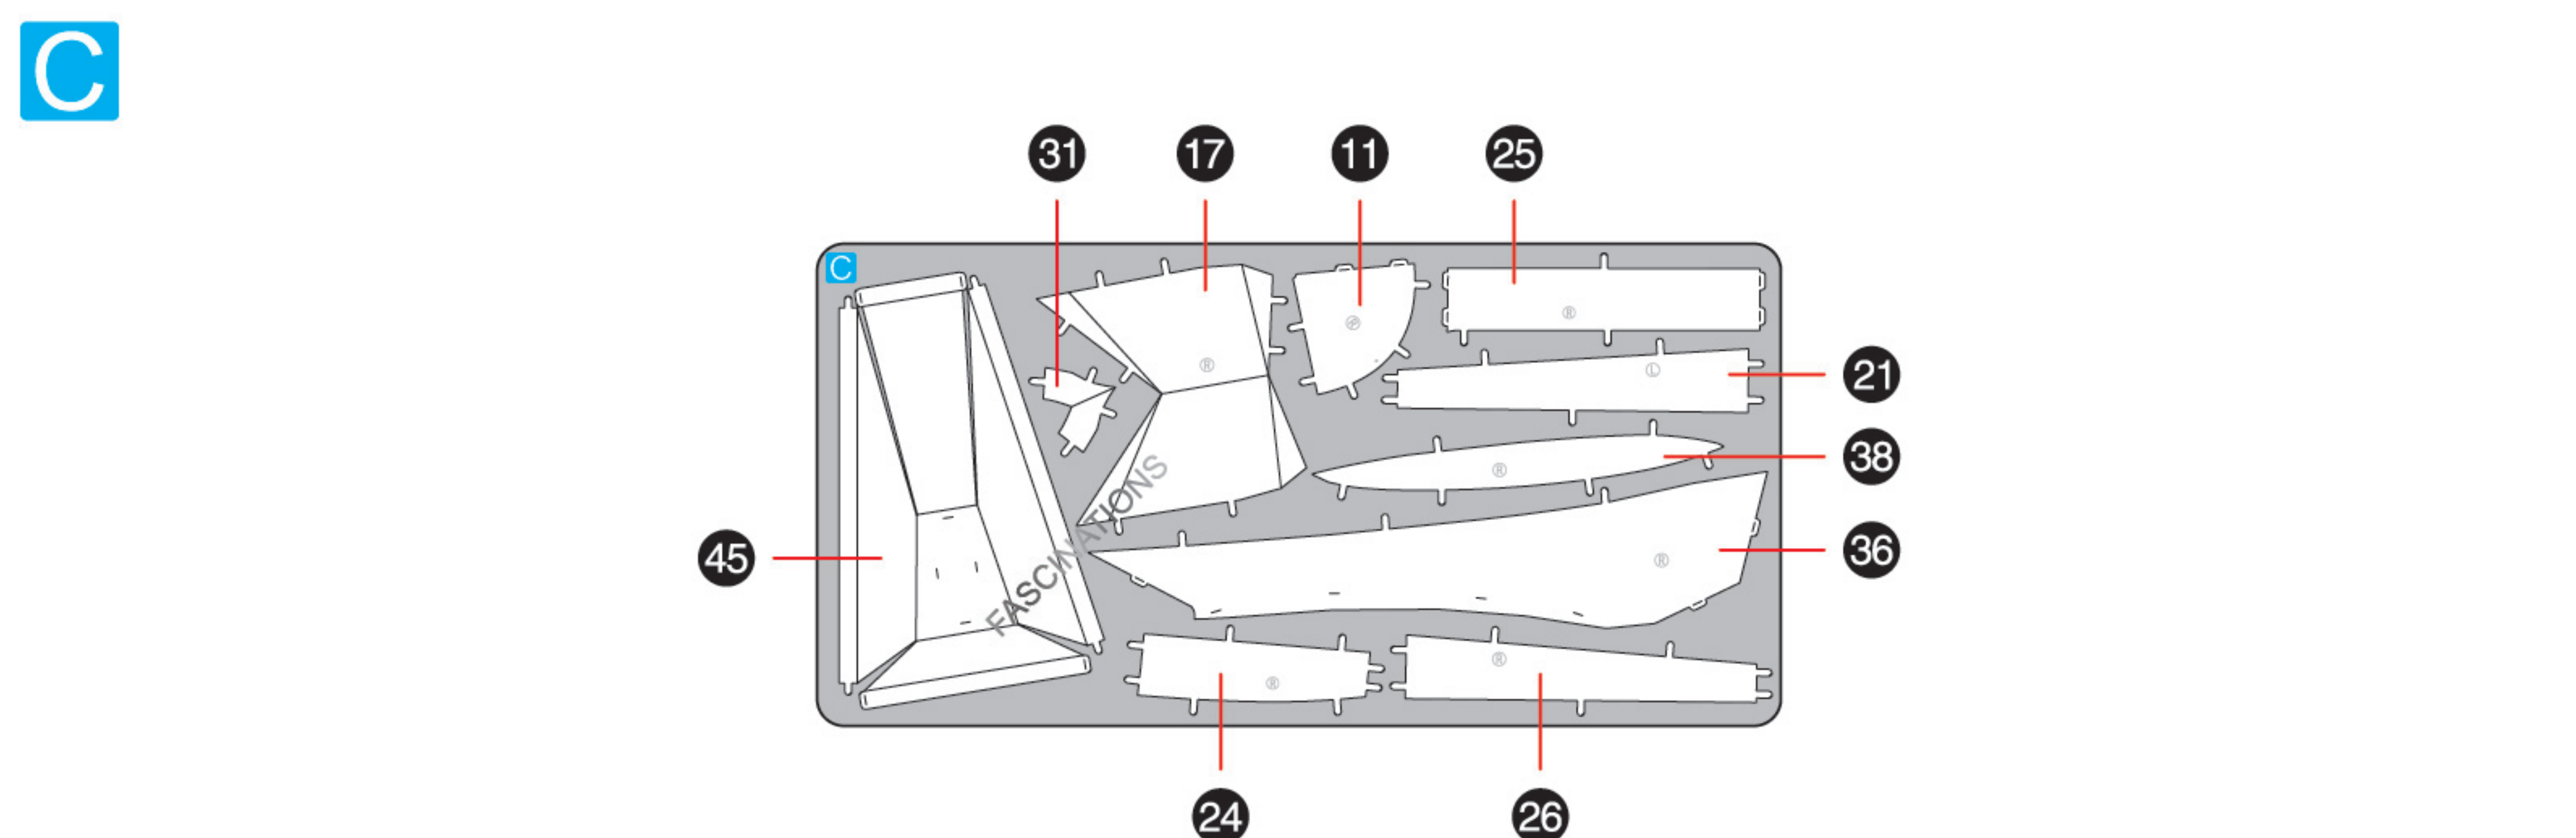

METAL SHEETS

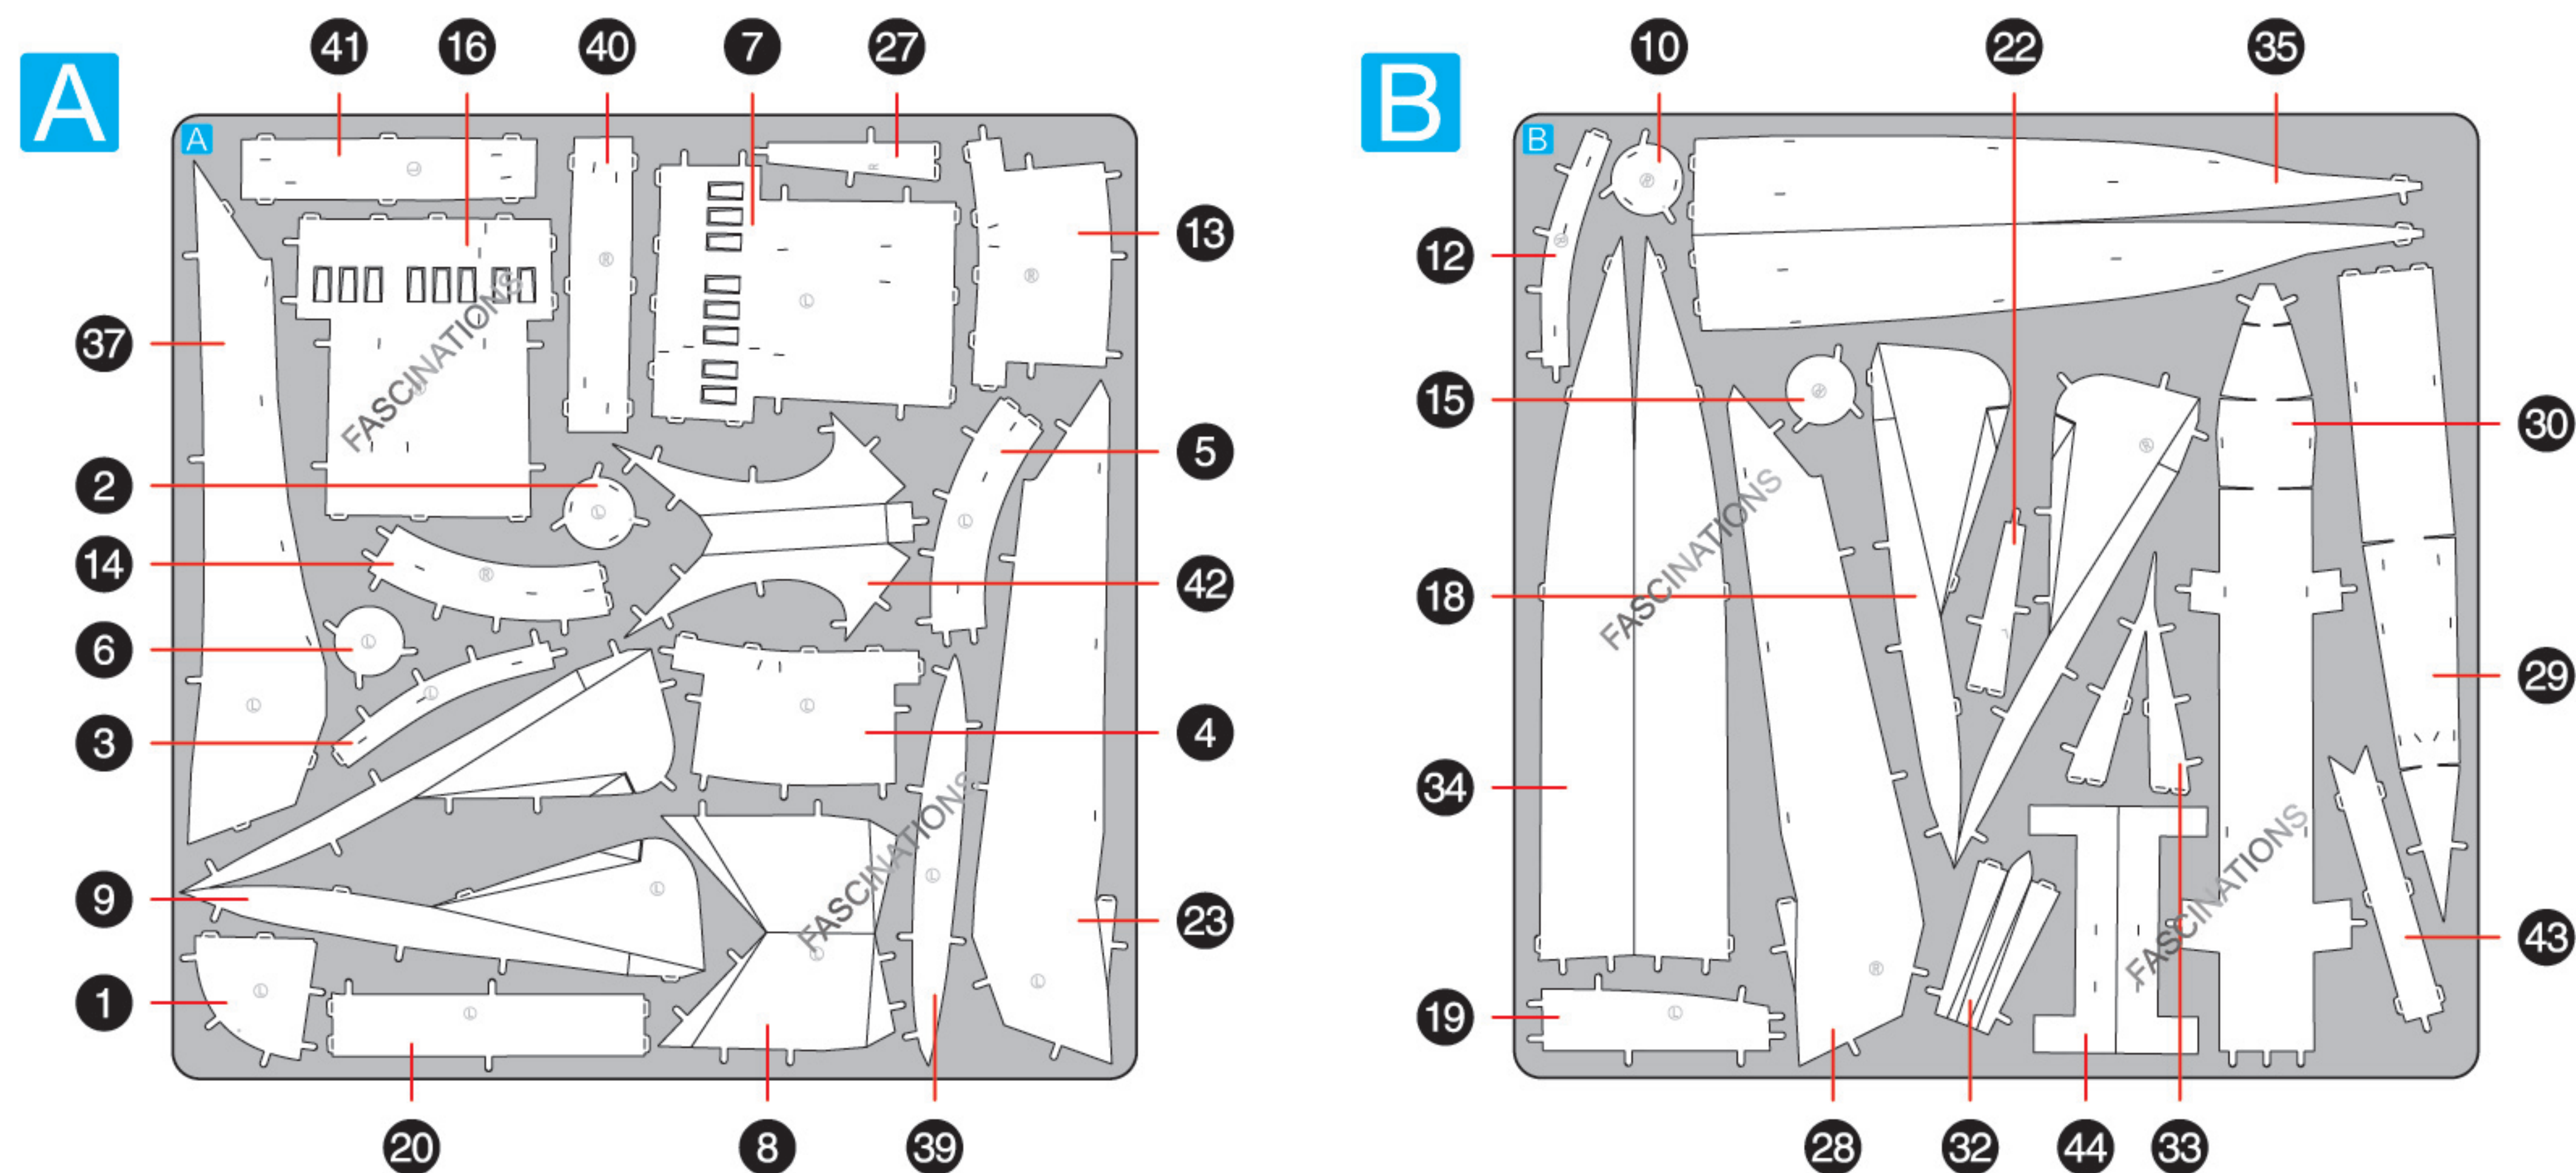


In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed.



Go to www.metal-earth.com/360/ME1034 to see the zoomable PDF version of this instruction sheet

TO CREATE THE BEST CONNECTIONS

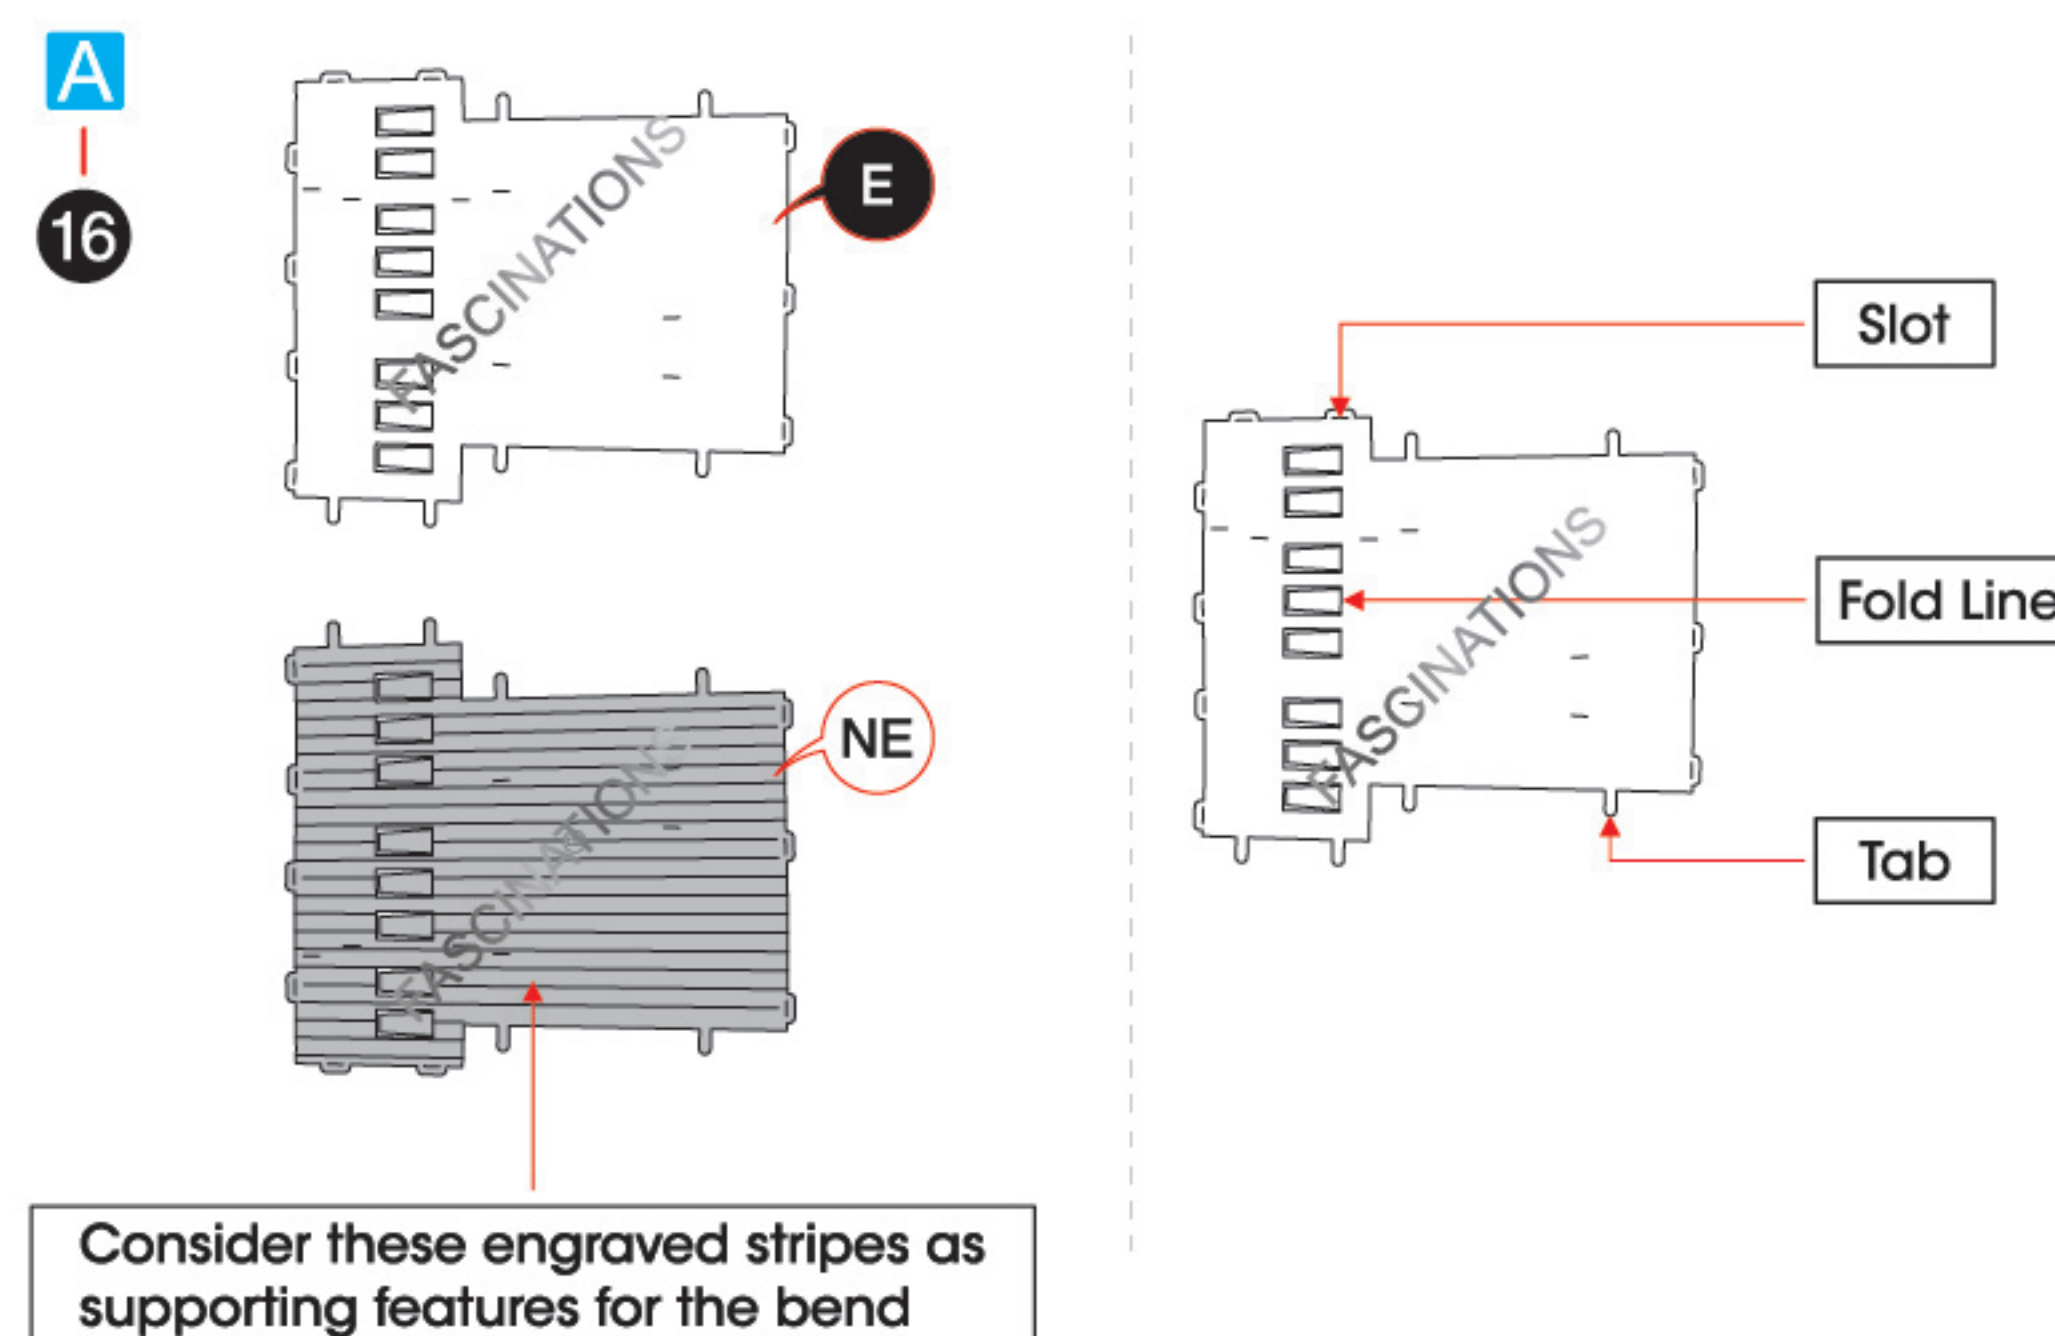

Legends:

- E** Engraved/ Color side
- NE** Non - engraved/ Silver side
- Attention point
- Insert tab and bend 90 degrees
- Insert tab and twist 90 degrees

Recommended tools:

- Wire cutters: helpful for taking parts from the metal sheets.

- Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.

Assembly tip:


If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish.

Yellow areas should be curled


Red areas should be folded

ASSEMBLY FLOW CHART



Step 1

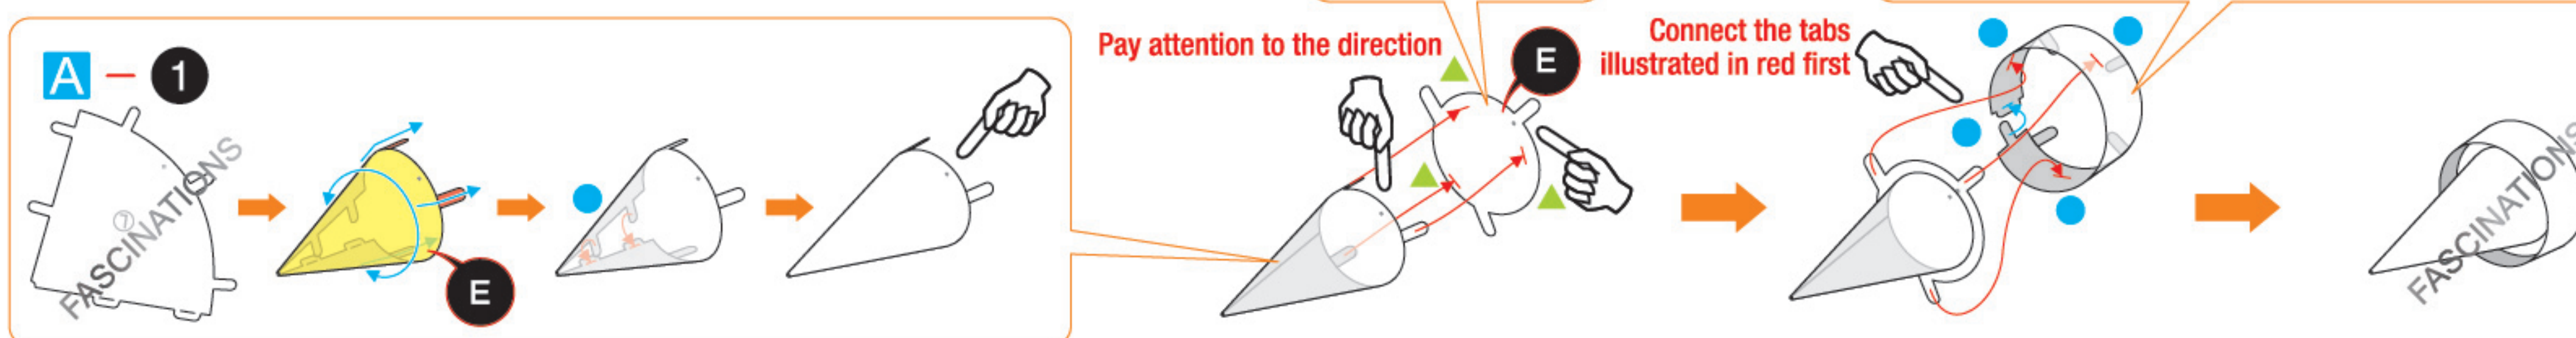


Step 2

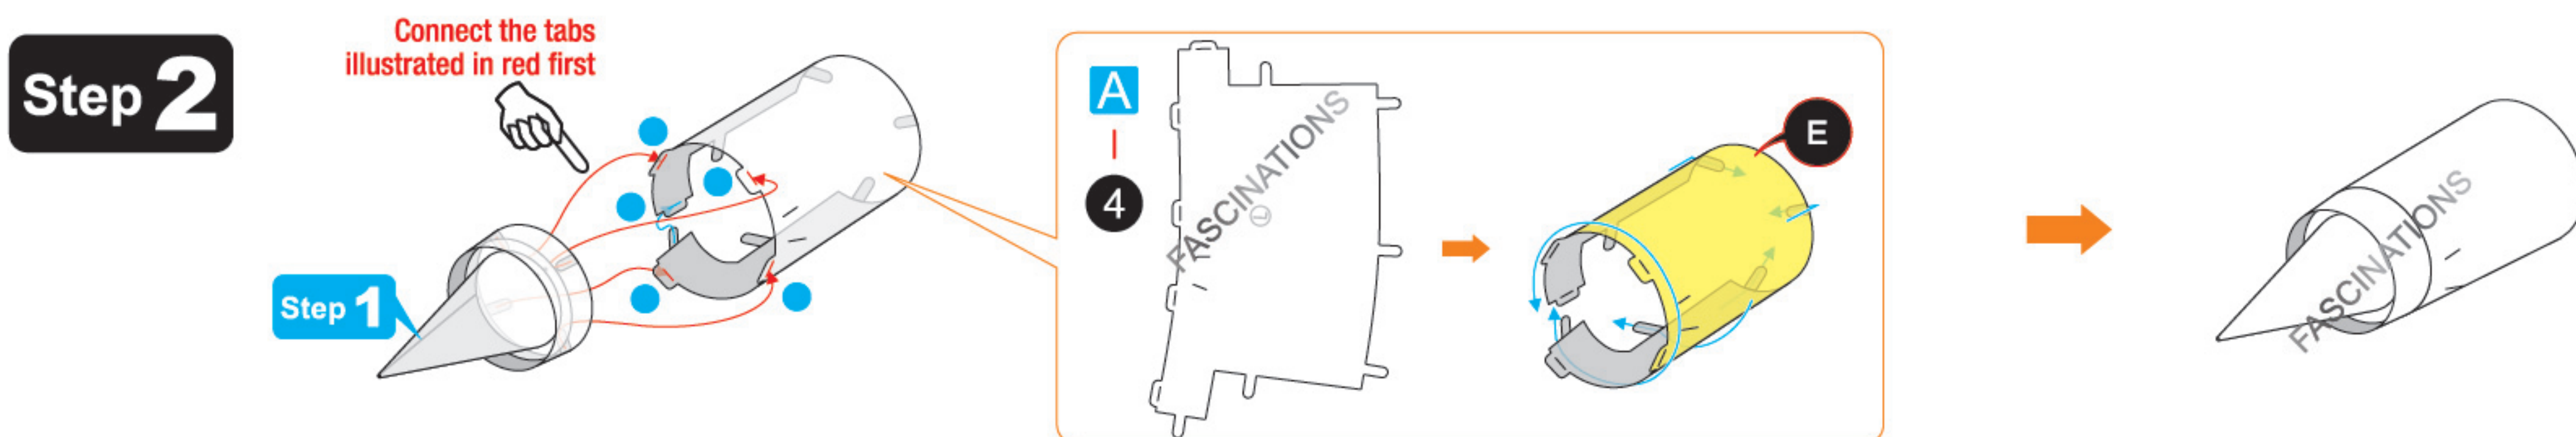


Step 3

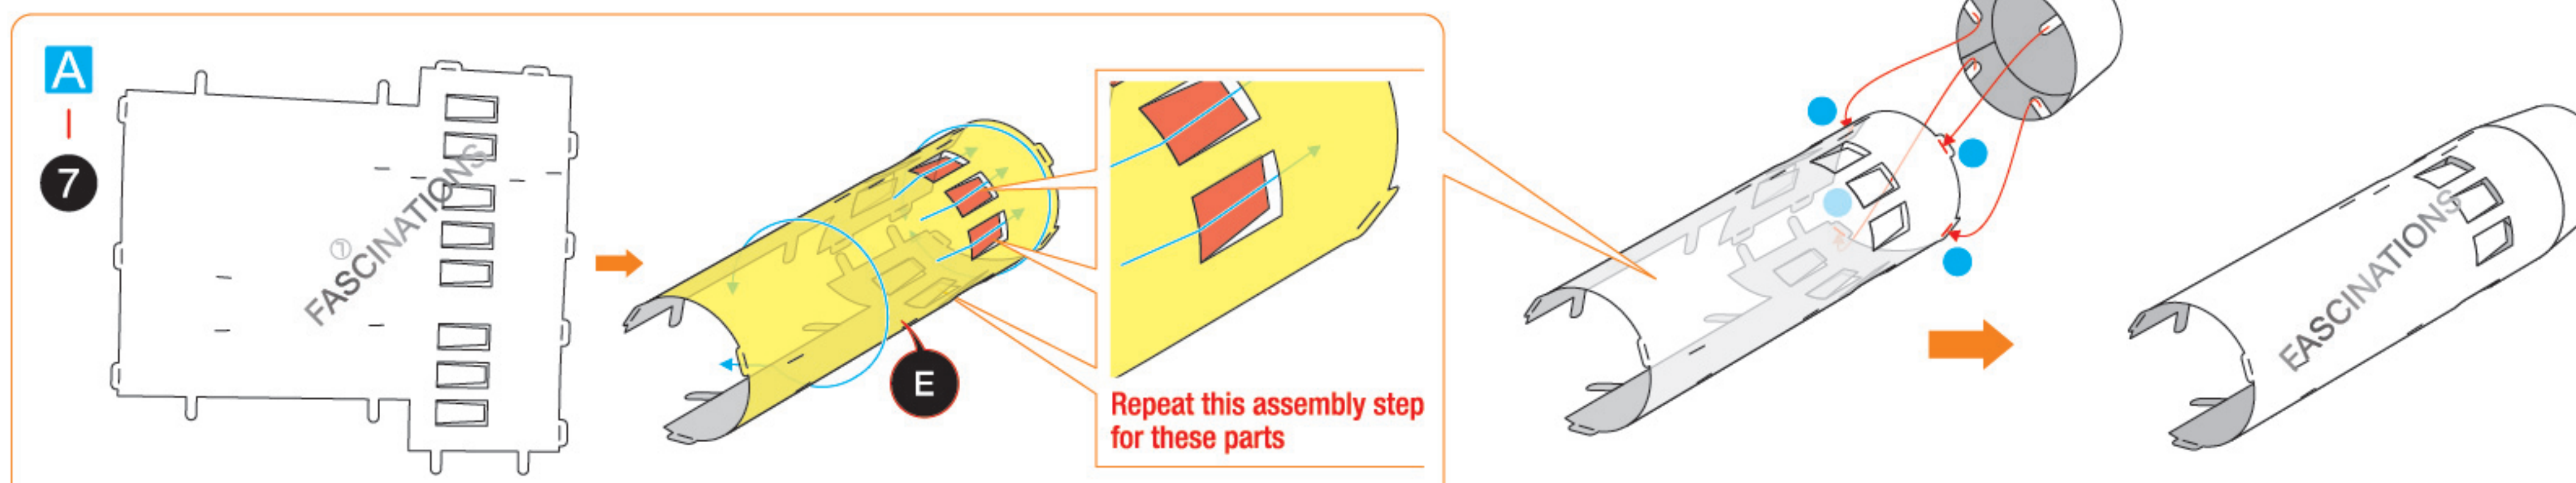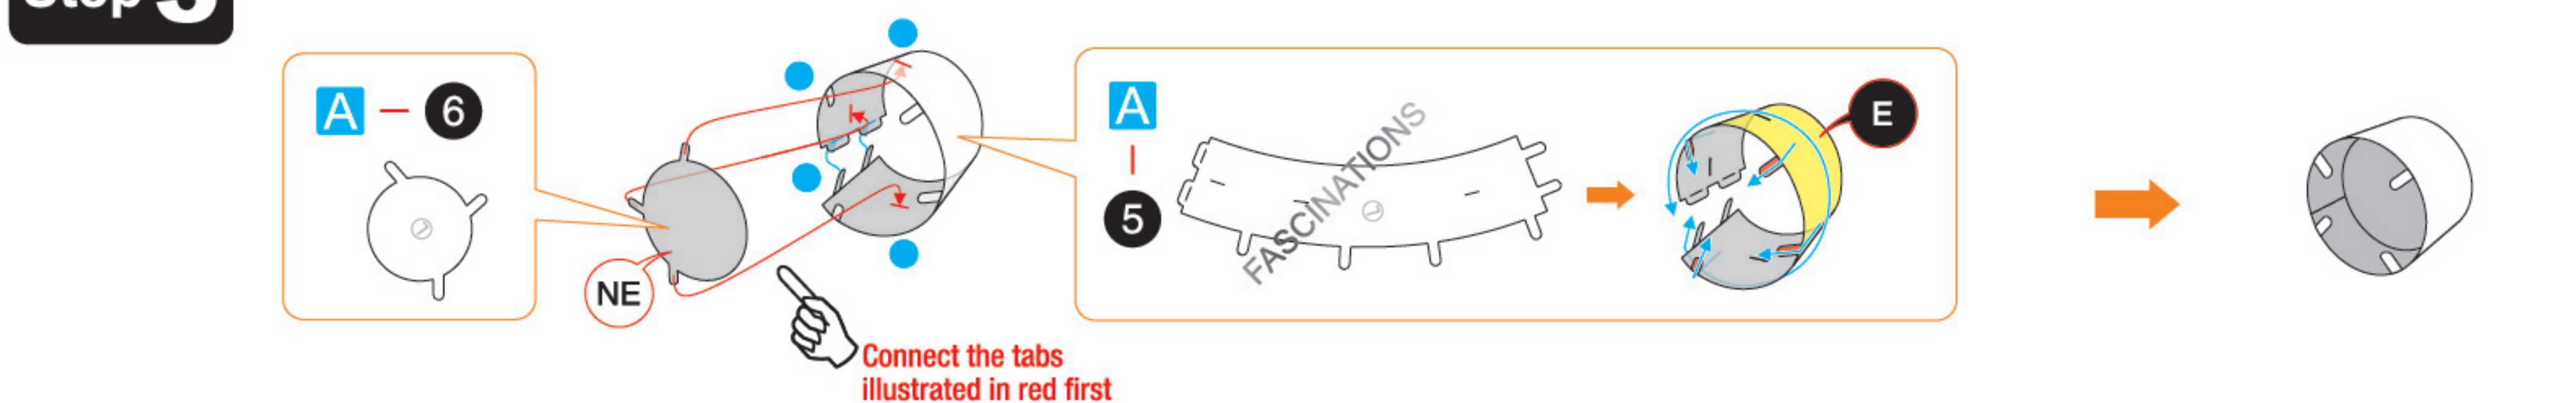


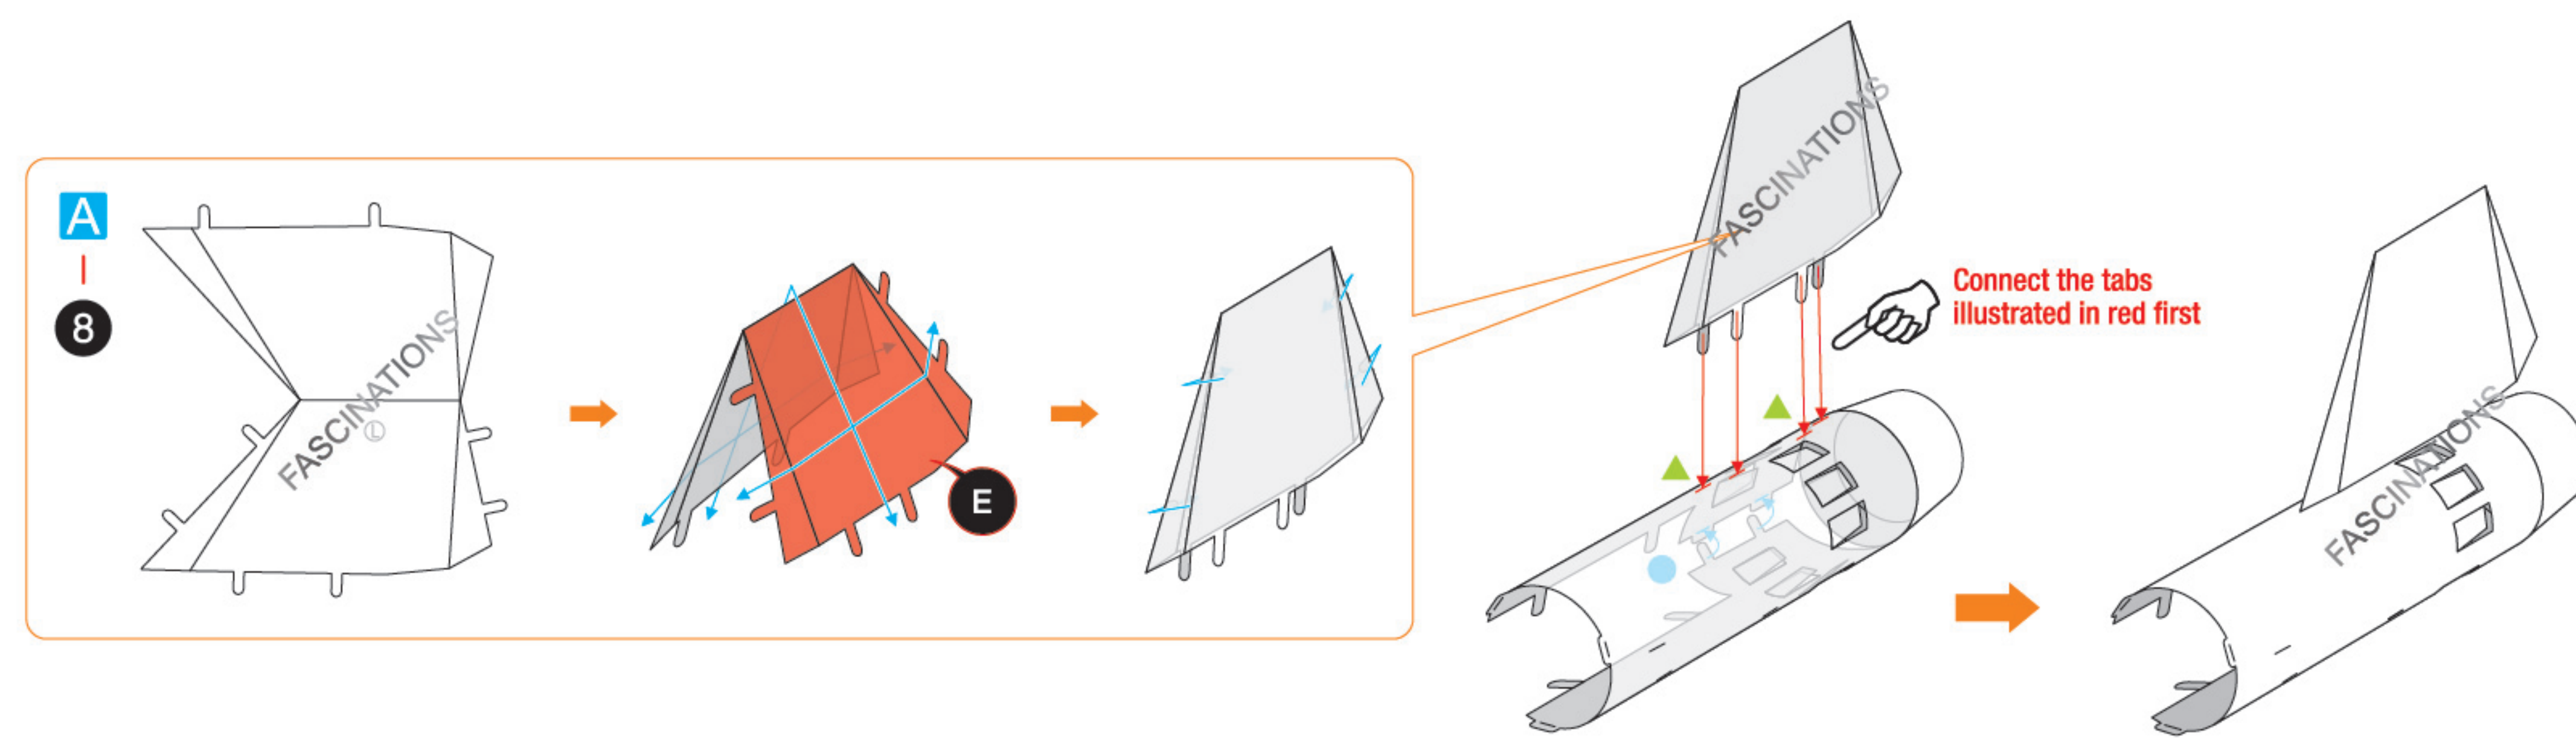


Step 4

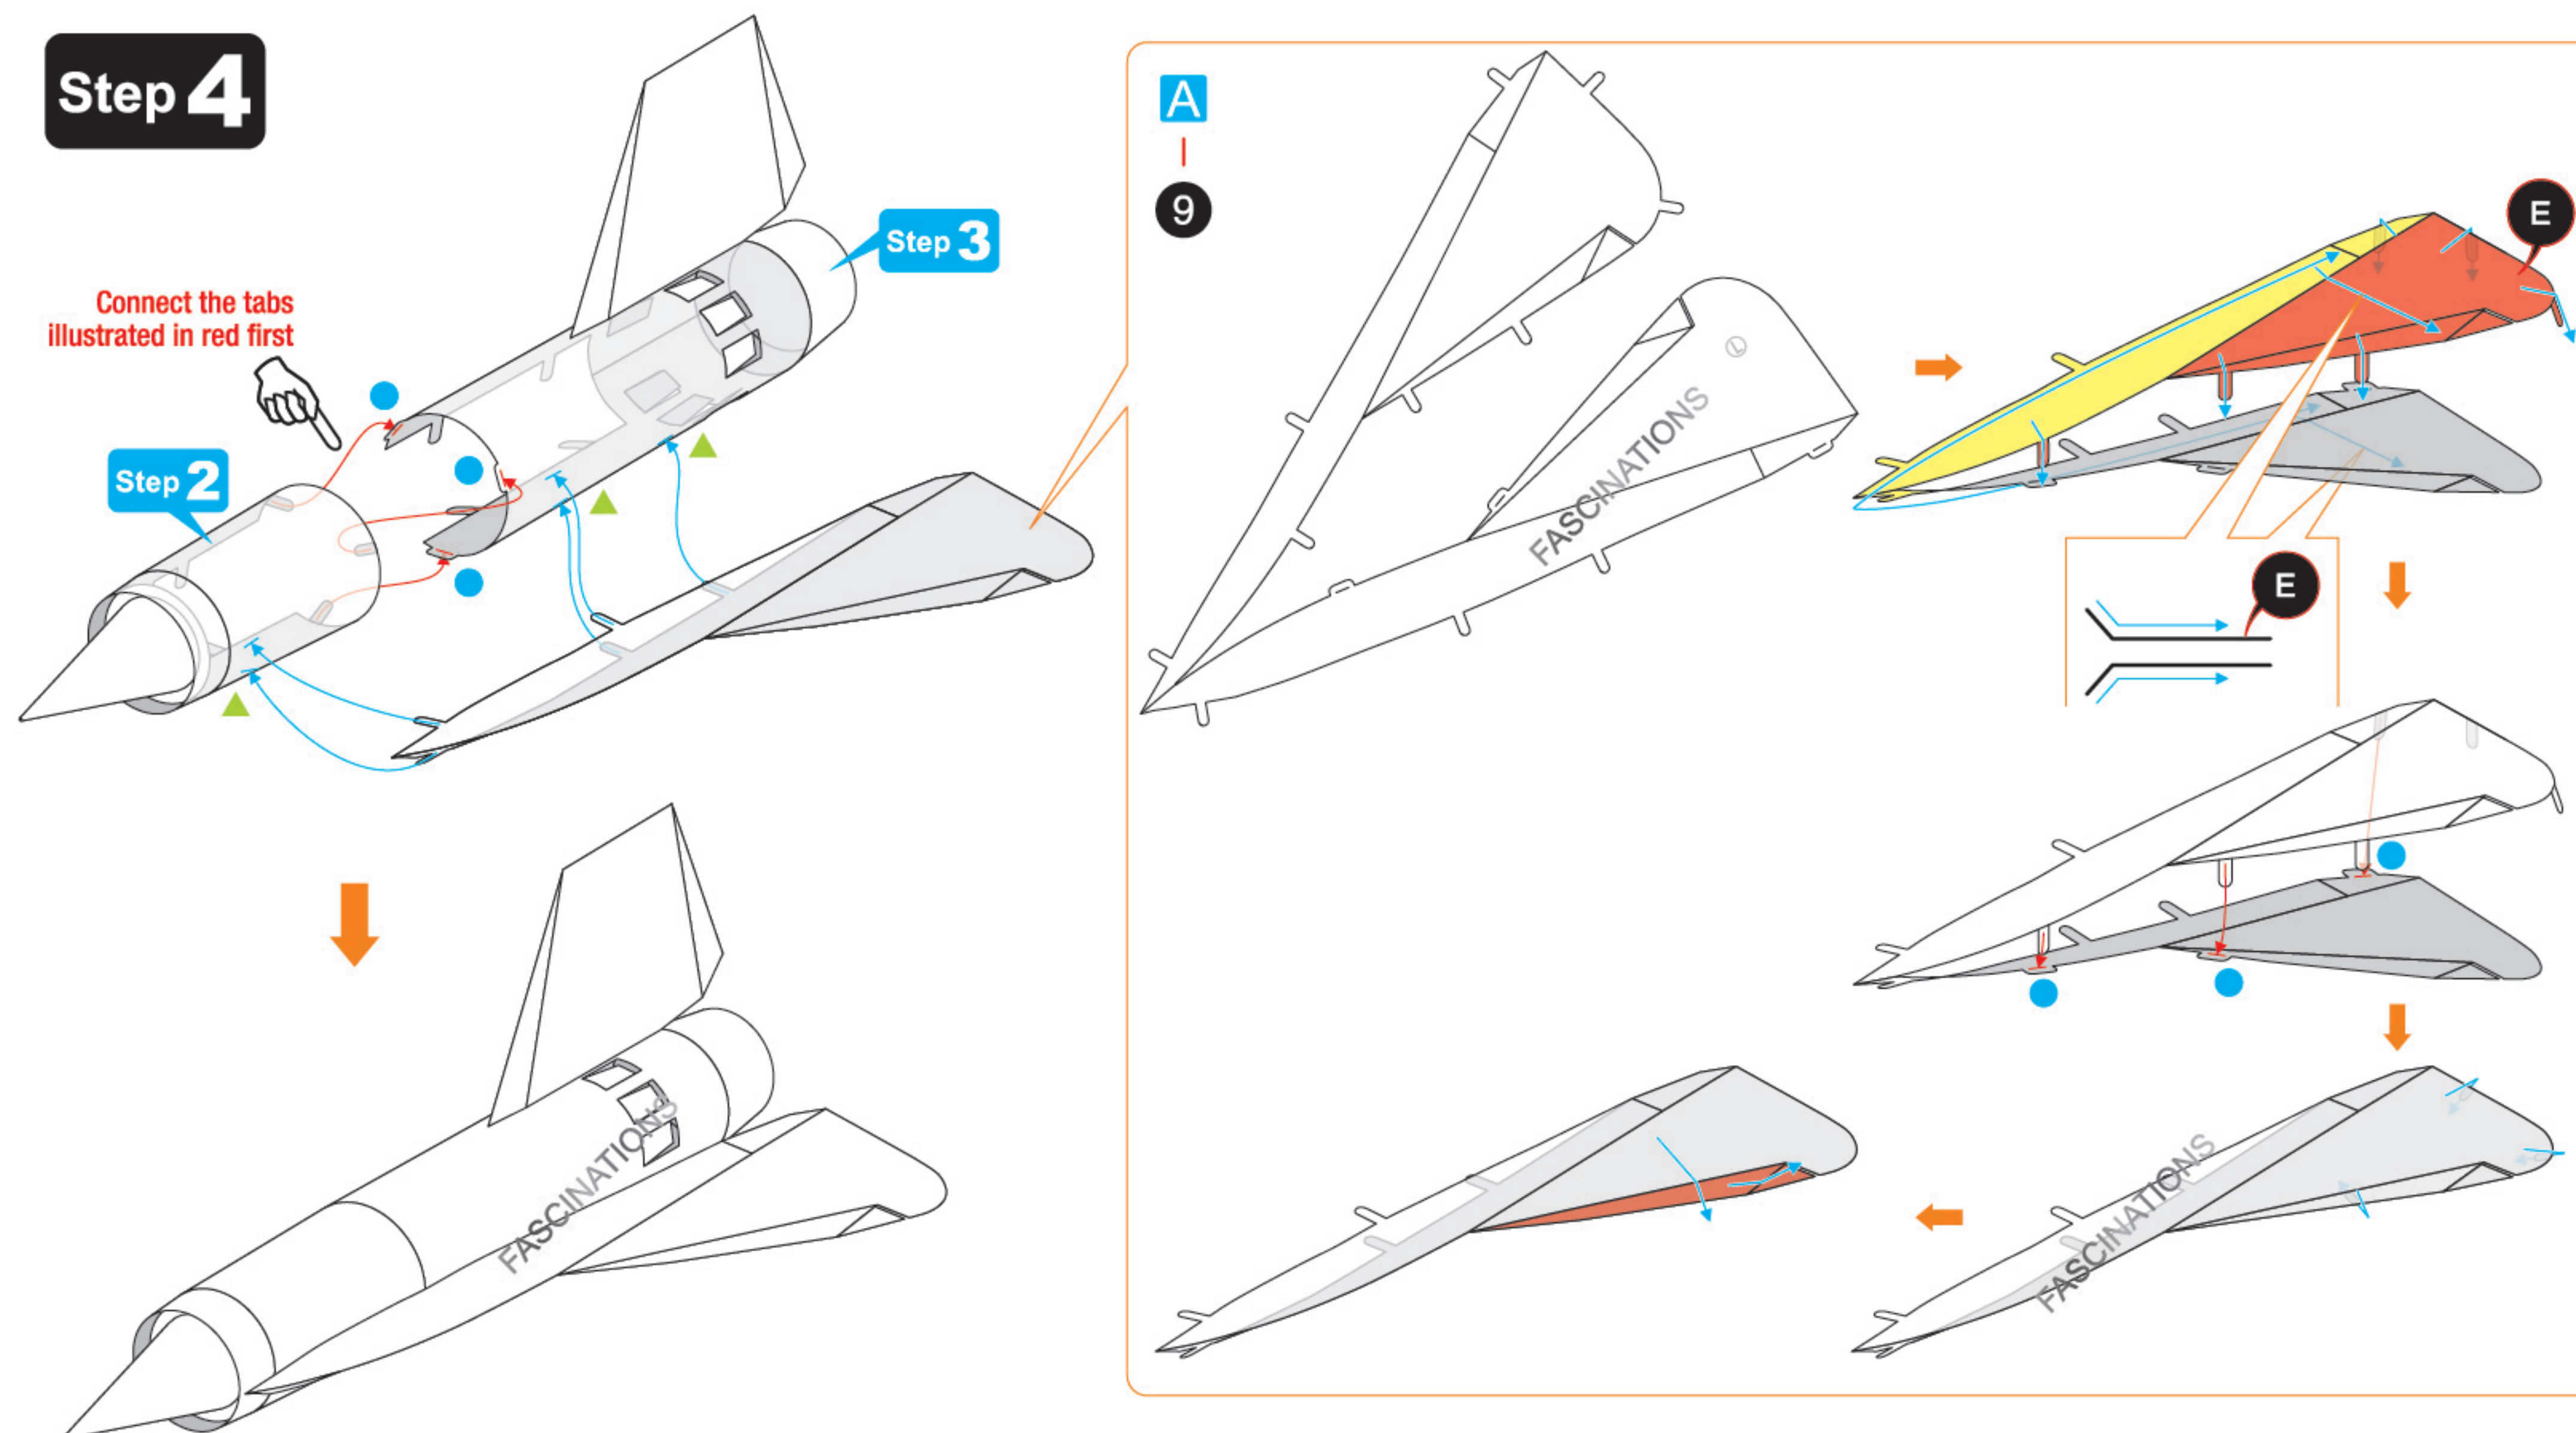


Step 5

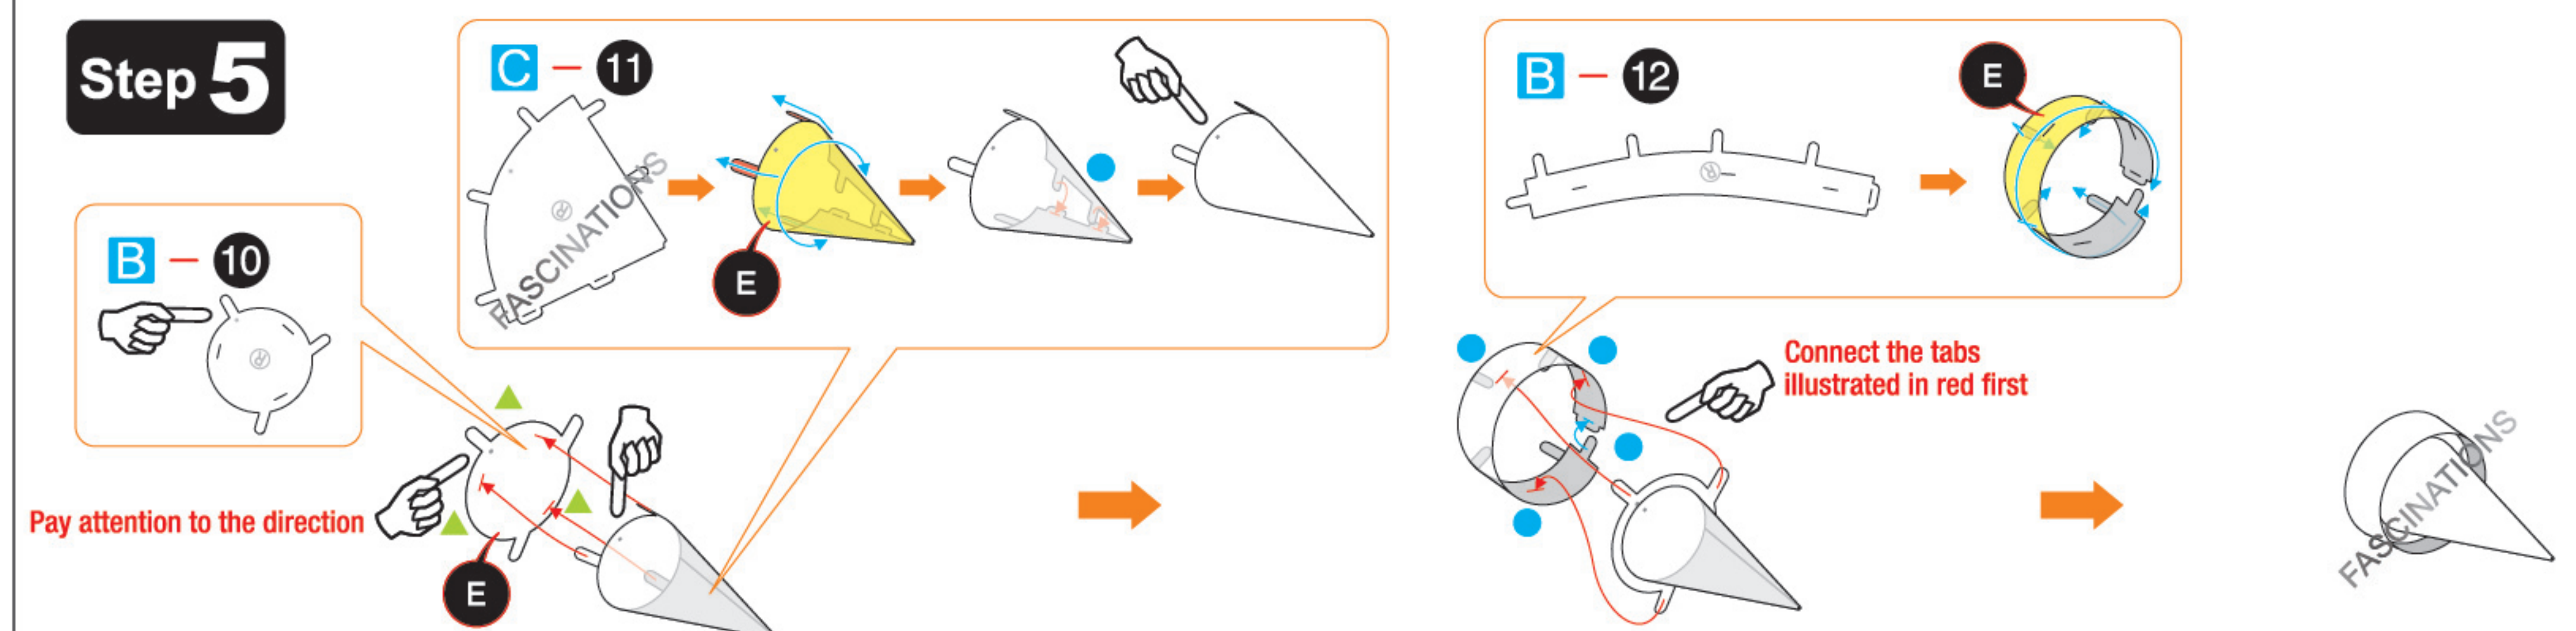


Step 6

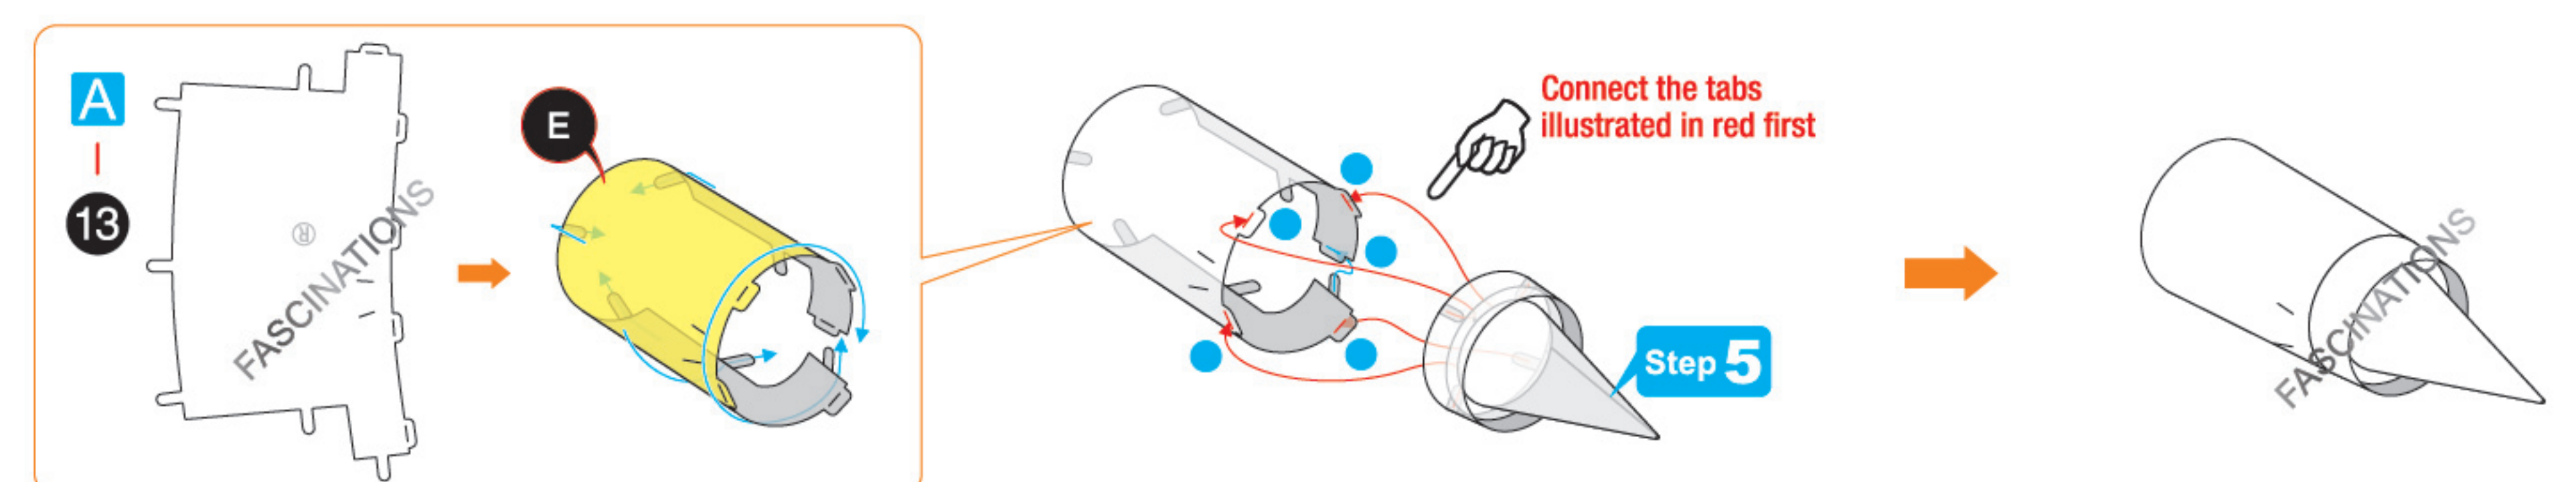


Step 7

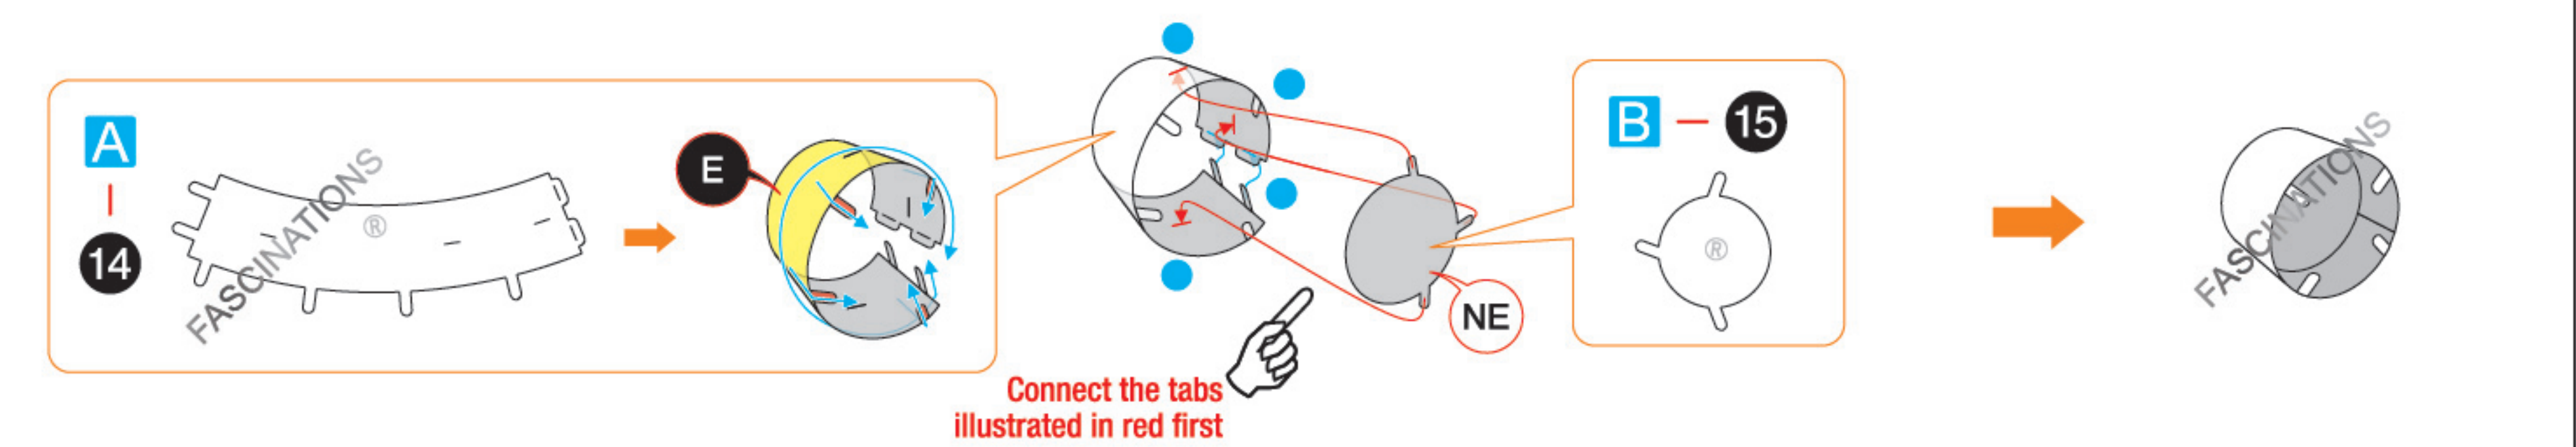


A

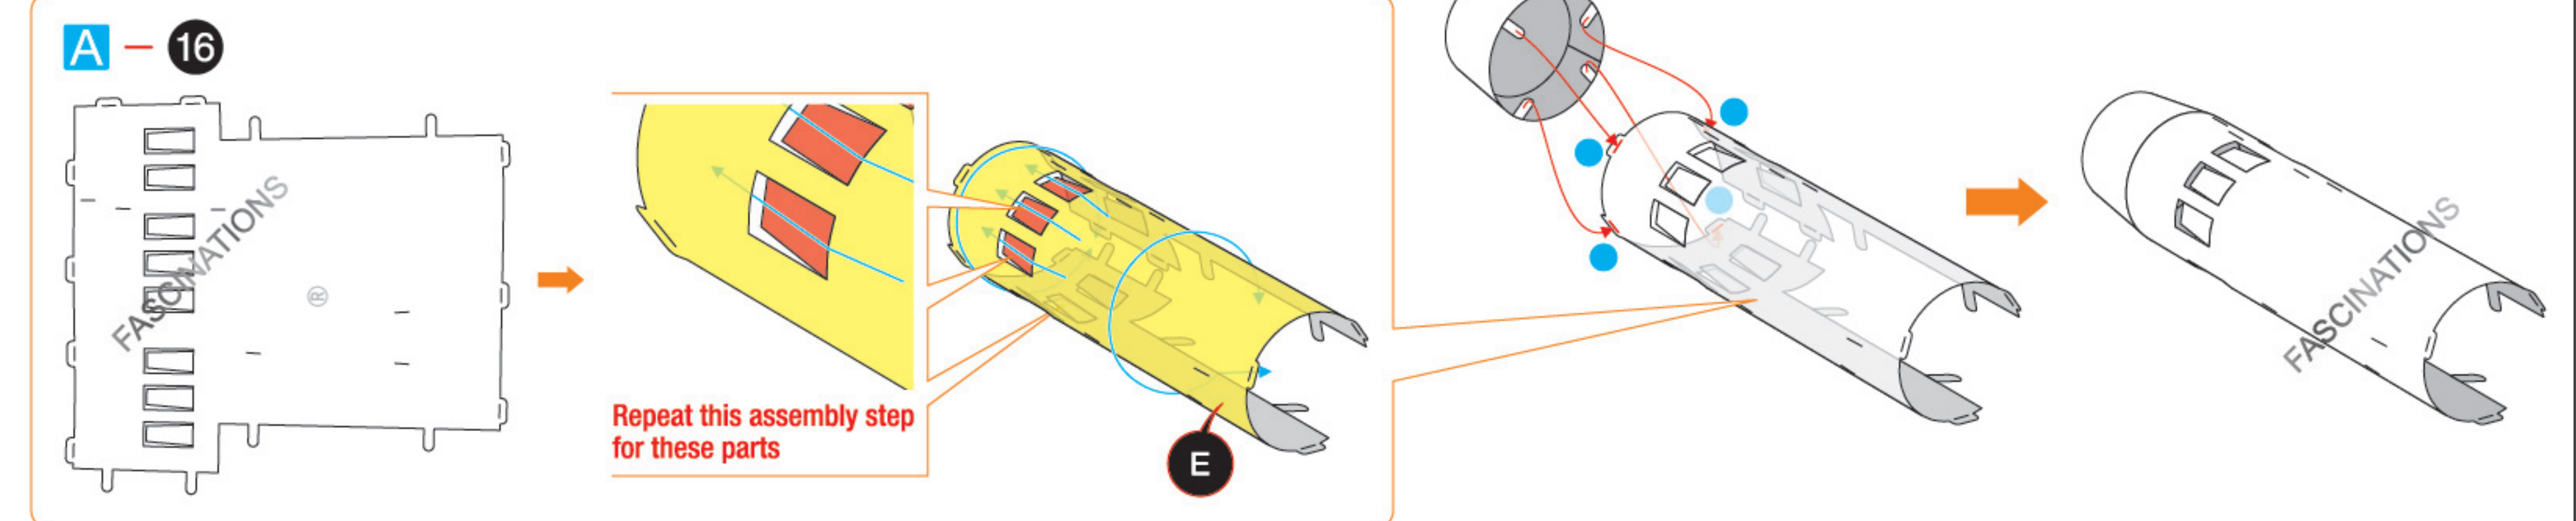

C

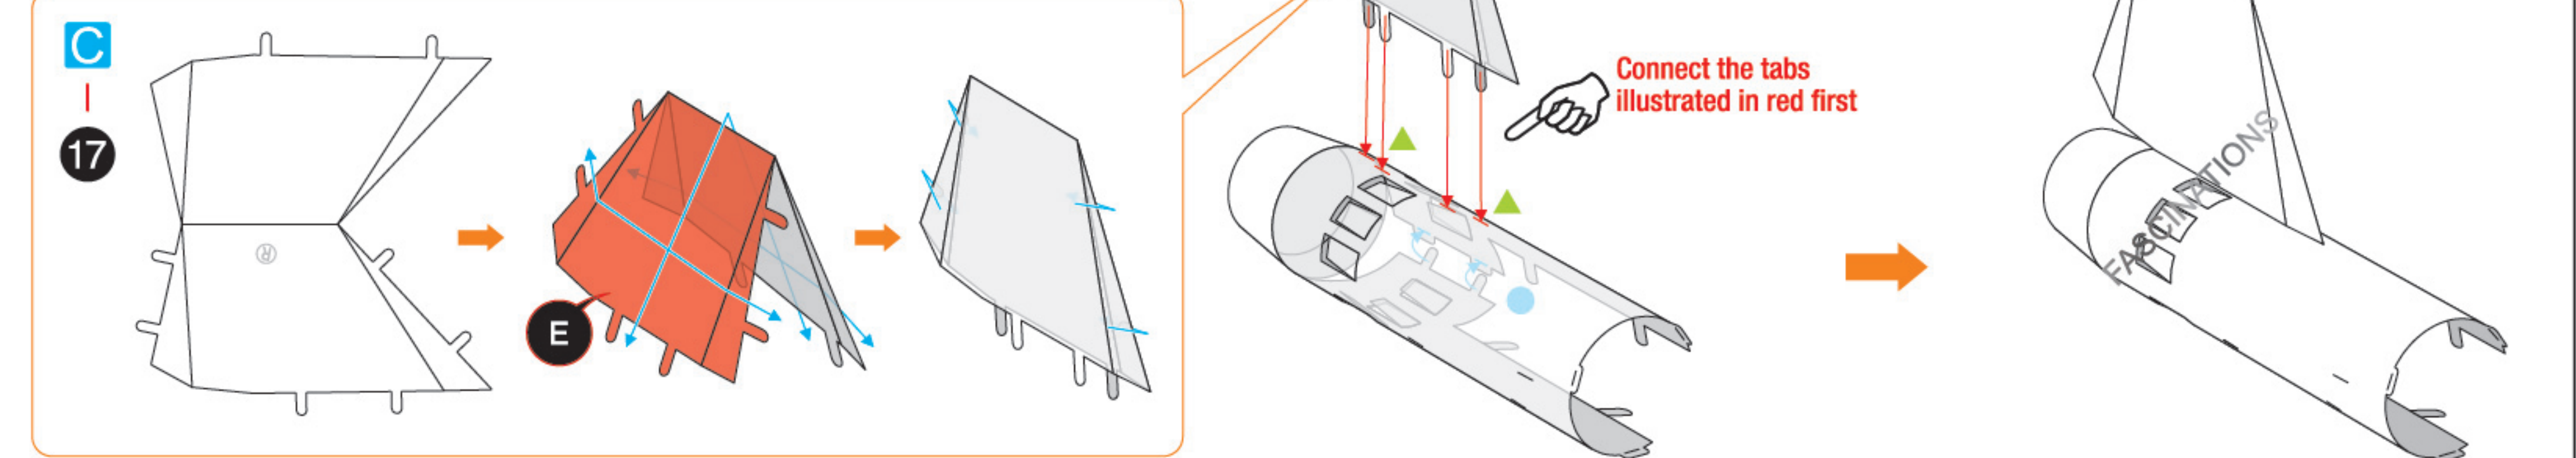


Step 8

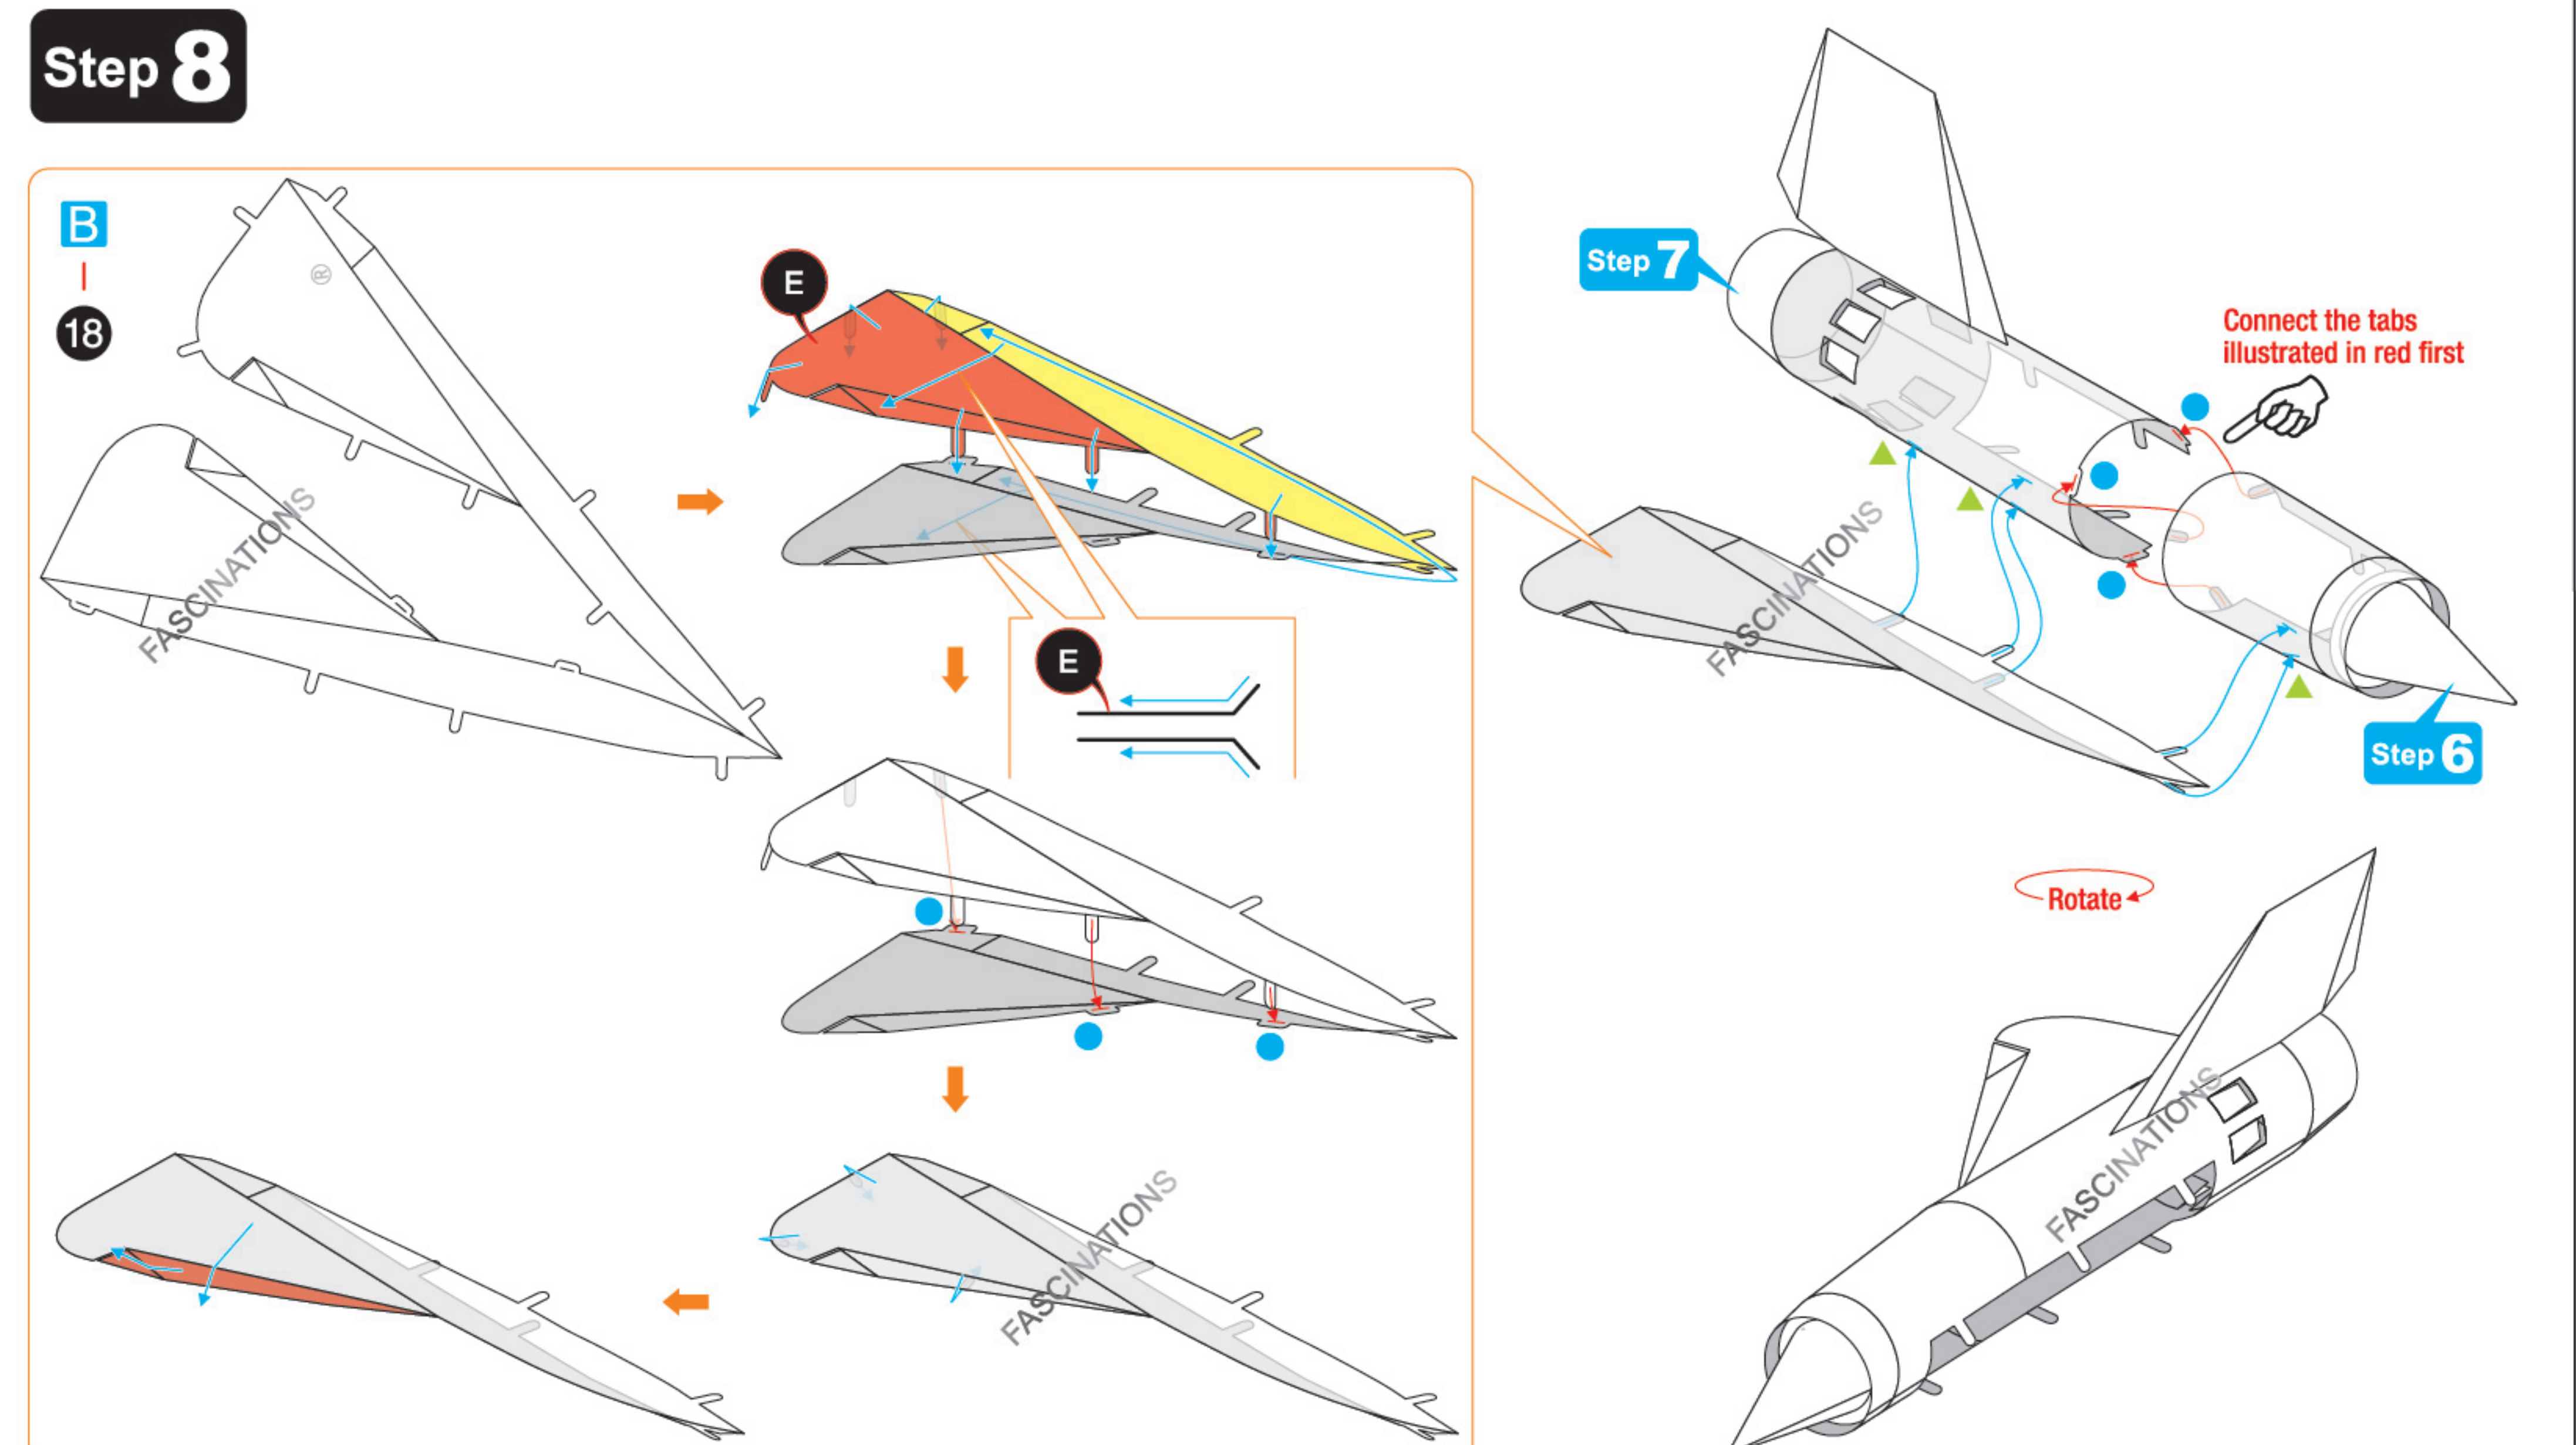


Step 9


C - 21

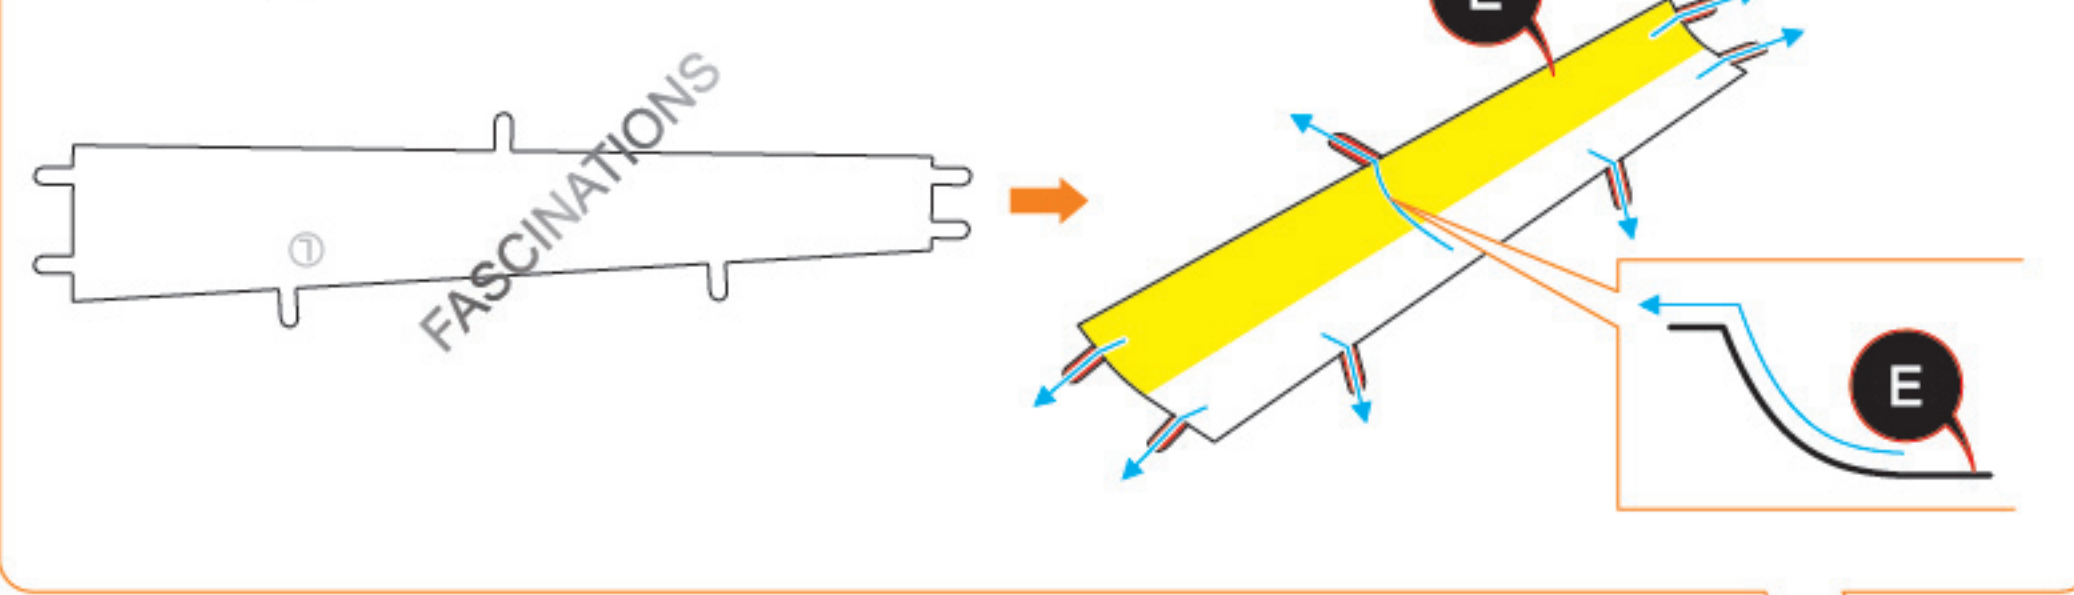



B - 22

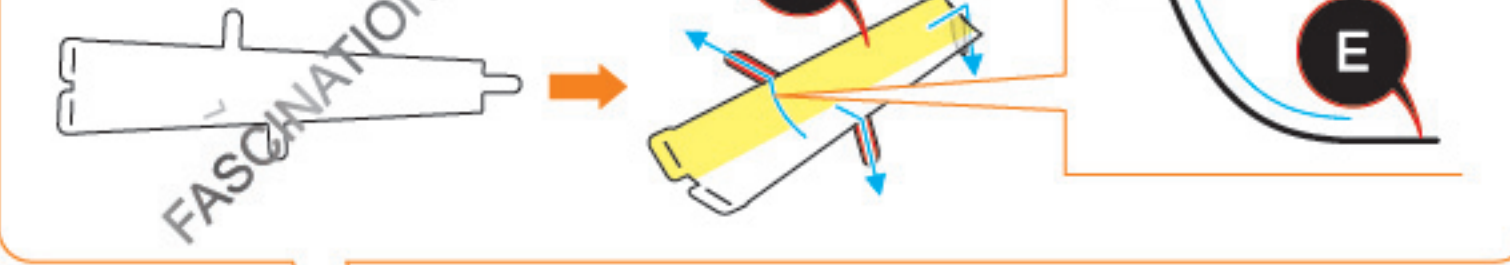

A - 20

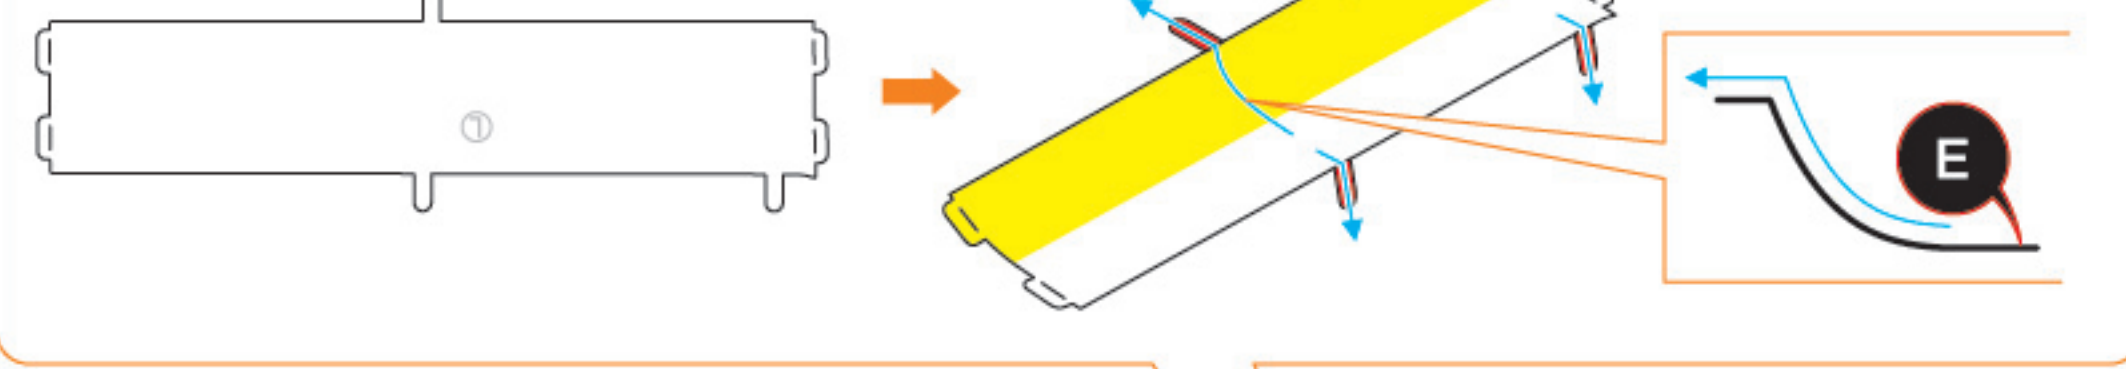


B - 19

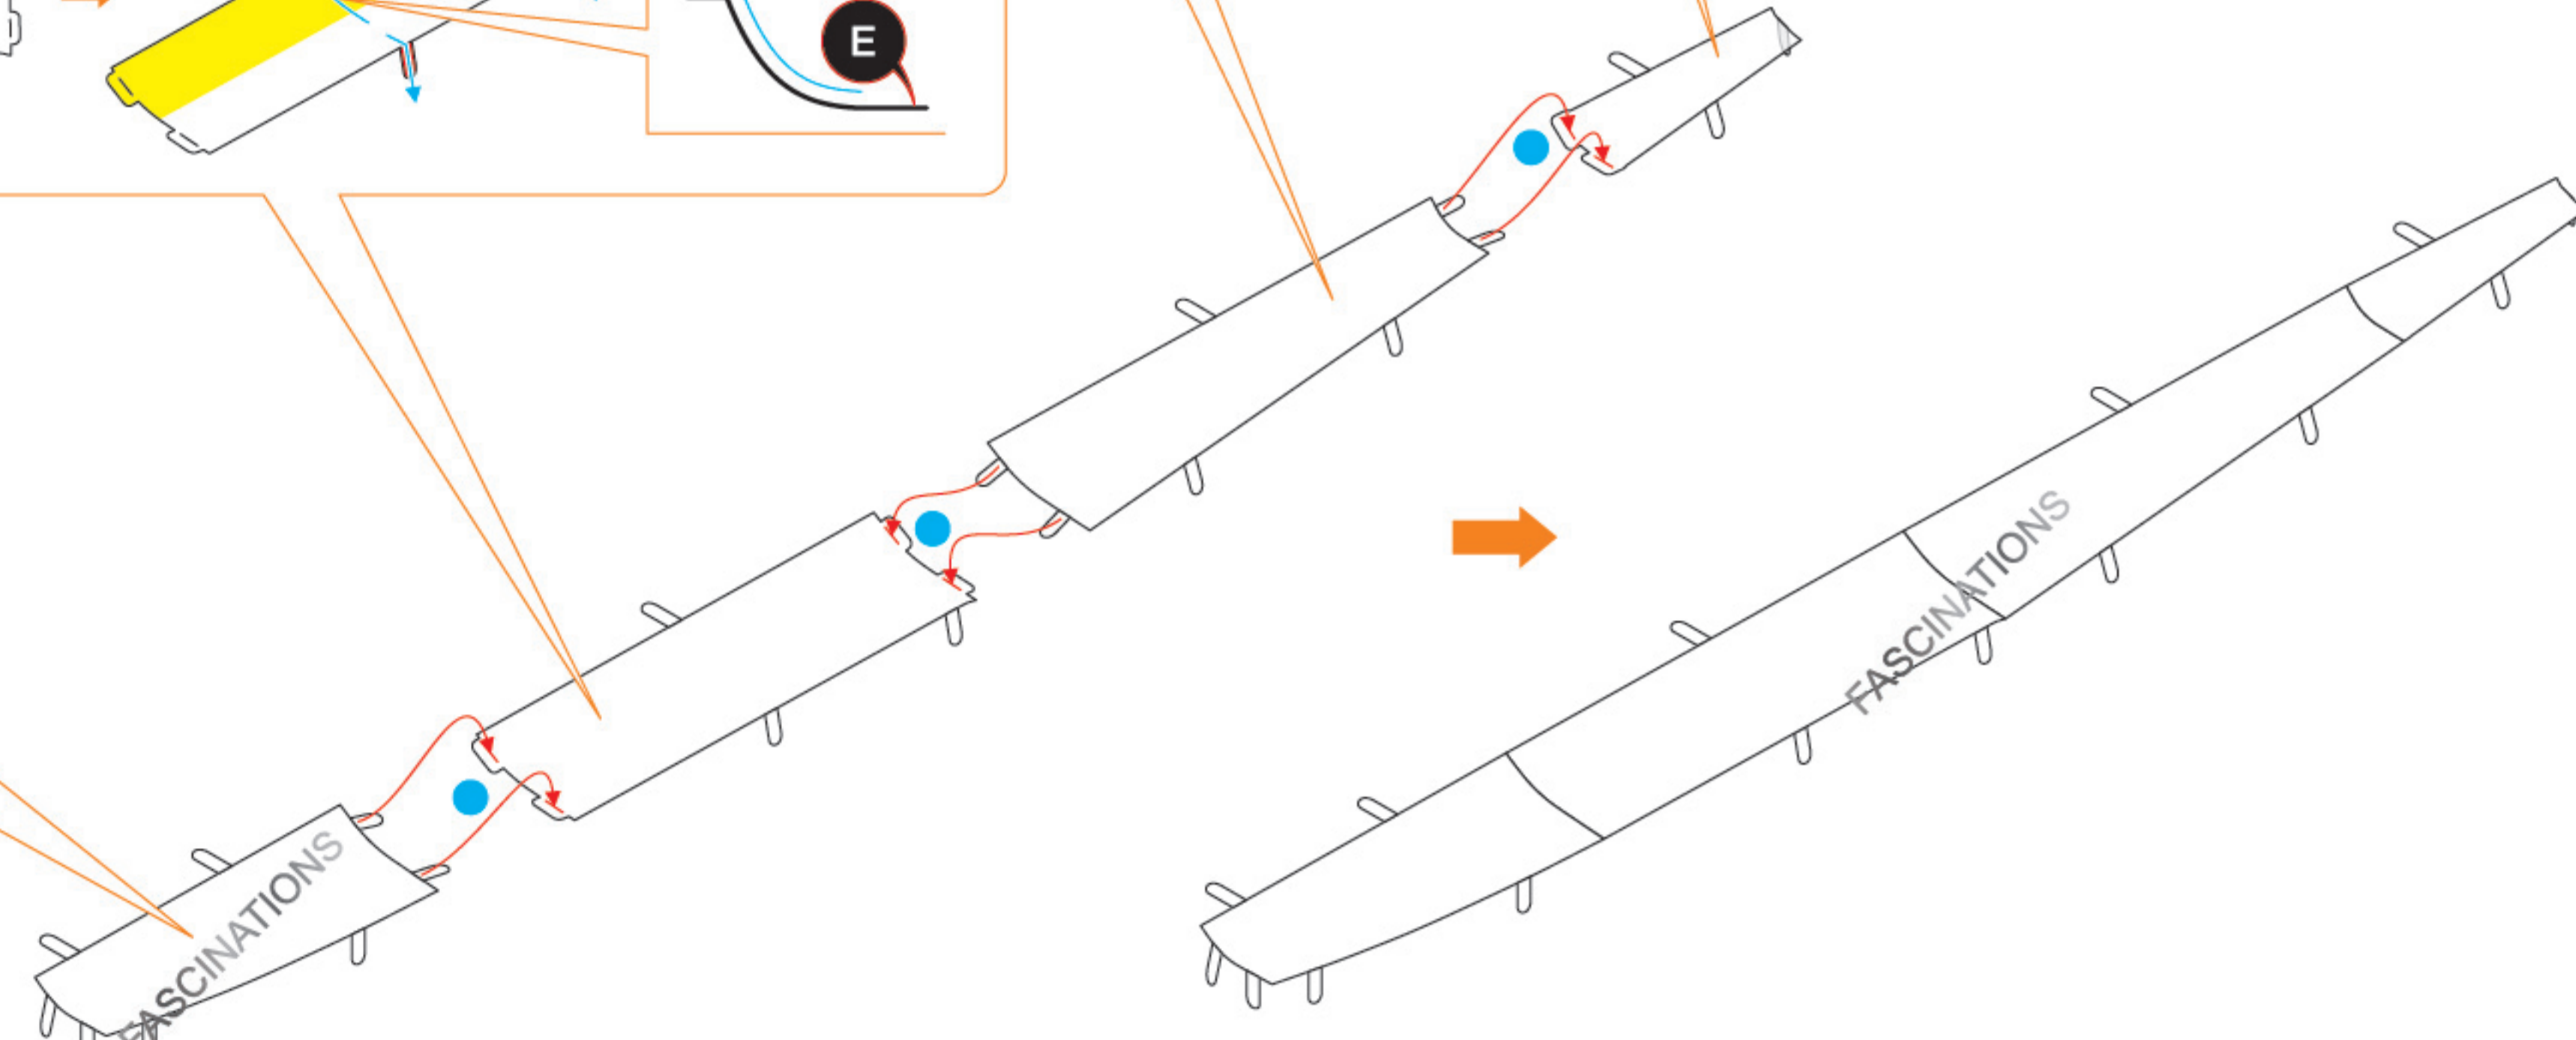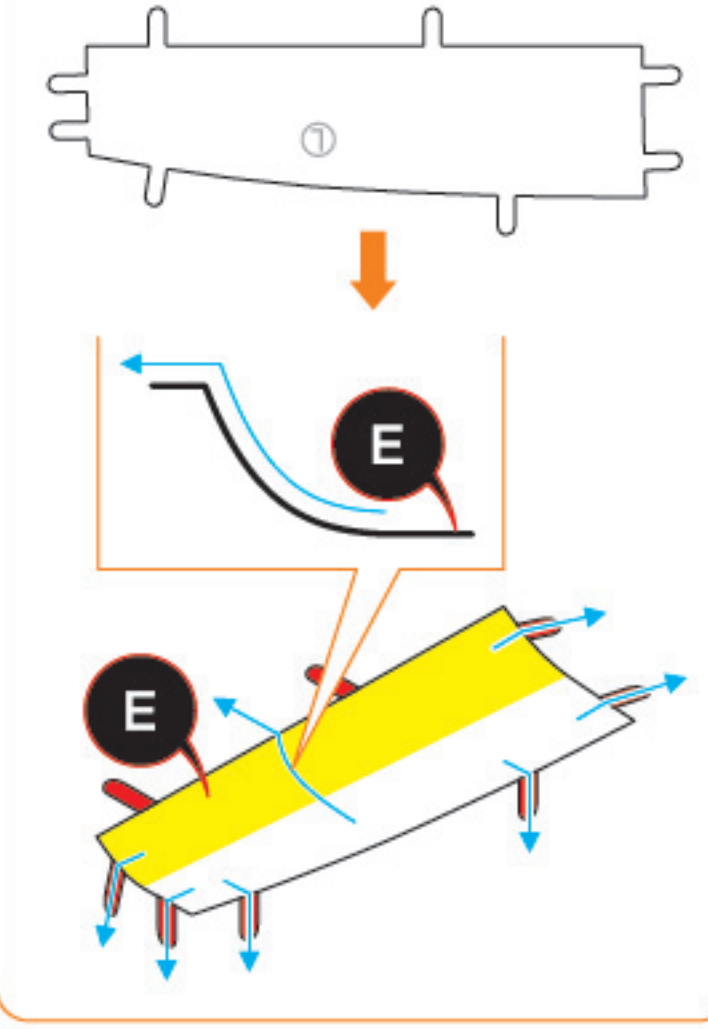


Step 10

A - 23

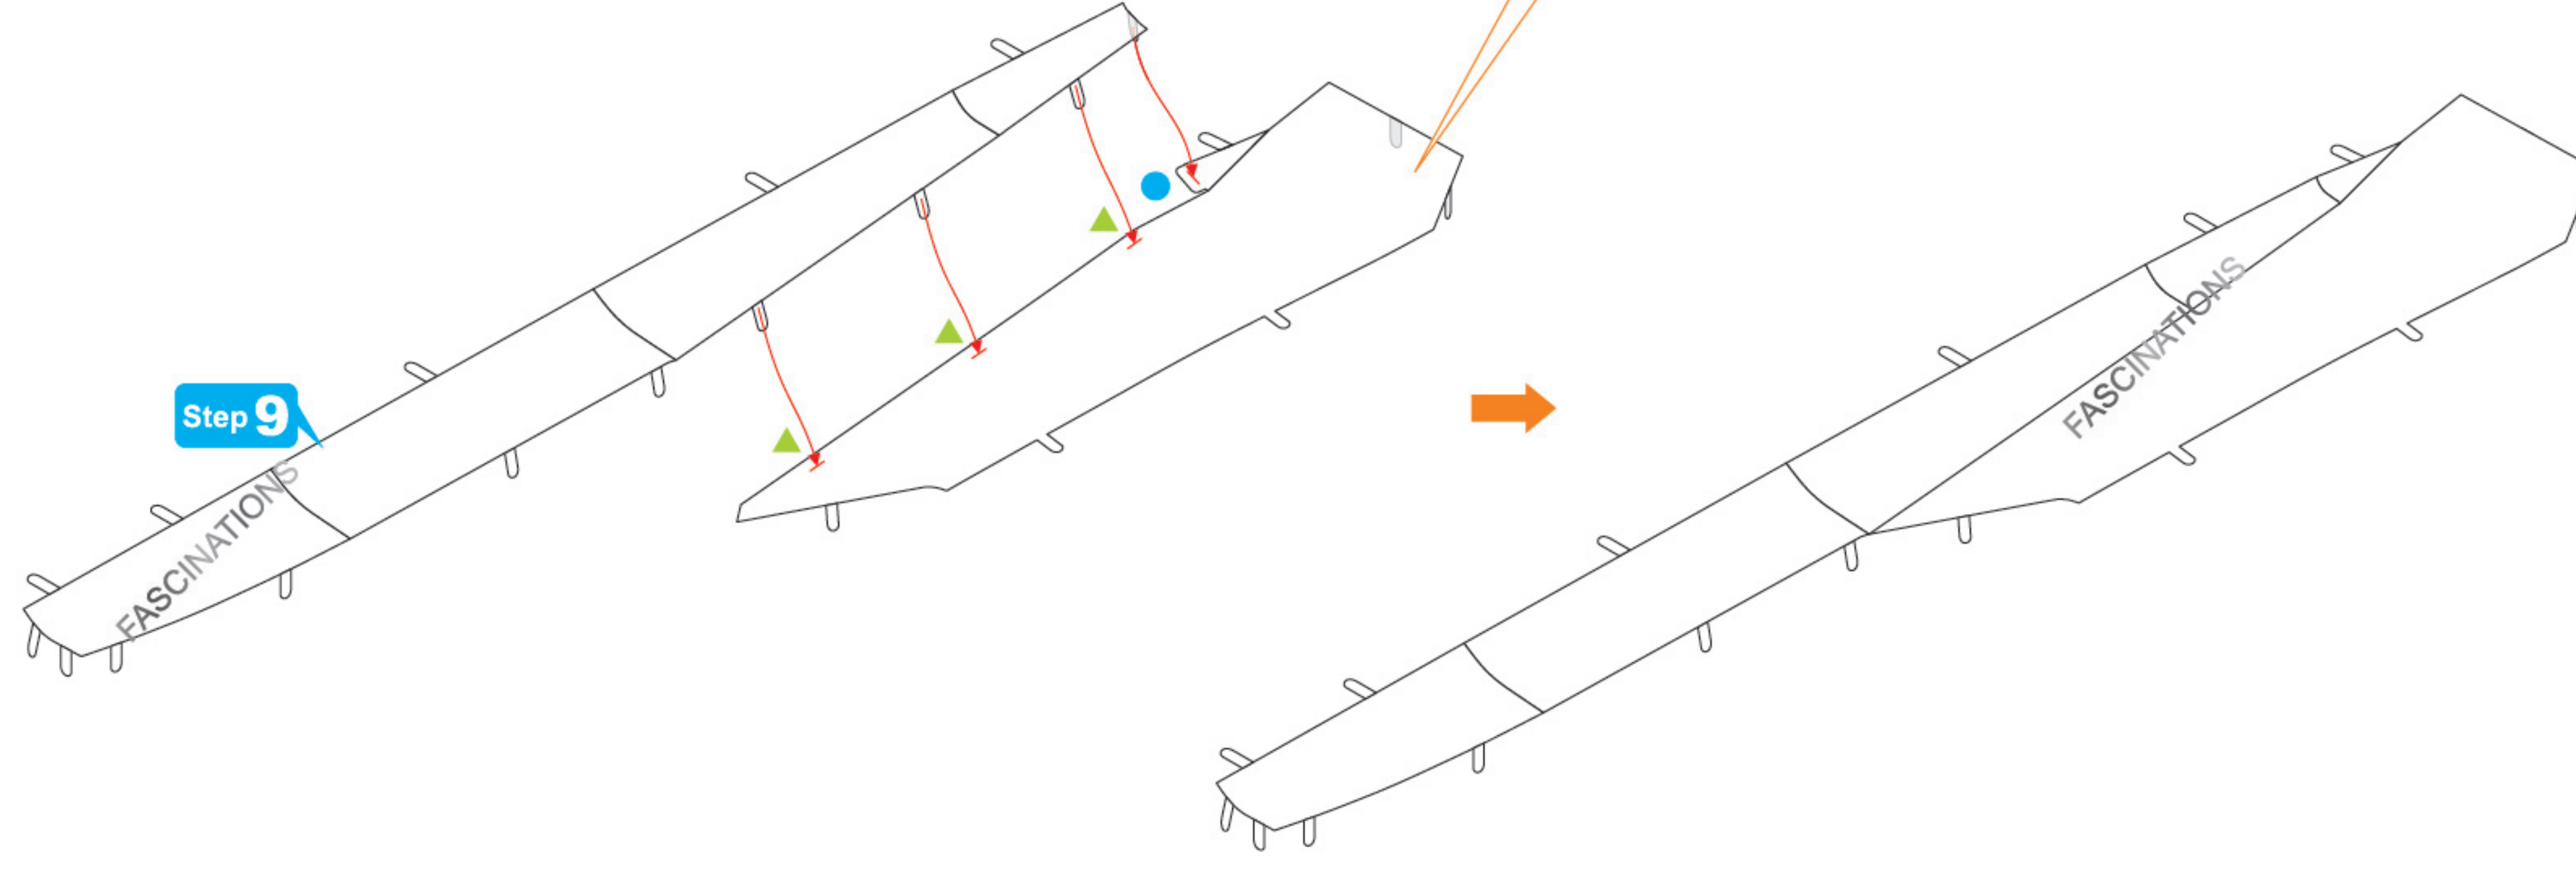


Step 11


A - 27

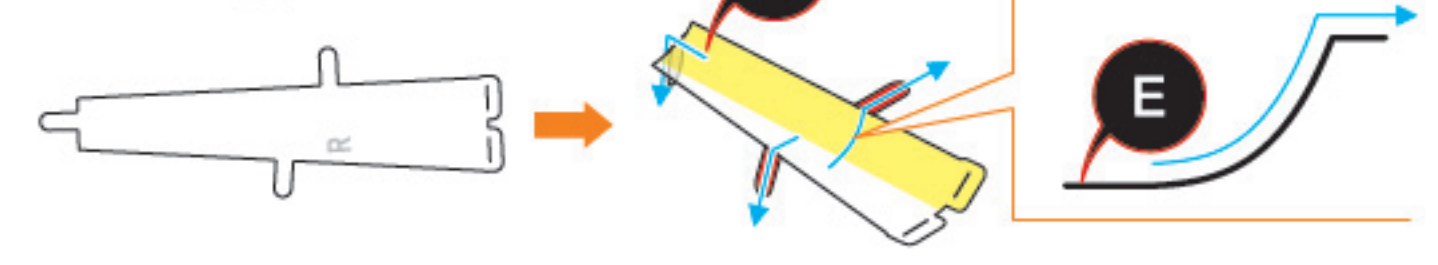



C - 26

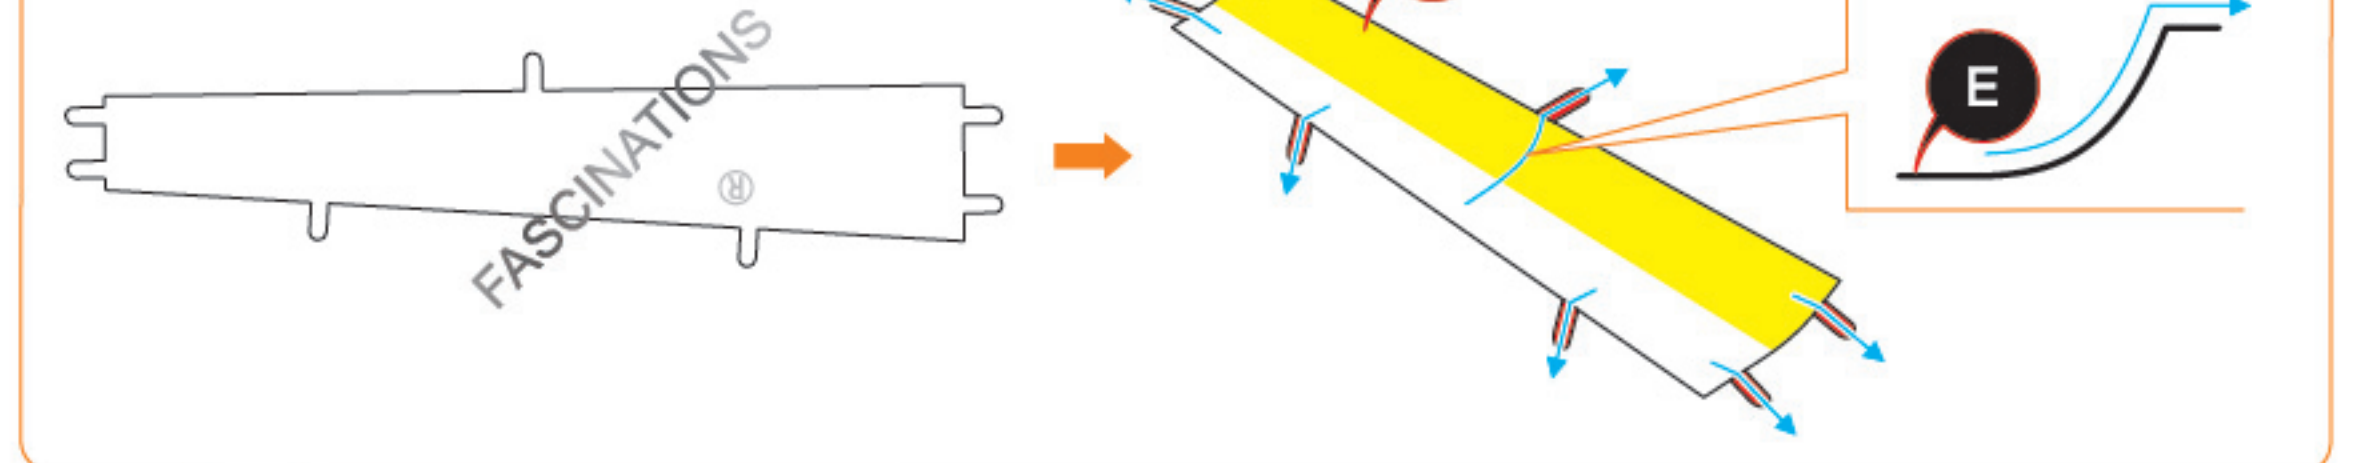

C - 25


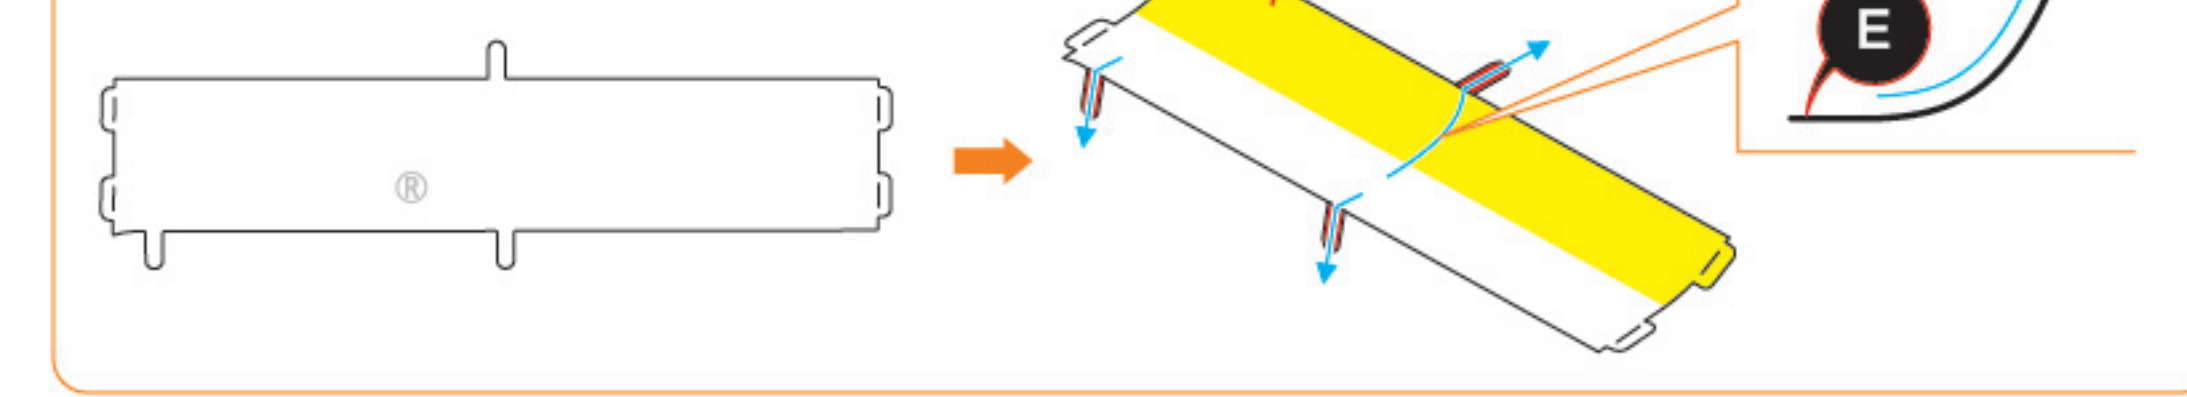


C - 24

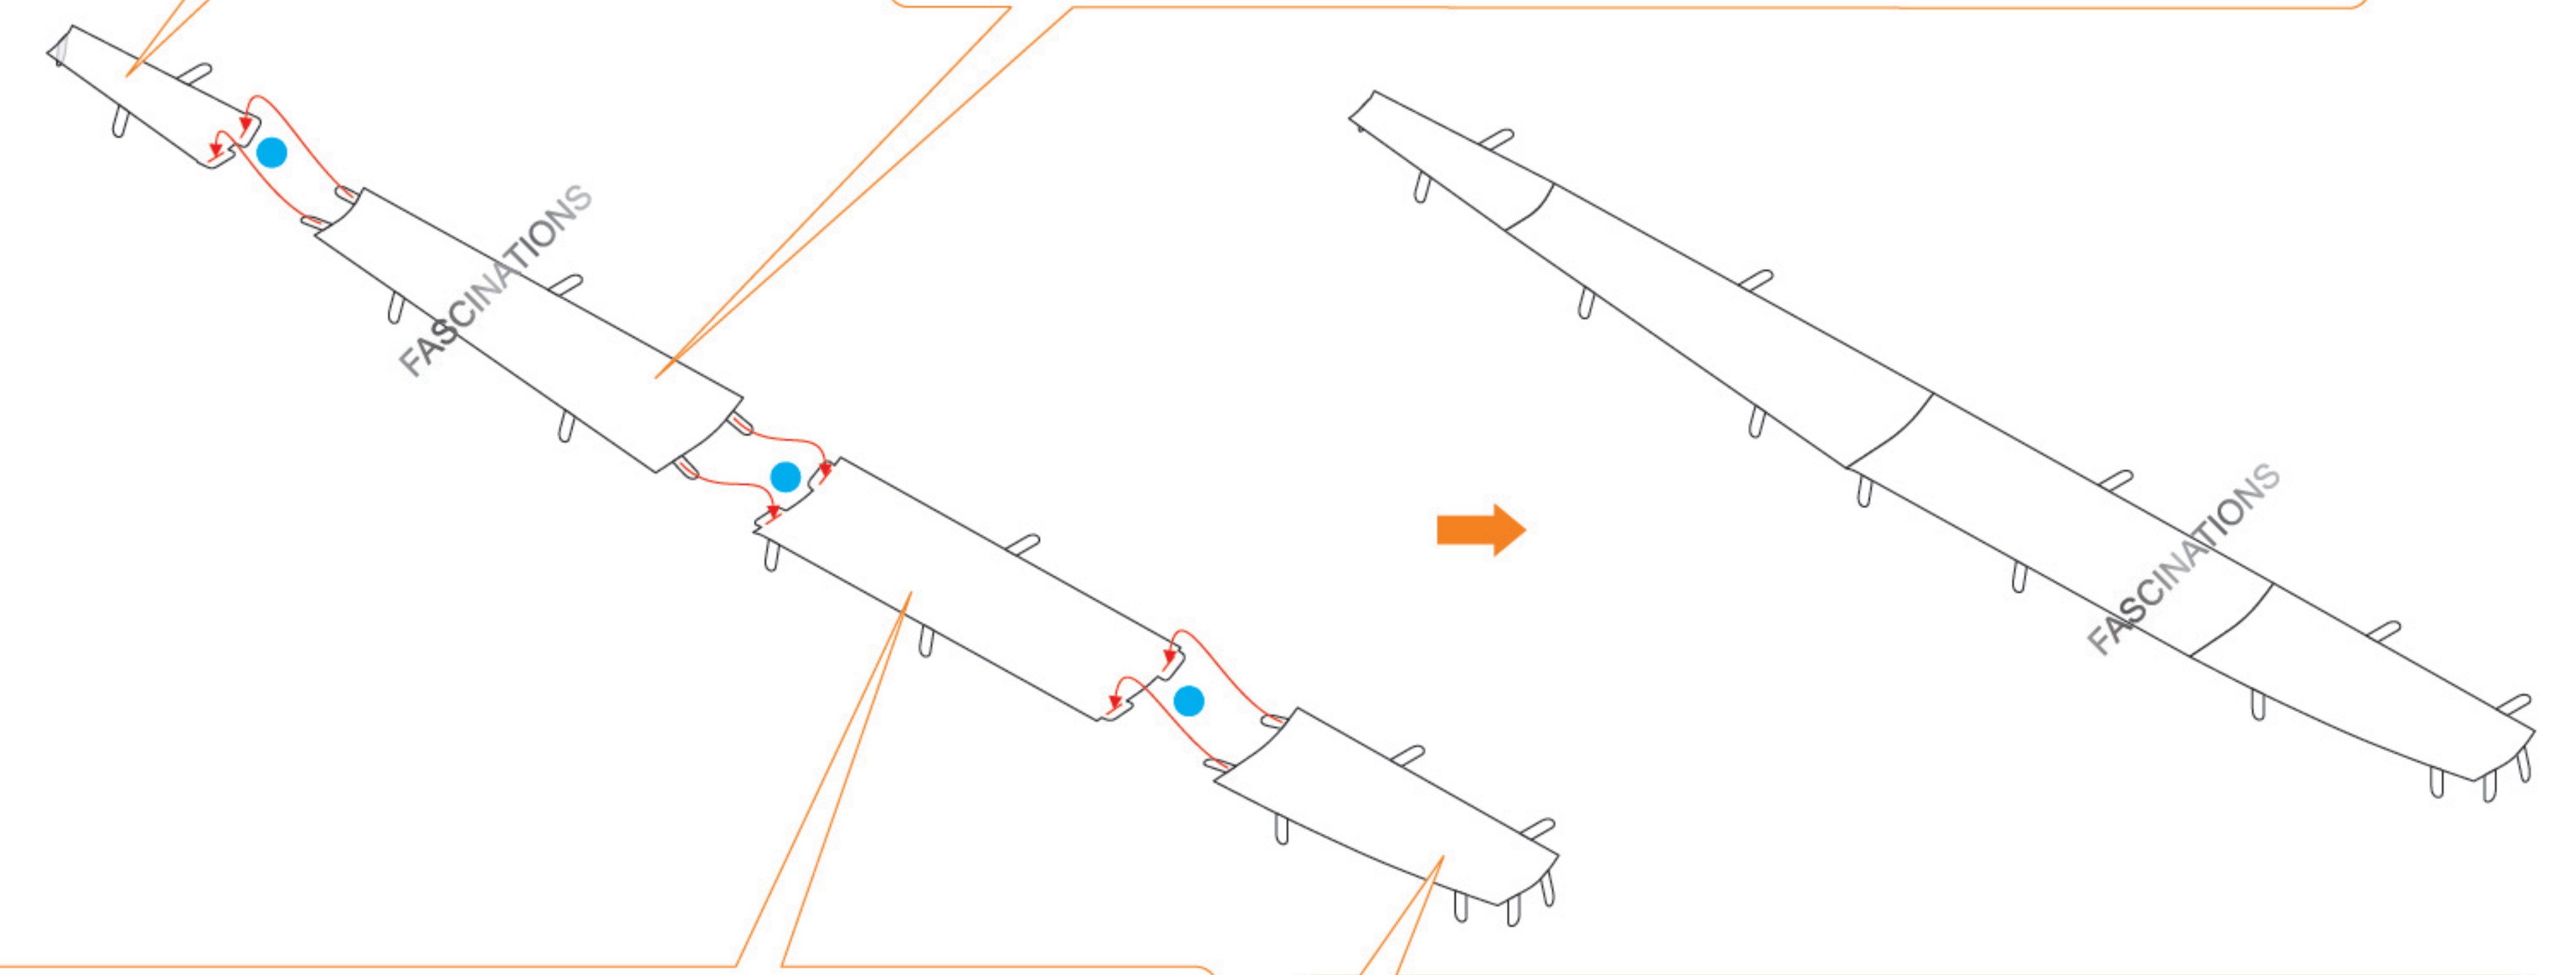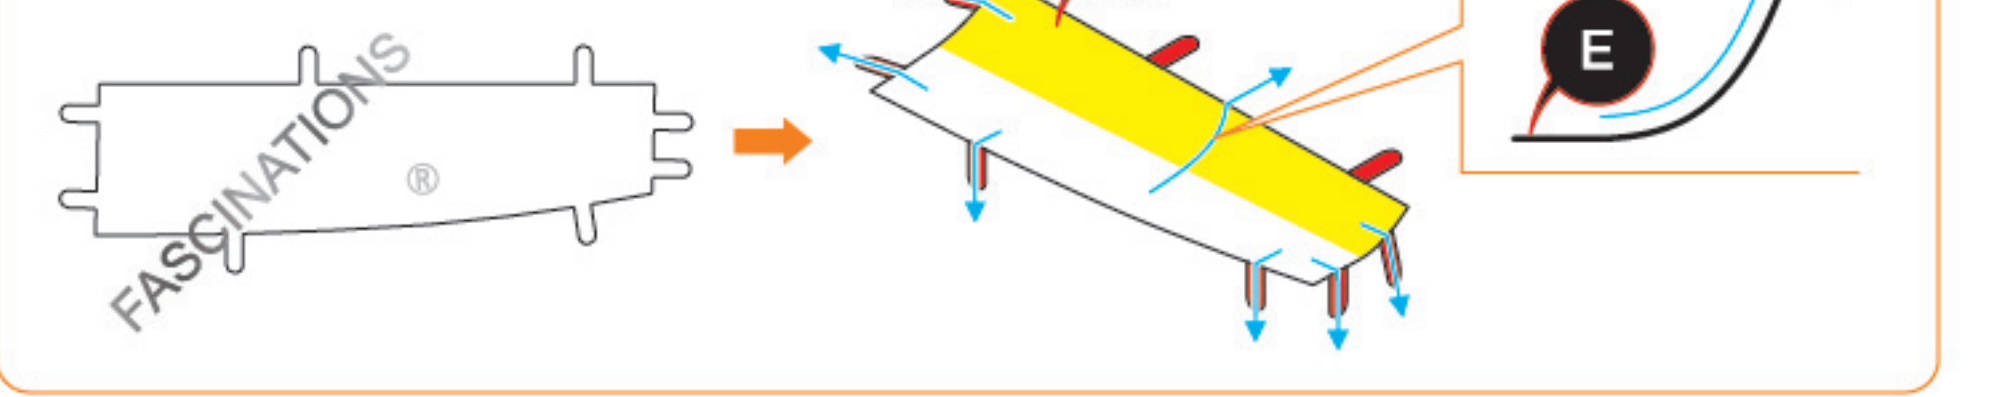


Step 12


B - 28

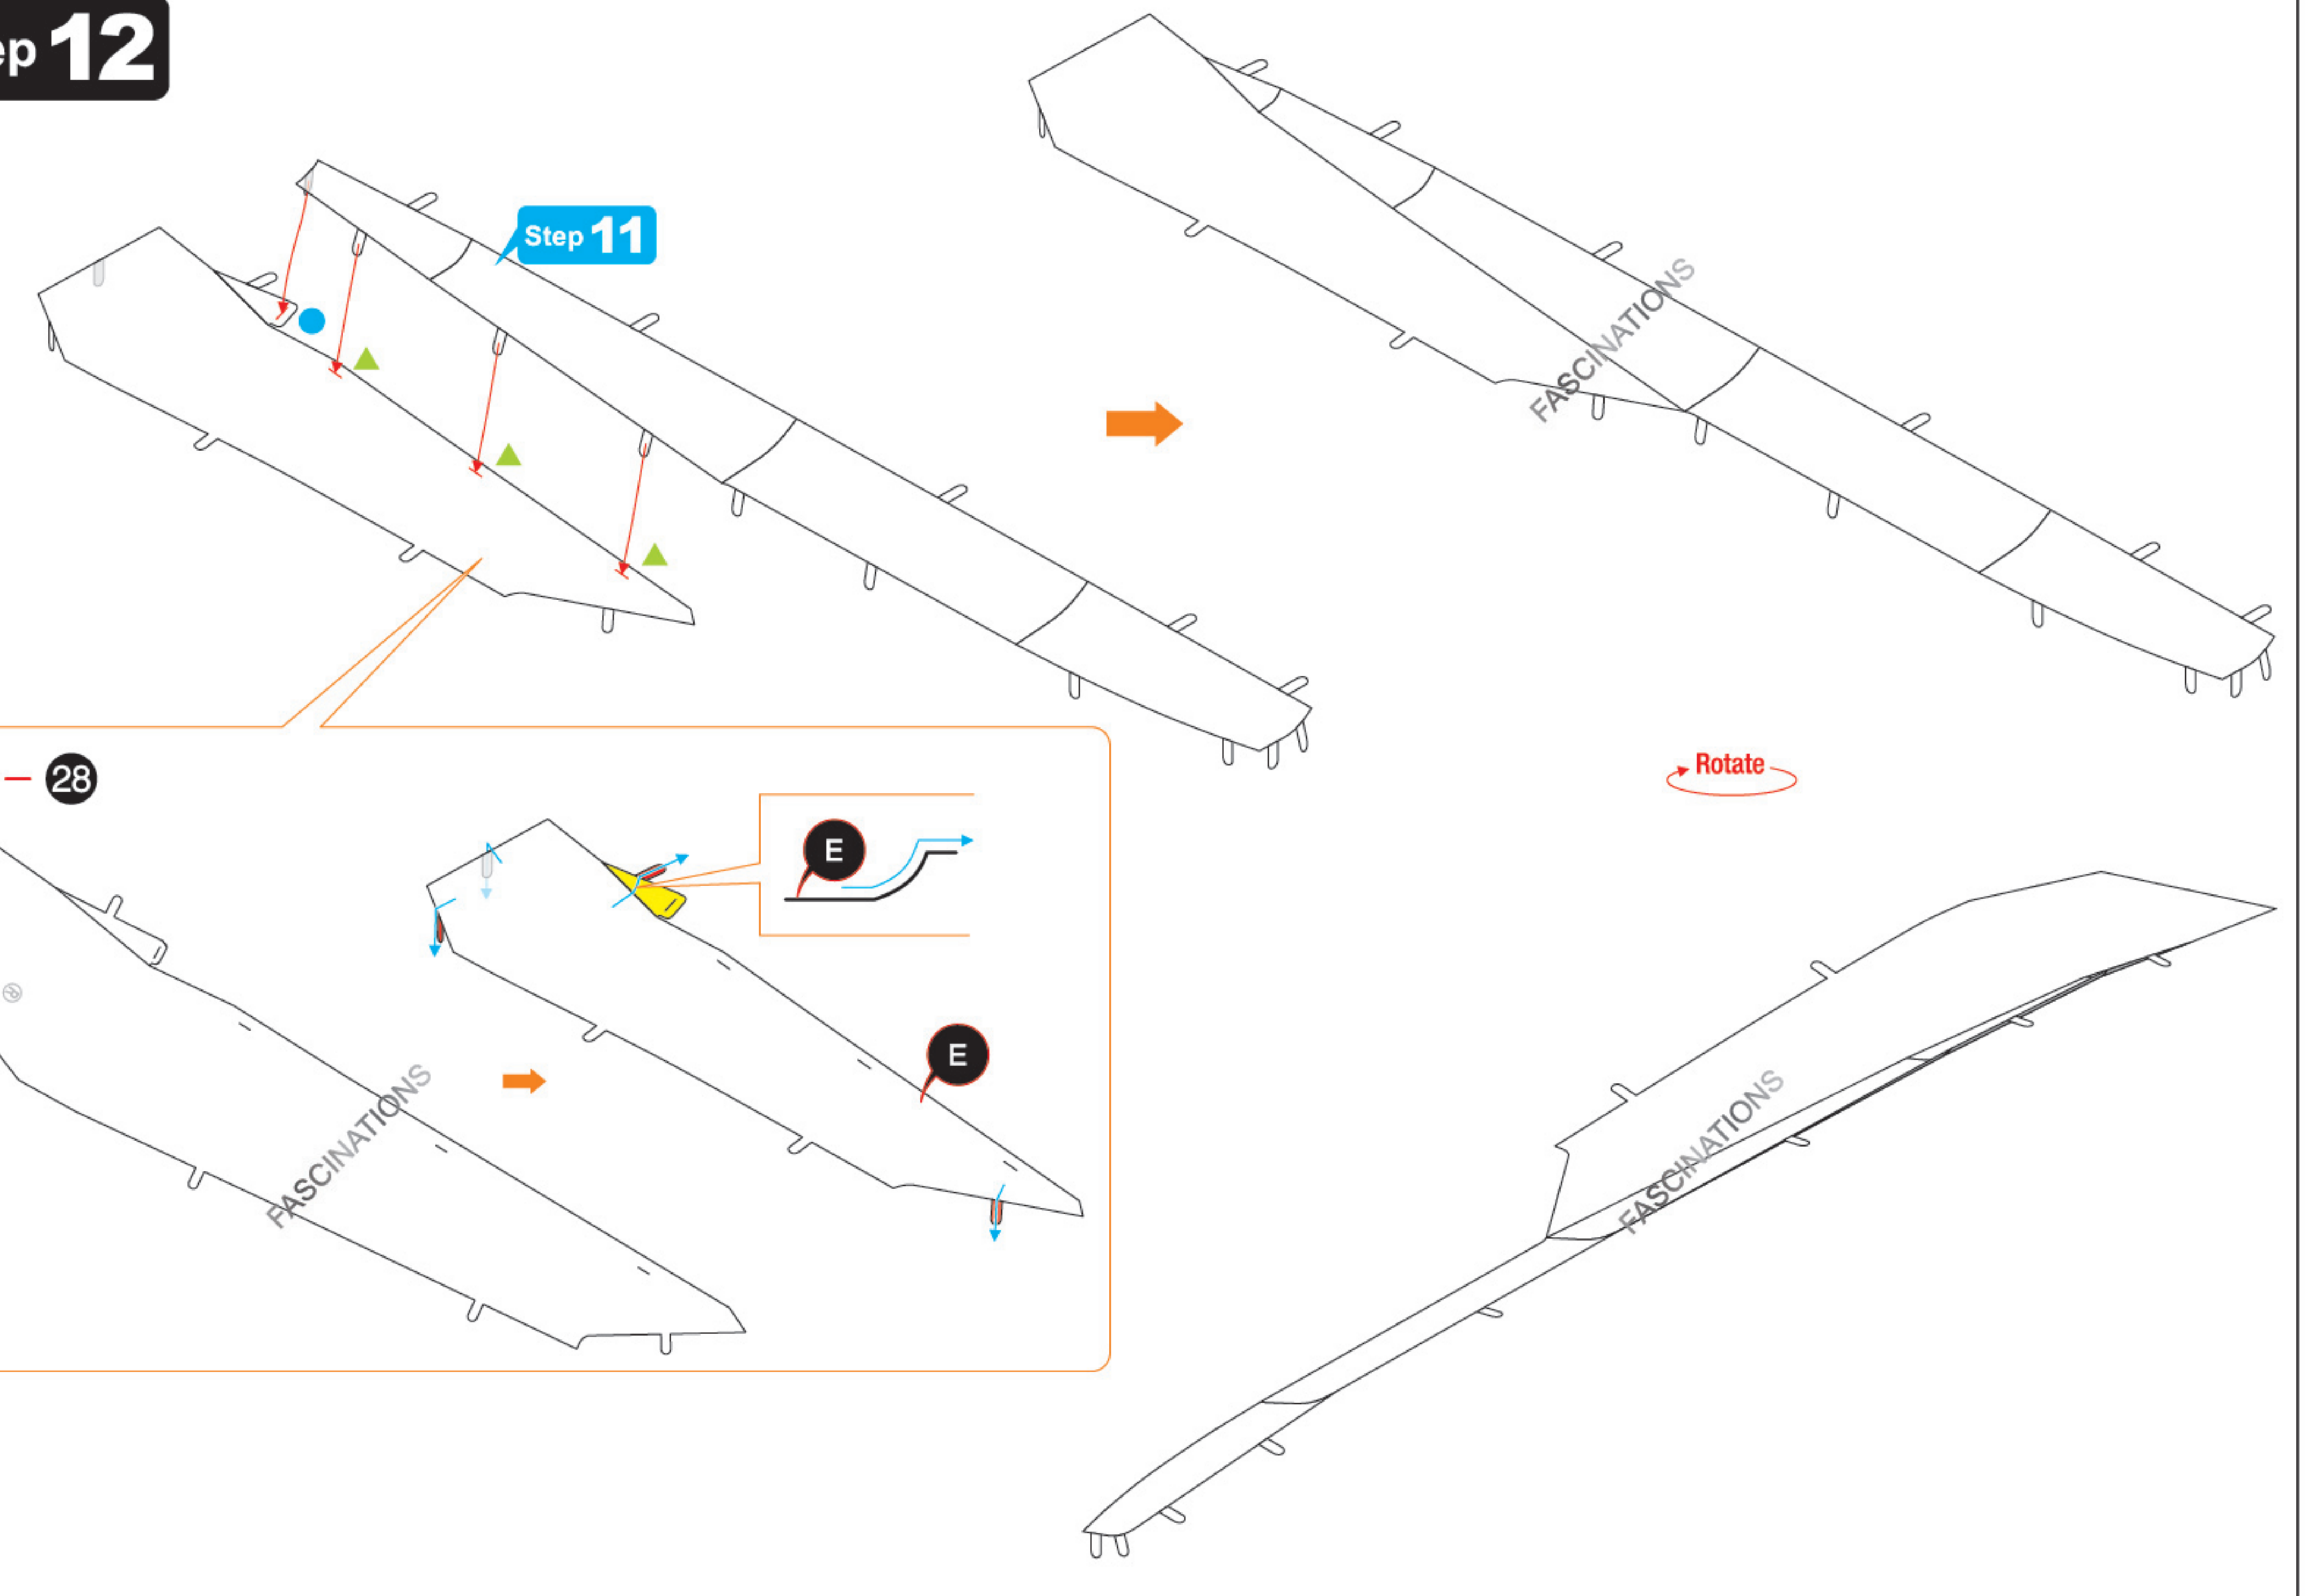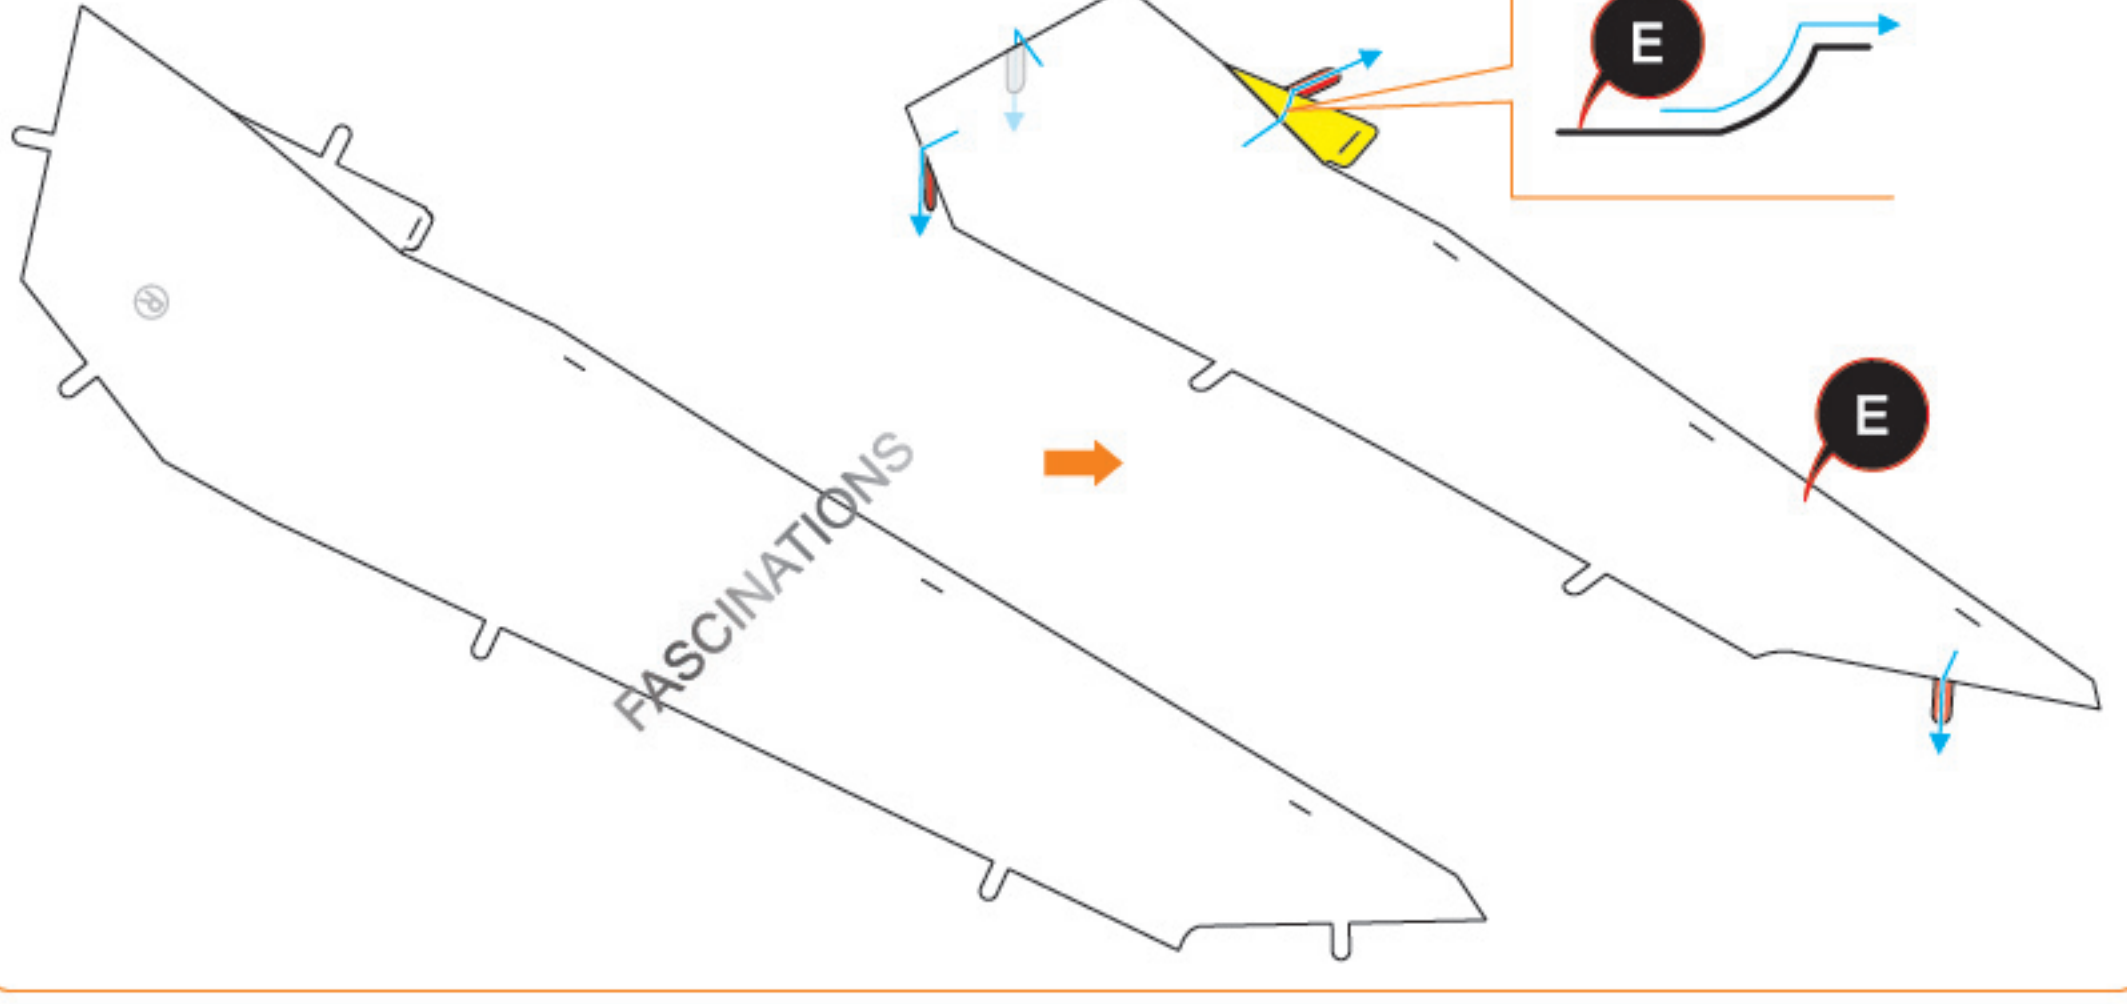


Step 13

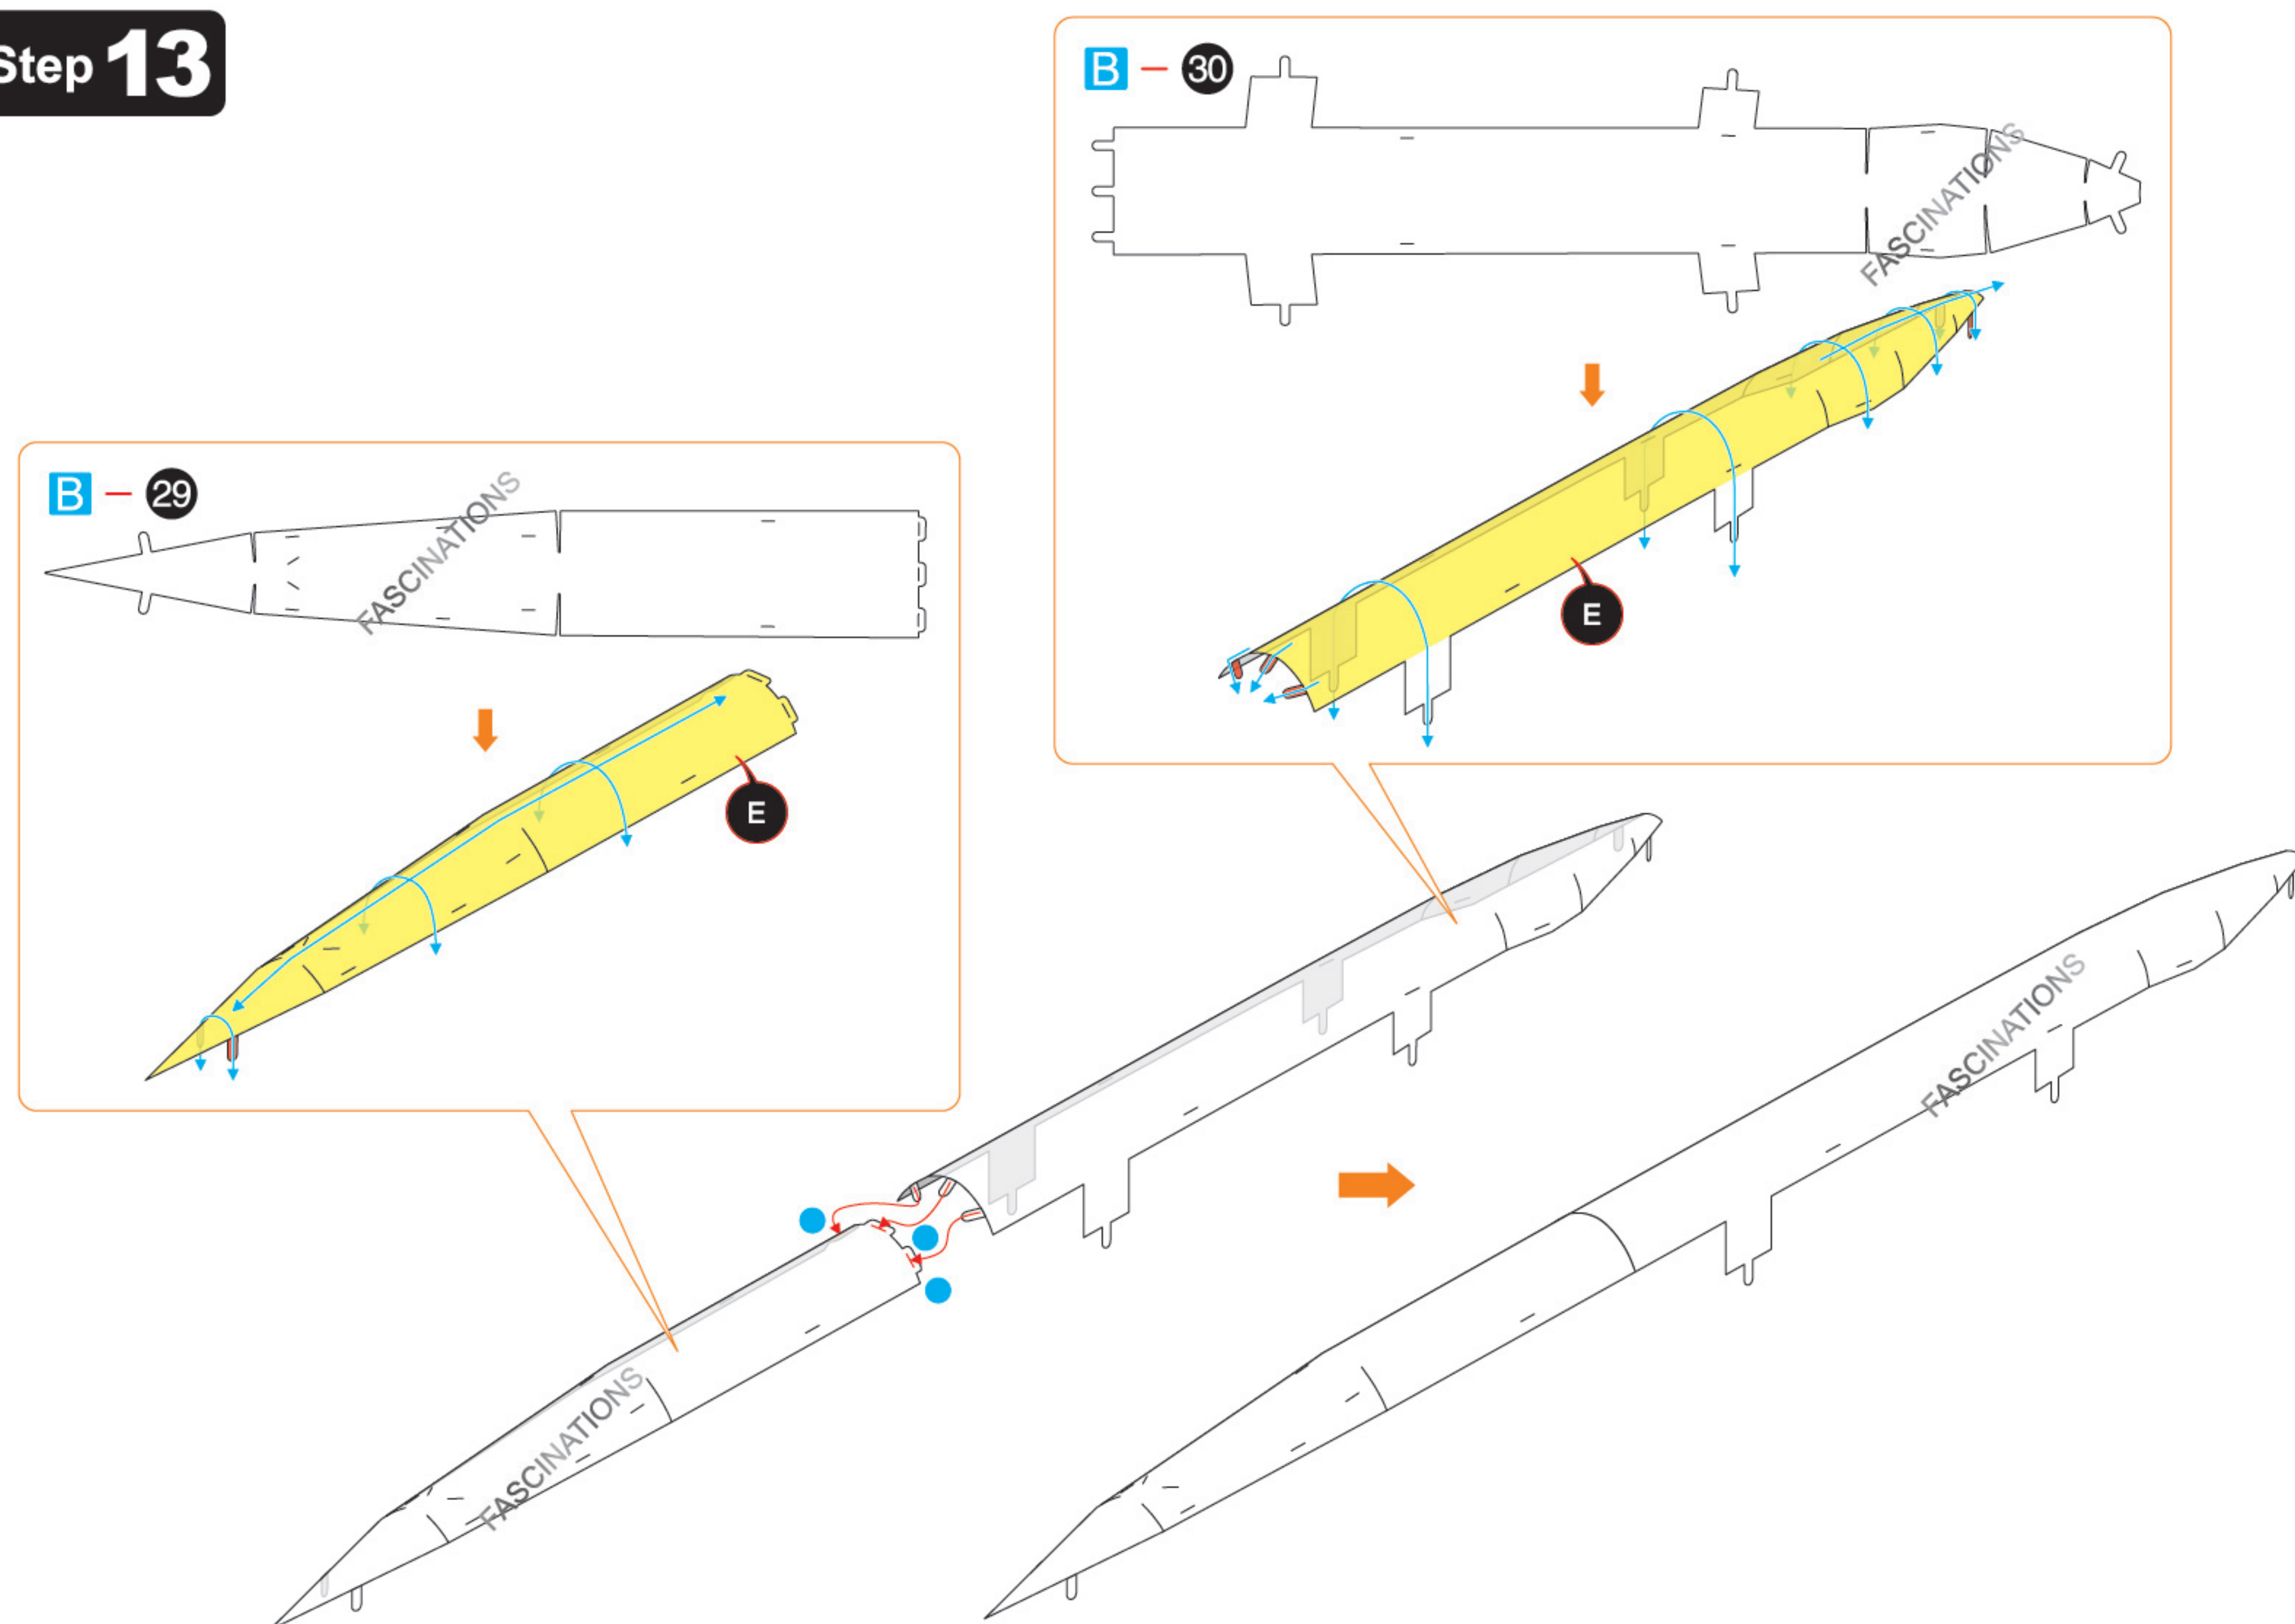


Step 14

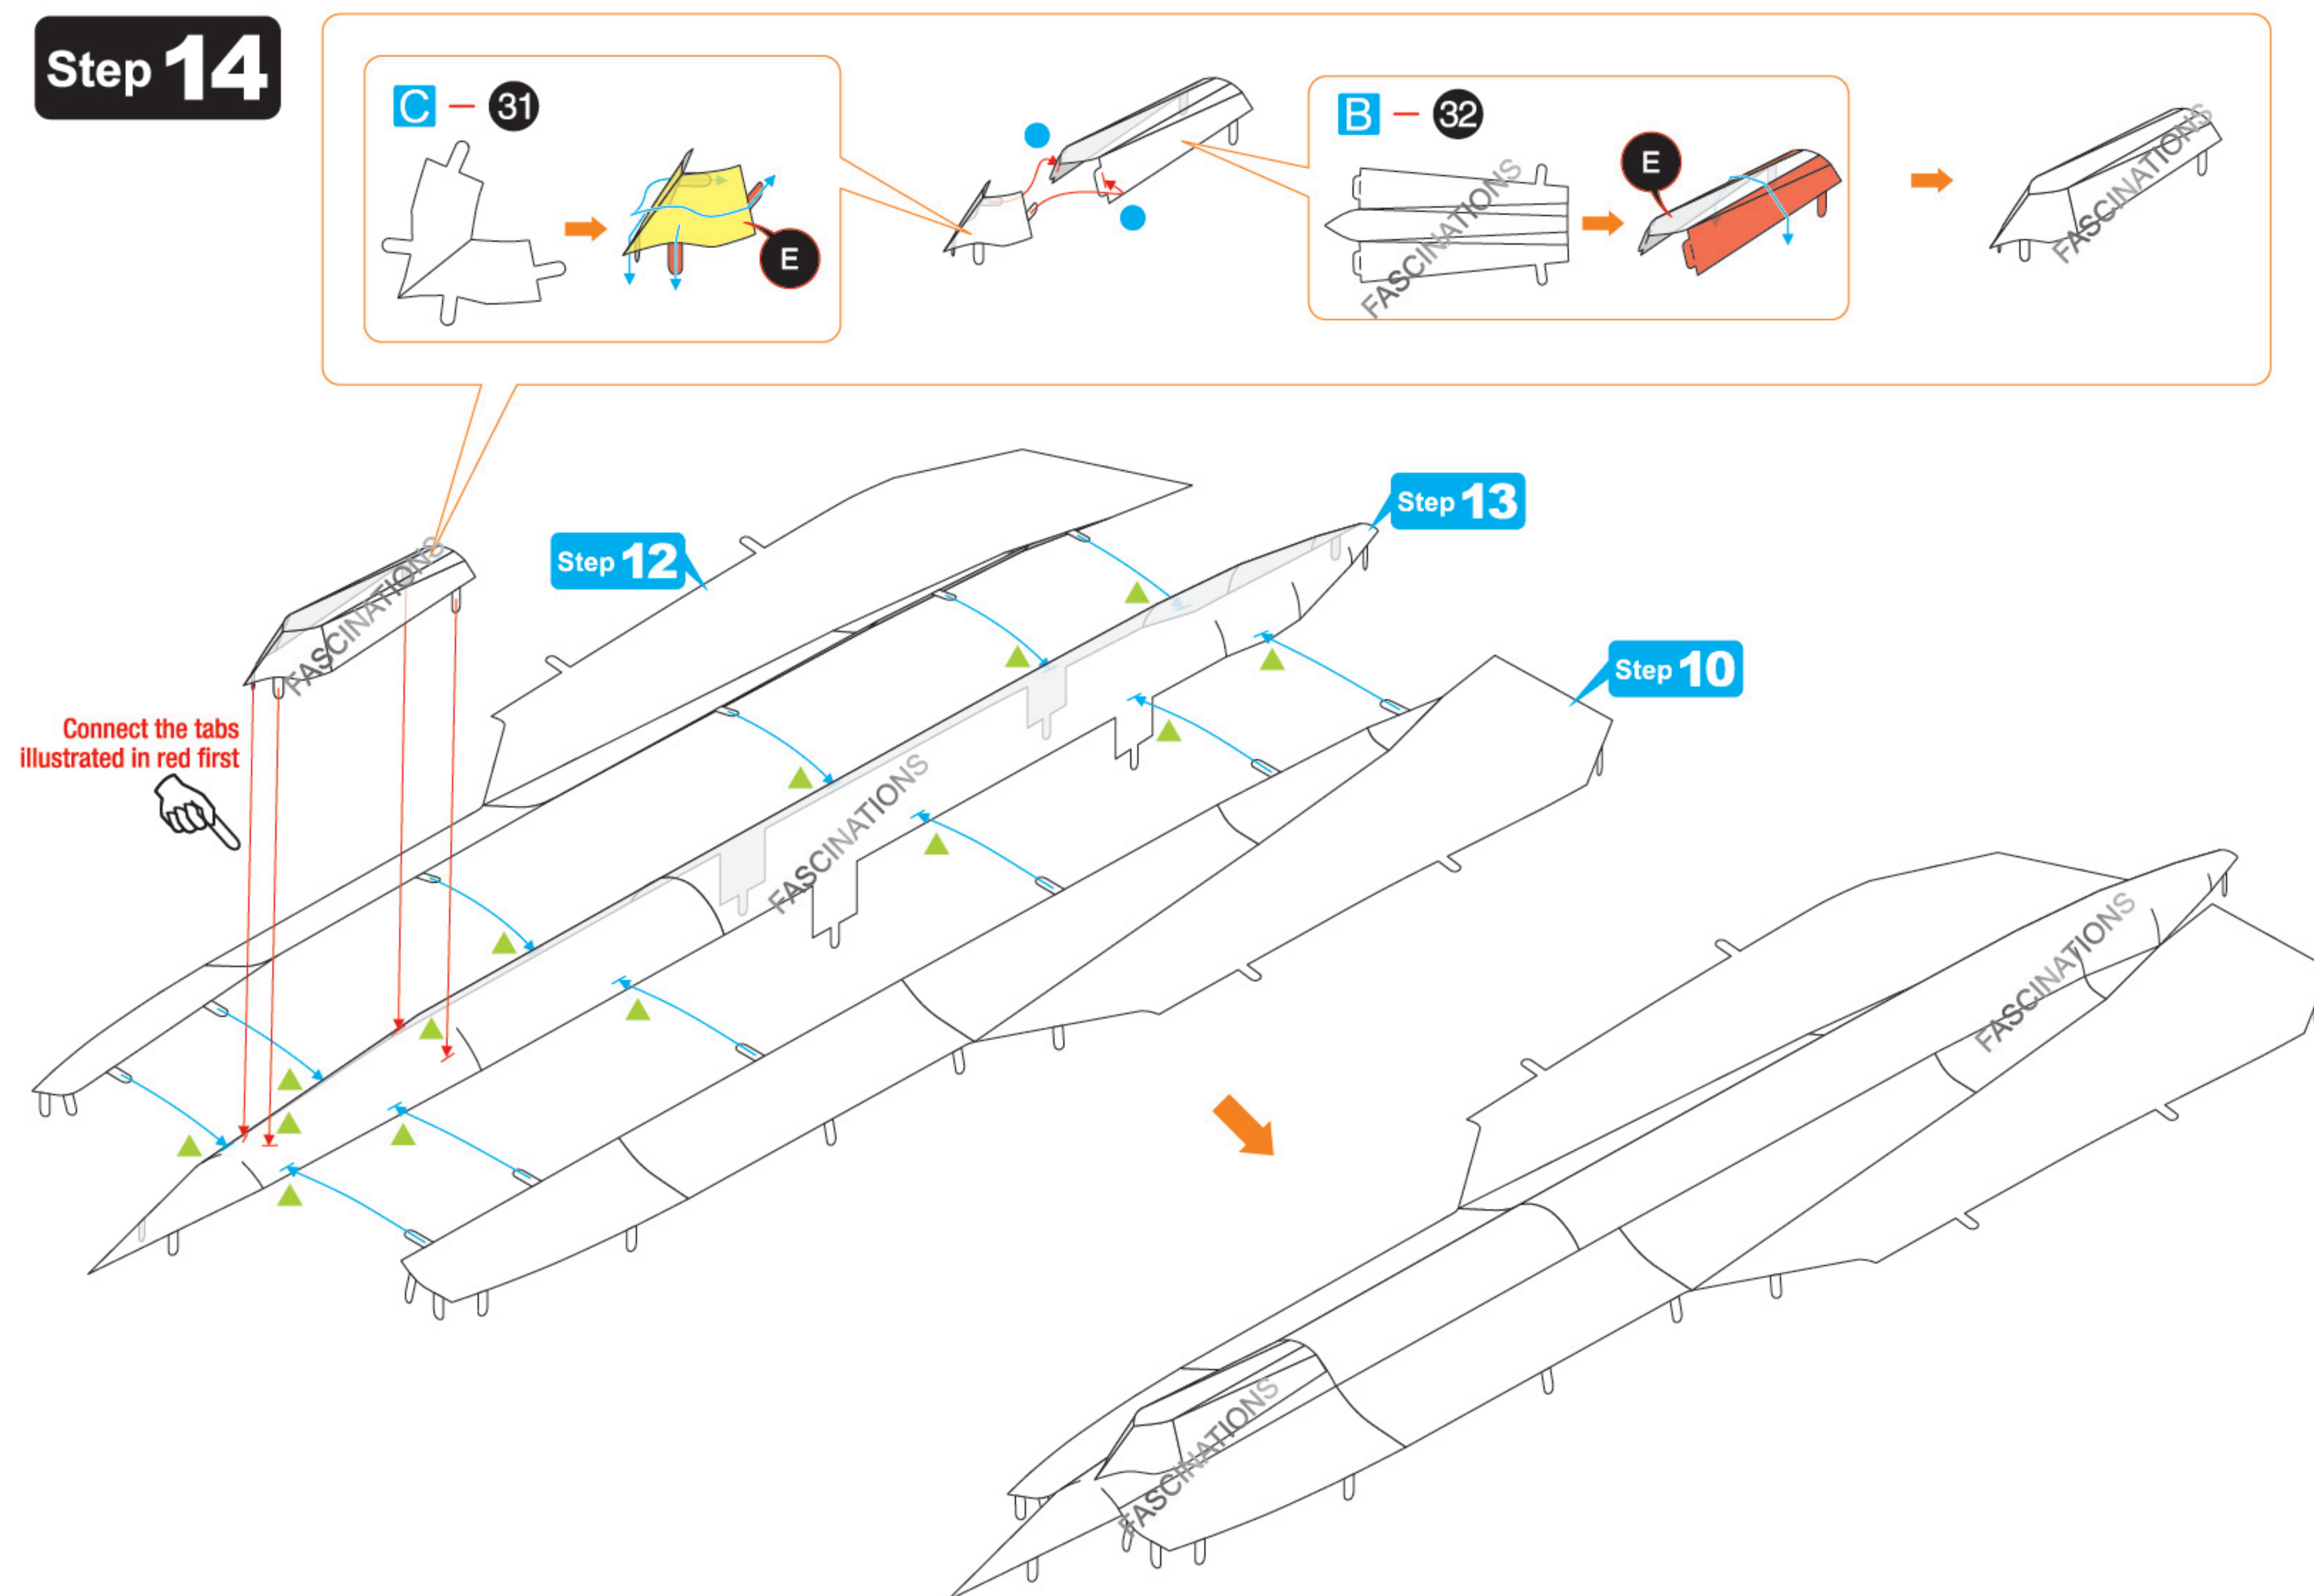

Step 15

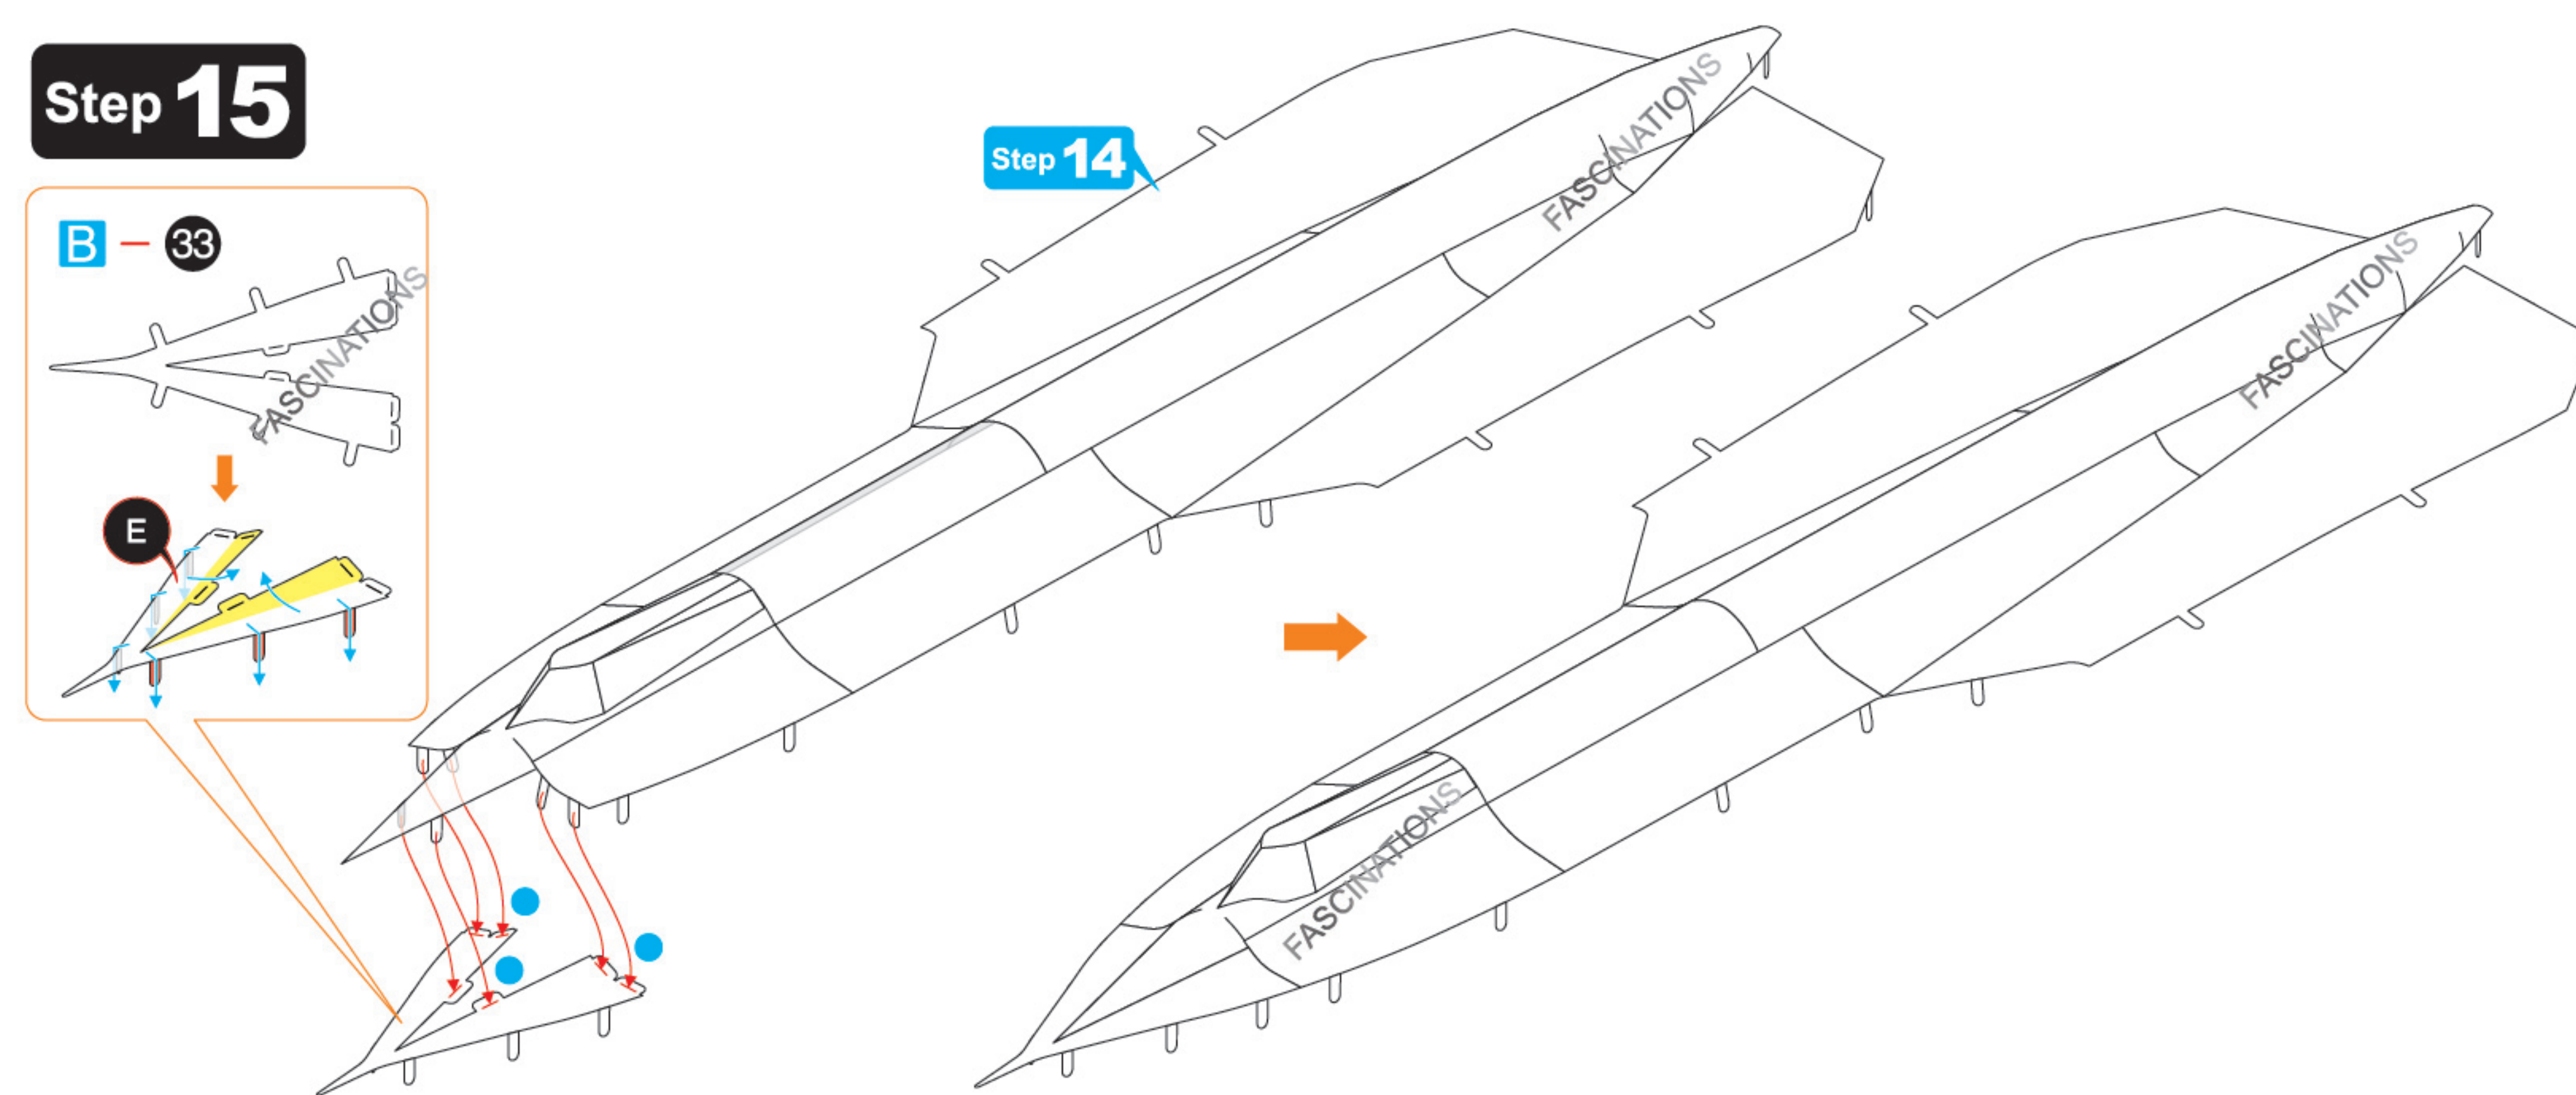


Step 16

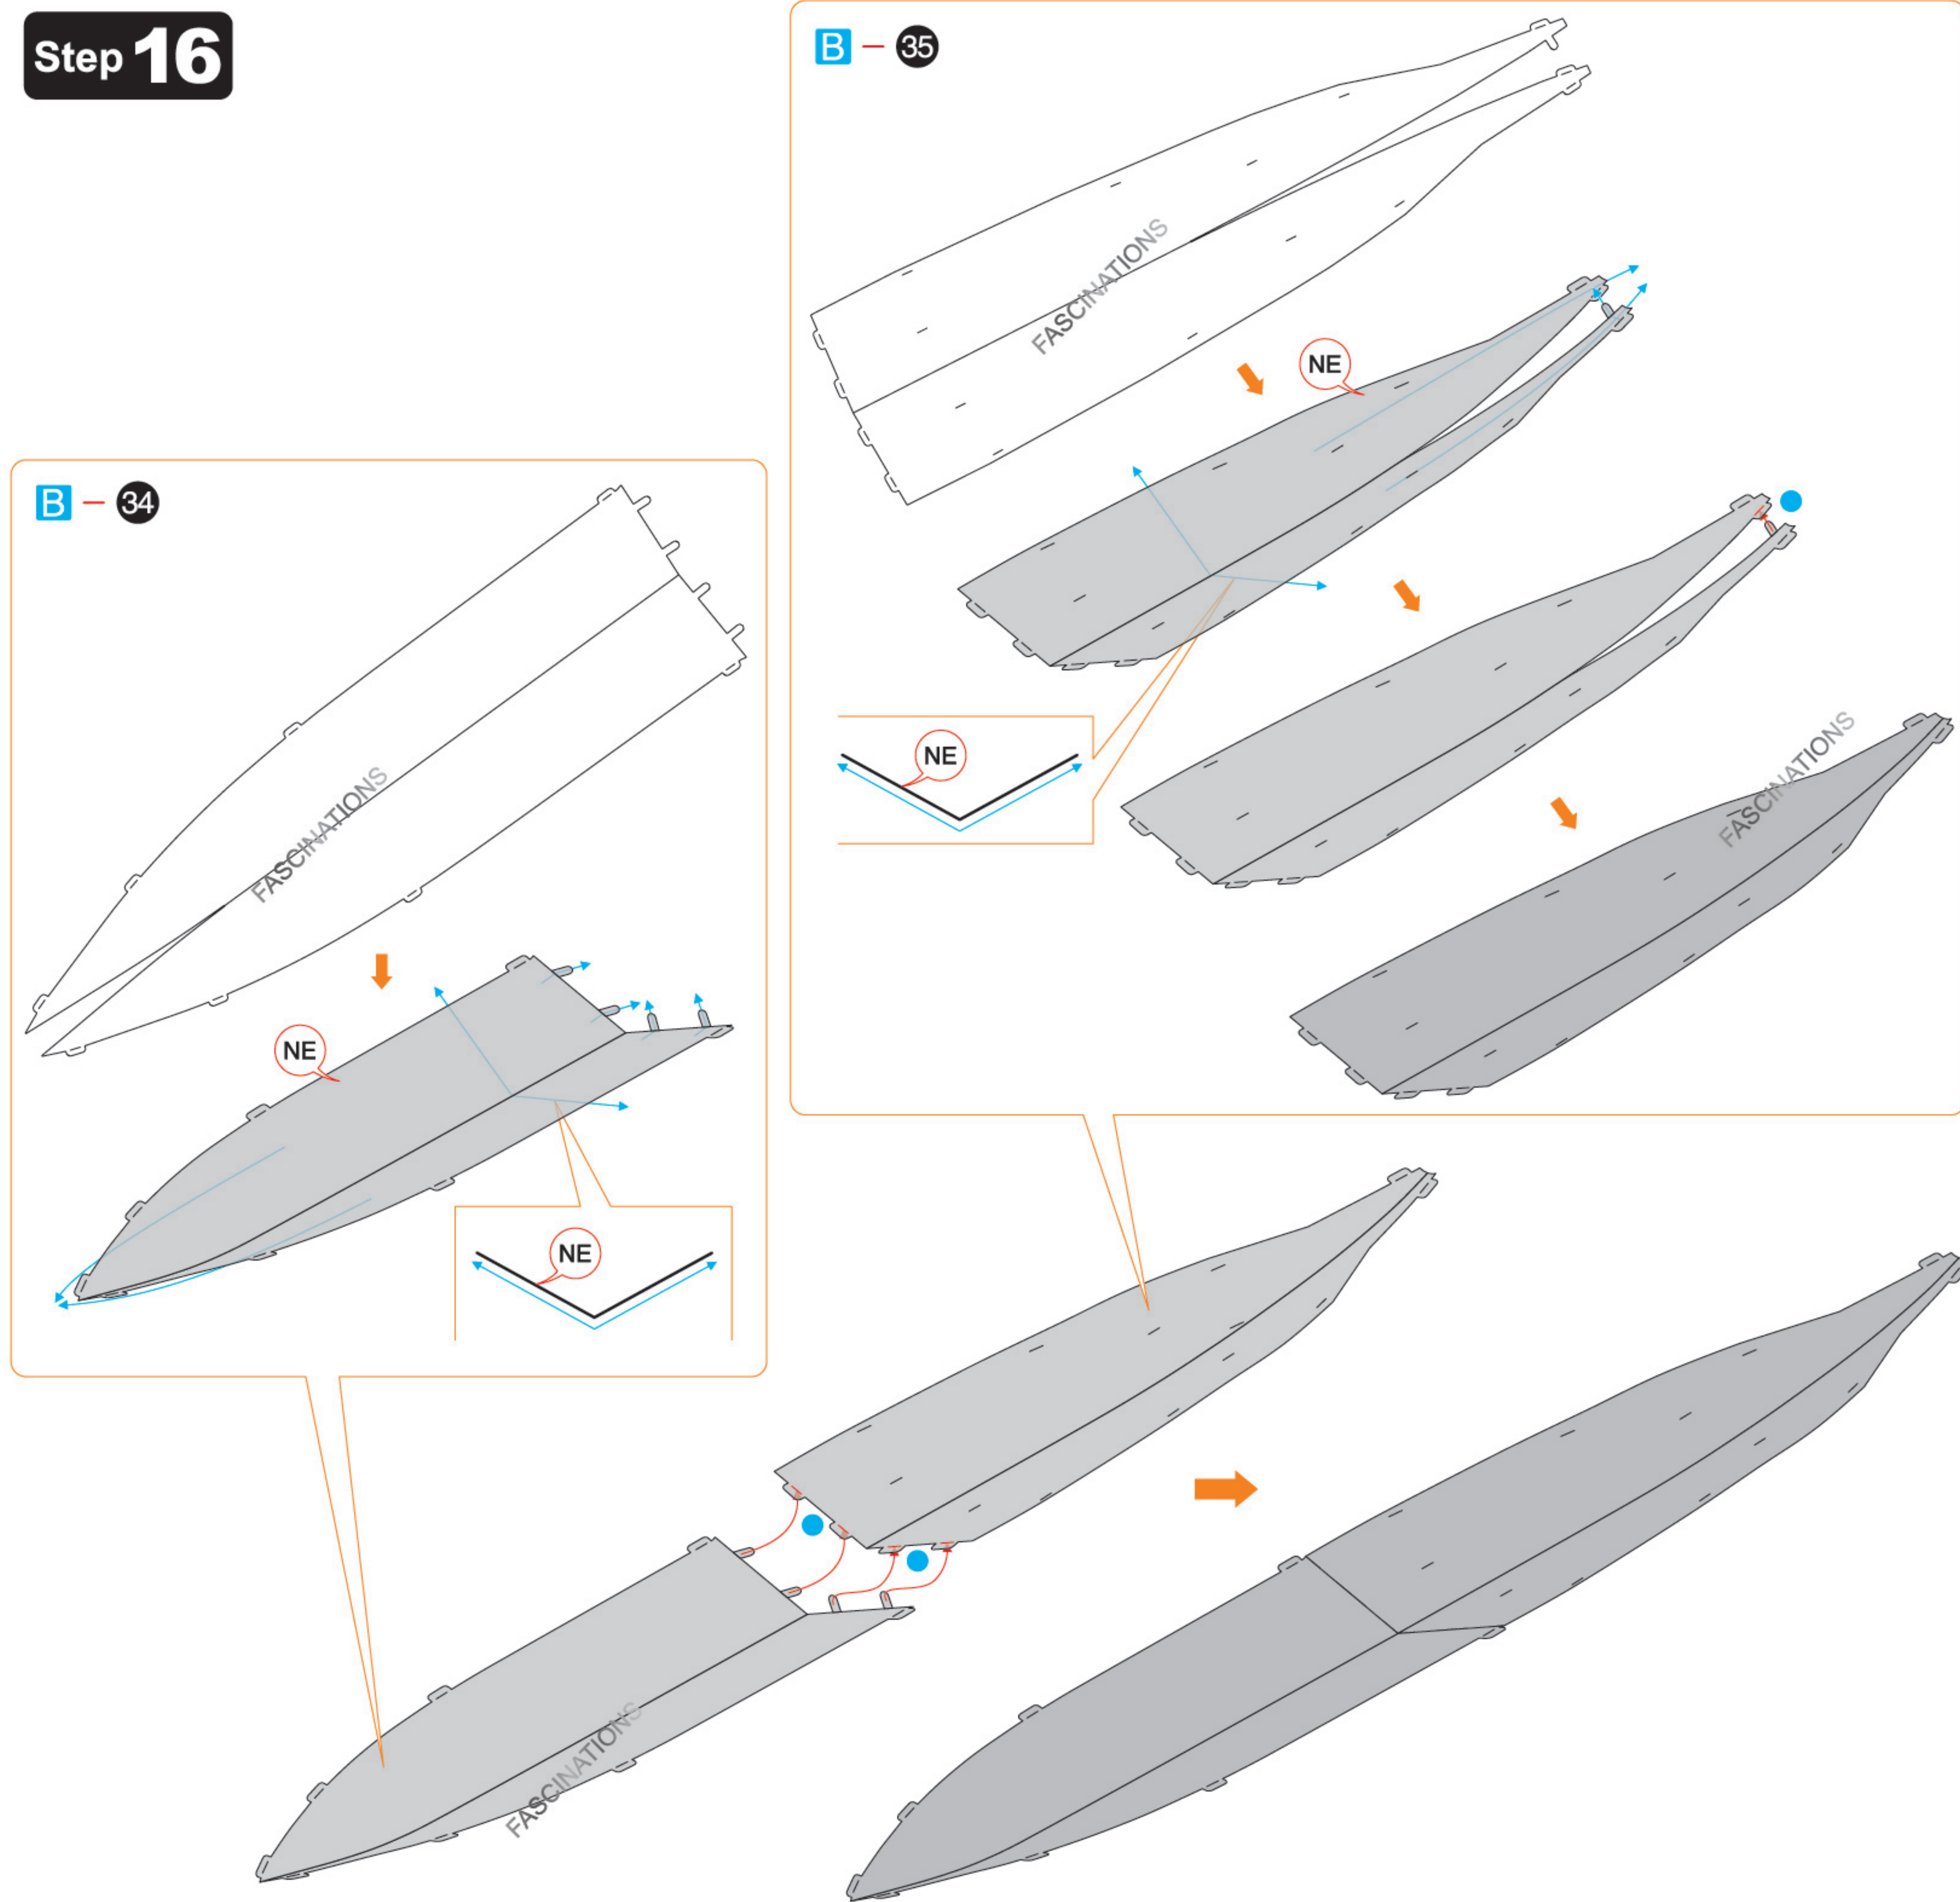


Step 17


C - 36

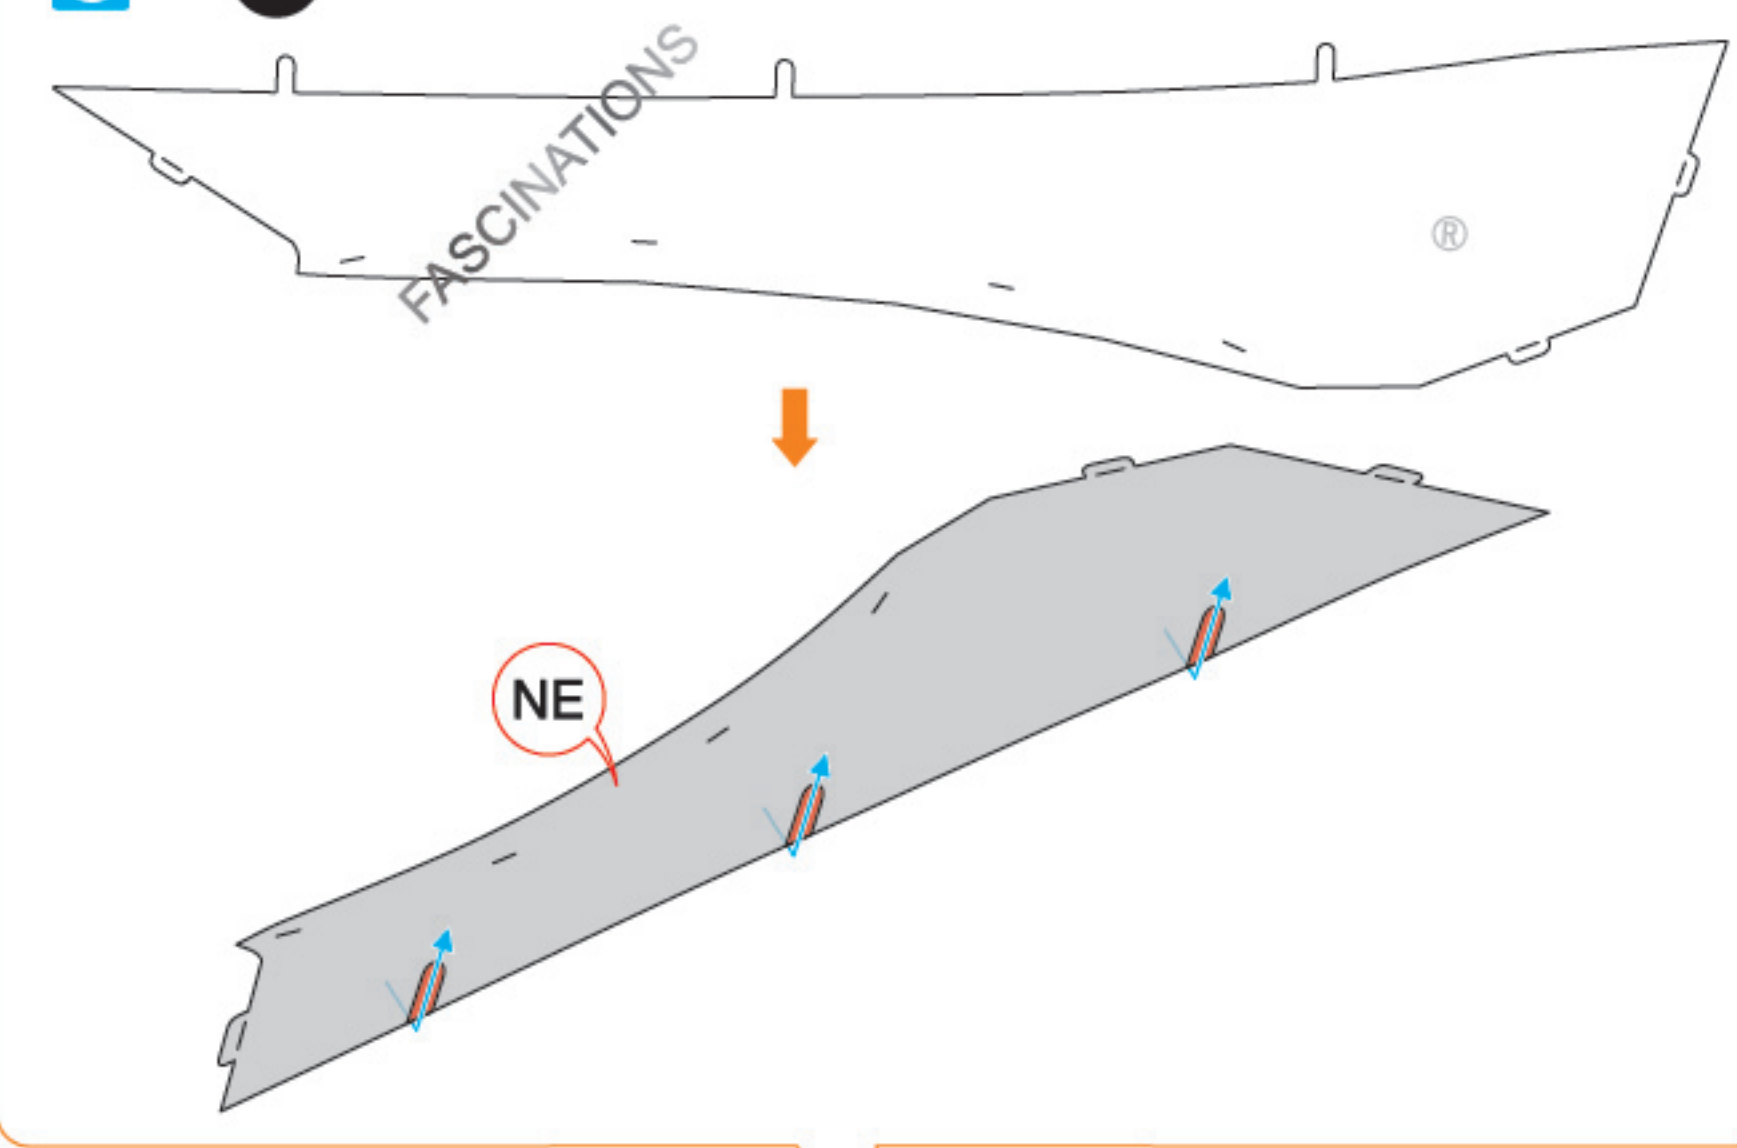

A - 37

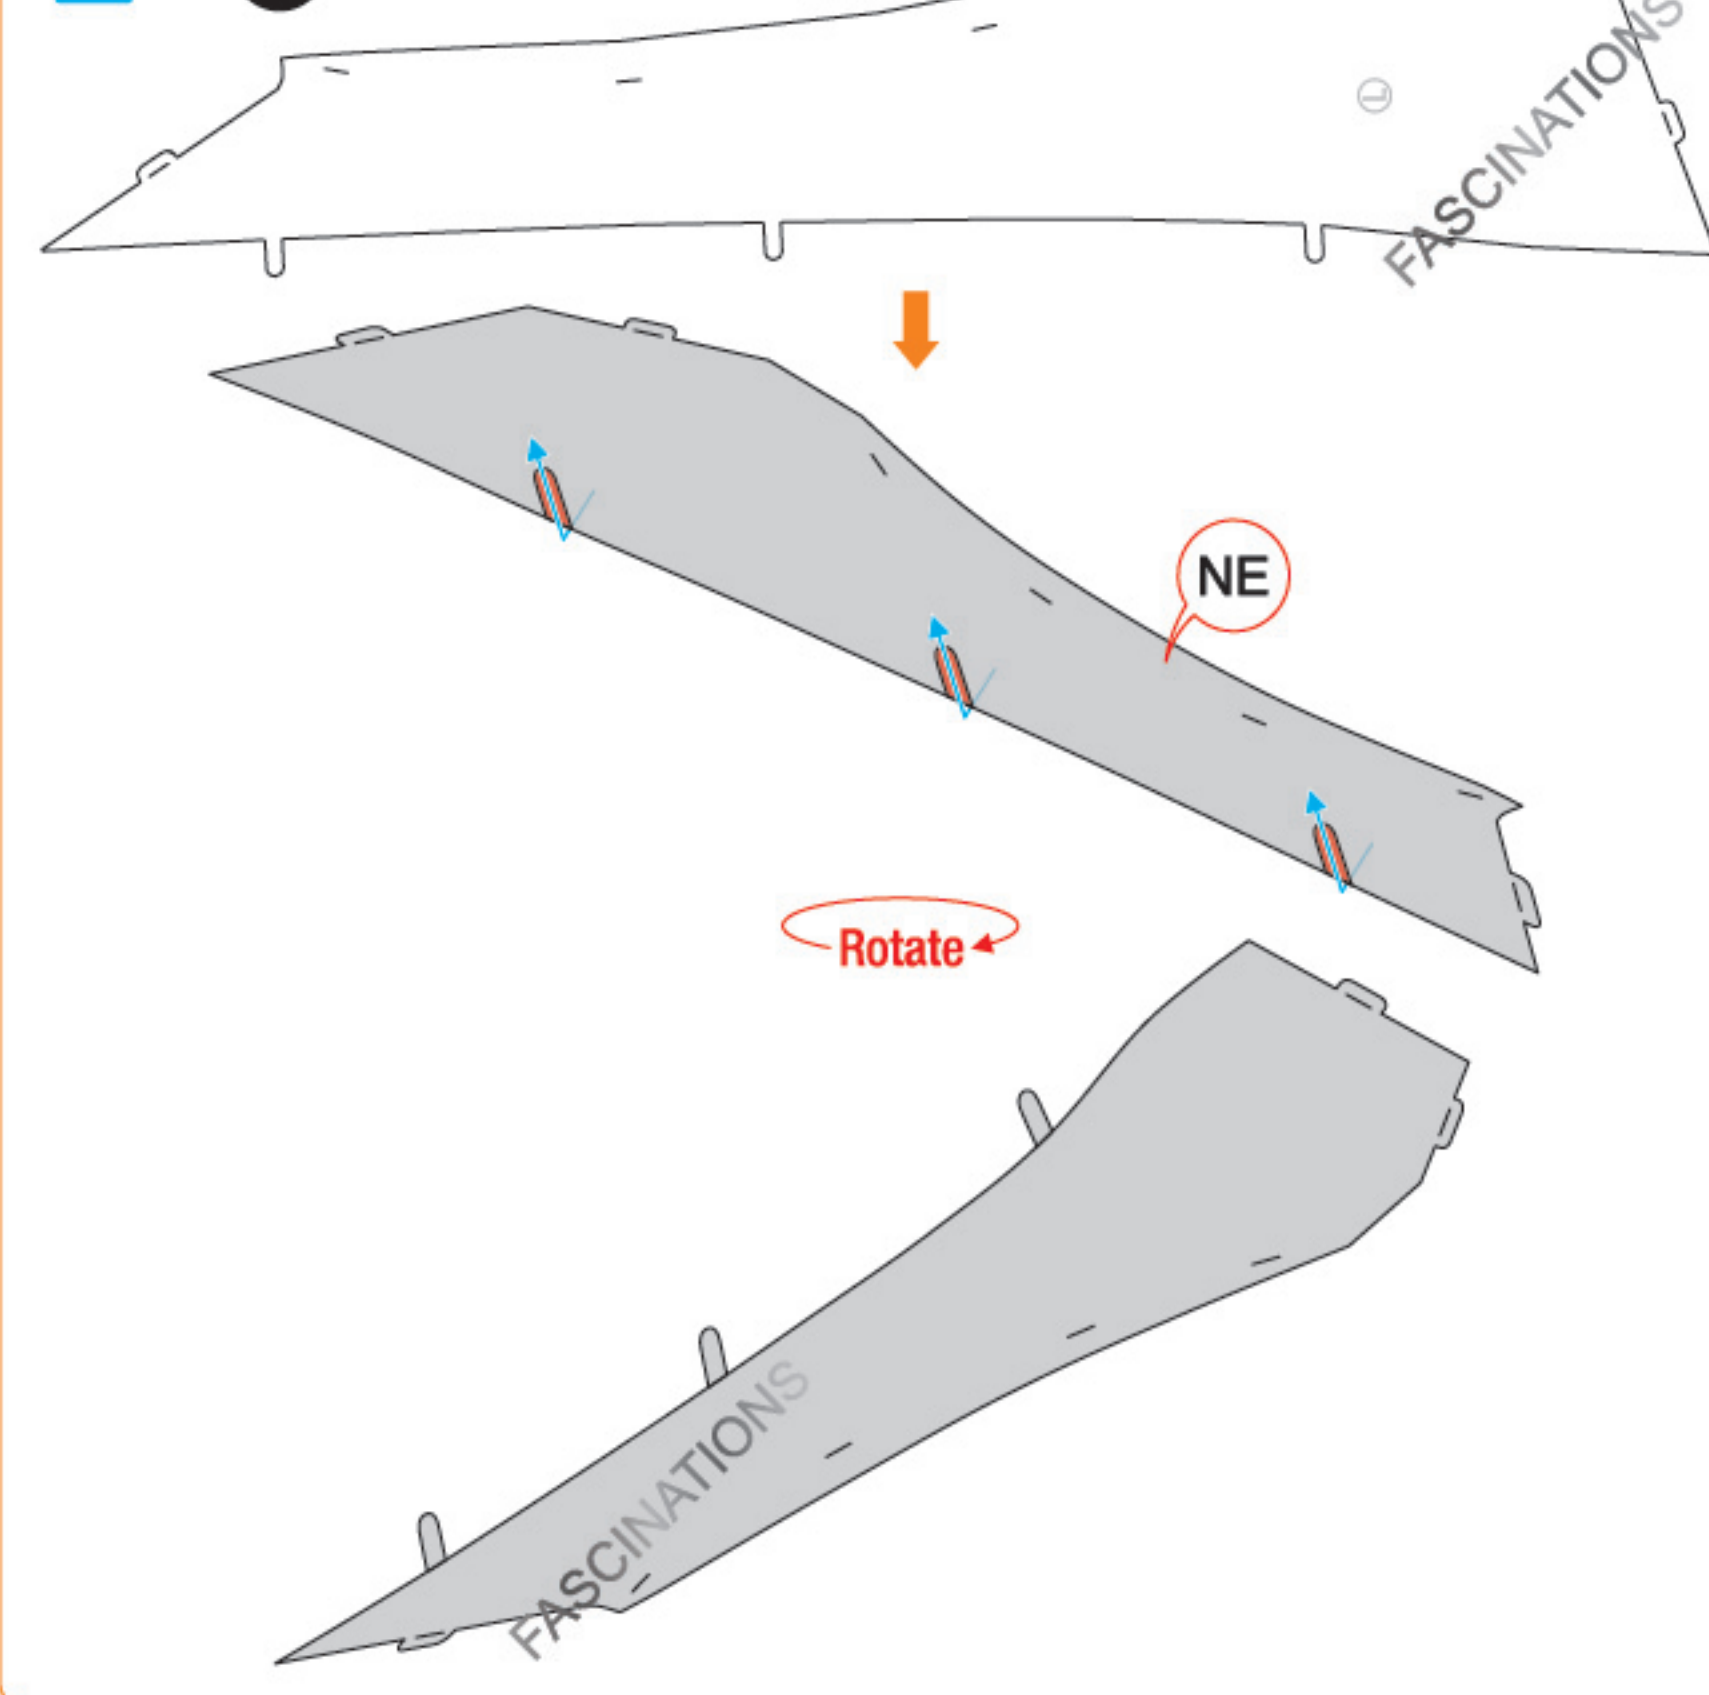


Step 16

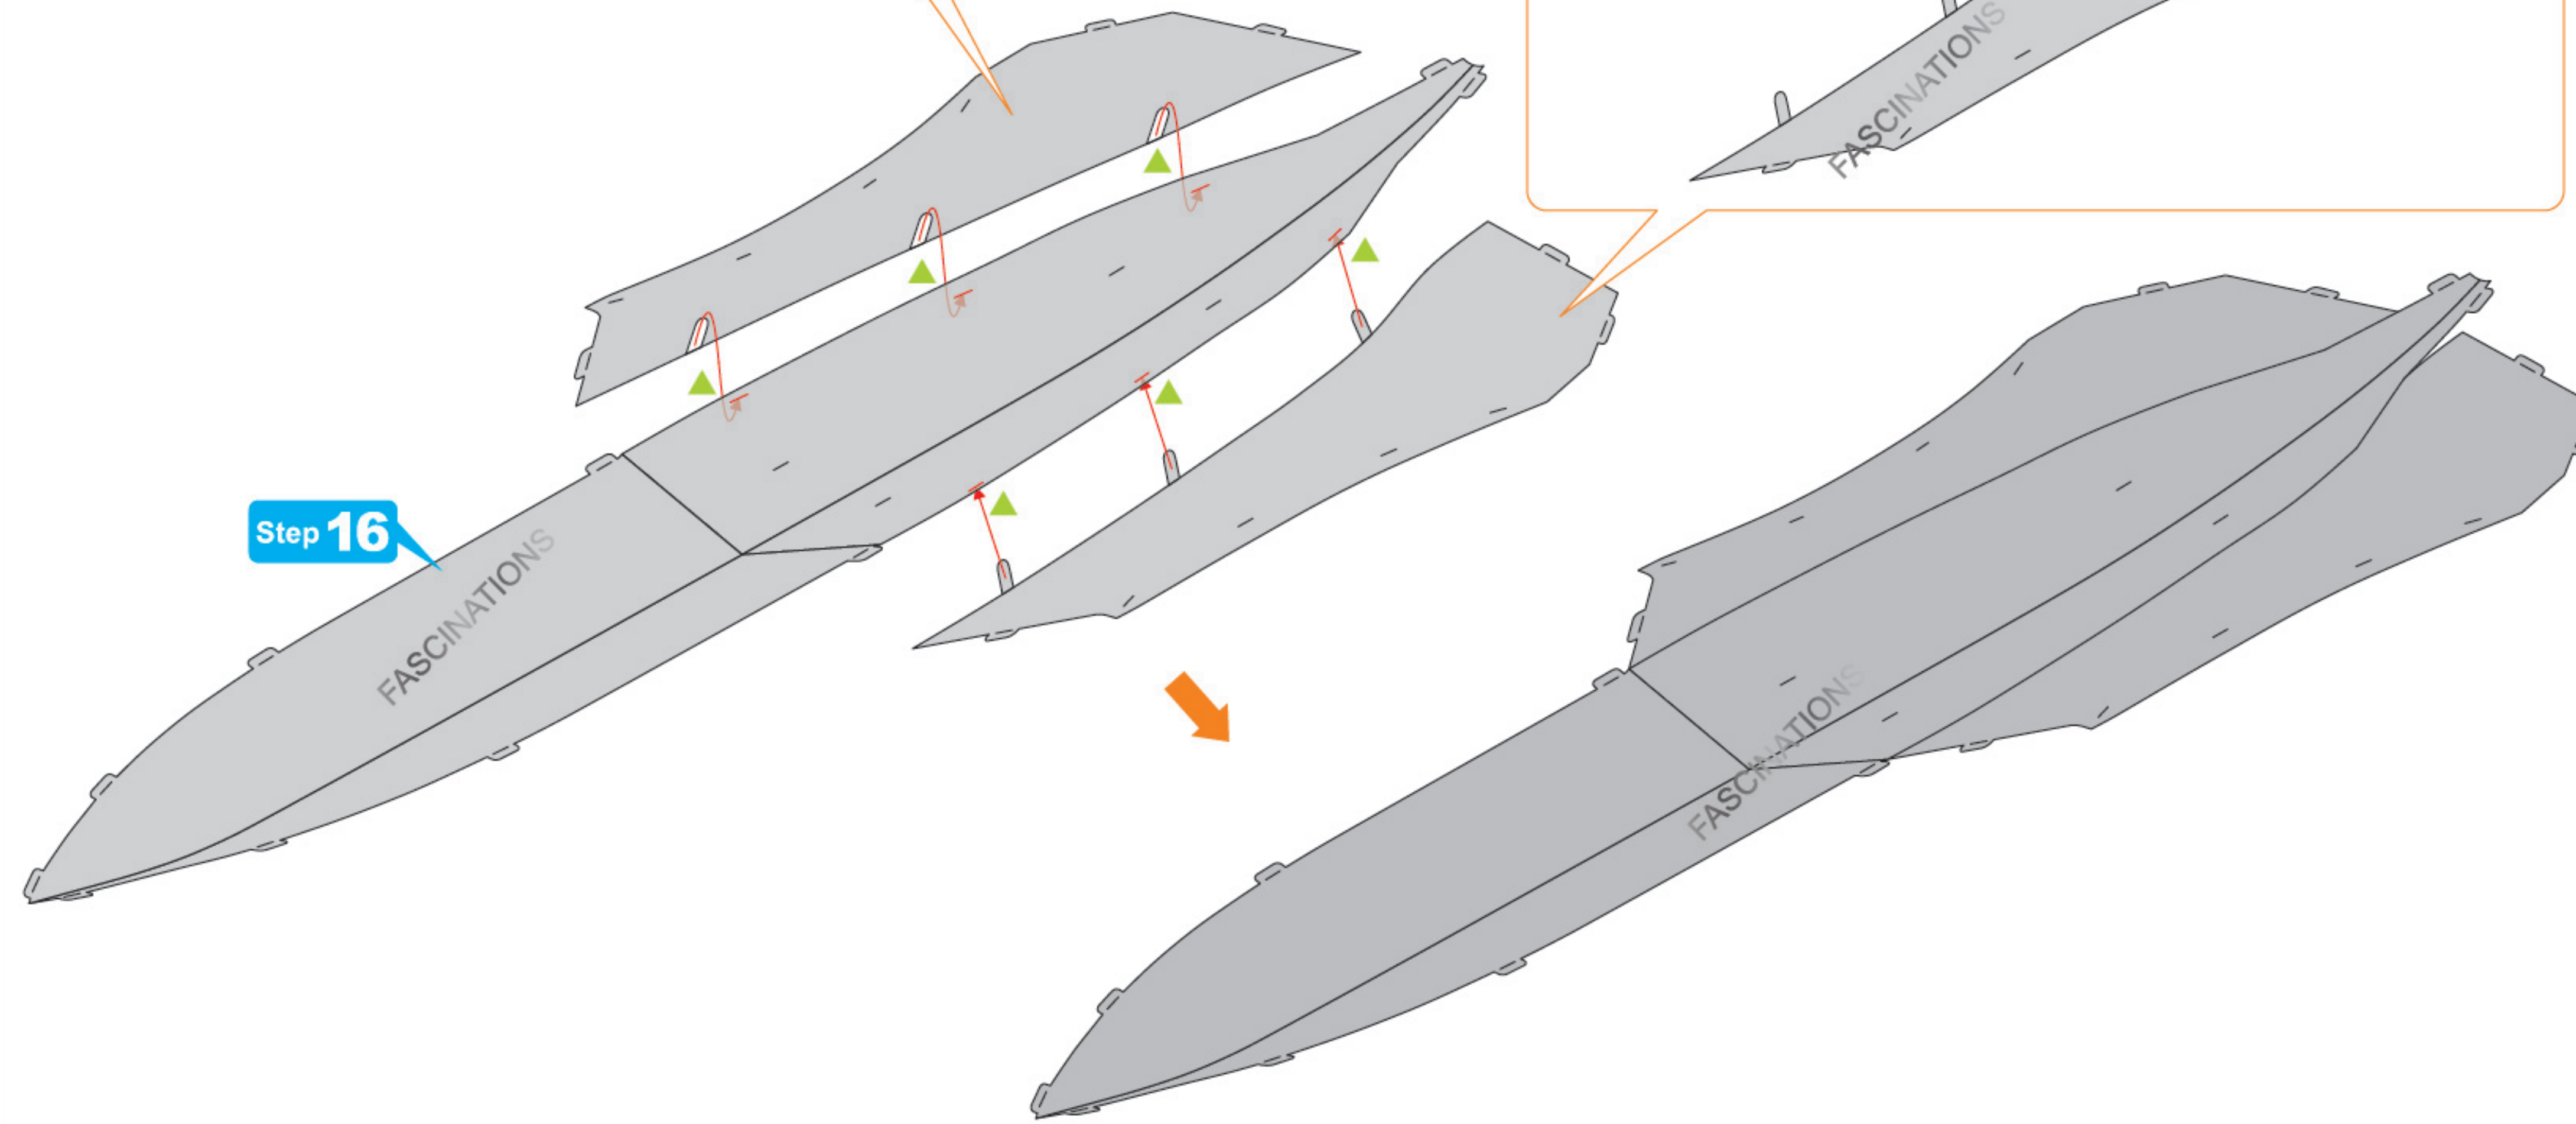


Step 18


C - 38

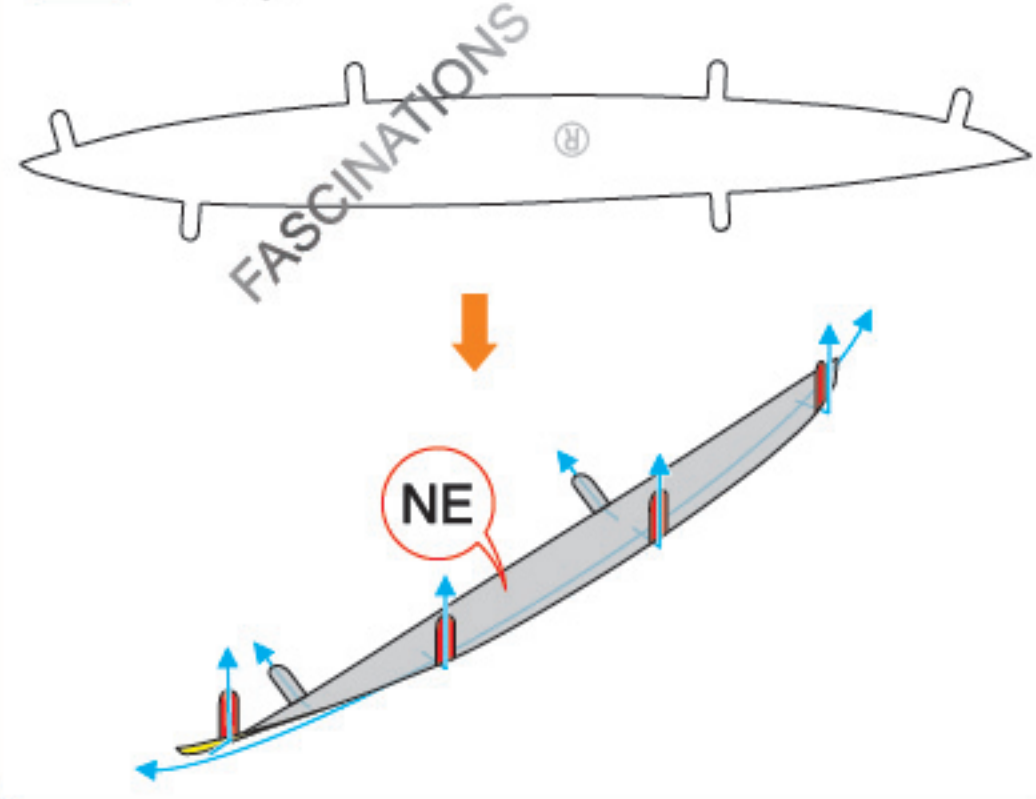

A - 39

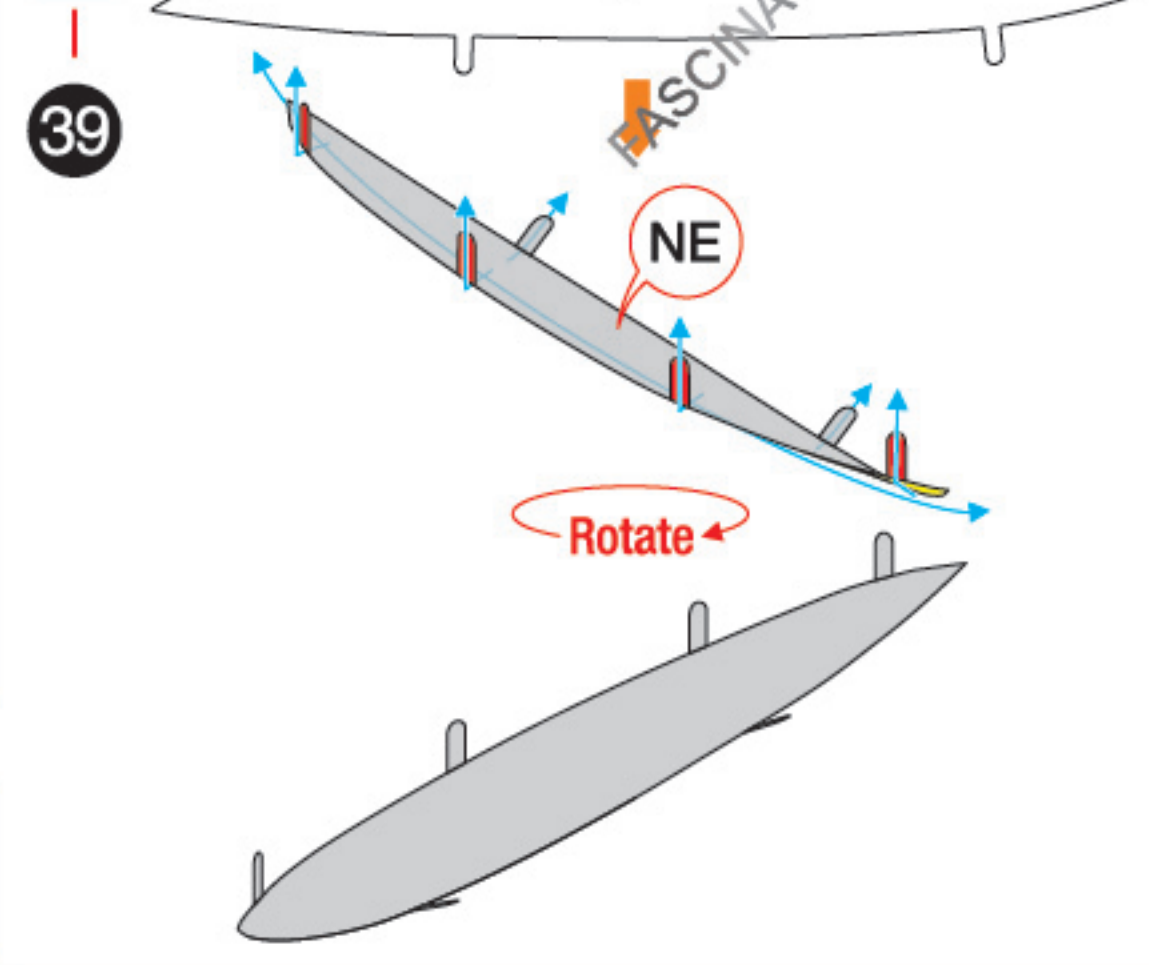


Step 17

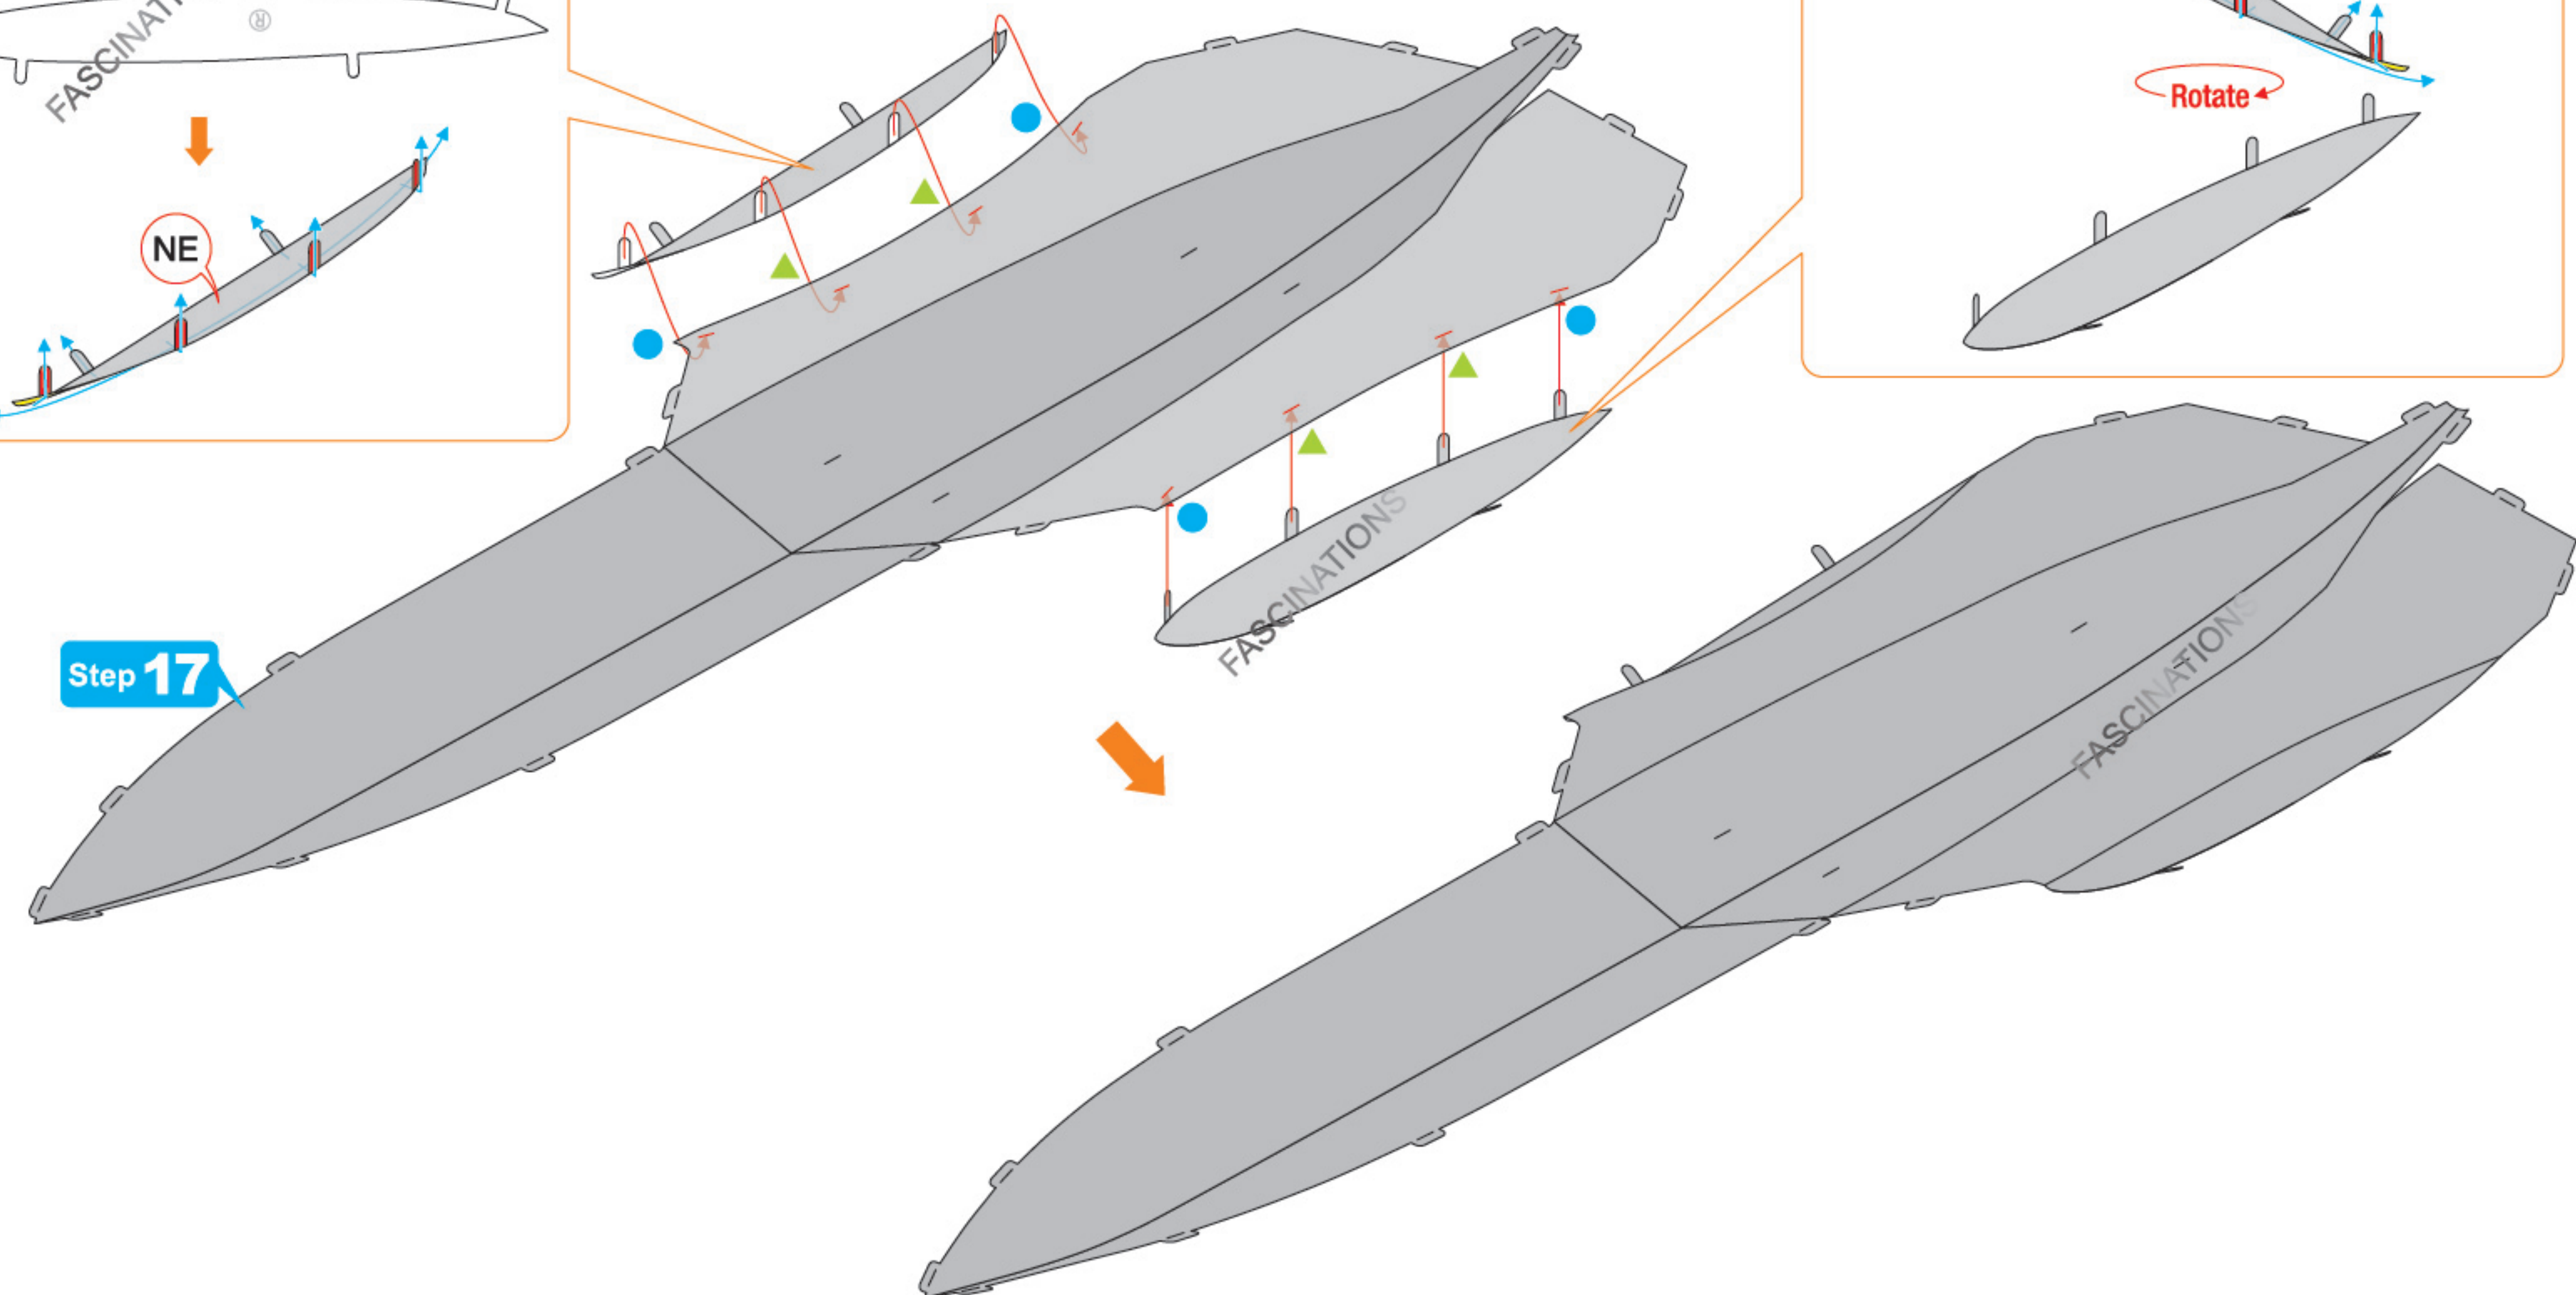

Step 19


Step 15

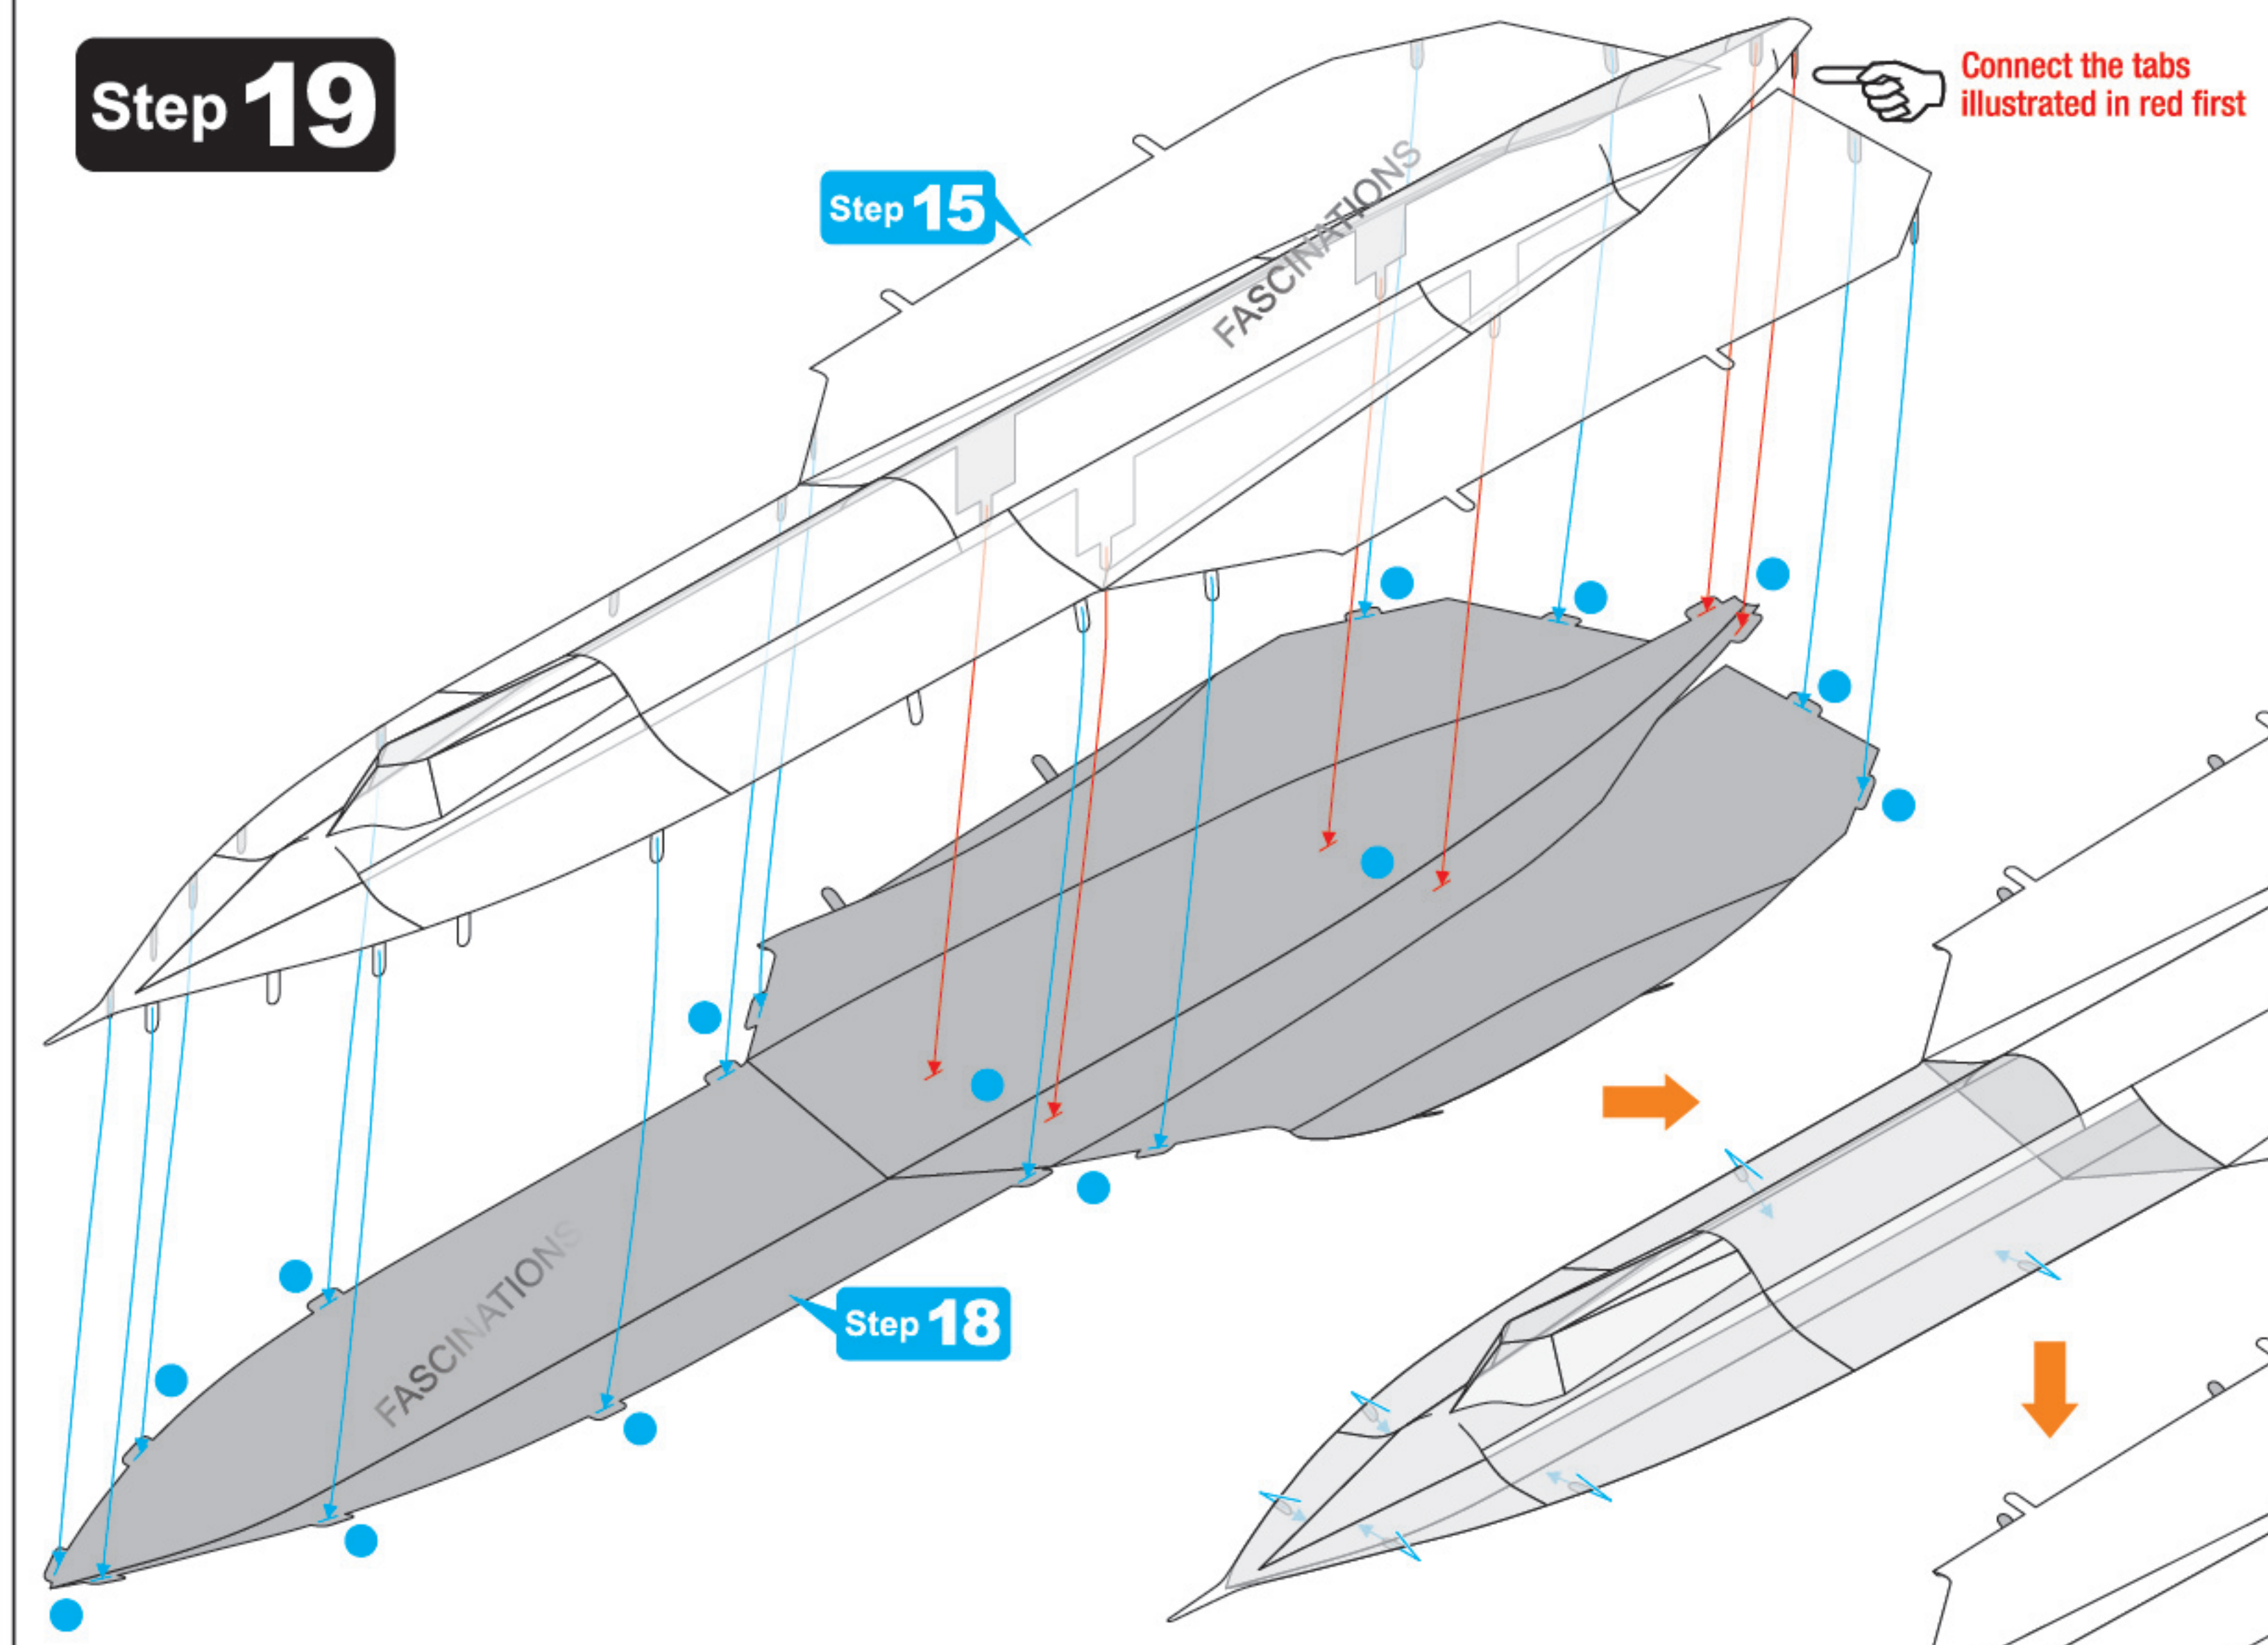

Step 18


Step 20

A - 40

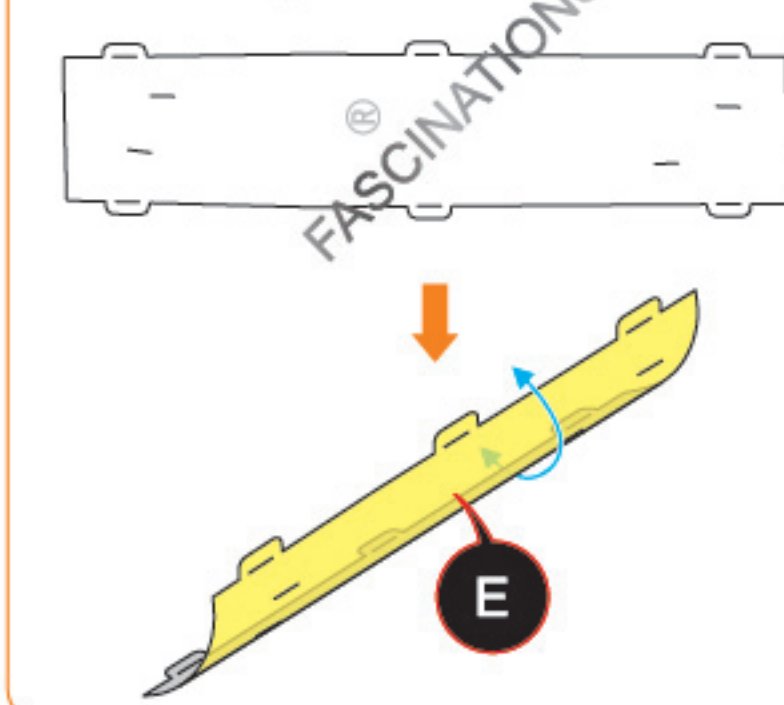


Connect the tabs illustrated in red first

A - 41

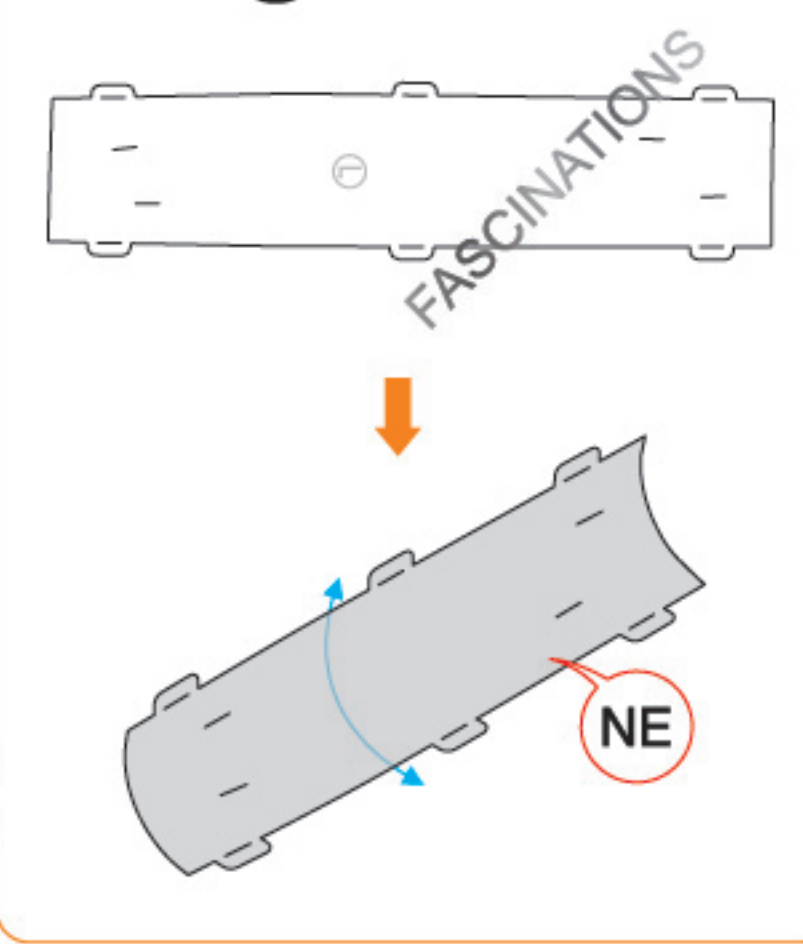


Connect the tabs illustrated in red first


Step 19

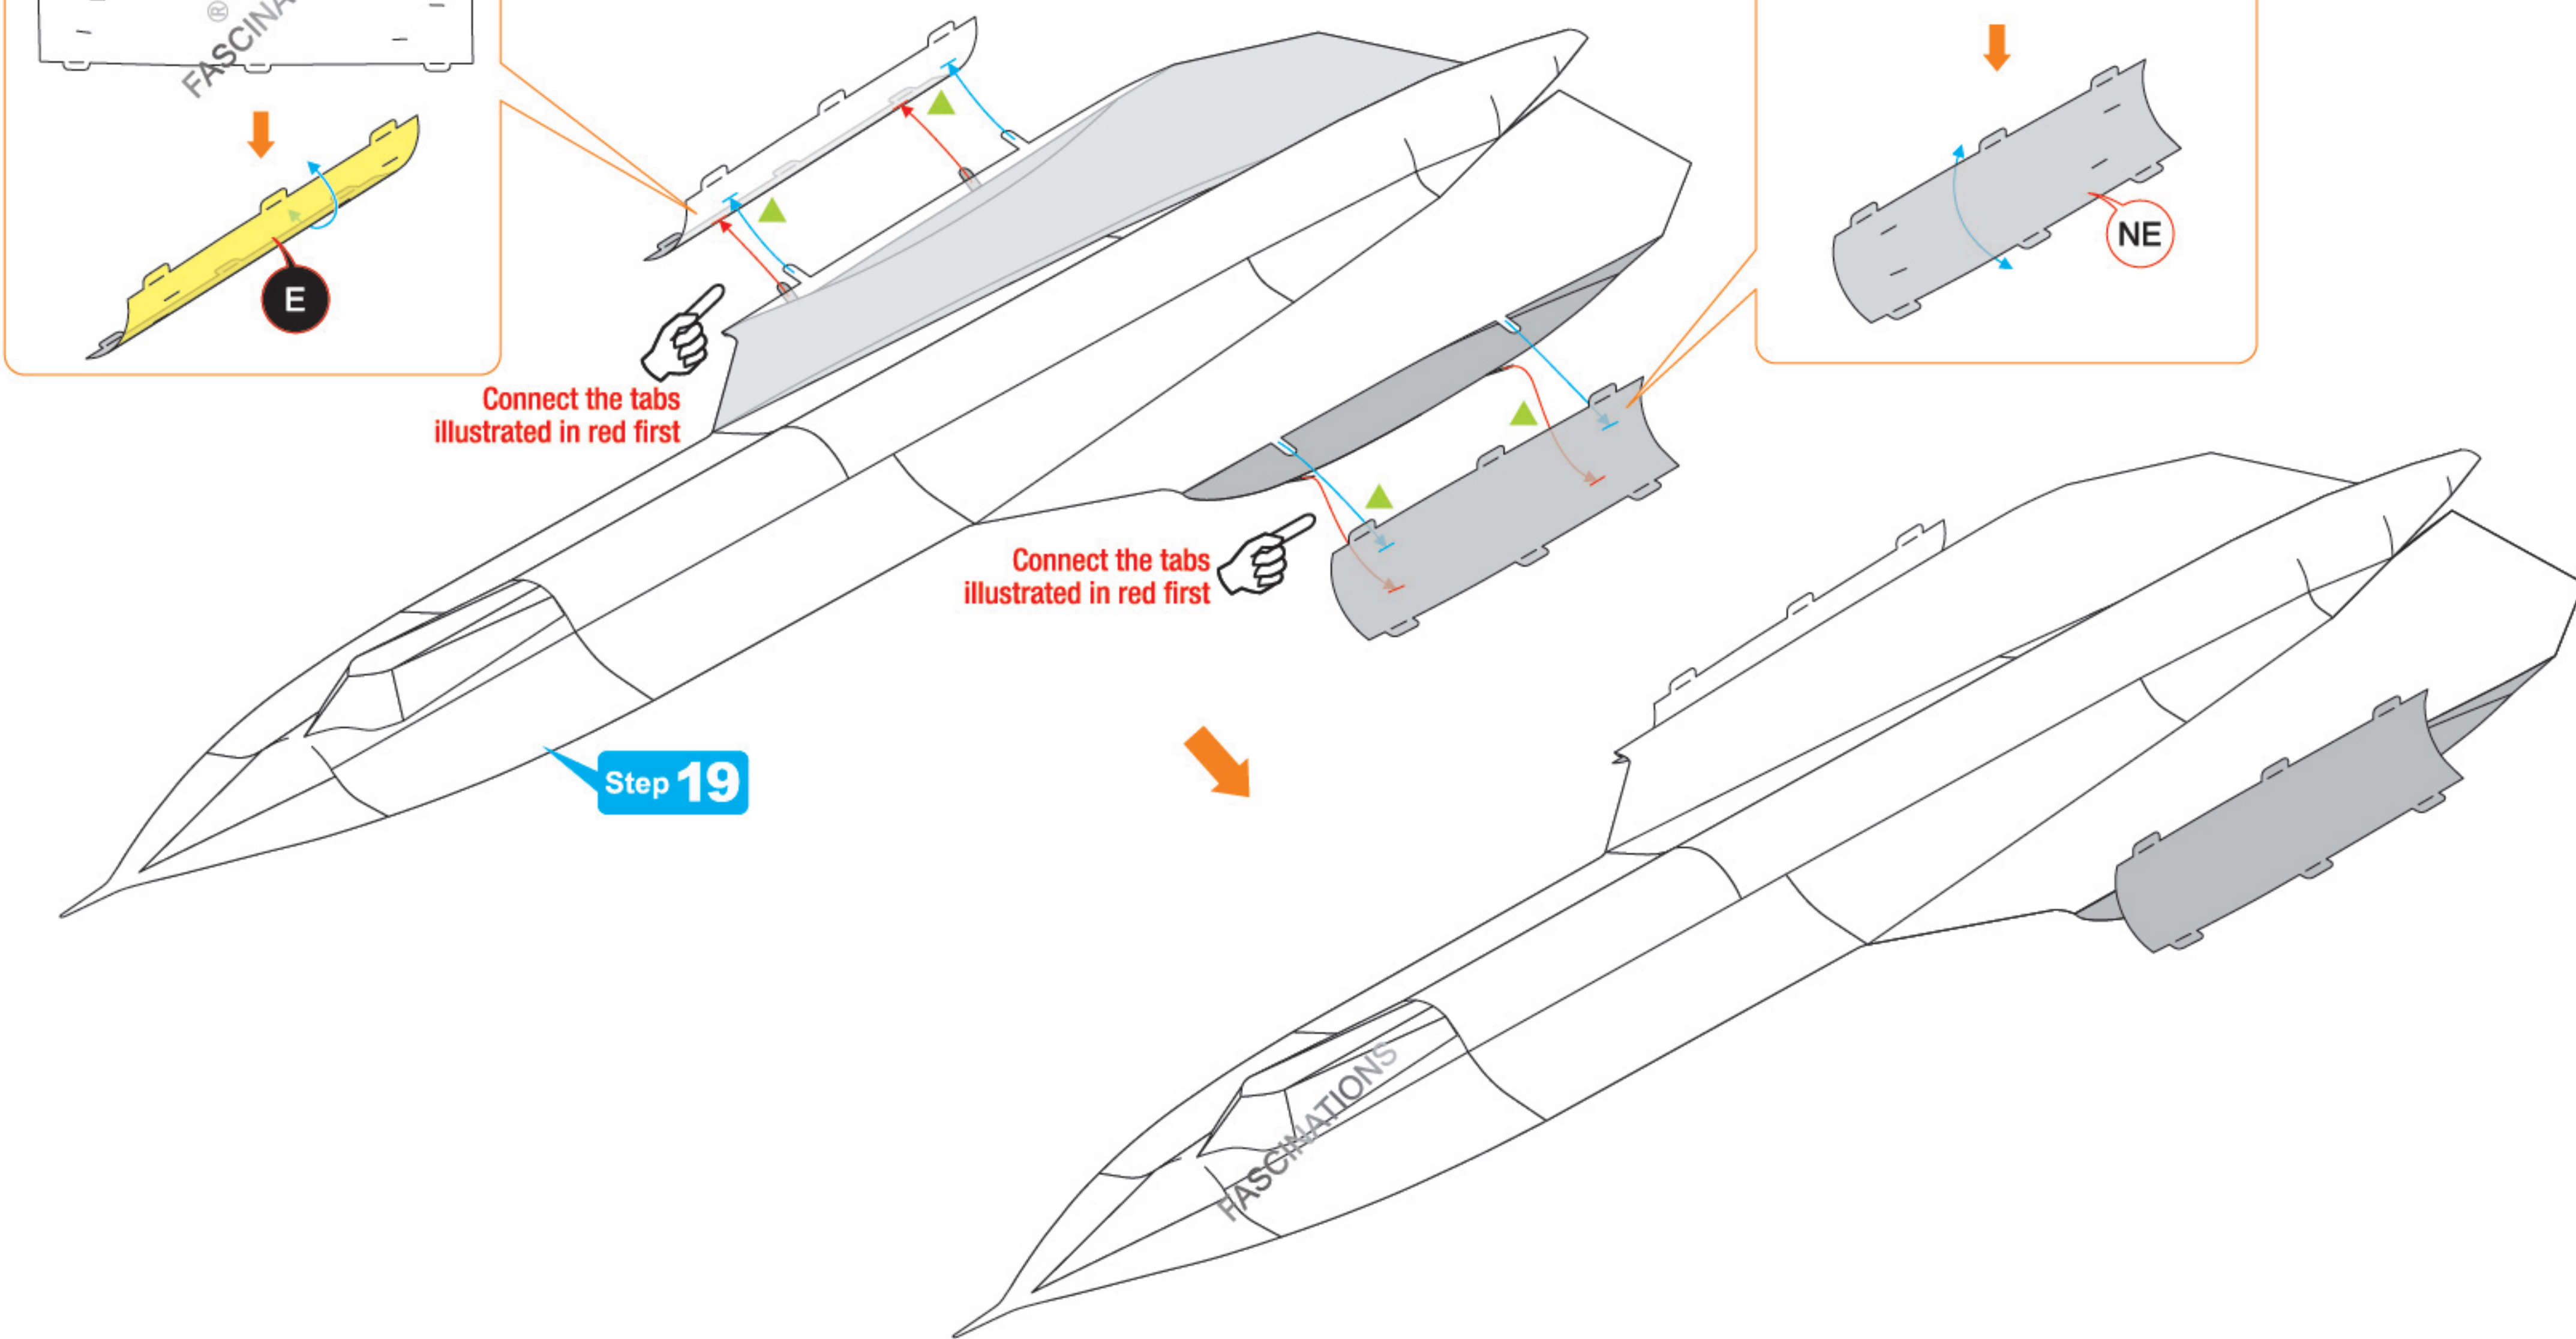

Step 21

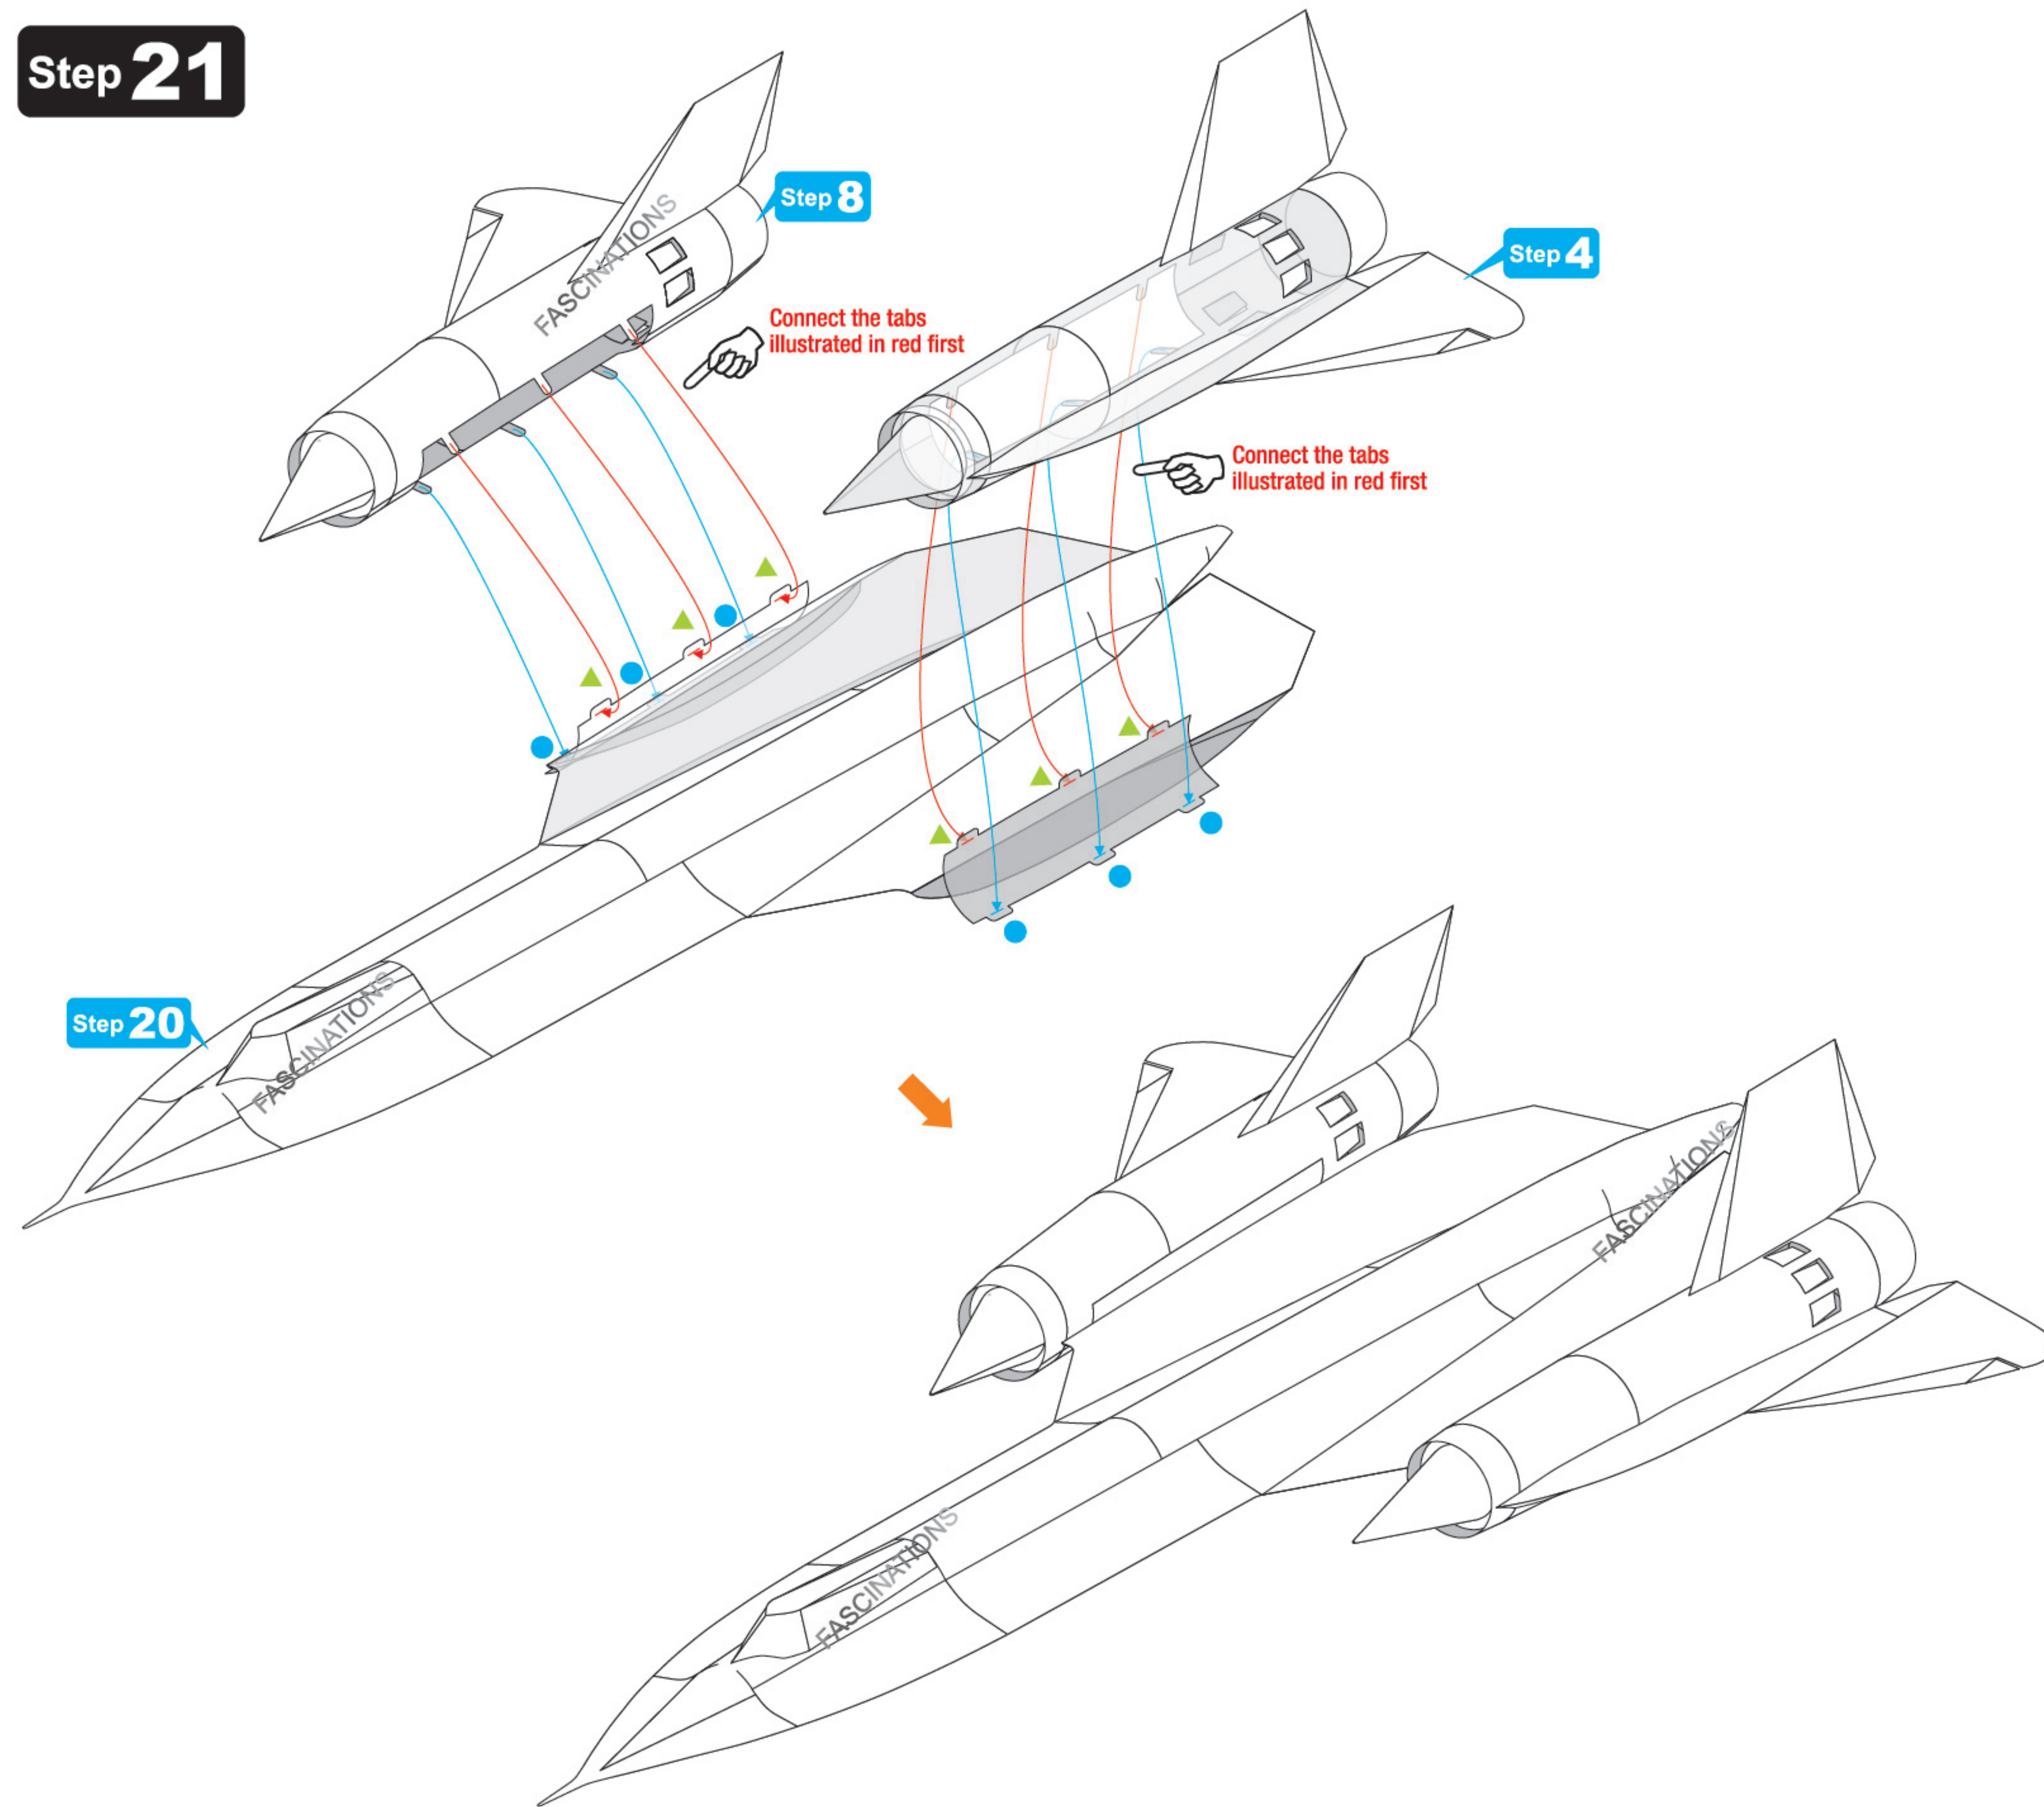

Step 22

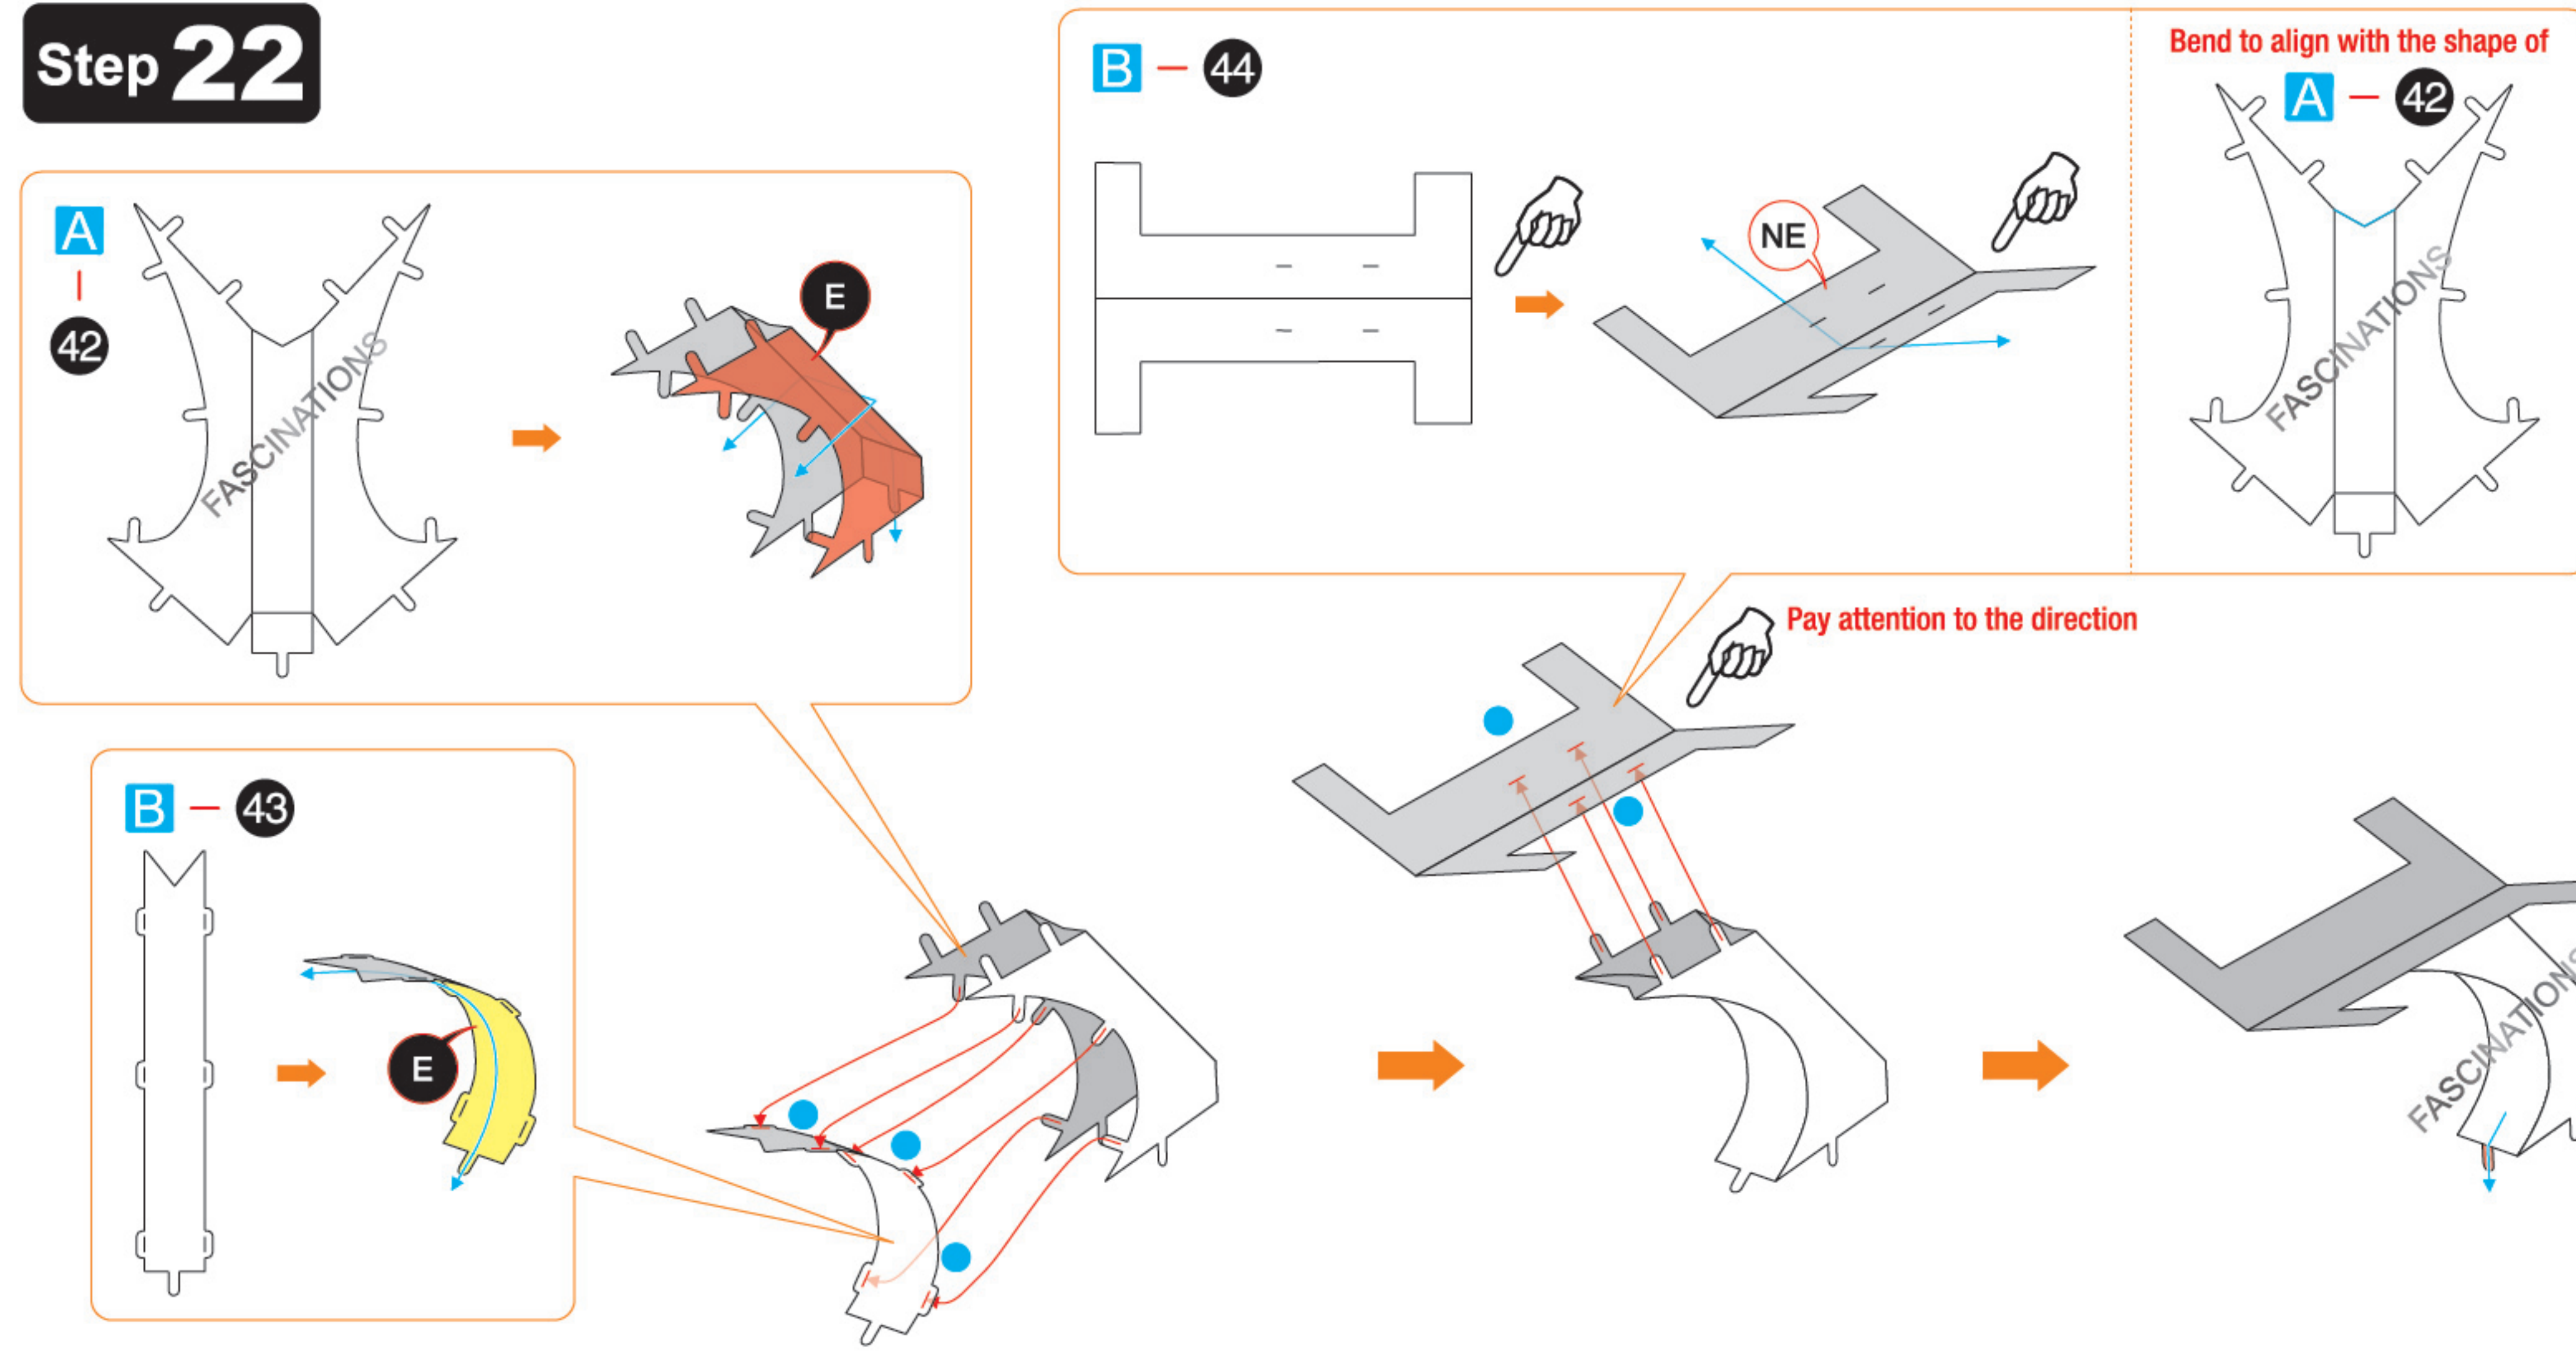

Step 23

