



METAL SHEETS

Parts with same color are duplicates


A

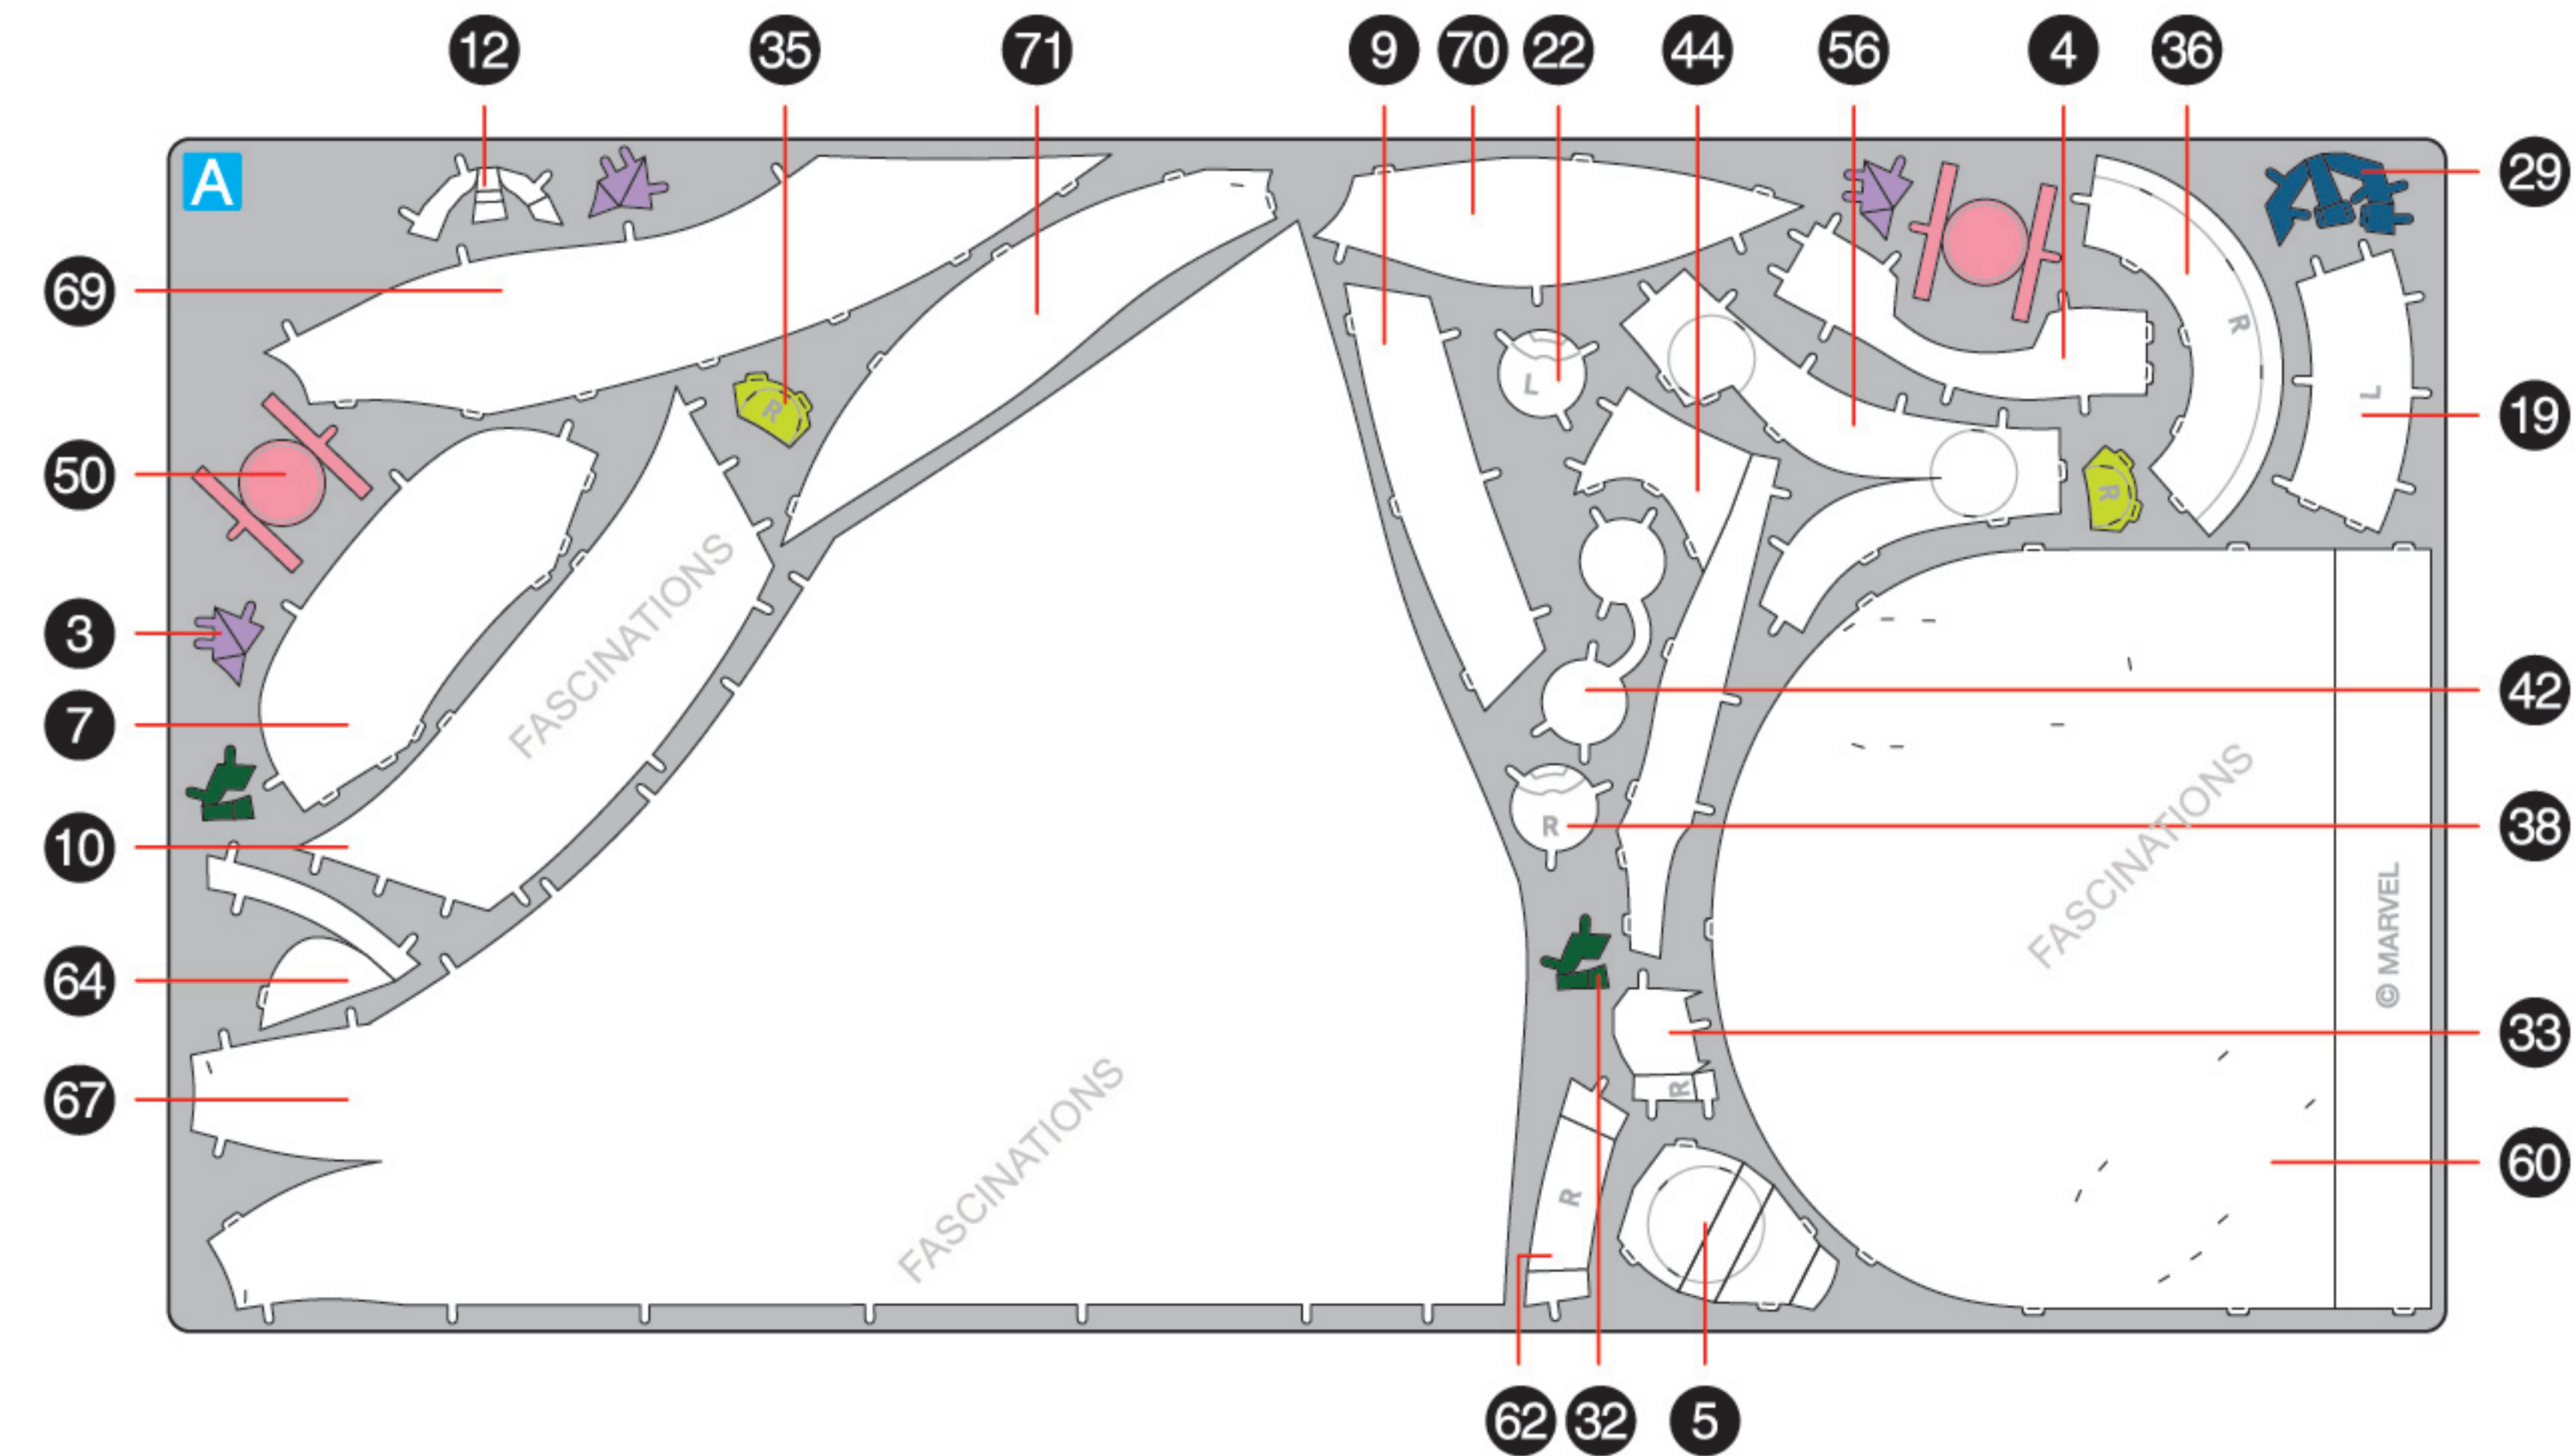

B

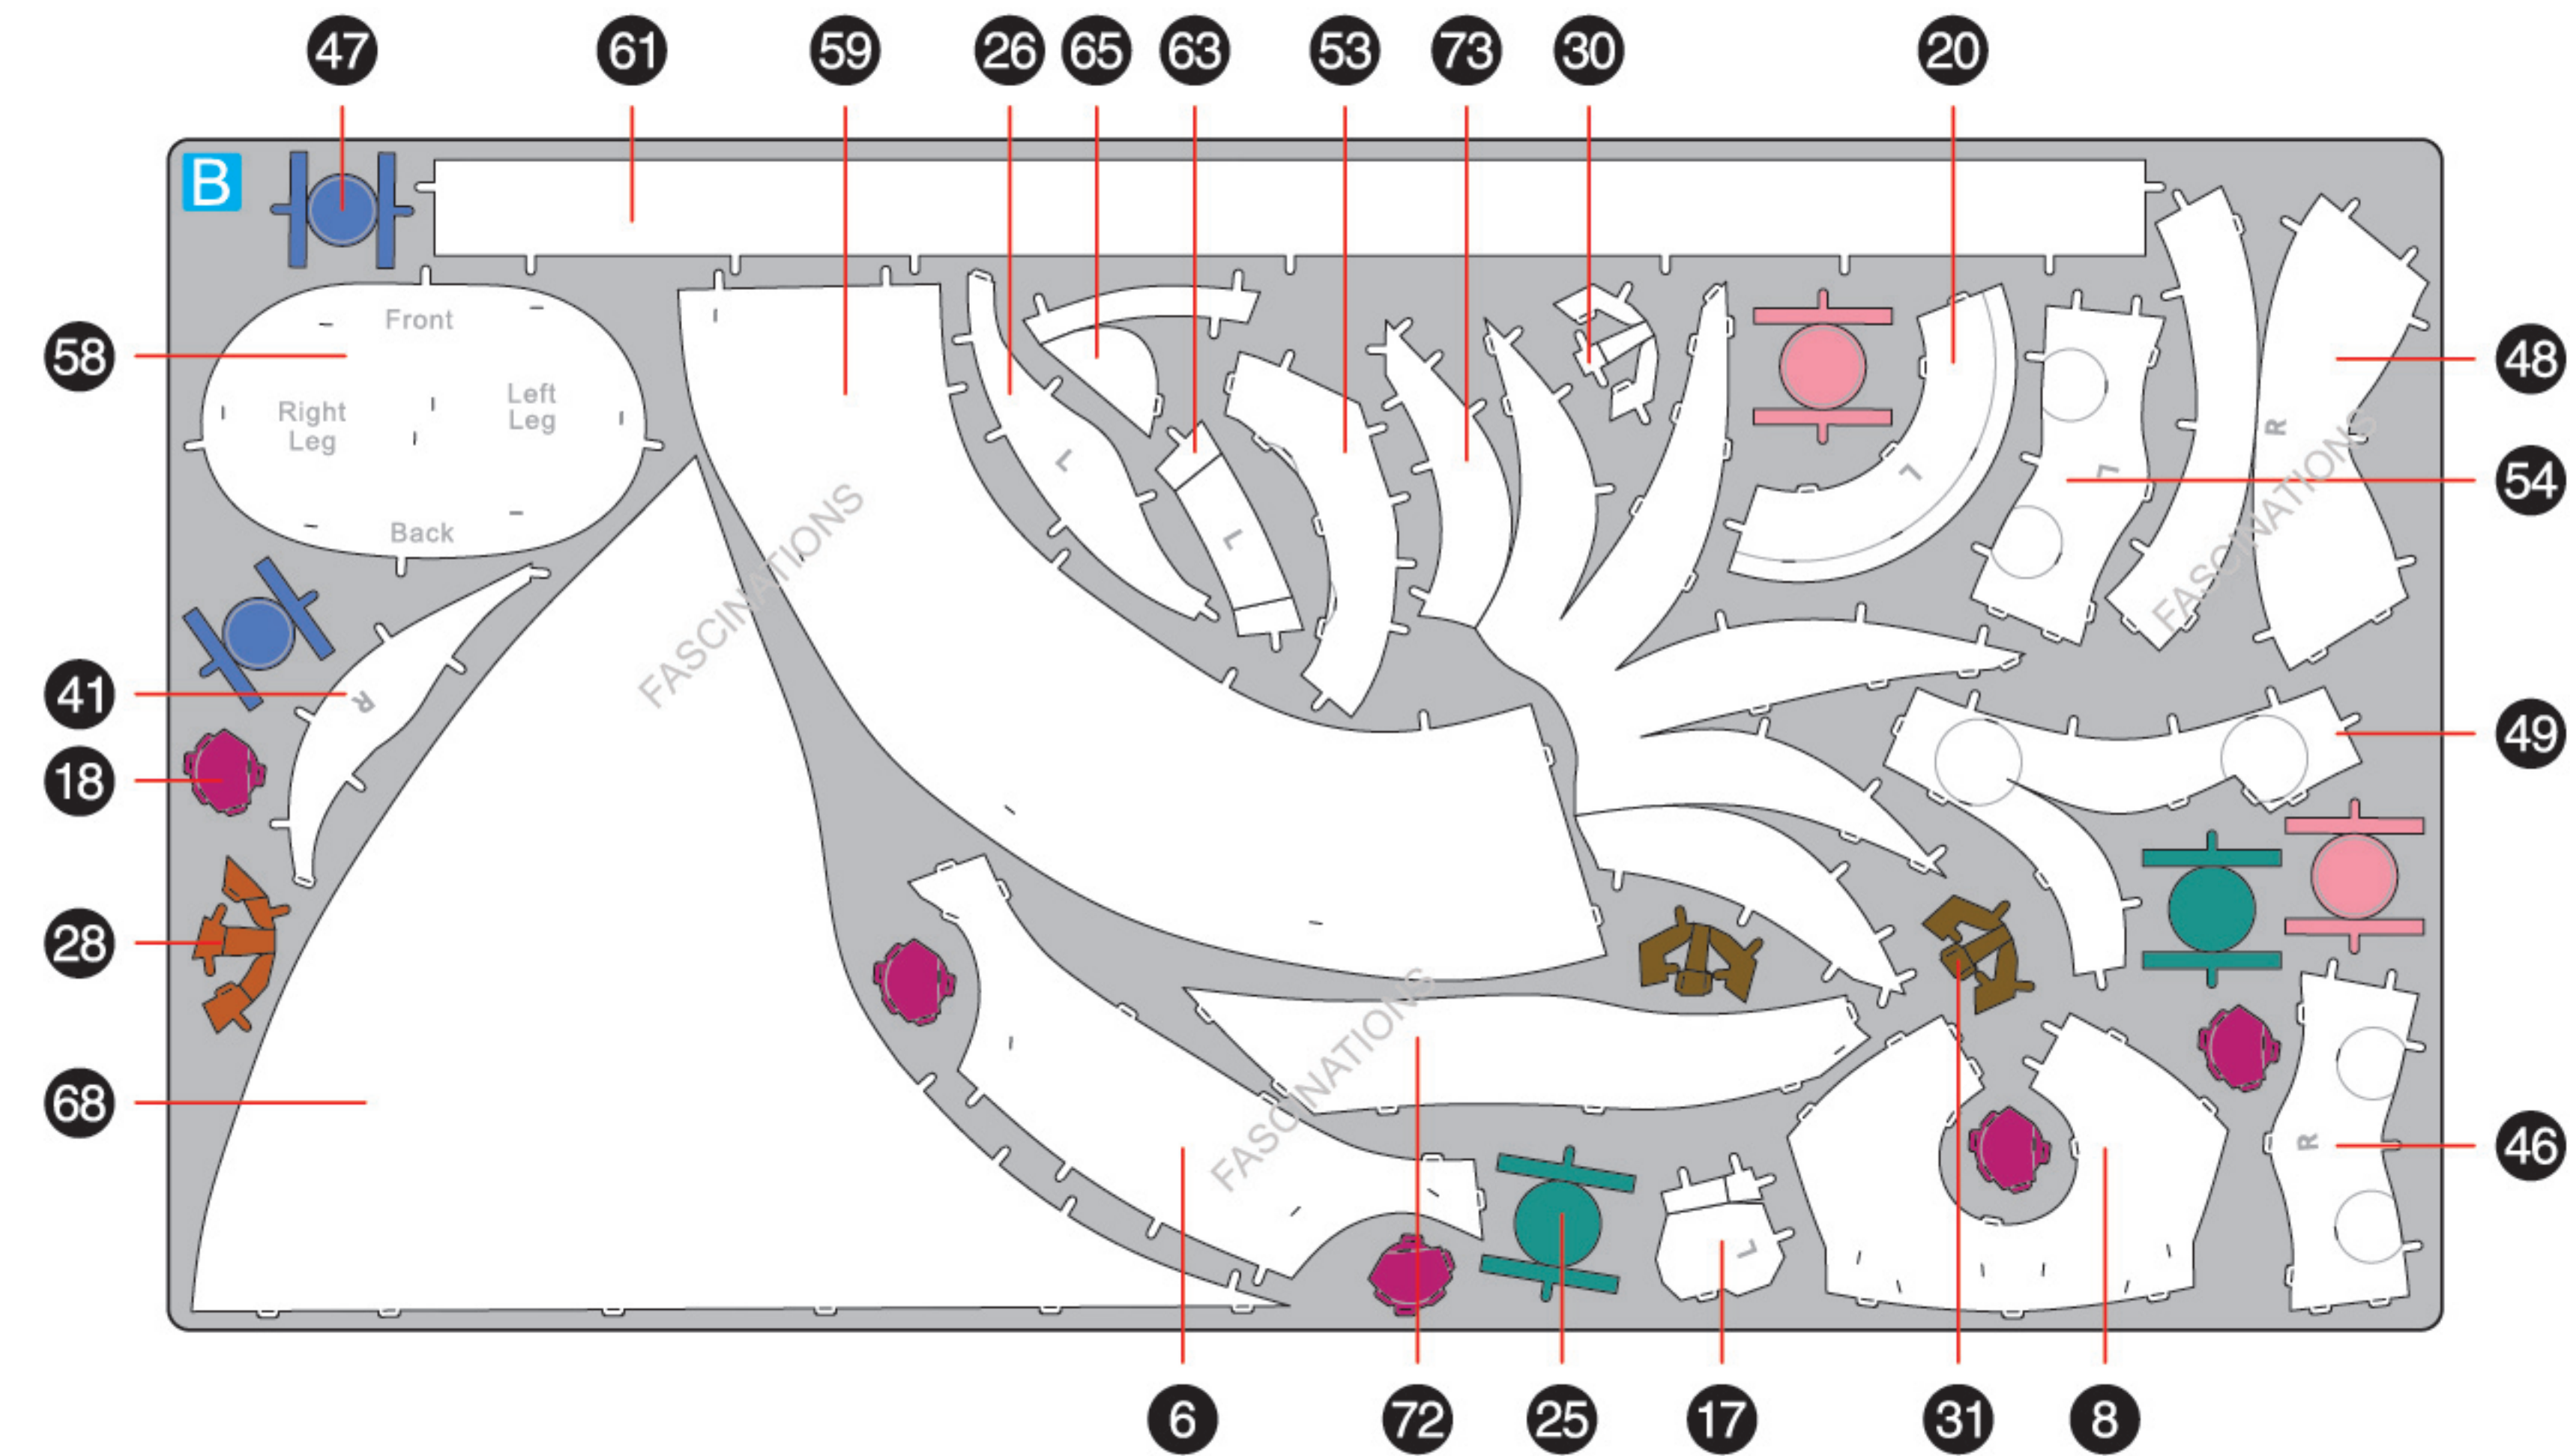

C

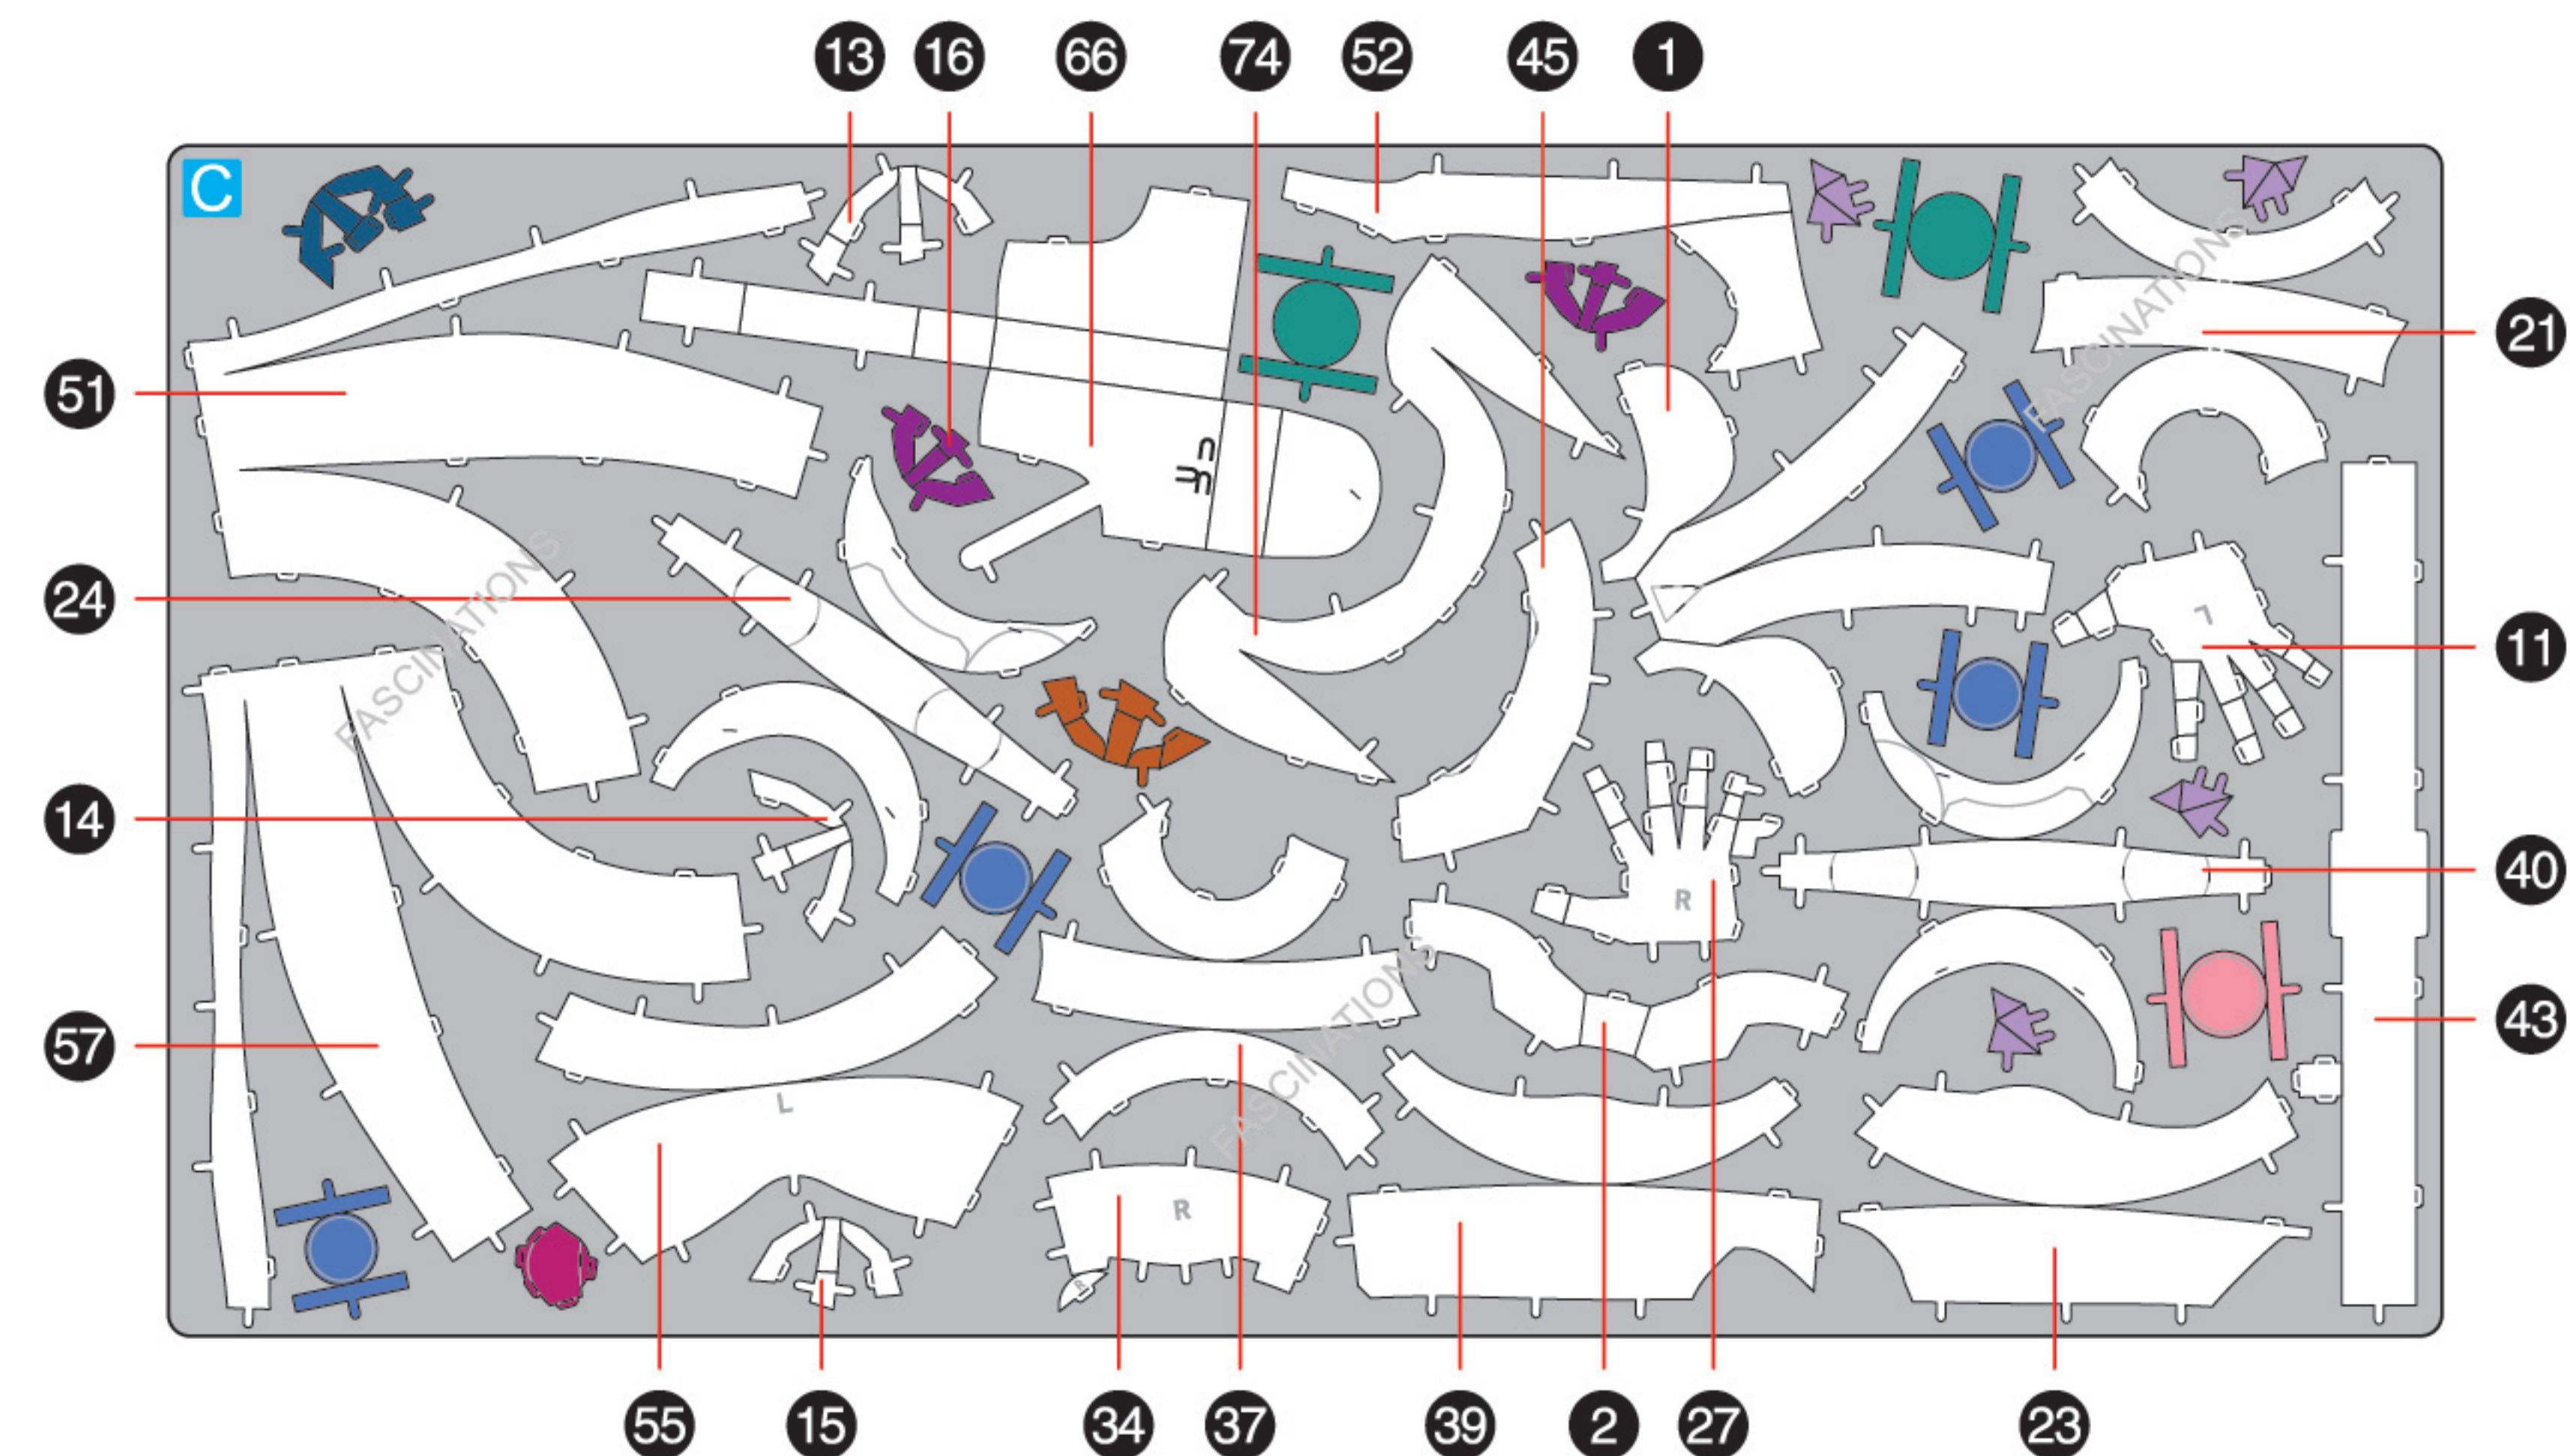

Metal Earth

360°
view



It is highly recommended that you visit www.metalearth.com/360/ICX257 to see the completed model before assembling your own



Premium Series


ICX257

DOCTOR DOOM




TO CREATE THE BEST CONNECTIONS

ABC - 50

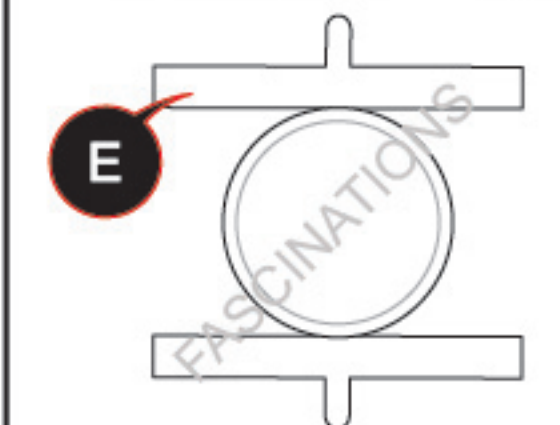

Consider these engraved stripes as supporting features for the bend

C - 2

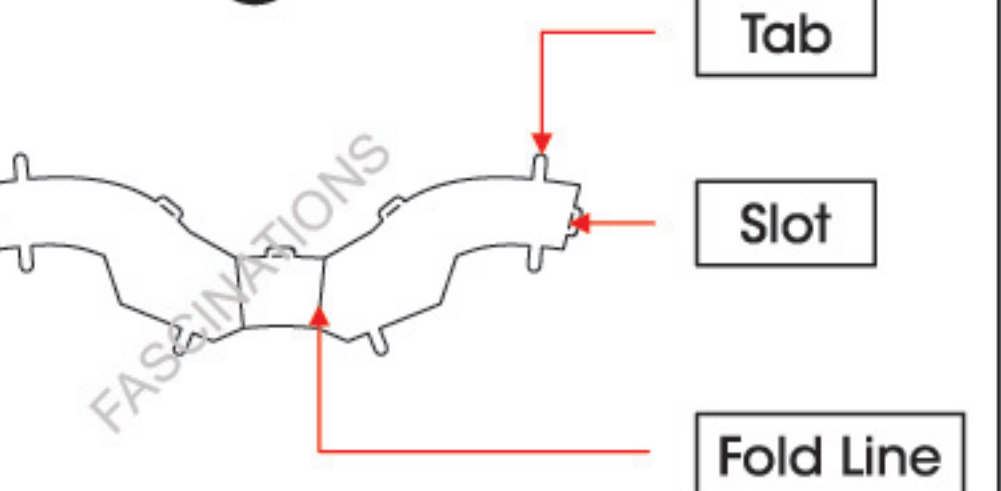

Legends:

E Engraved/ Color side

NE Non - engraved/ Silver side

Attention point

Insert tab and bend 90 degrees

Insert tab and twist 90 degrees

Assembly tip:

If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish.

Yellow areas should be curled

Red areas should be folded

Recommended tools:

- Wire cutters: helpful for taking parts from the metal sheets.





- Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.









ASSEMBLY STEPS

Step 1

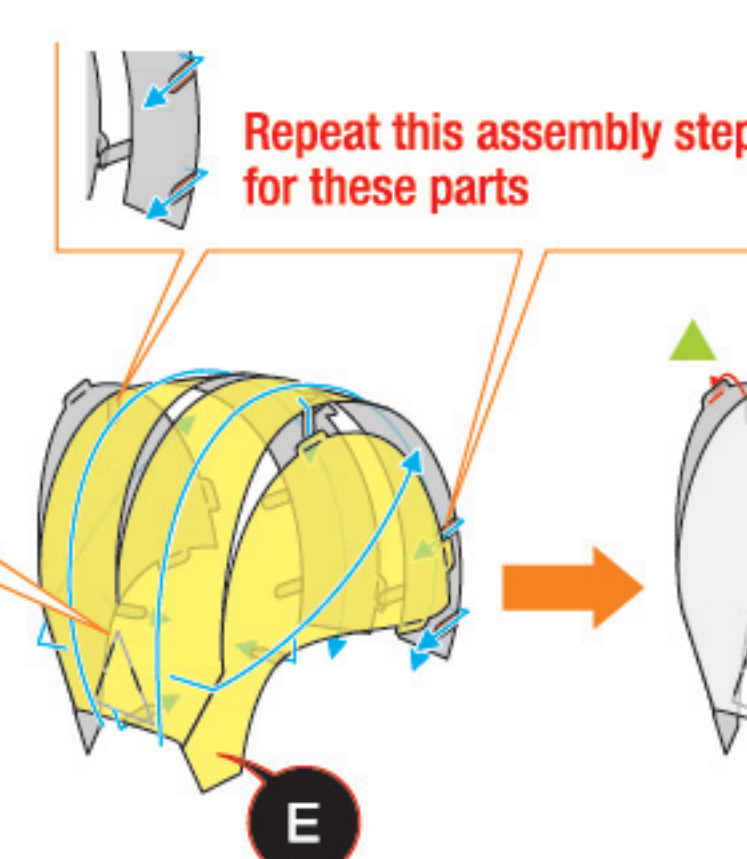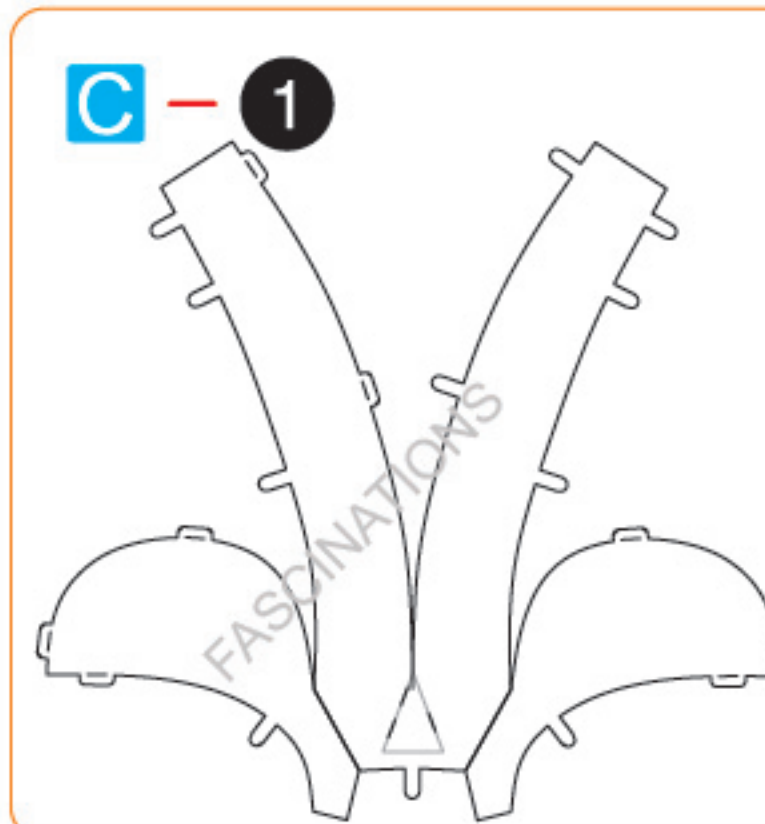


Connect the tabs illustrated in red first

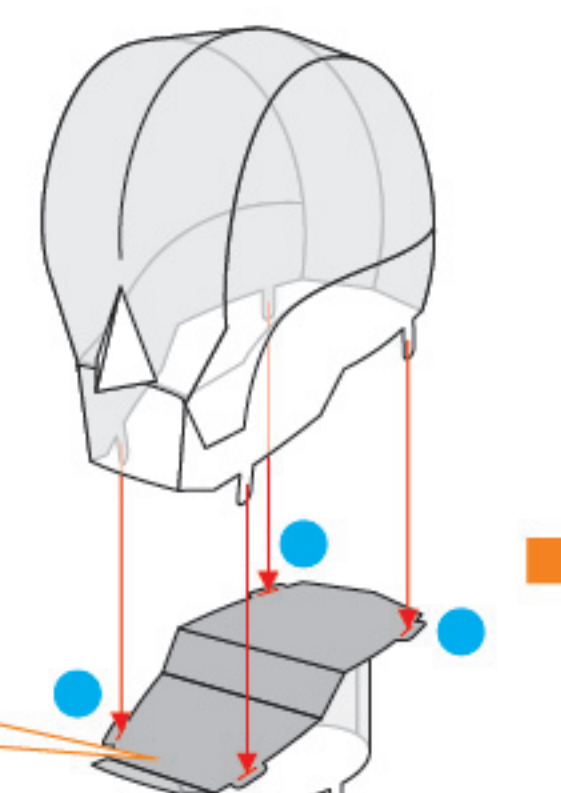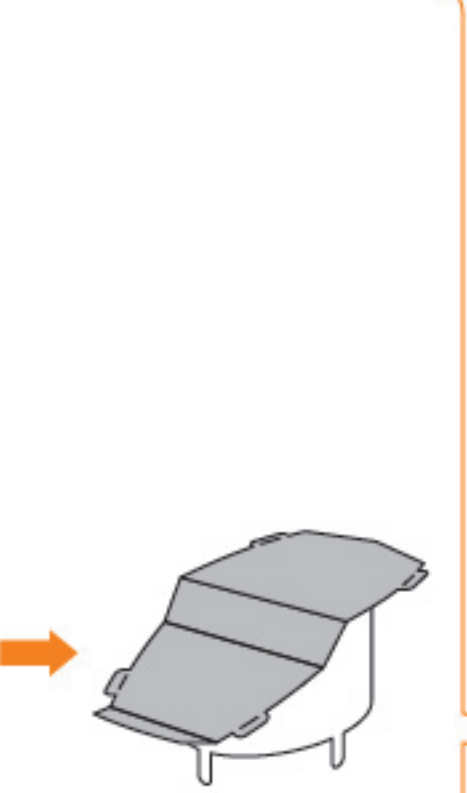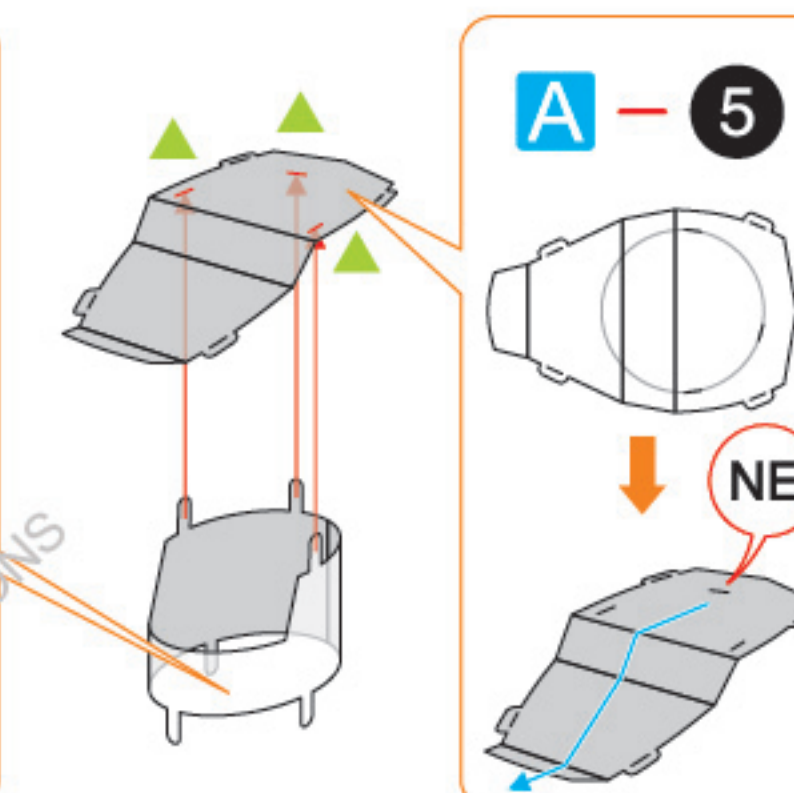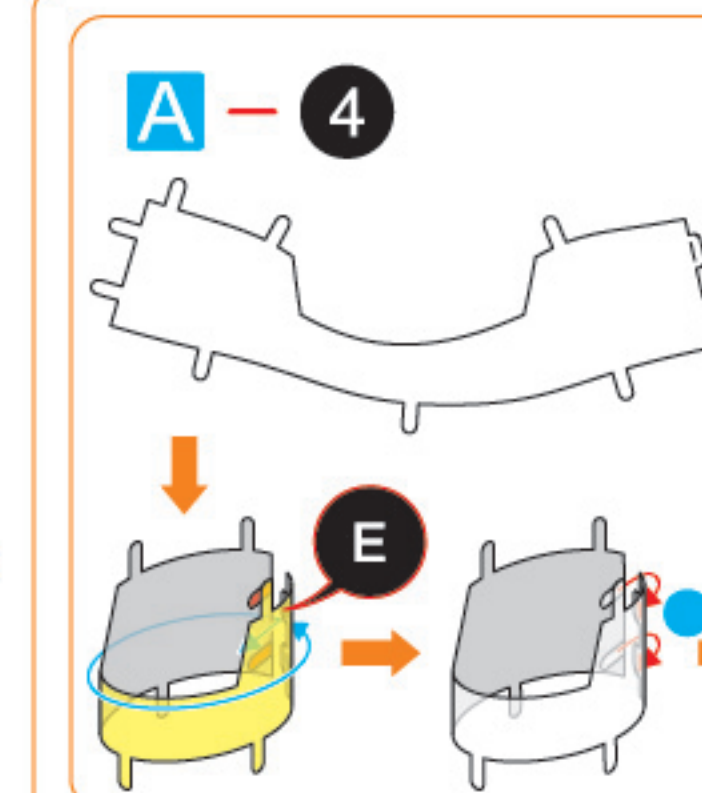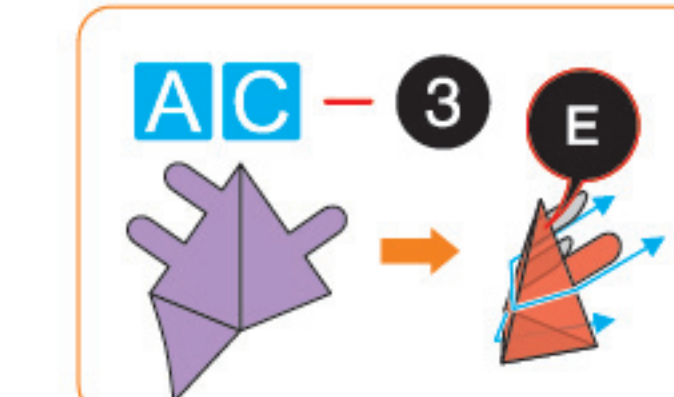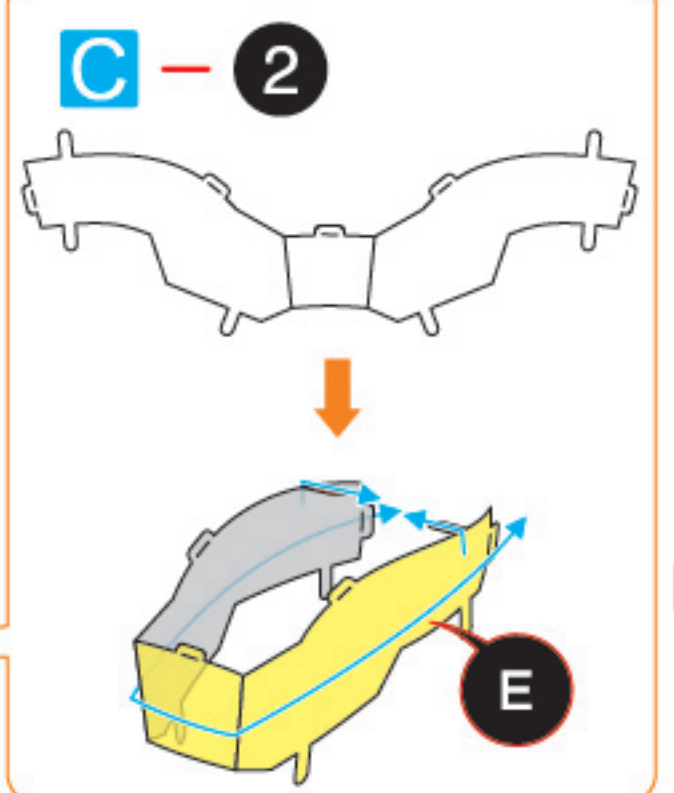


In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed.



Step 2

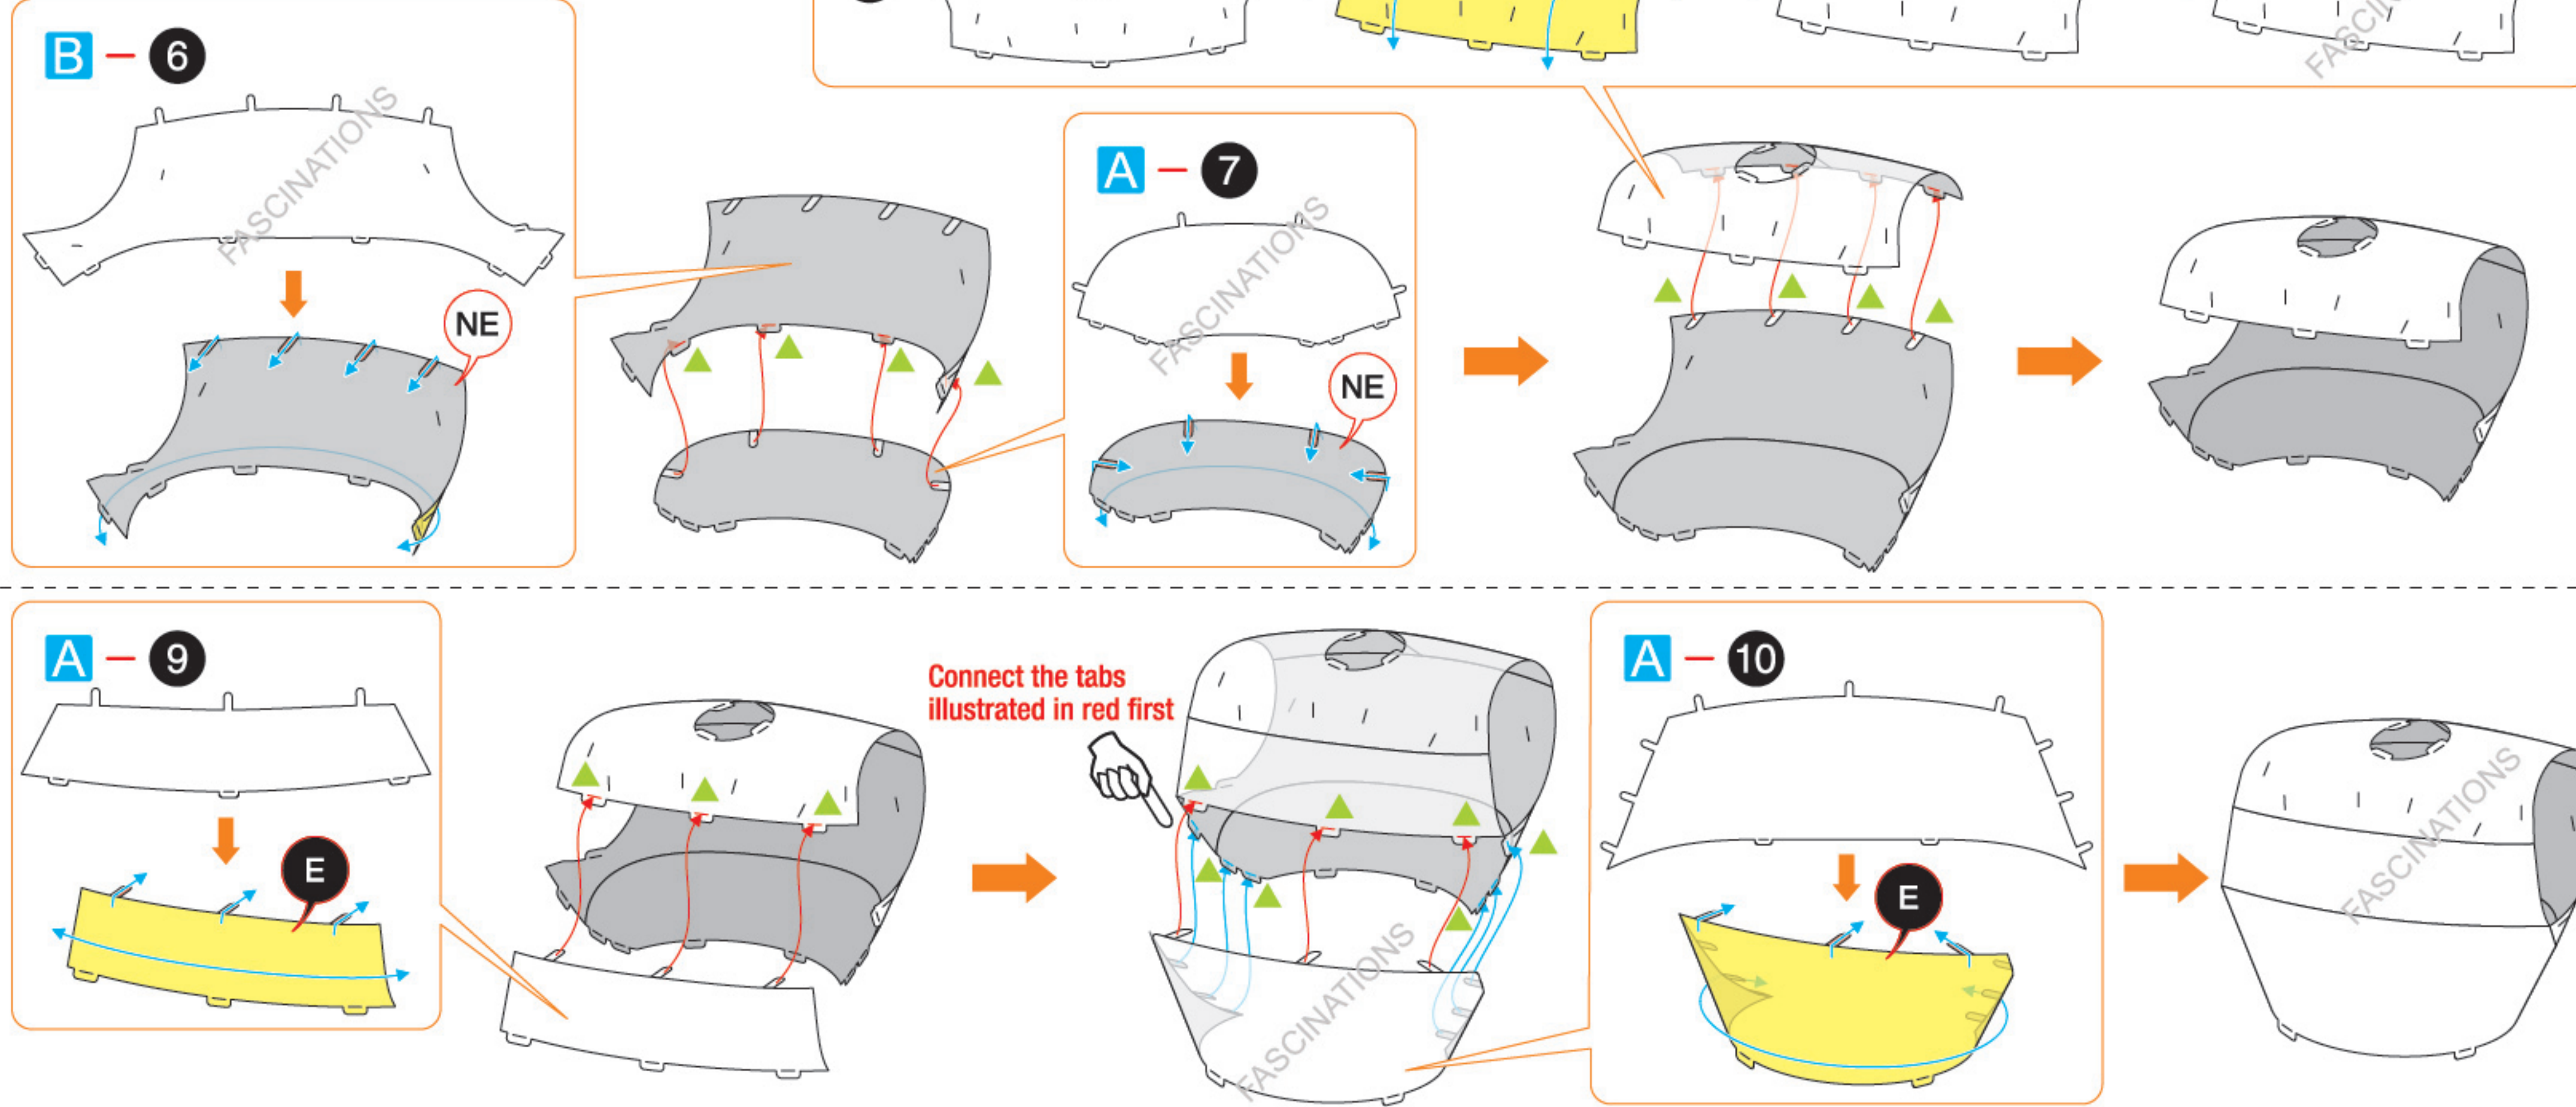


Step 3

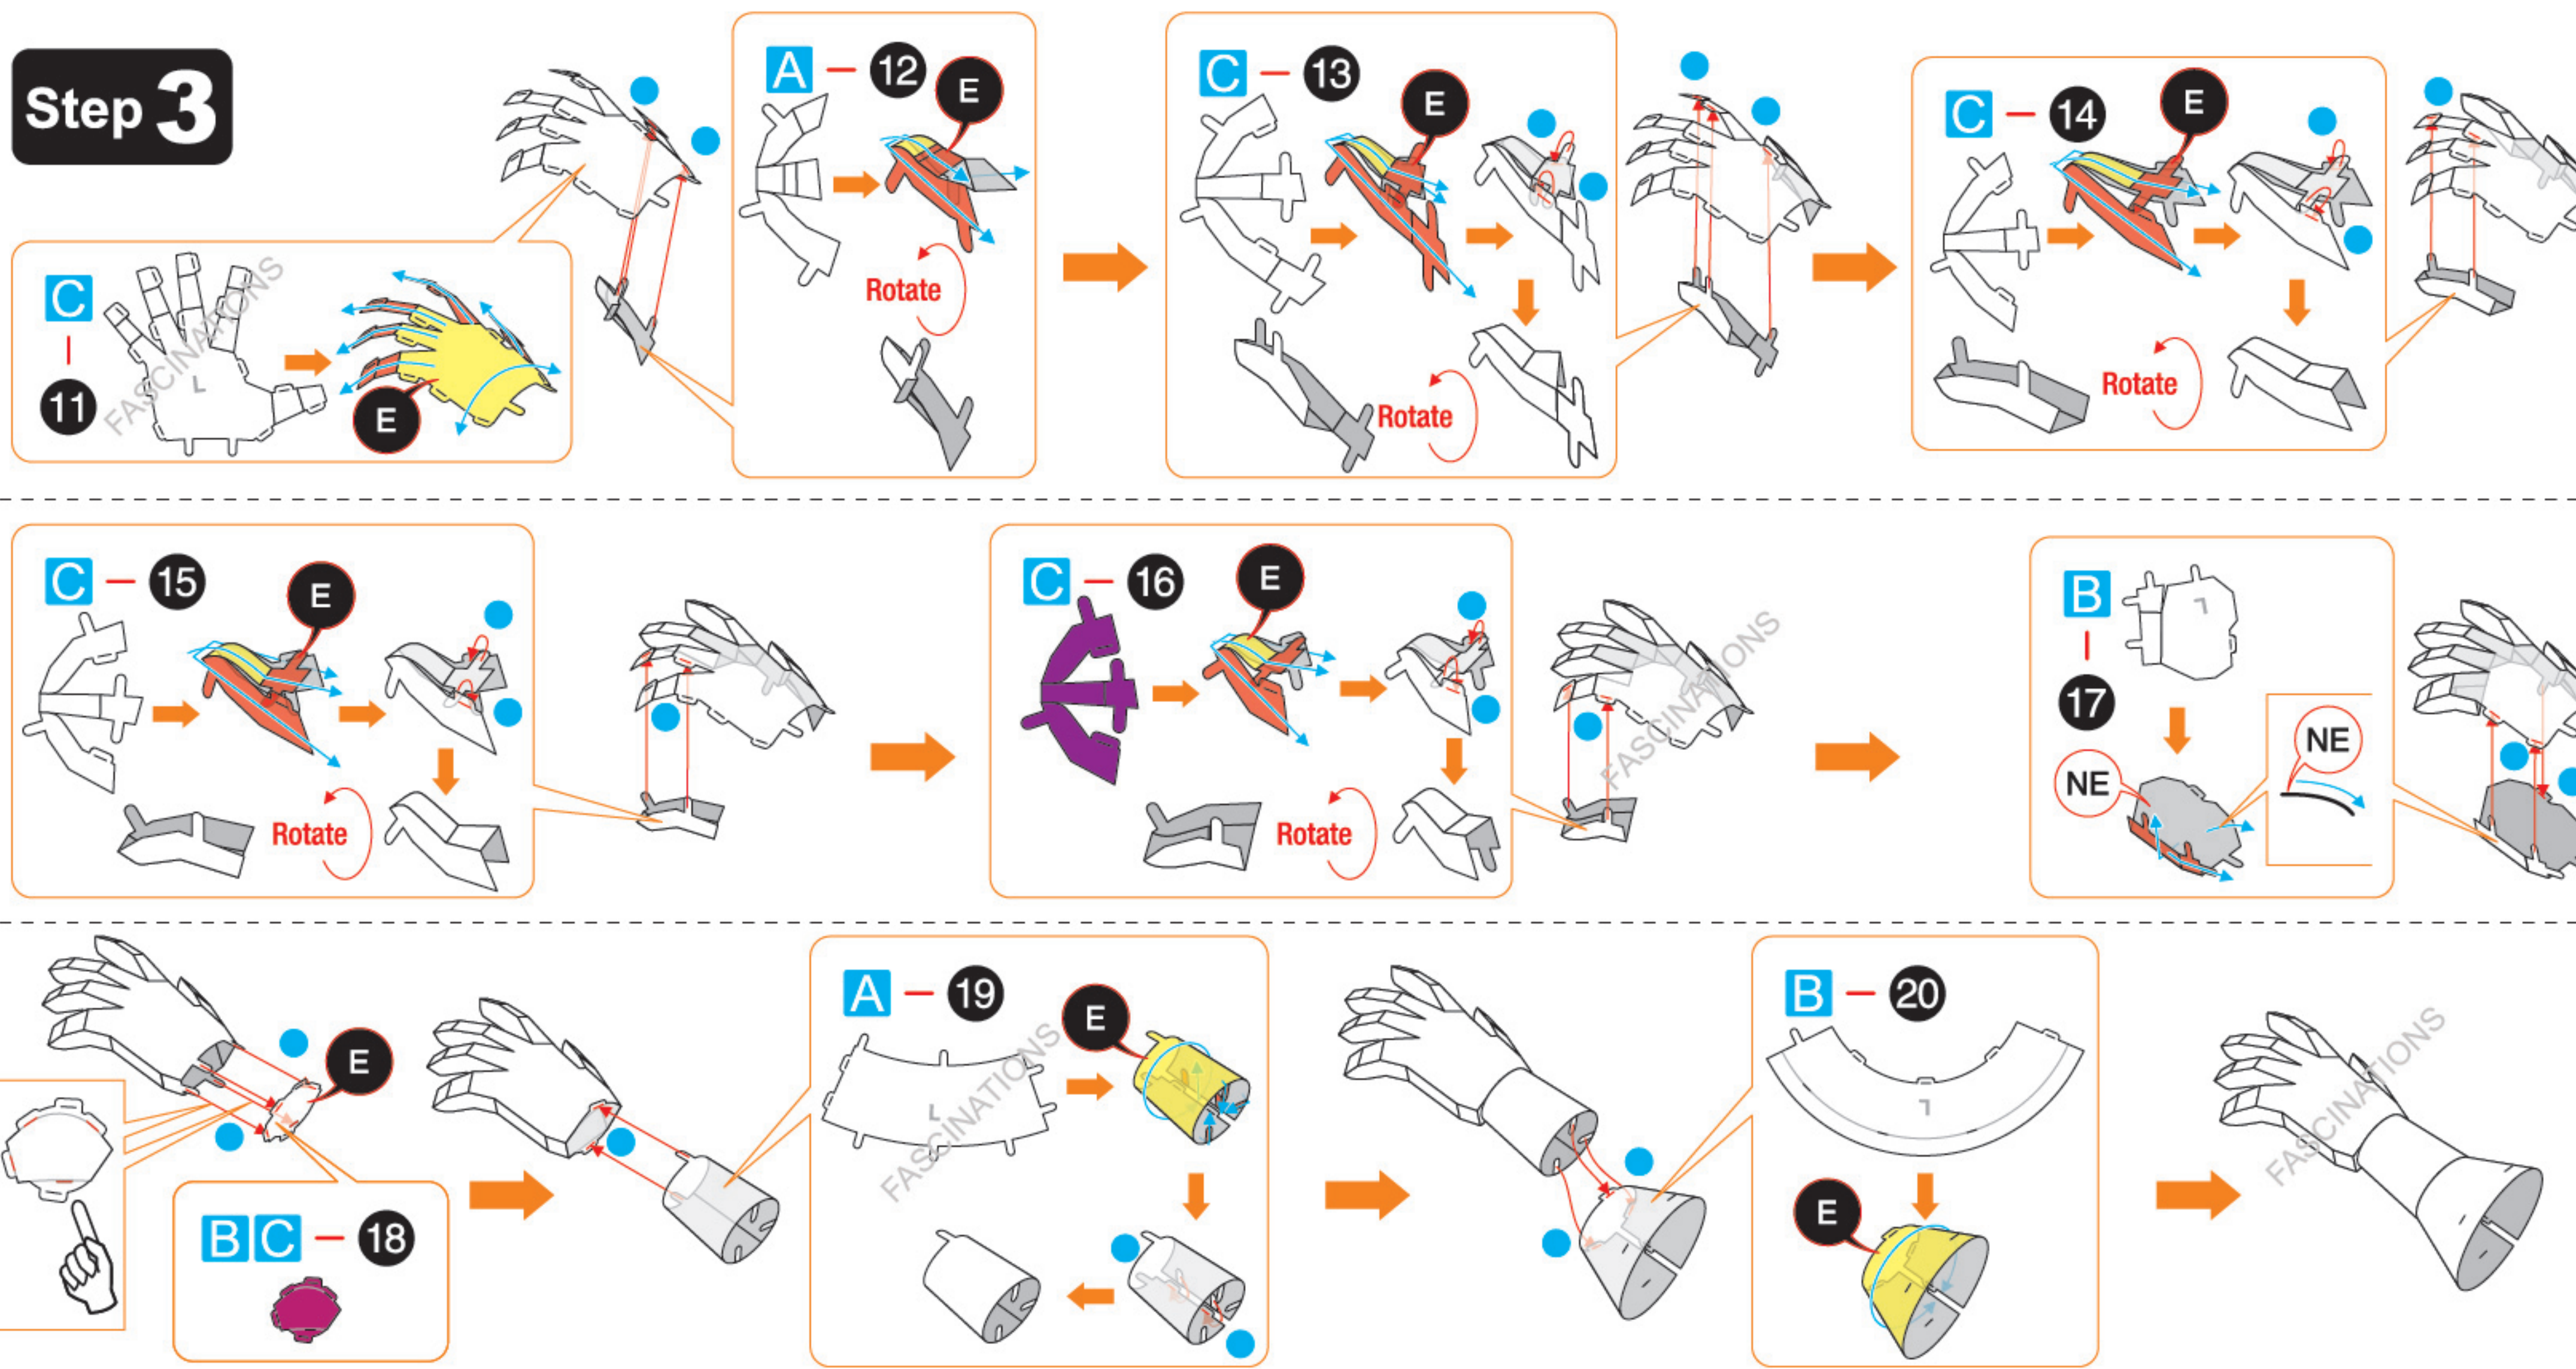


Step 4

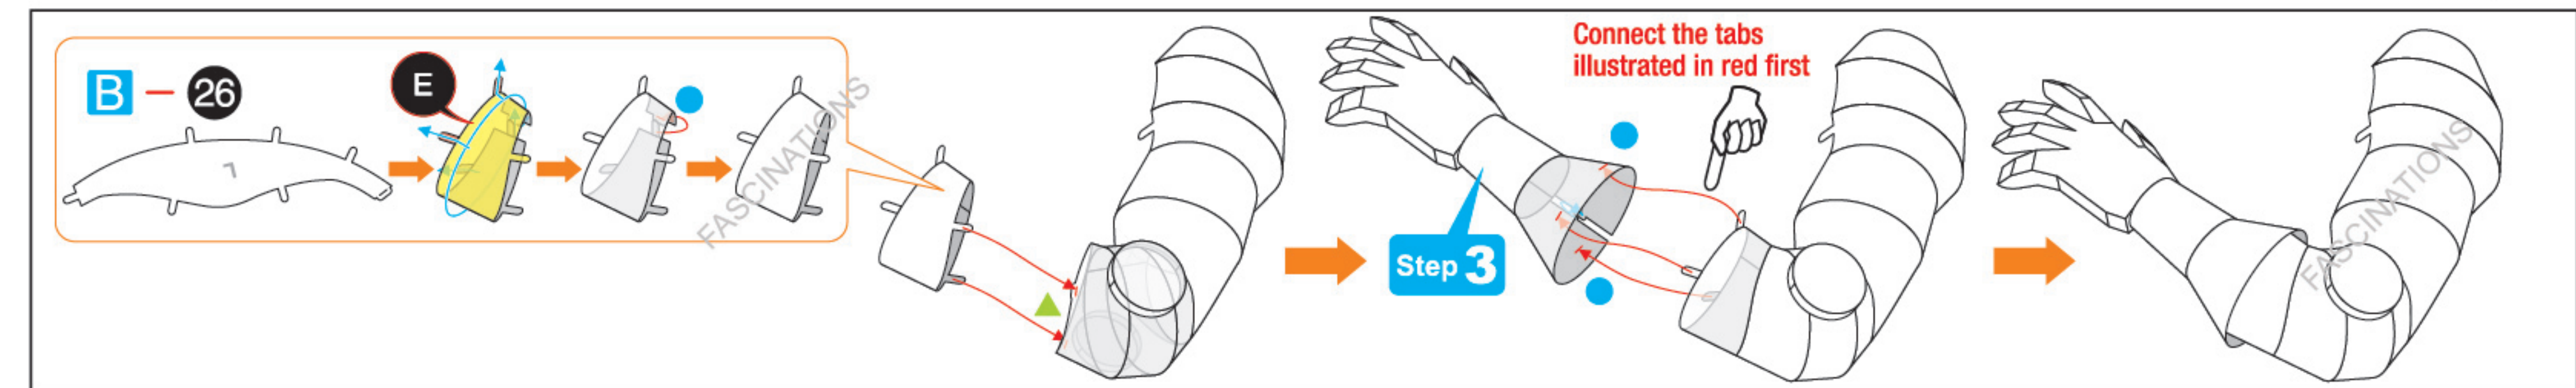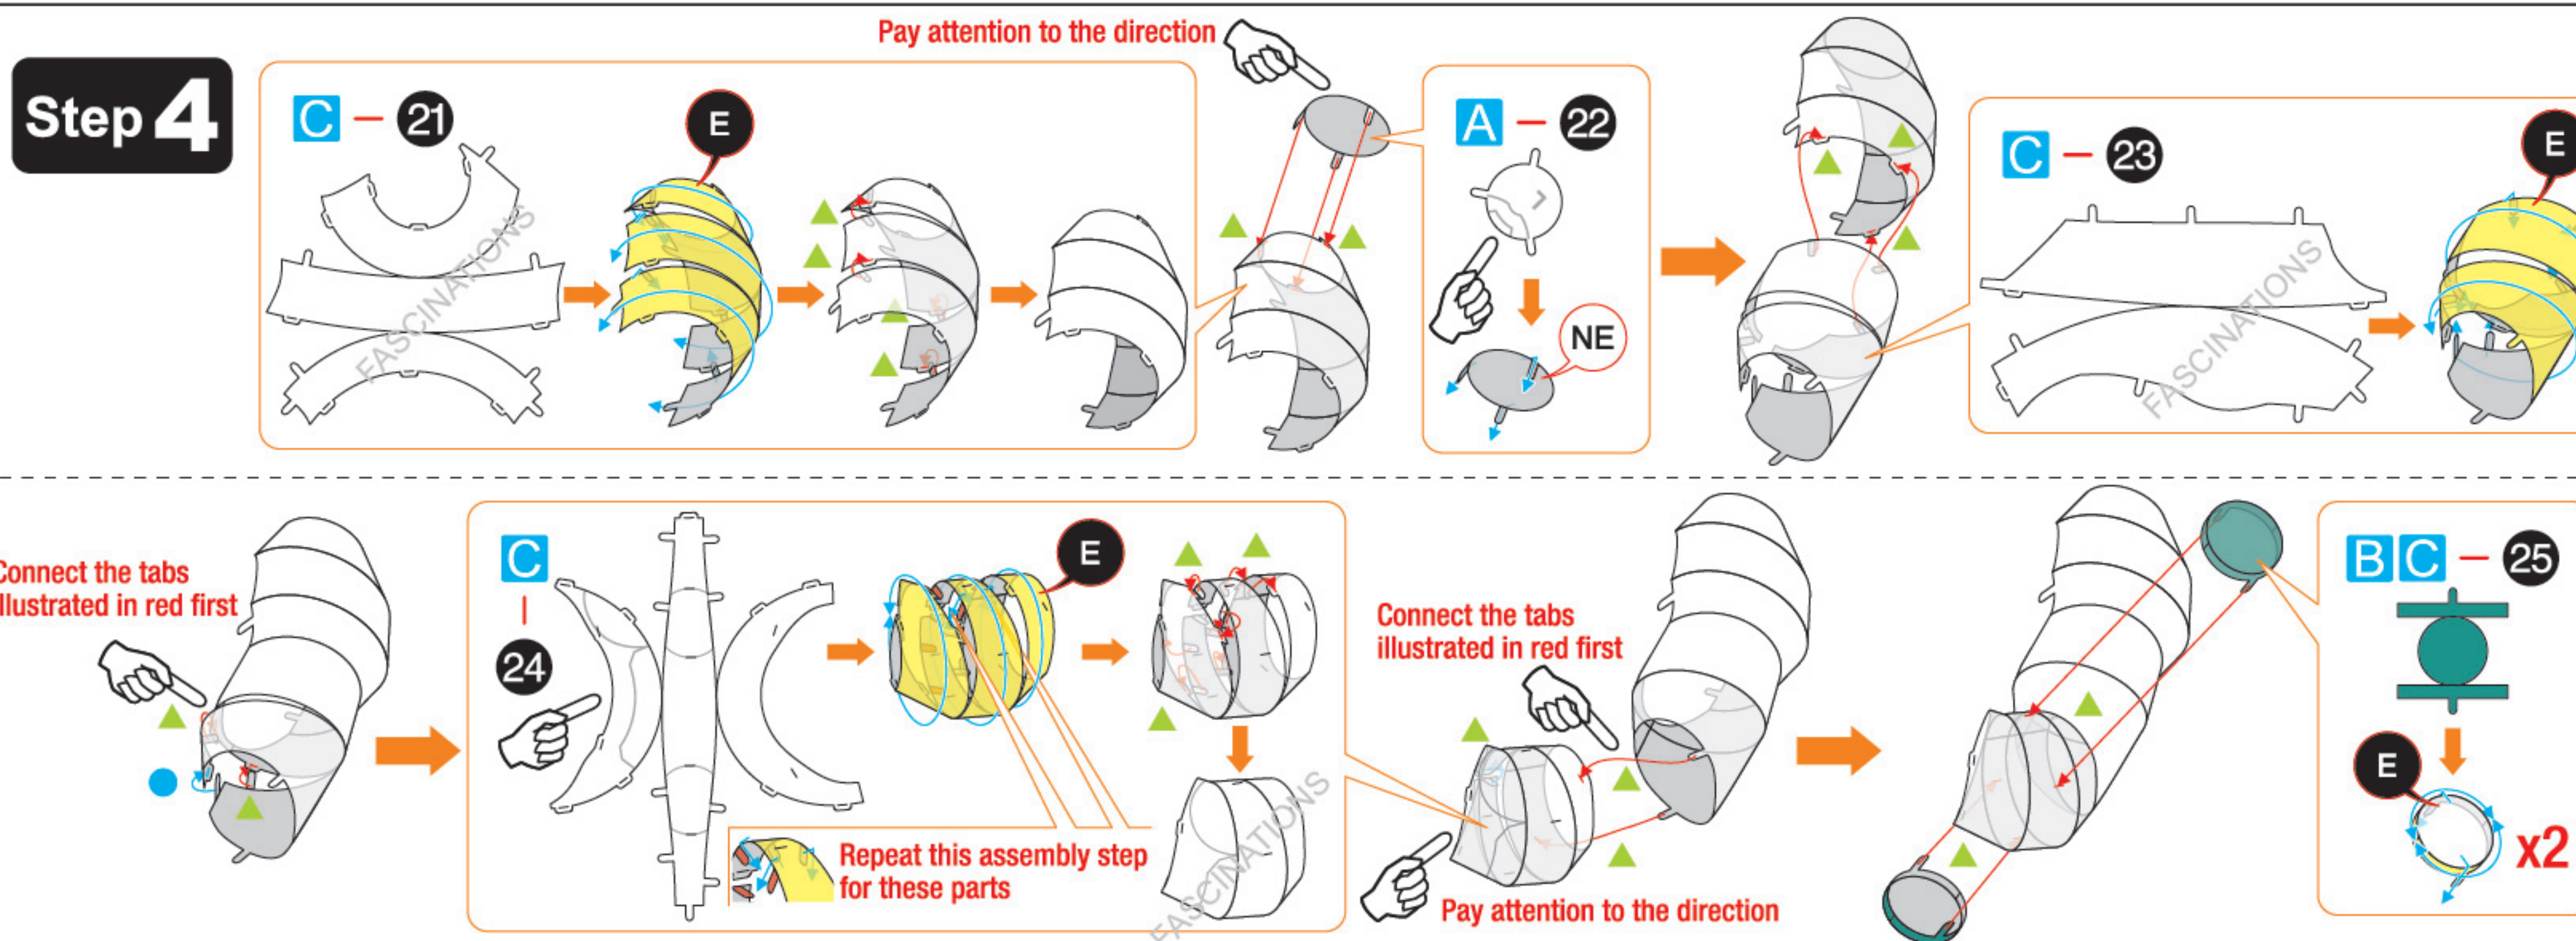

Step 5

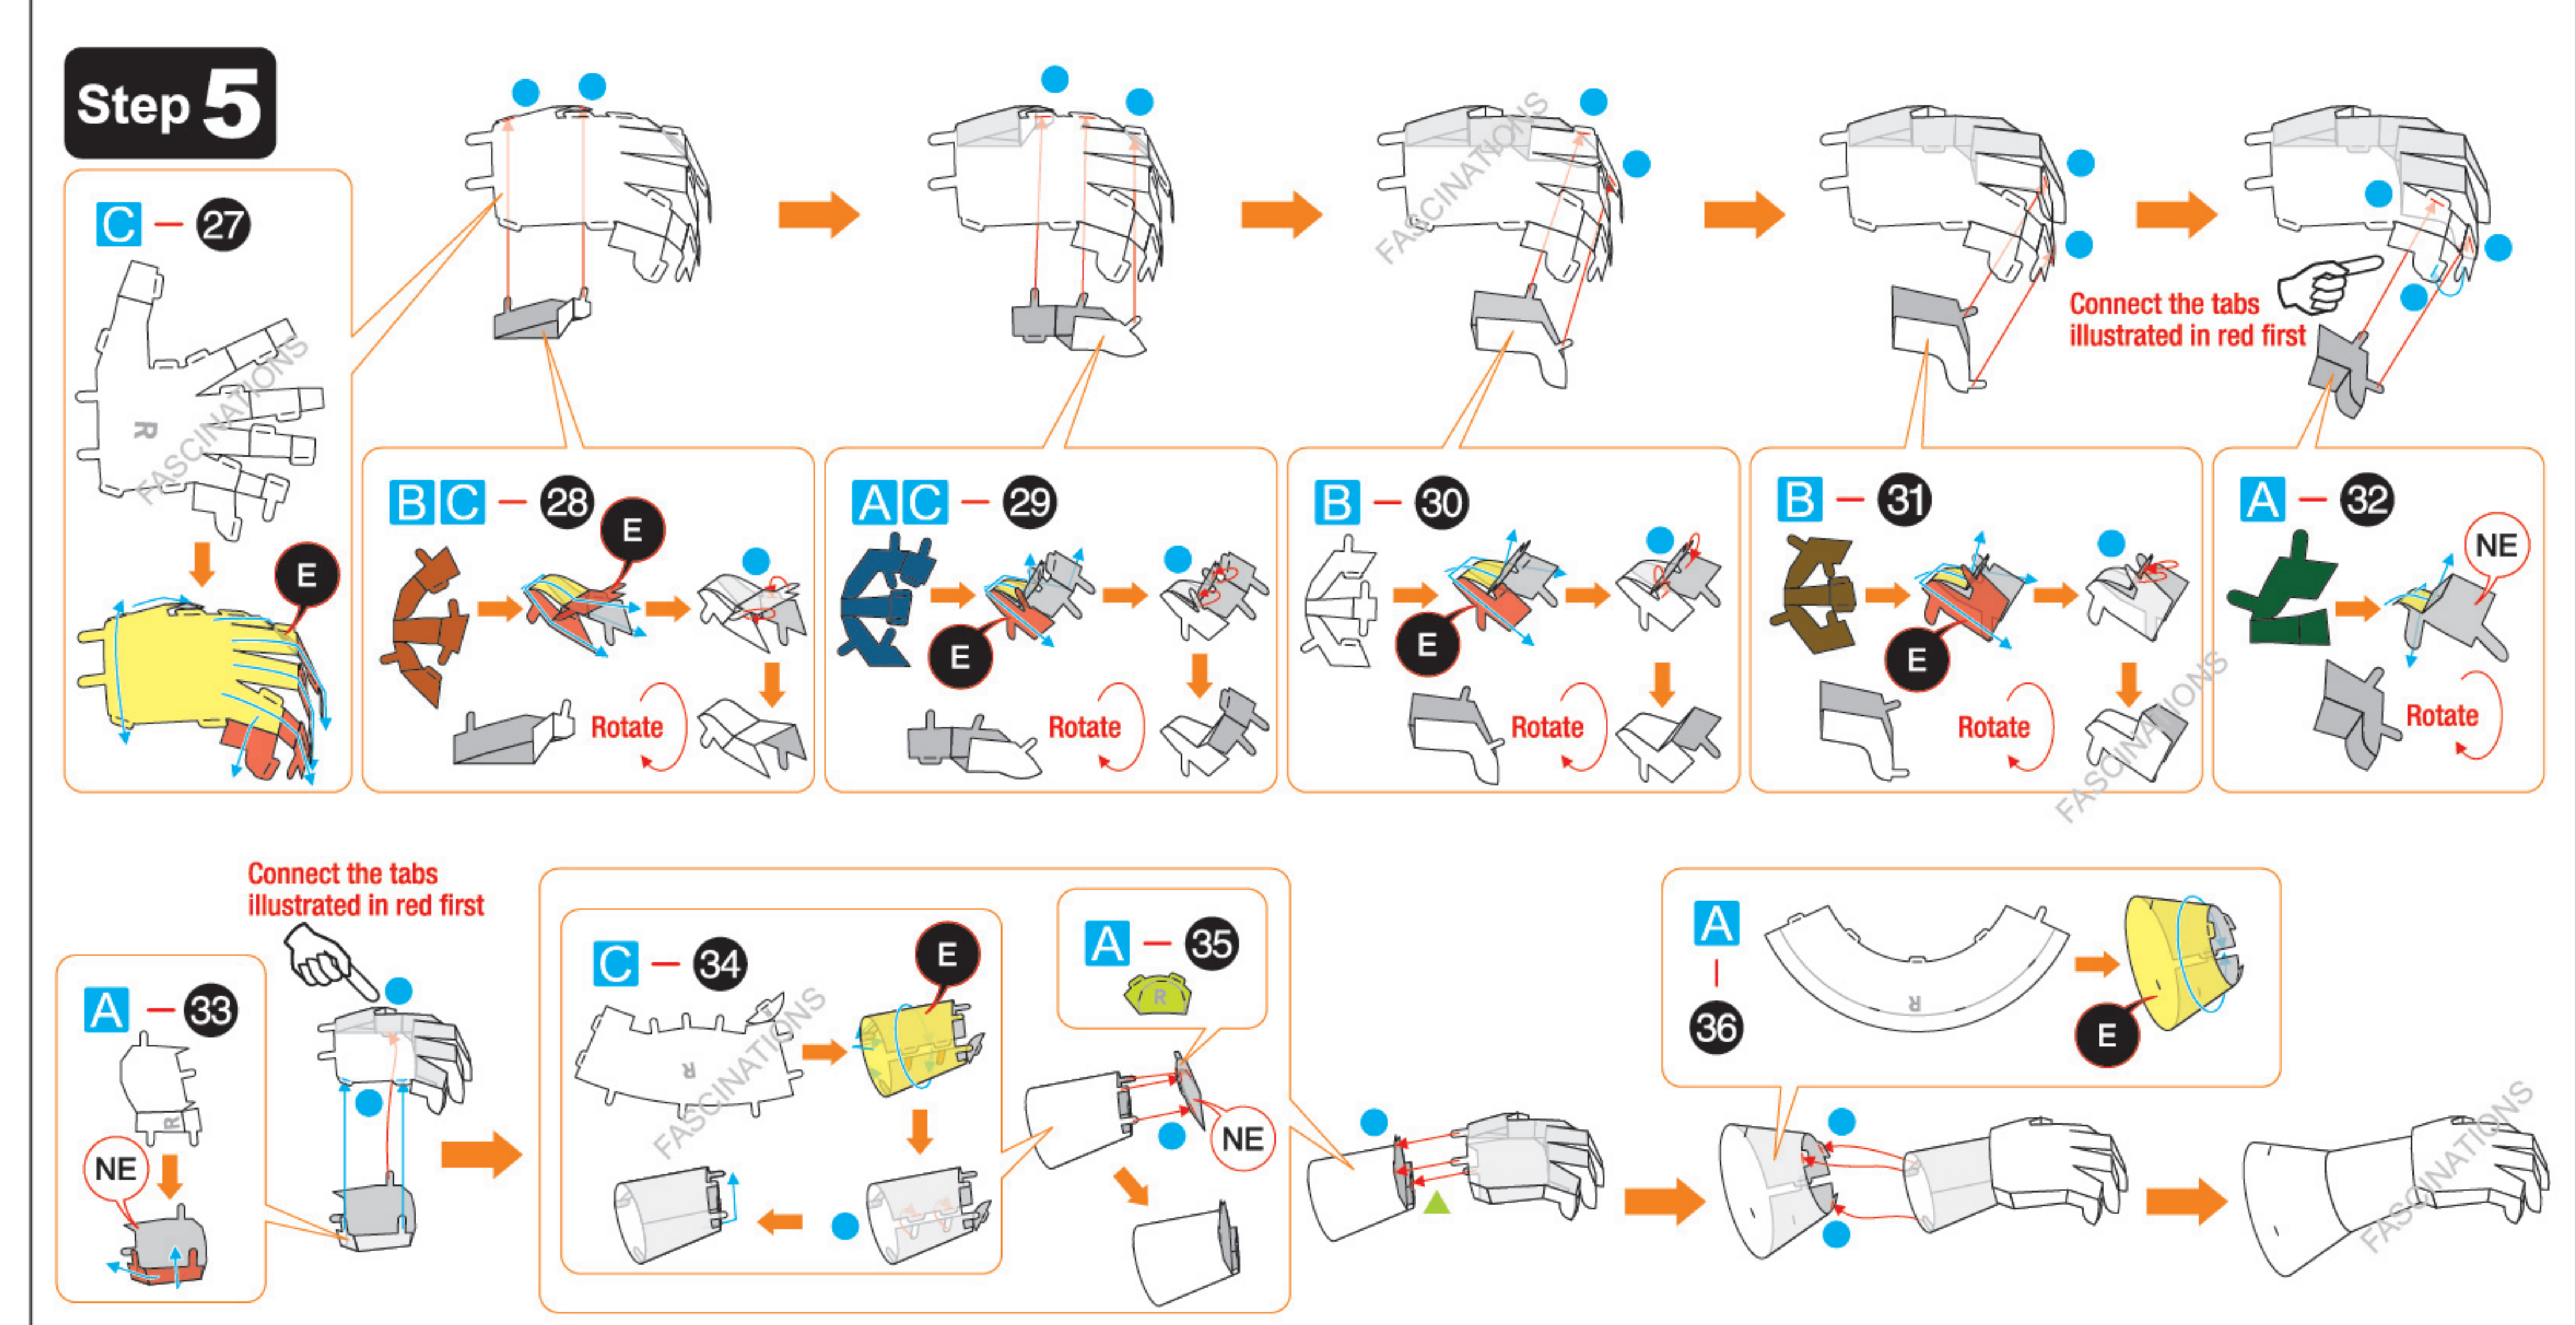

Step 6

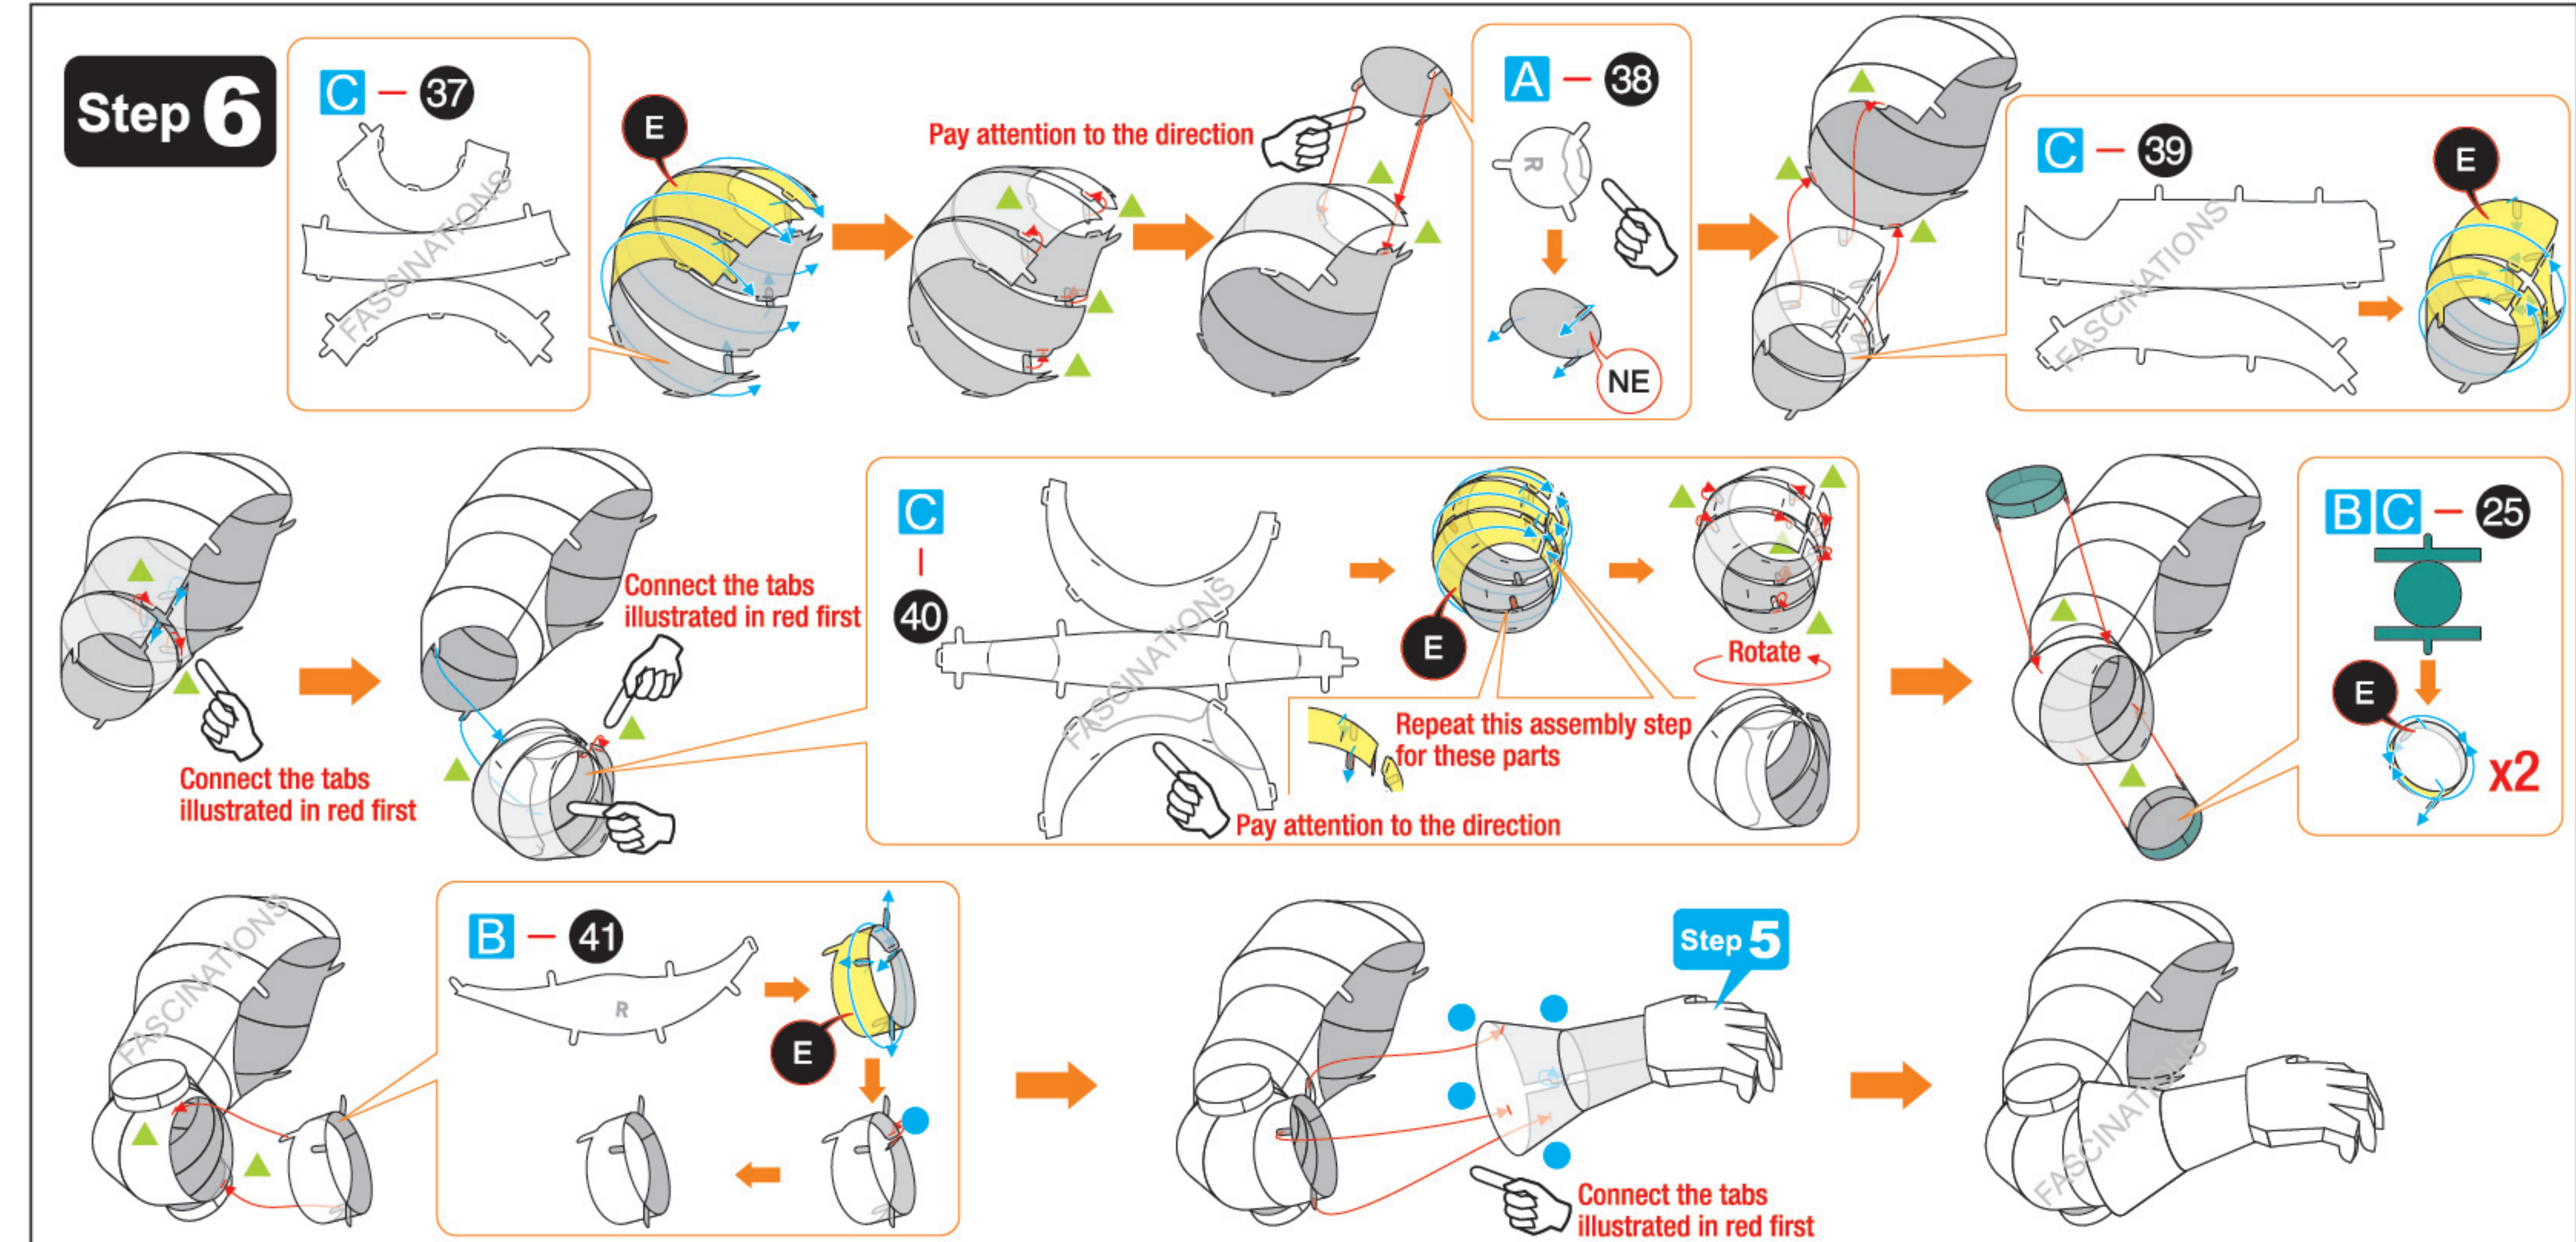

Step 7

