





C-130 HERCULES®
ME1047



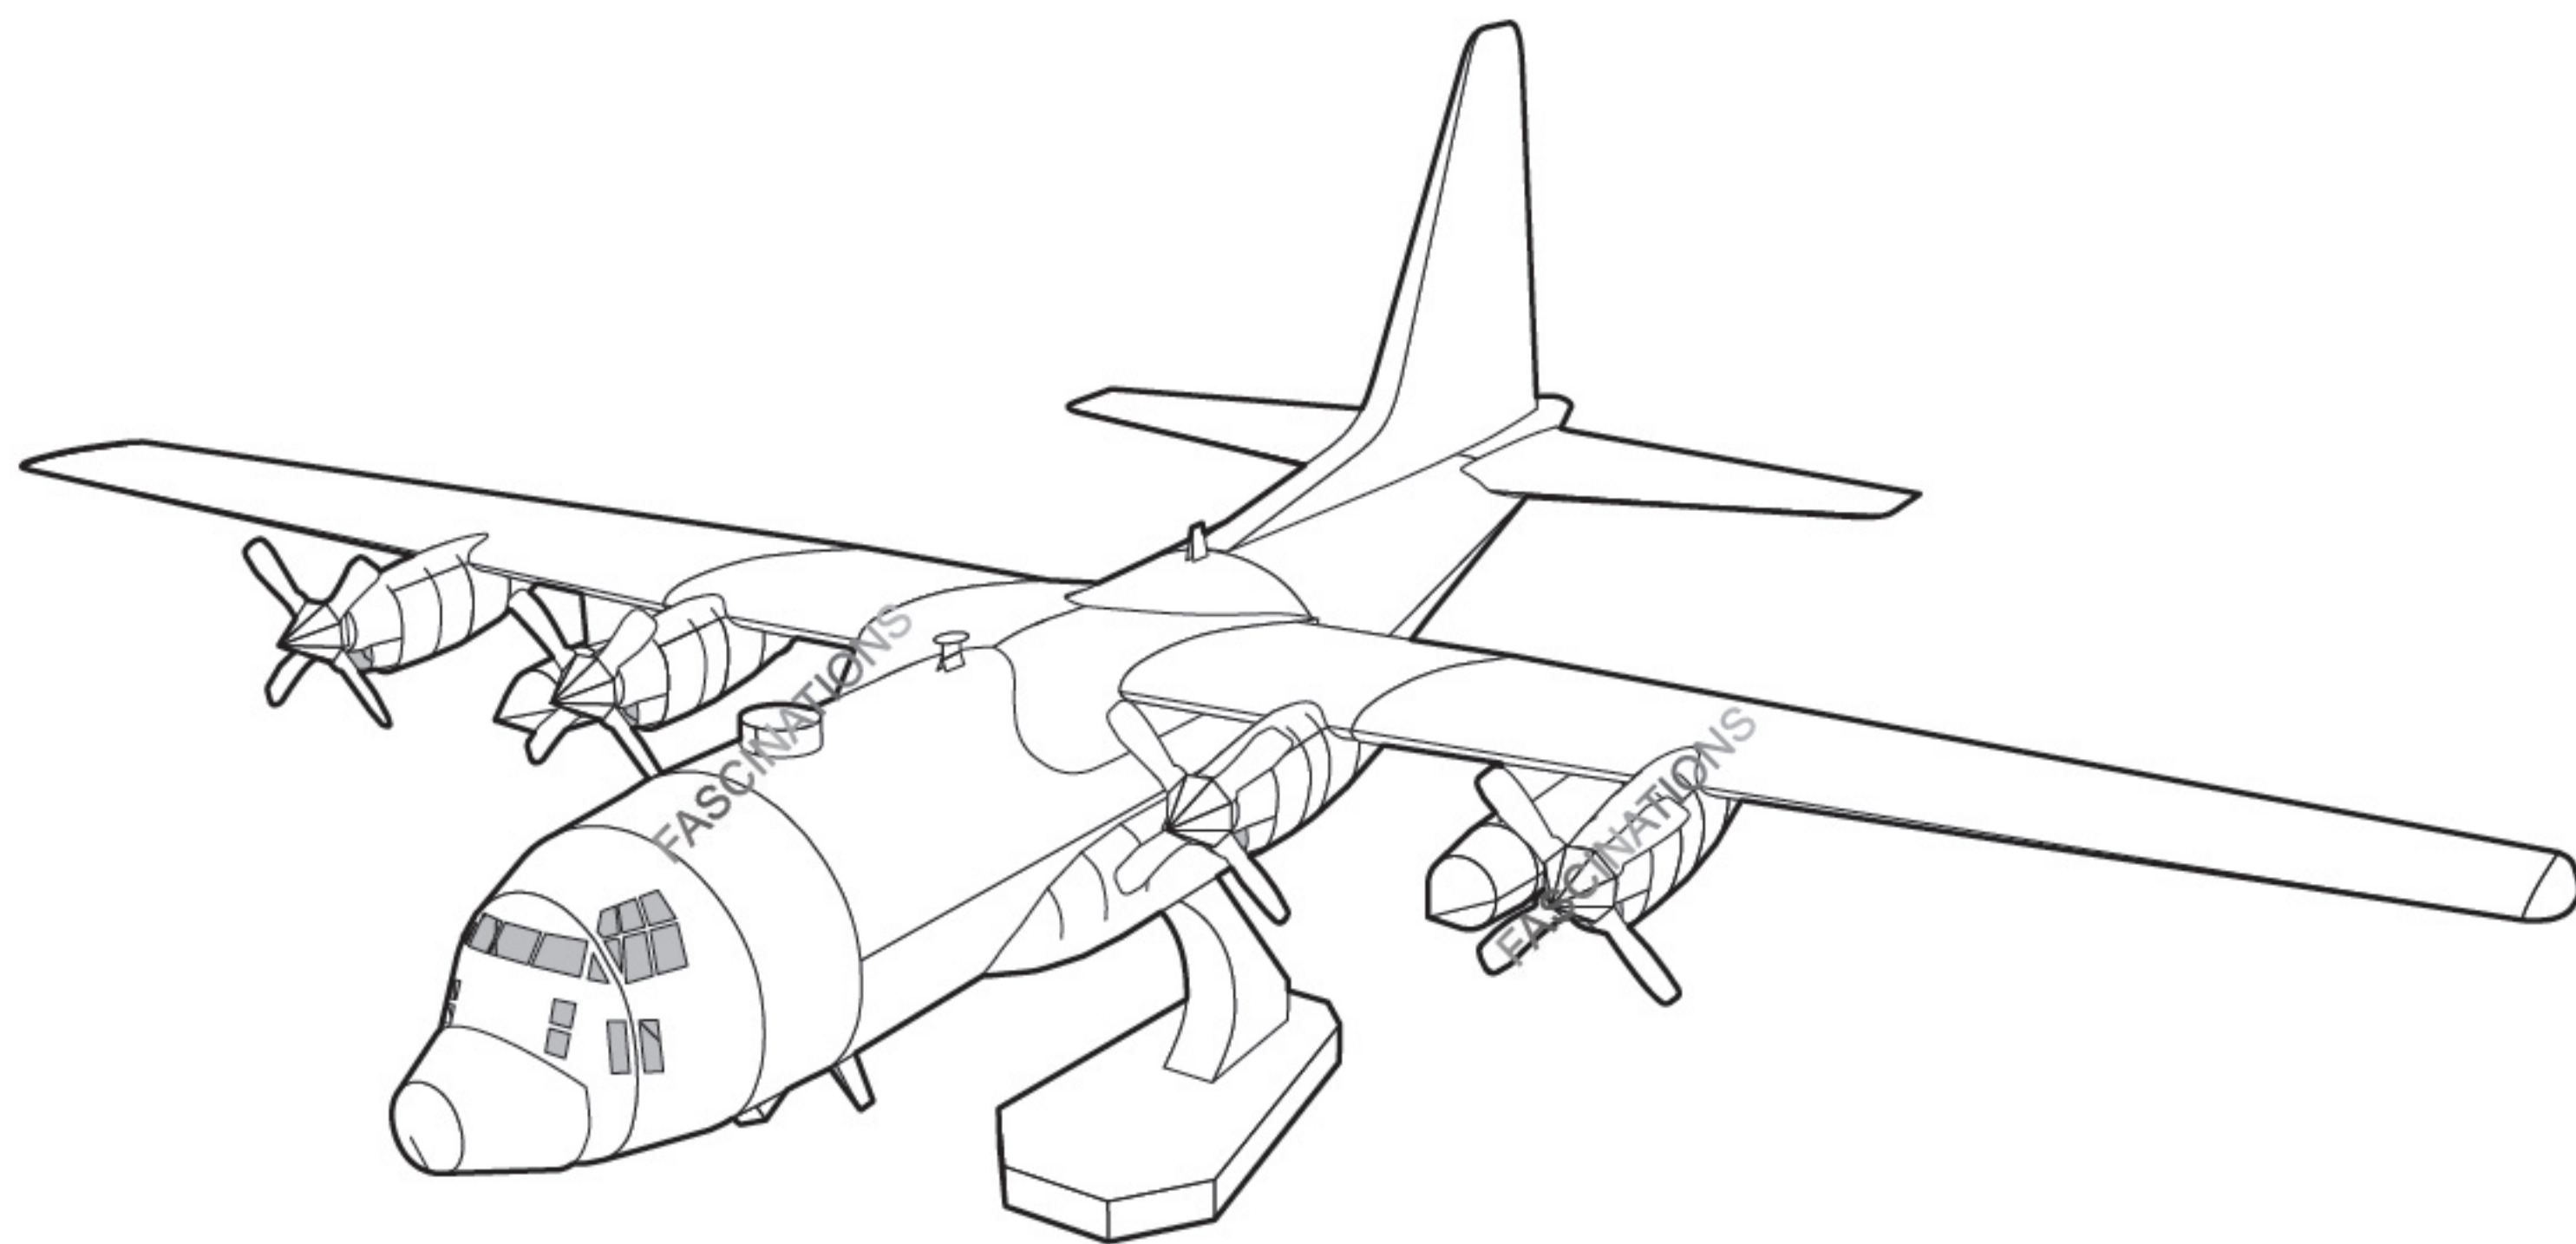


It is highly recommended that you visit
www.metalearth.com/360/ME1047
to see the completed model before assembling your own

METAL SHEETS

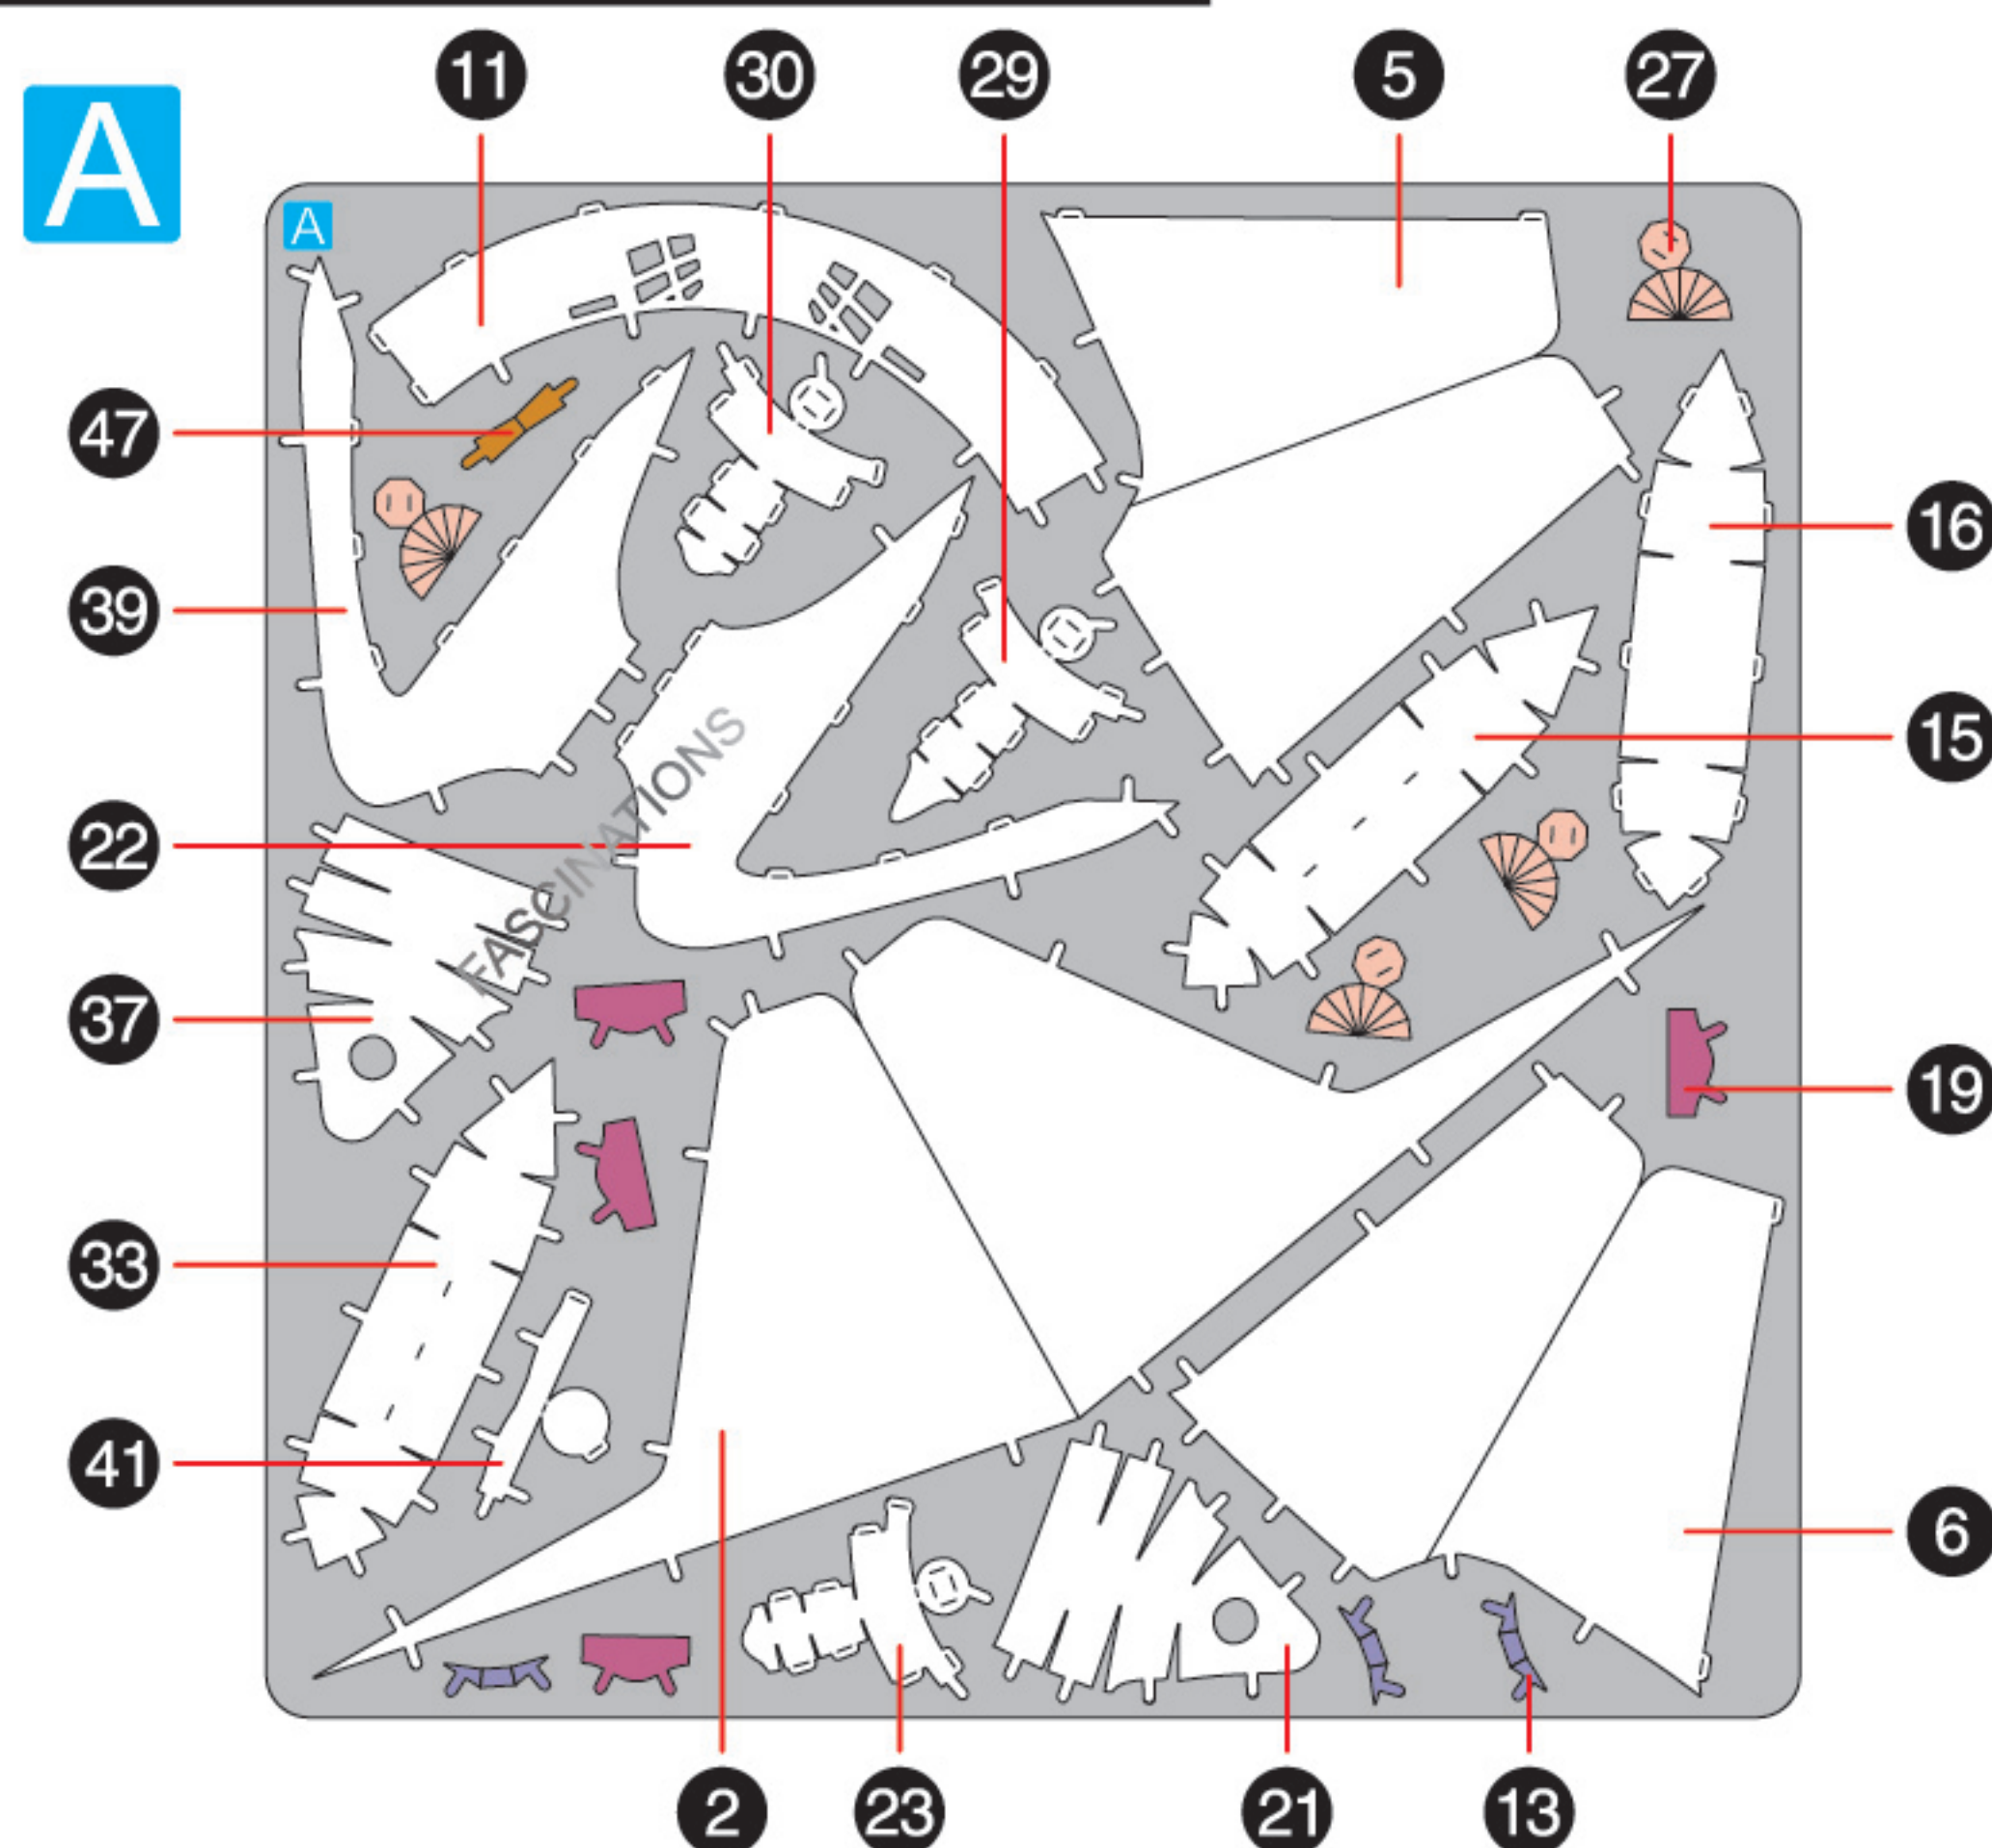

Parts with same color are duplicates

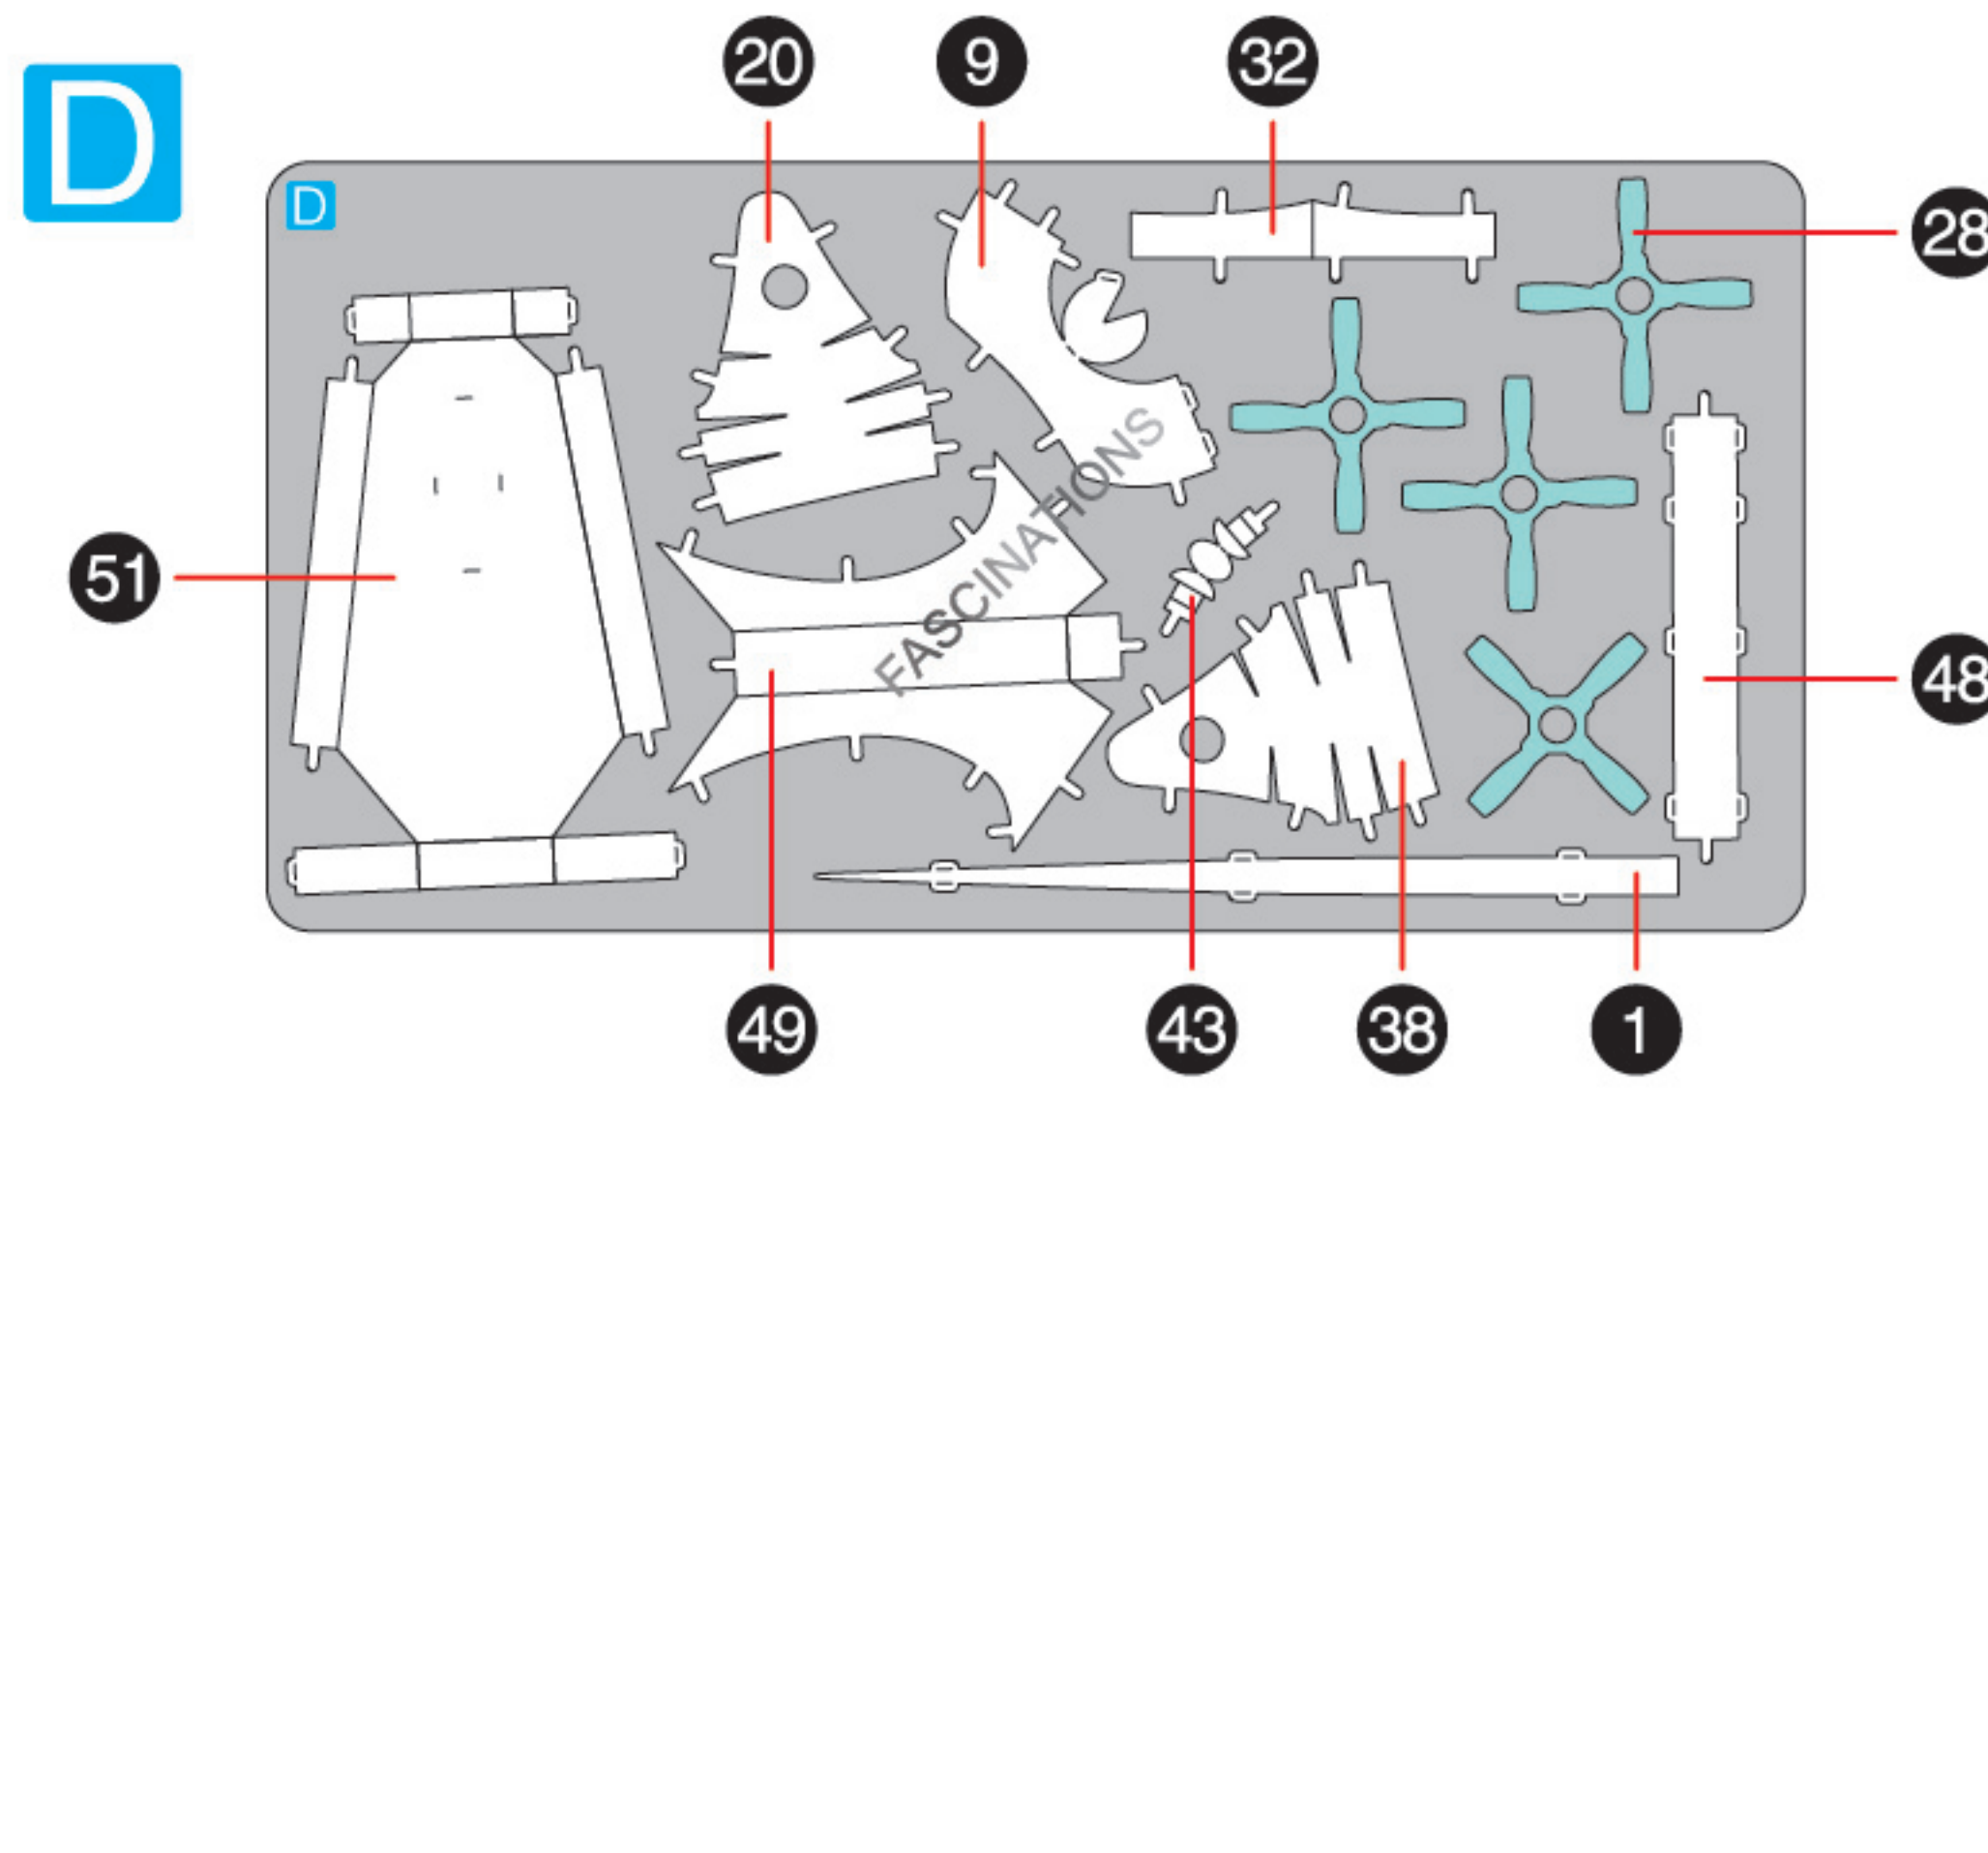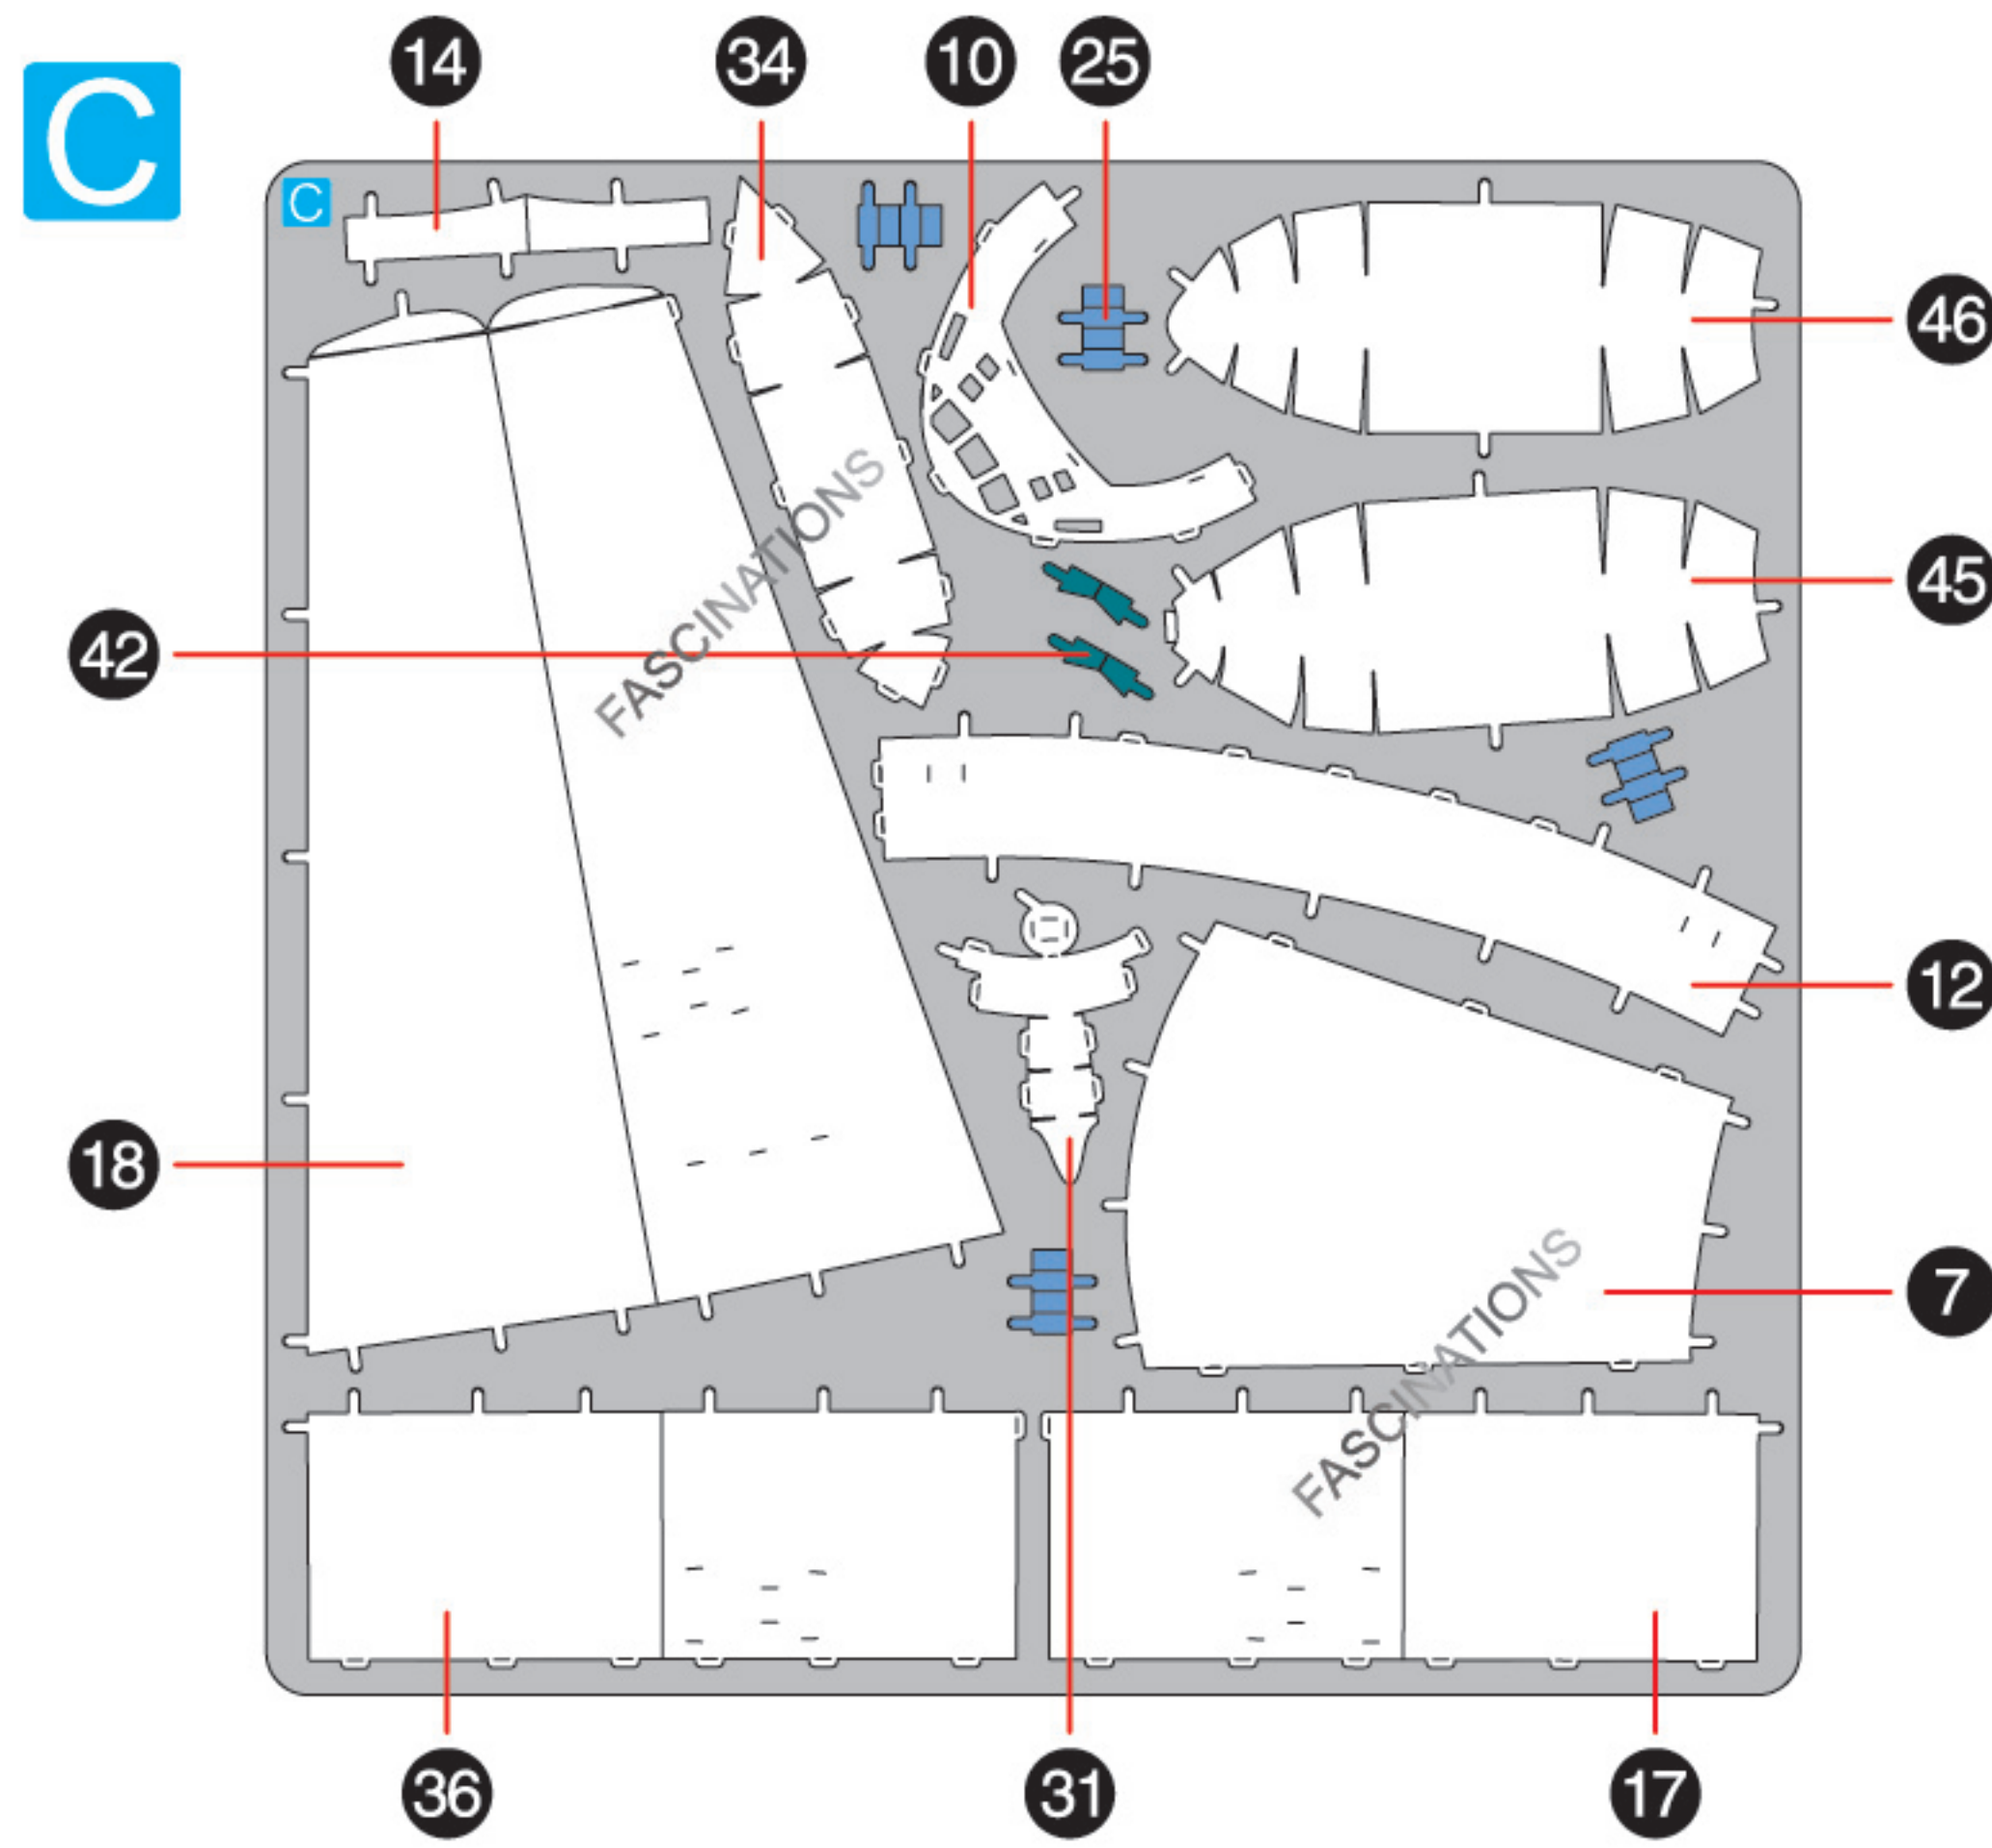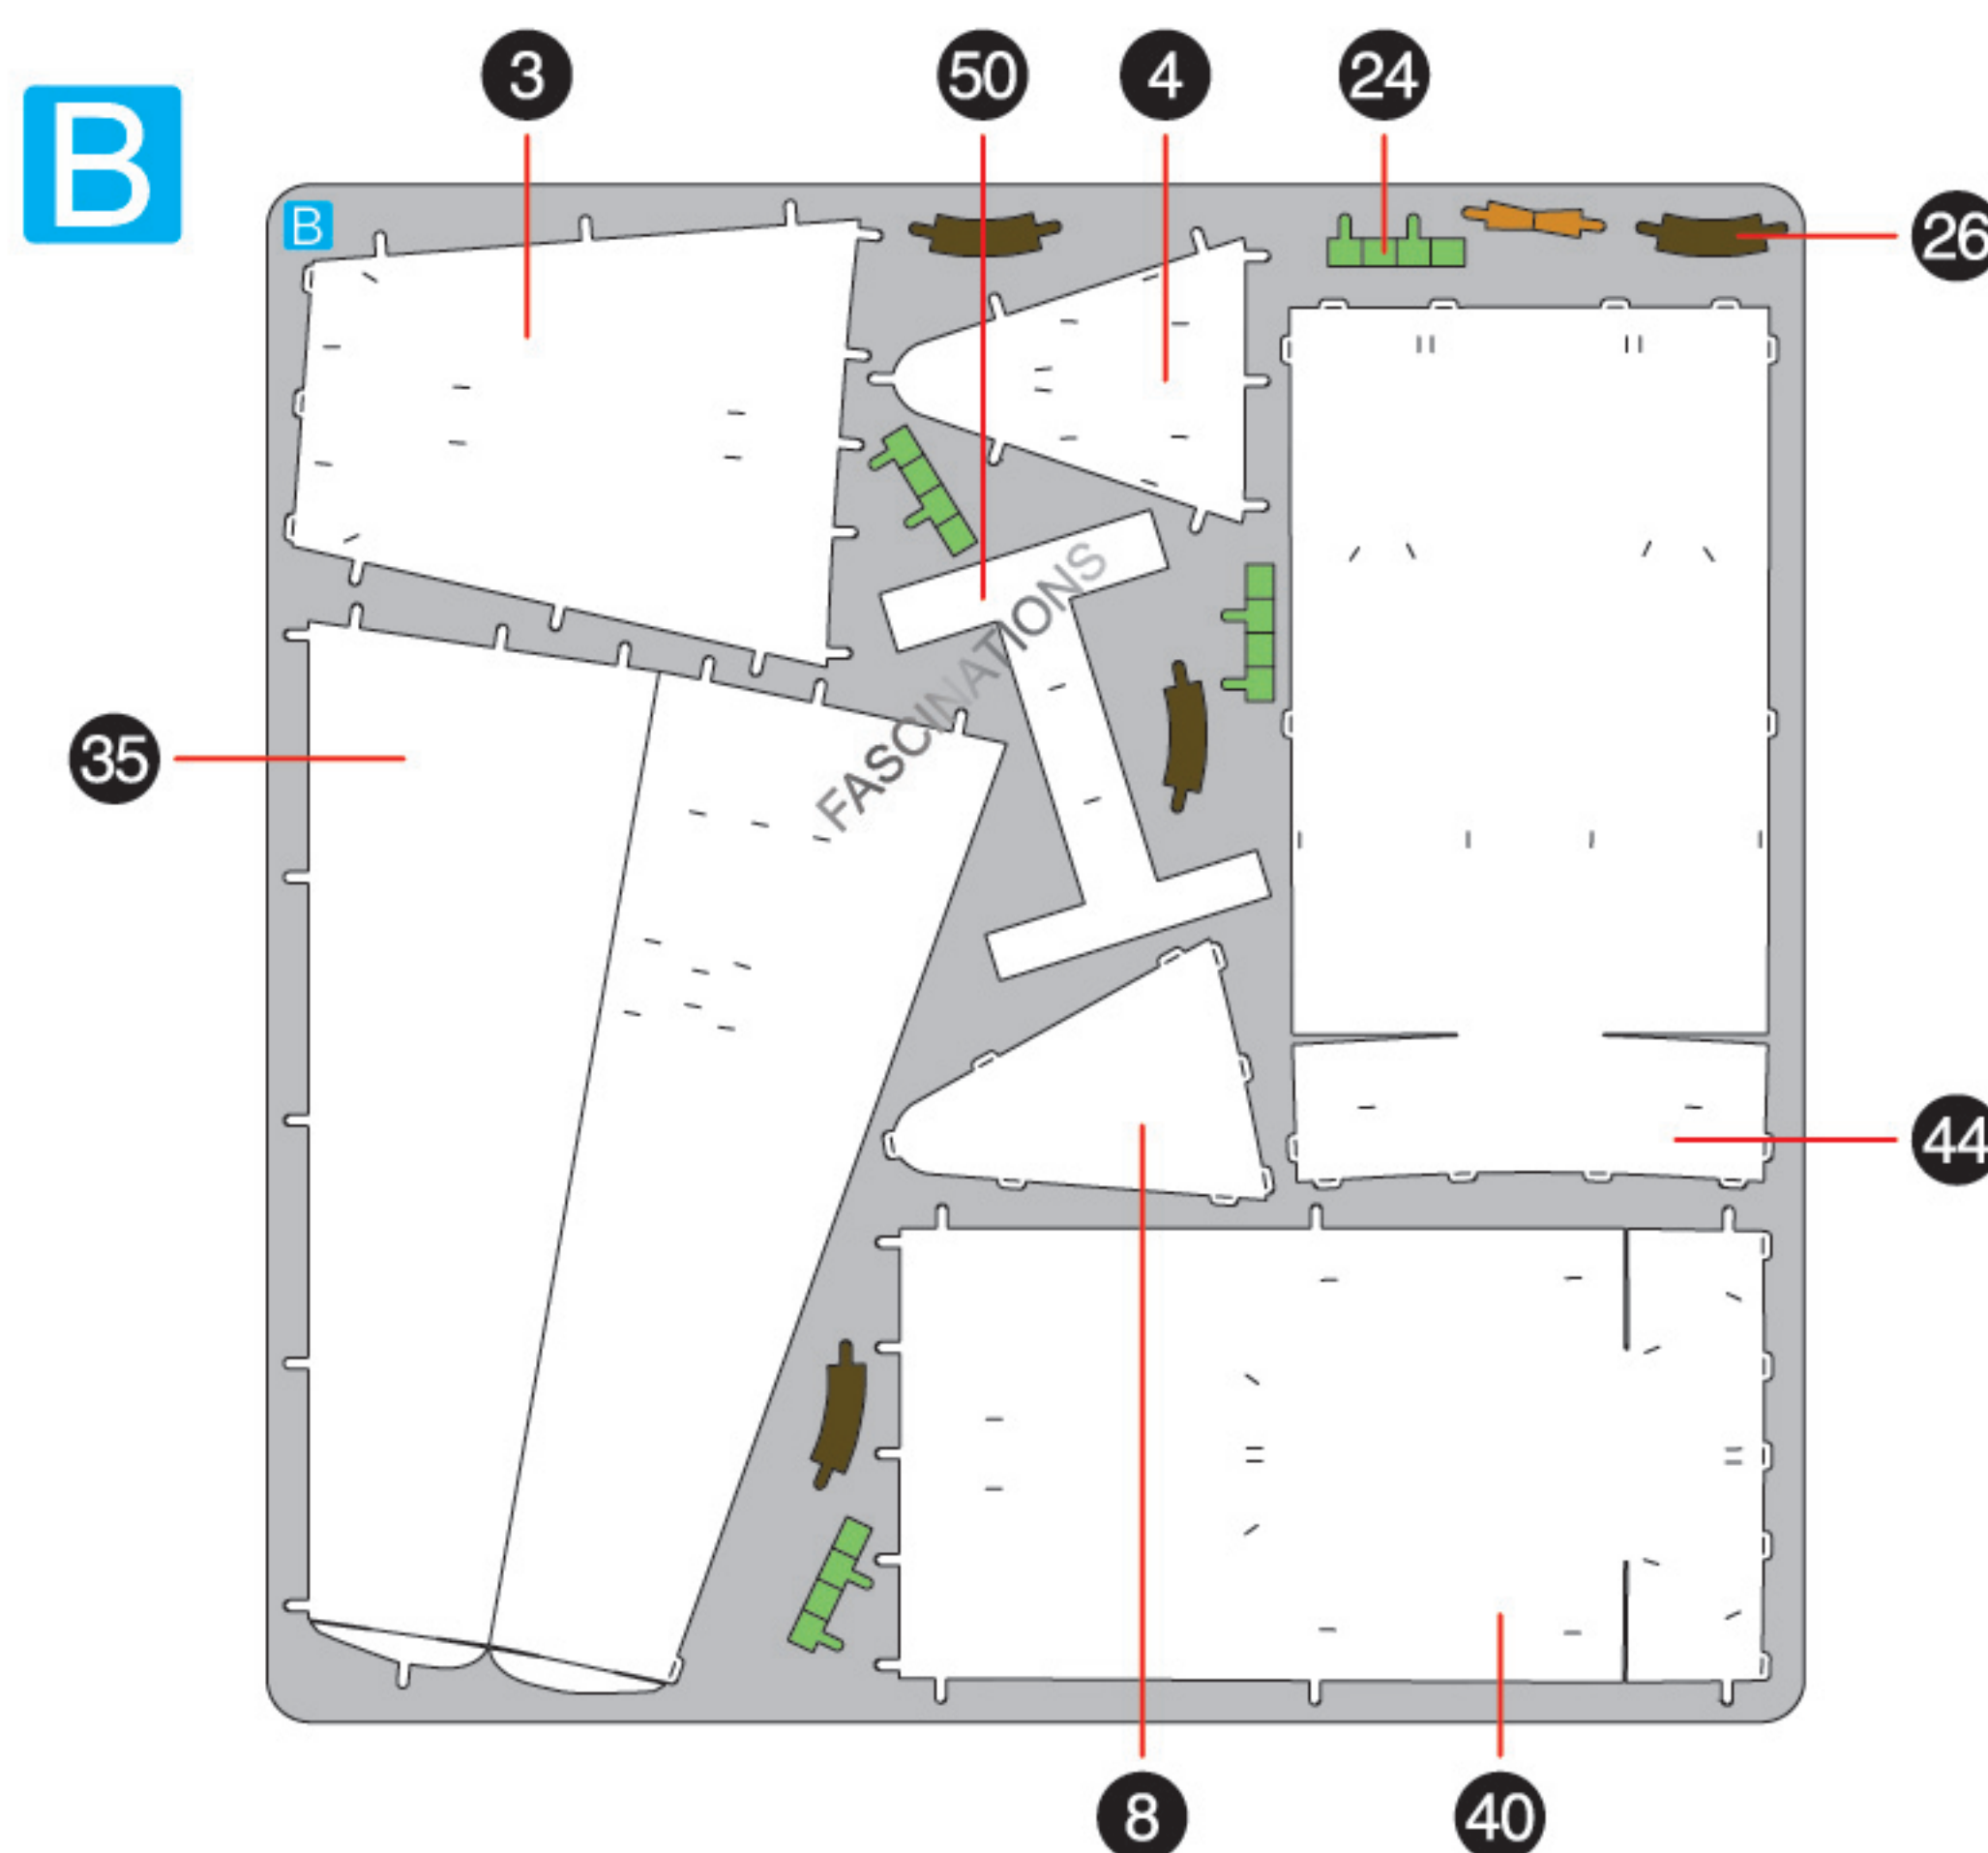


In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed.



Go to www.metalearth.com/360/ME1047 to see the zoomable PDF version of this instruction sheet

TO CREATE THE BEST CONNECTIONS

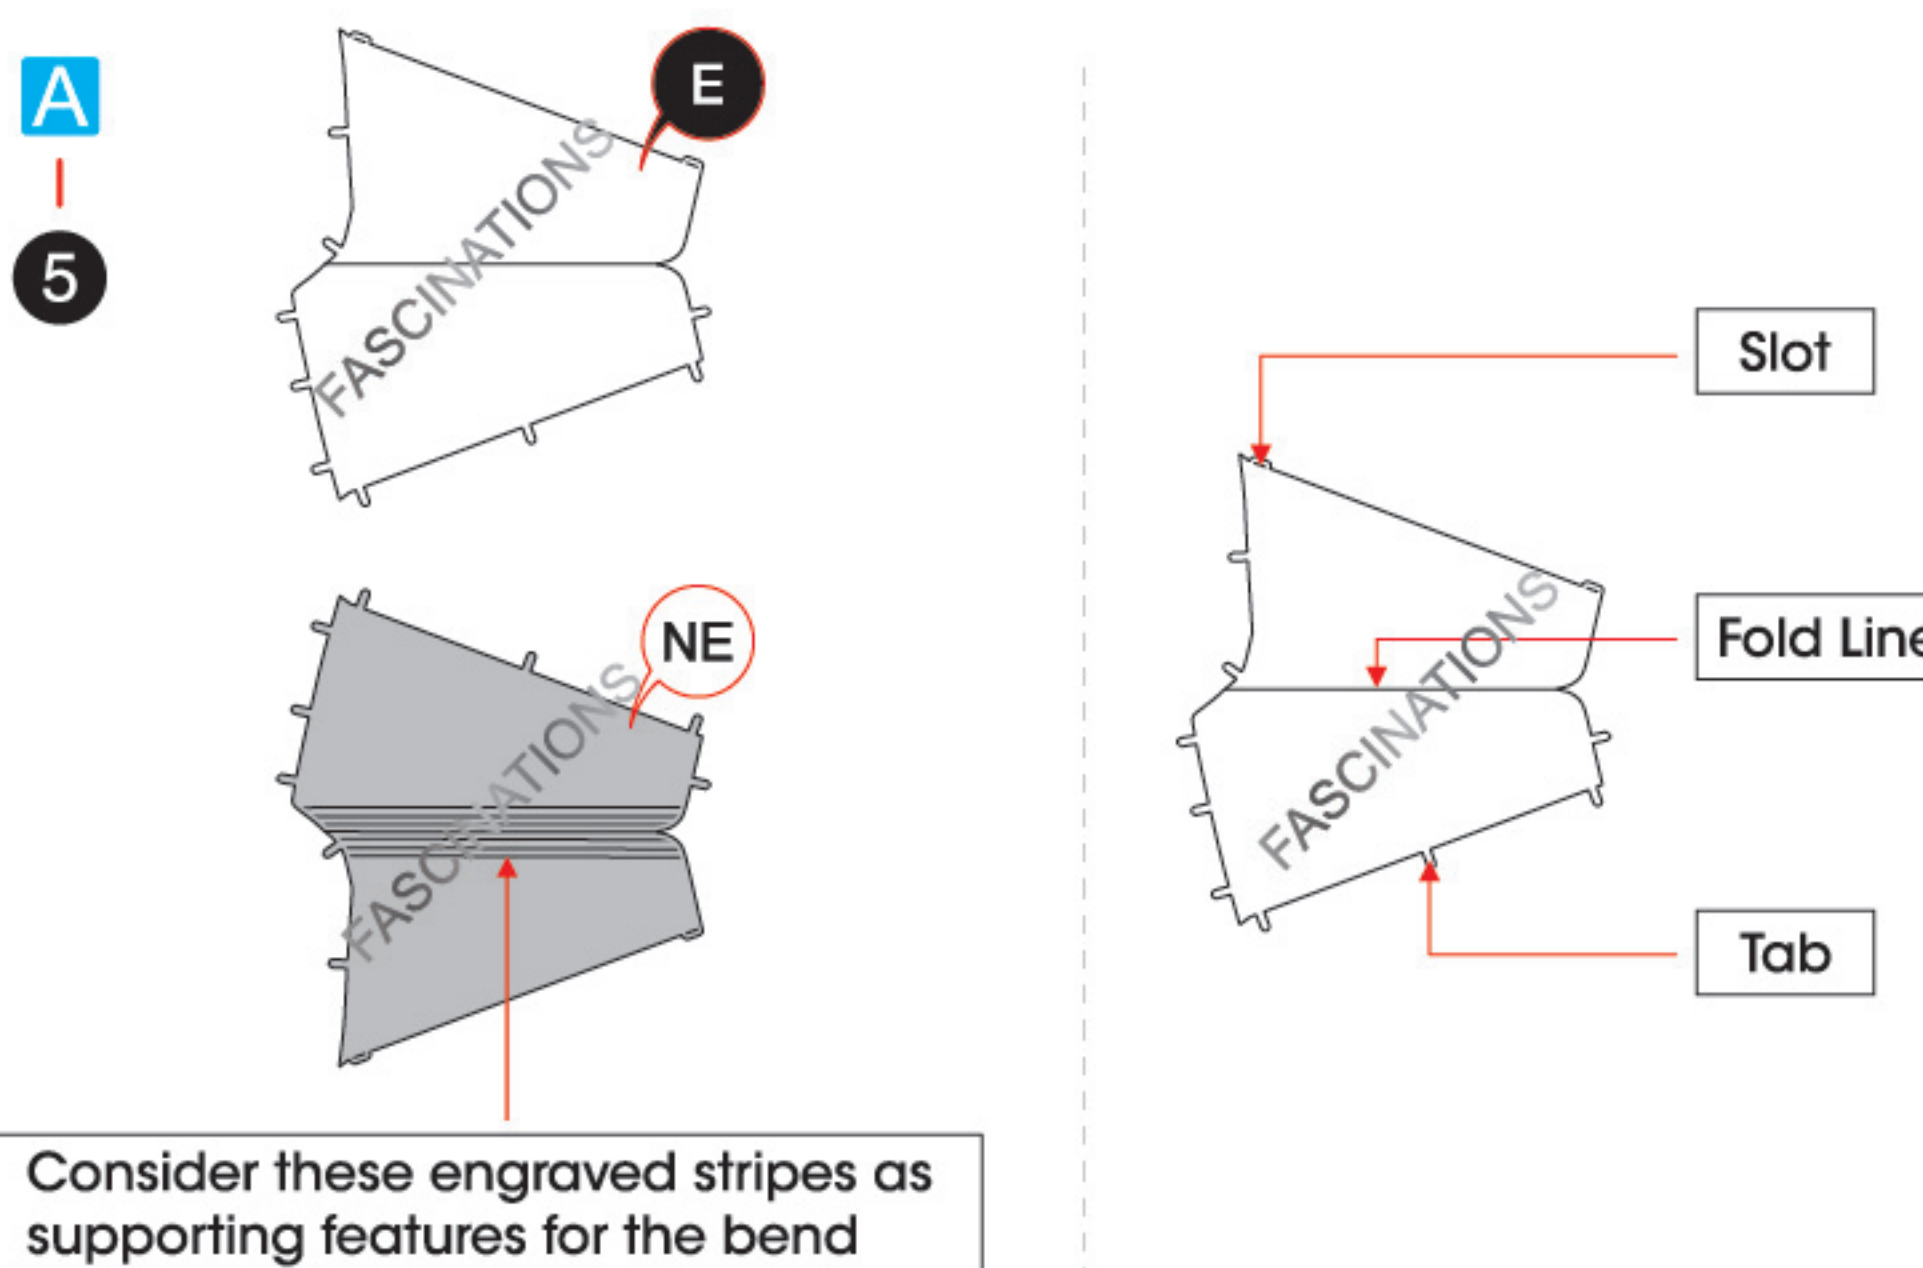

Legends:

- E** Engraved
- NE** Non - engraved
- Attention point
- Insert tab and bend 90 degrees
- Insert tab and twist 90 degrees

Assembly tip:

If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish.

- Yellow areas should be curled
- Red areas should be folded

Recommended tools:

- Wire cutters: helpful for taking parts from the metal sheets.





- Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.









ASSEMBLY FLOW CHART

Step 1


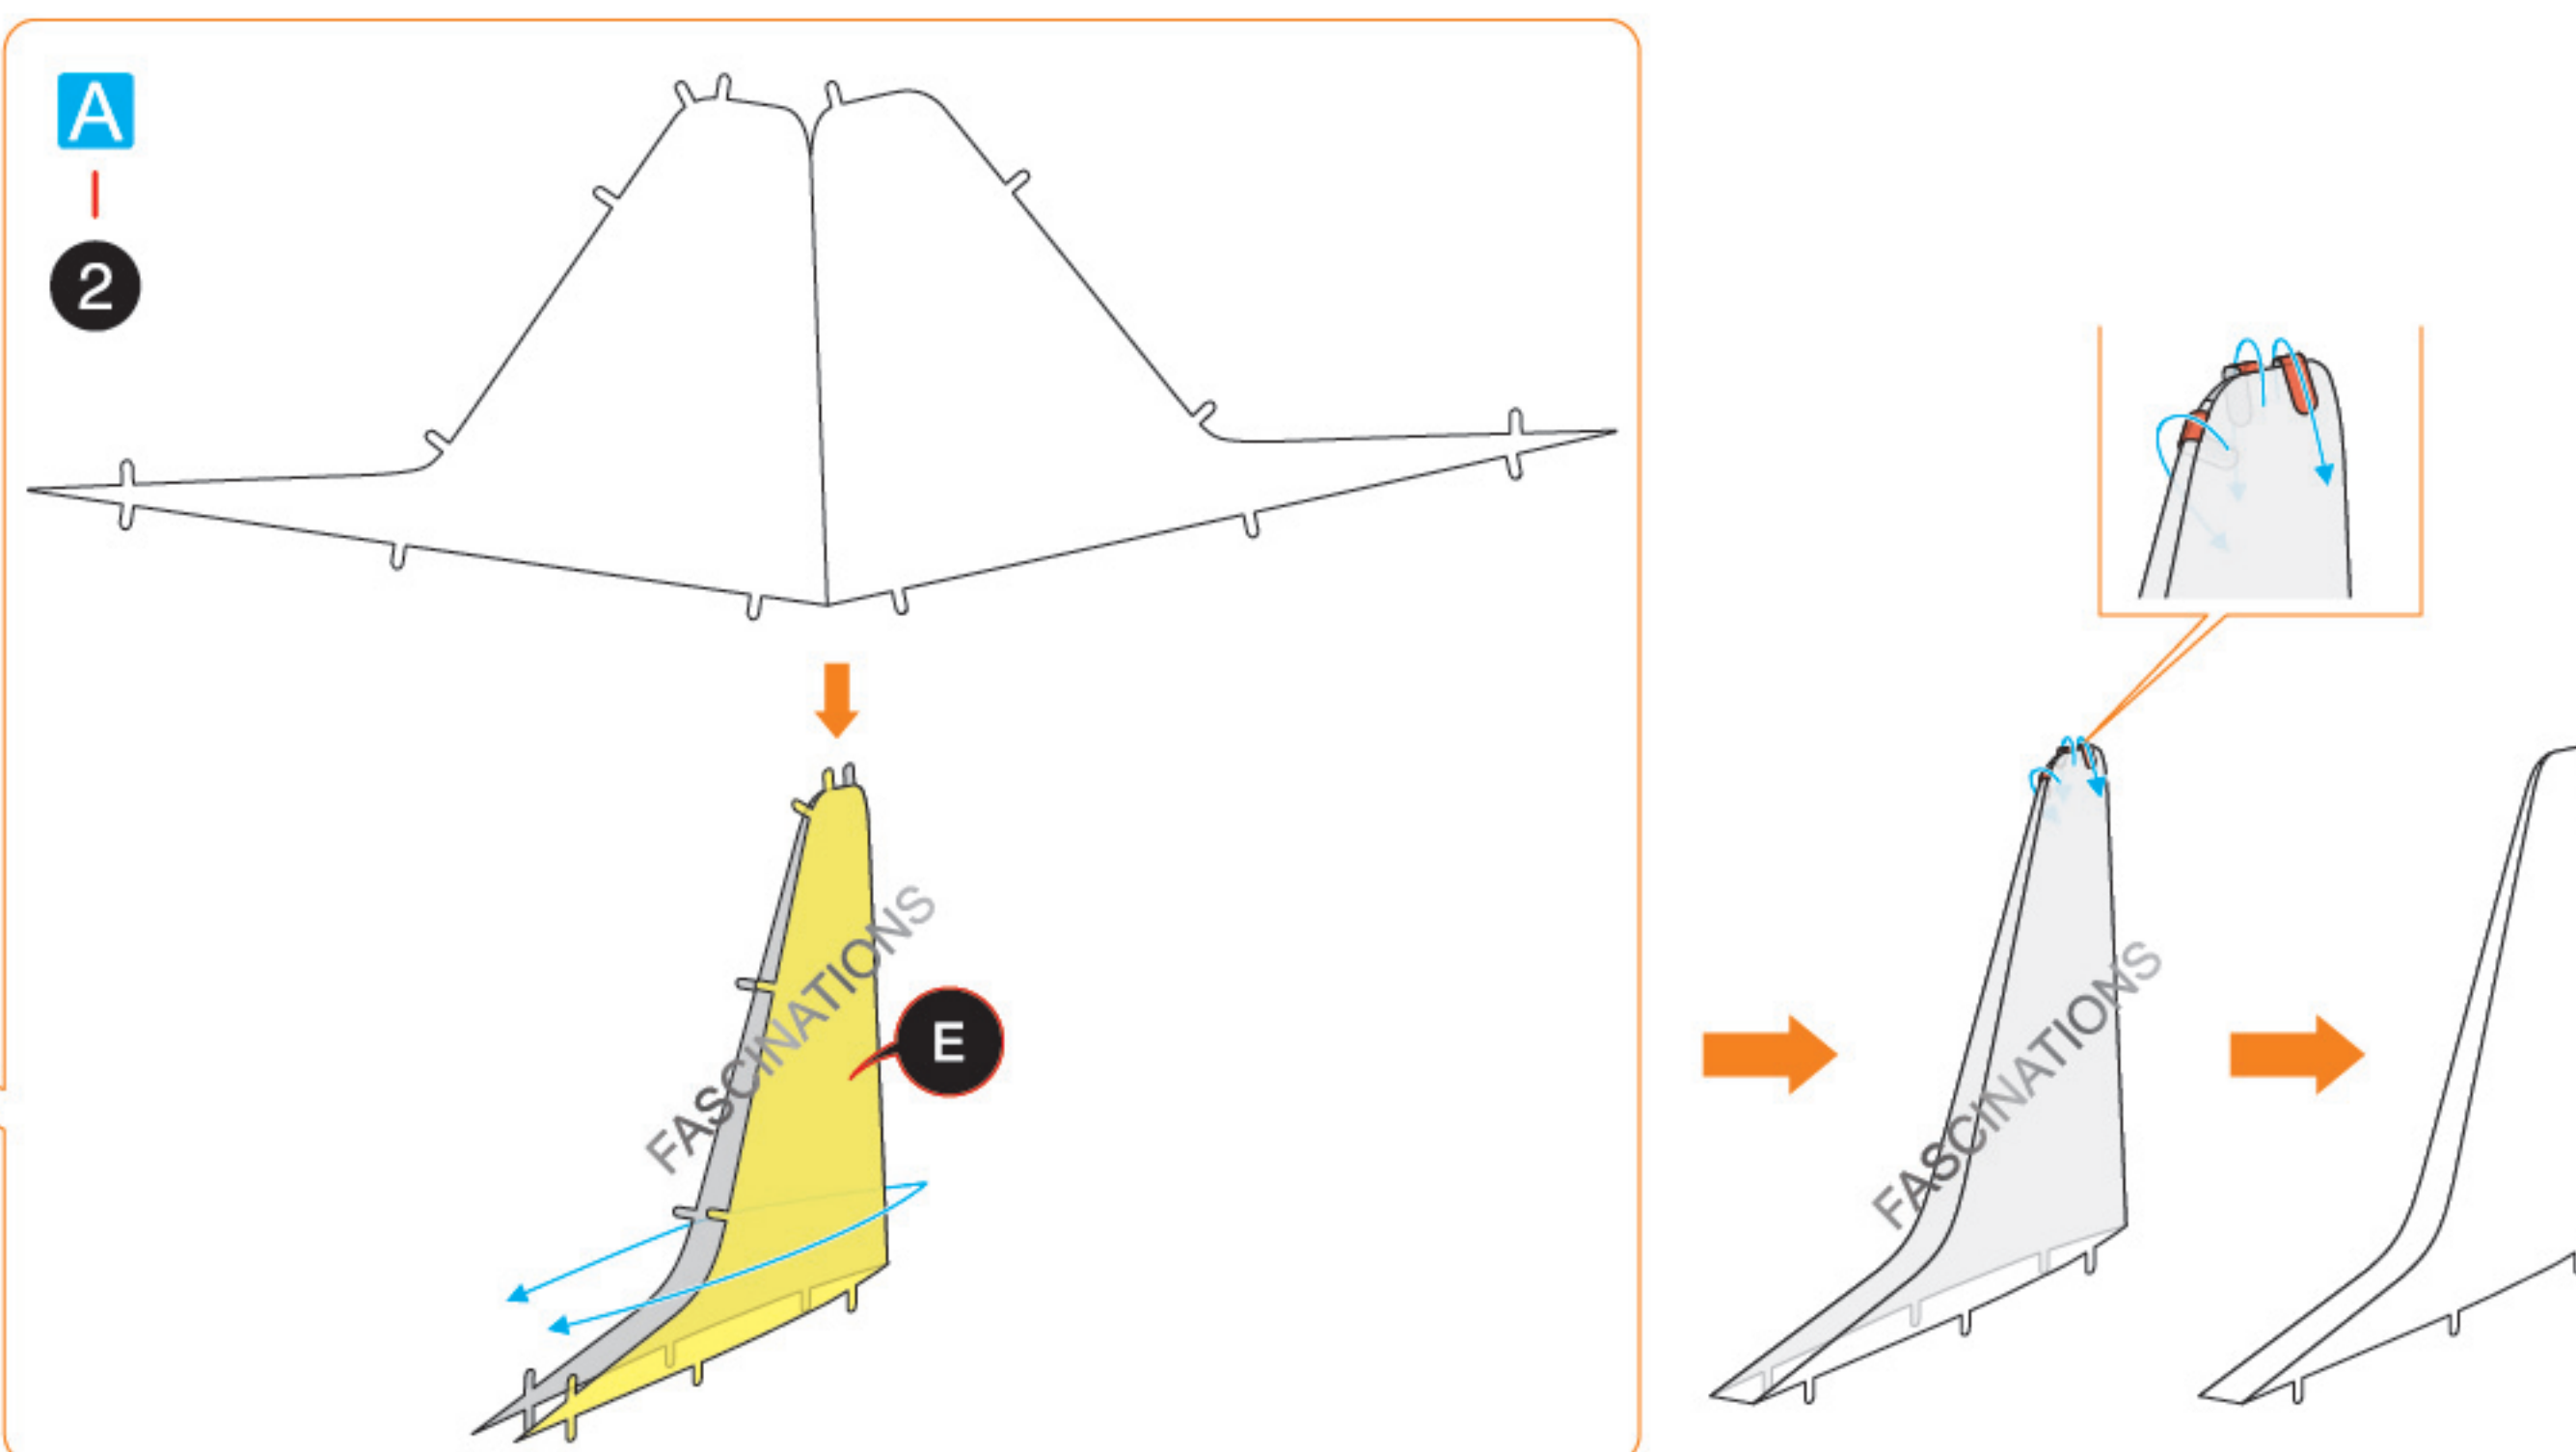
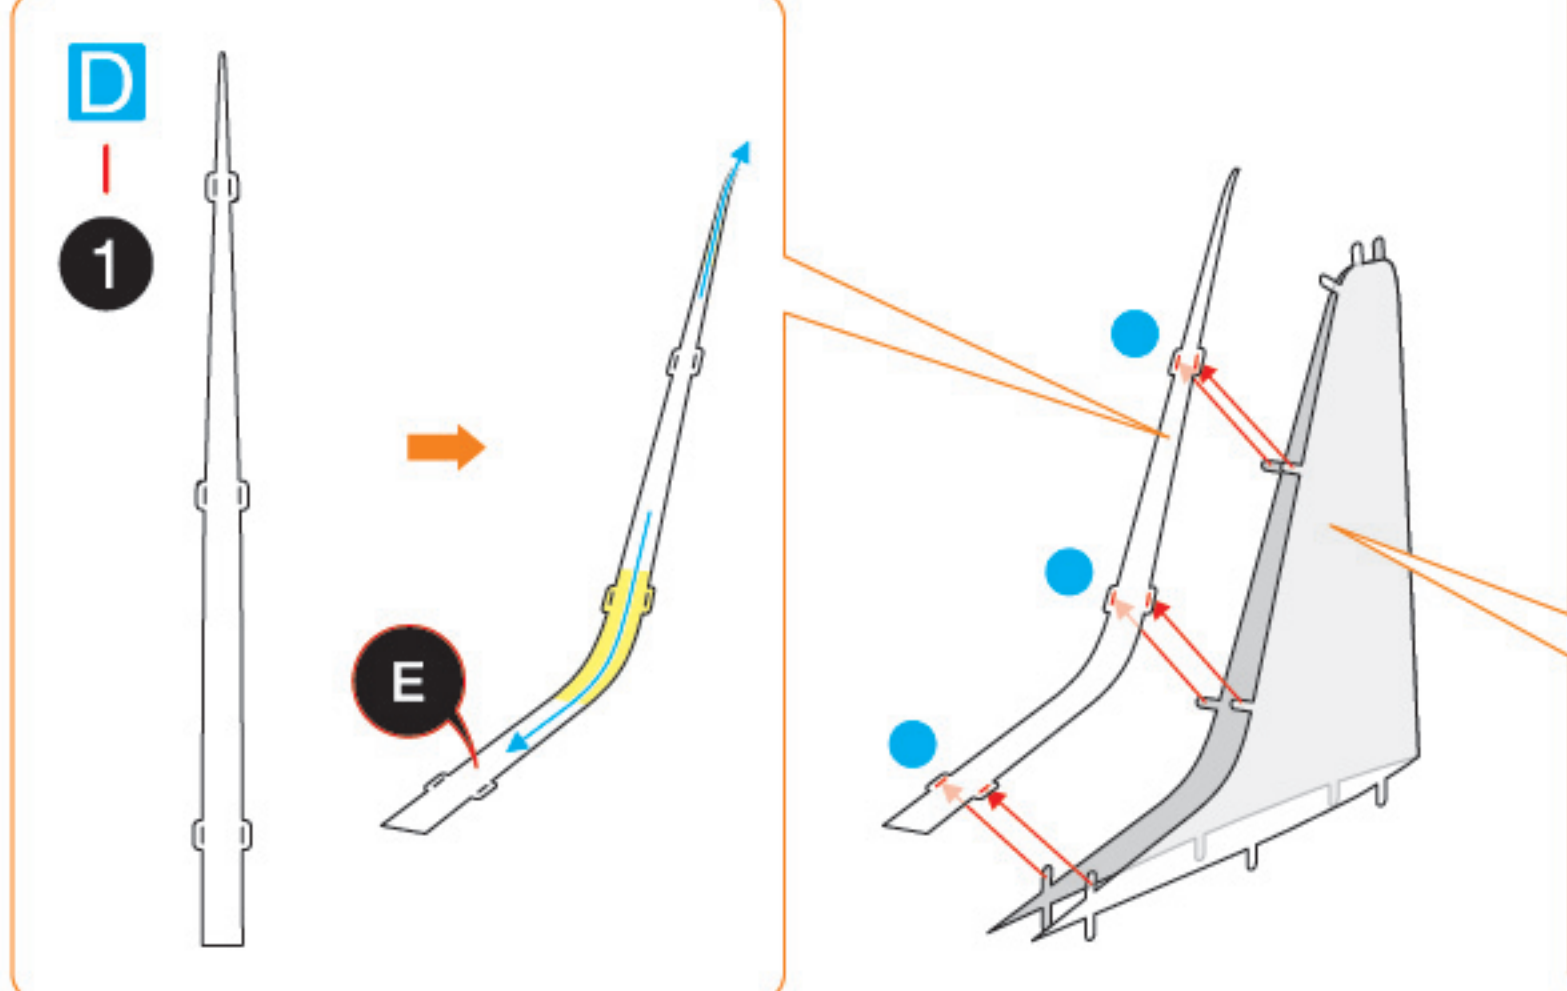










Step 2

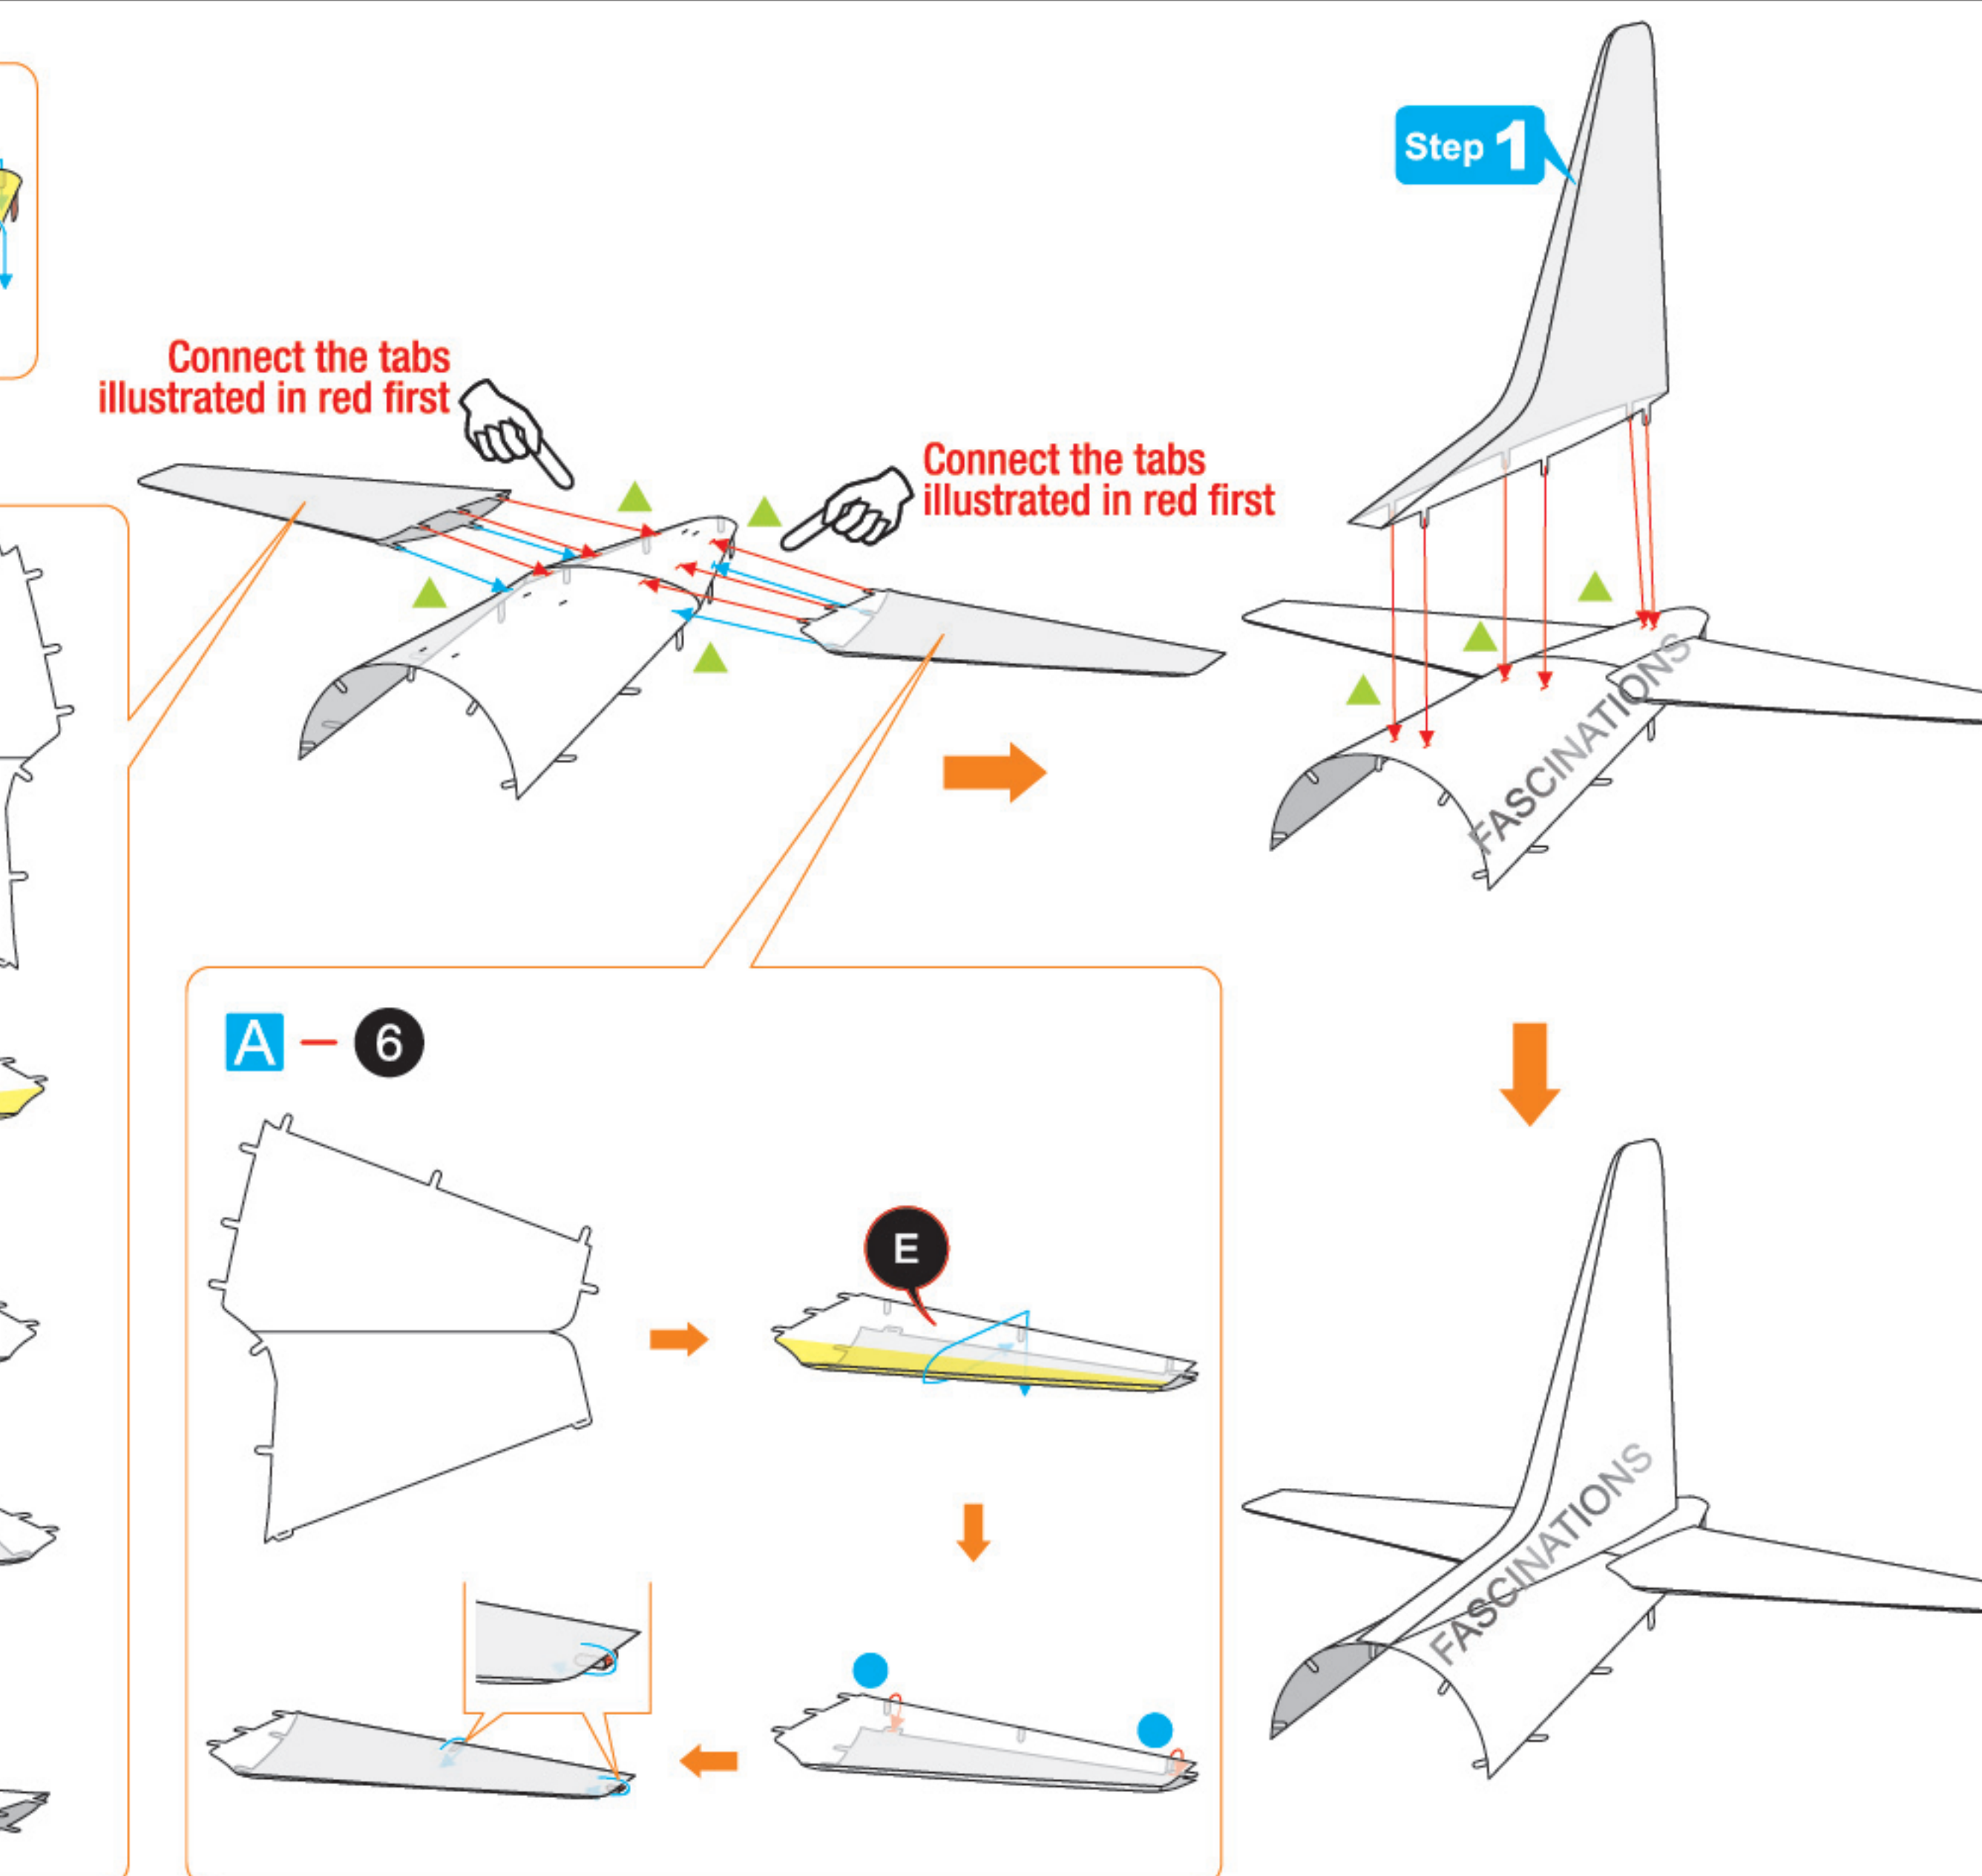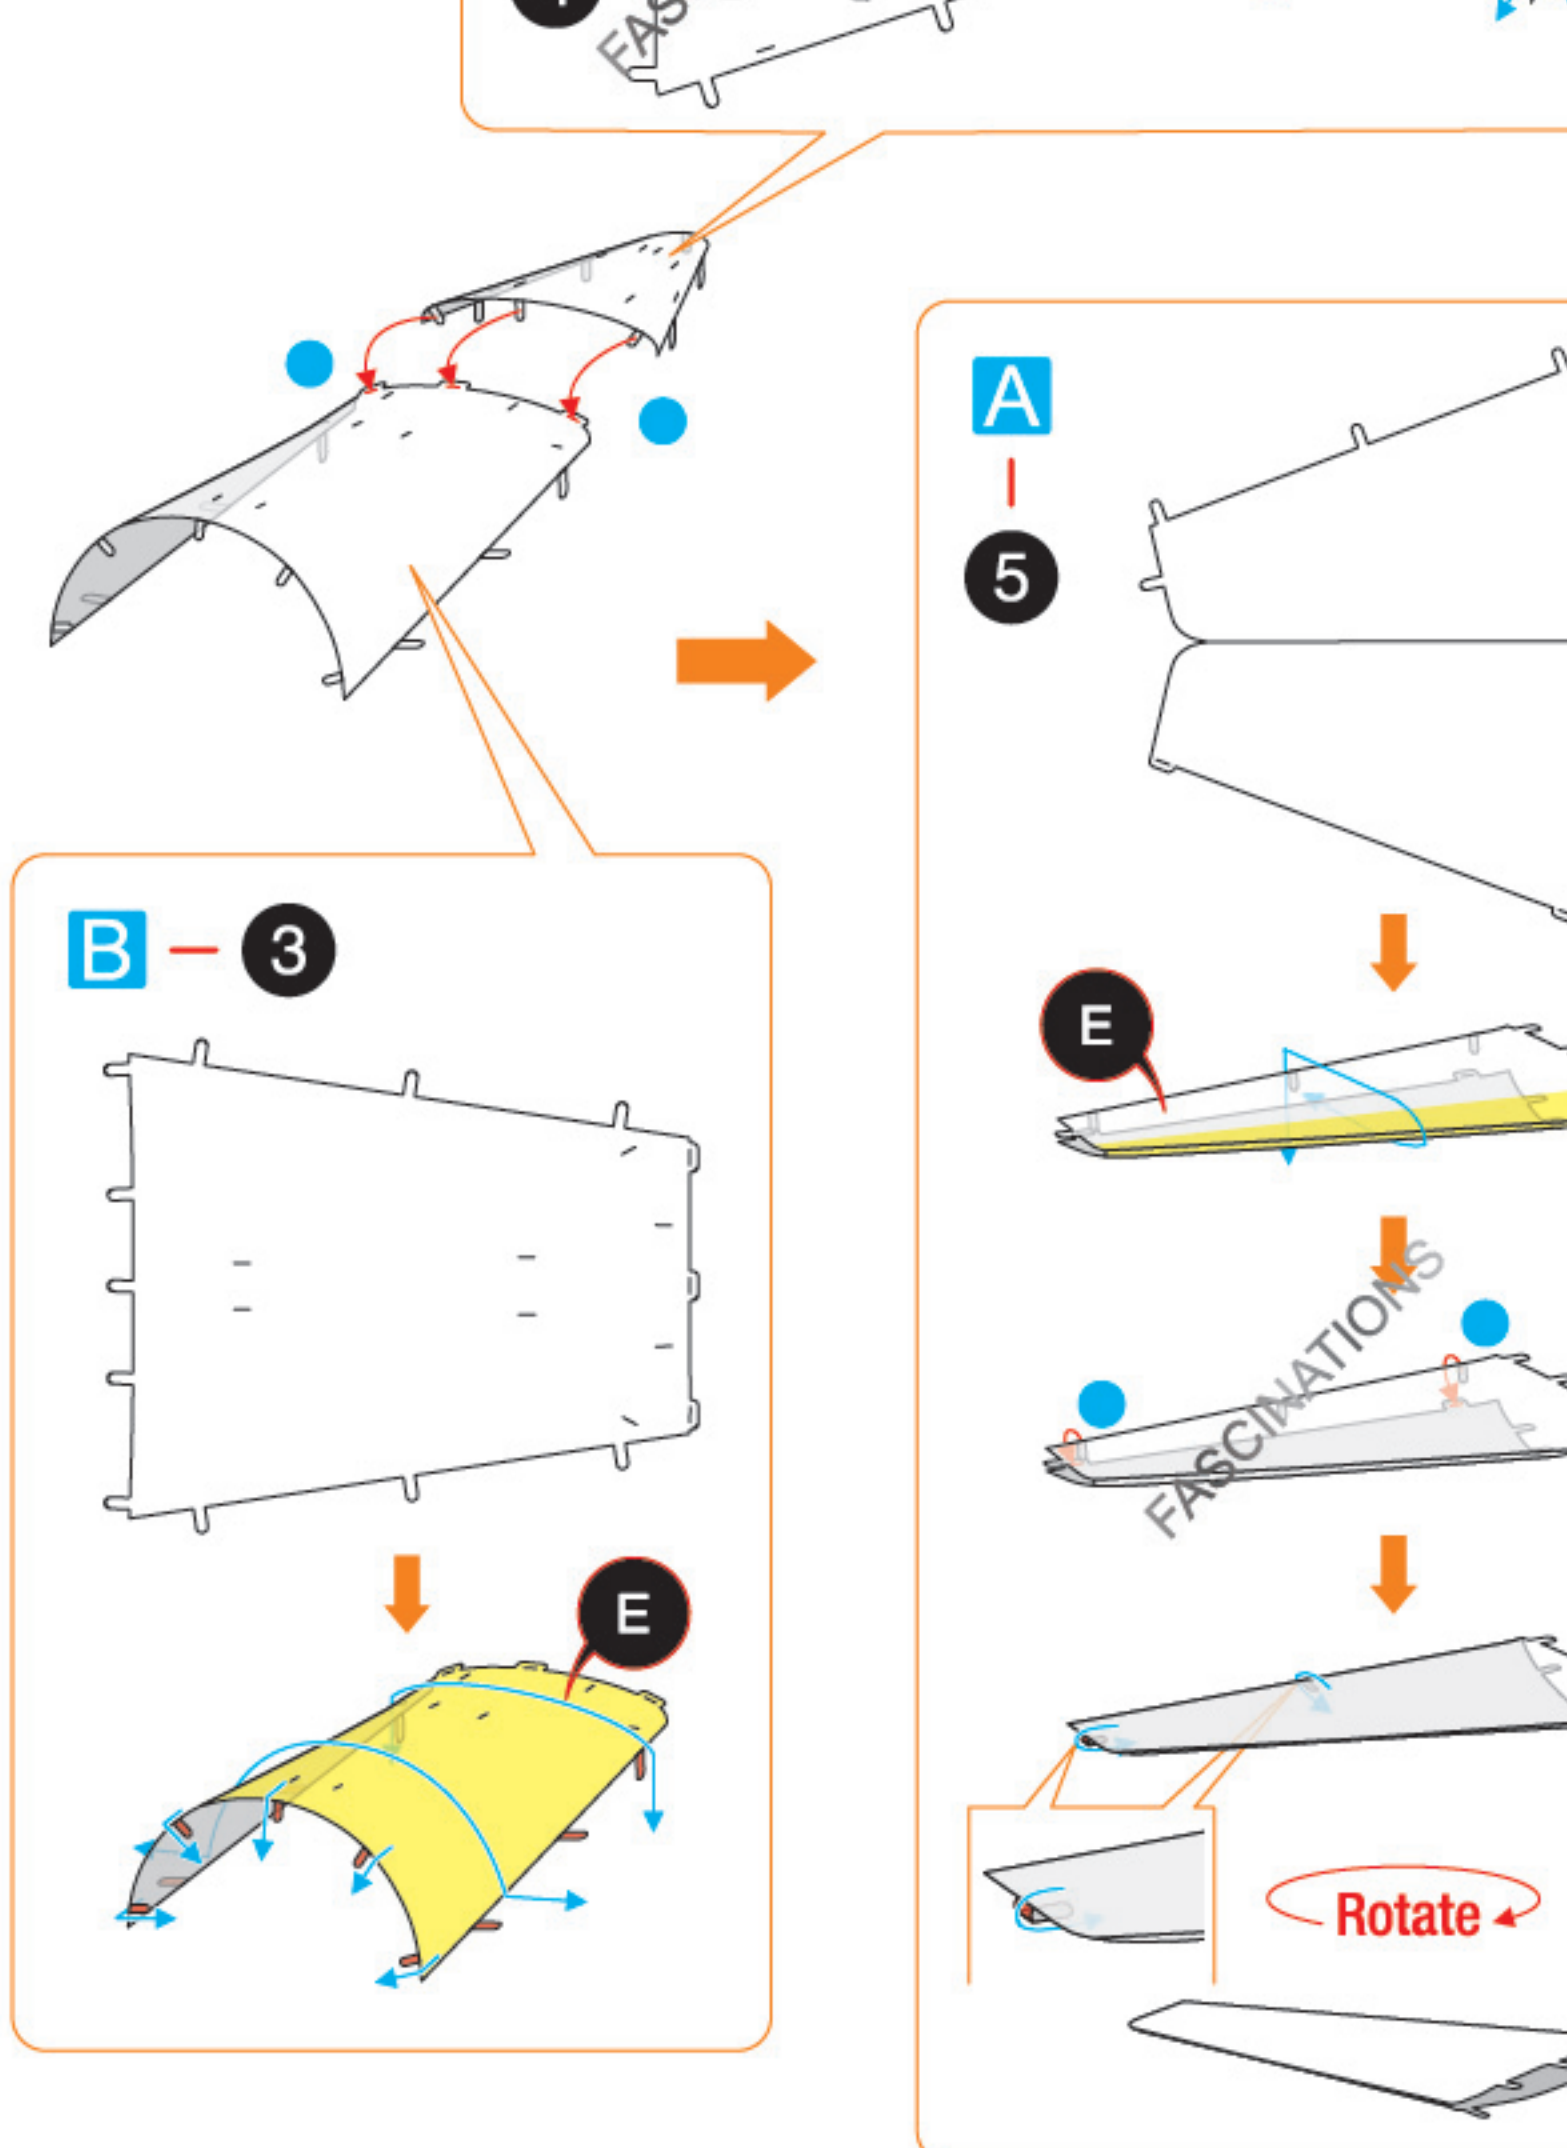


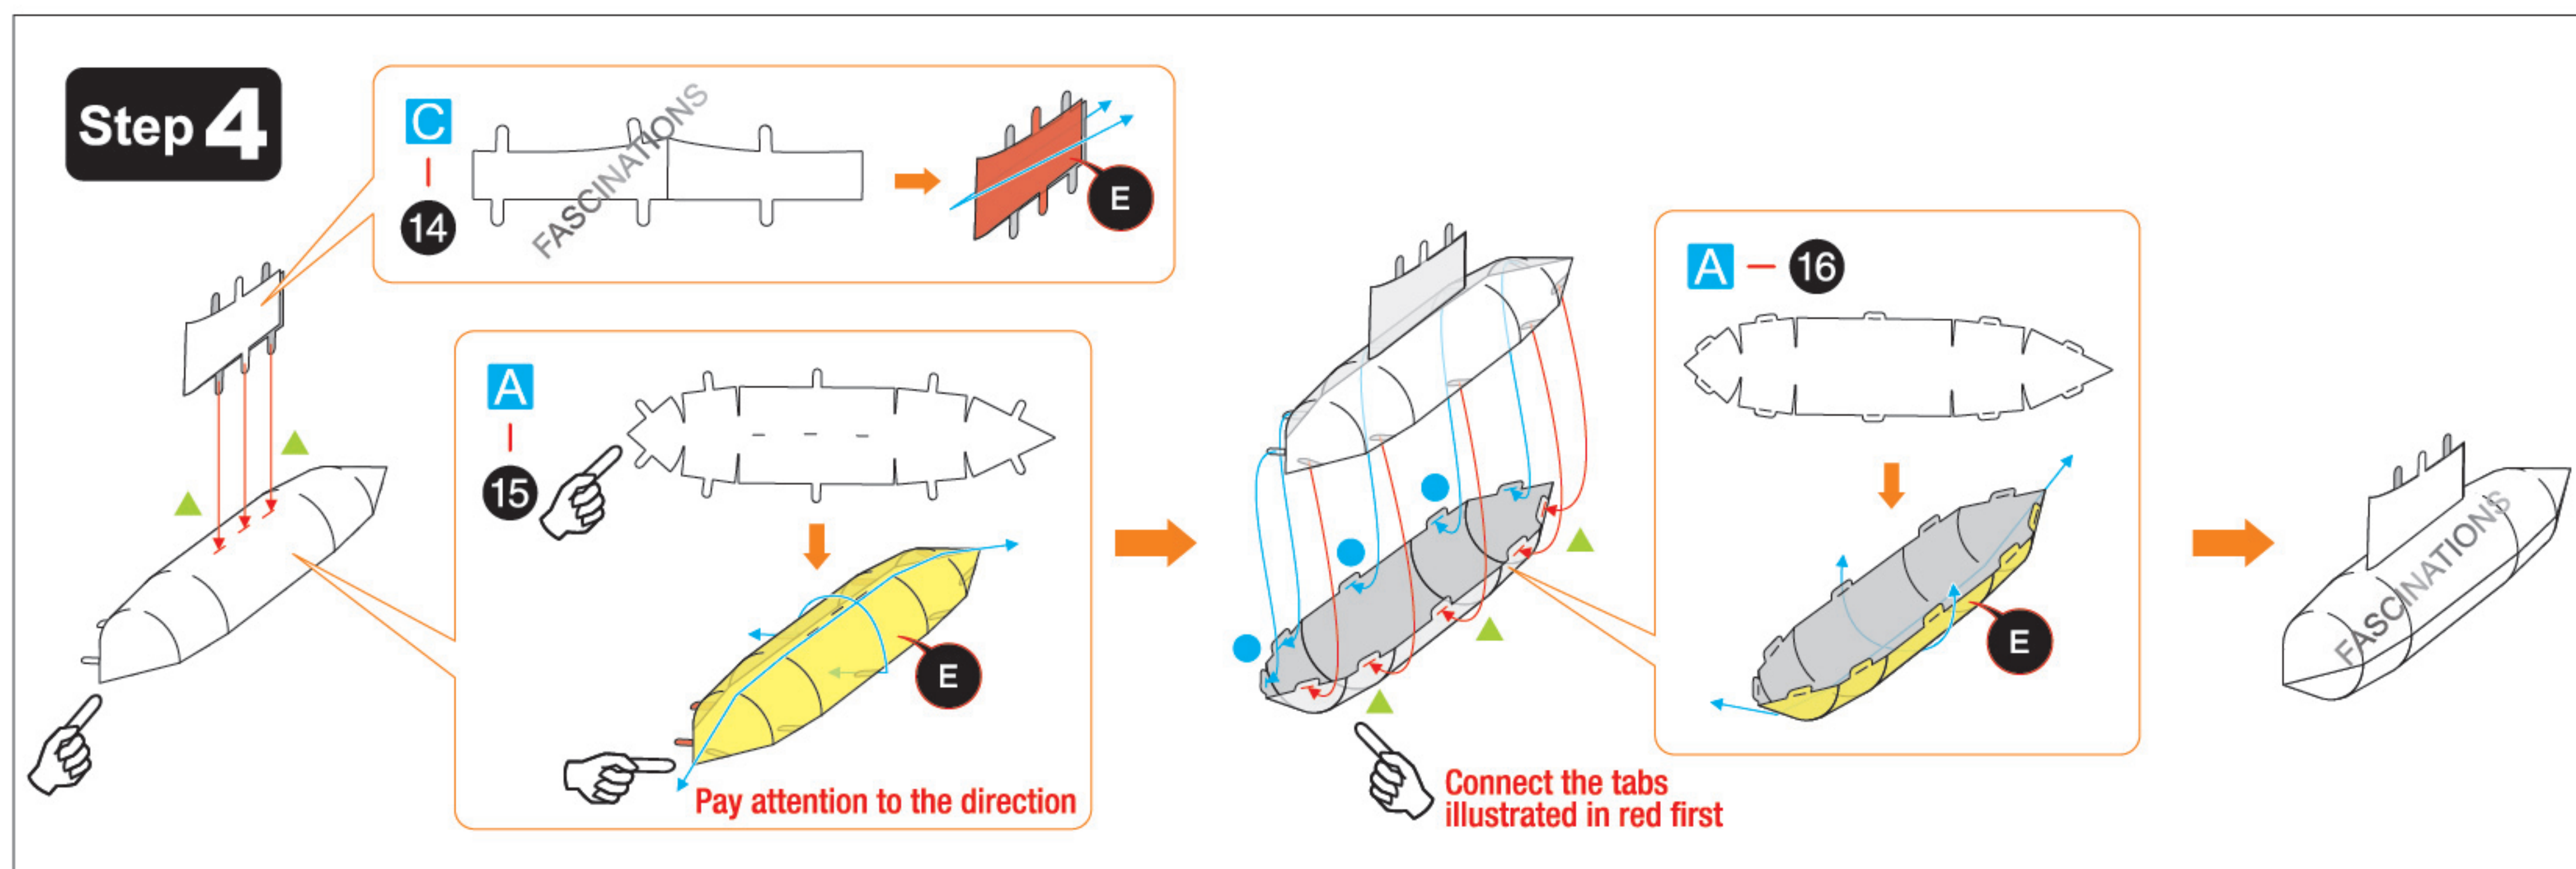
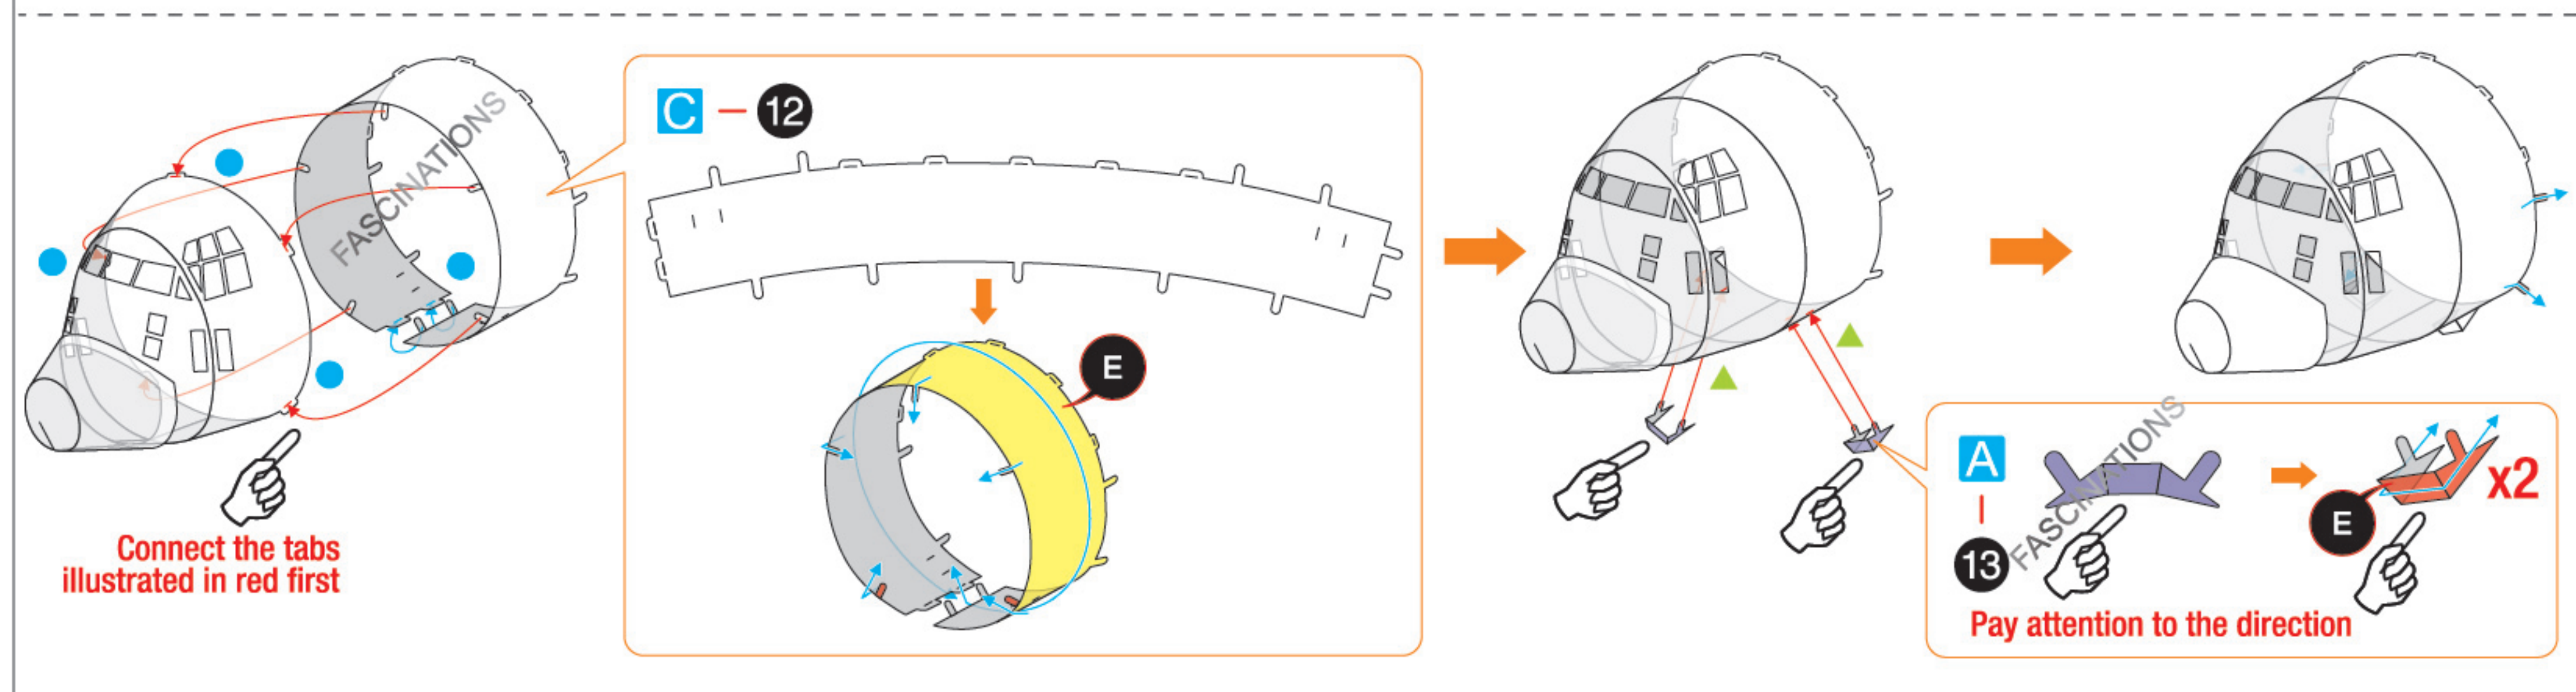
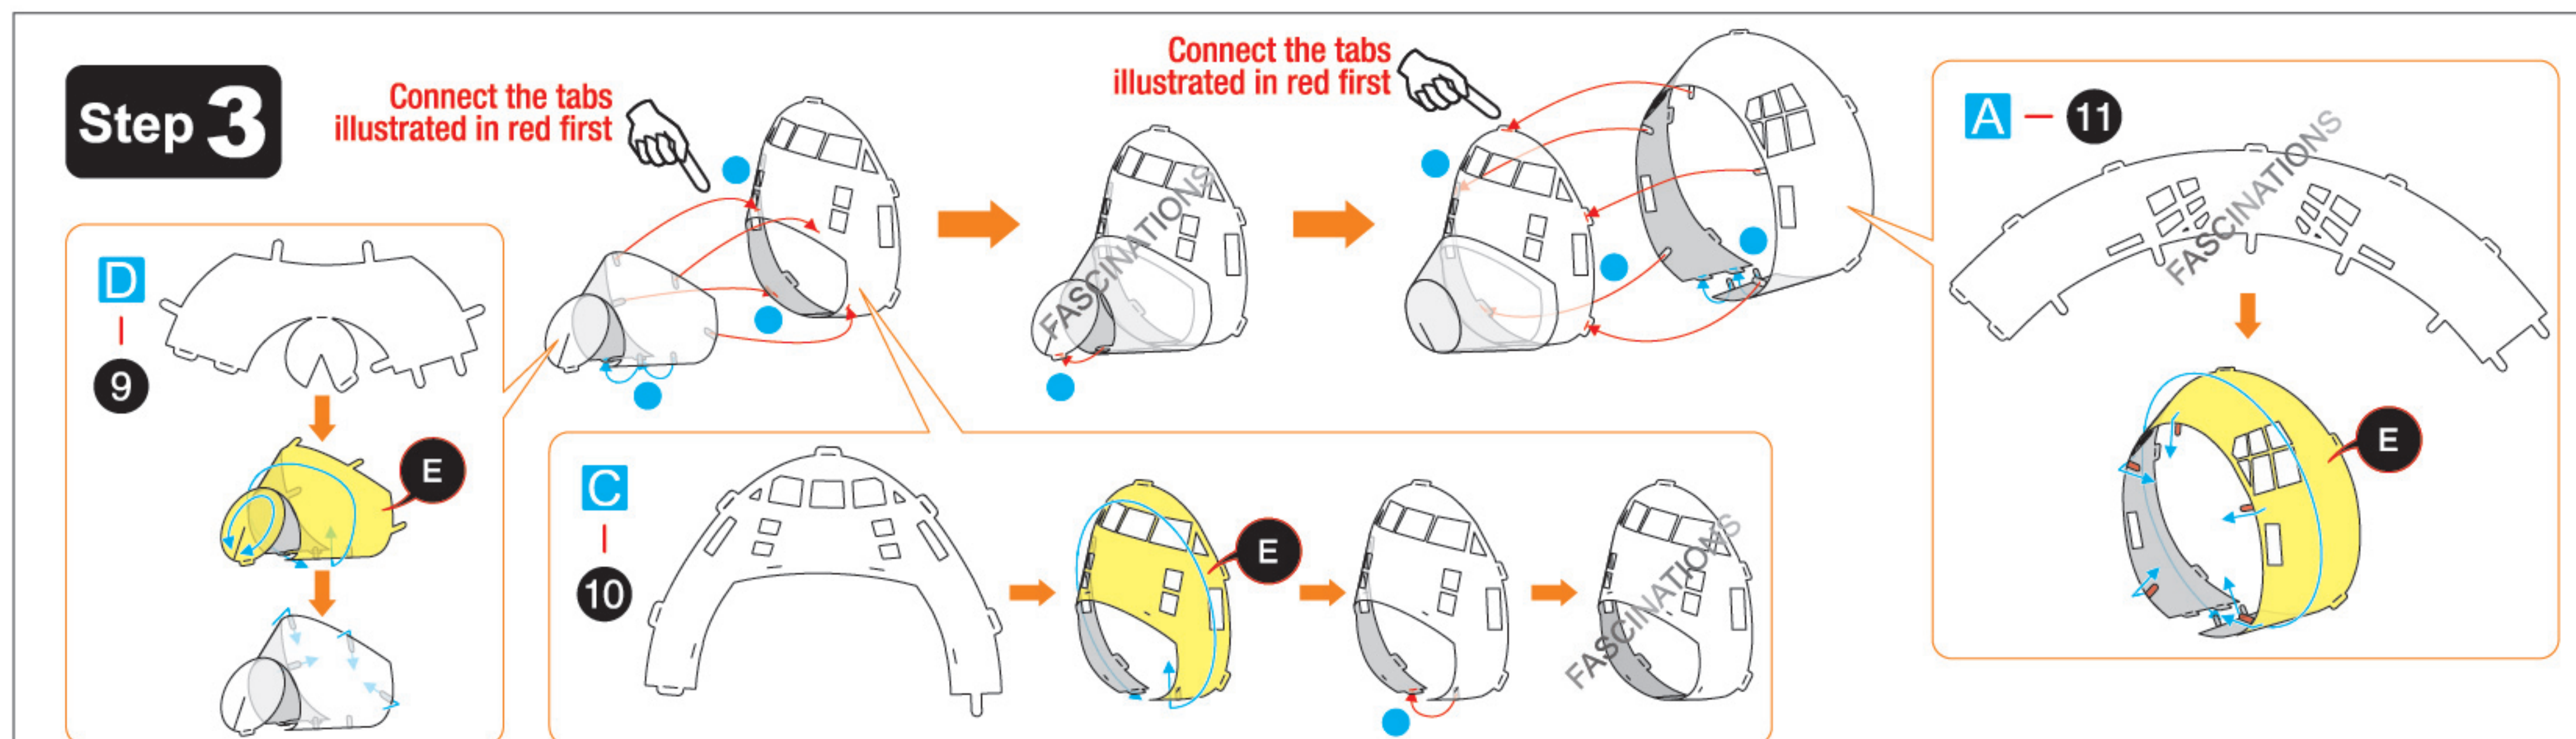
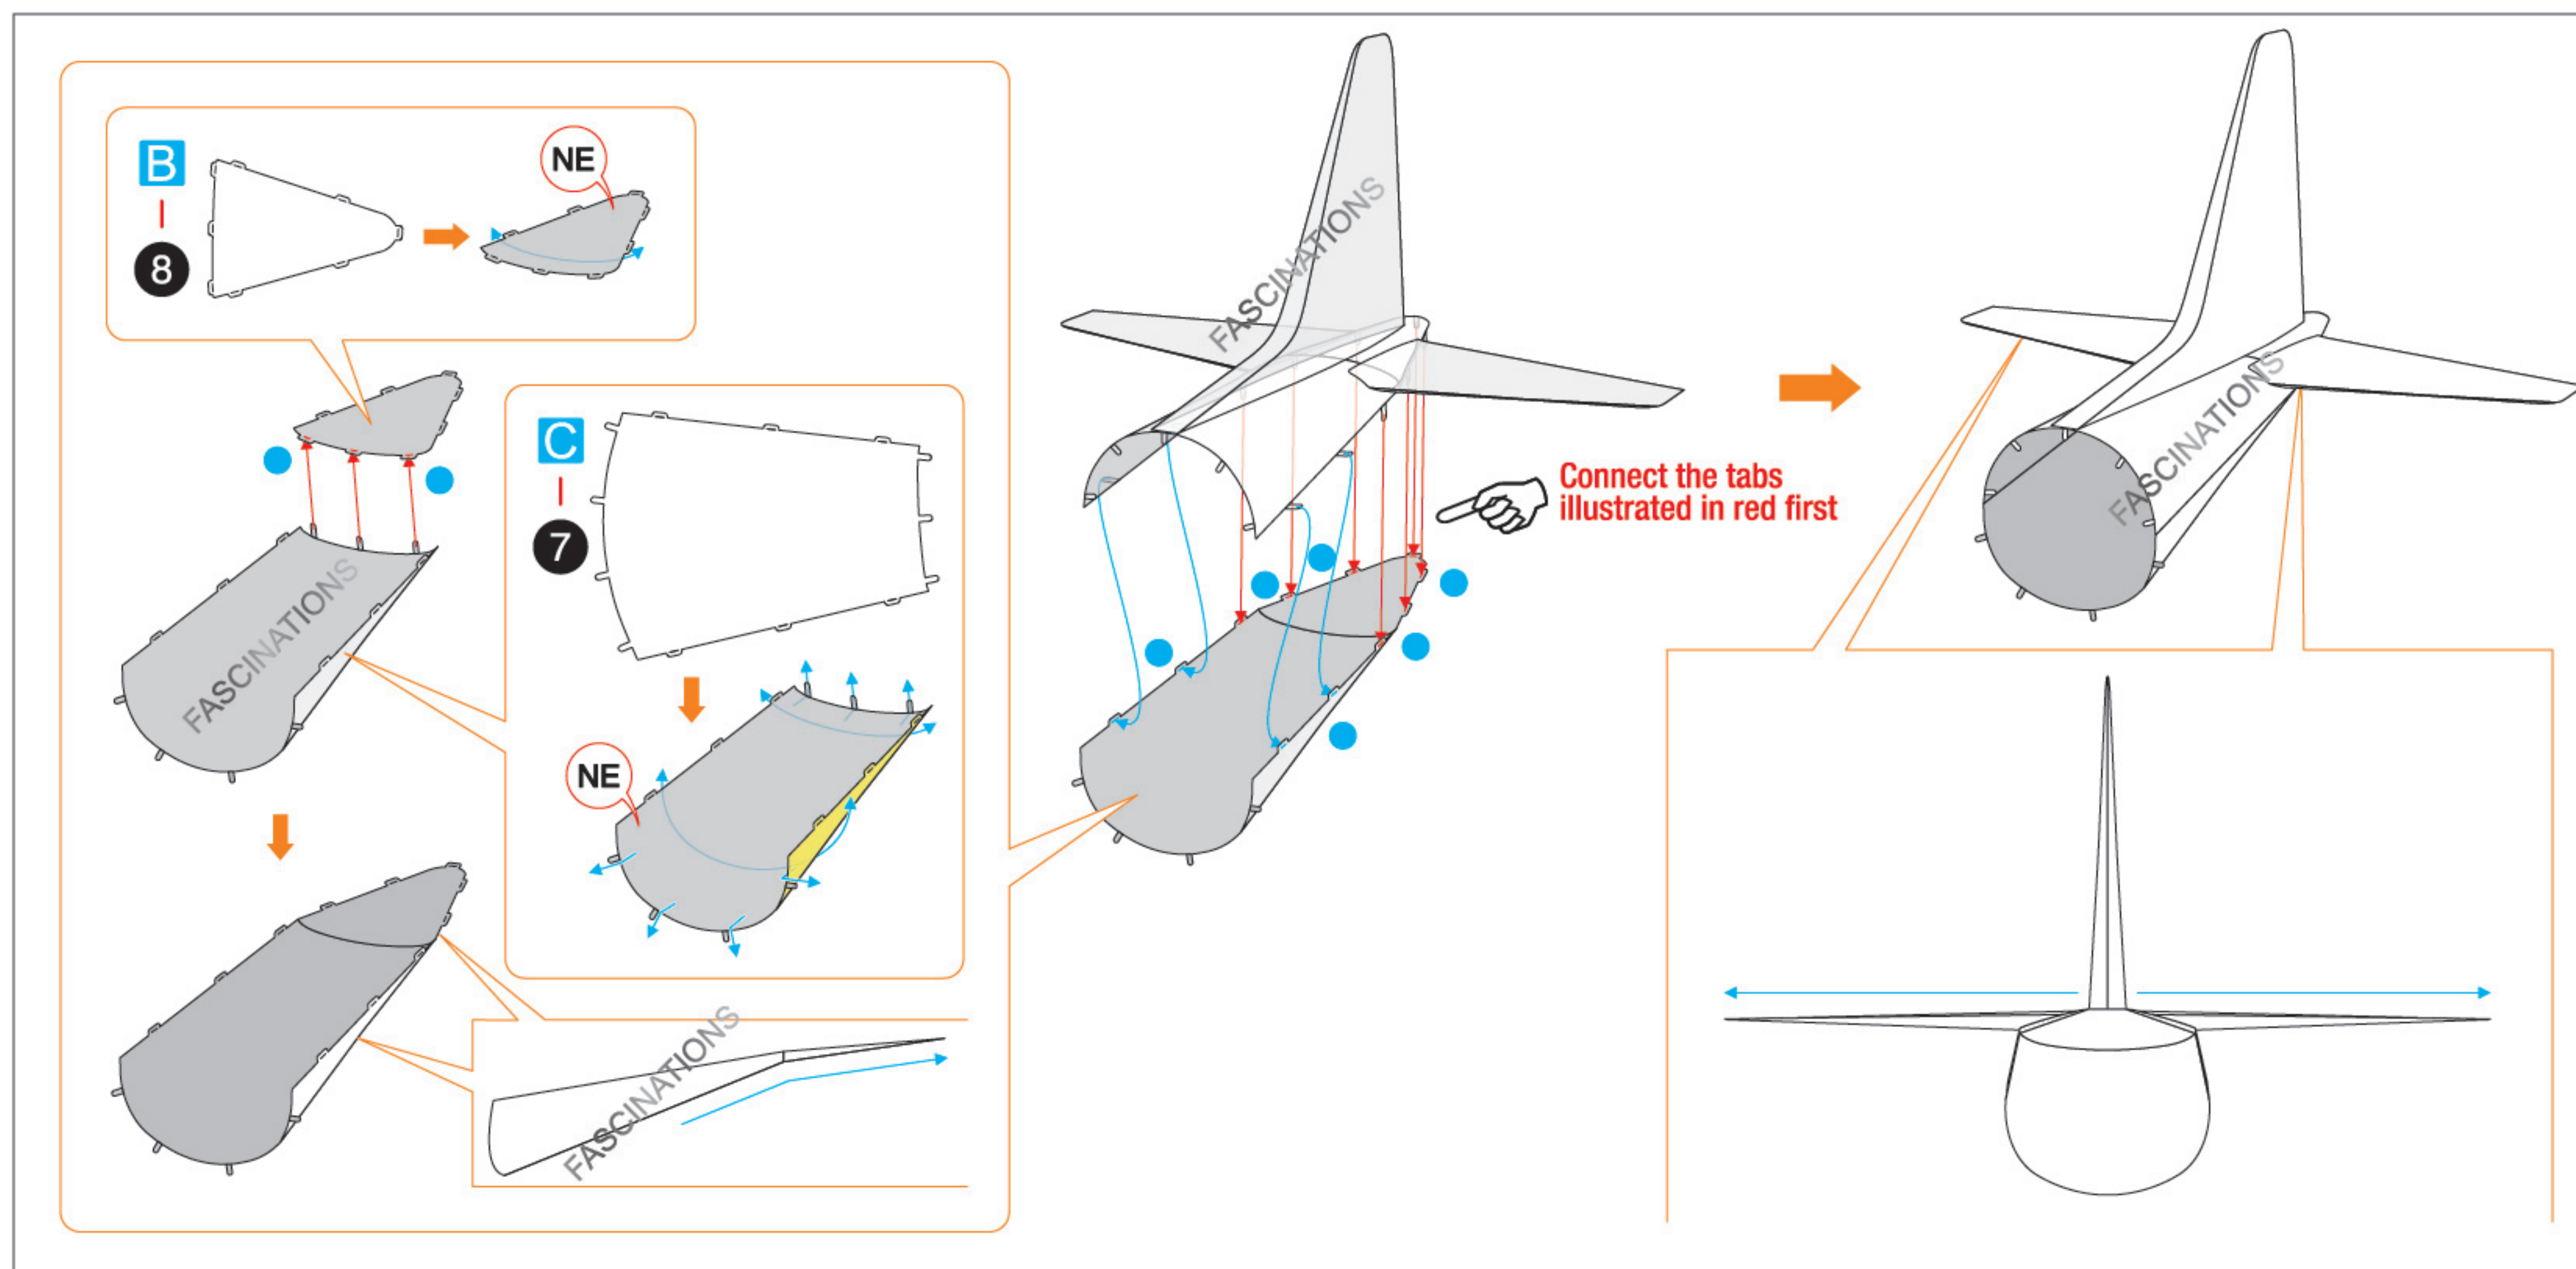


Step 5



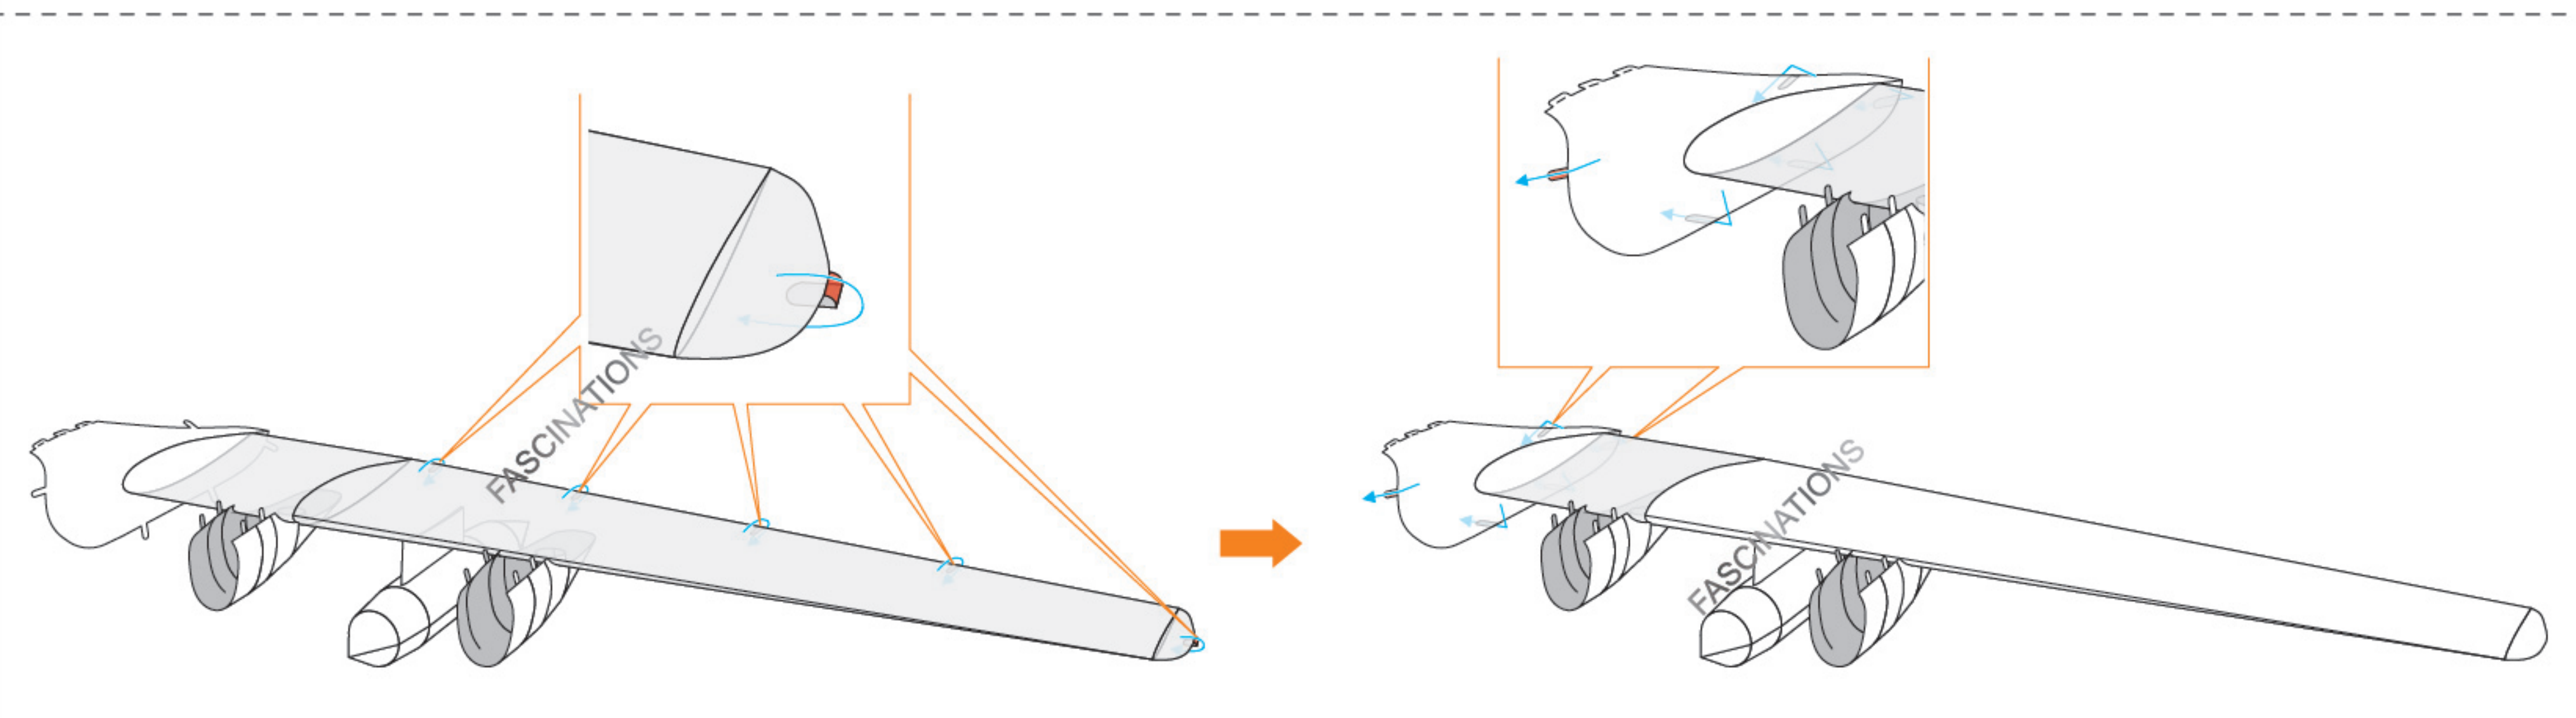
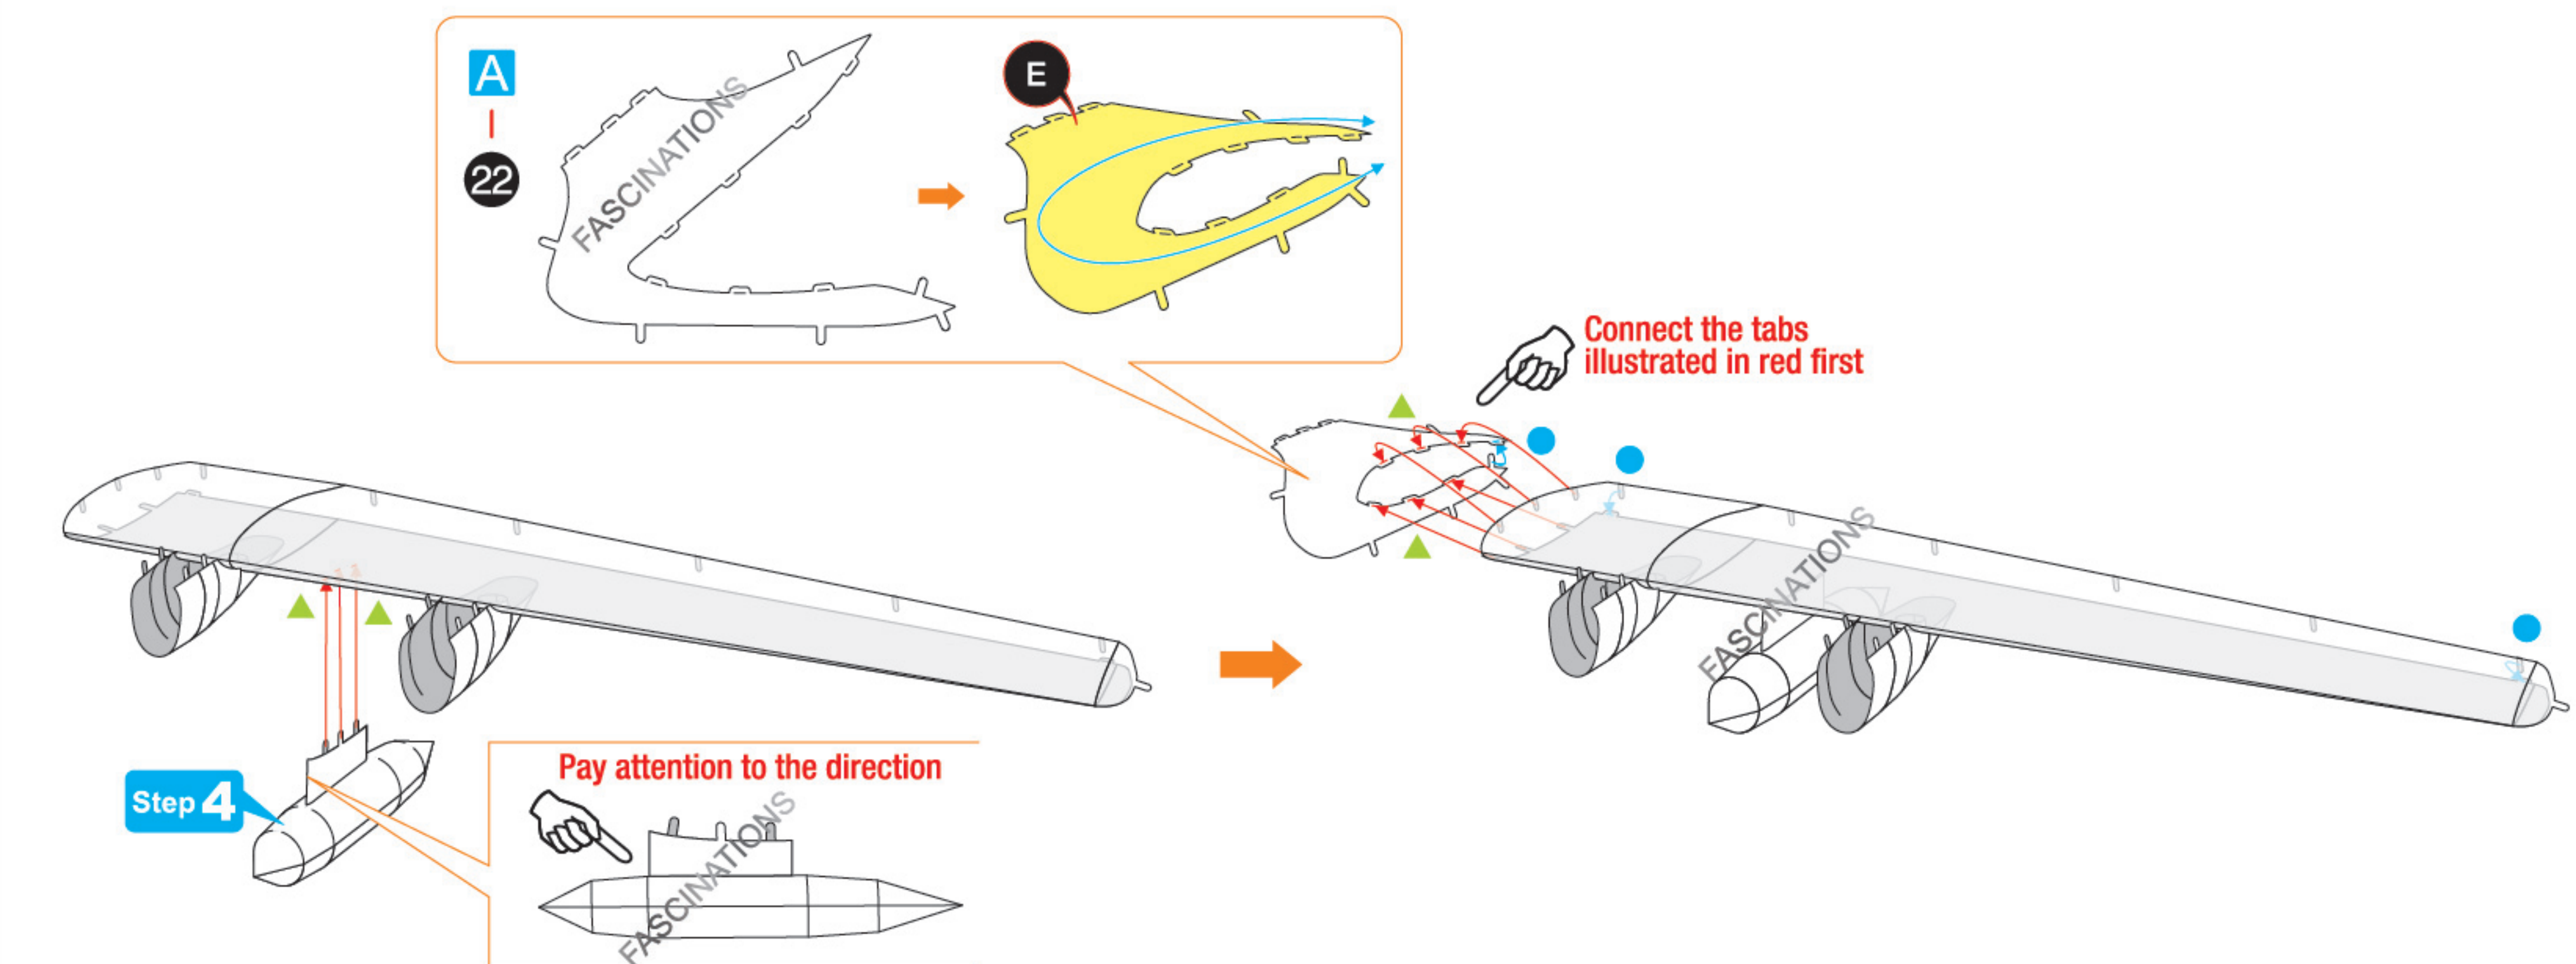
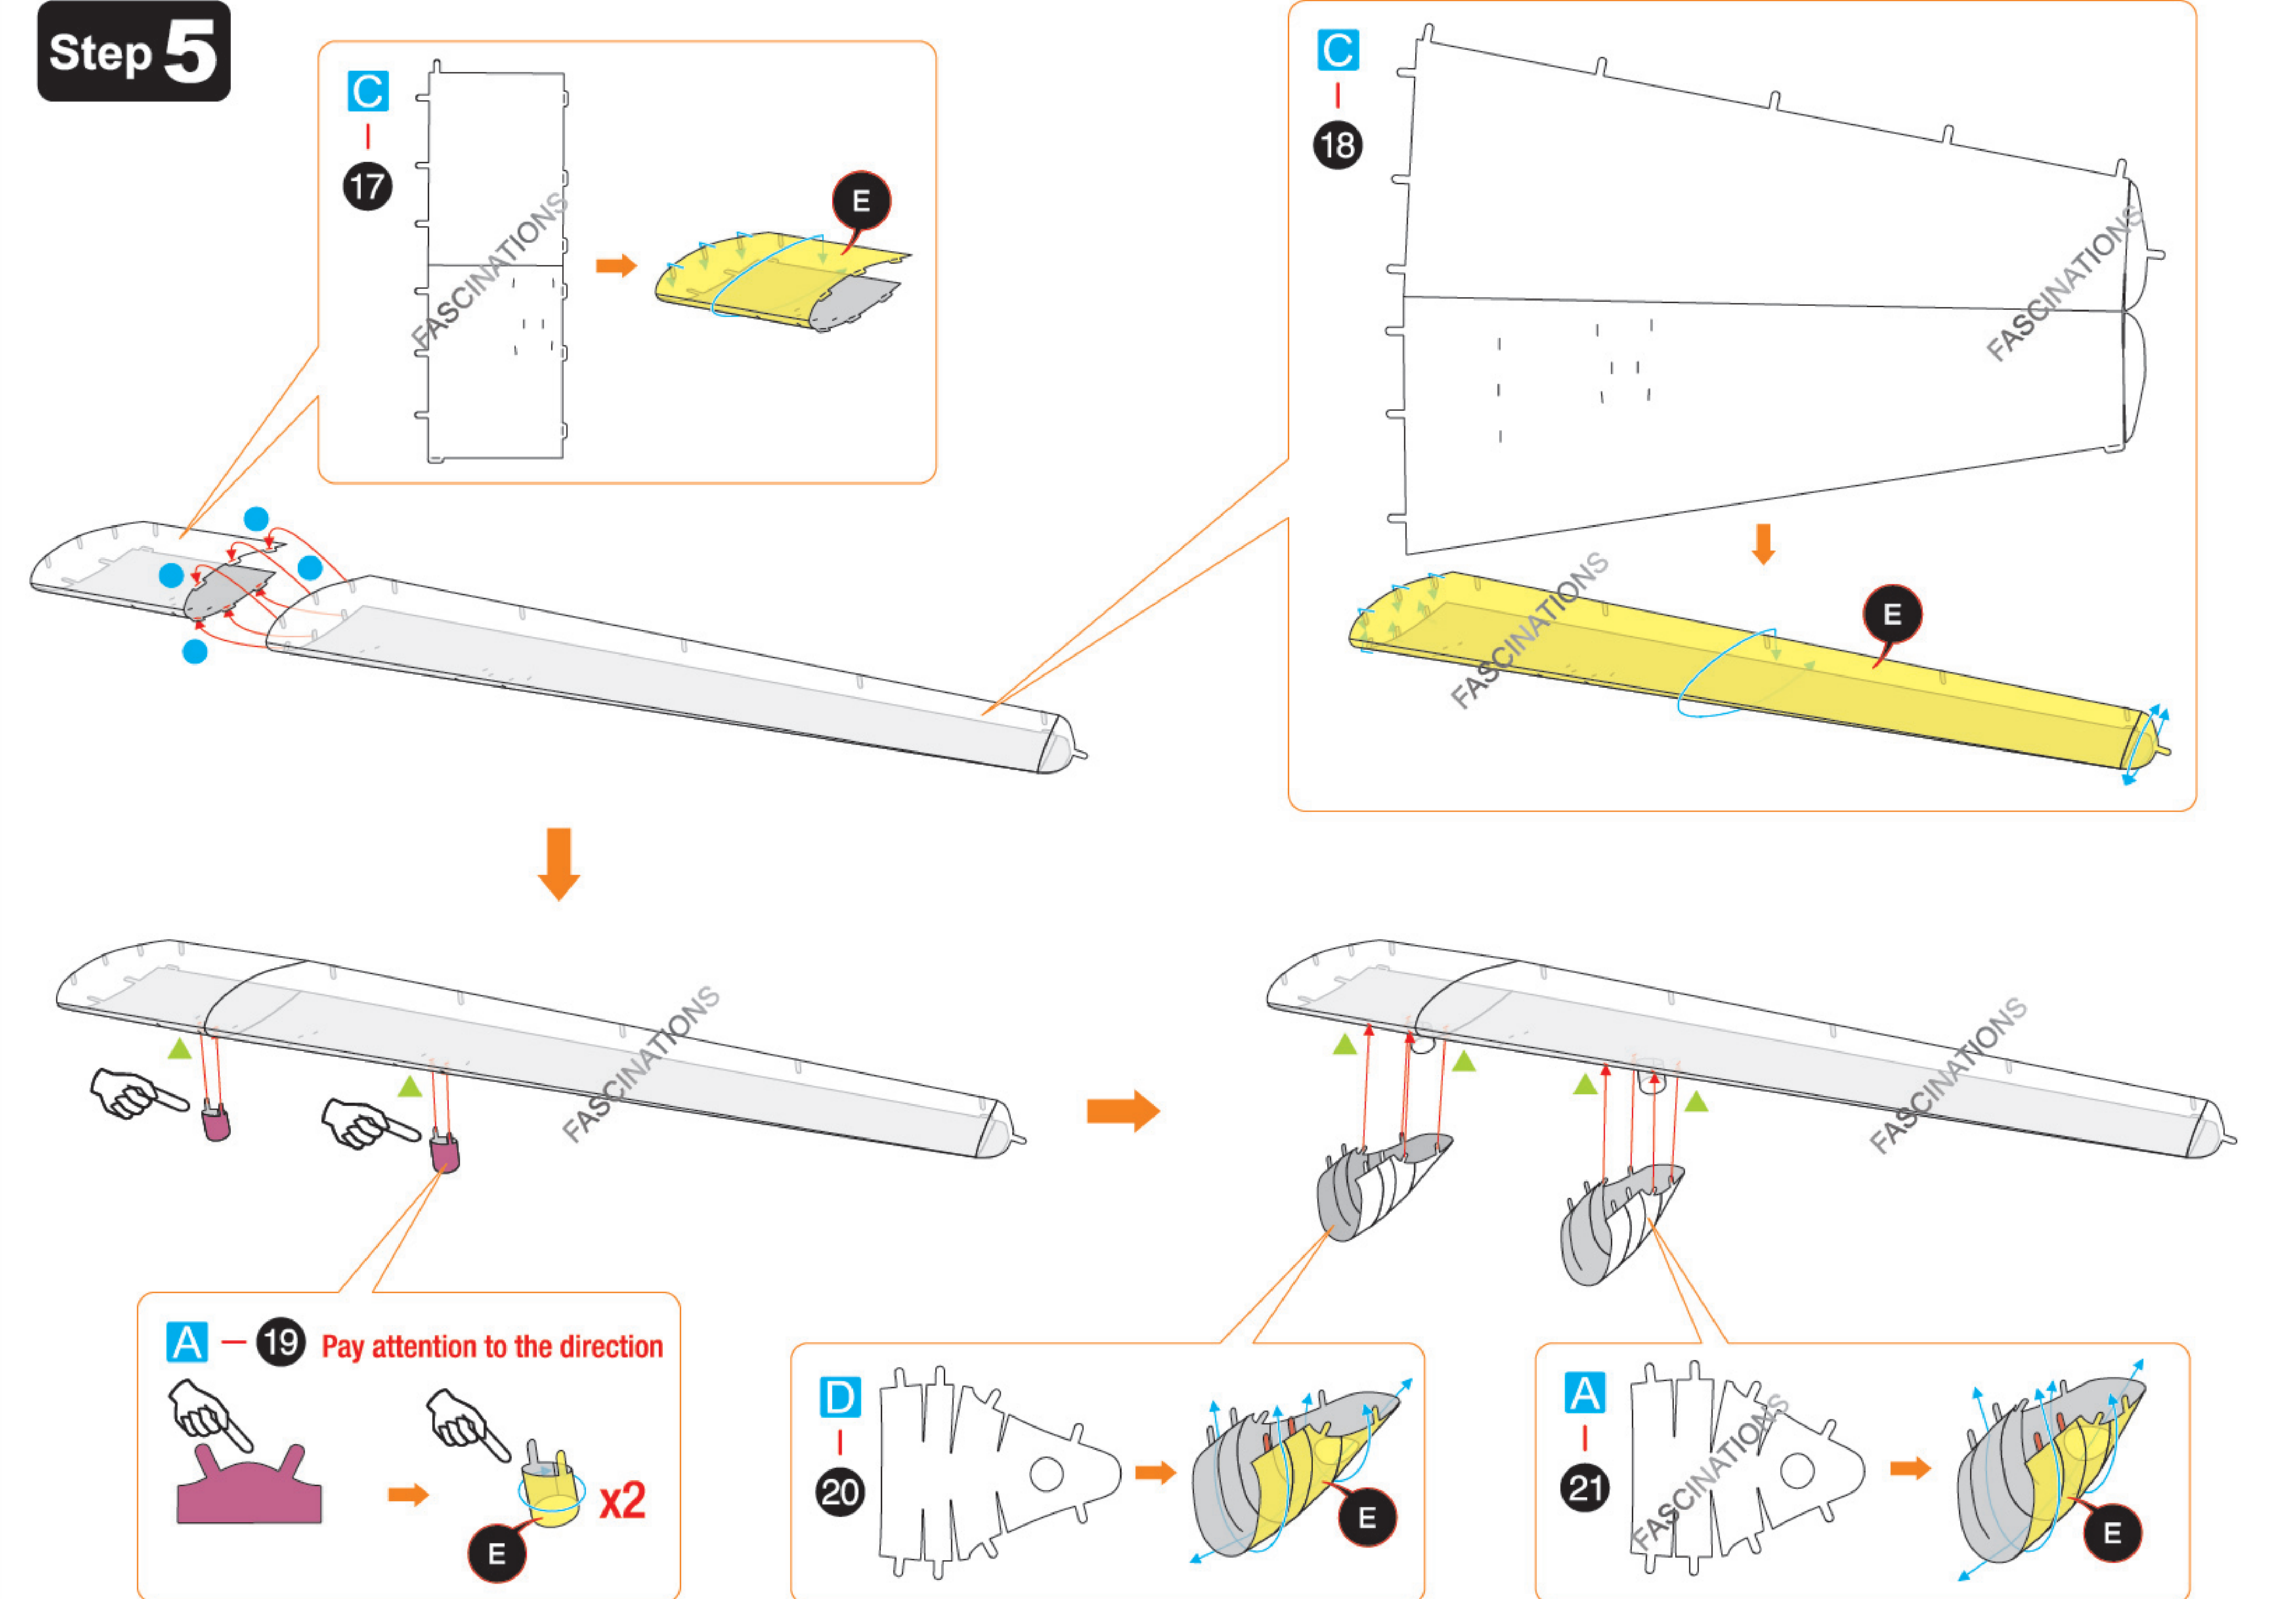


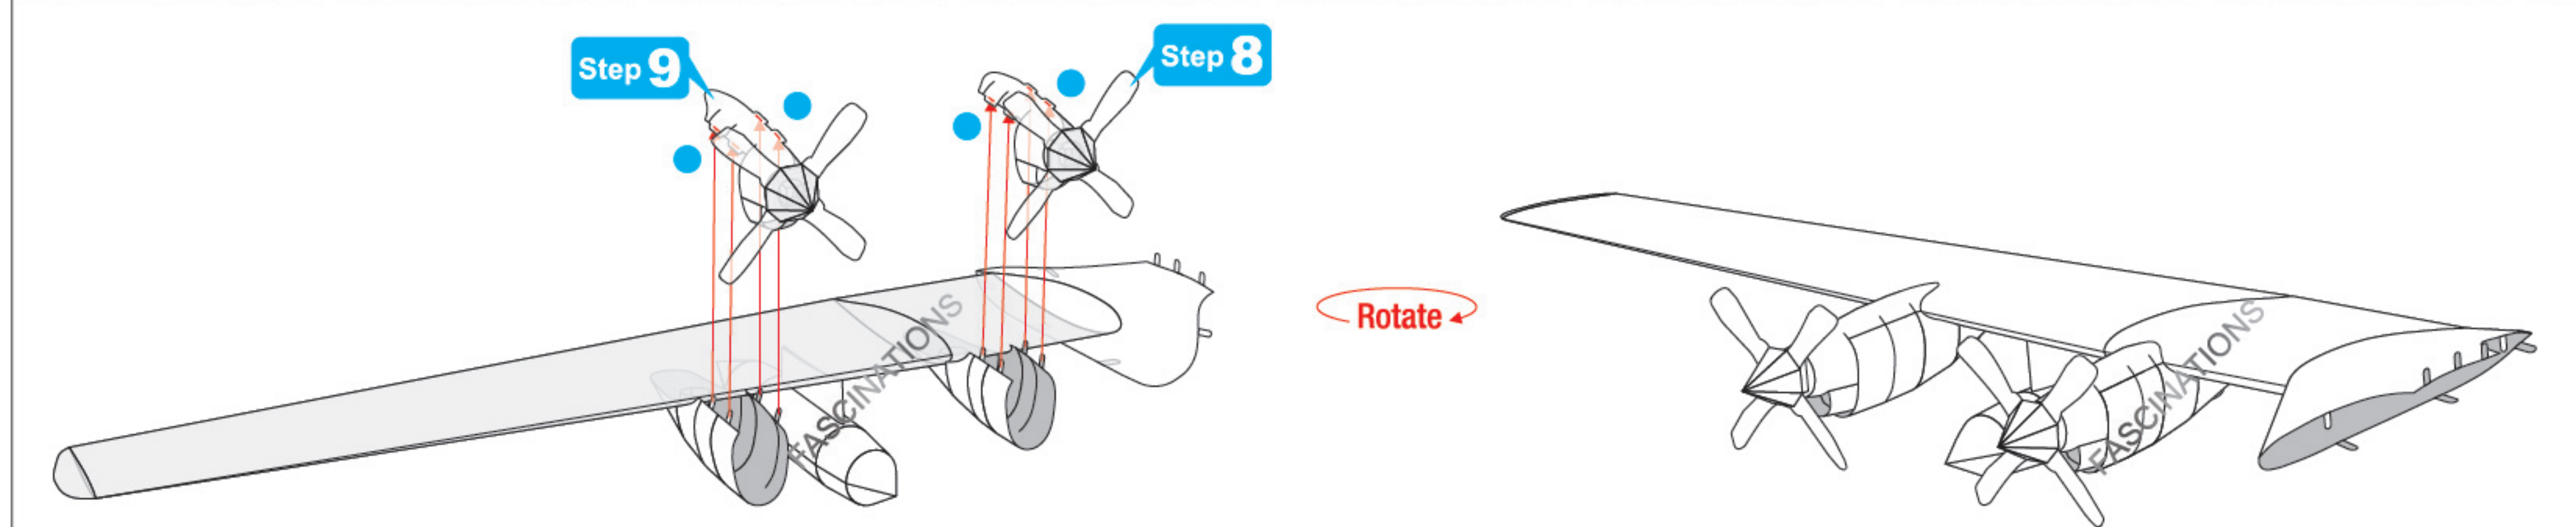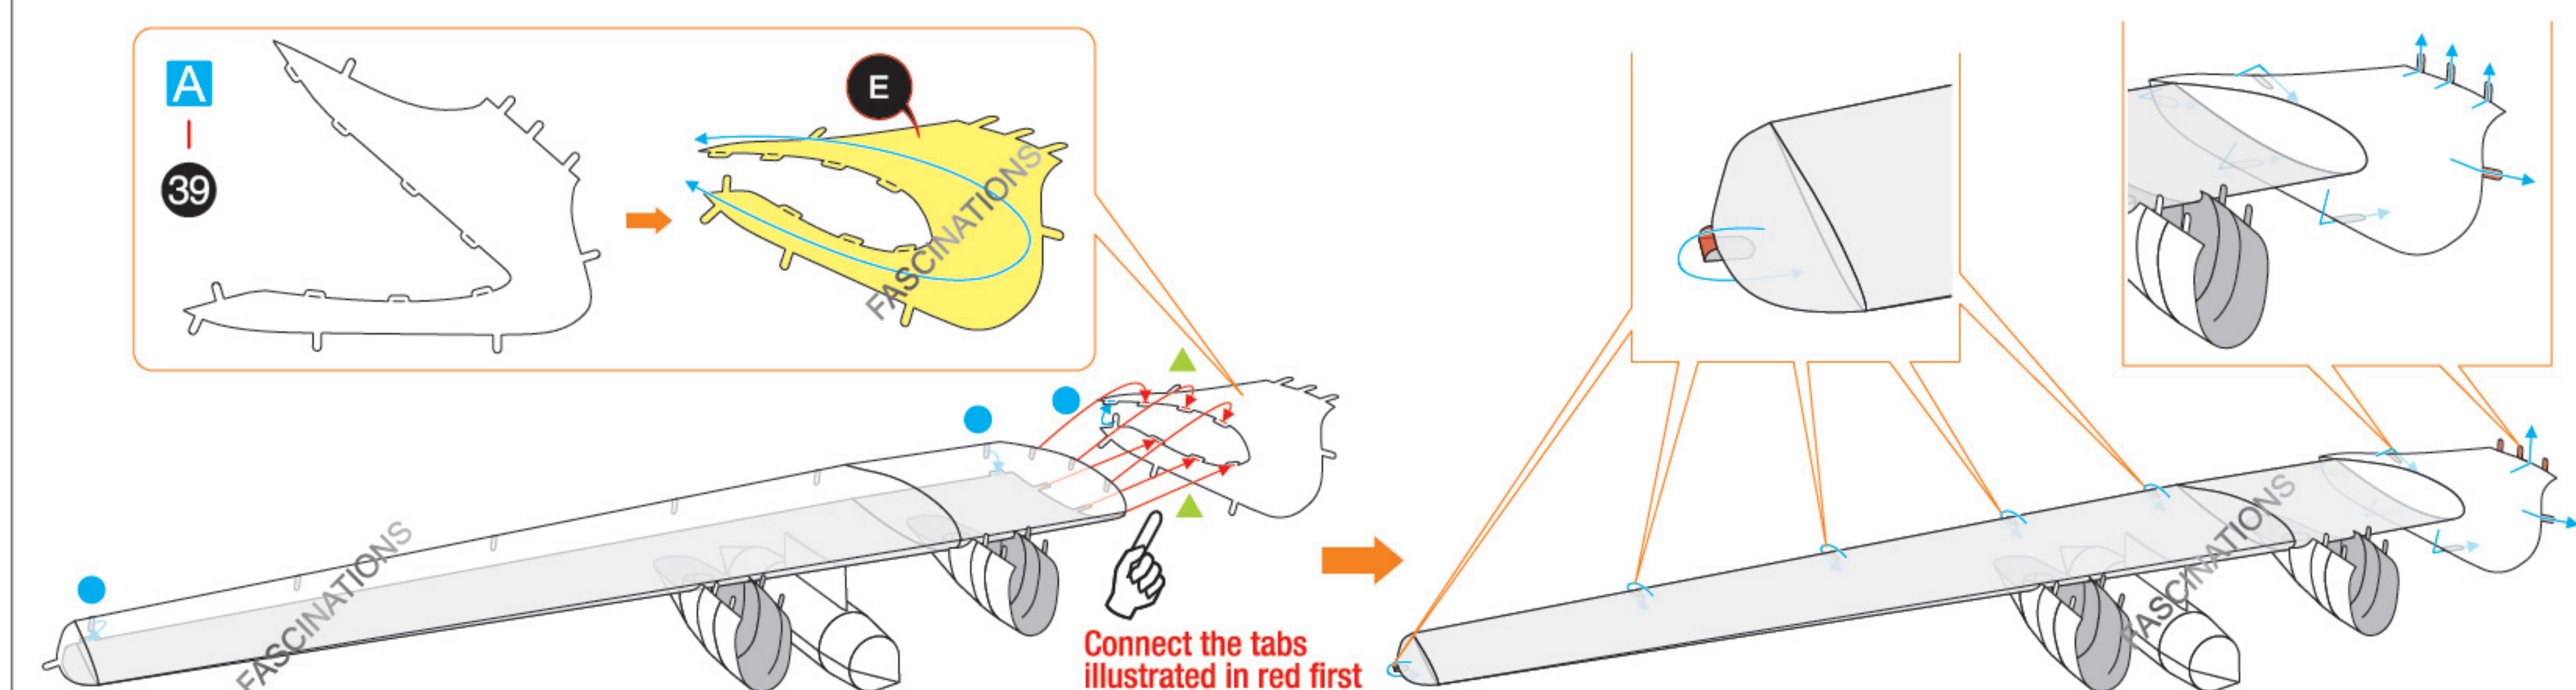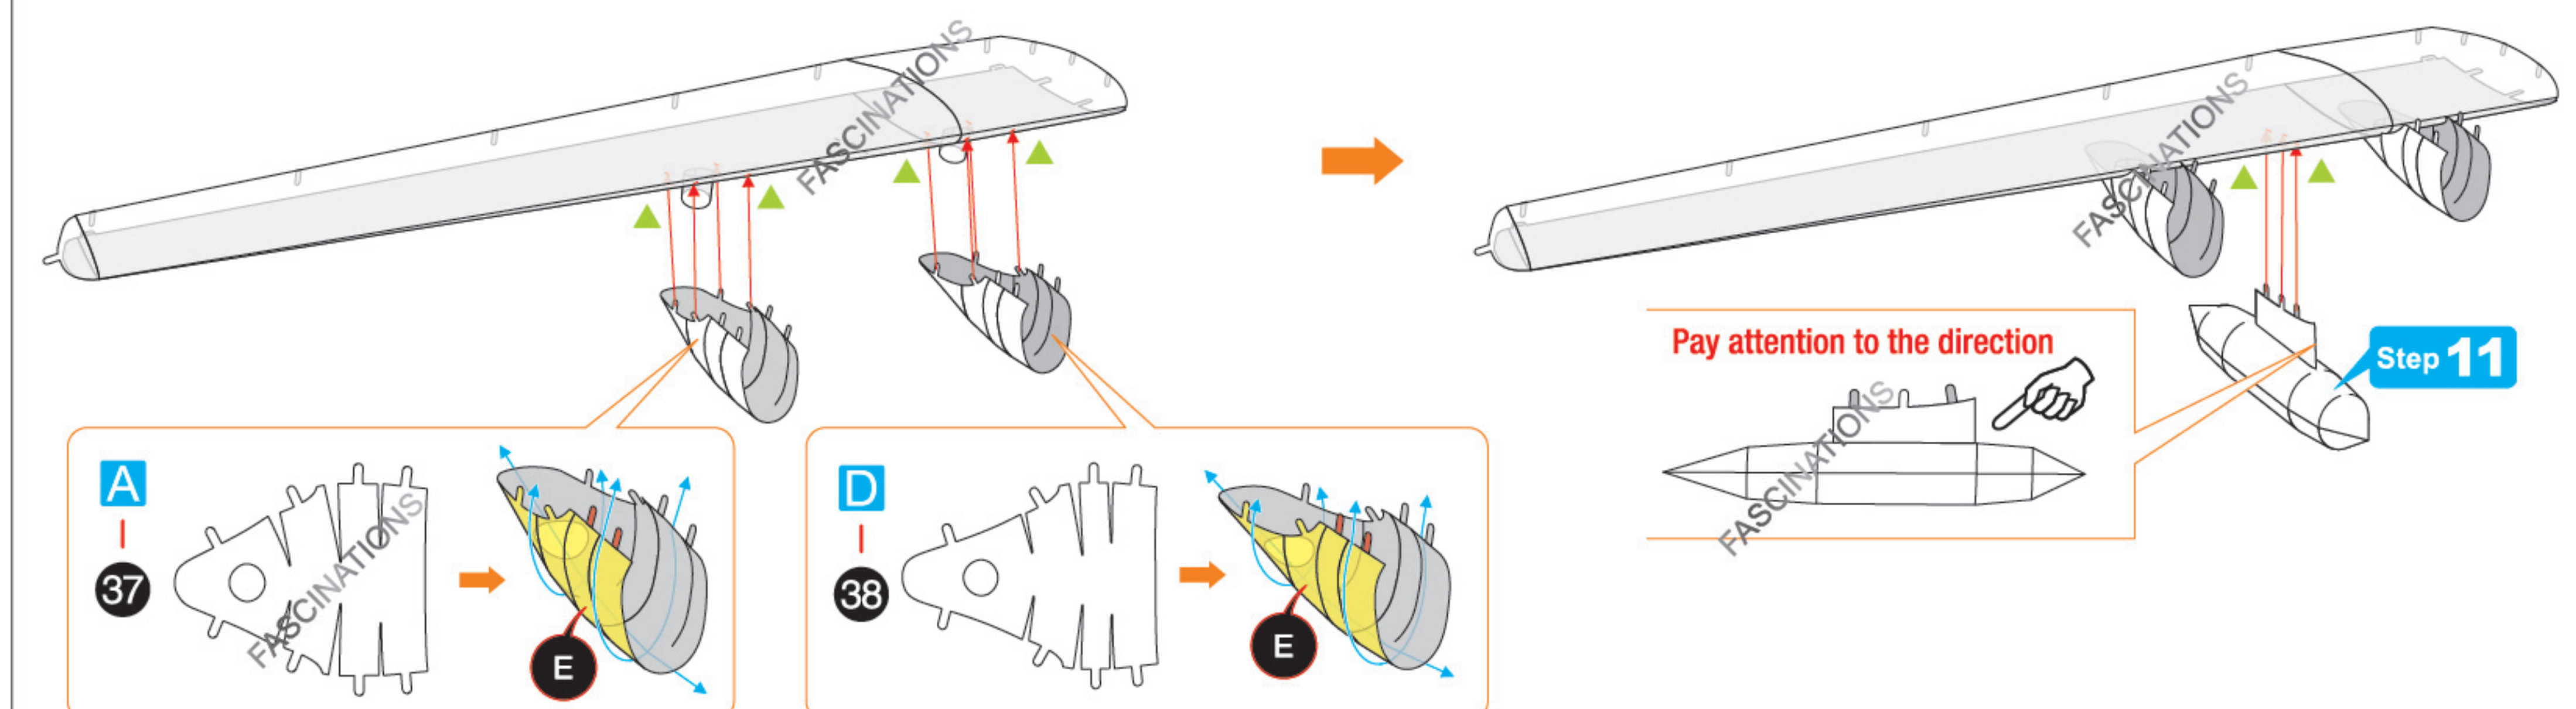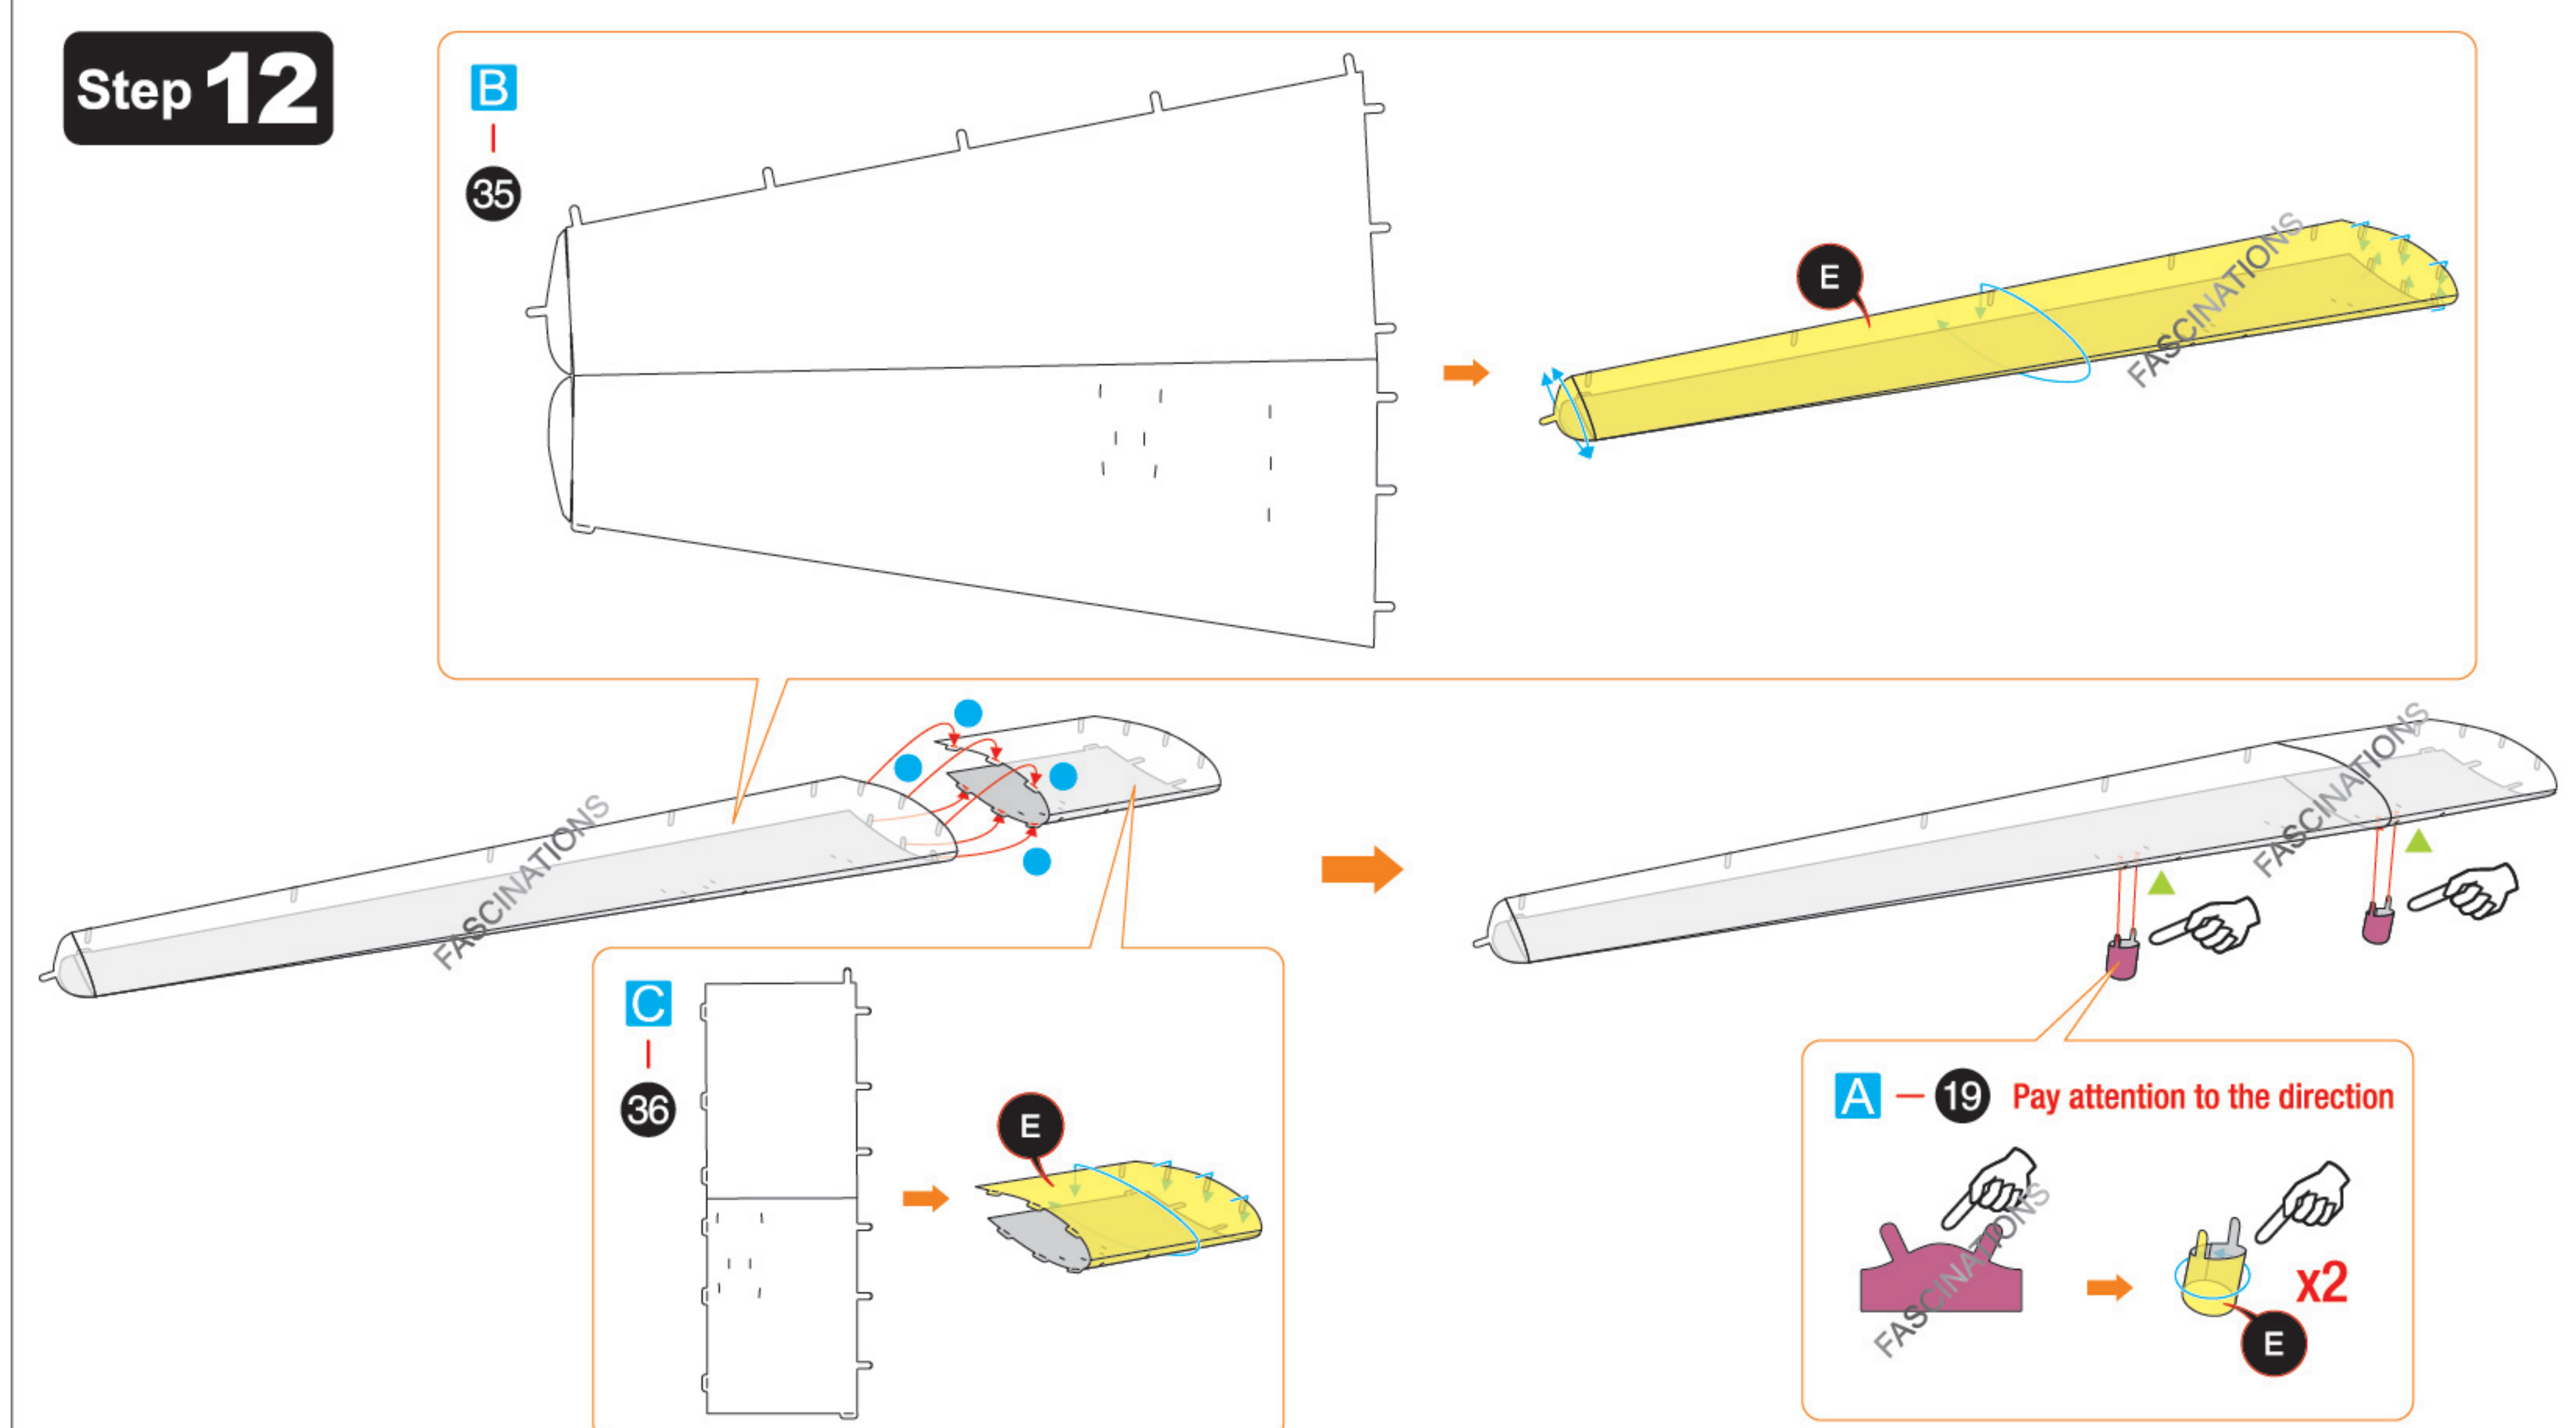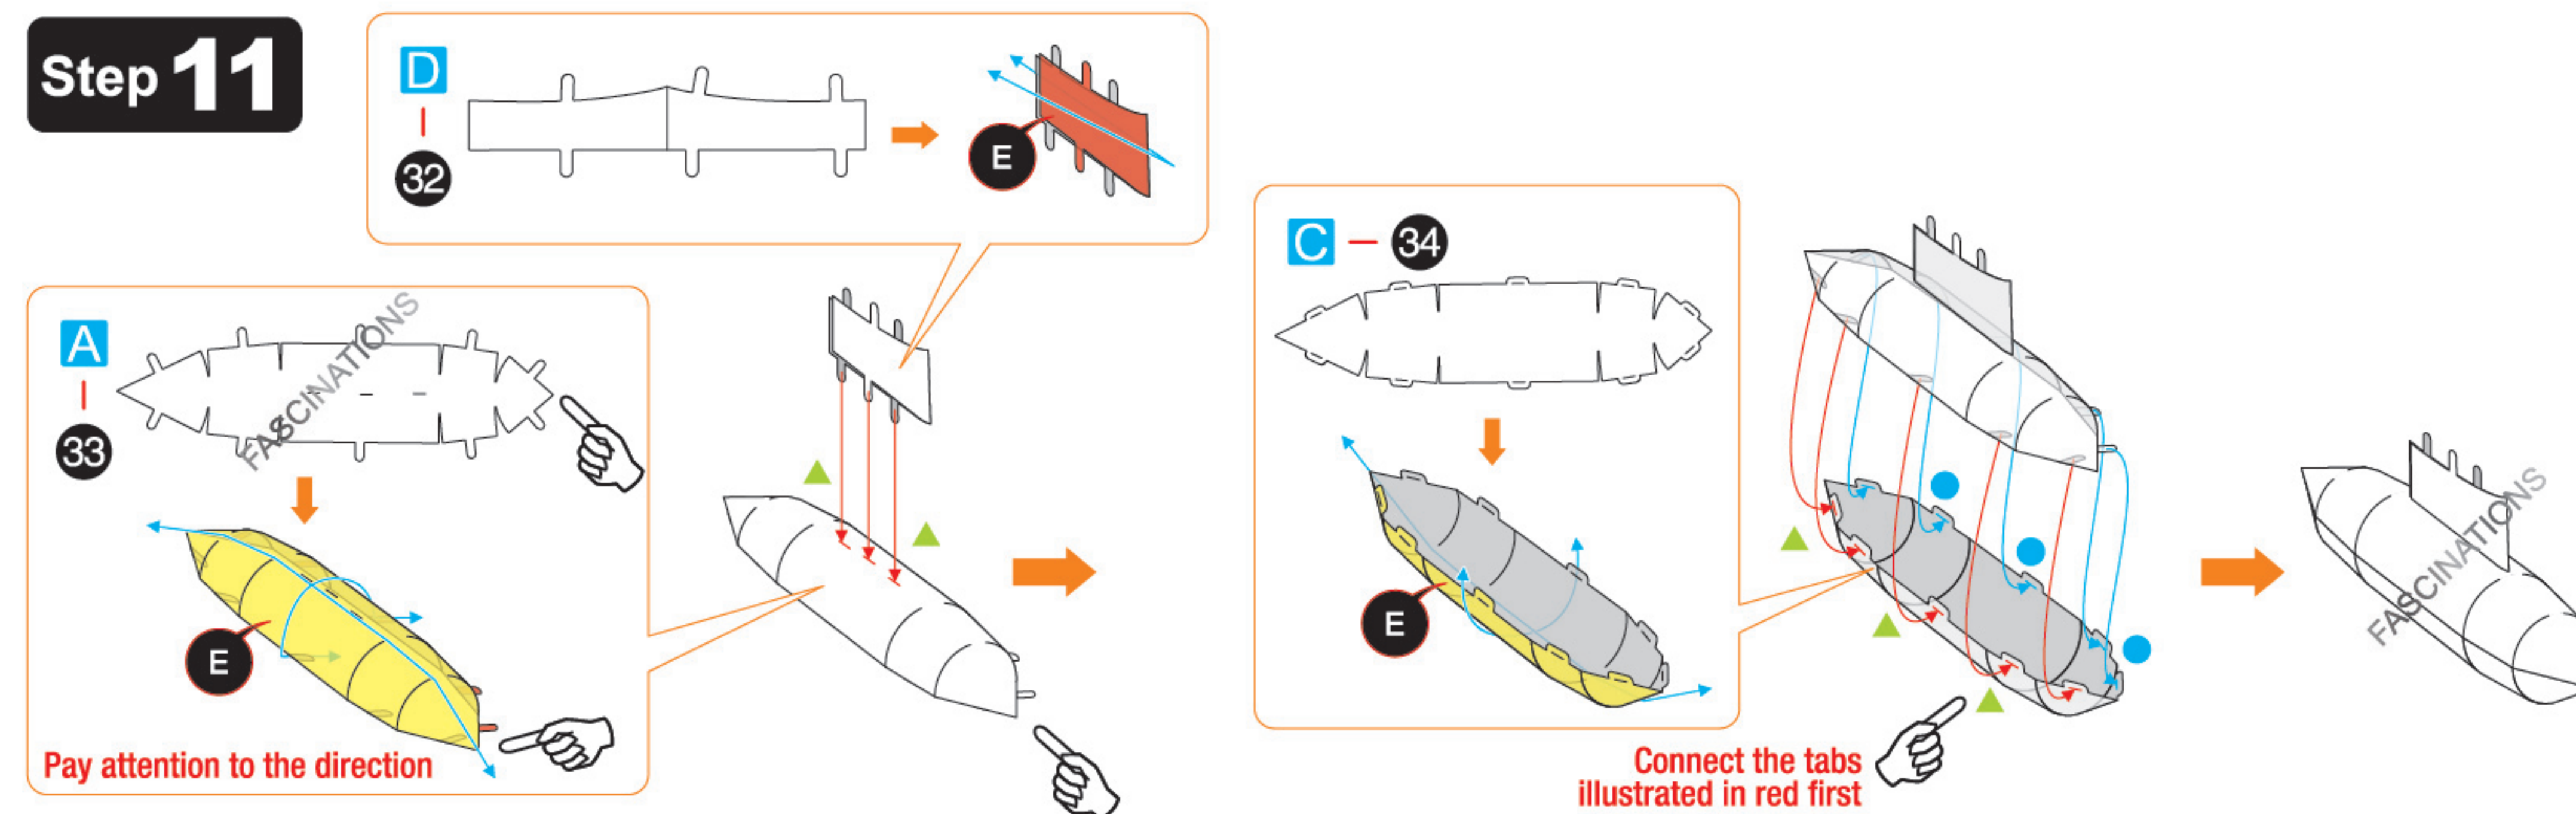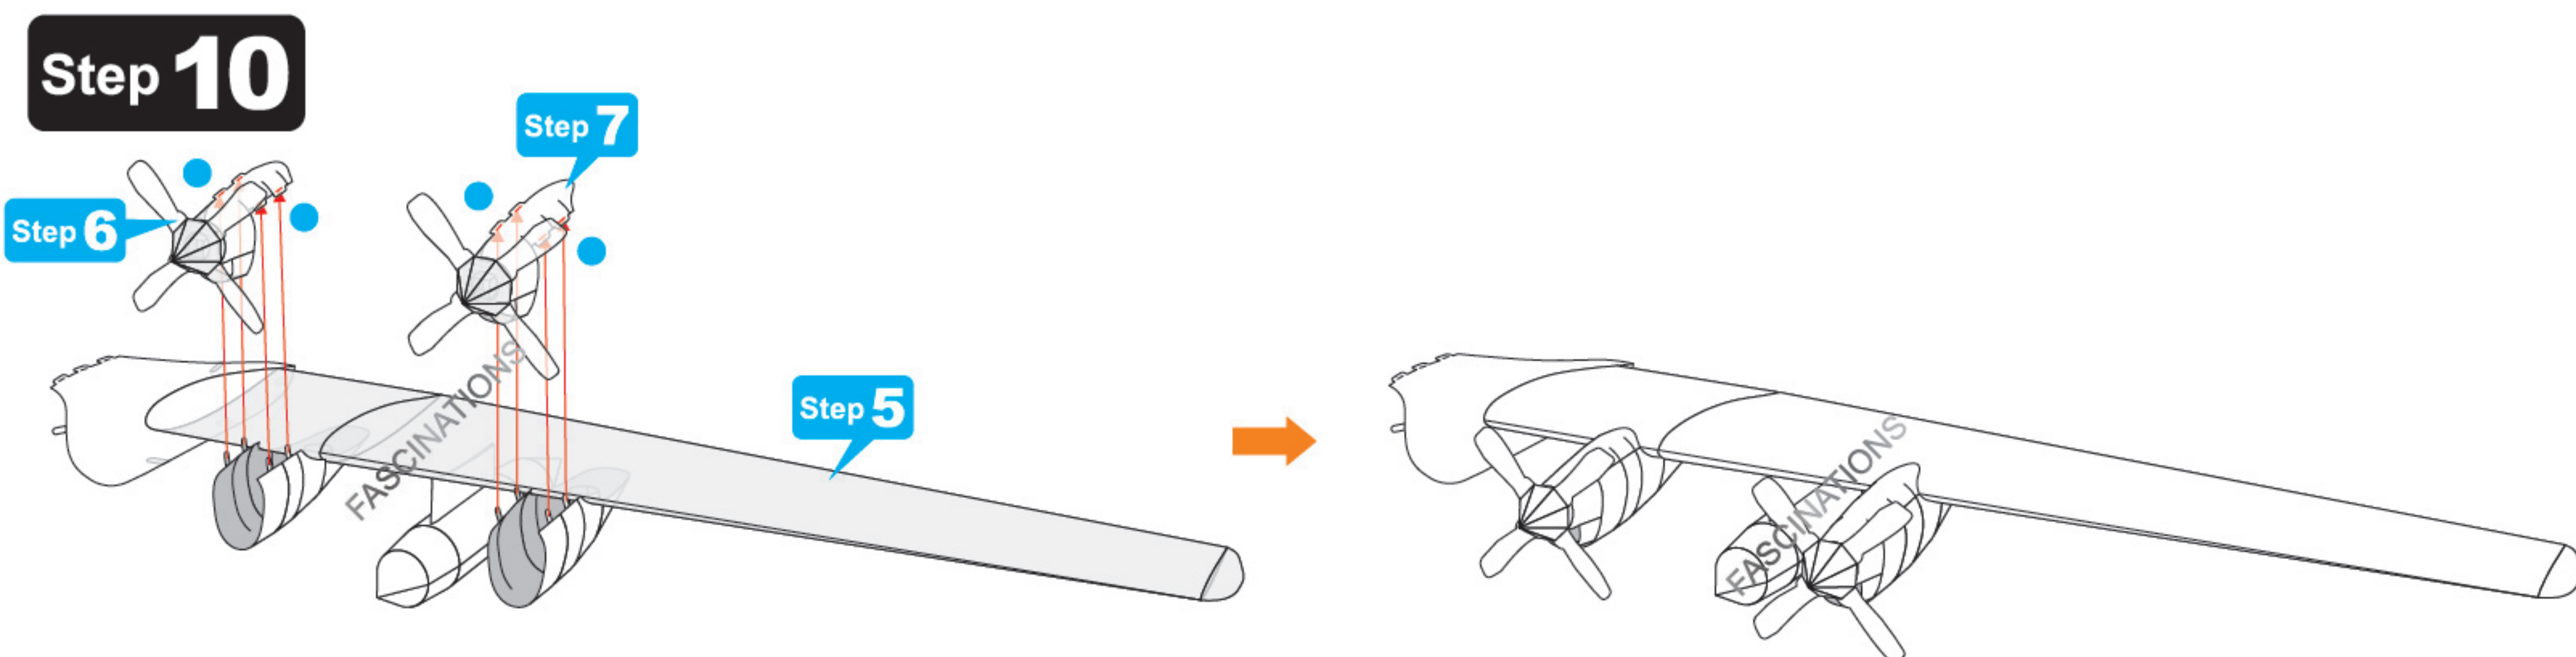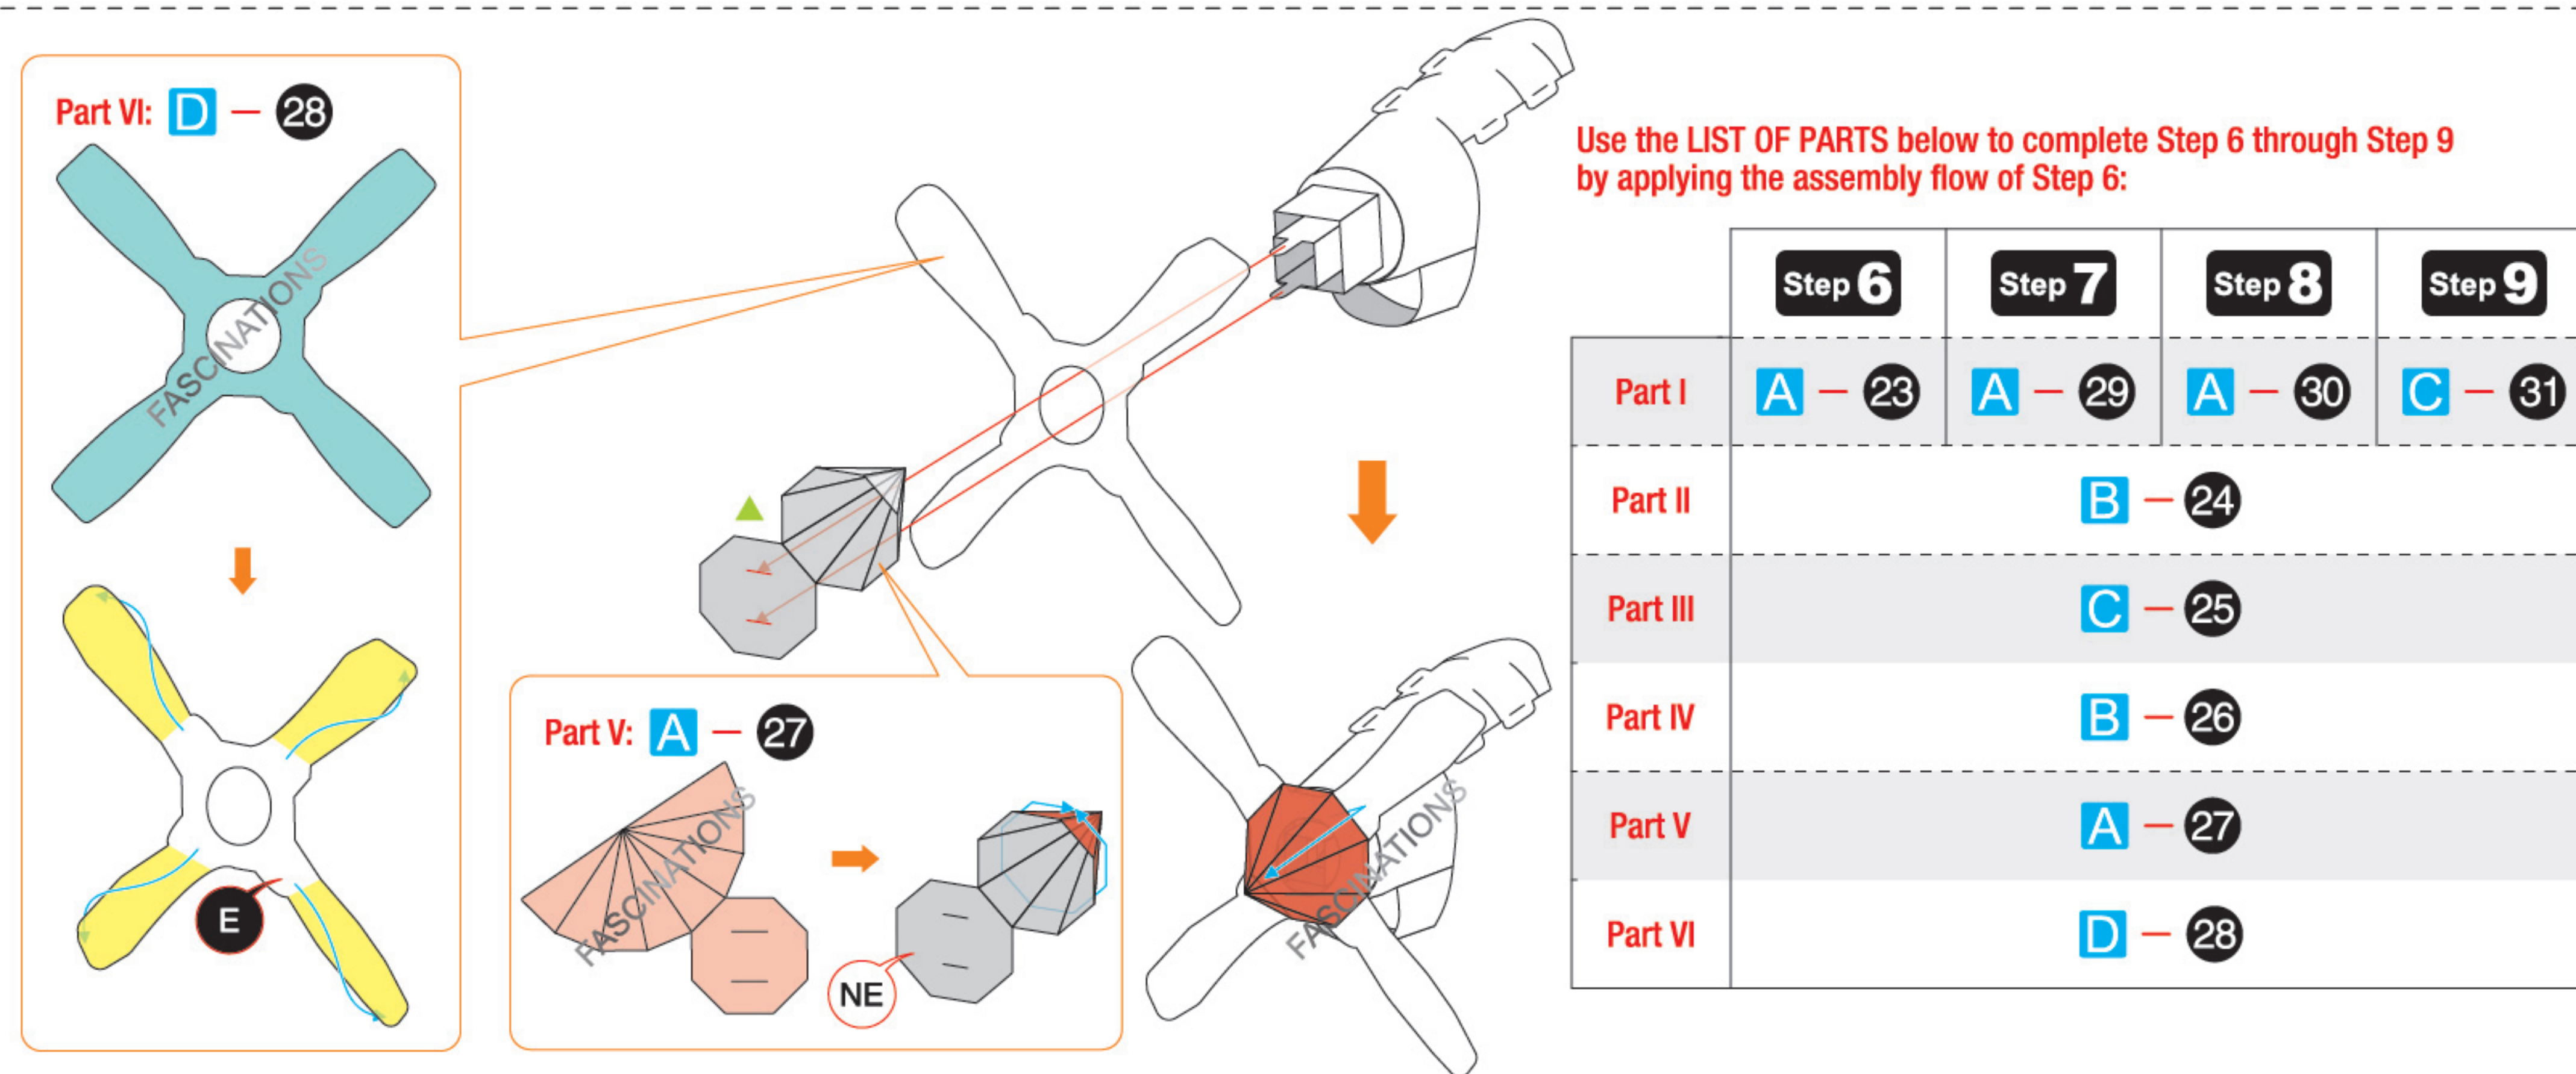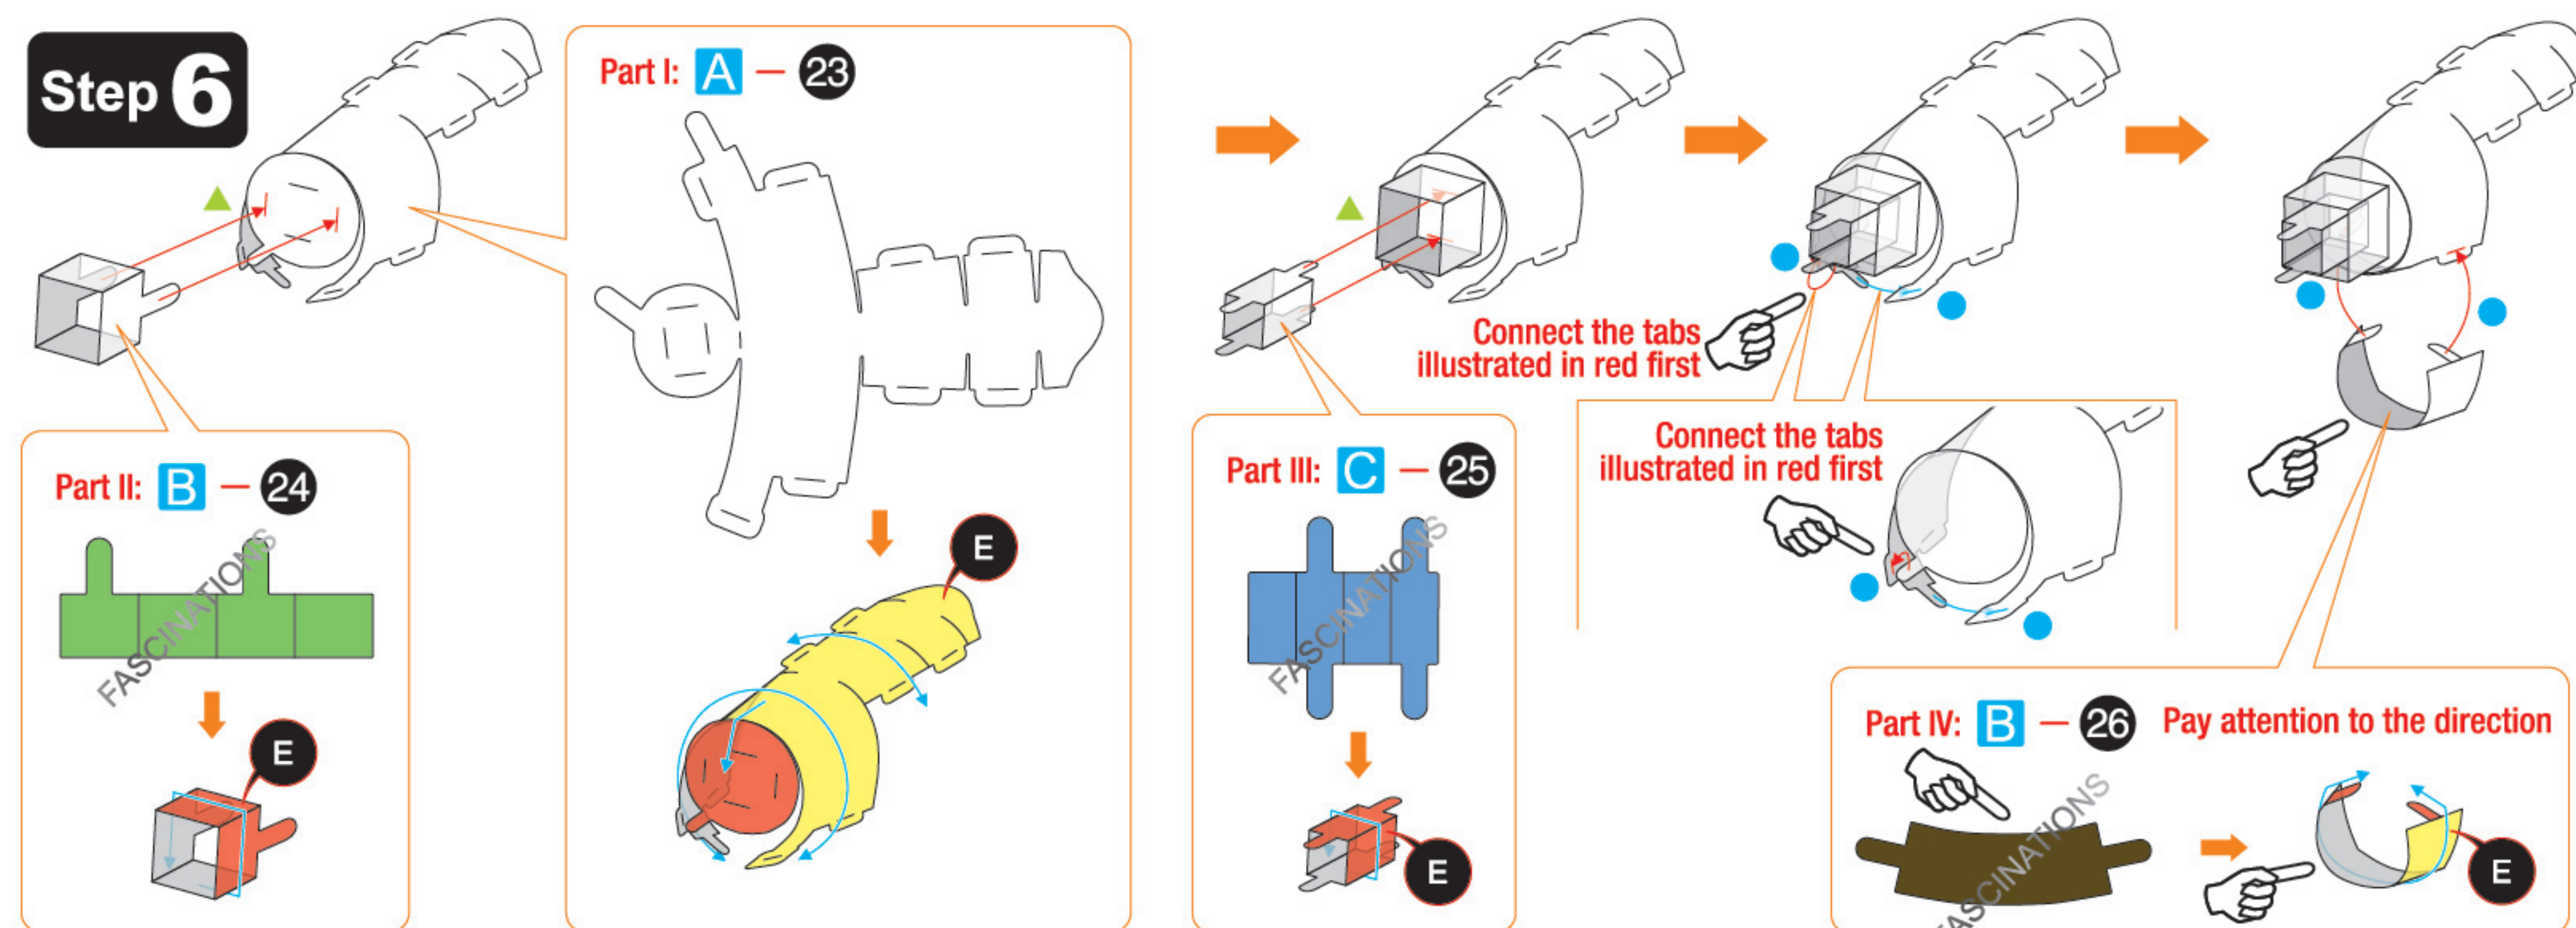

Step 13

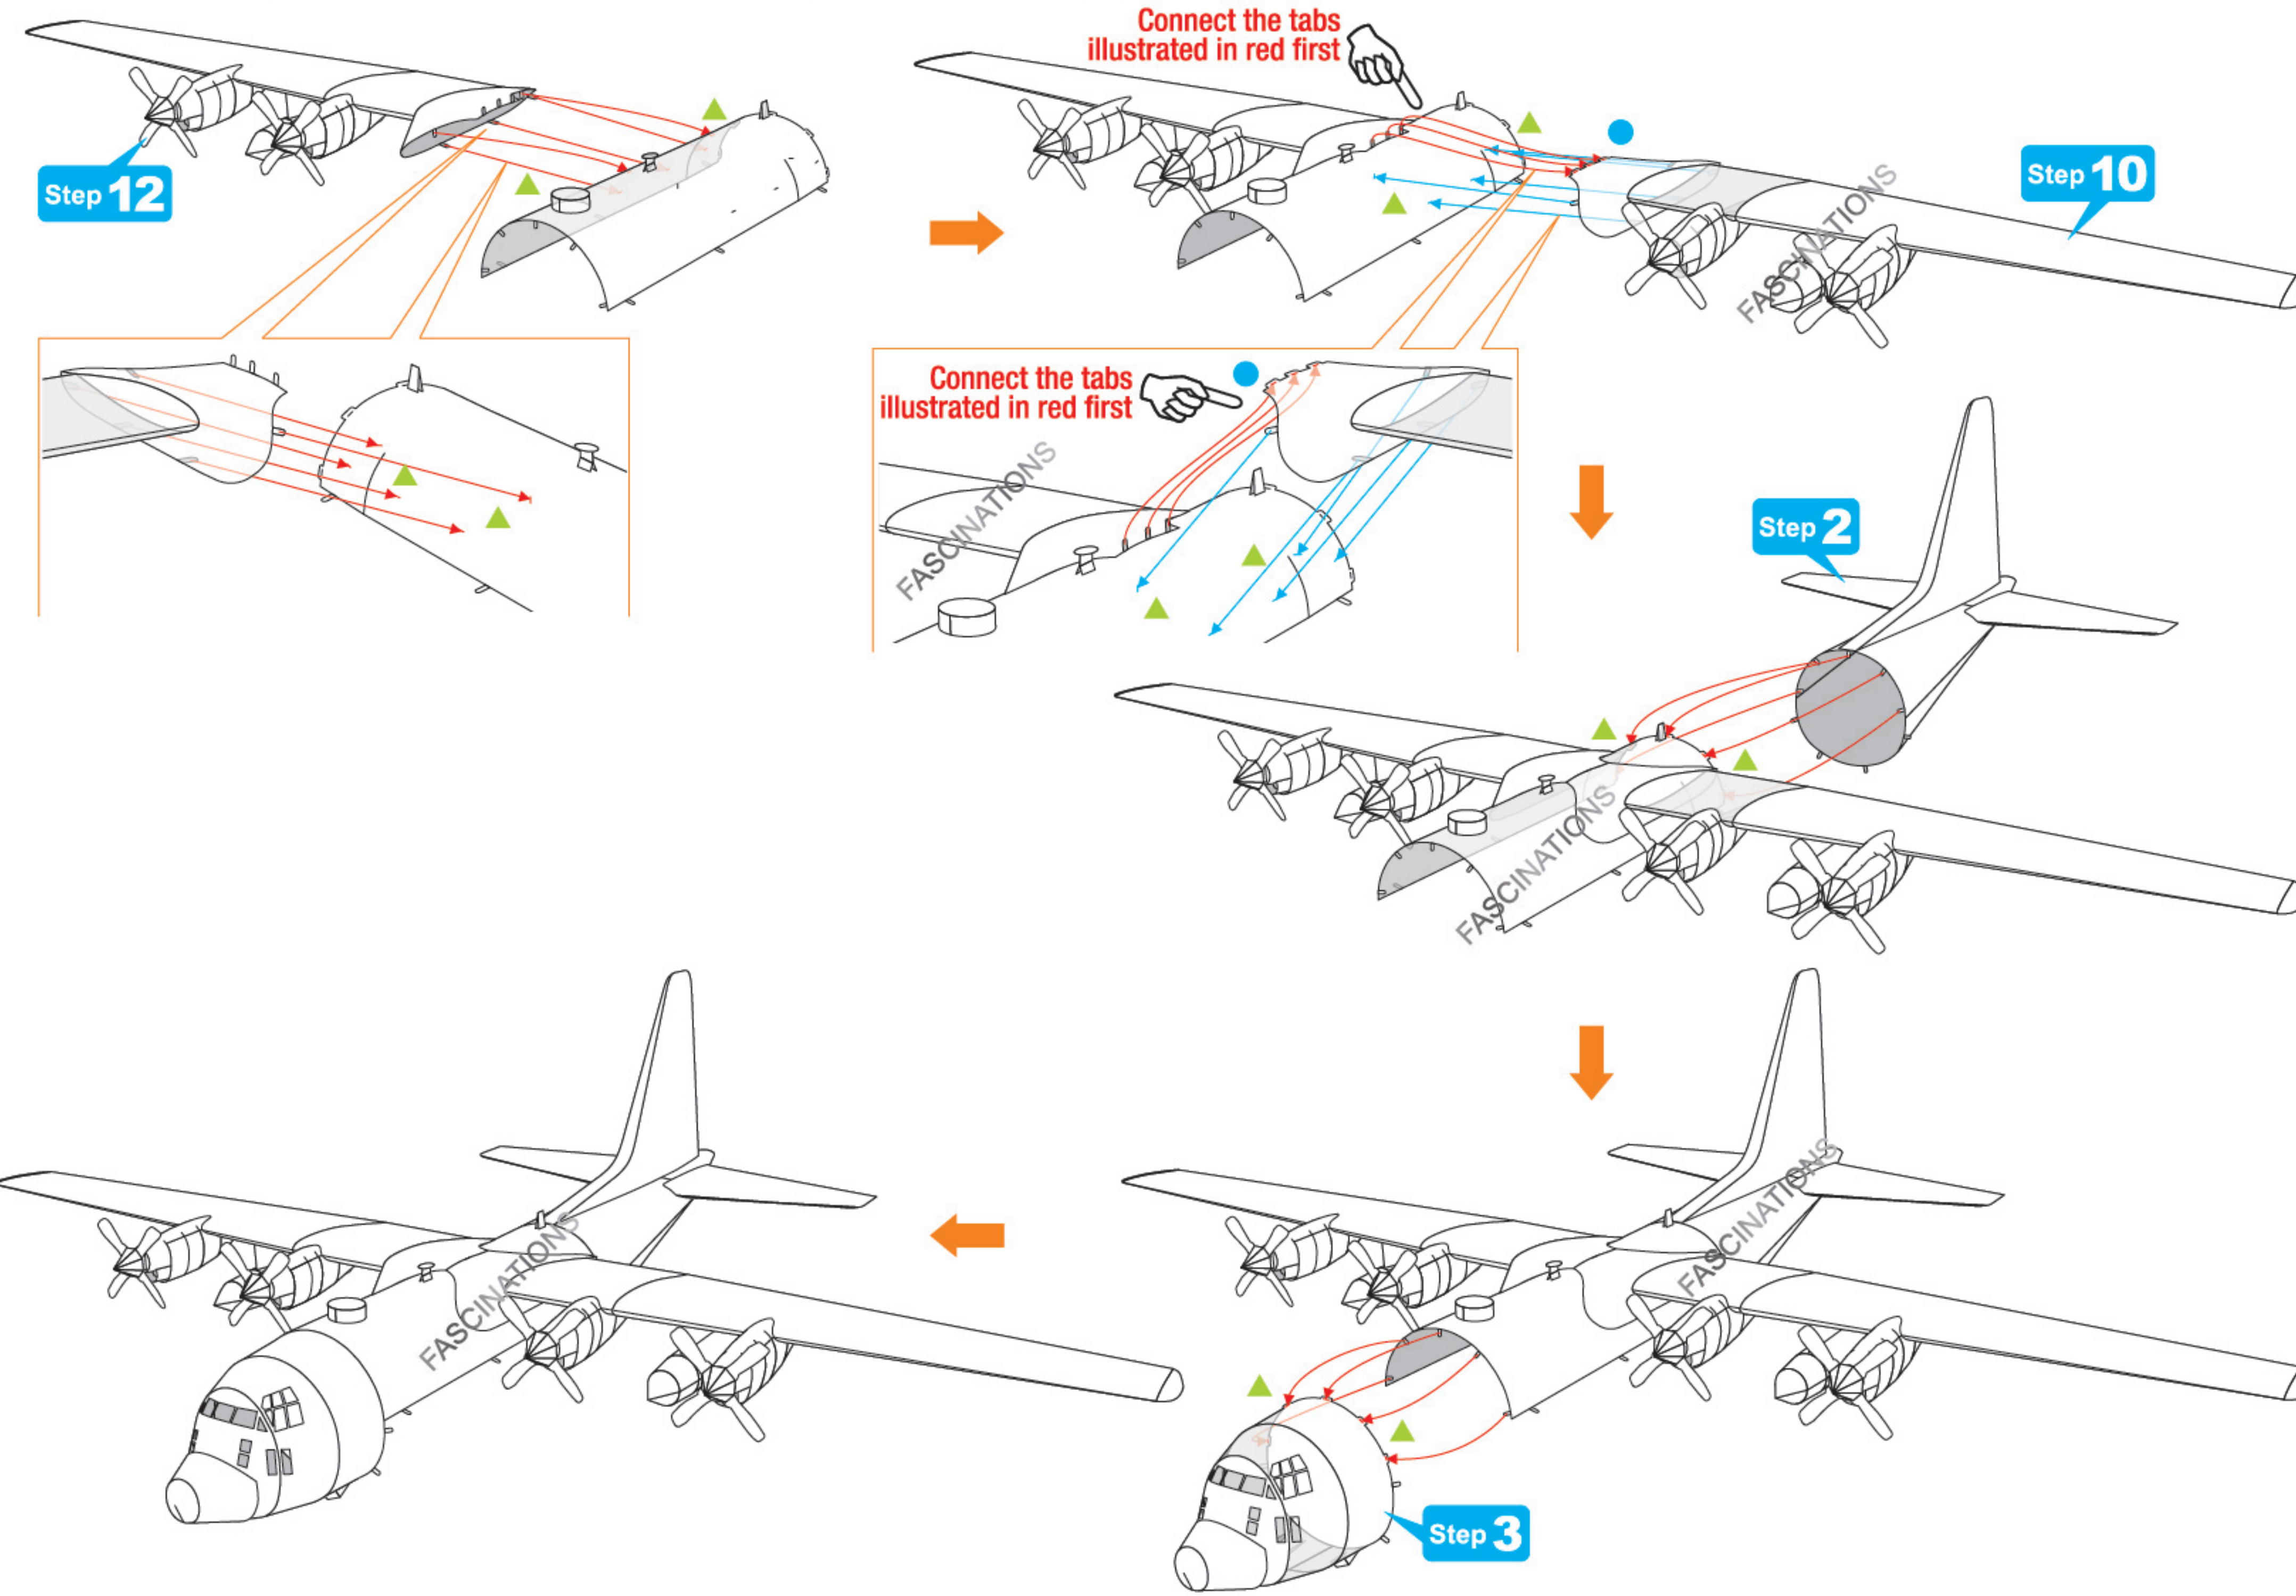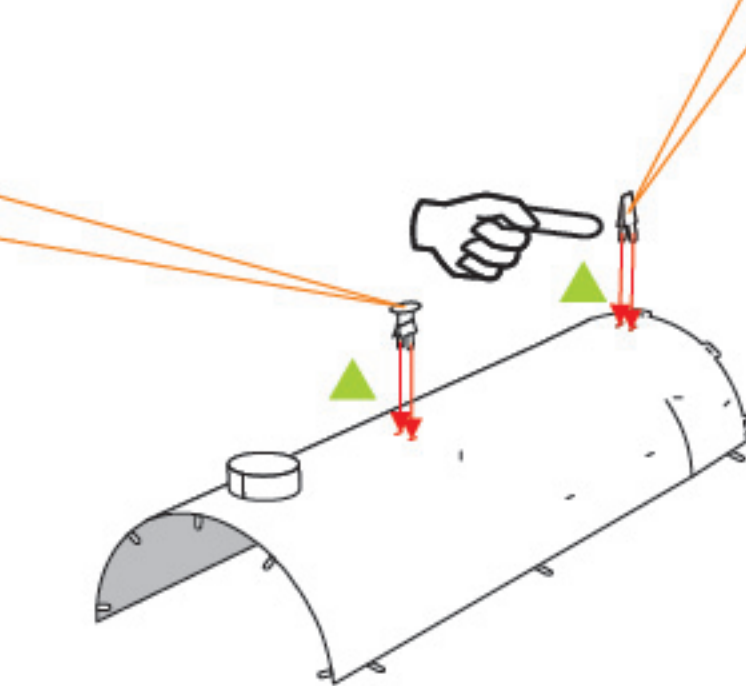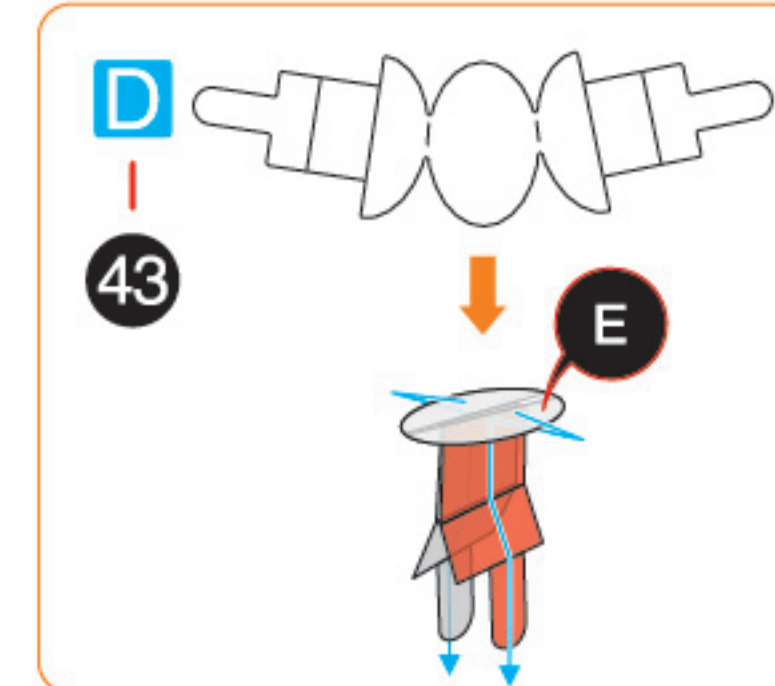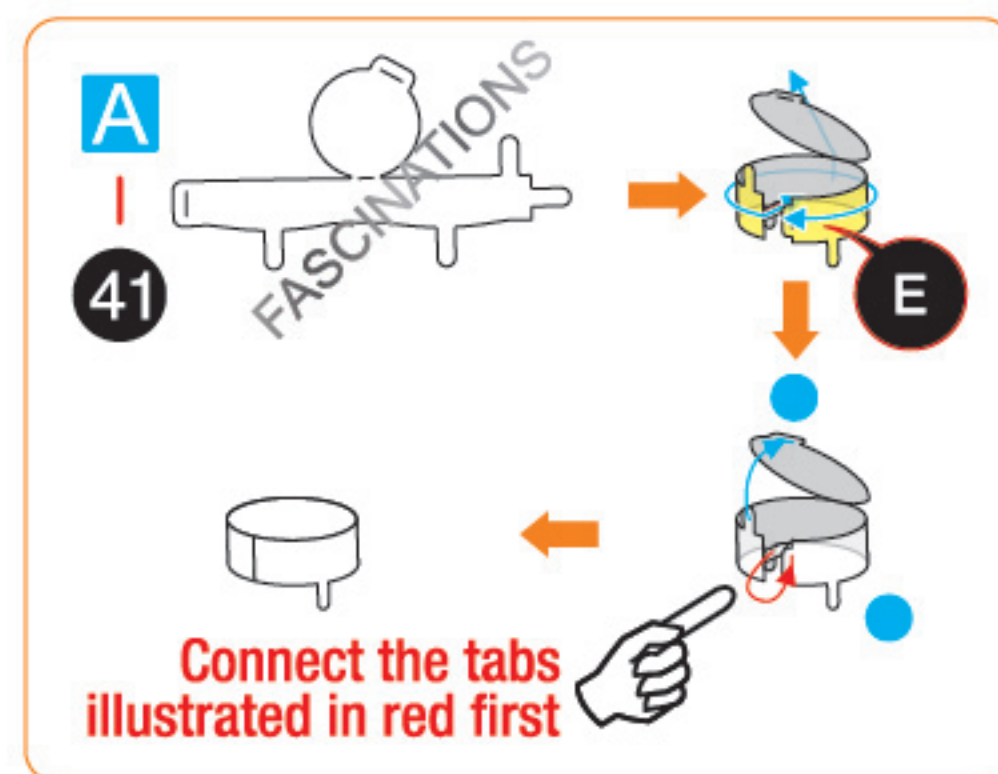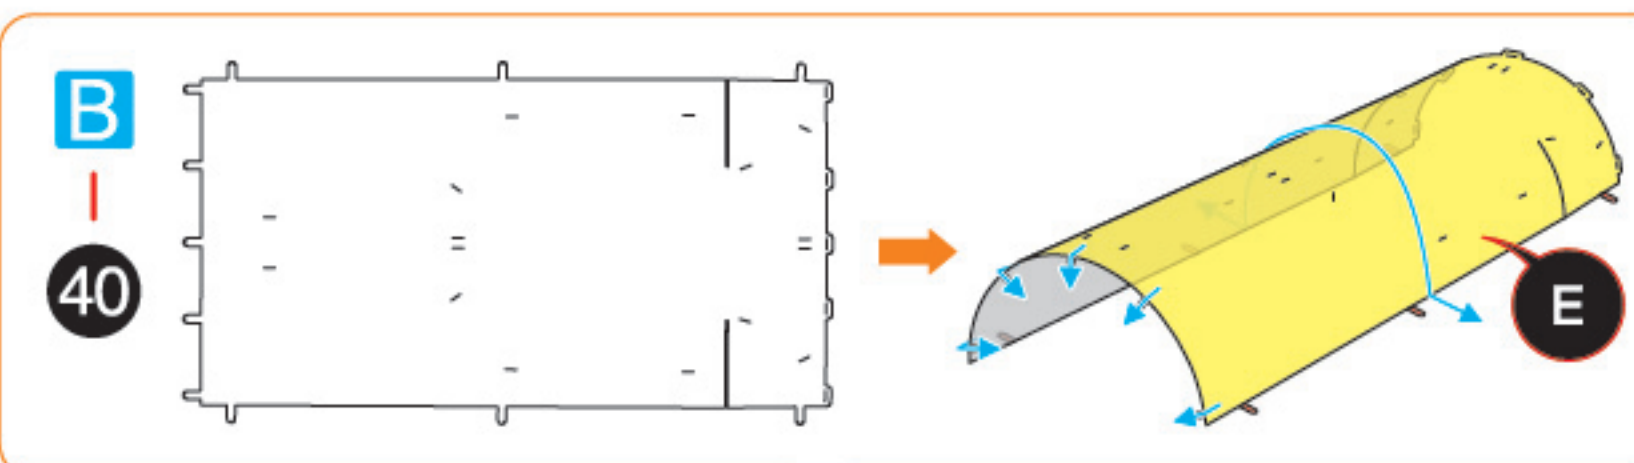

Step 14

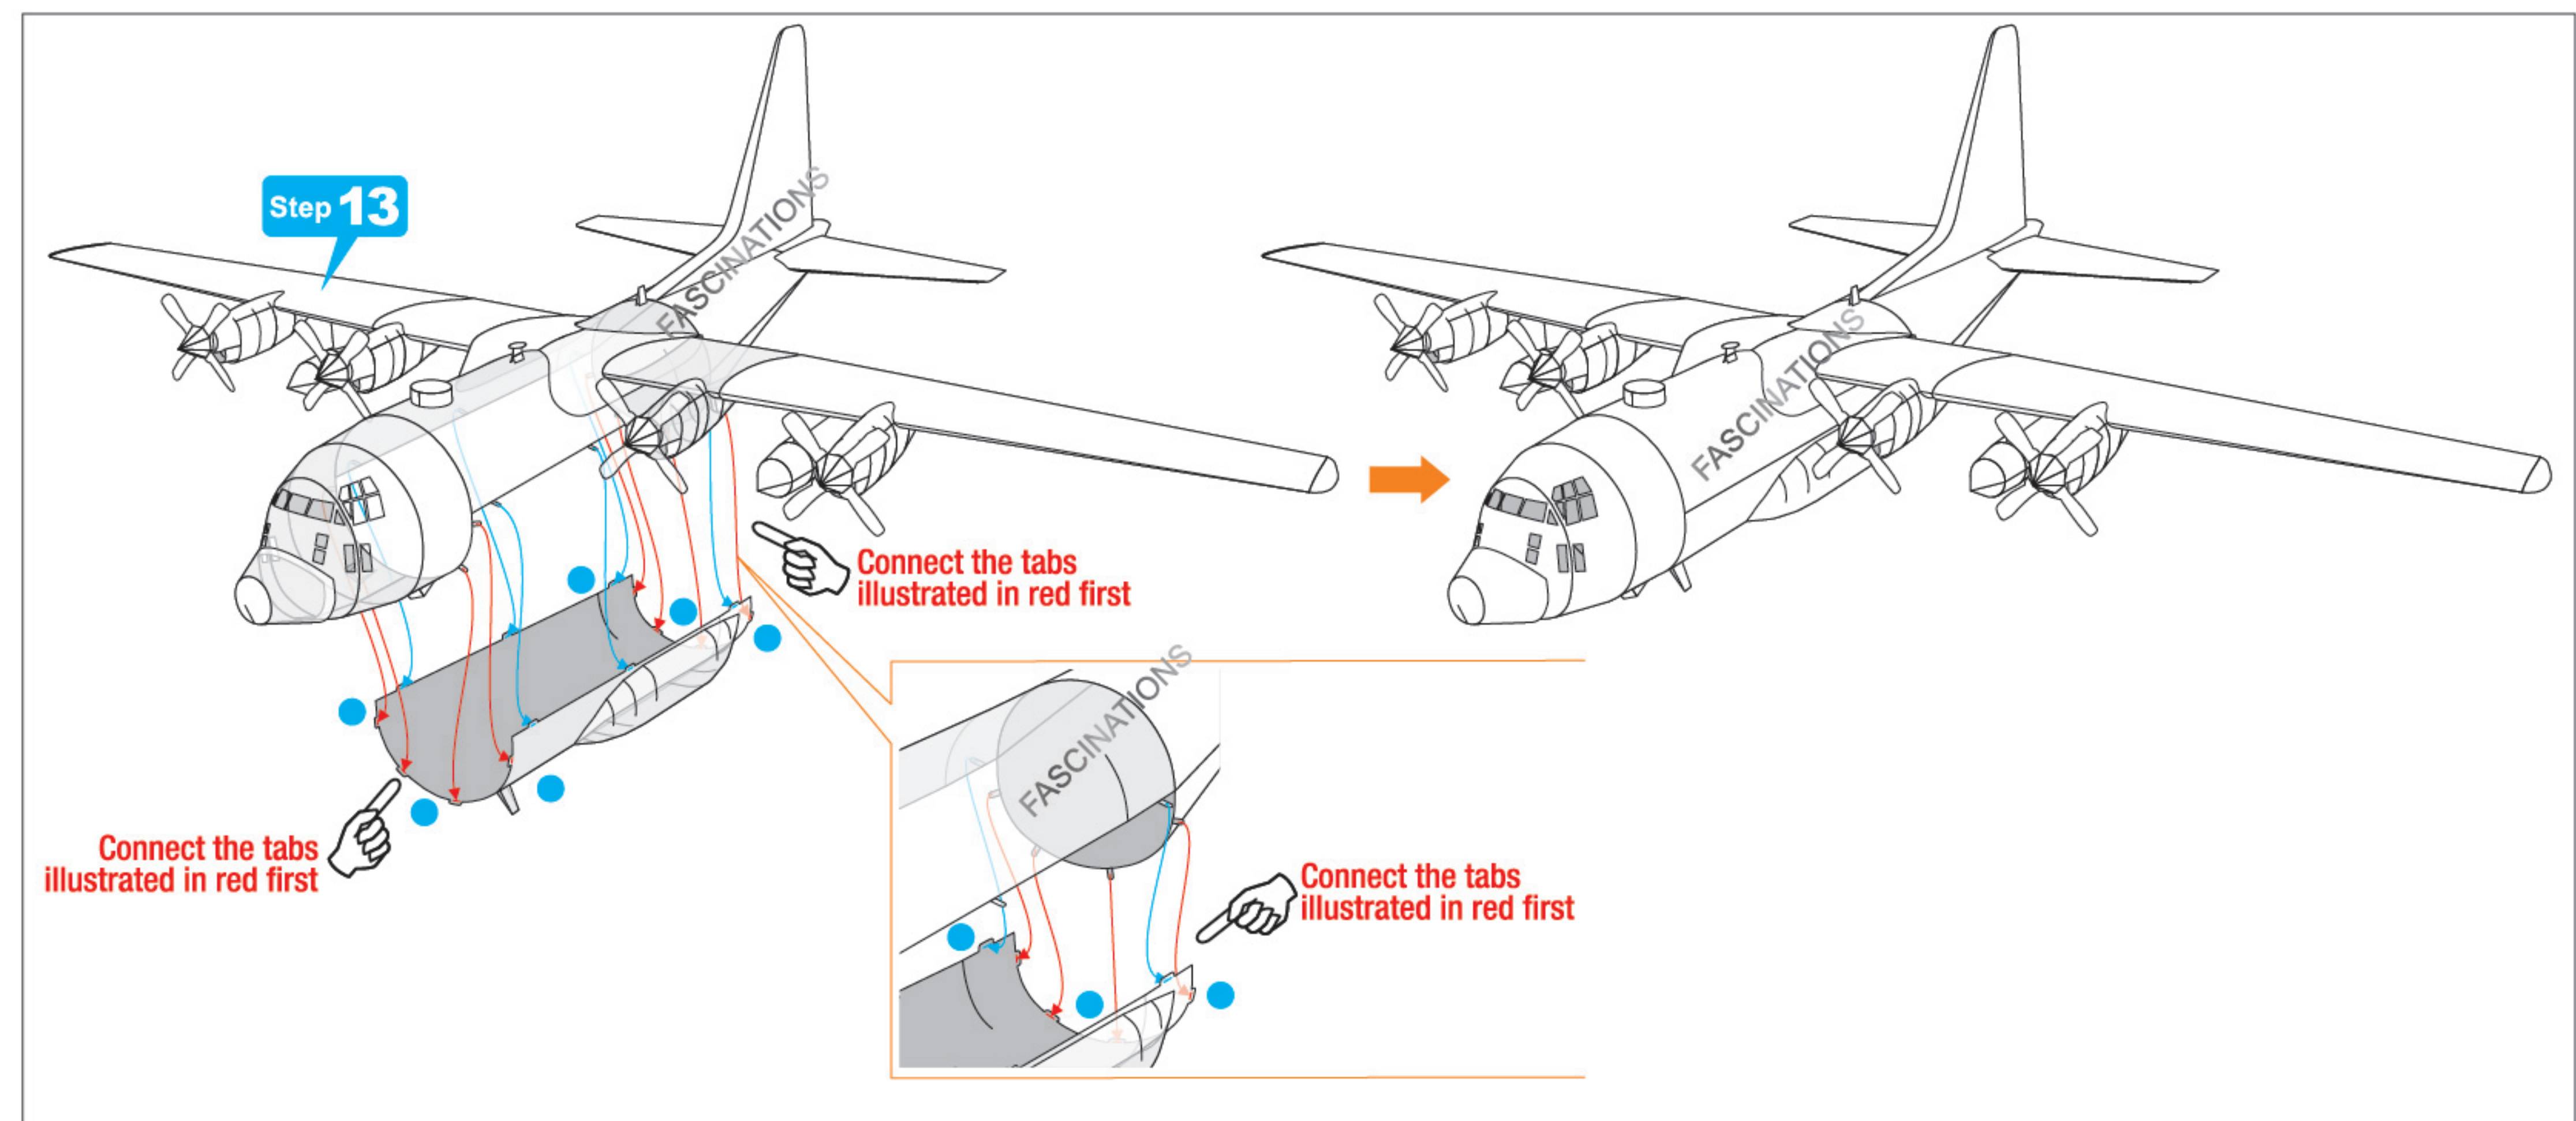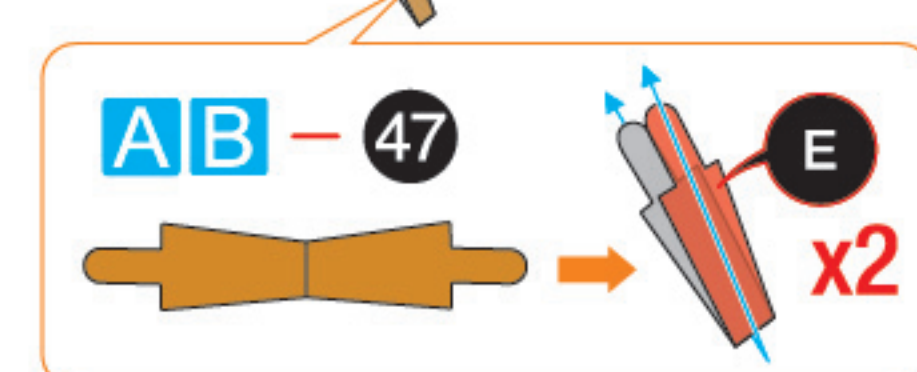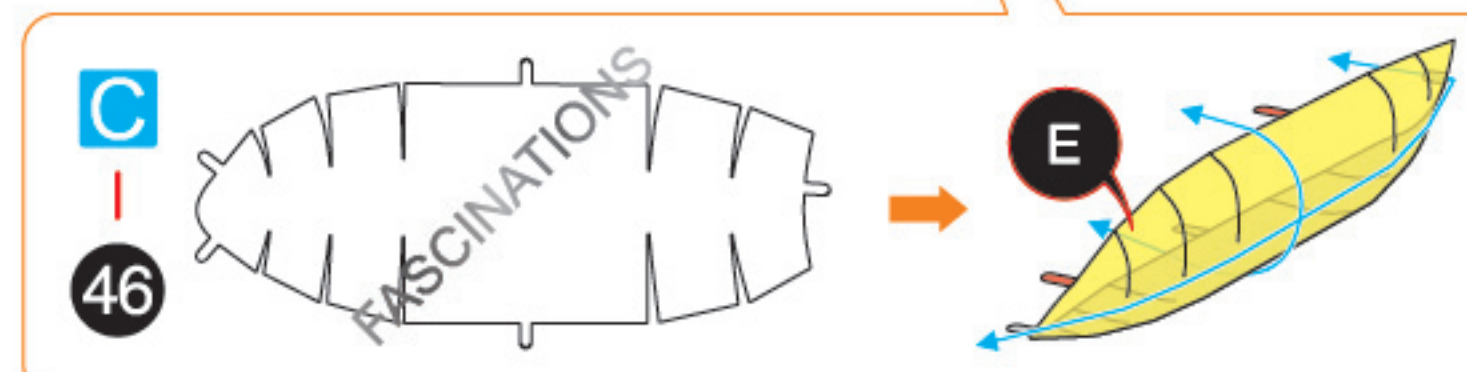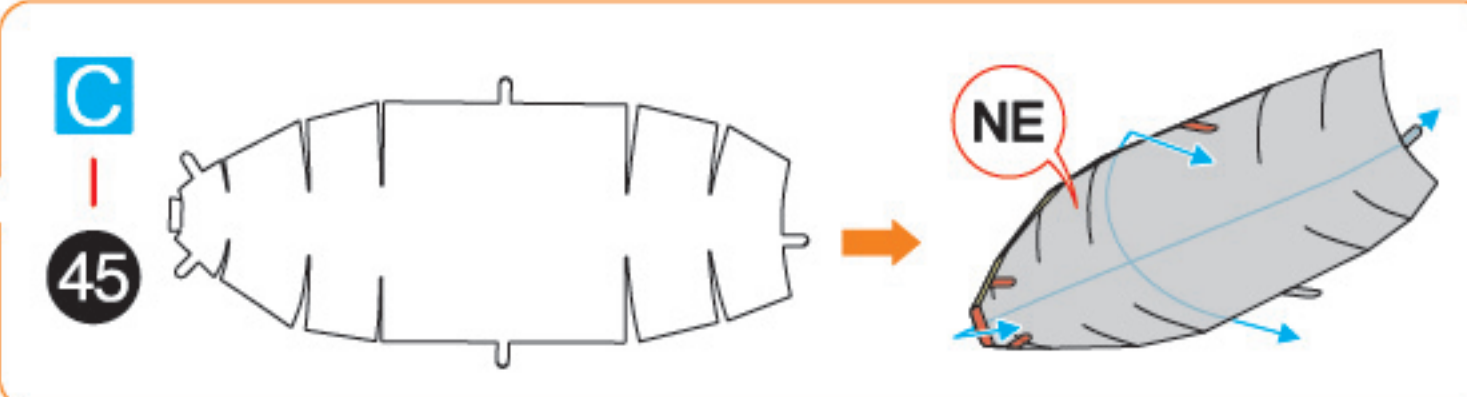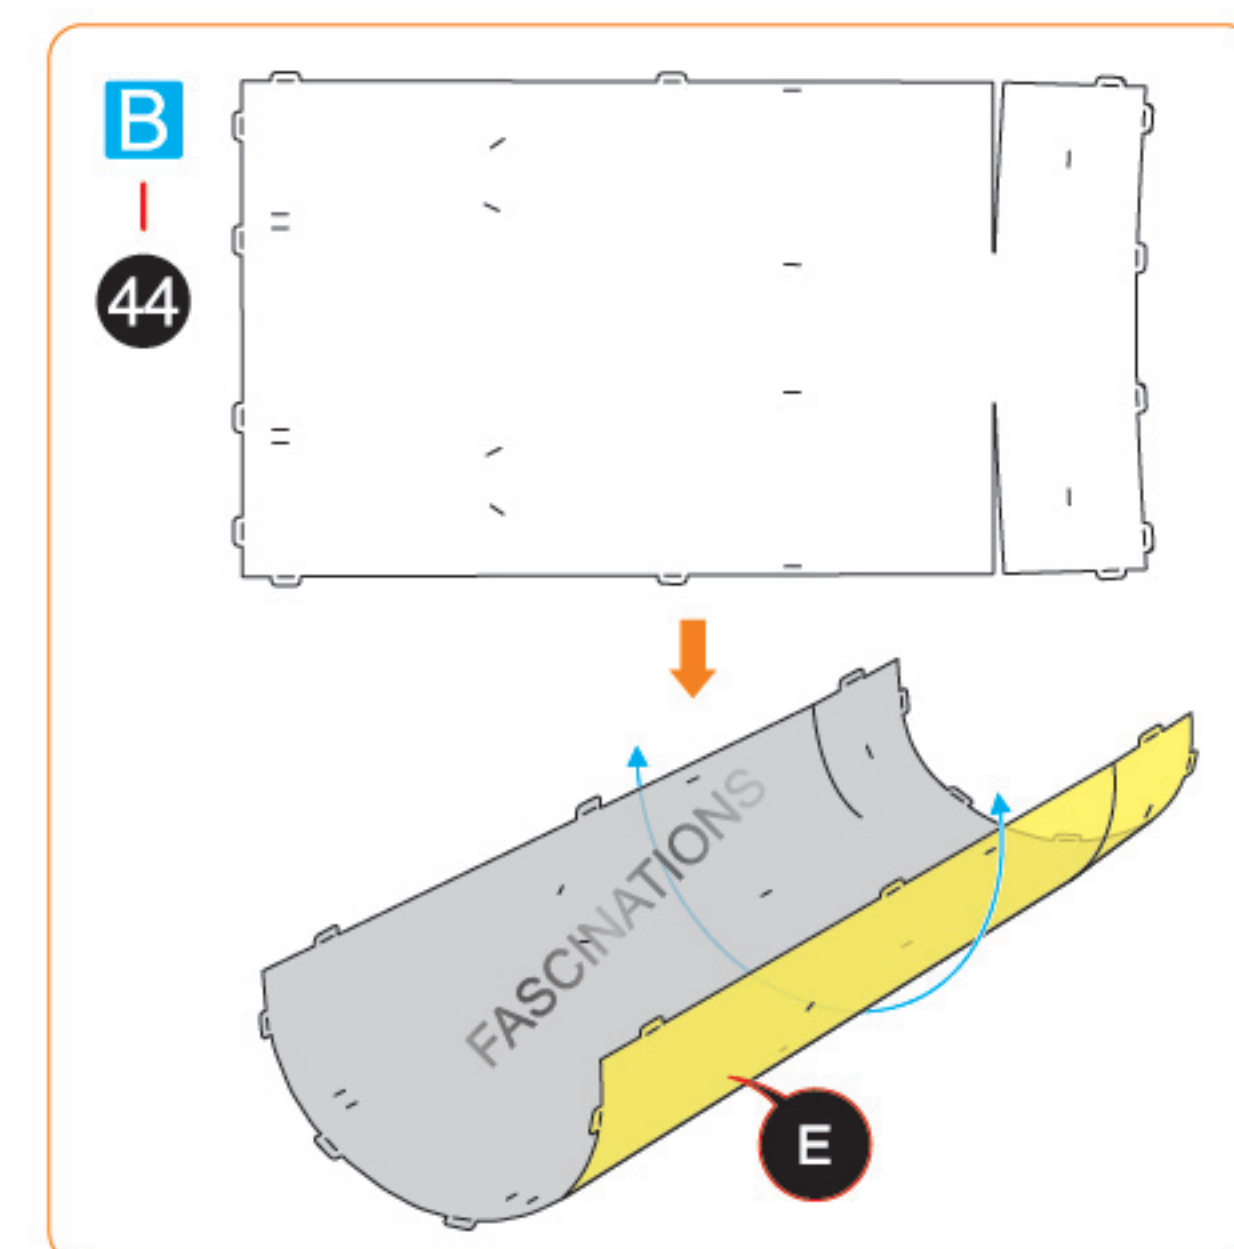

Step 15

