



METAL SHEETS

Parts with same color are duplicates


A

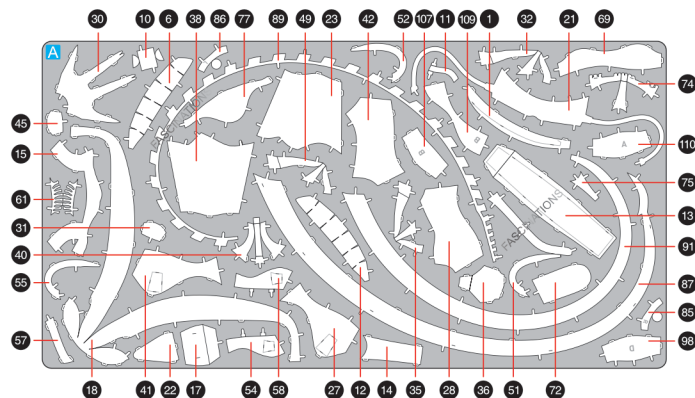

B

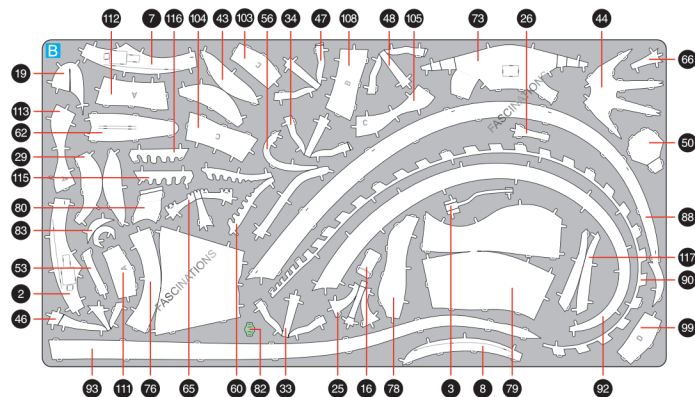

C

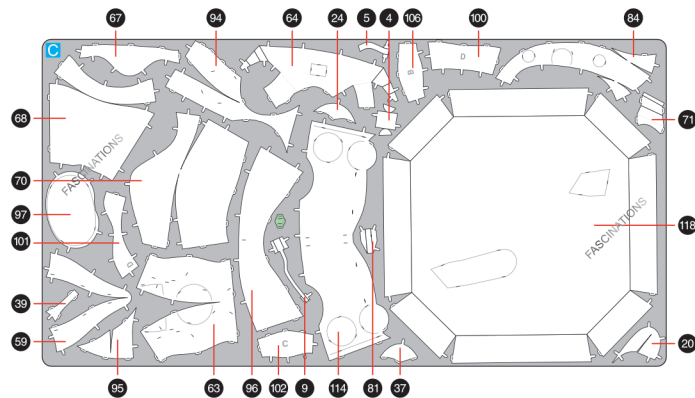

Metal Earth

360°
view



It is highly recommended that you visit www.metalearth.com/360/ICX262 to see the completed model before assembling your own

TM & © 20th
Century Studios

Premium Series


ICX262

XENOMORPH



TO CREATE THE BEST CONNECTIONS

A - 40



Consider these engraved stripes as supporting features for the bend

Legends:

- E** Engraved / Color side
- NE** Non - engraved / Silver side
- Attention point
- Insert tab and bend 90 degrees
- Insert tab and twist 90 degrees

Assembly tip:

If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish.

Yellow areas should be curled

Red areas should be folded

Recommended tools:

- Wire cutters: helpful for taking parts from the metal sheets.




- Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.




In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed.

ASSEMBLY STEPS


Step 1

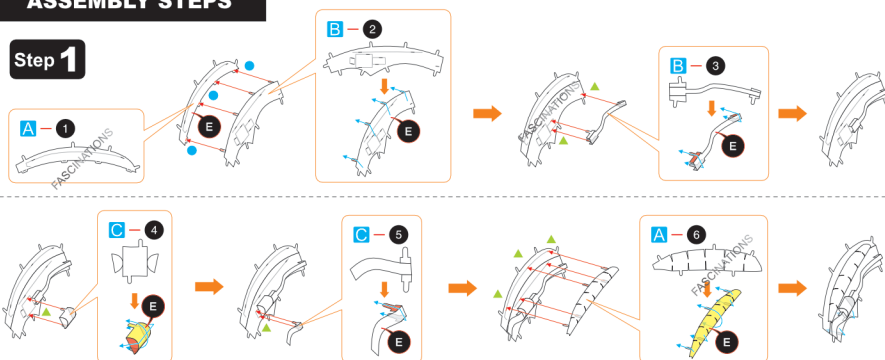




Step 2

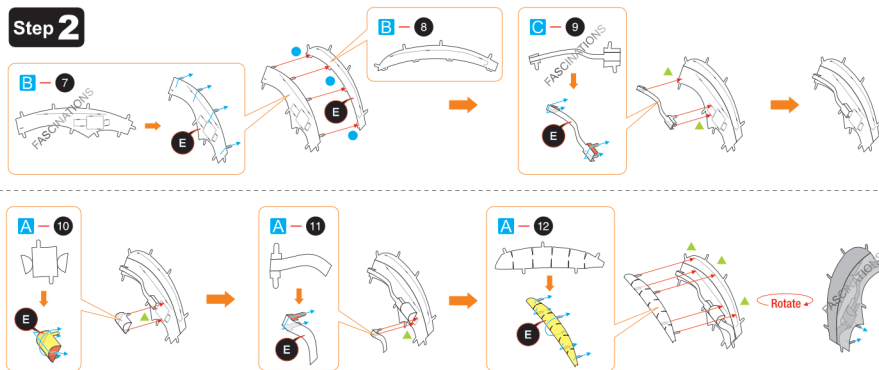


Step 3

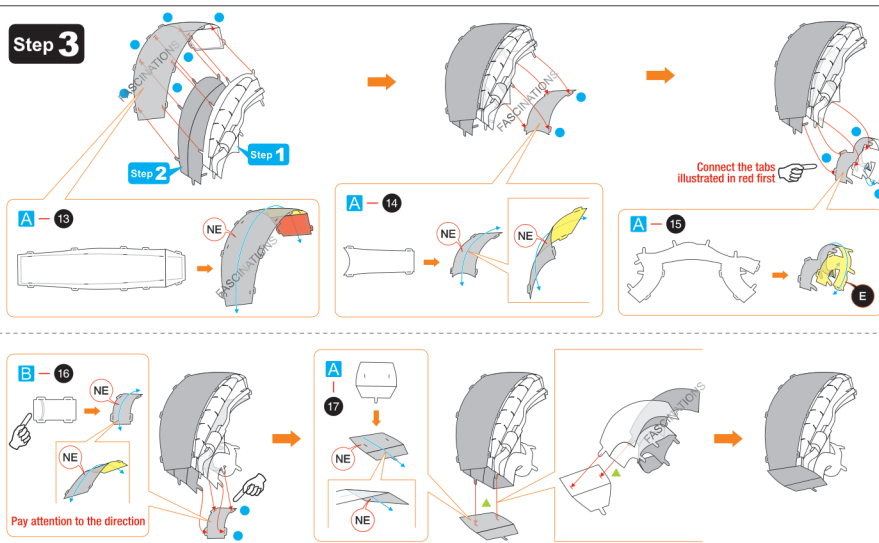


Step 4

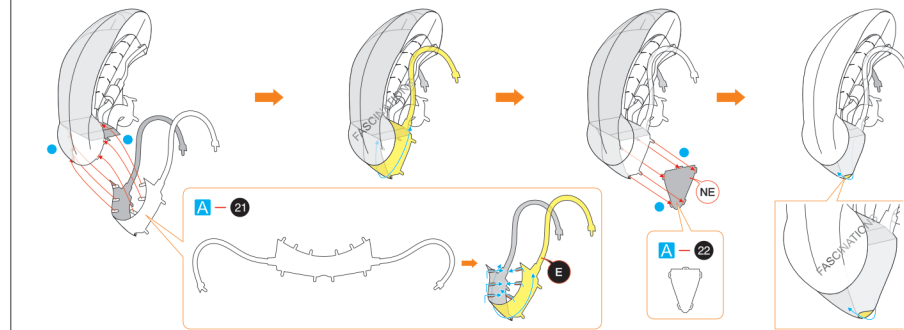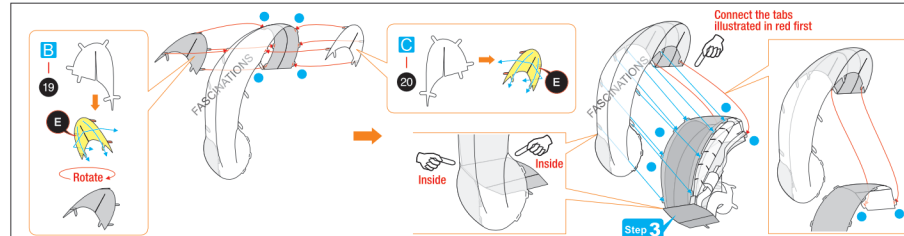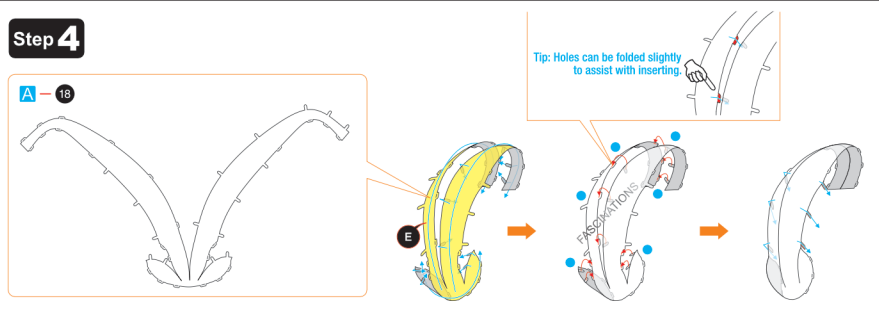




Step 5

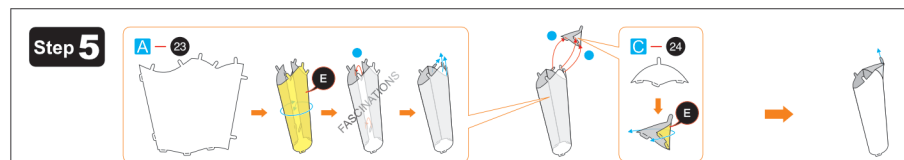

Step 6

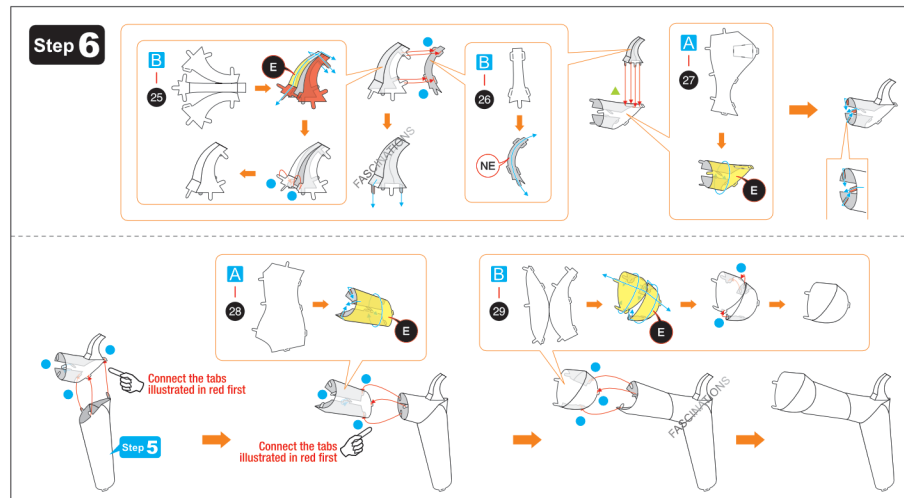



Step 7

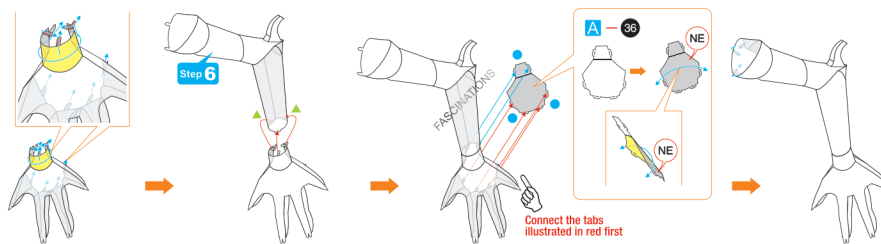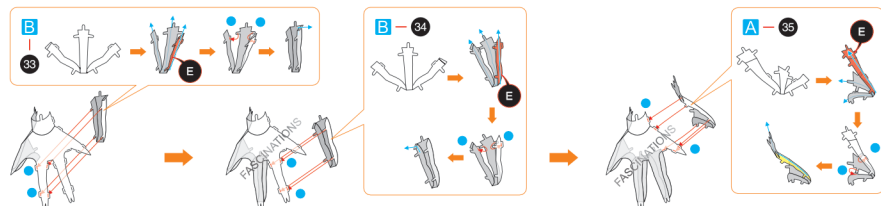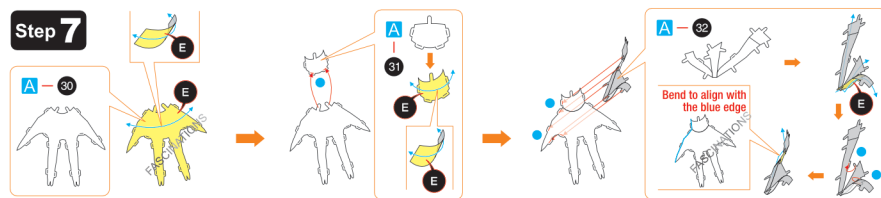




Step 8




Step 9

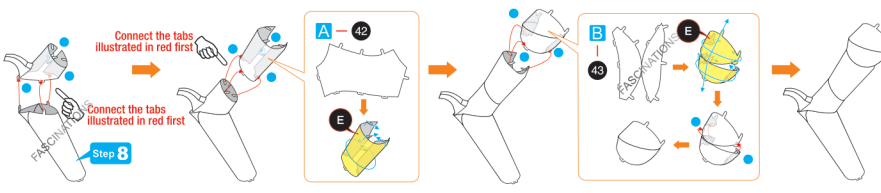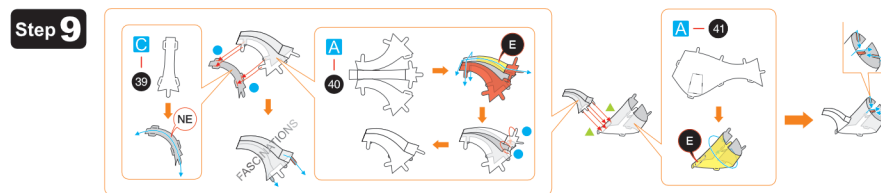


Step 10

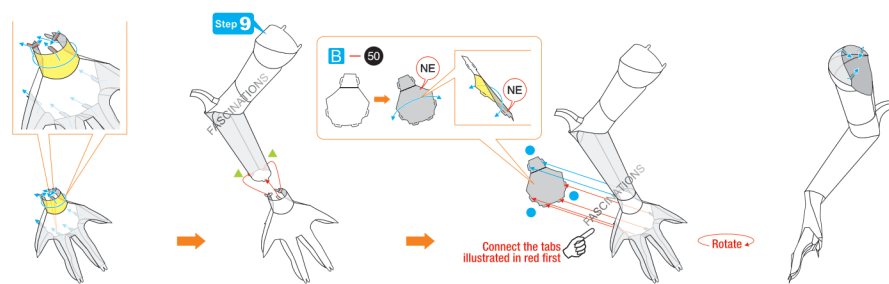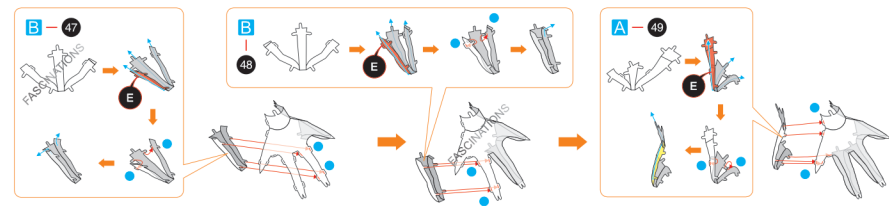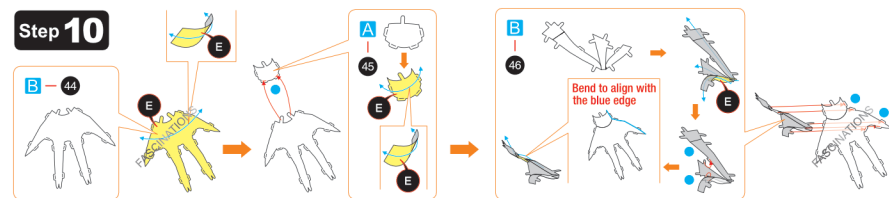


Step 11

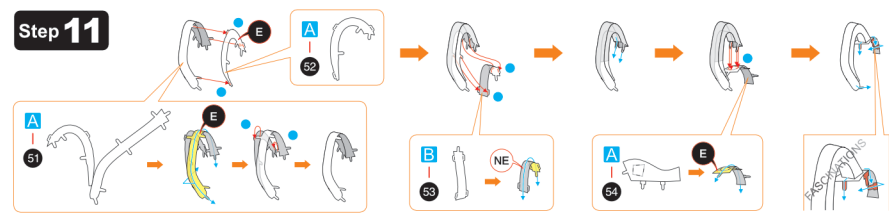




Step 12

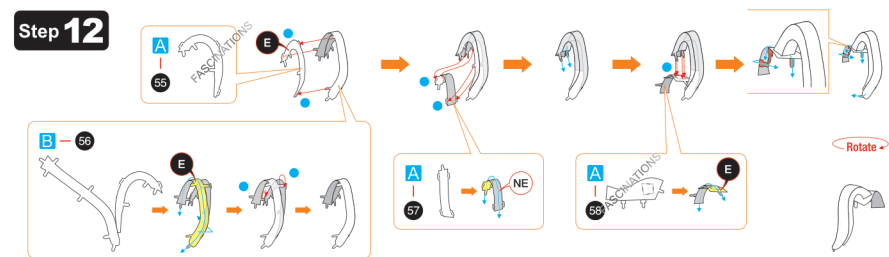



Step 13

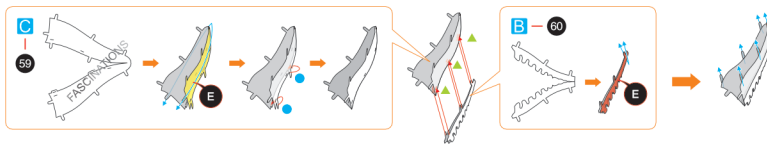





Step 14

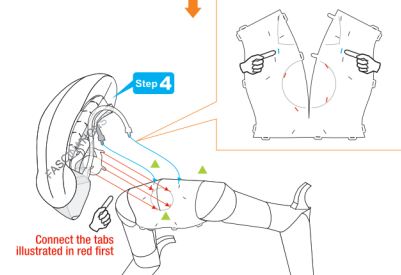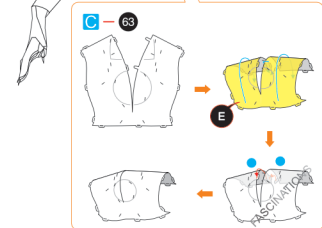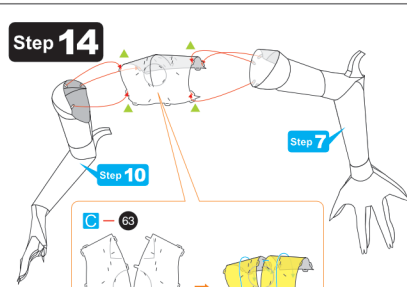


Step 15

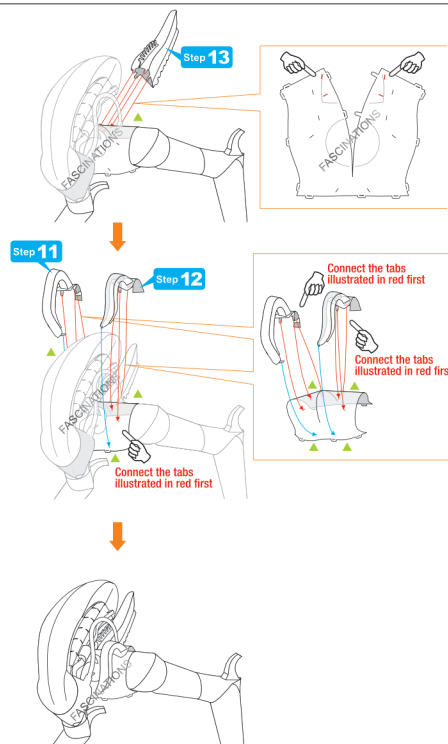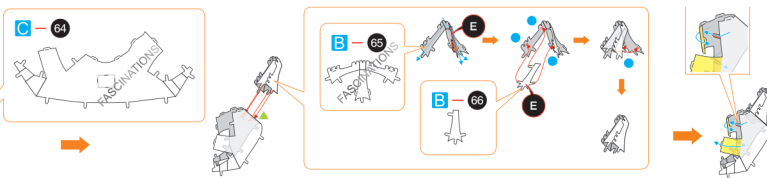

Step 16

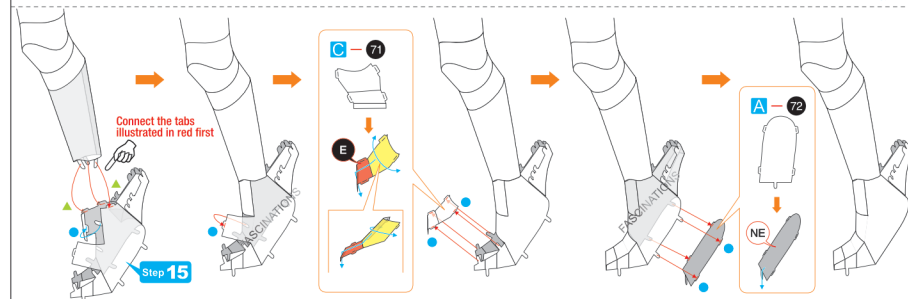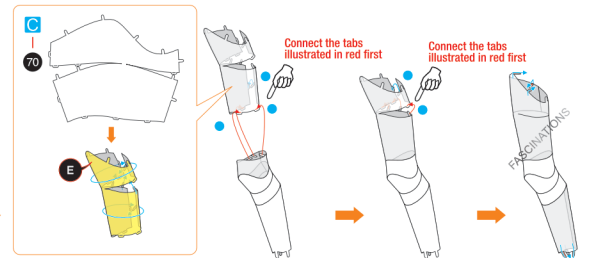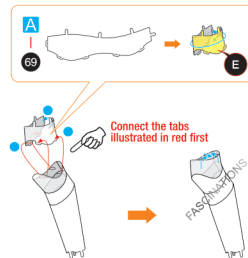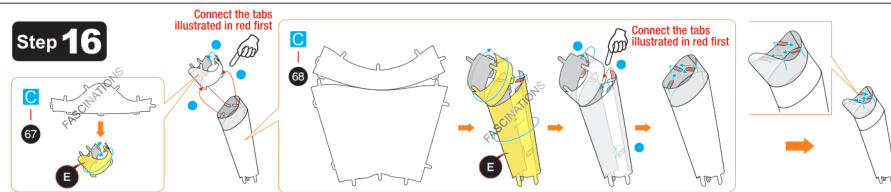

Step 17

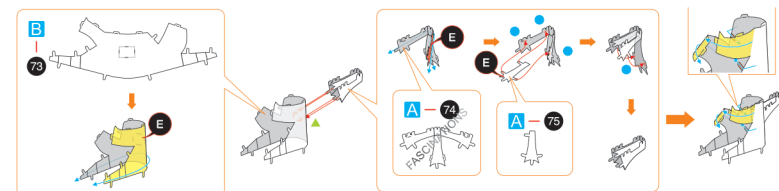

Step 18

