

LOCKHEED® F-117® NIGHTHAWK® ME1060



It is highly recommended that you visit

www.metalearth.com/360/ME1060

to see the completed model before assembling your own



METAL SHEETS

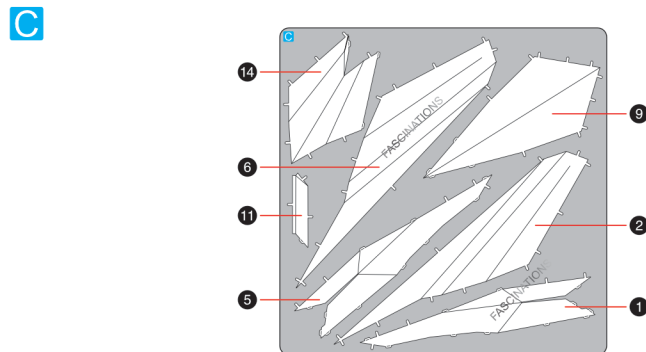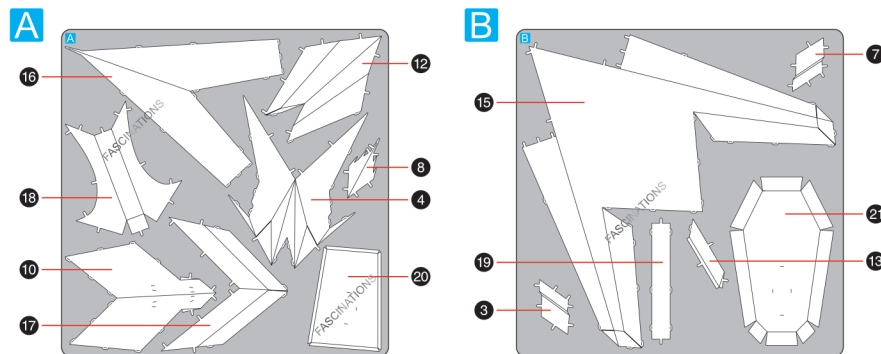


In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed.

Go to www.metalearth.com/360/ME1060 to see the zoomable PDF version of this instruction sheet


TO CREATE THE BEST CONNECTIONS

B-19

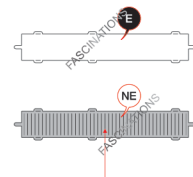

Consider these engraved stripes as supporting features for the bend

A-10

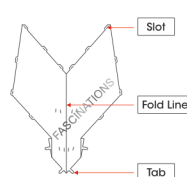

Legends:

E Engraved/ Color side

NE Non - engraved/ Silver side

Attention point

Insert tab and bend 90 degrees

Insert tab and twist 90 degrees

Assembly tip:

If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish.

Yellow areas should be curled



Red areas should be folded

Recommended tools:

-Wire cutters: helpful for taking parts from the metal sheets.



-Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.




ASSEMBLY FLOW CHART


C-1








Step 1

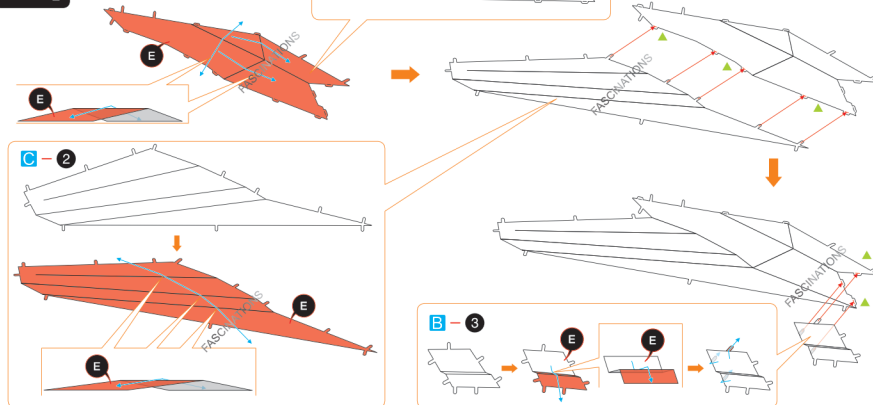


A-4

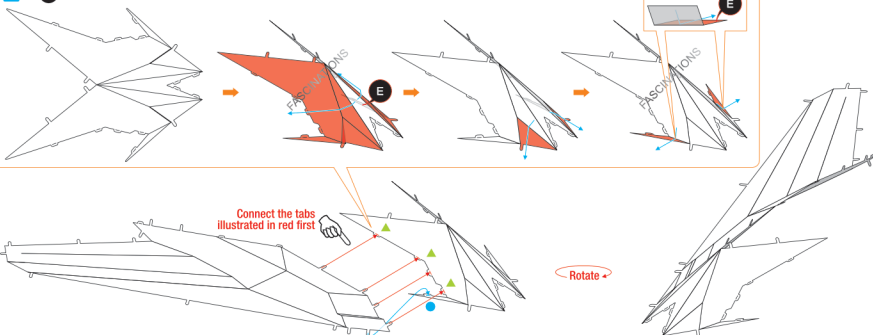


Step 2

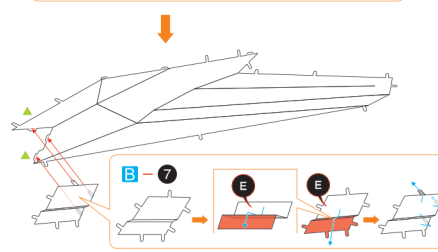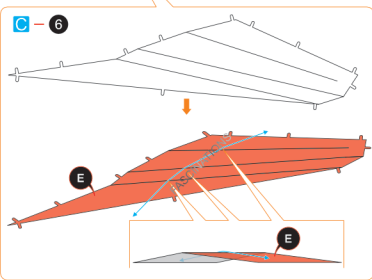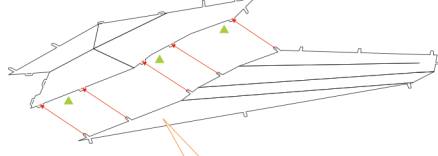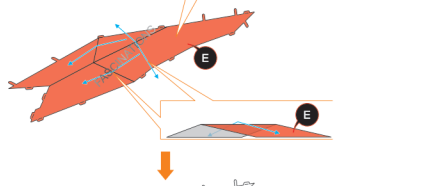


Step 3

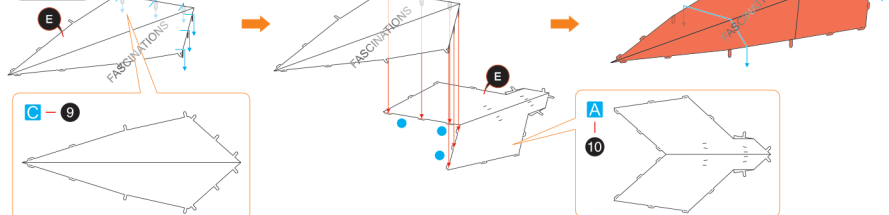


Step 1

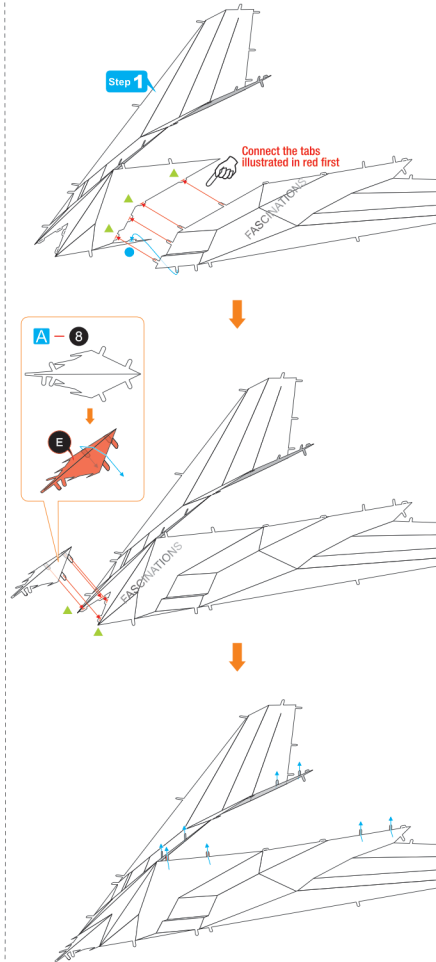


Step 4

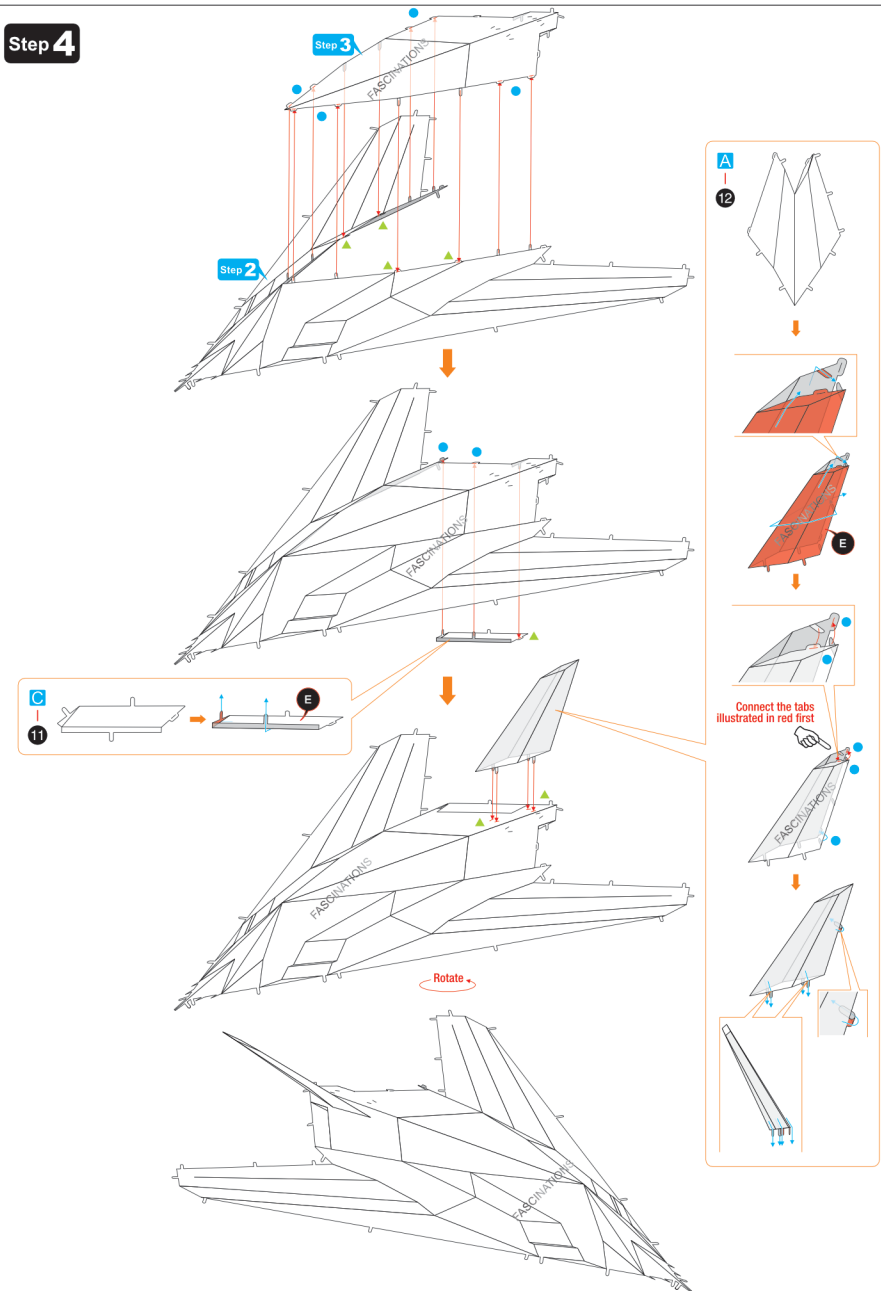

Step 5

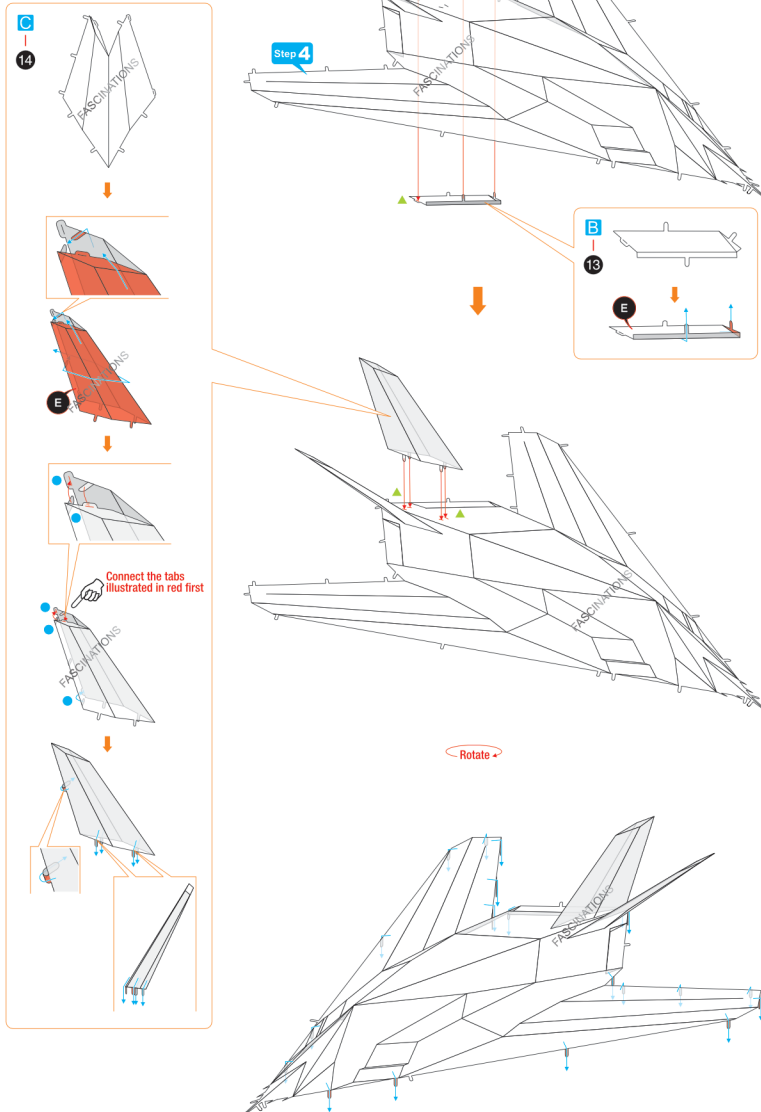


Step 6

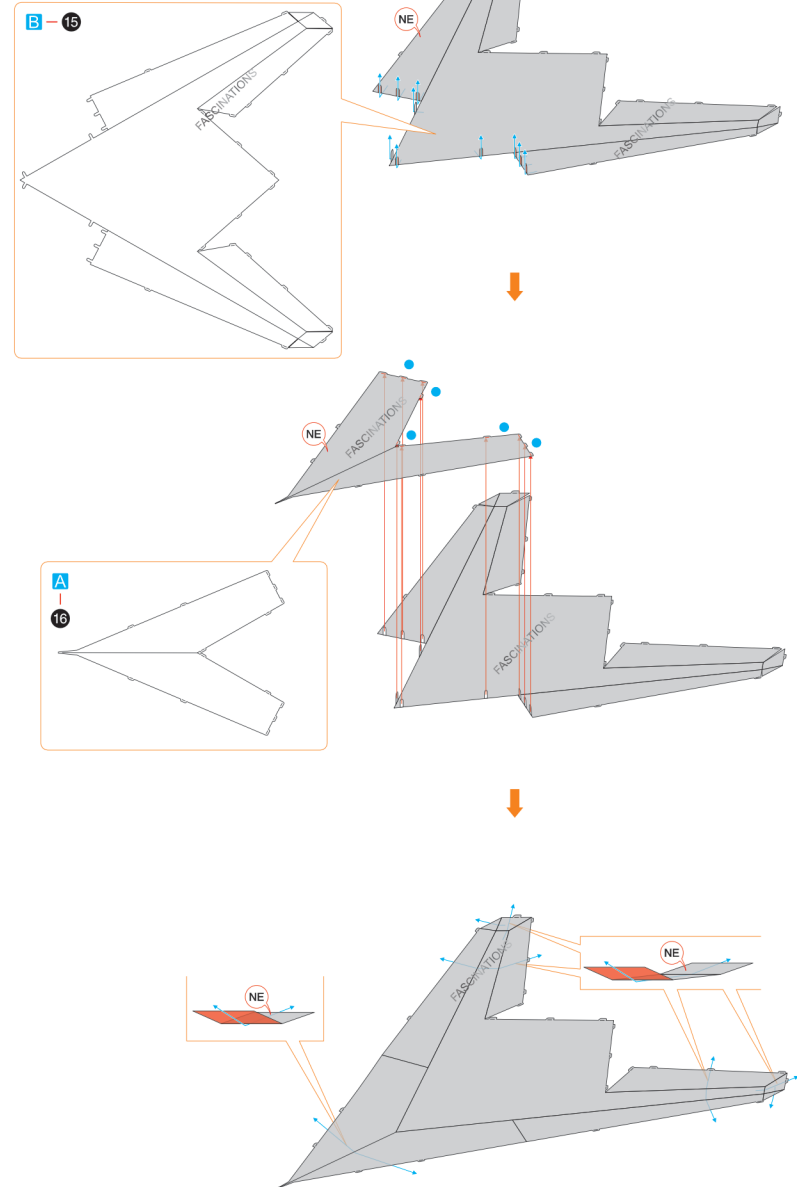


Connect the tabs
illustrated in red first

Step 5










Connect the tabs
illustrated in red first

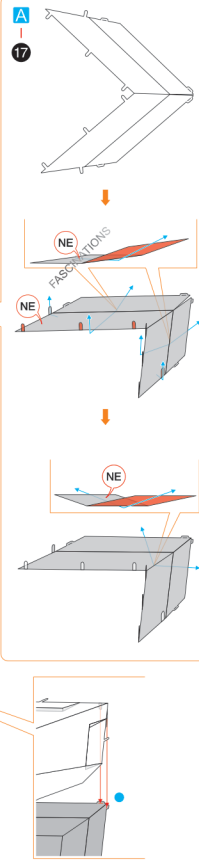

Step 7

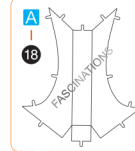

A-20

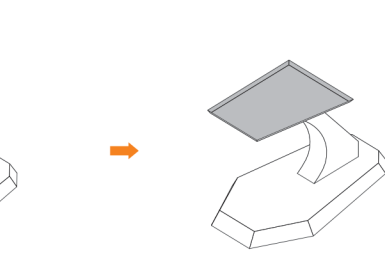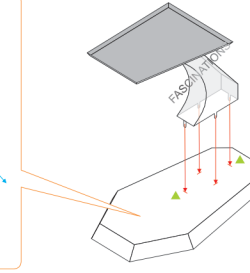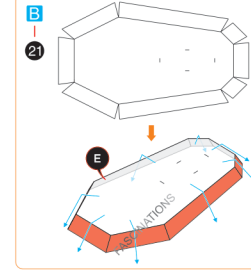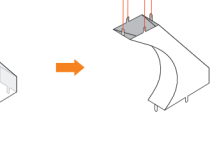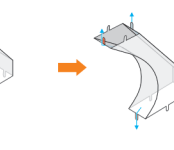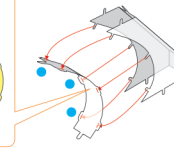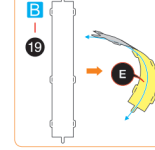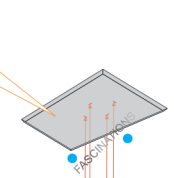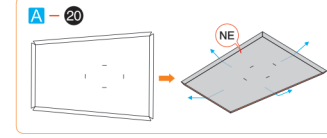

Step 8

